A380X OIS: NSS AVNCS and FLT OPS applications

The A380X Onboard Information System (the OIT screens beside the pilots) gets working menu bars, a message toolbar and task bars, COMPANY COM folders and report forms, REFUEL, the technical LOGBOOK, T.O PERF, LOADSHEET, LDG PERF, LOAD BOX, EXPORT BOX and IN-FLT PERF ATMO, and the NSS DATA TO AVNCS switch is read the right way round; FLT OPS STS fills from the FMS and is shared by both laptops, NSS DATA TO AVNCS OFF / SCI loss reach the OIS, the AOC prints the weather by itself, and the performance applications get PRINT, MULTIPLE RWY, the DETAILED loadsheet, REFUEL ZF DATA, MORE and ACFT STS

Aircraft	A380X
Where to find it	The OITs on the lateral side panels (OIT SIDE switch: NSS AVNCS or FLT OPS), laptop keyboard or ACD; the NSS DATA TO AVNCS pb-sw on the overhead NSS panel
Branch	`core/a380x-ois`, based on `master` (FlyByWire master 76db0aef1), with `core/a380x-ois-datalink` (the IMA/datalink model, OIS exit and AOC print; it merges core/printer, core/a380x-mailbox-du-reconf and core/a380x-elec), `core/a380x-cockpit` (ACD keys) and `core/efb-performance` (shared A380 performance calculators) merged in. It holds the NSS DATA TO AVNCS polarity fix, the derated levels of the shared A380 takeoff calculator (the calculator part of develop 2699137a2, used by T.O PERF; its flyPad and MFD parts stay on develop) and the six OIS application commits (cherry-picked from develop; every OIS file equal to develop fa4329bdf). The landing calculator is the shared one of core/efb-performance, which now keeps calculating above the tailwind limit: LDG PERF calculates above the tailwind limit like develop. Batch 2 (2026-10-21): FLT OPS STS auto-fill and CAPT / F/O sharing, the NSS DATA TO AVNCS OFF / SCI loss effects with the AOC weather auto-print, the performance application additions and the one FMS-data rule (four cherry-picks of develop a737cf5f1; the AOC part of the NSS change is on core/a380x-ois-datalink). Left out: its FWS part (no COMPANY MSG memo / voice without the avionics link, COMPANY MSG:PRNTR memo), which needs FWS alerts that are on develop only. Batch 3 (2026-10-29): five cherry-picks of the develop commits (NSS GATELINK / lifecycle, keyboard shortcuts, logbook usability with the shared InputField, LOADSHEET fuel modes, AOC reports).
Status	All features sim-tested by the user on 2026-10-18 in one combined install (tests T1 NSS AVNCS, T4 REFUEL ZF entry and COMPANY COM forms, T5 LOADSHEET chain / print title / entries kept, T6 LOGBOOK deferral with the polarity fix; T.O PERF and IN-FLT PERF ATMO typing through T5): OK. The REFUEL ZF entry only writes its variables: the fuel system side that reads them is on a separate branch, not merged. Batch 2 sim-tested by the user on 2026-10-21 in one combined install on develop (T7 NSS DATA TO AVNCS OFF, T8 METAR auto-print, T9 FLT OPS STS fill and sharing, T10 T.O PERF PRINT and MULTIPLE RWY, T11 LOADSHEET DETAILED / REFUEL ZF DATA / MORE / ACFT STS, T12 both SCIs lost): OK. LDG PERF PRINT and MULTIPLE RWY not sim-tested (same code as T.O PERF). Batch 3 (2026-10-28 / 29: NSS GATELINK and lifecycle, laptop keyboard shortcuts, LOGBOOK usability, LOADSHEET fuel modes and CG diagram, AOC OOOI reports) sim-tested by the user on develop (T14-T18): OK. Not sim-tested on the core branch itself.
Pictures	From the OIT browser harness (the built OIT instrument of the tested tree, 1333 x 1000), 2026-10-18 2026-10-21 (batch 2) and 2026-10-29 (batch 3).

1. NSS DATA TO AVNCS pb-sw read the right way round
2. Menu bars, message toolbar, switching bar and task bar
3. COMPANY COM folders, report and request forms
4. REFUEL
5. T.O PERF, LOADSHEET and LDG PERF
6. Technical LOGBOOK
7. LOAD BOX, EXPORT BOX and IN-FLT PERF ATMO
8. FLT OPS STS filled from the FMS and shared by the CAPT and F/O laptops
9. NSS DATA TO AVNCS OFF and both SCIs lost on the OIS
10. AOC weather auto-print
11. Performance applications: PRINT, MULTIPLE RWY, DETAILED loadsheet, REFUEL ZF DATA, MORE, ACFT STS
12. NSS GATELINK pb-sw, reset recovery and the NSS shutdown on lost AC power
13. Laptop keyboard: function keys, CTRL / ALT latch, brightness gate

14. LOGBOOK usability: PERSONAL ID, STORE IN, UPDATE / GIVE BACK messages
15. LOADSHEET fuel distribution modes and the CG diagram
16. AOC: OOOI reports, message ZOOM, Flight Delay and Flight Parameters reports

1. NSS DATA TO AVNCS pb-sw read the right way round

> **Aircraft:** A380X | **Where:** Overhead NSS panel, NSS DATA TO AVNCS pb-sw | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-18: OK (logbook ground link works with the pb-sw in its normal position).

What it is for

The pb-sw variable `L:A32NX_OVHD_NSS_DATA_TO_AVNCS_TOGGLE` is 1 in its normal (released) position and 0 when pressed in (OFF light). The OIT read it the other way round, so it treated the data link to the avionics as OFF in normal use: one-way, avionics to NSS only. On the aircraft only OFF does that: the AOC can no longer send and the logbook loses its ground link.

Limitations and why

Limitation	Why	What to do
No visible change on master alone.	On master no OIT function is paused by this switch yet; the effect shows with the logbook ground link of the OIS applications.	None.

How to use

1. Leave the NSS DATA TO AVNCS pb-sw in its normal position; press it (OFF) to cut the data link to the avionics.

How to test

#	Do this	Expected result
1	With the OIS applications: NSS DATA TO AVNCS normal, LOGBOOK > UPDATE.	The synchronisation with the ground completes (no "Synchronization with ground failed").
2	Press NSS DATA TO AVNCS (OFF light), LOGBOOK > UPDATE.	The synchronisation fails: no ground link.

2. Menu bars, message toolbar, switching bar and task bar

> **Aircraft:** A380X | **Where:** Top and bottom bars of both OIS domains | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

The two OIS domains now have the menu bars the FCOM describes:

- **FLT OPS**: MENU, the active application name in cyan, FUNCTIONS (HOME, PREVIOUS, NEXT, PRINT, STORE, UPDATE, UNDO, REDO, HELP, HIDE / SHOW SWITCHING BAR, CLOSE APPLICATION with their shortcuts; an item is enabled only when the application has that function), the MSG counter, its list and CLEAR. At the bottom the **switching bar** shows the open applications in opening order, the active one highlighted, with scroll arrows; HIDE SWITCHING BAR (F11) gives the full screen.
- **NSS AVNCS**: NSS AVNCS MENU, MAXIMIZE / MINIMIZE (full screen without the navigation tree), MSG and CLEAR; line 2 HOME, BACK, FORWARD, PRINT (pedestal printer, on the pages that can print), UPDATE, HELP (greyed) and CLOSE (closes the application). At the bottom the **task bar** shows the open applications (LOGBOOK, COMPANY COM, REFUEL, A380X SYSTEMS) in opening order; a key shows its application where it was left. All applications close at the log-off.

- A company message received posts a notification on both domains; reading the message removes it; selecting it on the NSS AVNCS side opens the message.

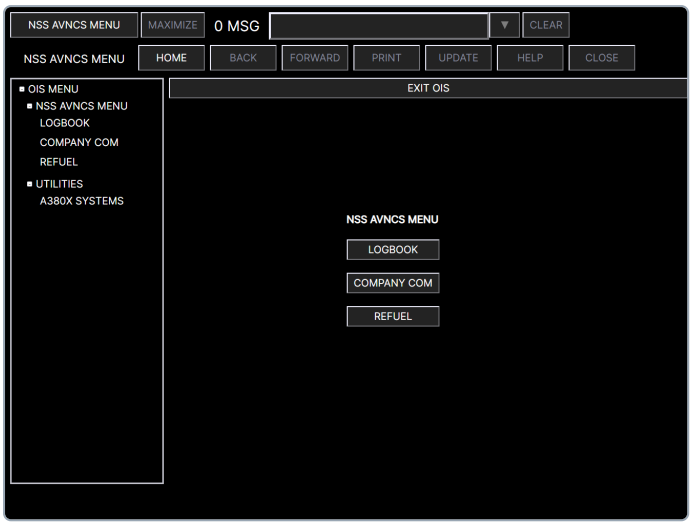


Figure 1. NSS AVNCS menu page: LOGBOOK, COMPANY COM and REFUEL

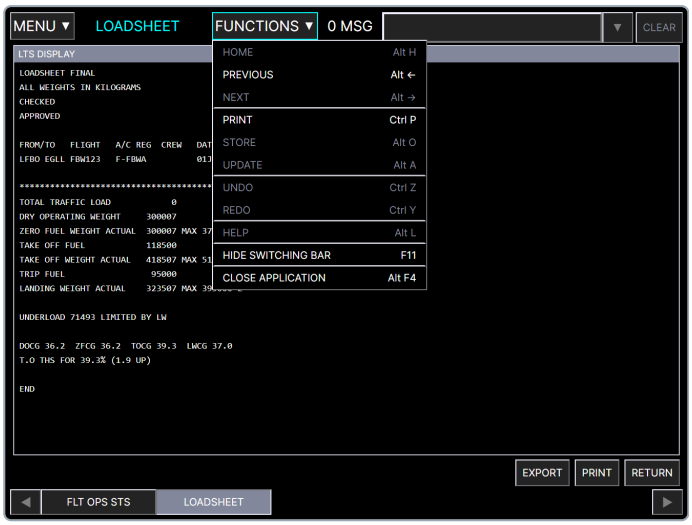


Figure 2. FLT OPS FUNCTIONS list on LOADSHEET: PRINT enabled once a loadsheet is generated, the greyed items have no function there

Limitations and why

Limitation	Why	What to do
UPDATE, UNDO, REDO and HELP of FUNCTIONS are greyed.	They are greyed in the FCOM figures too.	None.
HOME goes to the application home page, not to the FLT OPS MENU.	As the FCOM function list.	Use MENU > FLT OPS MENU or the OIS MENU key.

How to use

1. Open applications from the menu; switch between them with the switching bar (FLT OPS) or the task bar (NSS AVNCS).
2. Use FUNCTIONS (FLT OPS) or the line-2 buttons (NSS AVNCS) for PRINT, CLOSE and full screen.

How to test

#	Do this	Expected result
1	NSS AVNCS: open COMPANY COM, then LOGBOOK, then REFUEL.	The task bar shows COMPANY COM, LOGBOOK, REFUEL in this order, the active one highlighted.
2	CLOSE on LOGBOOK.	LOGBOOK leaves the task bar, the menu page shows.
3	FLT OPS: open T.O PERF and LOADSHEET, open FUNCTIONS.	The switching bar shows both; HIDE SWITCHING BAR hides it, SHOW brings it back.

3. COMPANY COM folders, report and request forms

> **Aircraft:** A380X | **Where:** NSS AVNCS > COMPANY COM | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

COMPANY COM opens on its Inbox and counts the unread Inbox messages and the Outbox messages. The Outbox holds what was sent until the network confirms it, then it moves to Sent. The airline forms (INIT Data, Fuel Figures, Refuelling, Loadsheet Acceptance, Departure / Take Off / Gate Delay, Delay Code, ASR, Ramp Service, Diversion, ETA, Flight Summary) are plain forms pre-filled with the flight data the OIT has and sent as a free text to a station (COMPANY without one) over the Hoppie network.



Figure 3. DEPARTURE DELAY form: amber boxes are mandatory, cyan dashes optional; the entries stay while COMPANY COM is open

Limitations and why

Limitation	Why	What to do
The forms are a design of ours.	The AOC is customised by each airline and the FCOM shows no form.	None.
NOTAM request stays greyed.	The datalink has no NOTAM source.	None.

How to use

1. COMPANY COM > Pre-flight / In-flight / Post-flight > Requests or Reports > the form.
2. Fill the amber boxes, check the pre-filled values, SEND. Follow it in Outbox, then Sent.

How to test

#	Do this	Expected result
1	Hoppie connected: send a Departure Delay with a station and a new ETD.	It shows in the Outbox, then in Sent; the station receives the text.
2	Leave the form, open the Inbox, come back to the form.	The entries are still there.

4. REFUEL

> **Aircraft:** A380X | **Where:** NSS AVNCS > REFUEL | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

Shows the fuel on board, the preselected fuel quantity (PFQ) and the refuel state, and on the ground sets a new PFQ for the automatic refuel. A ZF data box takes a ZFW / ZFCG of its own for the CG targeting (ZFW 270-373 t, ZFCG 23-48 %, both needed), written to `L:A32NX_FUEL_REFUEL_ZFW` (kg) and `L:A32NX_FUEL_REFUEL_ZFCG` (% MAC); FQMS DEFAULT clears it (0).



Figure 4. REFUEL after SET of a ZFW 300 t / ZFCG 36.5 % entry

Limitations and why

Limitation	Why	What to do
The ZF entry does not change the refuel yet.	The fuel system side that reads it (FQMS CG targeting with the REFUEL ZF data, FUEL REFUEL DATA / FMS DISAGREE) is on a separate branch, not merged.	None.
No entry in flight.	Design choice: refuel is a ground function.	None.

How to use

1. On the ground: NEW PFQ, SET. For the ZF data: ZFW and ZFCG, SET; FQMS DEFAULT to remove them.

How to test

#	Do this	Expected result
1	On the ground, NEW PFQ 150000 kg, SET.	PRESELECTED (PFQ) shows 150000 KG.
2	ZFW 300000, ZFCG 36.5, SET; then FQMS DEFAULT.	REFUEL ENTRY shows 300000 KG / 36.5 %, then nothing.

5. T.O PERF, LOADSHEET and LDG PERF

> **Aircraft:** A380X | **Where:** FLT OPS > MENU > T.O PERF / LOADSHEET / LDG PERF | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

- **T.O PERF**: CONDITIONS, a runway of the departure airport, COMPUTE: speeds, flaps, FLEX or derate, MTOW(perf), from the shared A380 takeoff calculator (the flyPad's). XCHECK WITH AVNCS compares them with the FMS T.O page, the SD gross weight and the captain's QNH and lists the discrepancies in amber.
- **LOADSHEET** (REDUCED mode): TOW/CG, LW/CG, underload and T.O THS from the ZFW/CG and the fuel; LTS EDITION, GENERATE, PRINT (titled LOADSHEET) and EXPORT to the EXPORT BOX. Its TOW and LW go to T.O PERF and LDG PERF.
- **LDG PERF**: DISPATCH and IN-FLIGHT landing distance, stop margin, MLW(perf), VAPP and go-around data for a runway of the destination.
- The entries and results stay while the application is open.



Figure 5. T.O PERF computed at LFBO RWY 14

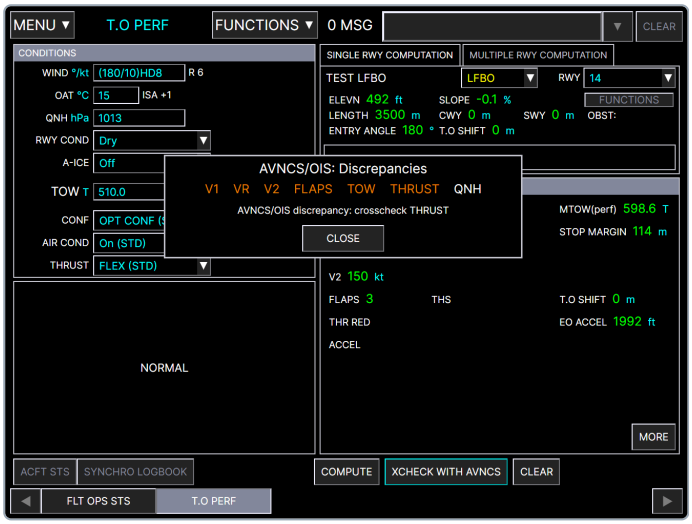


Figure 6. XCHECK WITH AVNCS with nothing in the FMS: every item in amber

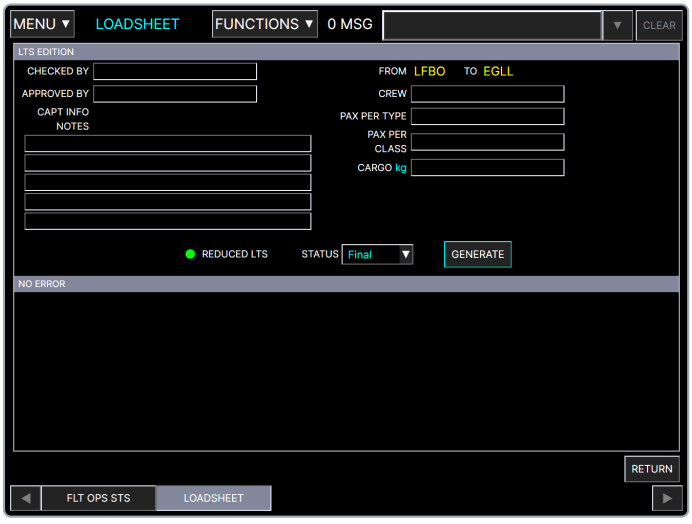


Figure 7. LOADSHEET after GENERATE



Figure 8. LDG PERF computed

PRINT, MULTIPLE RWY, the DETAILED loadsheet, REFUEL ZF DATA, MORE and ACFT STS: see "Performance applications" below.

Limitations and why

Limitation	Why	What to do
Nothing goes to the FMS.	As on the aircraft: XCHECK only compares.	Enter the values in the MFD.

Above the 10 kt tailwind limit LDG PERF still computes, without a mark.	The shared calculator continues the tailwind correction of the data and flags the result; the OIT page does not show that flag (as on develop).	Treat a result with more than 10 kt of tailwind as extrapolated.

How to use

1. FLT OPS STS: flight number and airports. LOADSHEET: ZFW/CG and fuel, COMPUTE, LTS EDITION, GENERATE.
2. T.O PERF: conditions and runway (TOW comes from the loadsheet), COMPUTE, then XCHECK WITH AVNCS.
3. LDG PERF: conditions and runway, COMPUTE.

How to test

#	Do this	Expected result
1	LOADSHEET: ZFW 300 t / 36.2 %, fuel, COMPUTE, GENERATE, PRINT.	The loadsheet prints titled LOADSHEET.
2	T.O PERF after the loadsheet.	TOW is the loadsheet TOW (yellow); COMPUTE gives speeds and FLEX.
3	Switch to another application and back.	Entries and results are still there.

6. Technical LOGBOOK

> **Aircraft:** A380X | **Where:** NSS AVNCS > LOGBOOK | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

The electronic technical logbook: STATUS (release, open / deferred / temporary / cabin items), LOGBOOK ENTRY (ECAM alerts, cabin items, system & function, cockpit interface, keyword, free text), HISTORY and FLIGHT DATA; PIC ACCEPT with the acceptance report and CLOSE FLIGHT with the closure report; UPDATE / GIVE BACK TO GROUND synchronise with a simulated ground. Design choice: the ground defers some defects by ATA chapter (MEL B/C/D, CDL, OTHER) with an expiry and rectifies the others. The logbook is kept across flights; STATUS, the acceptance report and FLIGHT DATA print with their titles.

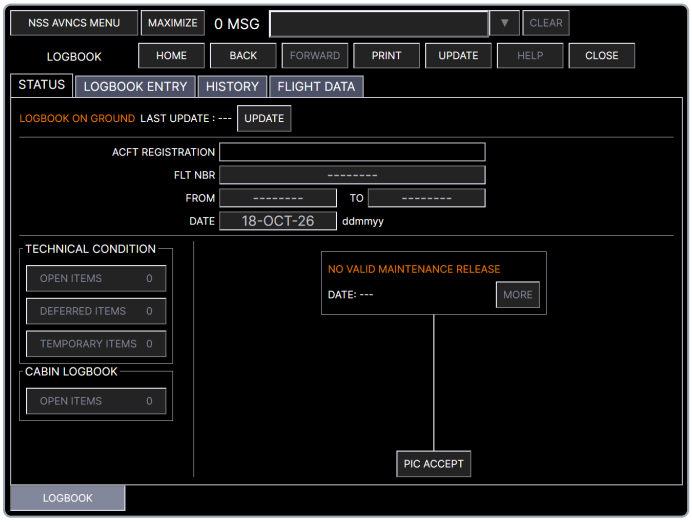


Figure 9. STATUS



Figure 10. LOGBOOK ENTRY



Figure 11. After UPDATE with the ground



Figure 12. DEFERRED ITEMS: a defect deferred under the MEL with its expiry

Limitations and why

Limitation	Why	What to do
The ground is simulated.	There is no maintenance organisation behind the logbook.	None.
Some UX gaps: the password field may need a second click, NIL is not clickable, PERSONAL ID is not kept between signatures.	Known, not fixed yet.	Click the field again.

How to use

1. Open LOGBOOK, sign in with a personal ID and password.
2. Check STATUS and the items, open the flight, PIC ACCEPT. Record defects in LOGBOOK ENTRY; CLOSE FLIGHT at the end; UPDATE to synchronise with the ground.

How to test

#	Do this	Expected result
1	Record a defect (e.g. COCKPIT INTERFACE), GIVE BACK TO GROUND / UPDATE.	The defect is deferred (DEFERRED ITEMS with an expiry) or rectified (HISTORY).
2	PRINT on STATUS.	The printer prints LOGBOOK STATUS.

7. LOAD BOX, EXPORT BOX and IN-FLT PERF ATMO

> **Aircraft:** A380X | **Where:** FLT OPS > MENU > LOAD BOX / EXPORT BOX / IN-FLT PERF | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

- **LOAD BOX**: the flight folder sent from the ground, here your SimBrief OFP of the flyPad, with its loading status per laptop; LOAD loads the ticked items.
- **EXPORT BOX**: items to send to the ground (a loaded flight folder, an exported loadsheet), GND tick and SEND; on the ground the gatelink sends them, else they wait in the outbox.

- **IN-FLT PERF ATMO**: speed conversions (IAS, Mach, TAS, GS), ISA information, true altitude and low altitude temperature corrections. The FCOM describes only ATMO; CLB, CRZ, DES, HLD and PLAN are greyed.



Figure 13. LOAD BOX (no SimBrief OFP loaded in the flyPad)

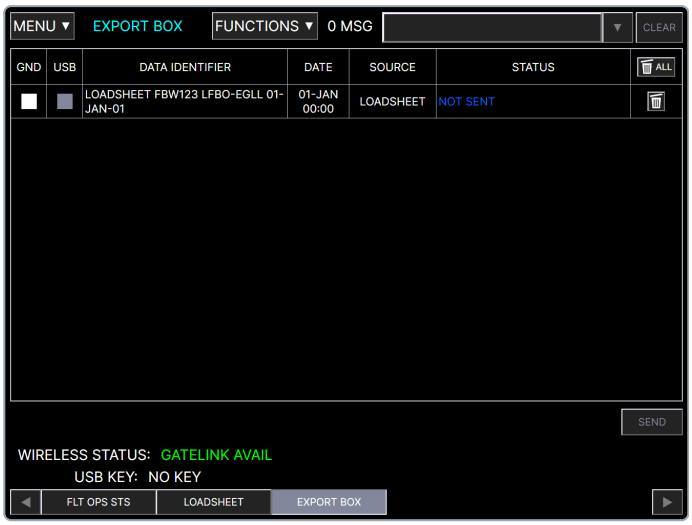


Figure 14. EXPORT BOX with an exported loadsheet



Figure 15. IN-FLT PERF ATMO

Limitations and why

Limitation	Why	What to do
Every airport has a gatelink.	Design choice: no airport database of gatelinks.	None.
GROSS WGHT of ATMO is not used.	No ATMO computation needs it; the field is kept for the FCOM layout.	None.

How to use

1. Load a SimBrief OFP in the flyPad, LOAD BOX > REFRESH LOAD BOX, tick it, LOAD.
2. EXPORT BOX: tick GND, SEND (on the ground).
3. IN-FLT PERF > ATMO: conditions and specific data, COMPUTE.

How to test

#	Do this	Expected result

1	ATMO: SPEED, MACH 0.85, FL350 with the FCOM example conditions, COMPUTE.	The results match the FCOM example.
2	LOADSHEET EXPORT, then EXPORT BOX, tick GND, SEND on the ground.	Status SENT (GND) with date and time.

8. FLT OPS STS filled from the FMS and shared by the CAPT and F/O laptops

> **Aircraft:** A380X | **Where:** FLT OPS > FLT OPS STS, both OITs | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-21 on develop (T9): OK.

What it is for

- FLT NBR, FROM and TO fill themselves from the FMS (flight number and city pair) until the crew types an entry; SYNCHRO AVIONICS takes the FMS values again and follows them anew.
- The CAPT and F/O laptops show the same page: a manual entry, SYNCHRO AVIONICS and EXIT SESSION on one laptop reach the other one; a laptop that joins the FLT OPS network takes the page of the other laptop. EXIT SESSION clears both laptops' page.
- The FMS data reach a laptop that runs on the FLT OPS network with an NSS AVNCS server and the avionics link of the NSS AVNCS side (not both SCIs lost). Without them the page keeps its entries, and SYNCHRO AVIONICS does not reload the flight plan of the EFB overlay either.
- OIS VERSION shows the build of the aircraft; the registration list comes from the ATC ID.

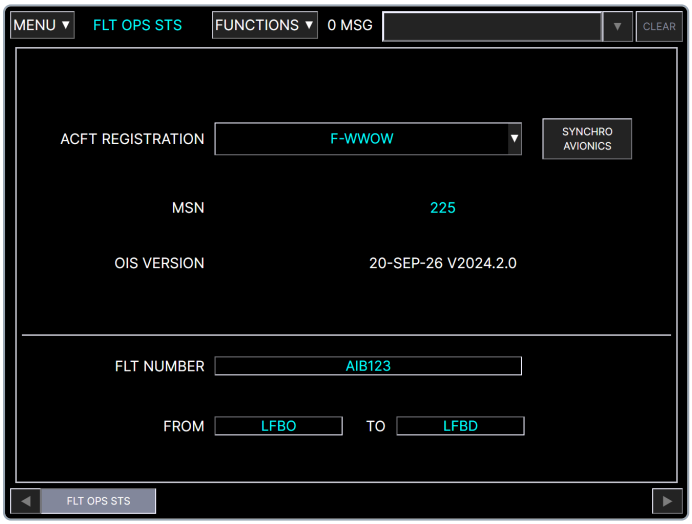


Figure 16. CAPT laptop: FLT OPS STS filled from the FMS

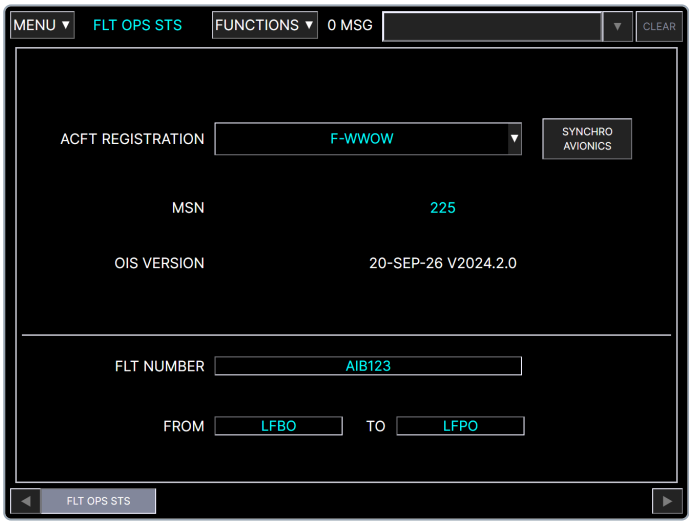


Figure 17. CAPT laptop showing the entry made on the F/O laptop

Limitations and why

Limitation	Why	What to do
A stand-alone laptop gets nothing.	Design choice: off the network it gets no avionics data and no exchange (SYNCHRONIZATION NOT AVAIL).	None.
An entry typed on a laptop that has just joined can be overwritten by the other laptop's answer.	A one-frame window while the two laptops exchange their pages.	Type the entry again.

How to use

1. Enter the flight number and the airports in the MFD: FLT OPS STS fills itself on both laptops.
2. Type an entry on one laptop to override the FMS; SYNCHRO AVIONICS to take the FMS values again.

How to test

#	Do this	Expected result
1	Both laptops on, MFD INIT: flight number and FROM / TO.	FLT OPS STS shows them on both laptops.
2	CAPT laptop: type another FLT NBR.	The F/O laptop shows it too; an FMS change no longer replaces it.
3	SYNCHRO AVIONICS.	Both laptops show the FMS values again.

9. NSS DATA TO AVNCS OFF and both SCIs lost on the OIS

> **Aircraft:** A380X | **Where:** Overhead NSS panel (NSS DATA TO AVNCS pb-sw); flyPad > Failures > ATA 46 (SCI 1, SCI 2); NSS AVNCS | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-21 on develop (T7, T12): OK.

What it is for

- With NSS DATA TO AVNCS OFF or both SCIs lost the NSS AVNCS side cannot send data to the avionics: the REFUEL entries (NEW PFQ, ZF data, FQMS DEFAULT) are not sent to the FQMS and REFUEL says **NOT SENT: NSS DATA TO AVNCS INOP**; the NSS AVNCS message toolbar shows the INOP system.
- Both SCIs lost also cut the eLogbook ground link (UPDATE / GIVE BACK TO GROUND fail) and the avionics data (the FLT OPS STS page keeps its entries).
- The AOC itself stops receiving while it is off (on `core/a380x-ois-datalink`).



Figure 18. REFUEL with NSS DATA TO AVNCS OFF: NOT SENT

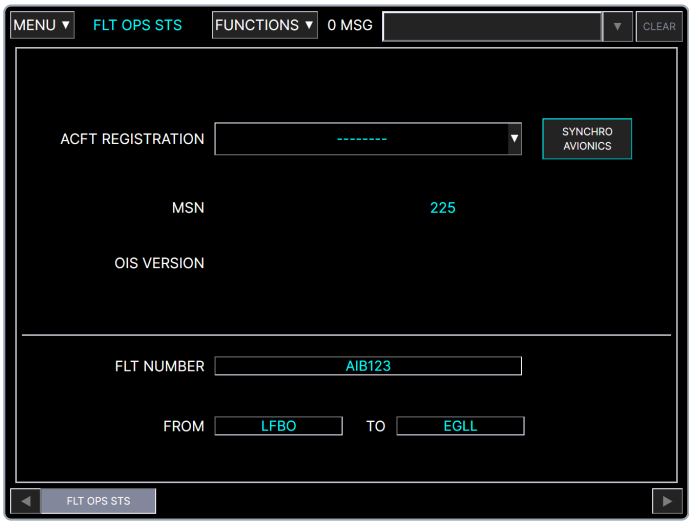


Figure 19. FLT OPS STS with both SCIs lost

Limitations and why

Limitation	Why	What to do
No COMPANY MSG memo / voice change and no COM NSS DATA TO AVNCS XFR FAULT alert on this branch.	The FWS part of this change needs FWS alerts that are on develop only.	None.

How to use

1. Leave NSS DATA TO AVNCS in its normal position; with OFF, enter the refuel on the refuel panel.

How to test

#	Do this	Expected result
1	On the ground, press NSS DATA TO AVNCS (OFF light). NSS AVNCS > REFUEL: NEW PFQ 50000, SET.	NOT SENT: NSS DATA TO AVNCS INOP; the PFQ does not change; the toolbar shows NSS DATA TO AVNCS INOP.
2	Release the pb-sw. flyPad > Failures > ATA 46: SCI 1 and SCI 2. LOGBOOK: GIVE BACK TO GROUND.	The synchronisation with the ground fails; REFUEL entries are NOT SENT.

10. AOC weather auto-print

> **Aircraft:** A380X | **Where:** Pedestal printer; NSS AVNCS > COMPANY COM | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-21 on develop (T8): OK.

What it is for

The AOC prints the weather reports it receives (METAR, TAF, ATIS) by itself on the pedestal printer. `L:A32NX_COMPANY_MSG_PRNTR_COUNT` counts the ones waiting for their printout until they are printed or read; on develop the COMPANY MSG memo then reads COMPANY MSG:PRNTR.

Limitations and why

Limitation	Why	What to do
Only the weather reports print by themselves.	User choice: the other company messages are printed with PRINT.	None.
With the printer off the message waits until it is read.	The printer must acknowledge the printout.	Switch the printer on.

How to use

1. Request a METAR in COMPANY COM: the answer prints by itself.

How to test

#	Do this	Expected result
1	Printer on, Hoppie connected: COMPANY COM, request the METAR of the departure airport.	The METAR prints on the pedestal printer by itself.

11. Performance applications: PRINT, MULTIPLE RWY, DETAILED loadsheet, REFUEL ZF DATA, MORE, ACFT STS

> **Aircraft:** A380X | **Where:** FLT OPS > T.O PERF / LDG PERF / LOADSHEET | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-21 on develop (T10, T11): OK. LDG PERF PRINT and MULTIPLE RWY not sim-tested (same code as T.O PERF).

What it is for

- **PRINT** in FUNCTIONS of T.O PERF and LDG PERF prints the results under the title of the application. STORE stays greyed (no EFF to store into).

- **MULTIPLE RWY COMPUTATION** (T.O PERF, LDG PERF): tick runways of the airport, COMPUTE them at once and pick each result in the colour-coded RWY list.
- **LOADSHEET REFUEL ZF DATA**: FQMS DEFAULT, NEW SET OF DATA (the REFUEL application's data) or LOADSHEET (default), with the fuel distribution of the FQMS CG targeting. **MORE**: the TOCG warning and the automatic ground transfer to the CG limit and to the refuel target.
- **LOADSHEET DETAILED**: crew, passengers and cargo with their distribution in the cabin and the holds, and the detailed loadsheet with its edition number.
- **ACFT STS** and **SYNCHRO LOGBOOK**: the deferred MEL and CDL items of the technical logbook, with the items the computation cannot take into account ("n ITEMS NOT IN COMPUTATION, SEE ACFT STS").



Figure 20. T.O PERF: MULTIPLE RWY with four runways, the MEL / CDL items of ACFT STS

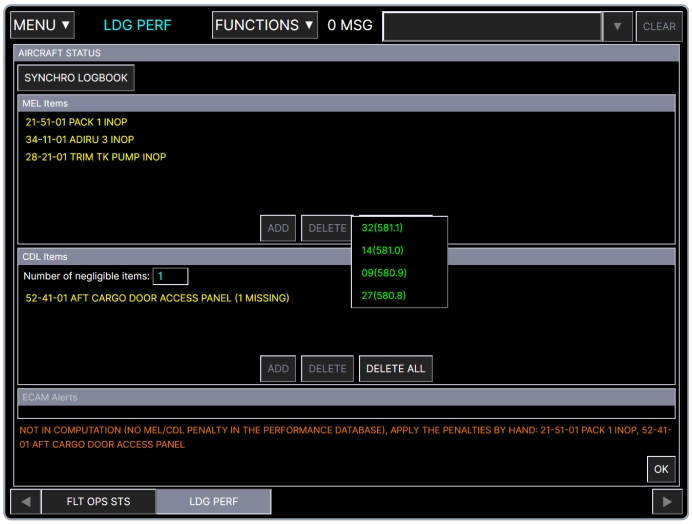


Figure 21. LDG PERF with ACFT STS

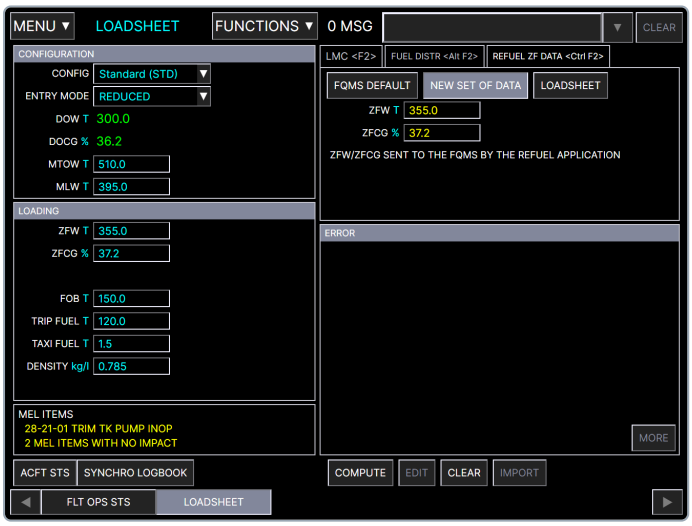


Figure 22. LOADSHEET REFUEL ZF DATA



Figure 23. LOADSHEET MORE panel

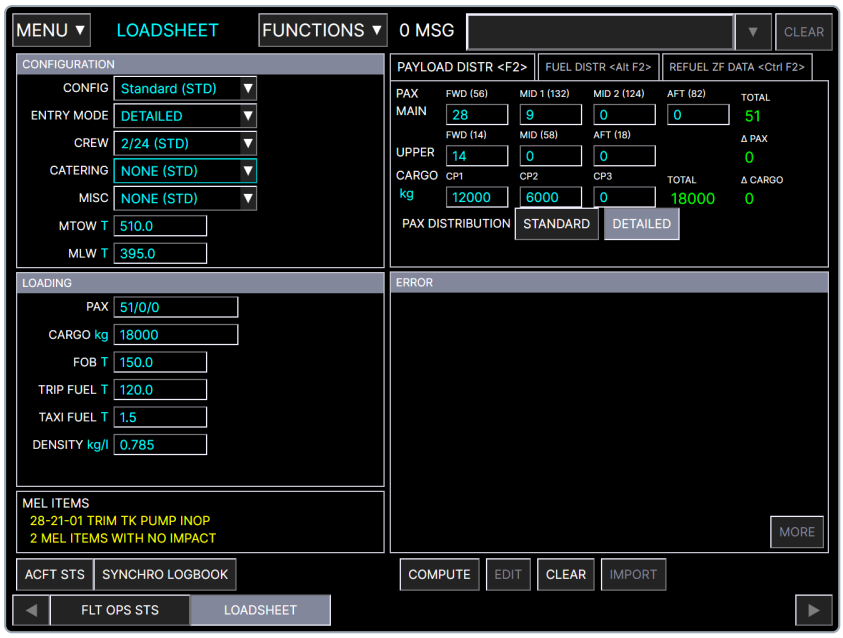


Figure 24. LOADSHEET DETAILED: payload distribution

Limitations and why

Limitation	Why	What to do
STORE is greyed.	There is no electronic flight folder to store the results into.	Use PRINT.
Items the computation cannot take into account are listed, not computed.	The shared performance calculators have no MEL / CDL corrections.	Apply them by hand.

How to use

1. T.O PERF / LDG PERF: MULTIPLE RWY COMPUTATION tab, tick the runways, COMPUTE, pick a runway in the RWY list; FUNCTIONS > PRINT.
2. LOADSHEET: ENTRY MODE DETAILED for crew / passengers / cargo; REFUEL ZF DATA tab for the FQMS ZF data; MORE for the TOCG and the ground transfer.
3. SYNCHRO LOGBOOK, then ACFT STS, to see the deferred items.

How to test

#	Do this	Expected result
1	T.O PERF: MULTIPLE RWY, tick all runways, COMPUTE; FUNCTIONS > PRINT.	One result per runway in the RWY list; the printer prints T.O PERF.
2	LOADSHEET: DETAILED, crew and passengers, COMPUTE, GENERATE, PRINT.	The detailed loadsheet prints with its edition number.
3	With a deferred MEL item in the logbook: SYNCHRO LOGBOOK, ACFT STS.	The MEL item is listed, with the items not in the computation.

12. NSS GATELINK pb-sw, reset recovery and the NSS shutdown on lost AC power

> **Aircraft:** A380X | **Where:** Overhead NSS panel (GATELINK pb-sw), OIT BRIGHTNESS knob, laptops | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-28 / 29 on develop (T14-T18): OK.

What it is for

- The **GATELINK** pb-sw (`L:A32NX_OVHD_NSS_GATELINK_OFF`) works: with it OFF the EXPORT BOX has no gatelink and the LOAD BOX gets no data from the ground.
- **Reset recovery**: an OIT that is restarted (BRIGHTNESS knob OFF for 5 s) or a laptop that is restarted (OFF for 30 s) clears an injected failure of that device.
- **NSS shutdown**: each NSS ANSU shuts itself down 10 s after the AC busbar that feeds it is lost, but only when that busbar was supplied once (power that was on and is lost). A flight load, where the busbars report late, therefore no longer restarts the ARU or leaves the FLT OPS laptop stand-alone.
- The **ARU start** follows the flyPad start-up time setting (INSTANT 0 s, FAST 5 s, REAL 120 s, the default) and needs a healthy FLT OPS ANSU; a flight load gets a 10 s window in which an already running laptop is kept.

Limitations and why

Limitation	Why	What to do
The GATELINK has no picture of its own.	Its effect is the absence of data in the LOAD BOX and of the gatelink in the EXPORT BOX.	Check the two applications.

How to use

1. Press the GATELINK pb-sw OFF to cut the ground link; set the OIT BRIGHTNESS knob to OFF for 5 s (OIT) or 30 s (laptop) to restart the device.

How to test

#	Do this	Expected result
1	On the ground with the NSS powered: GATELINK pb-sw OFF, open LOAD BOX and EXPORT BOX.	LOAD BOX gets no data from the ground and EXPORT BOX has no gatelink; ON gives both back.
2	Load a flight in the air or on the ground and watch the FLT OPS laptop for two minutes.	The laptop stays on the network (not stand-alone) and its ARU does not restart.
3	Switch the aircraft power off.	The ANSUs shut down 10 s after the AC bus that feeds them is lost.

13. Laptop keyboard: function keys, CTRL / ALT latch, brightness gate

> **Aircraft:** A380X | **Where:** CAPT and F/O laptop keyboards | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-28 / 29 on develop: OK.

What it is for

- The **function keys** press the OIT buttons that show them (COMPUTE <F8>, the tabs <F2> and <Ctrl F2>...).
- **CTRL and ALT latch** for the next key, because the 3D keyboard has no chords: the key lamp stays lit while the modifier is latched, then the menu shortcut (Ctrl P, Alt H...) is sent.
- The OIT **BRIGHTNESS** knob at OFF also switches off the keyboard and the ACD.
- COMPANY COM and LOGBOOK start at the NSS AVNCS log-on.

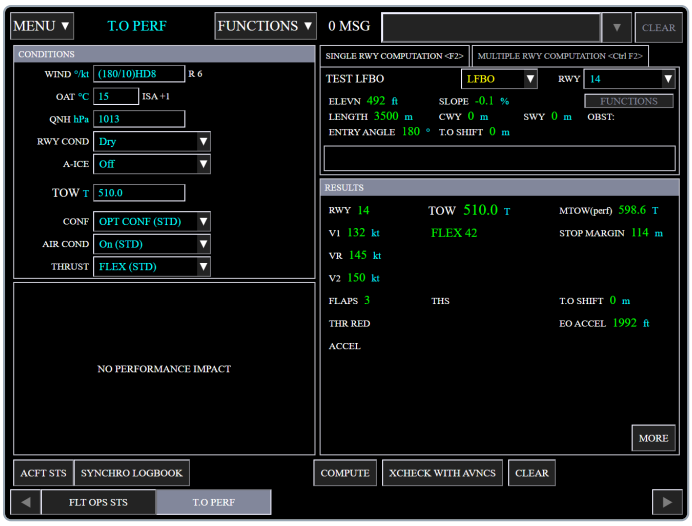


Figure 25. T.O PERF with the tabs and their shortcuts

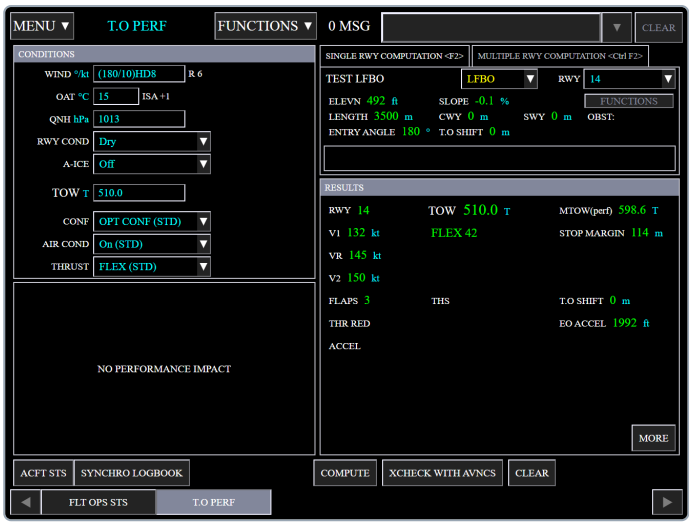


Figure 26. COMPUTE <F8> pressed from the keyboard

Limitations and why

Limitation	Why	What to do
A latched CTRL or ALT has one lamp only.	The key has a single lamp: it is lit while latched and dark otherwise.	Press the next key; the latch clears after it.

How to use

1. Press F8 in T.O PERF to COMPUTE; press CTRL, then F2, for the MULTIPLE RWY tab.

How to test

#	Do this	Expected result
1	T.O PERF with valid conditions: press F8 on the laptop keyboard.	The results are computed, as with COMPUTE.
2	Press CTRL (lamp lit), then F2.	The MULTIPLE RWY tab opens and the lamp goes dark.
3	OIT BRIGHTNESS knob to OFF.	The OIT, the keyboard lamps and the ACD go dark.

14. LOGBOOK usability: PERSONAL ID, STORE IN, UPDATE / GIVE BACK messages

> **Aircraft:** A380X | **Where:** NSS AVNCS > LOGBOOK | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-28 / 29 on develop: OK. The InputField change is shared with the MFD and the ND.

What it is for

- An accepted identification or signature keeps the typed **PERSONAL ID** for the next signature of the same log-on; CANCEL drops it; the password is never kept.
- **STORE IN** shows OPEN ITEMS until the crew chooses (design choice: the FCOM figures show either storage selected, none preselected).
- The end of an **UPDATE** or **GIVE BACK** synchronisation gives a plain message.
- The input fields (shared with the MFD and the ND) release the previous field before the next one takes focus, so the field just selected keeps the keyboard.

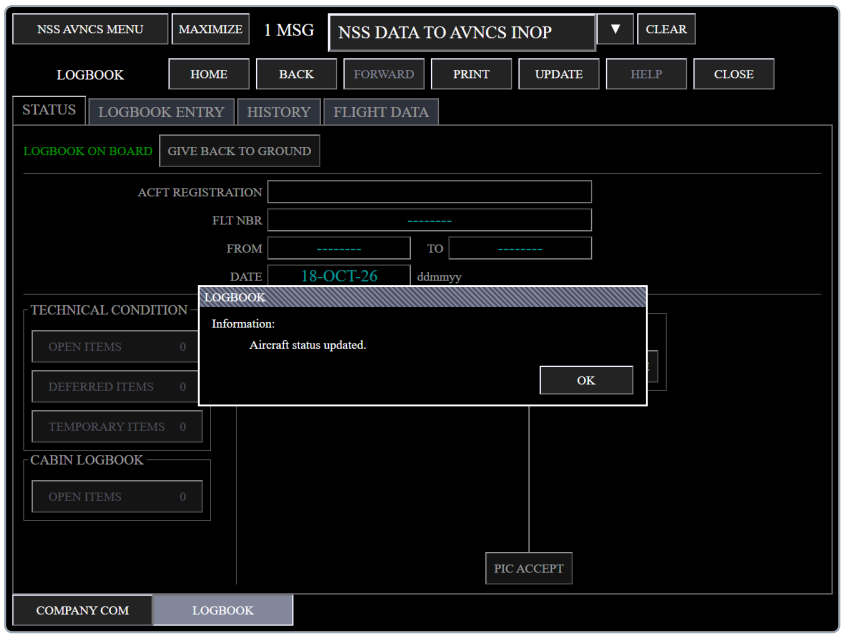


Figure 27. LOGBOOK: message at the end of an UPDATE

Limitations and why

Limitation	Why	What to do
The end-of-synchronisation messages are our wording.	The manual shows no message there.	None.

How to use

1. Log on, sign an entry, then sign the next one: the PERSONAL ID is still typed.

How to test

#	Do this	Expected result
1	LOGBOOK: sign a first entry with a PERSONAL ID, then start the next signature.	The PERSONAL ID is already filled; after CANCEL it is empty.
2	Click one input field, then another, in the LOGBOOK, MFD and ND.	The second field takes the keyboard.

15. LOADSHEET fuel distribution modes and the CG diagram

> **Aircraft:** A380X | **Where:** FLT OPS > LOADSHEET | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-28 / 29 on develop: OK.

What it is for

- LOADSHEET FUEL DISTR offers **TRIM ADJUSTMENT** and **MANUAL DISTR** next to CG TARGETING.
- MANUAL DISTR must equal the FOB exactly (the FCOM allows no tolerance). A tank box that still shows the value computed before keeps the exact quantity, so a displayed value typed back raises no error.
- The **MORE** panel draws the CG diagram with the DOW, ZFW, TOW and LW points.

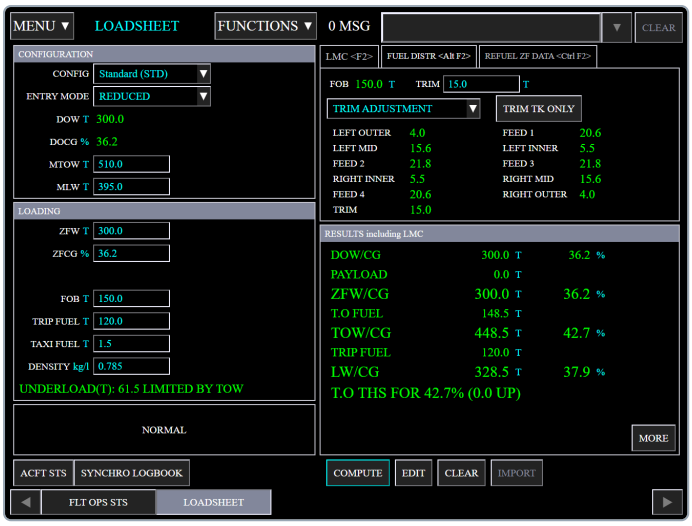


Figure 28. TRIM ADJUSTMENT



Figure 29. MANUAL DISTR with the sum equal to the FOB

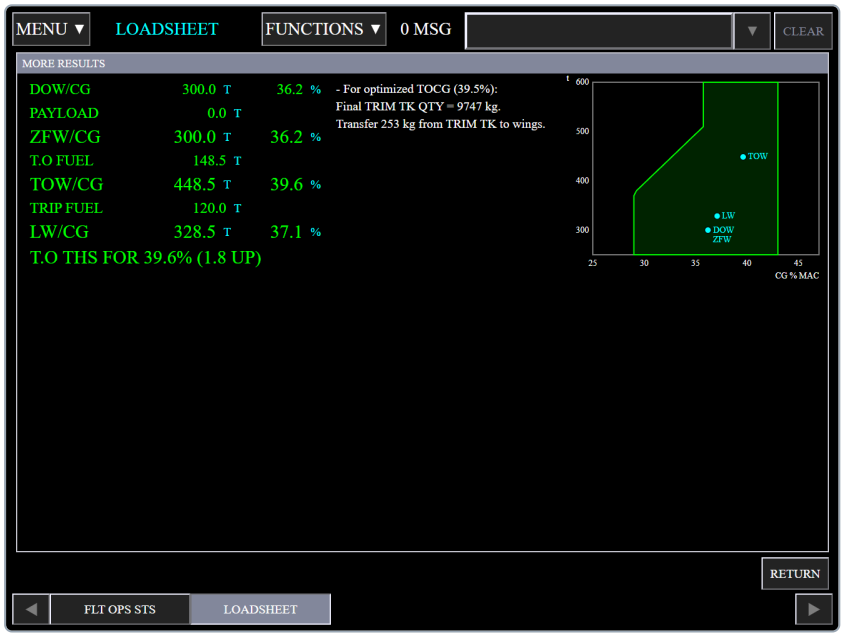


Figure 30. LOADSHEET MORE: the CG diagram

Limitations and why

Limitation	Why	What to do
No tolerance on MANUAL DISTR.	The FCOM requires the manual distribution to be identical to the FOB.	Type the distribution so that the sum equals the FOB.

How to use

1. LOADSHEET > FUEL DISTR: choose the mode, enter the values, COMPUTE; MORE for the diagram.

How to test

#	Do this	Expected result
1	MANUAL DISTR, change one tank by +1 t.	The distribution is refused (sum differs from the FOB).
2	Type the displayed value of that tank back.	No error.
3	MORE.	The diagram shows the DOW, ZFW, TOW and LW points inside the envelope.

16. AOC: OOOI reports, message ZOOM, Flight Delay and Flight Parameters reports

> **Aircraft:** A380X | **Where:** NSS AVNCS > COMPANY COM | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-28 / 29 on develop: OK.

What it is for

- The AOC sends the **OOOI reports** (OUT, OFF, ON, IN) by itself to the OOOI station set on the COMPANY COM Flight Log page.
- COMPANY COM Inbox, Outbox and Sent have a **ZOOM** button: the displayed message in larger characters.
- In-flight Reports: new **Flight Delay** and **Flight Parameters** report forms.

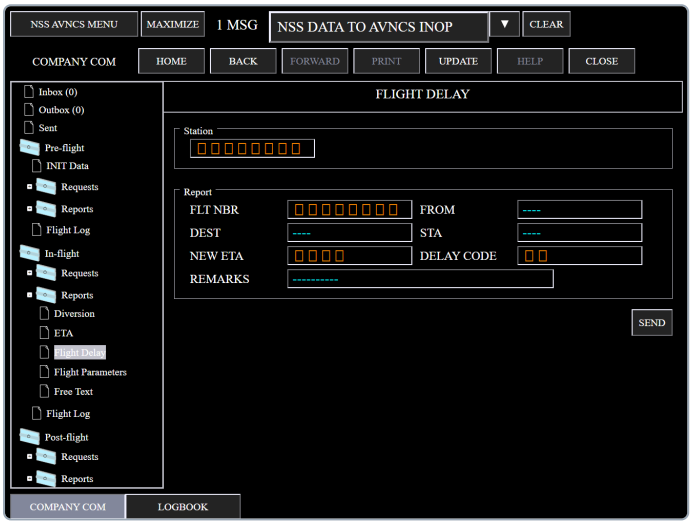


Figure 31. Flight Delay report form

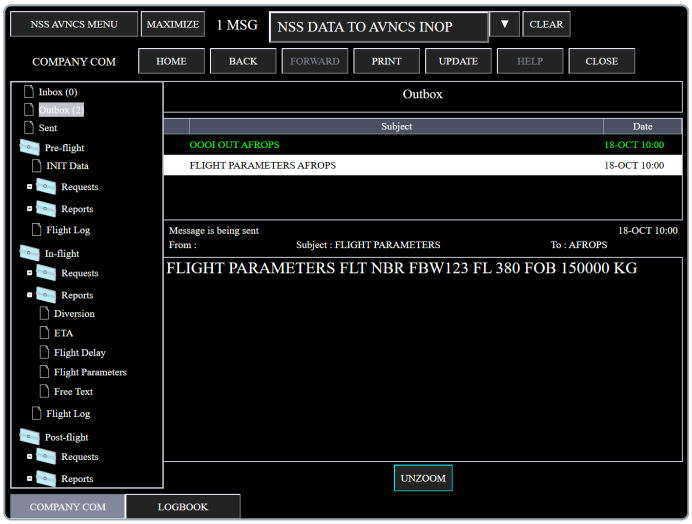


Figure 32. Outbox message with ZOOM

Limitations and why

Limitation	Why	What to do
The OOOI reports go to one station.	The station is the one set on the Flight Log page.	Set it before the flight.

How to use

1. Set the OOOI station on the Flight Log page; fly: OUT, OFF, ON and IN are sent. Open a message and press ZOOM.

How to test

#	Do this	Expected result
1	Set the OOOI station, release the parking brake and take off.	OUT and OFF appear in the Outbox / Sent folder.
2	Open a message in the Outbox and press ZOOM.	The message is shown in larger characters.
3	In-flight Reports: Flight Delay, fill and send.	The report is sent.