

# A32NX RAAS runway awareness callouts

The Honeywell Runway Awareness and Advisory System option of the EGPWS: spoken advisories and cautions about runways, from the sim's own airport data

|                  |                                                                                                                                                                                           |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX                                                                                                                                                                                     |
| Where to find it | flyPad <b>Settings &gt; Aircraft Options / Pin Programs &gt; RAAS</b> : Off, Feet or Meters                                                                                               |
| PR branch        | pr/18-a32nx-raas (independent)                                                                                                                                                            |
| Status           | Tested in the sim (September 2026): the voice and the callouts were heard in flight and on the ground.                                                                                    |
| Pictures         | The flyPad setting from the local browser harness; RAAS is audio only, so the callouts are shown on diagrams drawn from the code (Honeywell product description 060-4564-001, section 4). |

1. What it is for
2. Turning it on
3. On the ground
4. Approach and landing
5. Limitations and why

## 1. What it is for

RAAS is an option of the A320's Honeywell EGPWS (A320 FCOM GEN aircraft configuration, used as a line-up aid in PRO-NOR-SOP-11 TAKEOFF RUNWAY CONFIRM). It tells the crew which runway they are approaching or are on, warns of a taxiway takeoff or landing, and calls the distance remaining. It needs no airport map: the runways come from the sim's airport database.

## 2. Turning it on

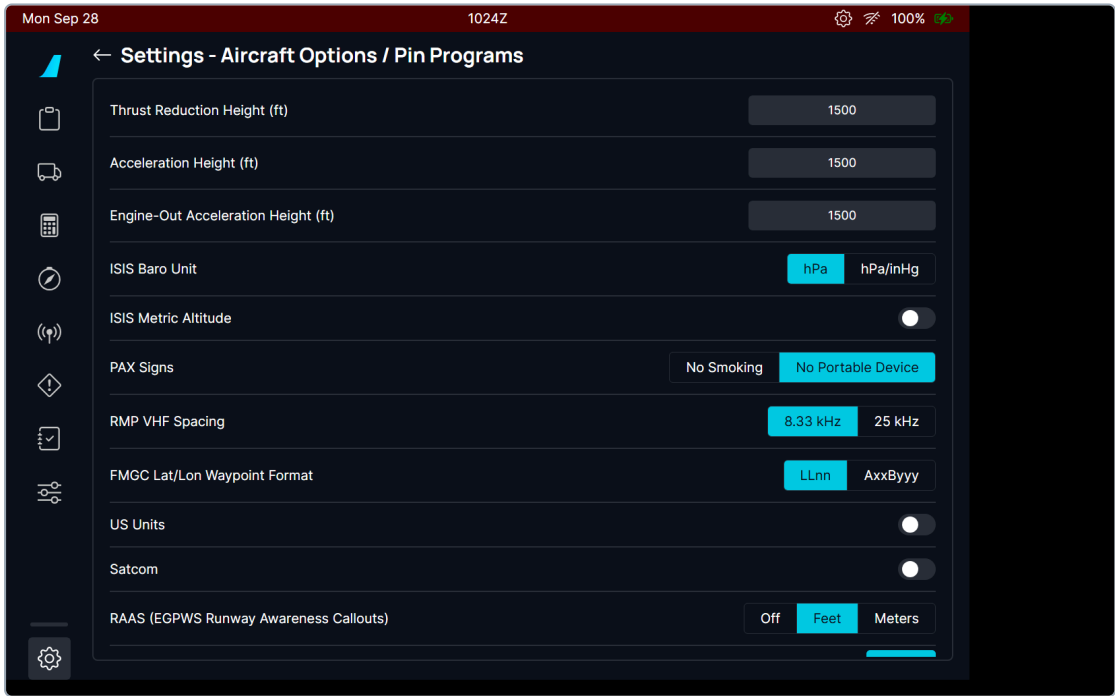


Figure 1. flyPad Settings > Aircraft Options / Pin Programs.

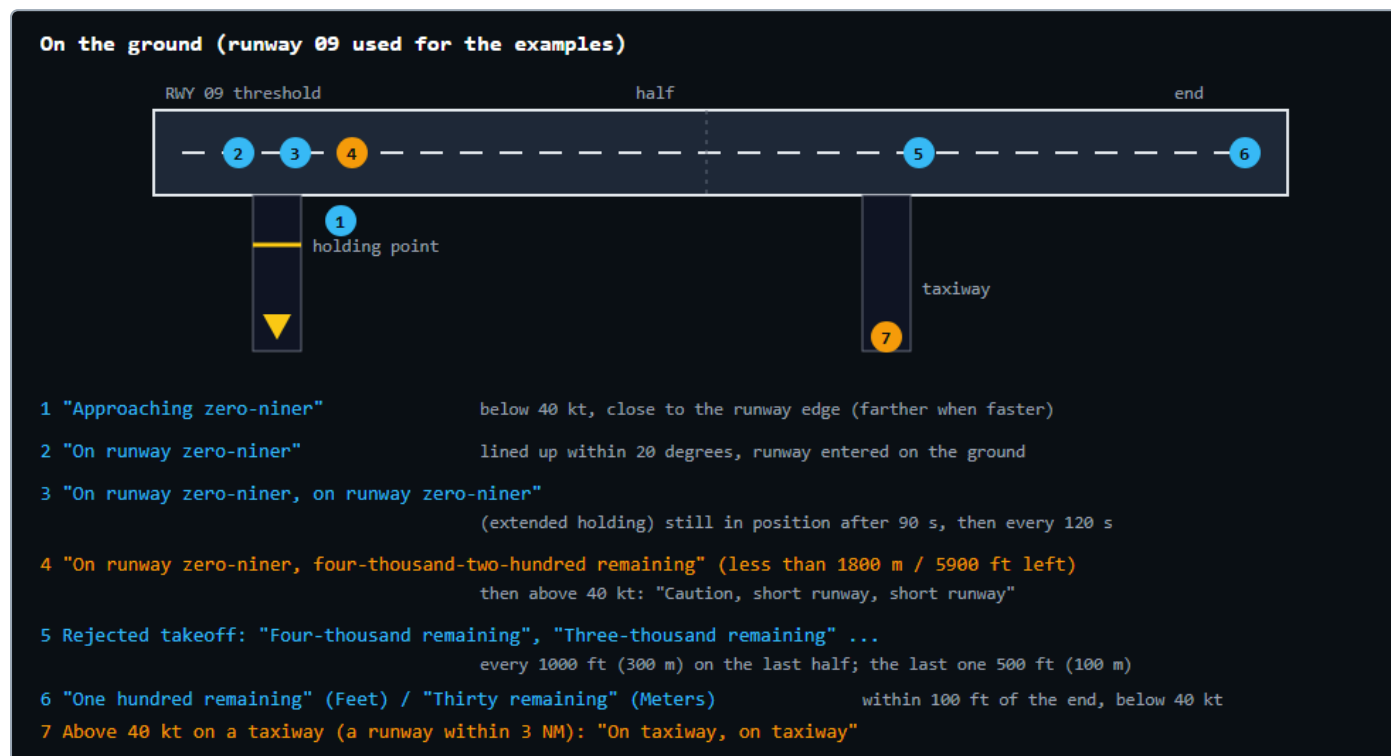


Figure 2. RAAS: Off, Feet (default) or Meters. The unit is the one of the distance callouts.

- The callouts run while the EGPWC is powered (AC BUS 1) and the **GPWS SYS** pushbutton is not OFF.

- The EGPWS aural alerts (e.g. "TOO LOW TERRAIN", "GLIDE SLOPE") have priority: RAAS waits for them.
- The voice is played word by word.

### 3. On the ground

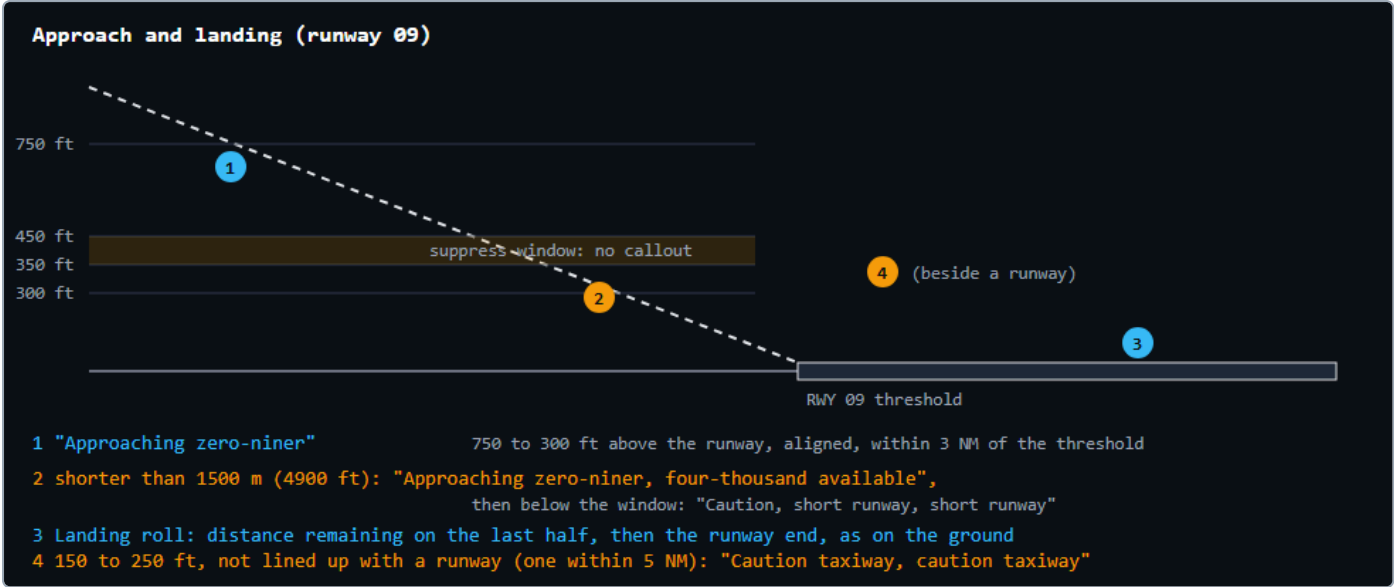


**Figure 3.** The ground callouts, in blue the advisories, in amber the cautions.

*Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.*

| Situation                                                  | What you should see                                                                                       |
|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Taxiing towards a runway (below 40 kt)                     | "Approaching" and the runway end nearest to where you will enter; "Approaching runways" when two at once. |
| Lining up                                                  | "On runway" and the runway, once, when the runway was entered on the ground.                              |
| Lining up with less than 1800 m (5900 ft) ahead            | The length remaining is added; at the start of the roll (above 40 kt), "Caution, short runway".           |
| Holding on the runway for 90 s                             | "On runway ..." twice, then every 120 s while you stay.                                                   |
| Starting a takeoff roll on a taxiway (above 40 kt)         | "On taxiway, on taxiway".                                                                                 |
| Rejected takeoff (ground speed down 7 kt from its maximum) | The distance remaining on the last half of the runway.                                                    |
| Slow near the end (within 100 ft, below 40 kt)             | "One hundred remaining" (Feet) or "Thirty remaining" (Meters).                                            |

## 4. Approach and landing



**Figure 4.** The approach callouts and the suppress window.

*Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.*

| Situation                                     | What you should see                                                                                                                         |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Between 750 and 300 ft, lined up, within 3 NM | "Approaching" and the runway, once. Not between 450 and 350 ft (the Airbus suppress window, where the crew is busy with the auto callouts). |
| The runway is shorter than 1500 m (4900 ft)   | The available length is added; below the window: "Caution, short runway".                                                                   |
| 150 to 250 ft, not lined up with any runway   | "Caution taxiway, caution taxiway".                                                                                                         |
| Landing roll                                  | The distance remaining on the last half: every 1000 ft (Feet) or 300 m (Meters), the last one at 500 ft / 100 m; then the runway end.       |

## 5. Limitations and why

| Limitation                     | Why                                                                                                                                                                | What to do |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| Only runways known to the sim. | The runways come from the MSFS airport database, not from an airport map: no taxiway geometry, so "on taxiway" is judged as "not aligned with a runway".           | -          |
| One synthetic voice.           | The clips are generated with the Piper text-to-speech engine (voice trained on the public-domain LJ Speech dataset); its licence allows the clips in the aircraft. | -          |
| No RAAS on the A380X.          | The A380X uses the OANS runway alerts instead (see the PR 19 manual).                                                                                              | -          |