

# FlyByWire feature user manuals

One manual per `core/*` branch of the fork (28 branches): what each feature does, how to use it, how to test it in the sim, what to expect, and its limitations with the reason

|                         |                                                                                                                                                                                                                                                                     |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A32NX and A380X                                                                                                                                                                                                                                                     |
| <b>Where to find it</b> | This folder: each manual as HTML (with its <code>img/NN/</code> pictures) and as PDF; <code>FBW-user-manuals.pdf</code> holds them all, <code>FBW-user-manuals.docx</code> is the editable Word version                                                             |
| <b>Branch</b>           | The <code>core/*</code> branches of the fork <code>TCdr/aircraft</code> : what to open the upstream pull requests from                                                                                                                                              |
| <b>Status</b>           | Restructured on 2026-10-04 from the 31 per-PR manuals of 2026-09-28 (their content is merged into the core manuals); each feature carries its own test status.                                                                                                      |
| <b>Pictures</b>         | Instrument pictures come from the local browser harness running the installed instrument bundles; the native WASM displays (weather radar, terrain, VD) are in-sim screenshots; audio features use diagrams. Features added after 2026-09-28 are described in text. |

1. The manuals

2. Stacks: what must be merged first
3. Companion changes in aircraft-large-files

4. How to read them

## 1. The manuals

| # | Manual                                                                             | Aircraft                                                             | Branch                               | Based on            | Features |
|---|------------------------------------------------------------------------------------|----------------------------------------------------------------------|--------------------------------------|---------------------|----------|
| 1 | <a href="#">Weather radar and terrain on the ND and VD (PDF)</a>                   | A32NX and A380X                                                      | <code>core/nd-weather-terrain</code> | <code>master</code> | 8        |
| 2 | <a href="#">Surveillance: SURV controls, ECAM SURV lines and TCAS (PDF)</a>        | A380X (SURV panel, VD messages, ECAM lines) and A32NX + A380X (TCAS) | <code>core/surveillance</code>       | <code>master</code> | 7        |
| 3 | <a href="#">Independent CPT and F/O MCDUs (PDF)</a>                                | A32NX                                                                | <code>core/a32nx-mcdu</code>         | <code>master</code> | 3        |
| 4 | <a href="#">ECAM procedures, EMER CANC and FIRE TEST (PDF)</a>                     | A380X (ECAM, FWS) and A32NX + A380X (FIRE TEST option)               | <code>core/ecam-fws</code>           | <code>master</code> | 5        |
| 5 | <a href="#">Runway awareness: RAAS and OANS (PDF)</a>                              | A32NX (RAAS) and A380X (OANS)                                        | <code>core/oans-btv-raas</code>      | <code>master</code> | 4        |
| 6 | <a href="#">A380X standby instruments (ISIS) (PDF)</a>                             | A380X                                                                | <code>core/isis</code>               | <code>master</code> | 4        |
| 7 | <a href="#">Lights: strobe and beacon timing, interior lighting, presets (PDF)</a> | A32NX and A380X                                                      | <code>core/lights</code>             | <code>master</code> | 2        |
| 8 | <a href="#">Fire warnings and the ENG FIRE pushbutton (PDF)</a>                    | A32NX (fire warnings, LP fuel valve) and A380X (LP fuel valve)       | <code>core/fire</code>               | <code>master</code> | 3        |

|    |                                                                          |                                                                                                                                          |                             |                                    |    |
|----|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|------------------------------------|----|
| 9  | <a href="#">A380X MFD FMS and SURV pages (PDF)</a>                       | A380X (the shared flight plan code of DIRECT TO, the 50 waypoint limit and the company winds is also in the A32NX FMS, unchanged for it) | core/a380x-mfd-fms          | core/surveillance                  | 16 |
| 10 | <a href="#">A380X ATC COM and datalink (PDF)</a>                         | A380X (the ACARS provider connection is shared with the A32NX)                                                                           | core/a380x-atccom-datalink  | core/a380x-mfd-fms                 | 5  |
| 11 | <a href="#">A380X fuel jettison and FINAL fuel (PDF)</a>                 | A380X                                                                                                                                    | core/fuel                   | core/a380x-mfd-fms                 | 4  |
| 12 | <a href="#">GPS receivers, GPS deselection and ECAM STATUS (PDF)</a>     | A32NX and A380X (shared systems code); the ECAM STATUS page and STS reminder are A32NX only                                              | core/gps                    | core/a380x-mfd-fms                 | 6  |
| 13 | <a href="#">A380X interactive ND (PDF)</a>                               | A380X                                                                                                                                    | core/a380x-interactive-nd   | core/a380x-mfd-fms                 | 1  |
| 14 | <a href="#">flyPad performance calculators (PDF)</a>                     | A380X and A32NX (one shared flyPad screen per calculator; the company datalink reply time is A380X only)                                 | core/efb-performance        | core/a380x-mfd-fms                 | 10 |
| 15 | <a href="#">Cockpit printers (PDF)</a>                                   | A380X (printing, buttons) and A32NX (paper door, no torn paper edge)                                                                     | core/printer                | core/a380x-atccom-datalink         | 5  |
| 16 | <a href="#">flyPad ground: taxi route, ATC frequencies and GSX (PDF)</a> | A32NX and A380X (the OANS flags are A380X only)                                                                                          | core/efb-ground             | core/efb-performance               | 5  |
| 17 | <a href="#">flyPad Material 3 redesign and independent flyPads (PDF)</a> | A32NX and A380X (the Buffet tab: A32NX only)                                                                                             | core/efb-redesign           | core/efb-ground                    | 15 |
| 18 | <a href="#">A32NX air conditioning per the FCOM (PDF)</a>                | A32NX                                                                                                                                    | core/a32nx-air-conditioning | core/gps                           | 4  |
| 19 | <a href="#">A380X cockpit buttons, lights and probes (PDF)</a>           | A380X                                                                                                                                    | core/a380x-cockpit          | master                             | 5  |
| 20 | <a href="#">A32NX exterior spoilers by panel group (PDF)</a>             | A32NX                                                                                                                                    | core/a32nx-exterior         | master                             | 1  |
| 21 | <a href="#">A380X electrical alerts and AC ESS loads (PDF)</a>           | A380X                                                                                                                                    | core/a380x-elec             | core/gps                           | 4  |
| 22 | <a href="#">A380X flyPad failures (PDF)</a>                              | A380X                                                                                                                                    | core/failures-a380x         | master + core/fire + core/ecam-fws | 18 |

|    |                                                                 |                 |                            |                                              |    |
|----|-----------------------------------------------------------------|-----------------|----------------------------|----------------------------------------------|----|
| 23 | <a href="#">A32NX flyPad failures (PDF)</a>                     | A32NX           | core/failures-a32nx        | core/gps + core/fire                         | 17 |
| 24 | <a href="#">Display unit failures and reconfiguration (PDF)</a> | A32NX and A380X | core/display-unit-failures | core/nd-weather-terrain                      | 4  |
| 25 | <a href="#">A380X weather radar GAIN, ELEVN and TILT (PDF)</a>  | A380X           | core/a380x-wxr-controls    | core/nd-weather-terrain + core/a380x-mfd-fms | 4  |
| 26 | <a href="#">A380X VD runways as flat ground (PDF)</a>           | A380X           | core/a380x-vd-runways      | core/nd-weather-terrain + core/oans-btv-raas | 1  |
| 27 | <a href="#">FCOM audit fixes (PDF)</a>                          | A32NX and A380X | core/fcom-audit-fixes      | master                                       | 8  |
| 28 | <a href="#">RAT ground stow (PDF)</a>                           | A32NX and A380X | core/rat-ground-stow       | master                                       | 1  |

## 2. Stacks: what must be merged first

Most branches are based directly on `master` (FlyByWire master 255546cb0 merged in) and can be merged in any order. The others are stacked: a branch needs every branch under it merged first.

| Stack                           | Merge order                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A380X MFD                       | core/surveillance > core/a380x-mfd-fms > then any of core/a380x-atccom-datalink, core/fuel, core/gps, core/a380x-interactive-nd, core/efb-performance                                                                                                                                                 |
| Printer                         | ... core/a380x-atccom-datalink > core/printer                                                                                                                                                                                                                                                         |
| flyPad                          | ... core/efb-performance > core/efb-ground > core/efb-redesign                                                                                                                                                                                                                                        |
| GPS                             | ... core/gps > core/a32nx-air-conditioning, core/a380x-elec, core/failures-a32nx (which also merges core/fire)                                                                                                                                                                                        |
| A380X failures                  | core/fire + core/ecam-fws > core/failures-a380x (merged in 2026-10-05 for the engine failures)                                                                                                                                                                                                        |
| ND                              | core/nd-weather-terrain > core/display-unit-failures; core/nd-weather-terrain + core/a380x-mfd-fms > core/a380x-wxr-controls; core/nd-weather-terrain + core/oans-btv-raas > core/a380x-vd-runways                                                                                                    |
| Independent (on master)         | core/a32nx-mcdu, core/ecam-fws, core/oans-btv-raas, core/isis, core/lights, core/fire, core/a380x-cockpit, core/a32nx-exterior, core/fcom-audit-fixes, core/rat-ground-stow                                                                                                                           |
| Feature split over two branches | The RAT stow row of core/efb-redesign needs core/rat-ground-stow (the systems side): merge both for the feature to work                                                                                                                                                                               |
| Same panel.cfg section          | core/display-unit-failures (A32NX DuMessage gauge) and core/efb-redesign (A32NX F/O flyPad) both add [VCockpit21]: whichever is merged second rennumbers its section to [VCockpit22]                                                                                                                  |
| Shared engine failure module    | core/failures-a32nx and core/failures-a380x both carry the same fbw-common engine failure files (engine_failure.rs, ata.ts): whichever is merged second keeps one copy; in failures/mod.rs and the A380X a380_systems_wasm failure list keep the GPS entries of core/gps followed by one ATA 72 block |

### 3. Companion changes in aircraft-large-files

Some features change the 3D cockpit models, which live in the separate FlyByWire repository `aircraft-large-files`. Their companion commits are on the fork `TCdr/aircraft-large-files` and must be merged with the core branch.

| Companion commit | What it adds                                                                                                                        | Core branch                |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| 5563e31          | A32NX MCDU screens: both MCDUs on one texture (UV halves)                                                                           | core/a32nx-mcd�            |
| 36b4bd9          | A380X pedestal printer paper                                                                                                        | core/printer               |
| 27d6123          | A380X printer door, roller unit and paper slit                                                                                      | core/printer               |
| 99237fb          | A32NX printer door                                                                                                                  | core/printer               |
| 24f7b02          | A380X F/O flyPad screen (independent flyPads)                                                                                       | core/efb-redesign          |
| d3060ea          | A32NX F/O flyPad screen (independent flyPads)                                                                                       | core/efb-redesign          |
| 8c14d21          | A380X printer ON light (green window)                                                                                               | core/printer               |
| fa6c5d1          | A380X fuel jettison plume at the outlets (stacked on 8c14d21)                                                                       | core/fuel                  |
| b8fb739          | A380X MFP (multi-function probe) vane animations                                                                                    | core/a380x-cockpit         |
| b790e8d          | A32NX DU reconfiguration: 17 overlay glasses on the EIS screens, DU_MESSAGE and DU_BLANK materials (stacked on 99237fb and d3060ea) | core/display-unit-failures |

### 4. How to read them

- Each manual has one numbered section per **feature** of its branch. The grey line under the feature title gives the aircraft, where to find it and its **status** (sim-tested, or not, with the date).
- **What it is for:** the problem the change solves, in a few sentences.
- **How to use:** numbered steps for normal use.
- **How to test:** a table of steps a tester follows in the sim, each with the expected result. If the sim does something else, it is a bug worth reporting with the branch name.
- **What you should see** tables: the expected behaviour in each situation; **Limitations and why:** what does not work yet, the reason and what to do about it.
- Pictures that do not come from the harness (drawn diagrams, in-sim screenshots taken during development) carry an amber line under their caption: they are not representative of the in-game UI and serve as a reference for the explanation only.



# Weather radar and terrain on the ND and VD

A native weather radar and TERR ON ND terrain display on the NDs of both aircraft, and the terrain and weather on the A380X vertical display, drawn from the MSFS radar and terrain data without SimBridge

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX and A380X                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Where to find it | NDs (ARC and ROSE pages); A32NX weather radar panel and TERR ON ND pushbutton; A380X EFIS WX / TERR overlay, MFD SURV CONTROLS; A380X VD                                                                                                                                                                                                                                                                                                           |
| Branch           | core/nd-weather-terrain , based on master (FlyByWire master 255546cb0 merged in); independent. core/display-unit-failures , core/a380x-wxr-controls and core/a380x-vd-runways stack on it.                                                                                                                                                                                                                                                         |
| Status           | Radar, mode messages and VD tested in the sim over several sessions (September 2026; A380X messages, antenna sweeps, 320 NM limit and ARC bottom by the user 2026-09-24); terrain tested by the user: OK (2026-09-29); parked views and 20 / 10 Hz redraw user-checked in the sim and measured (2026-10-02); OANS mouse fix user-tested (2026-09-27); terrain view resend after parking tested in the sim by the user on develop: OK (2026-10-07). |
| Pictures         | In-sim screenshots taken during development (the radar and terrain are drawn by a native WASM gauge, which the browser harness cannot run), and two A32NX NDs from the local browser harness for the mode message. Some A380X radar pictures predate later changes: their captions say so.                                                                                                                                                         |

1. A32NX weather radar on the ND
2. A380X weather radar on the ND and weather on the VD
3. Weather radar mode and messages on the ND
4. Terrain on the ND (TERR ON ND) and A380X VD terrain
5. Radar, terrain and VD after the A380 and A320 manuals
6. Fewer stutters: idle map views paused, 20 Hz / 10 Hz redraw
7. Terrain and radar views get their settings again after a pause
8. A380X: the OANS map takes the mouse through the radar gauges

## 1. A32NX weather radar on the ND

**Aircraft:** A32NX | **Where:** Both NDs; pedestal WX SYS and MODE knobs | **Status:** Tested in the sim over several sessions and weather presets (September 2026); antenna sweep tested by the user 2026-09-24.


### What it is for

The A32NX ND had no working weather radar. A native gauge ( `ndwxr` ) now draws the MSFS weather radar on the CPT and F/O NDs, aligned with the range rings, in the colours of an airborne radar.



**Figure 1.** A32NX ND in ARC with weather ahead: green, yellow and red cells.

*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

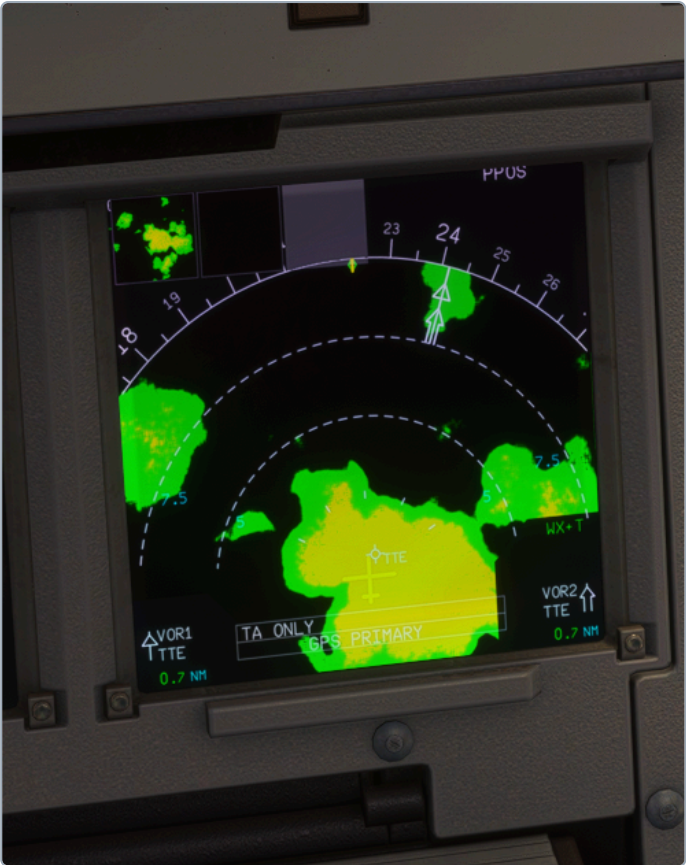

**Figure 2.** Another cell field, ROSE-like forward view.

*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

### Using it

| Control     | Position                             | ND                                                                                  |
|-------------|--------------------------------------|-------------------------------------------------------------------------------------|
| WX SYS knob | SYS 1 / SYS 2                        | Radar on (system 1 or 2)                                                            |
|             | OFF                                  | No radar                                                                            |
| MODE knob   | WX                                   | Precipitation                                                                       |
|             | WX+T                                 | Precipitation and turbulence (magenta)                                              |
|             | TURB                                 | Turbulence only                                                                     |
|             | MAP                                  | Ground map from the terrain: black water, green ground, amber mountains             |
| EFIS        | ARC or any ROSE page (NAV, ILS, VOR) | Radar shown over the antenna sweep (180 degrees, the forward half); nothing in PLAN |

The selected mode is written on the ND (see the feature *Weather radar mode and messages on the ND*).

### Reading the picture

| Colour | Rain rate     | Meaning             |
|--------|---------------|---------------------|
| Green  | from 0.7 mm/h | Light precipitation |
| Yellow | from 4 mm/h   | Moderate            |
| Red    | from 12 mm/h  | Heavy: avoid        |

|         |                             |                         |
|---------|-----------------------------|-------------------------|
| Magenta | above 20 mm/h, within 40 NM | Turbulence (WX+T, TURB) |
|---------|-----------------------------|-------------------------|

The engine's rain rate is noisy pixel by pixel; each level is smoothed, so the picture shows solid areas with crisp edges.

## What to expect

| Situation       | What you should see                                                                                                                                |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| On the ground   | Drawn as in flight: the radar scans on the ground once it is switched on with a display mode (A320 FCOM DSC-34-SURV-30-30).                        |
| Clear sky       | No picture (nothing to return).                                                                                                                    |
| WX SYS OFF      | No picture; WXR OFF in white on the ND.                                                                                                            |
| CPT and F/O NDs | Independent: each ND uses its own IR position (IR 1 CPT, IR 2 F/O, IR 3 by the ATT HDG knob) and its own range and mode; the two knobs are shared. |

## Limitations and why

| Limitation                      | Why                                                                              | What to do                          |
|---------------------------------|----------------------------------------------------------------------------------|-------------------------------------|
| Turbulence is a proxy.          | MSFS gives no turbulence data; rain above 20 mm/h within 40 NM is drawn magenta. | -                                   |
| No tilt, no gain.               | The MSFS radar has neither.                                                      | -                                   |
| Drawn only with weather around. | The MSFS radar only returns precipitation.                                       | Test with the MSFS weather presets. |

## How to use

1. Set the **WX SYS** knob of the weather radar panel to **SYS 1** or **SYS 2**.
2. Set the **MODE** knob: **WX** (precipitation), **WX+T** (precipitation and turbulence), **TURB** (turbulence only) or **MAP** (ground map).
3. On the EFIS control panel select **ARC** or a **ROSE** mode and a range.
4. Read the colours (table above); WX SYS **OFF** takes the radar off.

## How to test

| # | Do this                                                                                                                                             | Expected result                                                                                                             |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX in flight (or on the ground) with an MSFS weather preset with storms. CPT EFIS: ND <b>ARC, 40 NM</b> . WX SYS <b>SYS 1</b> , MODE <b>WX</b> . | Green, yellow and red cells ahead of the aircraft, aligned with the range rings; <b>WX</b> in green on the right of the ND. |
| 2 | MODE <b>WX+T</b> .                                                                                                                                  | Heavy rain (above 20 mm/h) within 40 NM turns magenta; message <b>WX+T</b> .                                                |
| 3 | MODE <b>TURB</b> .                                                                                                                                  | Only the magenta areas are left; message <b>TURB</b> .                                                                      |
| 4 | MODE <b>MAP</b> .                                                                                                                                   | A ground map: black water, green ground, amber mountains; message <b>MAP</b> .                                              |
| 5 | MODE <b>WX</b> , then ND mode <b>ROSE ILS, ROSE VOR, ROSE NAV</b> , then <b>PLAN</b> .                                                              | The radar is shown on every ROSE page (forward half), not in PLAN.                                                          |
| 6 | Change the F/O ND range only.                                                                                                                       | The F/O ND redraws at its own range; the CPT ND does not change.                                                            |
| 7 | WX SYS <b>OFF</b> .                                                                                                                                 | No weather picture; <b>WXR OFF</b> in white on the ND.                                                                      |

## 2. A380X weather radar on the ND and weather on the VD

**Aircraft:** A380X | **Where:** Both NDs and VDs; EFIS WX overlay; MFD SURV CONTROLS | **Status:** Tested in the sim (September 2026); 160 degree sweep and 320 NM limit tested by the user 2026-09-24.

### What it is for

The A380X ND always showed WXR INOP (both WXR systems were hard-coded as failed) and had no radar picture. It now has the native radar of the A32NX, with the A380 rules, and the VD shows the weather on its vertical cut.



**Figure 3.** A380X ND with weather cells ahead, and the same cells on the VD below. *Development picture: the WX+T label and the hatched off-path areas seen here were removed later; the A380X ND now reads WX.*


*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

### Using it


- EFIS control panel: select the **WX** overlay.
- MFD SURV CONTROLS: WXR AUTO or OFF, TURB AUTO or OFF, MODE WX or MAP, WX ON VD. These buttons are wired on `core/surveillance`; with this branch alone the radar runs at their default settings (WXR AUTO, TURB AUTO, MODE WX, WX ON VD AUTO).



- The radar is shown when the WXR & TAWS system selected on the SURV panel is not failed. A system is failed only while its AESU is reset or its power is lost (AC ESS for system 1, AC 4 for system 2).
- The ND range table is -1 (ZOOM, the airport map) and 10 to 640 NM; the radar is hidden at ZOOM and at 640 NM: "The ND can only display the weather, if the selected range is below, or equal to, 320 nm" (A380 FCOM DSC-31-20-50).

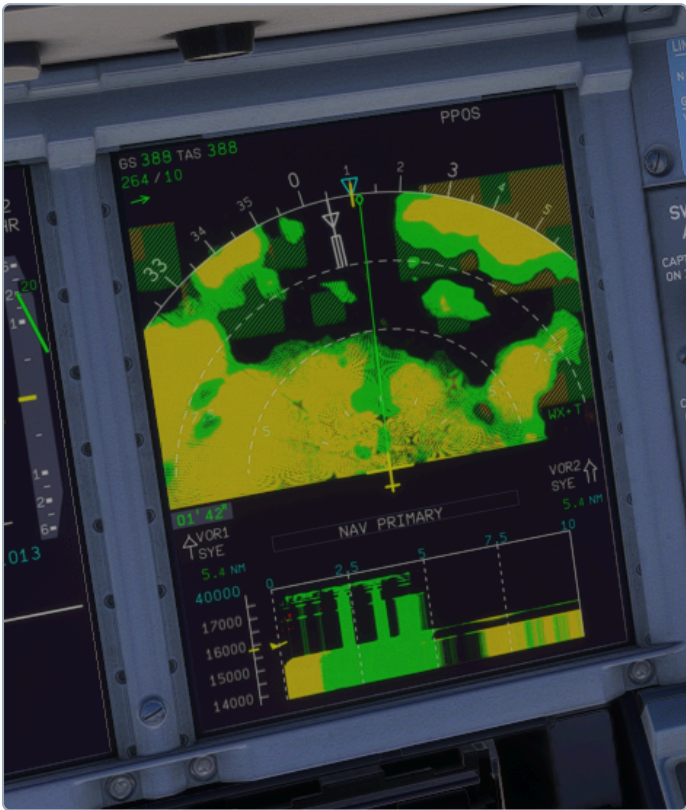

**Figure 4.** Moderate rain (yellow) over a wide area, with its VD cut.  
*Development picture: the WX+T label and the hatched off-path areas seen here were removed later; the A380X ND now reads WX.*  
*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

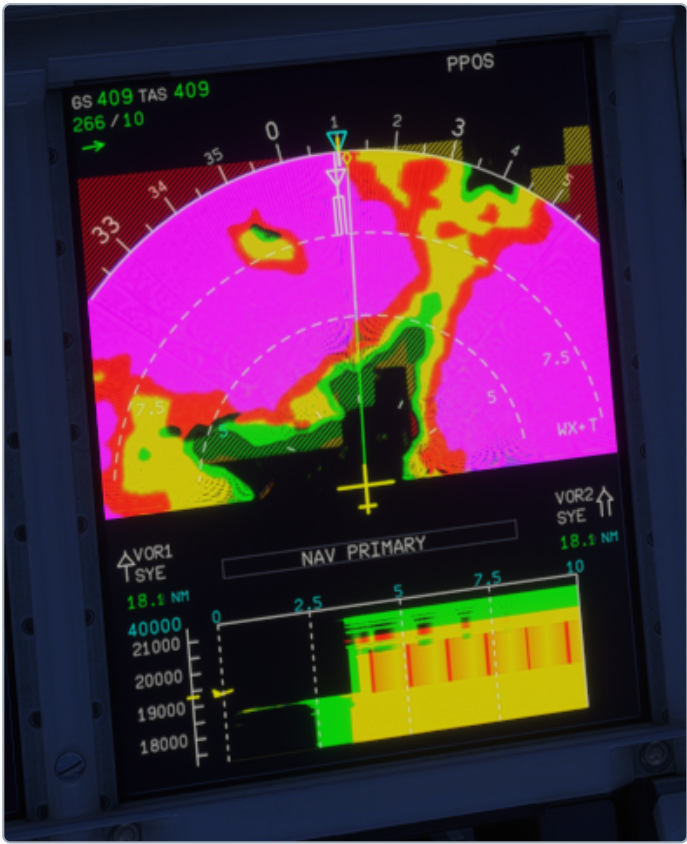

**Figure 5.** TURB on: heavy rain drawn magenta (turbulence proxy).  
*Development picture: the WX+T label and the hatched off-path areas seen here were removed later; the A380X ND now reads WX.*  
*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

**Weather on the VD**

- WX ON VD (SURV CONTROLS) shows the weather on the VD, along the same cut as the terrain (see *Radar, terrain and VD after the A380 and A320 manuals*).
- Cells are drawn green and yellow with a red core; no magenta: the real VD does not display turbulence (FCOM DSC-31-20-40-10).
- Heights are placed on the ADR baro-corrected altitude, like the VD's aircraft symbol.

**Limitations and why**

| Limitation                       | Why                                                                                                                                 | What to do |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|------------|
| The VD weather is stylised.      | The vertical MapView of MSFS is a single thin beam (tilting it crashes the gauge); the VD picture is built from the ND radar views. | -          |
| PRED W/S and GAIN are not drawn. | The MSFS radar has no predictive windshear or gain.                                                                                 | -          |
| No TURB-only mode.               | The A380 has none: TURB off gives WX, on gives WX+T.                                                                                | -          |

Antenna sweep

The picture covers the real antenna sweep of the A380's Honeywell RDR-4000: 160 degrees (80 degrees each side of the nose; Honeywell IntuVue white paper). The real display fills up to 90 degrees from the radar's memory, which the MSFS radar does not have, so nothing is painted beside and behind the aircraft there.

How to use

- 1. On the EFIS control panel select the **WX** overlay, the **ARC** or a **ROSE** mode and a range of 10 to 320 NM.
- 2. With `core/surveillance`: set the WXR block of **MFD SURV > CONTROLS** (WXR, TURB, MODE, WX ON VD). Without it the radar runs at the default settings.
- 3. Read the weather on the ND and its vertical cut on the VD below.

How to test

| # | Do this                                                                                      | Expected result                                                                                                             |
|---|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight with an MSFS storm preset. CPT EFIS: <b>WX</b> overlay, ND <b>ARC</b> 40 NM. | Green, yellow and red cells over the 160 degree sweep; <b>WX</b> in green on the right of the ND.                           |
| 2 | Look at the VD under the ND.                                                                 | The cells on the flight path drawn as green and yellow columns with a red core at the aircraft level; no magenta on the VD. |
| 3 | ND range <b>640 NM</b> , then the smallest range ( <b>ZOOM</b> ).                            | No weather at 640 NM (the terrain, if selected, is still drawn); none at ZOOM. Back to 320 NM: the weather comes back.      |
| 4 | With <code>core/surveillance</code> : MFD SURV > CONTROLS, <b>TURB OFF</b> .                 | No more magenta on the ND; the message stays <b>WX</b> .                                                                    |
| 5 | With <code>core/surveillance</code> : <b>MODE MAP</b> .                                      | Ground map on the ND; message <b>MAP</b> .                                                                                  |
| 6 | With <code>core/surveillance</code> : <b>WX ON VD OFF</b> .                                  | The VD weather goes; the ND keeps it.                                                                                       |
| 7 | Deselect the <b>WX</b> overlay.                                                              | No weather on the ND, no radar message.                                                                                     |

3. Weather radar mode and messages on the ND

**Aircraft:** A32NX and A380X | **Where:** ND, right side above the TERR box | **Status:** Tested in the sim (September 2026); A380X WX / MAP / WXR OFF messages tested by the user 2026-09-24.

What it is for

Nothing on the ND told the crew which radar mode was selected. The mode now appears in green on the right of the ARC and ROSE pages while the radar is selected, as on the real ND. The A32NX shows the Honeywell list of the A320 FCOM (DSC-34-SURV-30-30); the A380X shows the A380's own WXR messages (A380 FCOM DSC-34-20-30-20 "WXR MESSAGES"): WX for the WX display function whatever the TURB button, MAP, WXR OFF.

| ND message      | A32NX (MODE knob) | A380X (SURV CONTROLS)                         |
|-----------------|-------------------|-----------------------------------------------|
| WX (green)      | WX                | WX display function, whatever the TURB button |
| WX+T (green)    | WX+T              | -- (not an A380 message)                      |
| TURB (green)    | TURB              | -- (no TURB-only mode on the A380)            |
| MAP (green)     | MAP               | MODE MAP                                      |
| WXR OFF (white) | WX SYS OFF        | WXR button OFF                                |

(none)

-

no WX overlay on the EFIS panel, or the WXR & TAWS system failed



Figure 6. A32NX ARC: WX+T above the TERR box.

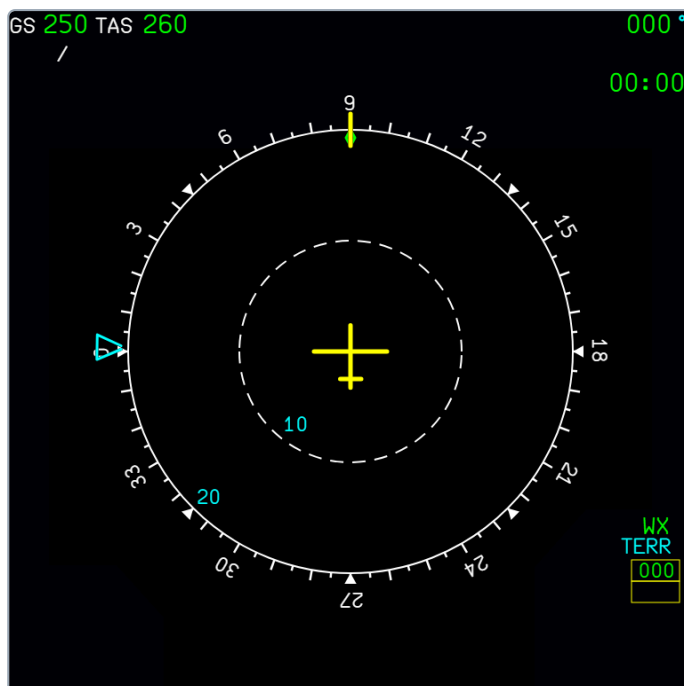


Figure 7. A32NX ROSE NAV: WX.

- Shown on the ARC and ROSE pages (NAV, ILS, VOR), not in PLAN, and not while the terrain replaces the weather (TERR ON ND).
- Shown on the ground too, where the radar also scans.
- The native radar gauge decides and publishes the label (A32NX\_WXR\_ND\_{L,R}\_MODE), so the ND follows exactly what the gauge draws.

## Limitations and why

| Limitation        | Why                             | What to do |
|-------------------|---------------------------------|------------|
| No label in PLAN. | The radar is not shown in PLAN. | -          |

## How to use

1. Nothing to set: the message follows the radar selection (A32NX MODE knob; A380X WX overlay and SURV CONTROLS).
2. Check the message on the right of the ND, above the TERR box, after each radar change.

## How to test


| # | Do this                                                                         | Expected result                                                |
|---|---------------------------------------------------------------------------------|----------------------------------------------------------------|
| 1 | A32NX, ND ARC: WX SYS SYS 1, turn the MODE knob through WX, WX+T, TURB, MAP.    | The message follows in green: WX, WX+T, TURB, MAP.             |
| 2 | A32NX: WX SYS <b>OFF</b> .                                                      | <b>WXR OFF</b> in white.                                       |
| 3 | A32NX: press <b>TERR ON ND</b> .                                                | The radar message goes while the terrain replaces the weather. |
| 4 | A380X, WX overlay, default SURV settings (TURB AUTO).                           | <b>WX</b> in green (not WX+T).                                 |
| 5 | A380X with core/surveillance: MODE MAP, then WXR OFF on the SURV CONTROLS page. | <b>MAP</b> in green, then <b>WXR OFF</b> in white.             |

4. Terrain on the ND (TERR ON ND) and A380X VD terrain

**Aircraft:** A32NX and A380X | **Where:** A32NX TERR ON ND pushbutton; A380X EFIS TERR overlay; A380X VD | **Status:** Tested in the sim by the user: OK (2026-09-29).


What it is for

TERR ON ND needed SimBridge. The native gauge now draws it from MSFS's own terrain, with the EGPWS colours, on every map page but PLAN, also on the ground.

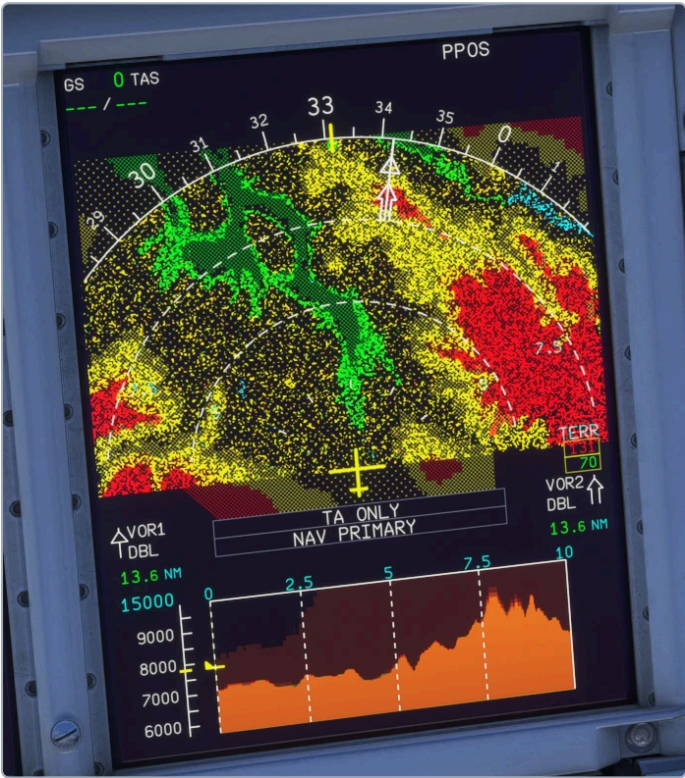

**Figure 8.** A380X at Aspen, 10 NM: terrain far above the aircraft in red, close in yellow, below in green; the VD terrain profile in brown.

*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

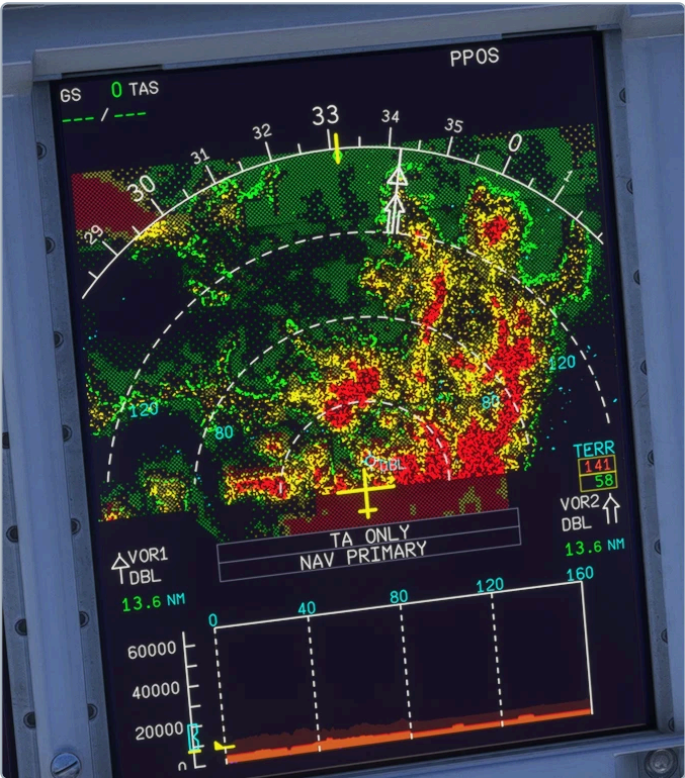


**Figure 9.** The same place at 160 NM.  
*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

Reading the colours

| Terrain relative to the aircraft                 | Colour         |
|--------------------------------------------------|----------------|
| More than 2000 ft above                          | Dense red      |
| 1000 to 2000 ft above                            | Dense yellow   |
| 500 ft below (250 ft gear down) to 1000 ft above | Medium yellow  |
| Down to 1000 ft below (500 ft gear down)         | Dense green    |
| 1000 to 2000 ft below                            | Light green    |
| More than 2000 ft below                          | Nothing        |
| Water                                            | Cyan-blue dots |



## A380X vertical display



- Needs the TERR SYS button of the SURV page not OFF (otherwise NO TERR DATA AVAILABLE).
- The cut follows the flight plan or the track (see *Radar, terrain and VD after the A380 and A320 manuals*).

The TERR box with the highest and lowest elevations of the range needs real elevations, which a gauge cannot read from MSFS: its figures come from **SimBridge** when it runs. Without SimBridge the box stays empty and the terrain is drawn as usual.

| Limitation                                    | Why                                                                           | What to do     |
|-----------------------------------------------|-------------------------------------------------------------------------------|----------------|
| At most 8 map views per module.               | MSFS crashes a 9th; the A380X switches its views between weather and terrain. | -              |
| Peaks box only with SimBridge.                | No elevation readback from MSFS.                                              | Run SimBridge. |
| Terrain far above the range top is shown red. | MSFS does not clamp to the first colour entry.                                | -              |

Peaks mode (with SimBridge)

When the SimBridge figures say that the highest terrain of the range is more than 2000 ft below the aircraft, the terrain is drawn in green by its elevation within the range: solid for the top 5 %, dense dots down to 65 %, light dots down to 35 %, nothing lower. Without SimBridge the standard colours above apply.

Other details

- When descending faster than 1000 ft/min, the colours use the altitude expected in 30 s (A320 FCOM DSC-31-45).
- The old `terrond` gauge (SimBridge's own terrain picture) is no longer loaded: SimBridge is only used for the peaks box figures. The A32NX systems host now posts the aircraft status to SimBridge itself.

How to use

1. A32NX: press the **TERR ON ND** pushbutton of the side wanted (ND in ARC or ROSE).
2. A380X: select the **TERR** overlay on the EFIS control panel; keep the TERR SYS of the SURV page not OFF for the VD profile.
3. Optional: run SimBridge for the peaks box figures and the peaks mode.

How to test

| # | Do this                                                                                                                             | Expected result                                                                                                                |
|---|-------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX or A380X on the ground at a mountain airport (for example KASE, Aspen). ND ARC 10 NM. Press TERR ON ND (A380X: TERR overlay). | Terrain far above the aircraft in red, close above in yellow, below in green; lakes as cyan-blue dots; the radar message goes. |
| 2 | Range 160 NM.                                                                                                                       | The same colour logic over the wider area; the map turns with the heading.                                                     |
| 3 | ND mode <b>PLAN</b> .                                                                                                               | No terrain.                                                                                                                    |
| 4 | A380X: look at the VD.                                                                                                              | Brown terrain profile along the flight plan or the track, water in teal.                                                       |
| 5 | A380X: set the TERR SYS button of the SURV page to OFF.                                                                             | VD: NO TERR DATA AVAILABLE.                                                                                                    |
| 6 | Start SimBridge and wait a few seconds.                                                                                             | The TERR box shows the highest and lowest elevations of the range.                                                             |
| 7 | Without SimBridge.                                                                                                                  | The TERR box stays empty; the terrain is drawn as before.                                                                      |

5. Radar, terrain and VD after the A380 and A320 manuals

**Aircraft:** A380X (VD) and both aircraft (weather picture) | **Where:** A380X VD; both NDs with the radar | **Status:** Tested in the sim (September 2026).

The vertical cut (A380X VD)

- In the managed lateral modes the VD shows the terrain and weather **along the flight plan** (a 200 NM window from just behind the aircraft, with the turns); in the selected modes **along the track** (FCOM: VIEW ALONG ACFT TRK). More than 5 NM off the plan: the track.
- The terrain is the highest across a width of 2 × RNP (1 NM terminal, 2 NM en route above 18 000 ft).
- The grey area starts at the next track change of more than 3° (the VD no longer matches the ND beyond it).

## The VD scale and the terrain height

- With a trajectory, the highest of the aircraft and the path sits at three quarters of the window: **in cruise the ground stays on the plot**, as on the real aircraft at FL400.
- The gap under the aircraft symbol is the true height, whatever the altimeter setting (FCOM / FCTM).
- Water in the ND teal; no magenta on the VD; no VD weather when TERR is not available.




**Figure 11.** A380X VD with the terrain profile and water (in-sim).

*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*


## The weather picture (both aircraft)

- The radar scans and draws on the ground too (A320 FCOM DSC-34-SURV-30-30: "on the ground, the radar is scanning when the flight crew sets one radar to ON and selects a display mode").
- MAP mode is a ground map from the terrain.
- The picture **builds up over 30 s** after the radar starts, sweeping left to right (A380 FCOM).
- The ARC picture keeps the ND bottom corners free and stops just above the TCAS / WXR message box, as on the real display.



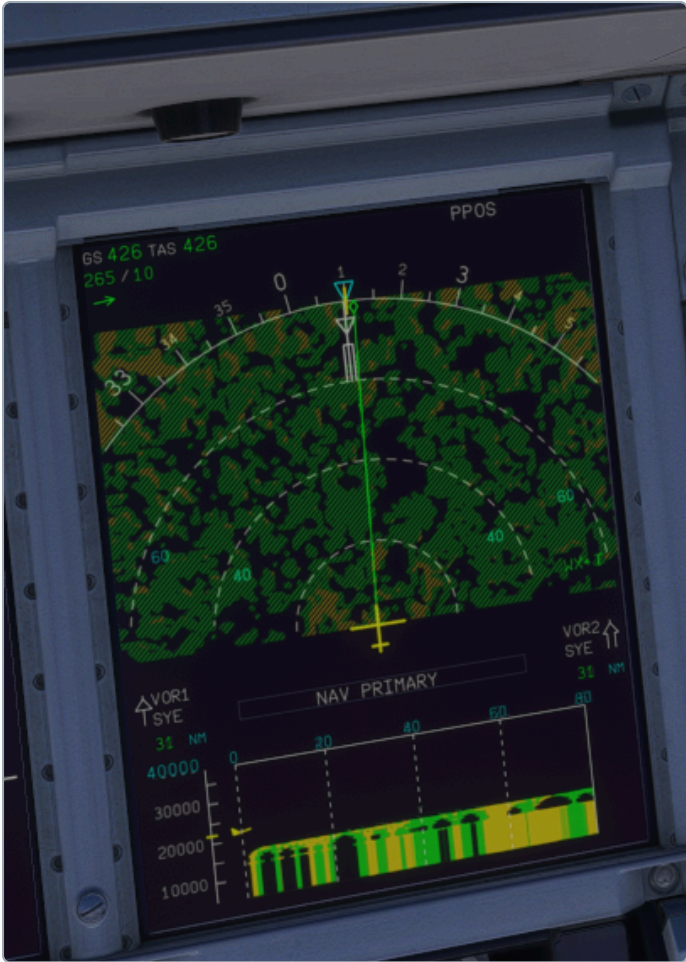

**Figure 12.** Just after WX is selected: the picture is building up.  
*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

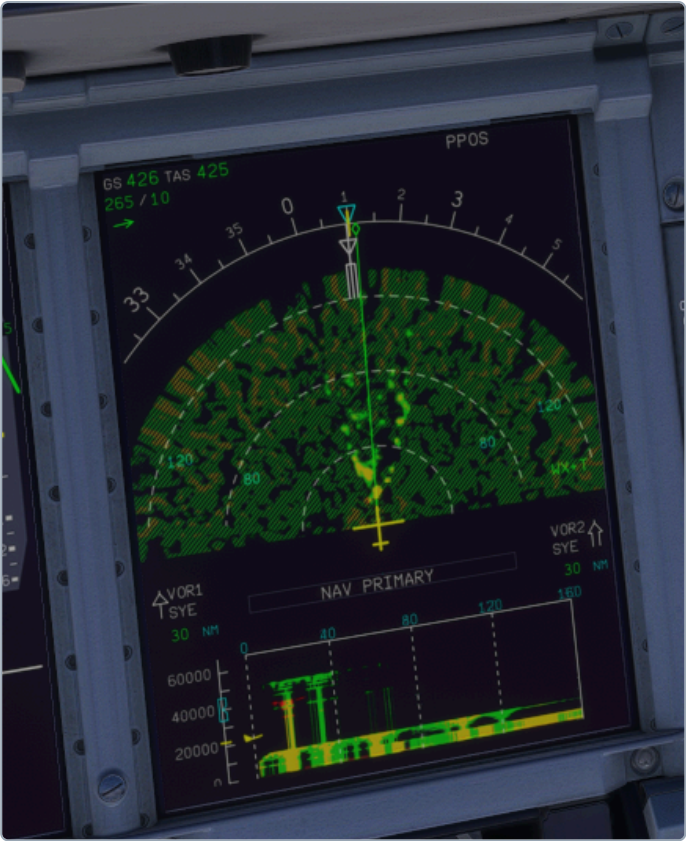

**Figure 13.** A few seconds later.  
*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

### Limitations and why

| Limitation                     | Why                                                                                                      | What to do |
|--------------------------------|----------------------------------------------------------------------------------------------------------|------------|
| No A380 AUTO off-path display. | MSFS runs one radar per aircraft; a third view changed what the beam views delivered, so it was removed. | -          |

### How to use

1. Nothing to set: the VD cut follows the lateral mode (managed: the flight plan; selected: the track).
2. After switching the radar on, allow 30 s for the picture to build up.

### How to test

| # | Do this                                                                                 | Expected result                                                                                                          |
|---|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight in NAV mode with a flight plan that turns ahead, WX and terrain around. | The VD terrain and weather follow the flight plan; the grey area starts at the next track change of more than 3 degrees. |
| 2 | Select a heading (HDG mode).                                                            | The VD follows the track.                                                                                                |
| 3 | Cruise at a high level (for example FL380) over land.                                   | The ground stays on the VD plot (not cut off at the bottom).                                                             |

|   |                                                                                  |                                                                                          |
|---|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| 4 | Either aircraft: switch the radar off, then on (A32NX WX SYS; A380X WX overlay). | The picture builds up over about 30 s, sweeping left to right.                           |
| 5 | ND ARC with weather or terrain.                                                  | The picture stops just above the TCAS / WXR message box; both bottom corners stay clear. |

## 6. Fewer stutters: idle map views paused, 20 Hz / 10 Hz redraw

**Aircraft:** A32NX and A380X | **Where:** NDs and A380X VDs (no control) | **Status:** Tested in the sim by the user (2026-10-02): same picture on the NDs and the VD; measured with PresentMon.

### What it is for

The radar and terrain gauge uses up to eight MSFS map views per aircraft, and the sim renders every visible view each frame, drawn or not. On the A380X this cost frame rate and caused stutters.

- A view nothing has shown for 120 frames is now paused (made invisible). It is woken up with a 60-frame warm-up before it is drawn again. With WX and TERR off, in PLAN or with the ND unpowered, no view renders at all.
- The ND picture is redrawn at 20 Hz and the VD terrain at 10 Hz instead of every frame, and at once when what the display shows changes (page, range, WX / TERR selection). The first radar sweep is still drawn every frame. At 20 Hz a 3 degree/s turn moves the picture by less than one pixel per step.

### What you should see

| A380X in cruise, WX on, ARC 40 NM (PresentMon, 2 x 120 s) | Before | Views paused | + 20/10 Hz |
|-----------------------------------------------------------|--------|--------------|------------|
| Average FPS                                               | 86-90  | 93-94        | 95-101     |
| 1 % low FPS                                               | 18-22  | 28-30        | 28-32      |
| Stutters over 50 ms per 120 s                             | 20-30  | 2-5          | -          |

The A32NX never had the problem (its result is neutral). The picture itself is the same.

### Limitations and why

| Limitation                                  | Why                                                                                          | What to do                                                            |
|---------------------------------------------|----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| A paused view needs about 1 s to come back. | The 60-frame warm-up lets the sim render the view again before it is drawn (no white flash). | Normal: switching WX / TERR already took about a second on the A380X. |

### How to use

1. Nothing to set.

### How to test

| # | Do this                                                                       | Expected result                                                               |
|---|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1 | A380X in cruise, WX overlay on, ND ARC 40 NM with weather around. Fly a turn. | The weather picture turns smoothly with the ND, no stepping.                  |
| 2 | Change the range and the ND mode a few times.                                 | The picture redraws at once at each change.                                   |
| 3 | Switch from WX to TERR and back after a few seconds.                          | The picture comes back after about a second, without a white square or flash. |
| 4 | Watch the VD.                                                                 | Terrain and weather follow as before.                                         |



- 5 Optional: compare the frame rate with an earlier build (WX on, ARC 40 NM). Fewer stutters and a higher 1 % low frame rate.

## 7. Terrain and radar views get their settings again after a pause

**Aircraft:** A380X (seen there) and A32NX (same gauge) | **Where:** NDs and A380X VDs (no control) | **Status:** Tested in the sim by the user on develop: OK (2026-10-07): both VDs identical with the same ND mode and range. Native test view\_park\_test (ndwxr).

### What it is for

On 2026-10-07 the A380X F/O VD showed a terrain profile (flat blocks) that the CPT VD did not, with the same inputs. The gauge pauses the map views nothing shows (previous feature) and wakes them up when needed. It is not known whether the sim keeps a view's settings while it is paused, and a setting the sim ignored was never sent again, since the gauge only sent changes. As a safeguard:

- A view that wakes up gets its whole setup again (terrain, radar, VD view, each by its role).
- The view radius (the range) is sent on a change, after a wake-up, when the sim time goes back, and again every second while the view is in use, not only on a change.

### What you should see

| Situation                                                                 | What you should see                                       |
|---------------------------------------------------------------------------|-----------------------------------------------------------|
| CPT and F/O ND with the same mode and range, terrain shown                | The two VD terrain profiles are identical.                |
| A view woken up after a pause (WX / TERR switched, page or range changed) | The right terrain zoom and picture, as on the other side. |

### Limitations and why

| Limitation                                   | Why                                                                                                                                                 | What to do |
|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| The cause is a likely one, not a proven one. | The F/O stale terrain view zoom was cured by the resend (user test 2026-10-07); whether the sim drops settings of a paused view is still not known. | -          |

### How to use

1. Nothing to set.

### How to test

| # | Do this                                                                                                                  | Expected result                                                                      |
|---|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| 1 | A380X powered, CPT and F/O EFIS: TERR overlay, the same ND mode (e.g. ARC) and range on both sides. Compare the two VDs. | Identical terrain profiles; no flat blocks on one side only.                         |
| 2 | On the F/O side switch TERR off and on again, change the range and come back.                                            | The F/O VD and ND come back with the same terrain as the CPT side at the same range. |
| 3 | Reload the flight (the sim time goes back) and compare again.                                                            | Both sides identical.                                                                |

## 8. A380X: the OANS map takes the mouse through the radar gauges

**Aircraft:** A380X | **Where:** ND, OANS airport map (ZOOM range) | **Status:** Tested in the sim by the user: OK (2026-09-27): OANS drag and BTV runway / exit clicks.

### What it is for

The radar and terrain gauges sit over the ND and caught every mouse event on the map area: the OANS airport map could not be dragged and its runway and exit labels could not be clicked (BTV selection). The gauges only draw, so they no longer take the mouse.

### How to use

1. Select the ND ZOOM range to show the OANS airport map (stock FBW OANS, needs its airport data).
2. Drag the map with the mouse or the KCCU cursor, click runway and exit labels as usual.

### How to test

| # | Do this                                                                        | Expected result                              |
|---|--------------------------------------------------------------------------------|----------------------------------------------|
| 1 | A380X on the ground at an airport with OANS data, ND ZOOM range. Drag the map. | The map moves.                               |
| 2 | Click a runway label, then an exit label (BTV).                                | The runway and the exit are selected.        |
| 3 | With the WX or TERR overlay on.                                                | The same: the gauges do not block the mouse. |

# Surveillance: SURV controls, ECAM SURV lines and TCAS

The A380X SURV pages and pedestal SURV panel work and stay in step, the ECAM procedures sense the SURV system selection, and the TCAS of both aircraft shows TAs while RAs are inhibited, with the real low-altitude hysteresis

|                  |                                                                                                                                                                                                                                                                                                                                                                           |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X (SURV panel, VD messages, ECAM lines) and A32NX + A380X (TCAS)                                                                                                                                                                                                                                                                                                      |
| Where to find it | A380X MFD <b>SURV</b> pages and pedestal SURV panel; A380X VD and E/WD; ND traffic display and TCAS controls of both aircraft                                                                                                                                                                                                                                             |
| Branch           | core/surveillance , based on master (FlyByWire master 255546cb0 merged in); independent. core/a380x-mfd-fms is stacked on it (it adds the FCOM layout of the SURV pages and the SURV memos).                                                                                                                                                                              |
| Status           | SURV panel and MFD SURV wiring tested in the sim by the user (2026-09-19); VD messages and ECAM SURV lines tested in the sim (September 2026); the three TCAS changes tested in the sim by the user: OK (2026-09-29).                                                                                                                                                     |
| Pictures         | Captain MFD, ND, VD and E/WD in the local browser harness, running the full development build installed in the sim (it also has the FCOM layout of the SURV pages from core/a380x-mfd-fms , so the SURV page frames on this branch alone look slightly different); the SURV CONTROLS in-sim screenshot; the TCAS symbol legend is a drawing (the harness has no traffic). |

1. A380X SURV controls, STATUS & SWITCHING and the pedestal SURV panel

2. A380X VD: separate NO TERR / NO WX DATA messages

3. A380X ECAM procedures: WXR & TAWS and XPDR & TCAS lines sensed

4. A380X ECAM LINE-UP checklist: CABIN CREW line
5. TCAS: intruders shown and announced as TAs while RAs are inhibited

6. TCAS: low-altitude RA and TA aural inhibitions with the real hysteresis

7. A32NX: TCAS message at the left of the bottom line of the ND

## 1. A380X SURV controls, STATUS & SWITCHING and the pedestal SURV panel

|                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> MFD SURV pages; pedestal SURV panel   <b>Status:</b> Tested in the sim by the user: OK (2026-09-19: pedestal buttons and MFD pages switch in step; WXR buttons drive the radar). |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The weather radar block of the MFD SURV CONTROLS page, the STATUS & SWITCHING system selection and the pedestal SURV panel buttons were stubs. They now work and drive the same systems.

### What it is for

The A380 has no separate radar, TCAS or TAWS control panels: they are on the MFD SURV pages and the pedestal SURV panel (FCOM DSC-34-20-60-50). In FBW the weather radar block of the page was a stub (every button greyed), STATUS & SWITCHING did not reflect failures, and no button of the pedestal panel worked. Now they do, and the page and the panel stay in step.

SURV CONTROLS




**Figure 1.** SURV CONTROLS: XPDR (code, IDENT, AUTO / ON / STBY, ALT RPTG), TCAS (TA/RA, TA ONLY, STBY; NORM, ABV, BLW), WXR, TAWS, and DEFAULT SETTINGS.

| WXR button          | Effect                                                                                                   |
|---------------------|----------------------------------------------------------------------------------------------------------|
| WXR AUTO / OFF      | Weather radar on or off (the ND radar picture of <code>core/nd-weather-terrain</code> ).                 |
| PRED W/S AUTO / OFF | Predictive windshear (written for the systems; MSFS has no predictive windshear).                        |
| TURB AUTO / OFF     | Turbulence detection (magenta on the ND with the native radar of <code>core/nd-weather-terrain</code> ). |
| GAIN AUTO / MAN     | Radar gain (written; MSFS has no gain).                                                                  |
| MODE WX / MAP       | Weather or ground mapping.                                                                               |
| WX ON VD AUTO / OFF | Weather on the vertical display.                                                                         |
| ELEVN / TILT        | AUTO, or a manual elevation or tilt.                                                                     |

The WXR buttons are inhibited only when the selected WXR system has really failed.

## STATUS & SWITCHING

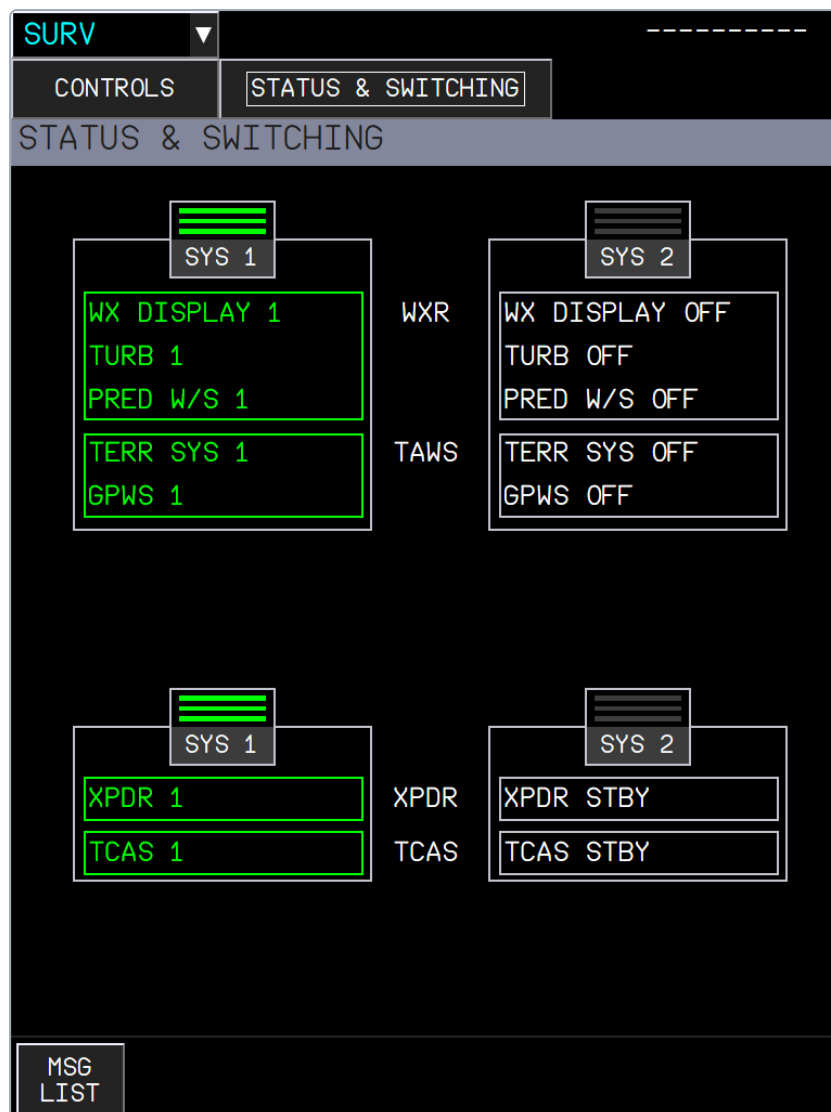

**Figure 2.** STATUS & SWITCHING: SYS 1 / SYS 2 of the WXR and TAWS (top) and of the XPDR and TCAS (bottom); the selected system is lit, each item shows its real state.

- WXR DISPLAY, TURB, PRED W/S, TERR SYS, GPWS items show the real failure of each system.
- XPDR / TCAS SYS 1 / SYS 2 select the transponder system (the one the TCAS uses) and light from it.





**Figure 3.** The SURV CONTROLS page in the sim (in-sim screenshot).

*In-sim screenshot taken during development: not representative of the final in-game UI, reference for the explanation only.*

## The pedestal SURV panel

The panel buttons never worked: their light template runs the button code only when the panel is powered, and the pedestal never told it so. They are powered from DC 1 now and linked to the MFD pages:

| Panel button             | Does                                  | Same as                    |
|--------------------------|---------------------------------------|----------------------------|
| WXR TAWS SYS 1 / SYS 2   | Selects the WXR / TAWS system         | STATUS & SWITCHING, top    |
| XPDR TCAS SYS 1 / SYS 2  | Selects the transponder system        | STATUS & SWITCHING, bottom |
| G/S MODE                 | Glide slope mode of the GPWS on / off | SURV CONTROLS, TAWS        |
| TCAS ABV / BLW / TA ONLY | TCAS display and mode                 | SURV CONTROLS, TCAS        |

Each button lights from the same value the page uses, so pressing one on the pedestal changes the page, and the reverse.

## Limitations and why

| Limitation                                | Why                                                                                               | What to do |
|-------------------------------------------|---------------------------------------------------------------------------------------------------|------------|
| PRED W/S and GAIN MAN do nothing visible. | The MSFS radar has no predictive windshear and no gain; the values are written for when it does.  | -          |
| One MSFS radar for both systems.          | SYS 1 / SYS 2 select the failure state and the lights; the picture comes from the same sim radar. | -          |

#### NOTE

Code clean-up on this branch with no visible effect: the ECAM procedure tables read the selected XPDR & TCAS system through one helper.

### How to use

1. Open the SURV pages: MFD system menu **SURV** (or the KCCU SURV key), then **CONTROLS** or **STATUS & SWITCHING**.
2. On CONTROLS set the WXR (WXR, PRED W/S, TURB, GAIN, MODE, WX ON VD, ELEVN/TILT), the TCAS (TA/RA, TA ONLY, STBY; NORM, ABV, BLW) and the TAWS options.
3. On STATUS & SWITCHING, or with the pedestal buttons, select WXR / TAWS SYS 1 or SYS 2 and XPDR / TCAS SYS 1 or SYS 2.
4. Use the pedestal TCAS ABV / BLW / TA ONLY and G/S MODE buttons as shortcuts: the MFD page follows.

### How to test

| # | Do this                                                                                                                              | Expected result                                                                                                       |
|---|--------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, aircraft powered (DC 1 bus powered).<br>MFD > SURV > <b>STATUS &amp; SWITCHING</b> .                            | The selected WXR / TAWS and XPDR / TCAS systems are lit; each item shows the real state of its system.                |
| 2 | Press <b>XPDR TCAS SYS 2</b> on the pedestal SURV panel.                                                                             | The pedestal button lights; on the MFD page XPDR / TCAS SYS 2 is now the selected one.                                |
| 3 | Select XPDR / TCAS <b>SYS 1</b> on the MFD page.                                                                                     | The pedestal SYS 1 button lights, SYS 2 goes off.                                                                     |
| 4 | Press <b>WXR TAWS SYS 2</b> on the pedestal, then SYS 1.                                                                             | The WXR / TAWS selection on the MFD page follows each press.                                                          |
| 5 | MFD > SURV > <b>CONTROLS</b> . Press the pedestal <b>TA ONLY</b> button.                                                             | The SURV CONTROLS TCAS block shows TA ONLY and the pedestal button is lit; the ND shows TA ONLY.                      |
| 6 | Press the pedestal <b>ABV</b> , then <b>BLW</b> button.                                                                              | The TCAS NORM / ABV / BLW selection on the page follows; selecting NORM on the page turns the pedestal light off.     |
| 7 | Press the pedestal <b>G/S MODE</b> button.                                                                                           | The TAWS G/S MODE on SURV CONTROLS changes with it (and back on the second press).                                    |
| 8 | On SURV CONTROLS set <b>WXR OFF</b> , then AUTO (needs the native radar of <code>core/nd-weather-terrain</code> for the ND picture). | The ND radar picture goes away and comes back; the WXR buttons are greyed only if the selected WXR system has failed. |
| 9 | Cut the DC 1 bus (or start cold and dark) and press a pedestal SURV button.                                                          | Nothing happens and the buttons stay dark.                                                                            |

## 2. A380X VD: separate NO TERR / NO WX DATA messages

**Aircraft:** A380X | **Where:** Vertical display (VD) under the ND | **Status:** Tested in the sim (September 2026).

### What it is for

TERR SYS OFF removed both the terrain and the weather from the VD message logic, so the VD always said "NO TERR AND WX DATA AVAILABLE". Each source now has its own message.

### Messages on the vertical display

The VD message was always "NO TERR AND WX DATA AVAILABLE" when TERR SYS was off. Now:

| Situation                          | VD message                    |
|------------------------------------|-------------------------------|
| TERR SYS OFF only                  | NO TERR DATA AVAILABLE        |
| WXR failed or OFF, or WX ON VD OFF | NO WX DATA AVAILABLE          |
| Both                               | NO TERR AND WX DATA AVAILABLE |

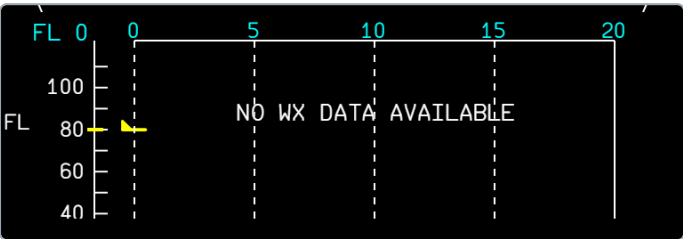


Figure 4. WXR off: NO WX DATA AVAILABLE.

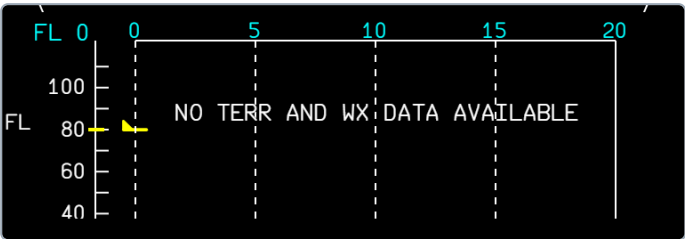


Figure 5. TERR SYS off and WXR off: NO TERR AND WX DATA AVAILABLE.

How to use

1. Nothing to set: the VD message follows the TERR SYS, WXR and WX ON VD buttons of MFD > SURV > CONTROLS.

How to test

| # | Do this                                                                                                      | Expected result                           |
|---|--------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| 1 | A380X, ND in ARC or ROSE NAV so that the VD shows. MFD > SURV > CONTROLS: TERR SYS, WXR and WX ON VD all on. | No "NO ... DATA" message on the VD.       |
| 2 | Set <b>TERR SYS</b> OFF only.                                                                                | VD: <b>NO TERR DATA AVAILABLE.</b>        |
| 3 | TERR SYS back ON, set <b>WX ON VD</b> OFF.                                                                   | VD: <b>NO WX DATA AVAILABLE.</b>          |
| 4 | WX ON VD back ON, set <b>WXR</b> OFF.                                                                        | VD: <b>NO WX DATA AVAILABLE.</b>          |
| 5 | With WXR OFF, also set TERR SYS OFF.                                                                         | VD: <b>NO TERR AND WX DATA AVAILABLE.</b> |

3. A380X ECAM procedures: WXR & TAWS and XPDR & TCAS lines sensed

Aircraft: A380X | Where: E/WD procedures; MFD SURV STATUS & SWITCHING | Status: Tested in the sim (September 2026).

What it is for

The dual ADR and IR fault procedures ask the crew to move the WXR & TAWS and the XPDR & TCAS to the system that still has valid data. Those lines were hard-coded as done, so the ECAM ticked them even when the wrong system stayed selected. They now follow the selection made on the MFD SURV STATUS & SWITCHING page, and the TCAS 1 / 2 FAULT procedures show their XPDR & TCAS line, which was hidden.

Where the systems are selected

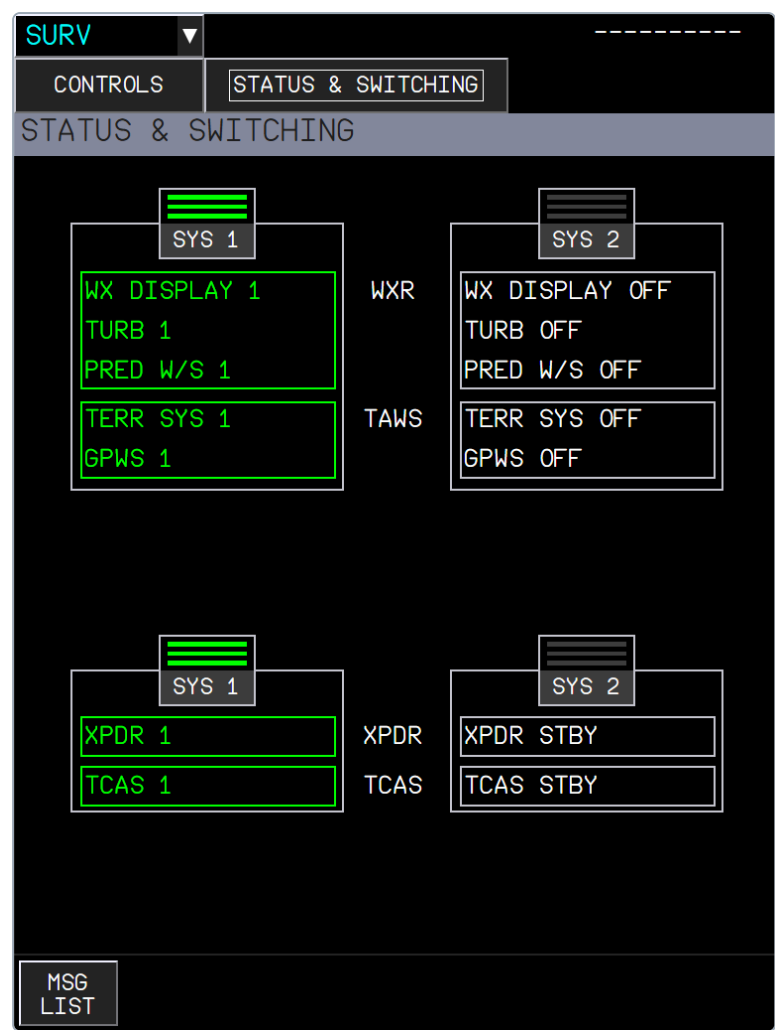


Figure 6. MFD SURV STATUS & SWITCHING: the SYS 1 / SYS 2 buttons of WXR & TAWS (top) and XPDR & TCAS (bottom).

What you see

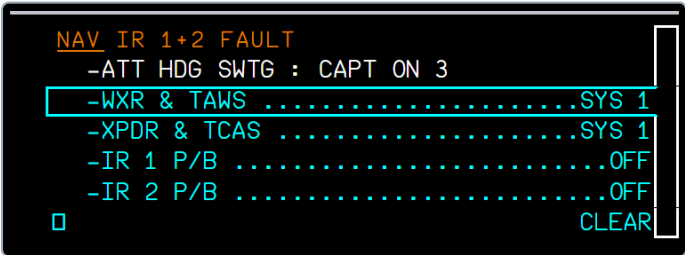


Figure 7. IR 1+2 FAULT with both systems on SYS 2: the two lines wait, in cyan.


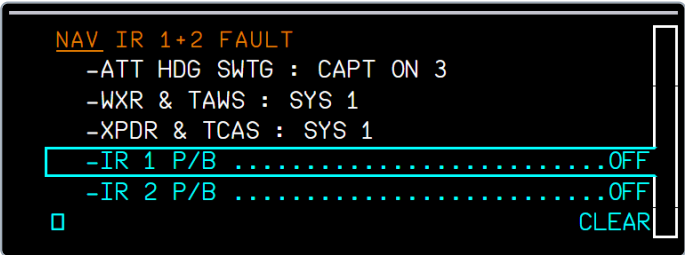


Figure 8. After selecting SYS 1 on the SURV page: the lines are done (white) and the cursor moves on.

| Procedure                                                | WXR & TAWS | XPDR & TCAS |
|----------------------------------------------------------|------------|-------------|
| ADR 1+2 FAULT, ADR 2+3 FAULT, IR 1+2 FAULT, IR 2+3 FAULT | SYS 1      | SYS 1       |
| ADR 1+3 FAULT, IR 1+3 FAULT                              | SYS 2      | SYS 2       |
| TCAS 1 FAULT                                             | -          | SYS 2       |
| TCAS 2 FAULT                                             | -          | SYS 1       |

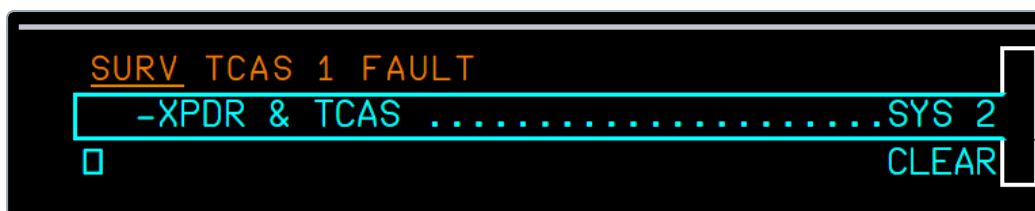

**Figure 9.** TCAS 1 FAULT: the XPDR & TCAS line is now shown.

| Situation                                                   | What you should see                                                |
|-------------------------------------------------------------|--------------------------------------------------------------------|
| The right system is already selected when the fault appears | The line is shown already done.                                    |
| The crew selects the other system                           | The line ticks within a second; the cursor moves to the next line. |
| The crew goes back to the failed side                       | The line becomes due again (it follows the live selection).        |

## Limitations and why

| Limitation                                   | Why                                                                                            | What to do                                           |
|----------------------------------------------|------------------------------------------------------------------------------------------------|------------------------------------------------------|
| TCAS 1 FAULT and TCAS 2 FAULT come together. | FBW has one TCAS computer: both procedures read the same TCAS fault (an FBW note in the code). | Select the system the procedure you follow asks for. |

## How to use

- When an ADR / IR dual fault or a TCAS fault procedure asks for **WXR & TAWS ... SYS n** or **XPDR & TCAS ... SYS n**, select that system on MFD > SURV > STATUS & SWITCHING (or with the pedestal SYS buttons).
- The line ticks by itself; the E/WD cursor moves to the next line.

## How to test

| # | Do this                                                                                                                                                                                           | Expected result                                                                                                                |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, one engine running (the ADR faults are not raised in flight phases 1 and 12). MFD > SURV > STATUS & SWITCHING: select WXR / TAWS <b>SYS 2</b> and XPDR / TCAS <b>SYS 2</b> . | Both SYS 2 selected.                                                                                                           |
| 2 | Overhead ADIRS panel: set the <b>ADR 1</b> and <b>ADR 2</b> pushbuttons OFF.                                                                                                                      | E/WD: <b>ADR 1+2 FAULT</b> . Its WXR & TAWS ... SYS 1 and XPDR & TCAS ... SYS 1 lines are cyan (to do).                        |
| 3 | Select WXR / TAWS <b>SYS 1</b> on the SURV page.                                                                                                                                                  | Within a second the WXR & TAWS line turns white (done).                                                                        |
| 4 | Select XPDR / TCAS <b>SYS 1</b> (page or pedestal).                                                                                                                                               | The XPDR & TCAS line is done; the cursor moves on.                                                                             |
| 5 | Select XPDR / TCAS SYS 2 again.                                                                                                                                                                   | The XPDR & TCAS line is due again (it follows the live selection). Set the ADR pushbuttons back ON afterwards.                 |
| 6 | Raise a TCAS fault: flyPad > Failures > ATA 34 <b>RA SYS A</b> and <b>RA SYS B</b> (the TCAS uses radio altimeter 1, else 2), on the ground.                                                      | E/WD: TCAS 1 FAULT and TCAS 2 FAULT, each now with its XPDR & TCAS line (before: hidden). The radio altimeter alerts show too. |
| 7 | Select XPDR / TCAS SYS 2, then SYS 1.                                                                                                                                                             | With SYS 2 the TCAS 1 FAULT line is done, with SYS 1 the TCAS 2 FAULT line. Clear the failures afterwards.                     |




## 4. A380X ECAM LINE-UP checklist: CABIN CREW line

**Aircraft:** A380X | **Where:** E/WD normal checklist LINE-UP | **Status:** Tested in the sim (September 2026).

### What it is for

The A380 FCOM BEFORE TAKEOFF checklist has a CABIN CREW item; the ECAM LINE-UP checklist did not.

### LINE-UP checklist

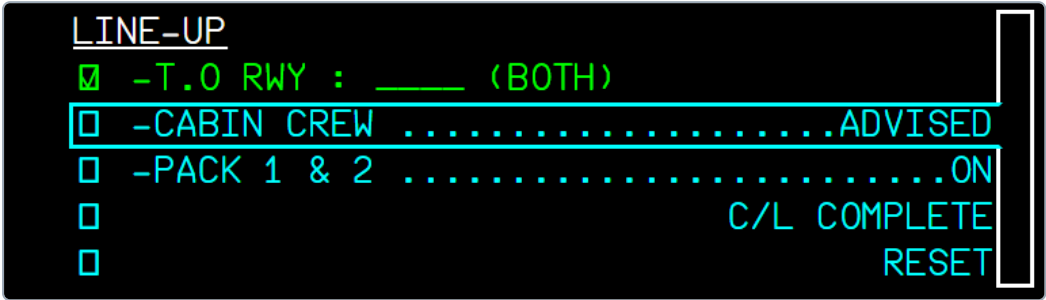

**Figure 10.** ECAM LINE-UP: the CABIN CREW ... ADVISED line (crew check).

The ECAM LINE-UP checklist gets the CABIN CREW line that the flyPad checklist already had (A380 FCOM BEFORE TAKEOFF checklist: CABIN CREW ... ADVISE). It is ticked by the crew.

### Limitations and why

| Limitation                              | Why                                                                                                                                                                   | What to do |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| No SURV lines in the normal checklists. | The A380 FCOM normal checklists (PRO-NOR-C-L) have none (SURV, WX & TERR and TCAS are SOP flow items); an earlier version of this change added some and was reverted. | -          |

### How to use

1. At line-up, call the ECAM LINE-UP checklist (C/L key on the ECAM control panel).
2. Advise the cabin crew, then tick the **CABIN CREW ... ADVISED** line.

### How to test

| # | Do this                                                                                                     | Expected result                                                            |
|---|-------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| 1 | A380X ready for takeoff. Press <b>C/L</b> on the ECAM control panel and go to the <b>LINE-UP</b> checklist. | The checklist shows a <b>CABIN CREW ... ADVISED</b> line, in cyan (to do). |
| 2 | Tick the line (ECAM control panel or KCCU).                                                                 | The line turns white (done); it is not ticked by itself.                   |

## 5. TCAS: intruders shown and announced as TAs while RAs are inhibited

**Aircraft:** A32NX and A380X | **Where:** ND traffic display; TCAS mode | **Status:** Tested in the sim by the user: OK (2026-09-29).

### What it is for


With every RA inhibited (TA ONLY selected, or low: below 900 ft radio altitude in descent, until 1100 ft in climb, see the next feature), the TCAS kept classifying an intruder that met the RA criteria as an RA. The ND drew it as a red RA square, and since it was not a TA, there was no "TRAFFIC, TRAFFIC" and no TA state. A real TCAS in TA ONLY shows it as an amber TA with the TA aural. The classification is now capped at TA while all RAs are inhibited.




**Figure 11.** The ND traffic symbols: other, proximate, TA, RA, with the relative altitude in hundreds of feet and the vertical trend arrow.

*Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.*

## What you see

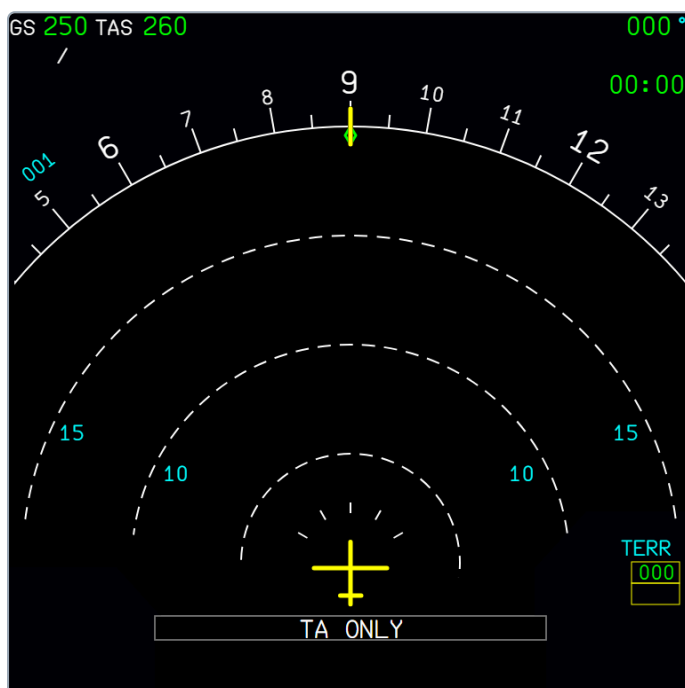

**Figure 12.** A32NX: TA ONLY, centred at the bottom of the ND (A320 FCOM DSC-34-SURV-60-20 figure).

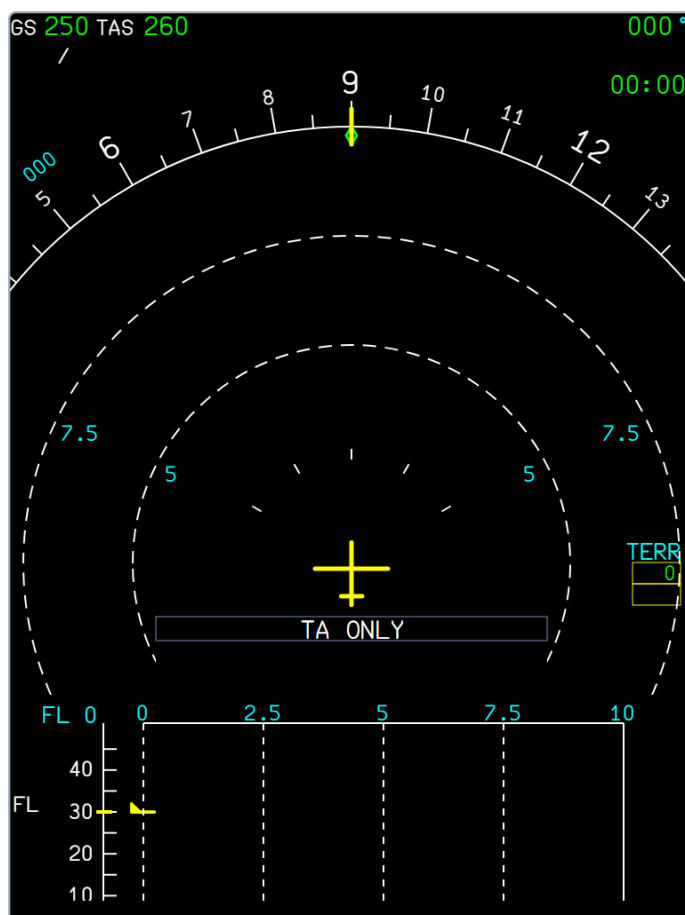

**Figure 13.** A380X: TA ONLY in the message box.

| Situation                                                                          | What you should see                                                       |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| TA ONLY selected, intruder meeting the RA criteria                                 | Amber TA circle and "TRAFFIC, TRAFFIC" (before: red RA square, no aural). |
| Below 900 ft radio altitude in descent, until 1100 ft in climb (all RAs inhibited) | Same: TAs only, TA ONLY on the ND.                                        |
| Partial inhibits (no CLIMB / DESCEND / INCREASE DESCENT RA)                        | Unchanged: RAs are still issued.                                          |
| An RA already running when the inhibit starts                                      | It runs to its own end.                                                   |

## Limitations and why

| Limitation | Why | What to do |
|------------|-----|------------|
|------------|-----|------------|

|                               |                                                                                        |   |
|-------------------------------|----------------------------------------------------------------------------------------|---|
| Same change on both aircraft. | The A32NX TcasComputer and the A380X LegacyTcasComputer share the classification code. | - |
|-------------------------------|----------------------------------------------------------------------------------------|---|

### How to use

1. Select TA ONLY: A32NX ATC/TCAS panel TCAS mode selector to **TA**; A380X MFD > SURV > CONTROLS TCAS **TA ONLY** (or the pedestal TA ONLY button).
2. Traffic that would give an RA is shown as an amber TA with the "TRAFFIC, TRAFFIC" aural.

### How to test

| # | Do this                                                                                                   | Expected result                                                                                                                |
|---|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 1 | In flight above 1100 ft radio altitude with traffic (AI or multiplayer) converging on you. TCAS in TA/RA. | An intruder meeting the RA criteria is a red square with an RA aural.                                                          |
| 2 | Select TA ONLY (A32NX: TCAS mode selector TA; A380X: SURV CONTROLS TA ONLY).                              | TA ONLY on the ND. The same intruder is now an amber TA circle with "TRAFFIC, TRAFFIC" (before: a red RA square and no aural). |
| 3 | Back to TA/RA during an RA already running, then TA ONLY again.                                           | An RA already running when the inhibition starts runs to its own end.                                                          |

## 6. TCAS: low-altitude RA and TA aural inhibitions with the real hysteresis

|                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> ND traffic display (TA ONLY message); TCAS aural   <b>Status:</b> Tested in the sim by the user: OK (2026-09-29, with the TA ONLY change). |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The TCAS inhibits all RAs close to the ground, and lower down the TA aural too. Both used a flat threshold (1000 ft and 500 ft radio altitude). The A380 FCTM (Supplementary Information, TCAS) gives a hysteresis, the FCOM "below 1000 ft ±100 ft". Both TCAS computers now use it:

| Inhibition                    | Starts (descending through) | Ends (climbing through) |
|-------------------------------|-----------------------------|-------------------------|
| All RAs (TA ONLY on the ND)   | 900 ft radio altitude       | 1100 ft radio altitude  |
| TA aural ("TRAFFIC, TRAFFIC") | 400 ft radio altitude       | 600 ft radio altitude   |

- Without a valid radio altitude, neither low-altitude inhibition applies.
- The four altitudes are named constants of the TCAS code (no other effect).

### How to use

1. Nothing to set: the inhibitions follow the radio altitude.

### How to test

| # | Do this                                                                                             | Expected result                                                     |
|---|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| 1 | A32NX or A380X on approach, TCAS in TA/RA, descending through 1000 ft radio altitude. Watch the ND. | No TA ONLY message yet at 1000 ft.                                  |
| 2 | Continue below 900 ft radio altitude.                                                               | <b>TA ONLY</b> appears on the ND (all RAs inhibited).               |
| 3 | Go around and climb.                                                                                | TA ONLY stays up to 1100 ft radio altitude and disappears above it. |

|   |                                                                                                   |                                                                                                              |
|---|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 4 | With traffic close by on a low approach (AI or multiplayer), descend below 400 ft radio altitude. | The TA symbol stays, the "TRAFFIC, TRAFFIC" aural is not given; it is given again above 600 ft in the climb. |
|---|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|

## 7. A32NX: TCAS message at the left of the bottom line of the ND

**Aircraft:** A32NX | **Where:** ND, bottom line, left of centre | **Status:** Fix installed 2026-10-09, not sim-tested yet. Before it, the centred version (2026-09-23) showed TA ONLY half outside its box, next to the FM message, in the sim on 2026-10-09.

### What it is for

The TCAS message ("TA ONLY", "TCAS") sits at the left of its line at the bottom of the ND, as the A320 FCOM ND messages figure shows it (DSC-34-SURV-60-20, item 2: TA ONLY at the bottom, left of centre). The bottom centre stays free for the FM messages (GPS PRIMARY...). A first change (2026-09-23) tried to centre it with a CSS text-anchor plus a CSS transform; the sim renderer applies the text-anchor but not the transform on SVG text, so the message was centred on its left start point and stood half outside its box. That rule is removed. TCAS STBY is not shown on the A32NX ND (hidden by its stylesheet), as before.

### How to use

1. Nothing to set: the message shows wherever the TCAS sends one.

### How to test

| # | Do this                                                                                       | Expected result                                                                                                                                                          |
|---|-----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX, ND in ROSE NAV or ARC. Set the TCAS mode selector on the ATC/TCAS panel to <b>TA</b> . | <b>TA ONLY</b> in white at the bottom of the ND, left of centre, fully inside its grey box; an FM message such as GPS PRIMARY, when shown, stays readable at the centre. |
| 2 | Set the TCAS mode selector back to <b>TA/RA</b> .                                             | TA ONLY disappears.                                                                                                                                                      |

# Independent CPT and F/O MCDUs

The two A32NX MCDUs stop mirroring each other: each has its own page, scratchpad, messages and keyboard entry, on the one shared FMS

|                  |                                                                                                                                                                                                                                                      |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX                                                                                                                                                                                                                                                |
| Where to find it | The two MCDUs on the pedestal (and the SimBridge remote MCDU)                                                                                                                                                                                        |
| Branch           | core/a32nx-mcdu , based on master (FlyByWire master 255546cb0 merged in); independent of the other core branches. The close-up cockpit model needs a companion change in the aircraft-large-files repository (commit 5563e31, see the last feature). |
| Status           | Independent MCDUs tested in the sim by the user: OK (2026-09-21, pages, scratchpads, shared FMS data, messages, BRT/DIM and power per side). The keyboard entry, SimBridge remote MCDU and ATSU status follow-up is not sim-tested.                  |
| Pictures         | The MCDU gauge in the local browser harness, running the build installed in the sim; the gauge draws the CPT screen in its left half and the F/O screen in its right half, shown here side by side.                                                  |

## 1. Independent CPT and F/O MCDUs

**Aircraft:** A32NX | **Where:** The two MCDUs on the pedestal | **Status:** Tested in the sim by the user: OK (2026-09-21): all 7 test points (pages, scratchpads, shared FMS data, per-screen messages, BRT/DIM, power).

### What it is for

The two MCDUs mirrored each other: same page, same scratchpad. On the aircraft each MCDU is its own display, working on the shared FMGC data (A320 FCOM DSC-22\_10-10). Now each pilot can work on a different page.

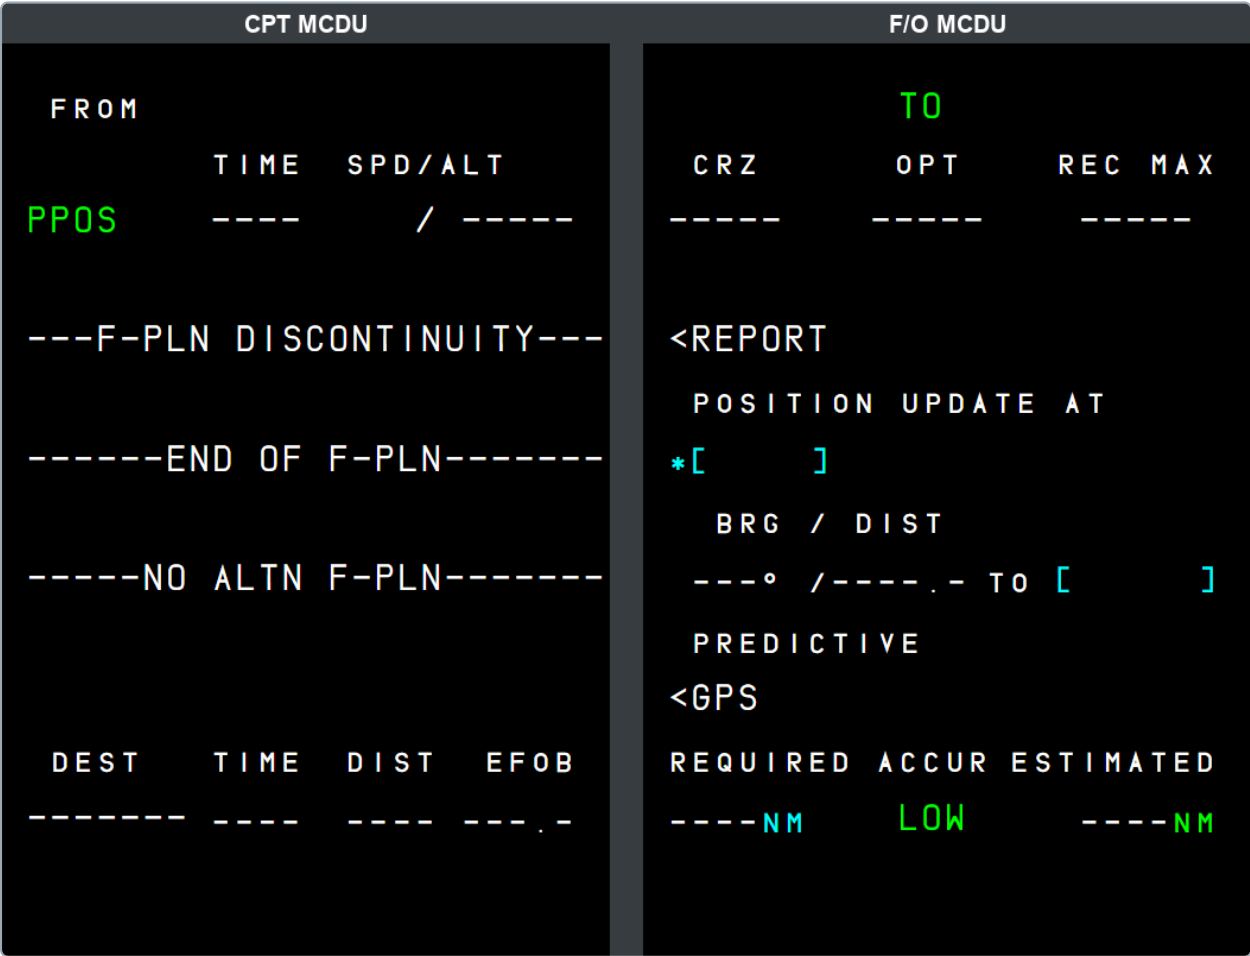


Figure 1. CPT on F-PLN, F/O on PROG at the same time.

What is per MCDU and what is shared

| Per MCDU                                                            | Shared (one FMS)                                     |
|---------------------------------------------------------------------|------------------------------------------------------|
| The page shown, the line keys                                       | The flight plans, performance, fuel, navigation data |
| The scratchpad and what is typed in it                              | The data entered from either MCDU                    |
| The scratchpad messages (FORMAT ERROR, NOT ALLOWED ...) of an entry | FMGC messages (queued on both)                       |
| The keyboard entry (the MCDU that was clicked)                      | The EFIS symbols, the guidance                       |

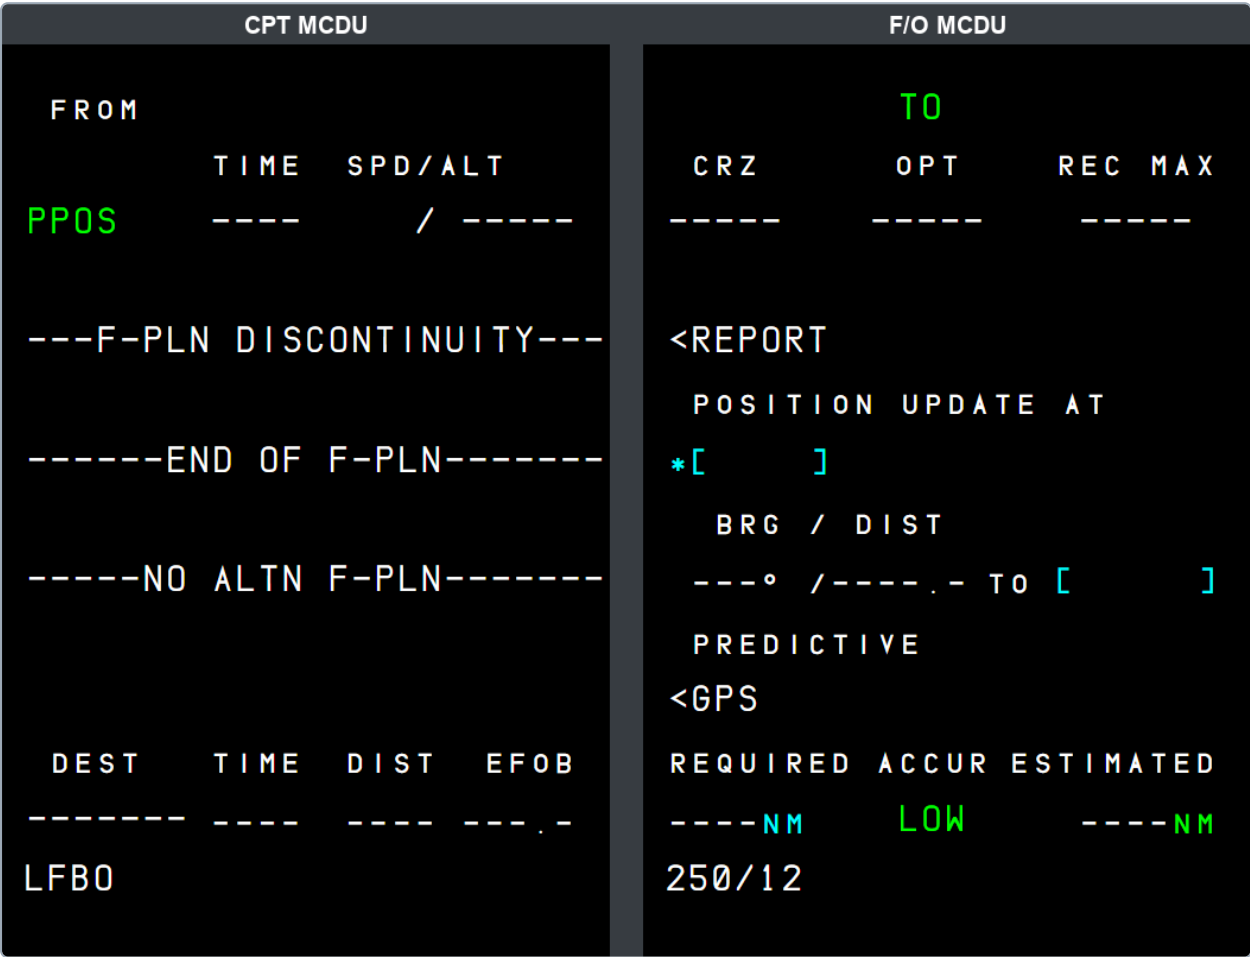


Figure 2. Each scratchpad keeps its own text: LFBO on the CPT, 250/12 on the F/O.



Messages

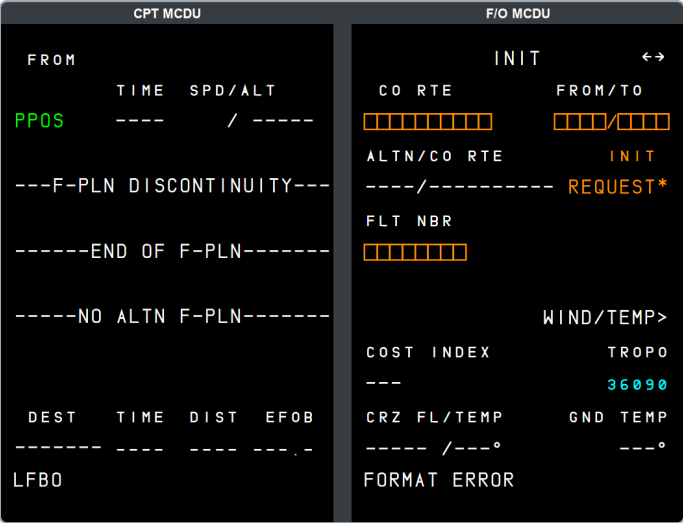


Figure 3. A wrong entry on the F/O MCDU: FORMAT ERROR there only.

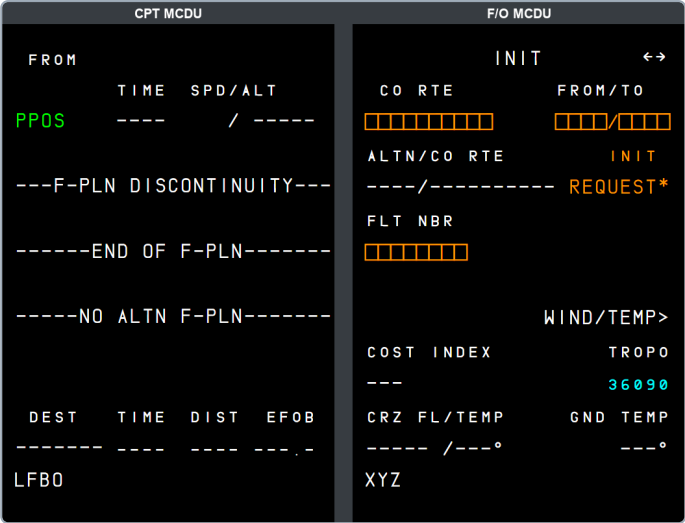


Figure 4. CLR on the F/O MCDU: its message clears and its entry comes back; the CPT scratchpad is untouched.

| Situation                                                                                                          | What you should see                                                       |
|--------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| An entry is rejected                                                                                               | The message shows on the MCDU where the entry was made.                   |
| An FMGC message (e.g. CHECK TAKE OFF DATA)                                                                         | Queued on both MCDUs; CLR on one clears it there only.                    |
| The FMS changes pages by itself (flight phase change on PROG / PERF / IDENT, engine-out page, INIT B to FUEL PRED) | Applies to both MCDUs.                                                    |
| ATSU system status (not the answer to an entry)                                                                    | On the ATSU scratchpad of both MCDUs.                                     |
| Typing with the PC keyboard (next feature)                                                                         | Goes to the MCDU that was clicked last; only that MCDU animates its keys. |
| SimBridge remote MCDU (next feature)                                                                               | CPT screen on its left side, F/O screen on its right side.                |

Power

- CPT MCDU: AC ESS SHED bus. F/O MCDU: AC 2 bus.
- An unpowered MCDU ignores its keys; the other one keeps working.

How it works

The FMS cannot be run twice: the MCDU code is the aircraft FMS (flight plan, guidance, EFIS symbols) as well as the display. So the two MCDUs are two screens on that one FMS, the way the A380X draws its two MFD screens: one 2048x1024 MCDU gauge, the CPT MCDU drawn in its left half and the F/O MCDU in its right half, and each screen of the cockpit model samples its own half. The F/O screen has its own copy of what belongs to a screen (page, line key actions, scratchpad, message queue, key handlers); everything else is the shared FMS.

Limitations and why

| Limitation                                     | Why                                      | What to do |
|------------------------------------------------|------------------------------------------|------------|
| No return to the MENU page after a power loss. | Same as the CPT MCDU before this change. | -          |

|                                                                                                   |                                                                                                                                                      |                                                                                            |
|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Close-up cockpit model: both screens show the whole texture until the companion change is merged. | The 4 UV values of the high-detail model (LOD00) live in the aircraft-large-files repository; this branch only changes LOD01 (see the last feature). | Install the aircraft-large-files change (commit 5563e31) and bump the large-files pointer. |
|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|

## How to use

1. Use each MCDU as on the aircraft: each pilot can open any page on his MCDU without changing the other one.
2. Data entered on either MCDU (flight plan, INIT, PERF, fuel) is FMS data: it shows on both MCDUs.
3. A scratchpad message (FORMAT ERROR, NOT ALLOWED...) shows on the MCDU where the entry was made; clear it there with CLR.
4. An FMGC message is queued on both MCDUs: clear it with CLR on each MCDU.

## How to test

| # | Do this                                                                                                                  | Expected result                                                                       |
|---|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 1 | A32NX cold and dark at a gate. Set external power or the batteries and the APU so that AC ESS SHED and AC 2 are powered. | Both MCDUs show the MCDU MENU page.                                                   |
| 2 | CPT MCDU: MCDU MENU > FMGC, then <b>F-PLN</b> . F/O MCDU: stay on MCDU MENU, then press <b>PROG</b> .                    | CPT MCDU on F-PLN, F/O MCDU on PROG at the same time (before: both on the same page). |
| 3 | Type <b>LFB0</b> on the CPT MCDU and <b>250/12</b> on the F/O MCDU, without pressing a line key.                         | Each scratchpad keeps its own text.                                                   |
| 4 | On the CPT MCDU, open INIT A and enter a city pair (e.g. <b>LFB0/LFPG</b> ). Open F-PLN on the F/O MCDU.                 | The F/O F-PLN shows the new flight plan: the FMS data is shared.                      |
| 5 | On the F/O MCDU, enter a wrong value on a page (e.g. <b>ABC</b> into a speed field).                                     | FORMAT ERROR on the F/O scratchpad only; the CPT scratchpad is unchanged.             |
| 6 | Press <b>CLR</b> on the F/O MCDU.                                                                                        | The F/O message clears and its entry comes back; the CPT scratchpad is untouched.     |
| 7 | Press <b>BRT / DIM</b> on one MCDU.                                                                                      | Only that MCDU screen changes brightness.                                             |
| 8 | Fail AC bus 2: flyPad > Failures > ATA 24 > <b>AC 2</b> . Press keys on both MCDUs.                                      | The F/O MCDU ignores its keys; the CPT MCDU (AC ESS SHED) keeps working.              |

## 2. Keyboard entry, SimBridge remote MCDU and ATSU status on both MCDUs

**Aircraft:** A32NX | **Where:** The MCDUs; flyPad > Settings > Realism; SimBridge remote MCDU | **Status:** Not sim-tested.

### What it is for

After the split, three things still knew only the CPT MCDU: the PC keyboard entry, the SimBridge remote MCDU and the ATSU system messages. They now work with both MCDUs.

### What you should see

| Situation                                  | What you should see                                                                                                                                          |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyboard entry on, click on an MCDU screen | That MCDU gets the keyboard (cyan band at the top of its screen, highlighted scratchpad); the other MCDU loses it. Only one MCDU has the keyboard at a time. |

|                                                                                                                                   |                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Typing on the PC keyboard                                                                                                         | The text goes into the scratchpad of the MCDU that has the keyboard; only the keys of that MCDU animate (before: both). |
| That MCDU is not powered                                                                                                          | Typing does nothing (CPT MCDU: AC ESS SHED; F/O MCDU: AC 2).                                                            |
| A click outside both screens                                                                                                      | The keyboard goes to the CPT MCDU, as before.                                                                           |
| SimBridge remote MCDU                                                                                                             | Left side = CPT MCDU, right side = F/O MCDU (before: the CPT MCDU on both sides).                                       |
| An ATSU system status that is not the answer to an entry (ATIS auto-update failure, a failed send from the mailbox, mailbox full) | Shown on the ATSU scratchpad of both MCDUs (before: CPT only).                                                          |
| An ATSU status that answers an entry made on a page                                                                               | Shown on the MCDU of that page only.                                                                                    |

## Limitations and why

| Limitation                                                    | Why                                                                                                                          | What to do                   |
|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| An MCDU does not go back to the MENU page after a power loss. | Neither MCDU did before (only the model blanks the screen); a reset could also cause nuisance resets on short bus transfers. | -                            |
| The SimBridge remote MCDU needs SimBridge.                    | It is an external program.                                                                                                   | Install and start SimBridge. |

## How to use

1. Turn on **flyPad > Settings > Realism > MCDU Keyboard Input** (optionally set the MCDU Focus Timeout).
2. Click the screen of the MCDU you want to type into, then type. Click it again (or press Alt) to give the keyboard back.
3. For the remote MCDU, enable **flyPad > Settings > Sim Options > Enable MCDU Server Connection** and open the SimBridge remote MCDU.

## How to test

| # | Do this                                                                                                                                                               | Expected result                                                                                               |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| 1 | A32NX powered, both MCDUs on the MCDU MENU. Turn on flyPad > Settings > Realism > MCDU Keyboard Input.                                                                | The setting is on; the focus timeout field appears.                                                           |
| 2 | Click the F/O MCDU screen, then type ABC on the PC keyboard.                                                                                                          | The F/O MCDU top band turns cyan, ABC appears in the F/O scratchpad only, and only the F/O MCDU keys animate. |
| 3 | Click the CPT MCDU screen and type 123.                                                                                                                               | The keyboard moves to the CPT MCDU: 123 in the CPT scratchpad; the F/O MCDU loses its cyan band.              |
| 4 | Activate the flyPad failure ATA 24 > AC 2, click the F/O MCDU and type.                                                                                               | Nothing is typed on the F/O MCDU.                                                                             |
| 5 | With SimBridge running: enable flyPad > Settings > Sim Options > Enable MCDU Server Connection, open the SimBridge remote MCDU, put the two MCDUs on different pages. | The remote MCDU shows the CPT page on its left side and the F/O page on its right side.                       |
| 6 | Optional (hard to trigger on purpose): make the ATSU report a system status, e.g. an ATIS auto-update that fails.                                                     | The ATSU message appears on both MCDUs.                                                                       |

### 3. Close-up cockpit model: the MCDU screens in aircraft-large-files

**Aircraft:** A32NX | **Where:** Cockpit model, high detail (LOD00) | **Status:** The same 4 UV values were tested in the sim with the code above (2026-09-21); the large-files commit is byte-identical to the tested model. Pushed to the fork TCdr/aircraft-large-files 2026-09-29.

#### What it is for

The high-detail interior model `A320_NEO_INTERIOR_LOD00`, the one shown in the cockpit, is not in the aircraft repository: it lives in `flybywiresim/aircraft-large-files`. Its two MCDU screens (`SCREEN_MCDUL`, `SCREEN_MCDUR`) both sampled the whole MCDU texture. The companion commit 5563e31 (branch `feat/a32nx-mcd�-screen-uv-split`) maps each screen to one half:

| Mesh               | Texture U before | Texture U after       |
|--------------------|------------------|-----------------------|
| SCREEN_MCDUL (CPT) | 0 .. 1           | 0 .. 0.5 (left half)  |
| SCREEN_MCDUR (F/O) | 0 .. 1           | 0.5 .. 1 (right half) |

Four float16 values change in `A320_NEO_INTERIOR_LOD00.bin.part01`, nothing else. This branch makes the same change to `A320_NEO_INTERIOR_LOD01` (in the aircraft repository); the lower LODs have no MCDU screens.

#### Limitations and why

| Limitation                                                                                      | Why                                                                                                                                      | What to do                                                                                                   |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Without the companion change, each MCDU screen shows both MCDU pictures side by side, squeezed. | This branch draws the 2048x1024 two-screen texture; the large-files pointer of the branch still points to the unchanged model (5f07408). | Merge the large-files change first, then bump the <code>large-files</code> submodule pointer on this branch. |
| The companion alone does nothing useful.                                                        | With the stock 1024x1024 MCDU gauge, each screen would show half of the MCDU picture.                                                    | Always install it with this branch.                                                                          |

#### How to use

1. Merge the aircraft-large-files commit 5563e31, bump the `large-files` submodule pointer, then build the A32NX with this branch.
2. Nothing to set in the cockpit.

#### How to test

| # | Do this                                                                                                                                                                   | Expected result                                                |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| 1 | Build and install the A32NX with this branch and the large-files change. Load a flight, power the aircraft and look at the MCDUs from the pilot seat (high-detail model). | Each MCDU shows one full MCDU page, not stretched or squeezed. |
| 2 | CPT MCDU: MCDU MENU > FMGC. F/O MCDU: stay on MCDU MENU.                                                                                                                  | Two different pages.                                           |
| 3 | Type on one MCDU keypad.                                                                                                                                                  | Only that MCDU scratchpad changes.                             |

# ECAM procedures, EMER CANC and FIRE TEST

The A380X ECAM gets the FCOM procedures and their STATUS, a working EMER CANC pushbutton and MORE key, and both aircraft can keep the FIRE TEST running a few seconds after the button is released

|                  |                                                                                                                                                                                                                                                                                                                                                                  |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X (ECAM, FWS) and A32NX + A380X (FIRE TEST option)                                                                                                                                                                                                                                                                                                           |
| Where to find it | A380X ECP (ABN PROC, EMER CANC, RCL, MORE, STS); EWD and SD STATUS page; overhead FIRE TEST; flyPad > Settings > Realism                                                                                                                                                                                                                                         |
| Branch           | core/ecam-fws , based on master (FlyByWire master 255546cb0 merged in); independent.                                                                                                                                                                                                                                                                             |
| Status           | EMER CANC tested in the sim by the user: OK (2026-09-29 and 2026-10-02). ABN PROC STATUS tested by the user: OK (2026-10-02, CKPT WINDOW CRACKED and FUEL LEAK). FIRE TEST option tested by the user: A32NX OK (2026-09-17), A380X OK (2026-09-29). ECAM procedures: tested in the sim (September 2026). ECP MORE key and light: not sim-tested (13 unit tests). |
| Pictures         | EWD pictures (ECAM procedures) and the flyPad Realism page (FIRE TEST) from the local browser harness, running the build installed in the sim. No pictures for EMER CANC, the STATUS lines and the MORE key: the flight warning system does not run in the harness.                                                                                              |

1. A380X ECAM procedures from the FCOM

2. A380X STATUS of the ABN PROC procedures

3. A380X EMER CANC pushbutton
4. A380X ECP MORE key and light on the STATUS page

5. FIRE TEST extended after the button release

## 1. A380X ECAM procedures from the FCOM

|           |       |        |                   |         |                                                                                                                                  |
|-----------|-------|--------|-------------------|---------|----------------------------------------------------------------------------------------------------------------------------------|
| Aircraft: | A380X | Where: | ECP ABN PROC; EWD | Status: | Tested in the sim (September 2026). CKPT WINDOW CRACKED and FUEL LEAK were also run by the user with their STATUS on 2026-10-02. |
|-----------|-------|--------|-------------------|---------|----------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Many ABN PROC procedures were marked WIP: they had no lines and no FWS entry, so selecting one showed nothing. They now carry the FCOM text (PRO-ABN-ECAM-10 and -20). Some sensed alerts also got their FCOM lines, with the lines the FWS can check ticking by themselves.

### Opening a not-sensed procedure

1. Press **ABN PROC** on the ECP. The EWD lists the red emergency procedures, then the categories (ENG, F/CTL, L/G, NAV, FUEL, MISCELLANEOUS).

2. Move the cursor with the ECP **UP / DOWN** keys and press **CHECK**: the category opens, then the procedure.

3. The procedure shows in grey with **ACTIVATE**: a preview. CHECK on ACTIVATE runs it: the lines turn cyan and the cursor walks through them.

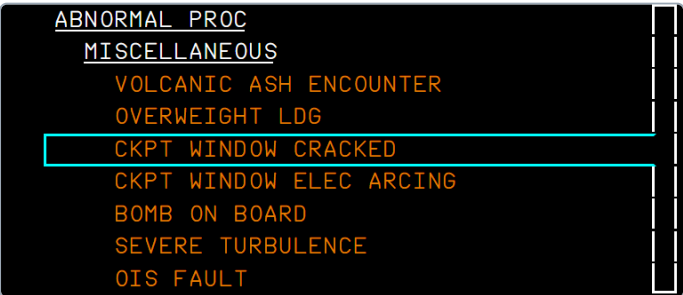


Figure 1. ABN PROC > MISCELLANEOUS.

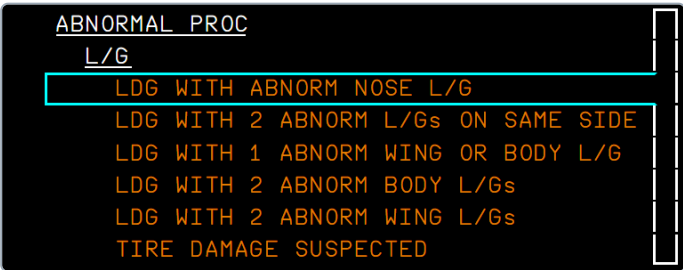



Figure 2. ABN PROC > L/G: the landing gear procedures.






## Sensed alerts with FCOM lines

These appear by themselves when the failure is detected.

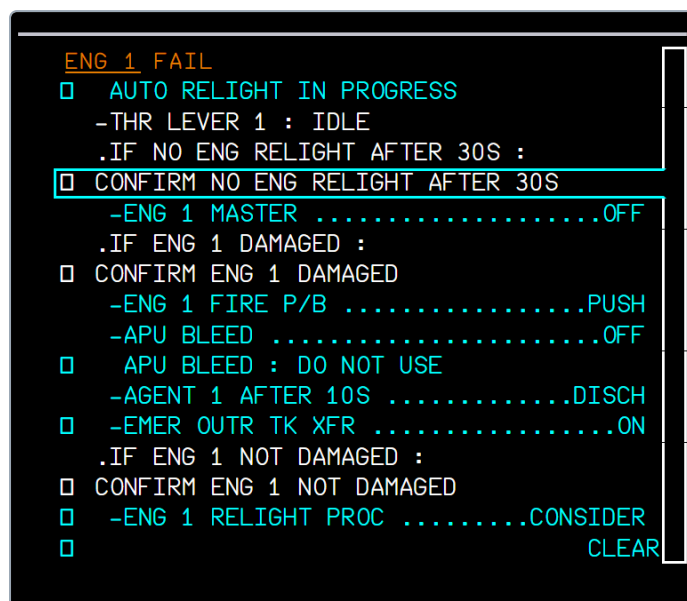

**Figure 7.** ENG 1 FAIL in flight: AUTO RELIGHT IN PROGRESS, THR LEVER 1 IDLE (ticked, the lever is at idle), then the relight / damaged branches.

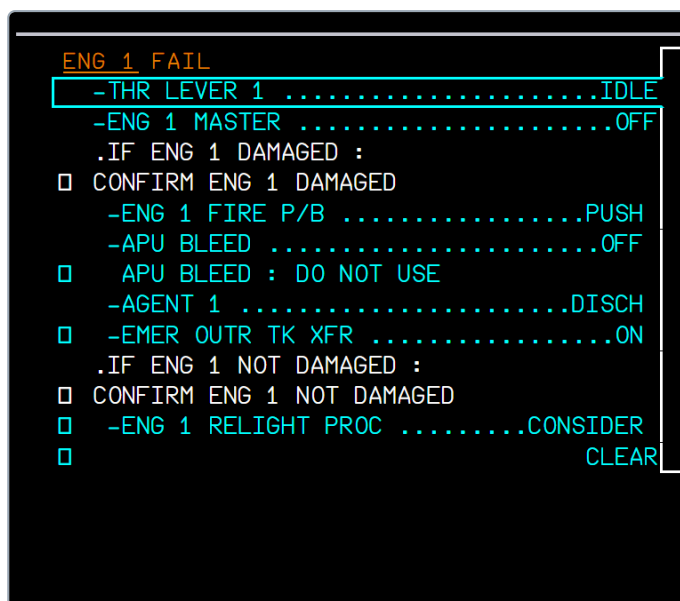

**Figure 8.** ENG 1 FAIL on the ground: the ground lines only.

| Situation                                      | What you should see                                                                                                                                                         |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ENG x FAIL just after lift-off                 | The first line is L/G ... UP, until the gear lever is up.                                                                                                                   |
| ENG x FAIL in flight                           | AUTO RELIGHT IN PROGRESS; THR LEVER x IDLE, ENG x MASTER OFF, FIRE P/B, APU BLEED, AGENT: these tick from the cockpit controls.                                             |
| ENG x FAIL on the ground                       | Only the ground part of the procedure.                                                                                                                                      |
| All four engines fail in flight                | ALL ENGINES FAILURE (red, LAND ASAP): the FCOM ALL ENG FLAME OUT procedure, fuel remaining / no fuel, relight, then forced landing or ditching; it scrolls with the cursor. |
| COND HOT AIR 1 (2) FAULT (hot air valve fault) | CARGO TEMP MONITOR; HOT AIR 1 (2) ON shows only while the HOT AIR pushbutton is OFF.                                                                                        |
| COND TEMP CTL FAULT                            | Now with its FCOM lines.                                                                                                                                                    |

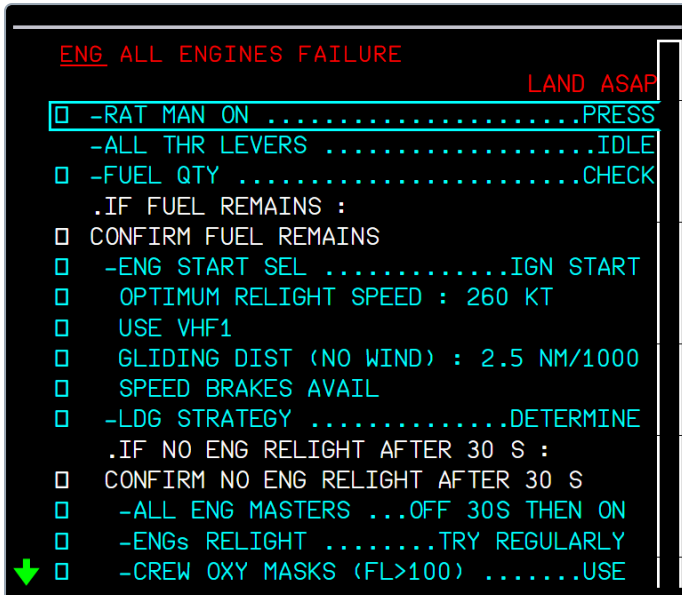


Figure 9. ALL ENGINES FAILURE, first page.

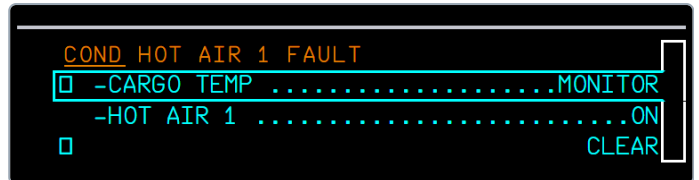


Figure 10. COND HOT AIR 1 FAULT.

## Reading the lines

- Upper case **.IF ...** lines are ECAM conditions: the crew confirms them (CONFIRM ...), then the lines below become active.
- Headers such as **AT TOP OF DESCENT :** are centred sub-headings.
- Sensed lines tick by themselves once the action is done; the others are ticked by the crew with the ECP CHECK key.
- A line fits the 41 characters of the EWD; nesting is capped at three levels.

## Limitations and why

| Limitation                                                                                                                                | Why                                                                                         | What to do |
|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|------------|
| About 85 sensed alerts show their title only.                                                                                             | The FCOM gives no lines for them ("Crew awareness").                                        | -          |
| Limitations, INOP SYS, INFO and deferred procedures of the new procedures.                                                                | They are on the STATUS page: see the feature A380X STATUS of the ABN PROC procedures below. | -          |
| FLUCTUATING VERTICAL SPEED stays WIP; HOT AIR 1(2) OFF / VLV OPEN, T.O V1/VR/V2 DISAGREE, OVERSPEED LOAD ANALYSIS REQUIRED have no lines. | They are not in the 2011 FCOM used as the source.                                           | -          |
| ALL ENGINES FAILURE is long.                                                                                                              | It is the full FCOM procedure; the EWD scrolls with the cursor.                             | -          |

## How to use

1. For a failure the ECAM does not detect: press **ABN PROC** on the ECP.
2. Choose the category, then the procedure, with the ECP UP / DOWN keys and **CHECK**.
3. Read the grey preview; put the cursor on **ACTIVATE** and press CHECK to run it.
4. Tick each line with CHECK once it is done; the sensed lines tick by themselves.
5. Sensed alerts (ENG FAIL, COND...) show by themselves: read and do their lines the same way.

## How to test

| # | Do this                                                                                                                                                                         | Expected result                                                                                                                |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, powered. Press <b>ABN PROC</b> on the ECP.                                                                                                                 | The EWD lists DITCHING and FORCED LANDING in red at the top, then the ENG, F/CTL, FUEL, L/G, NAV and MISCELLANEOUS categories. |
| 2 | Open <b>MISCELLANEOUS</b> , then <b>DITCHING</b> .                                                                                                                              | The procedure in grey with ACTIVATE at the bottom (preview).                                                                   |
| 3 | Put the cursor on ACTIVATE and press <b>CHECK</b> .                                                                                                                             | The lines turn cyan; the cursor is on the first line (ATC ... NOTIFY & SQUAWK 7700).                                           |
| 4 | Press CHECK on each line in turn.                                                                                                                                               | Each line is ticked and the cursor moves to the next one.                                                                      |
| 5 | ABN PROC > ENG.                                                                                                                                                                 | HI VIBRATIONS is in the list.                                                                                                  |
| 6 | ABN PROC > L/G > LDG WITH ABNORM NOSE L/G, then ACTIVATE.                                                                                                                       | The procedure runs; the SD shows the WHEEL page.                                                                               |
| 7 | ABN PROC > NAV > IR ALIGNMENT IN ATT MODE; ABN PROC > FUEL > FUEL LEAK and MAN BALANCING PROCEDURE; MISCELLANEOUS > CKPT WINDOW CRACKED, CKPT WINDOW ELEC ARCING, OIS FAULT.    | Each one opens with its FCOM lines (none is empty any more).                                                                   |
| 8 | In flight, make engine 1 run down with its ENG MASTER ON and its FIRE pushbutton in (no flyPad engine failure on this branch: use the sim engine failure or a SimConnect tool). | ENG 1 FAIL with AUTO RELIGHT IN PROGRESS; THR LEVER 1 IDLE ticks by itself when the lever is at idle.                          |
| 9 | Same on the ground.                                                                                                                                                             | ENG 1 FAIL with the ground lines only.                                                                                         |

## 2. A380X STATUS of the ABN PROC procedures

**Aircraft:** A380X | **Where:** SD STATUS page; PFD limitations | **Status:** Tested in the sim by the user: OK (2026-10-02) with CKPT WINDOW CRACKED (both layers) and FUEL LEAK. The L/G, ELEC ARCING and MAN BALANCING lines: no record of a sim test.

### What it is for

The not-sensed procedures of the feature above had no STATUS: after them, the STATUS page stayed NORMAL. The FCOM gives each one its limitations, inoperative systems, information and deferred procedure (A380 FCOM PRO-ABN-ECAM-10-28, -32 and -80). The FWS now writes them from the lines the crew ticks: the STATUS follows the branch of the procedure that was flown.

### What you see

| Procedure                          | Line ticked                              | STATUS                                                                                                                                                                                                               |
|------------------------------------|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L/G LDG WITH ABNORM ... (the five) | LDG LIMITED TO MAX LDG WEIGHT            | LIMITATIONS (approach and landing): <b>MAX LDG WEIGHT, LDG DIST AFFECTED</b> ; MAX LDG WEIGHT on the PFD. INOP SYS (approach and landing): <b>BTV</b> , always.                                                      |
| MISC CKPT WINDOW CRACKED           | EXTERNAL LAYER CRACKED                   | No limitation. Deferred procedure <b>AT TOP OF DESCENT: CKPT WINDOW CRACKED</b> .                                                                                                                                    |
|                                    | INTERNAL LAYER CRACKED (or no diagnosis) | <b>MAX FL : 230/MEA</b> (STATUS and PFD); INFO: the cabin altitude table (ACFT FL / CABIN ALT TRGT: 100 = LDG ELEVN, 150 = 3000, 200 = 6000, 230 = 8000); deferred procedure at top of descent: CABIN ALT MODE AUTO. |

|                              |                                        |                                                                                                                  |
|------------------------------|----------------------------------------|------------------------------------------------------------------------------------------------------------------|
|                              | AICU 1 PULL / AICU 2 PULL              | INOP SYS: L (R) WINDSHIELD HEATG, SLIDG WINDOW HEATG, FIXED WINDOW HEATG; with both AICU pulled, WING A-ICE too. |
| MISC CKPT WINDOW ELEC ARCING | AICU 1 PULL / AICU 2 PULL              | The same window heating INOP SYS.                                                                                |
| FUEL LEAK                    | -                                      | <b>LAND ANSA</b> (STATUS and PFD), and FUEL PARTLY UNUSABLE unless LEAK STOPS is ticked.                         |
|                              | LEAK CONTINUES                         | INFO: MIN FUEL USABLE : OTHER FEED TKs, (ALL OTHER FUEL MAYBE LOST).                                             |
| FUEL MAN BALANCING PROCEDURE | -                                      | <b>DELAY T.O</b> while on the ground.                                                                            |
|                              | FEED TKs 1 & 4 (or 2 & 3) NOT BALANCED | INFO: FUEL CONSUMPT INCRSD : FMS PRED DISREGARD.                                                                 |

## Limitations and why

| Limitation                                                                                                                                     | Why                                                                                                                      | What to do                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| A deferred procedure that depends on a crew choice carries that choice as its first line (for example INTERNAL LAYER CRACKED OR NO DIAGNOSIS). | The FWS creates the deferred procedures when the abnormal procedure is first shown, before the crew has ticked anything. | Read the condition line before doing the deferred line. |

## How to use

1. Run the ABN PROC procedure and tick the lines that match your case (for example INTERNAL LAYER CRACKED).
2. Press **STS** on the ECP (or wait for the STATUS page at the end of the procedures).
3. Read the LIMITATIONS, INOP SYS and INFO; the deferred procedure comes up at top of descent.

## How to test

| # | Do this                                                                                                                                  | Expected result                                                                                                                                        |
|---|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight (or on the ground). ABN PROC > MISCELLANEOUS > CKPT WINDOW CRACKED, ACTIVATE. Tick EXTERNAL LAYER CRACKED and its lines. | STATUS page: no limitation; the deferred procedure AT TOP OF DESCENT CKPT WINDOW CRACKED is listed.                                                    |
| 2 | Run it again (or reload) and tick INTERNAL LAYER CRACKED instead, then AICU 1 PULL.                                                      | STATUS: MAX FL : 230/MEA (also on the PFD), the cabin altitude table in INFO, INOP SYS L WINDSHIELD HEATG, L SLIDG WINDOW HEATG, L FIXED WINDOW HEATG. |
| 3 | Also tick AICU 2 PULL.                                                                                                                   | INOP SYS adds the R window heating lines and WING A-ICE.                                                                                               |
| 4 | ABN PROC > FUEL > FUEL LEAK, ACTIVATE.                                                                                                   | STATUS: LAND ANSA (also on the PFD) and FUEL PARTLY UNUSABLE.                                                                                          |
| 5 | Tick LEAK STOPS.                                                                                                                         | FUEL PARTLY UNUSABLE goes; LAND ANSA stays.                                                                                                            |
| 6 | On the ground: ABN PROC > FUEL > MAN BALANCING PROCEDURE, ACTIVATE.                                                                      | STATUS: DELAY T.O.                                                                                                                                     |
| 7 | ABN PROC > L/G > LDG WITH ABNORM NOSE L/G, ACTIVATE, tick LDG LIMITED TO MAX LDG WEIGHT.                                                 | STATUS (approach and landing part): MAX LDG WEIGHT, LDG DIST AFFECTED, INOP SYS BTW; MAX LDG WEIGHT on the PFD.                                        |

### 3. A380X EMER CANC pushbutton

**Aircraft:** A380X | **Where:** ECP, right of RCL | **Status:** Tested in the sim by the user: OK (2026-09-29; again 2026-10-02: caution cancelled for the flight, RCL > 3 s recall, warning aural and MASTER WARN silenced).

#### What it is for

EMER CANC stops an alert that is wrong or no longer useful: a spurious warning whose aural alert would sound for the rest of the approach, or a caution the crew has dealt with and does not want to see again. Until now the pushbutton did nothing on the FBW A380.

#### What it does

It acts on the alert at the top of the EWD (A380 FCOM DSC-31-40-20):

| Top alert                | EMER CANC                                                                                                                                                                                                        |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A <b>warning</b> (red)   | Its aural alert and the MASTER WARN light stop. The procedure stays on the EWD. If the warning goes away and comes back, the aural alert and MASTER WARN come back.                                              |
| A <b>caution</b> (amber) | The caution, its procedure and the MASTER CAUT light go away <b>for the rest of the flight</b> , even if the failure comes back. It is listed in white under <b>CANCELLED CAUTION</b> on the STATUS page (MORE). |
| In every case            | All the aural alerts stop (the one sounding and those waiting), and the procedures you called from ABN PROC are removed.                                                                                         |
| Nothing to cancel        | The memo <b>EMERGENCY CANCEL ON</b> shows for 3 seconds.                                                                                                                                                         |

#### Getting the cancelled cautions back

1. Press and **hold RCL** for more than 3 seconds.
2. The cancelled cautions that are still active come back on the EWD with their procedures.

The cancelled cautions are also forgotten when the warning system loses power, or 50 minutes after the engines are shut down, as the other ECAM memories.

#### What to expect

- A cancelled caution never sounds again in the flight, even if the failure comes back: check the STATUS page.
- A silenced warning comes back only if it goes away and triggers again.
- EMERGENCY CANCEL ON lasts 3 seconds: the FCOM gives no time; 3 s as the RCL "NORMAL" message.

#### How to use

1. Lift the guard and press **EMER CANC** on the ECP: it acts on the alert at the top of the EWD.
2. A warning: its aural and MASTER WARN stop, the procedure stays. A caution: it goes away for the rest of the flight.
3. Check the cancelled cautions on the STATUS page (**MORE**, CANCELLED CAUTION).
4. To get them back, press and hold **RCL** more than 3 seconds.

#### How to test

| # | Do this                                                                                                | Expected result                                                     |
|---|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| 1 | A380X on the ground, engine 1 running. Set the <b>ENG 1 BLEED</b> pushbutton (overhead AIR panel) OFF. | Caution AIR ENG 1 BLEED OFF in amber, MASTER CAUT on, single chime. |
| 2 | Press <b>EMER CANC</b> .                                                                               | The caution and MASTER CAUT go away.                                |

|   |                                                                                    |                                                                                                                     |
|---|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| 3 | Set ENG 1 BLEED back to AUTO, then OFF again.                                      | The caution does not come back (cancelled for the flight).                                                          |
| 4 | Press <b>STS</b> on the ECP.                                                       | The STATUS page shows MORE at the bottom; the MORE page lists AIR ENG 1 BLEED OFF in white under CANCELLED CAUTION. |
| 5 | Press and hold <b>RCL</b> more than 3 seconds (ENG 1 BLEED still OFF).             | AIR ENG 1 BLEED OFF comes back on the EWD.                                                                          |
| 6 | Press EMER CANC with no alert on the EWD.                                          | The memo EMERGENCY CANCEL ON for 3 seconds.                                                                         |
| 7 | On the runway, parking brake ON, thrust levers to FLX or TOGA (then back to idle). | Warning CONFIG PARK BRK ON in red, MASTER WARN, continuous repetitive chime.                                        |
| 8 | Press EMER CANC.                                                                   | The chime and MASTER WARN stop; CONFIG PARK BRK ON stays on the EWD.                                                |
| 9 | Release the parking brake, set it again and advance the thrust levers again.       | The warning triggers again with its chime and MASTER WARN.                                                          |

## 4. A380X ECP MORE key and light on the STATUS page

**Aircraft:** A380X | **Where:** ECP MORE key; SD STATUS page | **Status:** Not sim-tested (13 unit tests).

### What it is for

A380 FCOM DSC-31-40-10 (STATUS MORE PAGE): the crew displays the STATUS MORE page "if MORE appears at the bottom of the STATUS page, by pressing MORE pb on the ECP"; pressing the pb again clears it (DSC-31-40-20). In FBW the ECP MORE key did nothing: the SD paused and resumed its STATUS page in an order that lost the value telling the FWS that MORE was available, and the MORE pb light read a variable nobody wrote. The STATUS MORE page holds the INOP SYS REDUND items and the CANCELLED CAUTION list (see EMER CANC above).

### What you should see

| Situation                                                              | What you should see                                                                            |
|------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| STATUS page with REDUND LOSS items or a cancelled caution              | MORE in a box at the bottom of the page.                                                       |
| MORE key pressed                                                       | The STATUS MORE page (INOP SYS REDUND, CANCELLED CAUTION); the light of the MORE key comes on. |
| MORE key pressed again                                                 | Back to the STATUS page; the light goes off.                                                   |
| Another SD page selected, or the STATUS page has nothing MORE any more | The MORE page and the light go away.                                                           |
| STATUS page without MORE, or another SD page                           | The MORE key does nothing (only STATUS has a MORE page in FBW).                                |

### Limitations and why

| Limitation                                                   | Why                                                                | What to do                        |
|--------------------------------------------------------------|--------------------------------------------------------------------|-----------------------------------|
| Only the STATUS page has a MORE page.                        | The other SD MORE pages are not built in FBW.                      | -                                 |
| A full MSFS restart is needed after an update for the light. | The MORE key light is in the cockpit behaviour file (ecam-cp.xml). | Restart the sim after installing. |

How to use

- 1. Press **STS** on the ECP.
- 2. If MORE shows at the bottom of the STATUS page, press **MORE** to see the STATUS MORE page.
- 3. Press MORE again (or another page key) to leave it.

How to test

| # | Do this                                                                                                             | Expected result                                                                             |
|---|---------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, engine 1 running. Make a cancelled caution: ENG 1 BLEED pushbutton OFF, then <b>EMER CANC.</b> | The caution AIR ENG 1 BLEED OFF goes away.                                                  |
| 2 | Press <b>STS</b> .                                                                                                  | STATUS page with MORE boxed at the bottom.                                                  |
| 3 | Press <b>MORE</b> on the ECP.                                                                                       | The STATUS MORE page with CANCELLED CAUTION: AIR ENG 1 BLEED OFF. The MORE key light is on. |
| 4 | Press MORE again.                                                                                                   | Back to the STATUS page; the light is off.                                                  |
| 5 | Press MORE, then a page key (for example ENG).                                                                      | The ENG page; the MORE light goes off. Back on STATUS, the normal page (not MORE) shows.    |
| 6 | On a STATUS page without MORE (no REDUND LOSS item, no cancelled caution), press MORE.                              | Nothing happens; no light.                                                                  |


5. FIRE TEST extended after the button release

|                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> flyPad > Settings > Realism; overhead FIRE TEST   <b>Status:</b> Tested in the sim by the user: A32NX OK (2026-09-17, incl. the AGENT / SQUIB DISCH lights), A380X OK (2026-09-29). |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

On the aircraft, the FIRE TEST lasts as long as the button is held. In the simulator, holding the button with the mouse while looking at the ECAM, the master warning and every FIRE and AGENT light is awkward. This option keeps the test running for 7 seconds after you release the button. It is marked **unrealistic** and is on by default.



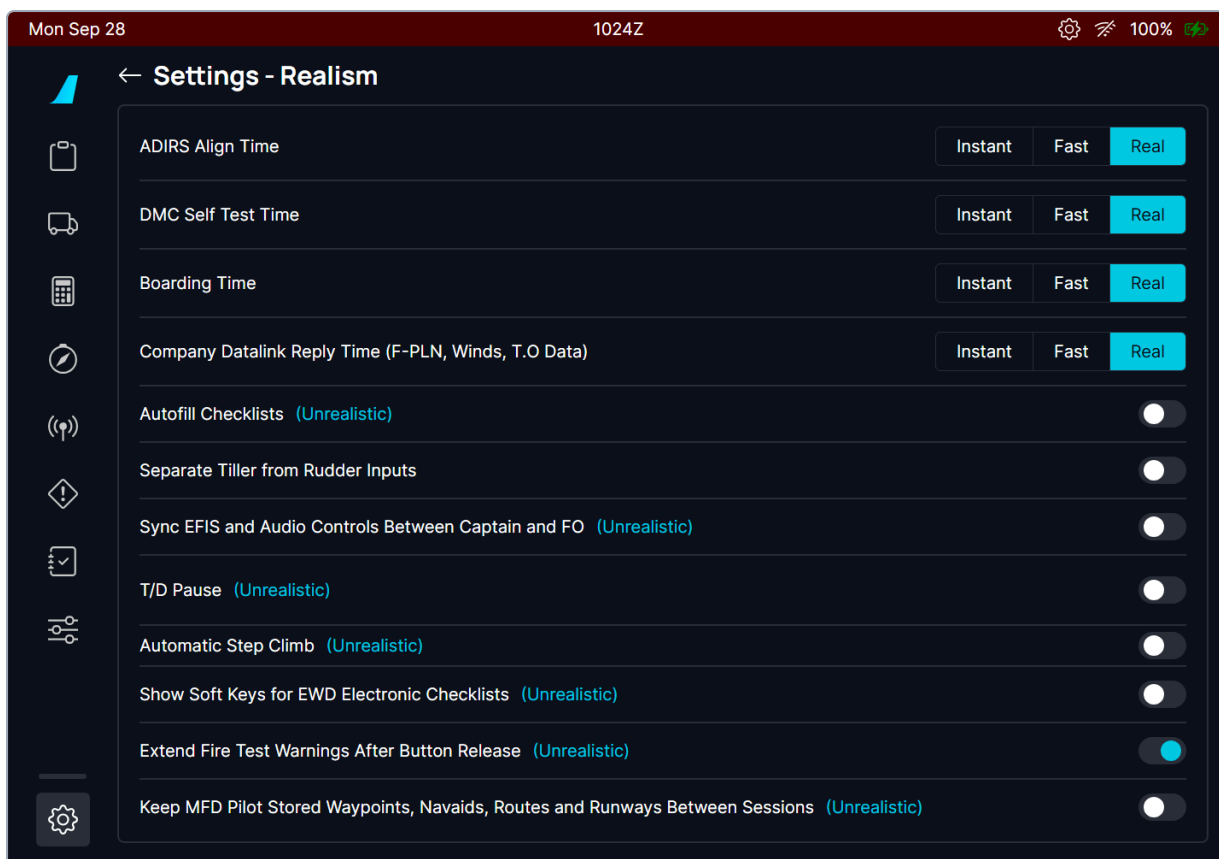

**Figure 11.** Settings > Realism on the A380X: "Extend Fire Test Warnings After Button Release".

## What it does

| Aircraft | Test                                       | Kept 7 s after the release                                                                 |
|----------|--------------------------------------------|--------------------------------------------------------------------------------------------|
| A32NX    | APU, ENG 1 and ENG 2 FIRE TEST pushbuttons | master warning and CRC, ECAM, FIRE pushbutton lights, AGENT / SQUIB DISCH lights, together |
| A380X    | FIRE TEST pushbutton (overhead)            | the fire detection test itself: FIRE lights, squib lights and the FWS warnings, together   |

Option off: the test stops the instant you release the button, as on the aircraft.

## What to expect

- The test starts half a second after you press (A380X), as before.
- Pressing again during the 7 seconds starts a new 7 seconds after the next release.
- The A380X systems host and fire protection system changed: a full MSFS restart after an update.

## How to use

1. flyPad > **Settings** > **Realism**: set "Extend Fire Test Warnings After Button Release" ON (the default) or OFF.
2. Press and release the FIRE TEST pushbutton: with the option ON, check the warnings and lights during the 7 seconds that follow.

## How to test

| # | Do this | Expected result |
|---|---------|-----------------|
|---|---------|-----------------|

|   |                                                                                                           |                                                                                                                                                                                                            |
|---|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX, powered, option ON. Press and release the <b>ENG 1 FIRE TEST</b> pushbutton (overhead FIRE panel). | For 7 seconds: ENG 1 FIRE test warning on the E/WD, MASTER WARN, continuous repetitive chime, ENG 1 FIRE pushbutton light and the AGENT 1 / AGENT 2 SQUIB DISCH lights. Then everything goes off together. |
| 2 | Same with the <b>APU FIRE TEST</b> and the <b>ENG 2 FIRE TEST</b> .                                       | Same 7 seconds, with their own warning and lights (one AGENT for the APU).                                                                                                                                 |
| 3 | Press again during the 7 seconds and release.                                                             | A new 7 seconds starts at the new release.                                                                                                                                                                 |
| 4 | Set the option OFF and repeat.                                                                            | Everything stops at the instant the button is released.                                                                                                                                                    |
| 5 | A380X, powered, option ON. Press and release the overhead <b>FIRE TEST</b> pushbutton.                    | The test starts half a second after the press; the FIRE and squib lights and the FWS fire test warnings stay together 7 seconds after the release.                                                         |
| 6 | A380X, option OFF, repeat.                                                                                | The test stops when the button is released.                                                                                                                                                                |

# Runway awareness: RAAS and OANS

The A32NX gets the Honeywell RAAS runway callouts, and the A380X OANS gives RWY AHEAD without a Navigraph map, loads the FCOM default airport by itself and shows one airport per side

|                  |                                                                                                                                                                                                                                                                         |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX (RAAS) and A380X (OANS)                                                                                                                                                                                                                                           |
| Where to find it | A32NX: flyPad > Settings > Aircraft Options / Pin Programs > RAAS. A380X: ND at the ZOOM range or in PLAN (OANS), ARPT SEL panel; RWY AHEAD on the PFD and ND                                                                                                           |
| Branch           | core/oans-btv-raas , based on master (FlyByWire master 255546cb0 merged in); independent.                                                                                                                                                                               |
| Status           | RAAS and RWY AHEAD without a map tested in the sim by the user: OK (2026-10-02). OANS default airport tested by the user: OK (2026-09-27). One airport per side: not sim-tested.                                                                                        |
| Pictures         | flyPad setting and the Captain ND from the local browser harness, running the build installed in the sim (RAAS callouts drawn as diagrams from the code; the RWY AHEAD advisory and the test airport XTST set up by the harness). No pictures for the airport per side. |

1. A32NX RAAS runway awareness callouts
2. A380X RWY AHEAD without an airport map
3. A380X OANS default airport
4. A380X one OANS airport per side

## 1. A32NX RAAS runway awareness callouts

**Aircraft:** A32NX | **Where:** flyPad > Settings > Aircraft Options / Pin Programs > RAAS | **Status:** Tested in the sim by the user: first callout heard 2026-09-26; "RAAS is working well" on 2026-10-02 (approaching on the ground and in the air, extended holding, distance remaining, volume).

### What it is for

RAAS is an option of the A320's Honeywell EGPWS (A320 FCOM GEN aircraft configuration, used as a line-up aid in PRO-NOR-SOP-11 TAKEOFF RUNWAY CONFIRM). It tells the crew which runway they are approaching or are on, warns of a taxiway takeoff or landing, and calls the distance remaining. It needs no airport map: the runways come from the sim's airport database.

### Turning it on


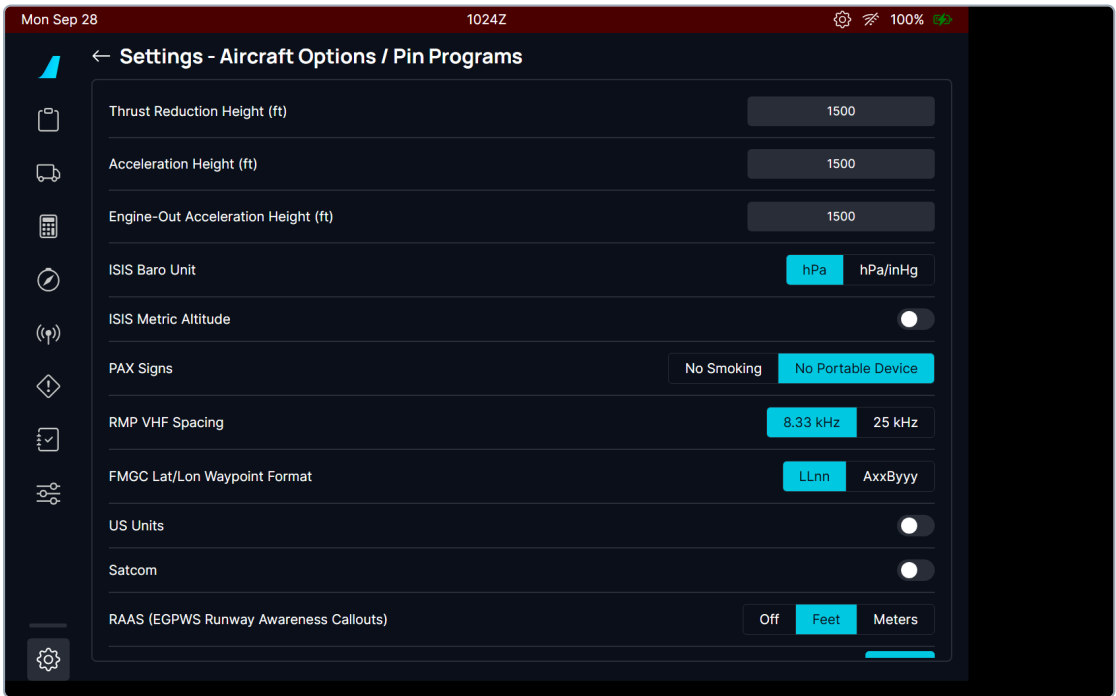


Figure 1. flyPad Settings > Aircraft Options / Pin Programs.

**Figure 2.** RAAS: Off, Feet (default) or Meters. The unit is the one of the distance callouts.

- The callouts run while the EGPWC is powered (AC BUS 1) and the **GPWS SYS** pushbutton is not OFF.
- The EGPWS aural alerts (e.g. "TOO LOW TERRAIN", "GLIDE SLOPE") have priority: RAAS waits for them.
- The voice is played word by word.

## On the ground

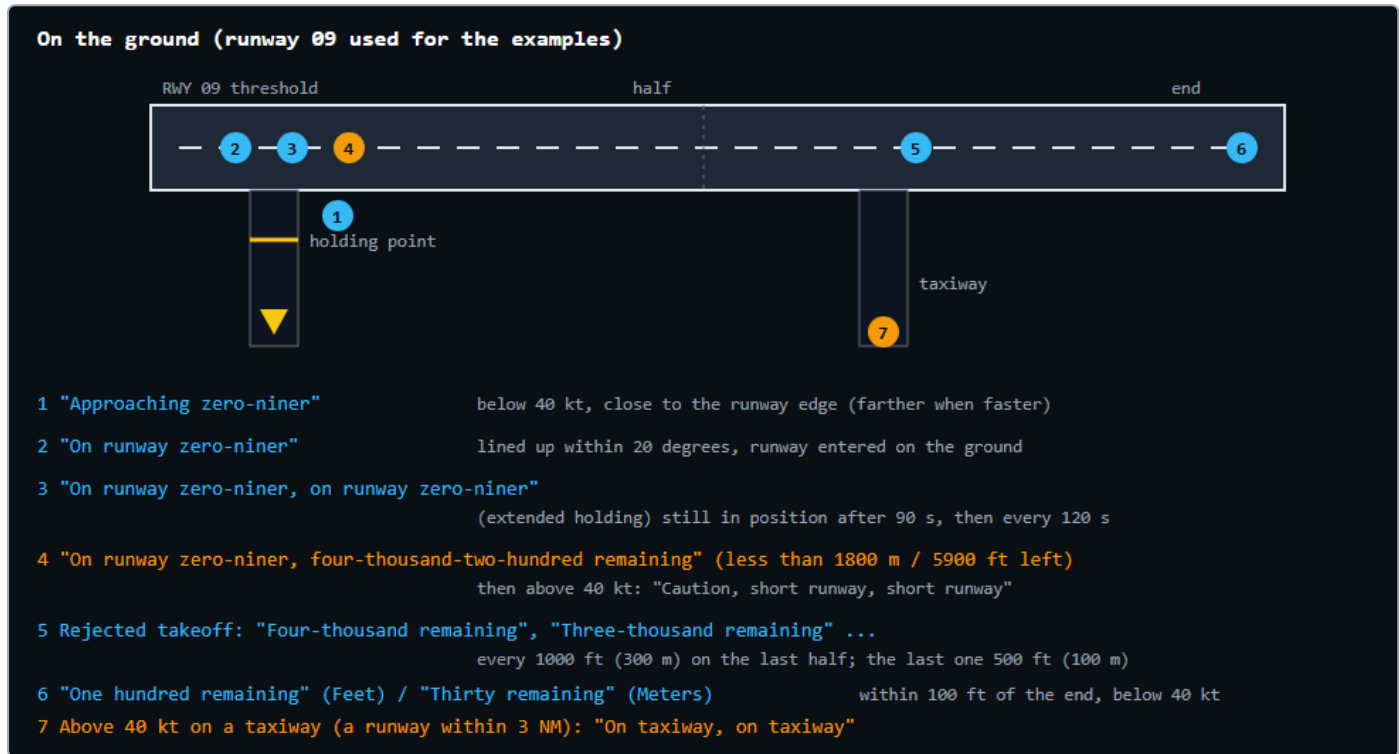

**Figure 3.** The ground callouts, in blue the advisories, in amber the cautions.

*Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.*

| Situation                                                  | What you should see                                                                                       |
|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Taxiing towards a runway (below 40 kt)                     | "Approaching" and the runway end nearest to where you will enter; "Approaching runways" when two at once. |
| Lining up                                                  | "On runway" and the runway, once, when the runway was entered on the ground.                              |
| Lining up with less than 1800 m (5900 ft) ahead            | The length remaining is added; at the start of the roll (above 40 kt), "Caution, short runway".           |
| Holding on the runway for 90 s                             | "On runway ..." twice, then every 120 s while you stay.                                                   |
| Starting a takeoff roll on a taxiway (above 40 kt)         | "On taxiway, on taxiway".                                                                                 |
| Rejected takeoff (ground speed down 7 kt from its maximum) | The distance remaining on the last half of the runway.                                                    |
| Slow near the end (within 100 ft, below 40 kt)             | "One hundred remaining" (Feet) or "Thirty remaining" (Meters).                                            |

Approach and landing

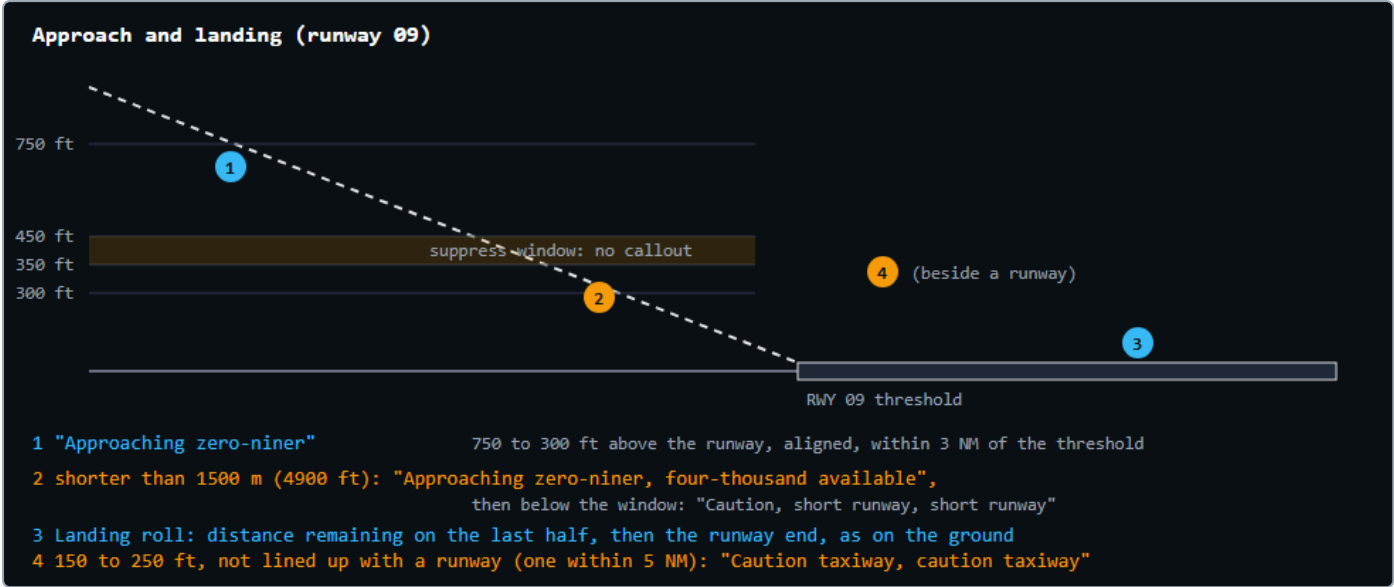


Figure 4. The approach callouts and the suppress window.

Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.

| Situation                                     | What you should see                                                                                                                         |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Between 750 and 300 ft, lined up, within 3 NM | "Approaching" and the runway, once. Not between 450 and 350 ft (the Airbus suppress window, where the crew is busy with the auto callouts). |
| The runway is shorter than 1500 m (4900 ft)   | The available length is added; below the window: "Caution, short runway".                                                                   |
| 150 to 250 ft, not lined up with any runway   | "Caution taxiway, caution taxiway".                                                                                                         |
| Landing roll                                  | The distance remaining on the last half: every 1000 ft (Feet) or 300 m (Meters), the last one at 500 ft / 100 m; then the runway end.       |

Limitations and why

| Limitation                     | Why                                                                                                                                                                | What to do |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| Only runways known to the sim. | The runways come from the MSFS airport database, not from an airport map: no taxiway geometry, so "on taxiway" is judged as "not aligned with a runway".           | -          |
| One synthetic voice.           | The clips are generated with the Piper text-to-speech engine (voice trained on the public-domain LJ Speech dataset); its licence allows the clips in the aircraft. | -          |
| No RAAS on the A380X.          | The A380X uses the OANS runway alerts instead (see A380X RWY AHEAD without an airport map below).                                                                  | -          |

NOTE

The A380X OIT flyPad settings pages carry the same RAAS option entry, only so that the A380X builds: the A380X has no RAAS.

How to use

- 1. flyPad > **Settings** > **Aircraft Options / Pin Programs** > **RAAS: Feet** (the default) or **Meters** for the distance callouts, **Off** to remove them.
- 2. Keep the **GPWS SYS** pushbutton on (not OFF): RAAS is part of the EGPWS.
- 3. Taxi, take off and land as usual: listen to the callouts.

How to test

| #  | Do this                                                                                                                             | Expected result                                                                                        |
|----|-------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| 1  | A32NX on the ground at an airport, AC BUS 1 powered, GPWS SYS not OFF, RAAS set to <b>Feet</b> . Taxi towards a runway below 40 kt. | "Approaching" and the runway name (for example "Approaching zero six right") before the holding point. |
| 2  | Line up on the runway.                                                                                                              | "On runway" and the runway name, once.                                                                 |
| 3  | Stay lined up for 90 seconds.                                                                                                       | "On runway ..." twice, then again every 120 s while you stay.                                          |
| 4  | On a runway shorter than 1800 m (5900 ft): line up.                                                                                 | The length remaining is added; above 40 kt, "Caution, short runway".                                   |
| 5  | Start a takeoff roll on a taxiway (above 40 kt).                                                                                    | "On taxiway, on taxiway".                                                                              |
| 6  | Reject a takeoff (slow down by 7 kt or more from the maximum ground speed).                                                         | The distance remaining on the last half of the runway.                                                 |
| 7  | In flight, final approach lined up with the runway, within 3 NM, between 750 and 300 ft.                                            | "Approaching" and the runway, once; never between 450 and 350 ft.                                      |
| 8  | Landing roll.                                                                                                                       | Distance remaining every 1000 ft on the last half (last one at 500 ft), then the runway end.           |
| 9  | Set RAAS to <b>Meters</b> and land again.                                                                                           | Distance remaining every 300 m, the last one at 100 m.                                                 |
| 10 | Set the <b>GPWS SYS</b> pushbutton OFF, or RAAS Off.                                                                                | No more RAAS callouts.                                                                                 |


2. A380X RWY AHEAD without an airport map

|                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> PFD and ND, automatic while taxiing   <b>Status:</b> Tested in the sim by the user: OK (2026-10-02, without a Navigraph map). 4 unit tests. |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

While taxiing, the A380 OANS warns the crew before the aircraft enters a runway: **RWY AHEAD** with the runway name, on the PFD and the ND. In FBW this advisory came from the Navigraph airport map (AMDB): without a Navigraph subscription, or at an airport without a map, it never came. Now, while no airport map is loaded, the OANS uses the runways of the sim's own airport database with the same rule.

## The rule

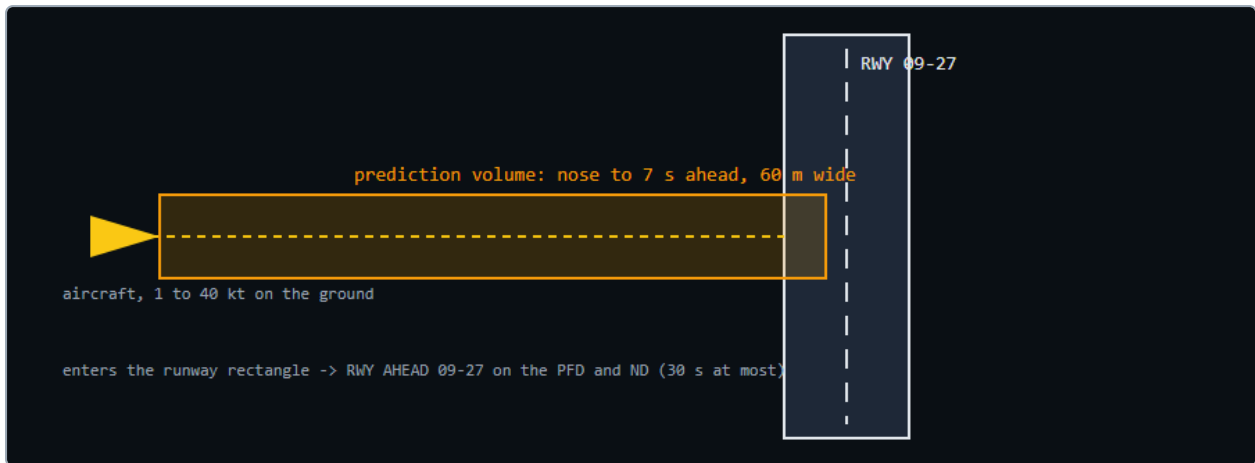


**Figure 5.** The prediction volume: from the nose to 7 seconds ahead at the current ground speed, 60 m wide. When it reaches a runway, RWY AHEAD appears for that runway.

*Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.*

- On the ground, from 1 to 40 kt.
- The advisory stays at most 30 s, and goes when the aircraft is on the runway.
- With an airport map loaded, nothing changes: the map is used as before.

## What it looks like

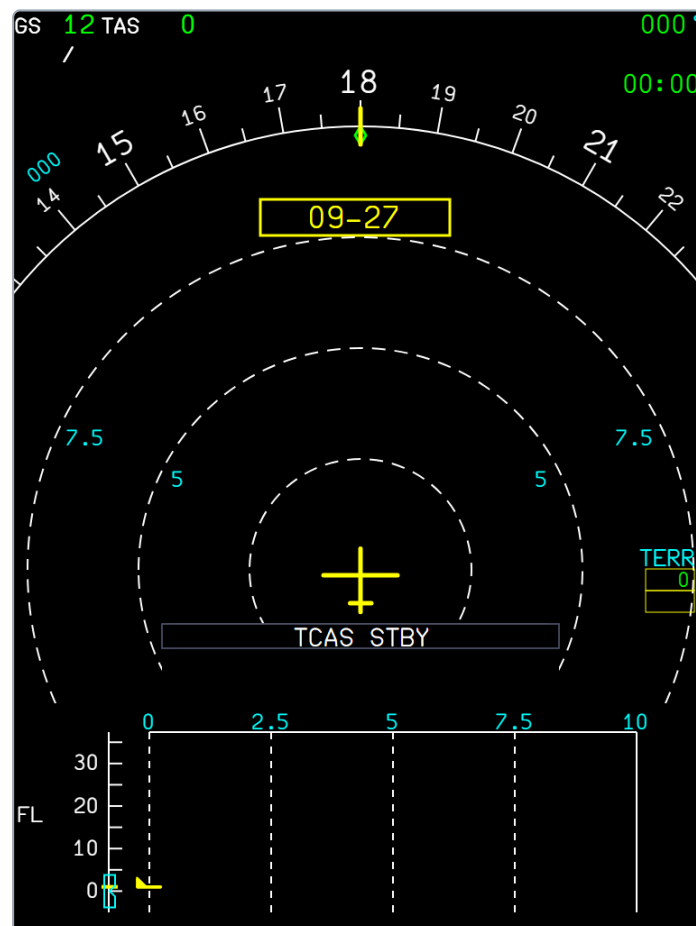

**Figure 6.** The ND advisory: the runway name in a yellow box at the top (here 09-27, when the aircraft taxis south towards runway 09/27). The PFD shows RWY AHEAD too.



## What to expect

| Situation                                        | What you should see                         |
|--------------------------------------------------|---------------------------------------------|
| Taxiing towards a runway, no Navigraph map       | RWY AHEAD with the runway name, up to 30 s. |
| Taxiing towards a runway, with the Navigraph map | RWY AHEAD from the map (as before).         |
| Stopped, or above 40 kt                          | No advisory.                                |
| On the runway                                    | The advisory goes.                          |

## Limitations and why

| Limitation                                    | Why                                                                                                                                                    | What to do |
|-----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| Runway rectangles only.                       | The sim database gives each runway as a rectangle (threshold, length, width); displaced thresholds and runway shapes of the airport map are not known. | -          |
| Shares its runway search with the A32NX RAAS. | One runway module (sim airport database) serves both; both are on this branch.                                                                         | -          |

## How to use

1. Nothing to set: taxi as usual. Before entering a runway, RWY AHEAD shows on the PFD and the ND with the runway name.
2. With the Navigraph airport map loaded the advisory comes from the map; without it, from the sim runways.

## How to test

| # | Do this                                                                                                                                                                      | Expected result                                                                                                                     |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, without a Navigraph airport map (flyPad not linked to Navigraph, or an airport not in the airport database). Taxi towards a runway between 1 and 40 kt. | About 7 seconds before the nose reaches the runway: RWY AHEAD on the PFD, and the runway name in a yellow box at the top of the ND. |
| 2 | Stop before the runway.                                                                                                                                                      | The advisory goes after 30 s at most; no new one while stopped.                                                                     |
| 3 | Taxi onto the runway.                                                                                                                                                        | The advisory goes once the aircraft is on the runway.                                                                               |
| 4 | Repeat with the Navigraph map loaded.                                                                                                                                        | RWY AHEAD as before, from the map.                                                                                                  |

## 3. A380X OANS default airport

**Aircraft:** A380X | **Where:** ND at ZOOM range or PLAN; OANS ARPT SEL | **Status:** Tested in the sim by the user: OK (2026-09-27).  
4 unit tests.

## What it is for

The OANS draws the airport around the aircraft on the ND. The FCOM (DSC-34-10-70-20, MOVING AIRPORT MAP) says no manual selection is needed: the OANS shows a **default airport**. FBW loaded the nearest airport on ground, but in flight only the destination (within 50 NM, at any height), and a manual selection stopped the automatic choice for 10 minutes. Now the FCOM rules apply.

## The rules

| ND mode | Default airport |
|---------|-----------------|
|---------|-----------------|


|                              |                                                                                                                                                                                                                              |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ARC, ROSE-NAV<br>(on ground) | The airport where the aircraft is.                                                                                                                                                                                           |
| ARC, ROSE-NAV<br>(in flight) | The <b>origin, destination or alternate</b> of the FMS while the aircraft is inside its virtual cylinder: <b>20 NM</b> radius, <b>5000 ft</b> above the airport. The OANS keeps it while the aircraft stays in the cylinder. |
| PLAN (in flight)             | The origin if it is closer than 50 NM, otherwise the destination; the destination when origin and destination are less than 300 NM apart.                                                                                    |
| Manual (ARPT SEL)            | Only in PLAN: another airport can be displayed. It stays until the ND leaves PLAN, or the aircraft lands or takes off. In ARC / ROSE-NAV the OANS says SET PLAN MODE.                                                        |

Each ND has its own OANS and its own airport (see A380X one OANS airport per side below): the rules apply to each ND by itself.


### What it looks like



**Figure 7.** In flight, 12 NM from the destination XTST at 3000 ft: the destination loads by itself (name top right; the arrow points to the airport, still outside the zoom range).

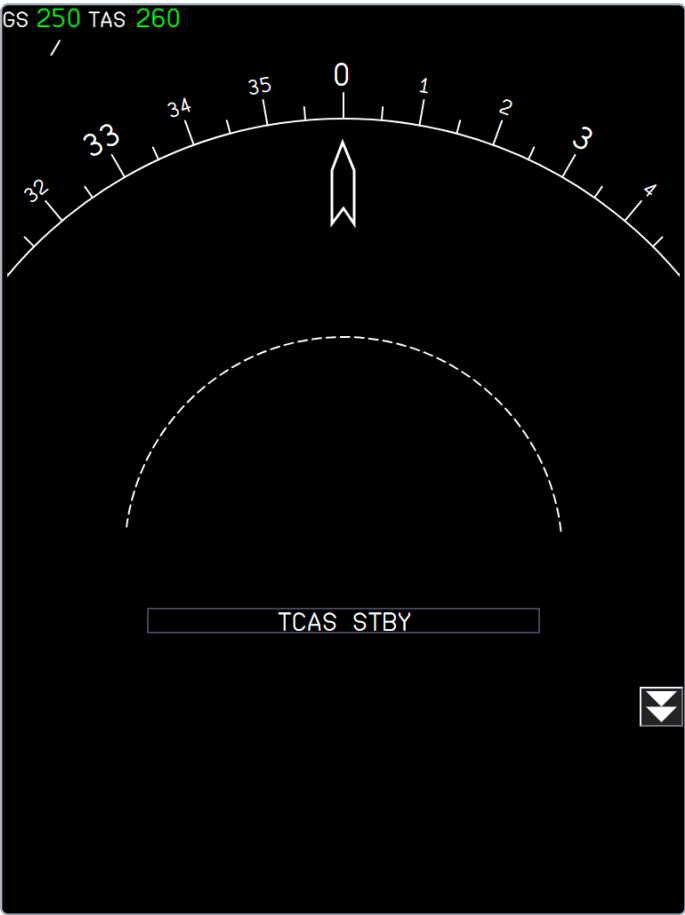

**Figure 8.** 30 NM away at 9000 ft: outside the cylinder, no airport is loaded.

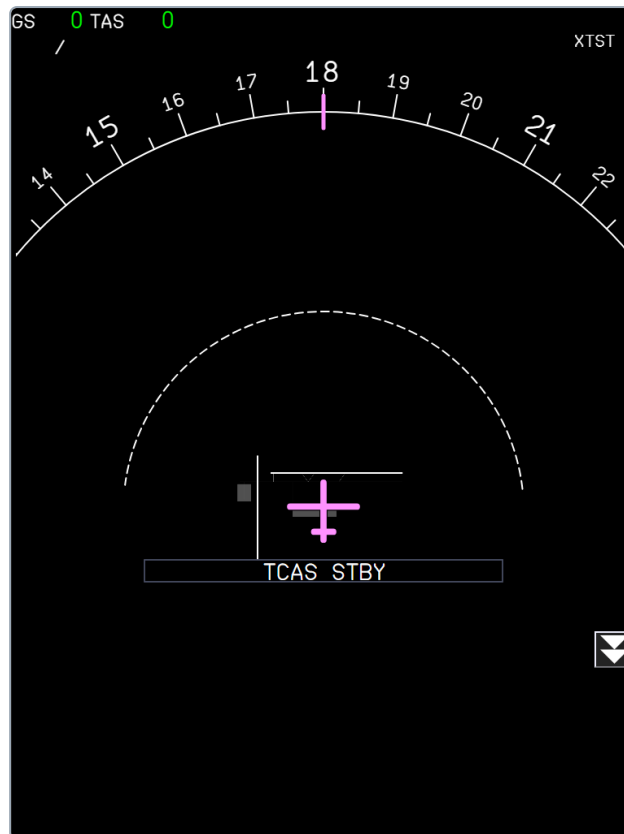

**Figure 9.** On ground at XTST: the current airport, with the aircraft at its gate.

## What to expect

| Situation                   | What you should see                                                                                                        |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------|
| On ground                   | The airport where you are, whatever the flight plan.                                                                       |
| Climbing out of the origin  | The origin until you leave its 20 NM / 5000 ft cylinder, then nothing (or the alternate / destination when inside theirs). |
| Approach to the destination | The destination from 20 NM and 5000 ft above it.                                                                           |
| Diversion to the alternate  | The alternate from 20 NM and 5000 ft above it.                                                                             |
| ARPT SEL in PLAN            | Your airport until you leave PLAN, land or take off.                                                                       |
| No present position         | No automatic airport.                                                                                                      |

## Limitations and why

| Limitation                                                     | Why                                                                                | What to do                    |
|----------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------|
| Needs the Navigraph airport database.                          | The OANS map is the Navigraph AMDB.                                                | Link Navigraph in the flyPad. |
| The Captain and F/O NDs can show different airports.           | Each side has its own OANS (FCOM DSC-34-10-70-10); see the airport per side below. | -                             |
| The destination arrow (5 NM range, map out of range) is FBW's. | Not part of this change.                                                           | -                             |

## How to use

1. Set the ND to ARC or ROSE-NAV and turn the range knob to **ZOOM**: the OANS shows the default airport by itself.

2. To look at another airport: ND in **PLAN**, open the OANS **ARPT SEL** panel, choose the airport. It stays until the ND leaves PLAN, or the aircraft lands or takes off.

## How to test

| # | Do this                                                                             | Expected result                                                                                                                       |
|---|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground at an airport with a Navigraph airport map; ND ARC, range ZOOM. | The OANS shows the airport where you are, whatever the flight plan.                                                                   |
| 2 | Take off and climb out (ND ARC ZOOM).                                               | The origin stays until you leave its 20 NM / 5000 ft cylinder, then no airport.                                                       |
| 3 | Approach the destination of the FMS flight plan.                                    | The destination loads by itself from 20 NM and 5000 ft above it.                                                                      |
| 4 | In flight, ND in PLAN.                                                              | The origin if it is closer than 50 NM, else the destination (the destination when origin and destination are less than 300 NM apart). |
| 5 | In PLAN, choose another airport with ARPT SEL, then set the ND back to ARC.         | Your airport while in PLAN; back in ARC ZOOM, the default airport again.                                                              |
| 6 | In ARC or ROSE-NAV, try ARPT SEL.                                                   | The OANS asks SET PLAN MODE.                                                                                                          |

## 4. A380X one OANS airport per side

**Aircraft:** A380X | **Where:** Captain and F/O NDs (OANS) | **Status:** Not sim-tested.

### What it is for

A380 FCOM DSC-34-10-70-10: there is a Captain's OANS (ADIRS 1, MMR 1, FMS 1) and a First Officer's OANS (side 2), each shown on its own ND. FBW loaded one airport for both NDs, so an airport chosen on one side replaced the airport of the other. Now each side displays its own airport.

### What you should see

| Situation                                            | What you should see                                                                                                                                               |
|------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Both NDs at ZOOM on the ground                       | Each OANS shows the current airport (each finds it by itself).                                                                                                    |
| F/O ND in PLAN, another airport chosen with ARPT SEL | The F/O ND shows that airport; the Captain ND keeps its own airport.                                                                                              |
| PLAN default airport                                 | Follows the mode of that ND only (before, it also looked at the other ND).                                                                                        |
| RWY AHEAD                                            | Still one advisory for the aircraft, computed by the Captain side OANS: from its airport map when the aircraft is within that airport, else from the sim runways. |
| An airport unloaded on one side                      | The BTV runway and exit selection is cleared only if it was made on that side.                                                                                    |

### Limitations and why

| Limitation                                                 | Why                                                                  | What to do |
|------------------------------------------------------------|----------------------------------------------------------------------|------------|
| The runway crossing and flag events are not split by side. | An item of the other side's airport is not found on this side's map. | -          |
| RWY AHEAD comes from the Captain side only.                | It is one advisory for the aircraft (one PFD / ND message word).     | -          |

## How to use

1. Use each ND's OANS as usual: ZOOM range for the default airport, PLAN + ARPT SEL for another one.
2. Each pilot can look at a different airport without changing the other's map.

## How to test

| # | Do this                                                                                    | Expected result                                                                      |
|---|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| 1 | A380X on the ground at an airport with a Navigraph airport map. Both NDs ARC, range ZOOM.  | Both NDs show the current airport.                                                   |
| 2 | Set the F/O ND to PLAN and choose another airport with the F/O OANS ARPT SEL.              | The F/O ND shows the chosen airport; the Captain ND still shows the current airport. |
| 3 | Set the Captain ND to PLAN and choose a third airport.                                     | Each ND shows its own choice.                                                        |
| 4 | Set both NDs back to ARC ZOOM.                                                             | Both go back to the current airport.                                                 |
| 5 | Select a BTV runway and exit on the Captain OANS, then unload the airport on the F/O side. | The Captain BTV selection stays.                                                     |

# A380X standby instruments (ISIS)

The lower ISIS becomes the Standby Navigation Display (SND) with its power-up test, and the MODE pb swaps the SFD and the SND between the two ISIS, back to normal at each power-up

|                  |                                                                                                                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X                                                                                                                                                                                                     |
| Where to find it | Centre instrument panel: the two ISIS (upper: SFD, lower: SND) and their MODE, MENU, LS/DIR TO, +/- and SET/SEL controls                                                                                  |
| Branch           | core/isis , based on master (FlyByWire master 255546cb0 merged in); independent.                                                                                                                          |
| Status           | SND tested in the sim by the user: OK (2026-09-29). SFD/SND reconfiguration tested by the user: OK (2026-10-02). SND power-up test and the normal configuration at power-up: not sim-tested (unit tests). |
| Pictures         | The SND instrument in the local browser harness, running the build of the branch, with ADIRU data typed in (the harness has no aircraft). No pictures for the power-up test and the reconfiguration.      |

1. Standby Navigation Display (SND)
2. SND power-up self-test
3. SFD/SND reconfiguration with the MODE pb
4. Normal ISIS configuration at each power-up

## 1. Standby Navigation Display (SND)

|           |       |        |            |         |                                                                |
|-----------|-------|--------|------------|---------|----------------------------------------------------------------|
| Aircraft: | A380X | Where: | Lower ISIS | Status: | Tested in the sim by the user: OK (2026-09-29). 10 unit tests. |
|-----------|-------|--------|------------|---------|----------------------------------------------------------------|

### What it is for

The A380 has two ISIS (integrated standby instrument systems): the upper one is the Standby Flight Display (SFD: attitude, speed, altitude), the lower one the **Standby Navigation Display** (SND): heading, position and a small navigation of its own, independent of the FMS (A380 FCOM DSC-34-10-20). On the FBW A380 the lower screen was black; it is now the SND.


The screen




**Figure 1.** The SND: ground speed, heading source IR3, heading rose with the yellow heading index and the green track diamond, aircraft symbol, position from ADIRU 3.

| Item                         | Meaning                                                                                          |
|------------------------------|--------------------------------------------------------------------------------------------------|
| GS 370                       | ground speed, kt                                                                                 |
| IR3                          | the heading comes from ADIRU 3 (IR1 when ADIRU 3 has none); <b>TRU</b> in cyan in true reference |
| Heading rose                 | 240° shown, a mark every 5°, numbers every 30°; white markers at 45° and 90°                     |
| Green diamond                | the aircraft track                                                                               |
| GPIR3 N 48 15.5 / E 003 32.3 | the aircraft position (degrees and minutes) and its source                                       |
| HDG, PPOS (amber)            | heading or position not available                                                                |



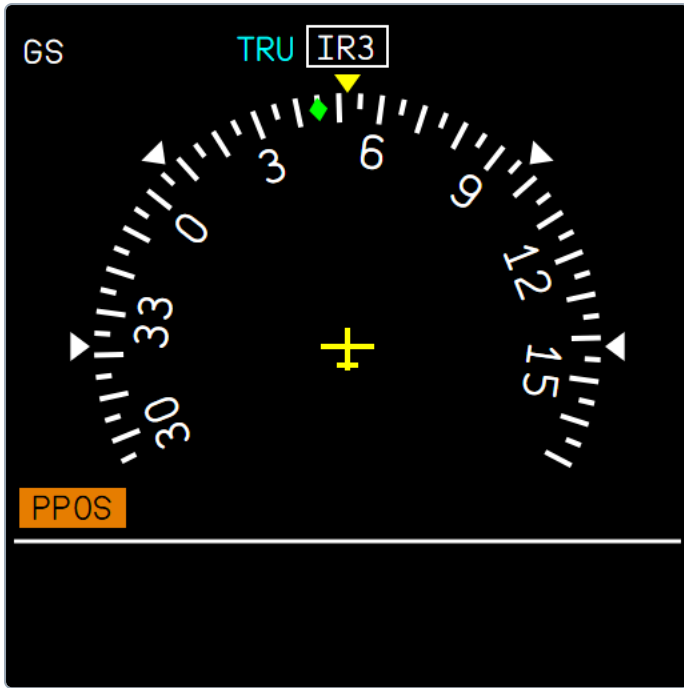

**Figure 2.** True reference (TRU), no position (PPOS), no ground speed.

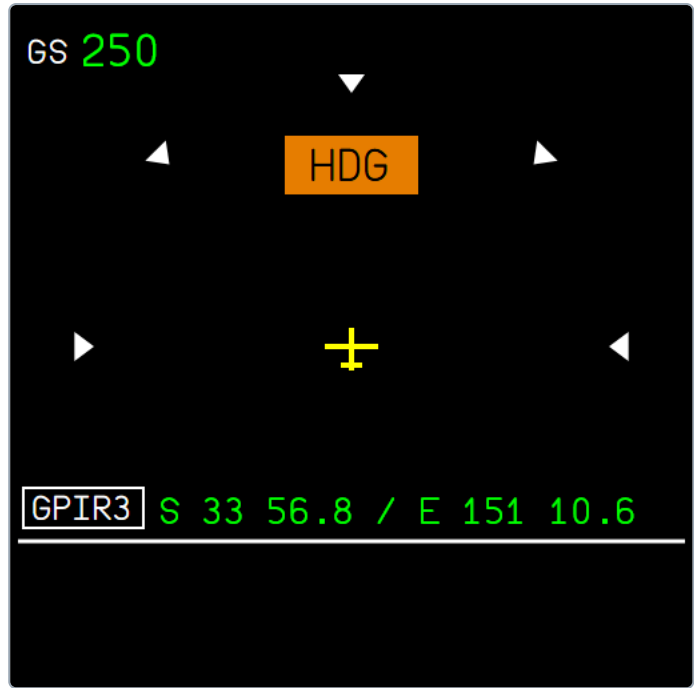

**Figure 3.** No heading from either ADIRU: HDG replaces the rose.

## Buttons

| Button       | Action                                                          |
|--------------|-----------------------------------------------------------------|
| MODE         | SFD/SND reconfiguration: see the feature below                  |
| + / -        | brightness                                                      |
| MENU         | opens the menu under the white line; press again to leave it    |
| SET/SEL knob | turn: next item or value; push: select, or go to the next field |
| LS/DIR TO    | DIR TO (see below); press again to leave it                     |

## The waypoint list

The SND has its own list of waypoints, entered by coordinates (it has no database). Press MENU: the menu shows INSERT WPT, INSERT FIX, EDIT WPT / FIX and CLEAR WPT / FIX in cyan; turn the knob to choose, push to select.

1. MENU, then push on **INSERT WPT**: the coordinates show, starting from the last waypoint (or your position).
2. Turn the knob to change the underlined field, push to go to the next one: N/S, degrees, minutes, tenths, then E/W, degrees, minutes, tenths.
3. Push on the last field: the waypoint is added at the end of the list.



Figure 4. The menu: INSERT WPT.



Figure 5. Entering the coordinates: the degrees of latitude being set.

EDIT and CLEAR WPT / FIX: turn to choose the waypoint ("2/3 N5015/E00232", then the FIX last), push to edit or to delete it.

### DIR TO and the navigation

1. Press **LS/DIR TO**. With a list, turn to choose the waypoint and push. Without a list, enter the coordinates of the point as above.
2. The navigation starts from your position: FROM, TO (white) and NEXT under the line, the bearing and distance to the TO waypoint top right, and the course on the rose.
3. Passing abeam the TO waypoint, the SND goes on to the next one.



Figure 6. Two waypoints, navigation not active: the true bearing and distance between them.



Figure 7. After DIR TO: FROM / TO / NEXT, TO WPT 342° 126 NM, the course arrow.



**Figure 8.** About 5 NM right of the track: the deviation bar one large mark left of the aircraft (large marks every 5 NM, small every 2.5 NM).

## The FIX

One point you want to watch (a beacon, an airport): MENU, **INSERT FIX**, enter its coordinates. The SND shows its distance top left, a magenta pointer towards it on the rose, and its coordinates in magenta at the bottom of the list. A new FIX replaces the old one; EDIT / CLEAR WPT / FIX offer it after the waypoints.



**Figure 9.** A FIX alone: 291 NM, bearing 060°.



**Figure 10.** The FIX together with a DIR TO: FROM / TO / NEXT / FIX.

## Limitations and why

| Limitation                                   | Why                                                                                                   |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------|
| No automatic SFD/SND reconfiguration         | FBW has no ISIS display failure; the MODE pb reconfigures by hand (see SFD/SND reconfiguration below) |
| The list is lost when the flight is reloaded | the ISIS keeps it while it runs                                                                       |

|                                                          |                                                                                   |
|----------------------------------------------------------|-----------------------------------------------------------------------------------|
| Position source always GPIR                              | the FBW ADIRS has no separate GPS / IRS positions yet                             |
| Coordinate entry, 10 waypoints at most, sequencing abeam | the FCOM figures of these procedures stop at the first frame: this is our reading |

## How to use

1. Read heading, track, ground speed and position on the lower ISIS.
2. Waypoints: **MENU**, **INSERT WPT**, set the coordinates with the SET/SEL knob (turn to change, push for the next field).
3. **LS/DIR TO**, choose a waypoint and push: the SND guides you there (TO WPT bearing and distance, course, deviation bar).
4. One point to watch: MENU, **INSERT FIX**. EDIT / CLEAR WPT / FIX to change the list.
5. + / - for the brightness.

## How to test

| # | Do this                                                                  | Expected result                                                                                                                     |
|---|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X powered, ADIRS aligned (NAV). Look at the lower ISIS.              | GS, IR3 (or IR1), the heading rose with the yellow heading index and the green track diamond, GPIR3 and the position at the bottom. |
| 2 | Press the <b>TRUE</b> north reference pushbutton (MAG / TRUE).           | TRU in cyan; heading and track in true. Press again: back to magnetic.                                                              |
| 3 | Press <b>MENU</b> .                                                      | INSERT WPT, INSERT FIX, EDIT WPT / FIX, CLEAR WPT / FIX in cyan.                                                                    |
| 4 | Push the SET/SEL knob on INSERT WPT; turn and push through the 8 fields. | The waypoint is added to the list under the white line.                                                                             |
| 5 | Add a second waypoint the same way.                                      | The true bearing and distance between the two show in the list.                                                                     |
| 6 | Press <b>LS/DIR TO</b> , choose the first waypoint, push.                | FROM / TO / NEXT, TO WPT bearing and distance top right, the course arrow on the rose.                                              |
| 7 | Fly off the course by about 5 NM.                                        | The deviation bar moves one large mark (5 NM) from the aircraft.                                                                    |
| 8 | MENU, INSERT FIX, enter a point.                                         | FIX distance top left, a magenta pointer towards it, its coordinates in magenta at the bottom.                                      |
| 9 | Press + and -.                                                           | Brighter, dimmer.                                                                                                                   |

## 2. SND power-up self-test

**Aircraft:** A380X | **Where:** Lower ISIS | **Status:** Not sim-tested (2 unit tests). It was installed with the SFD/SND reconfiguration that the user tested on 2026-10-02, with no separate record.

### What it is for

The two ISIS of the A380 are the same unit, SFD or SND (A380 FCOM DSC-34-10-20-10). The SFD (upper ISIS) already ran its power-up tests: a yellow INIT box and a countdown for 90 seconds. The SND came on at once. It now behaves as the SFD. The A380 FCOM gives no time: the 90 s and the 10 s below are the ones of the FBW SFD.

## What you should see

| Situation                                           | What you should see                                                                                                            |
|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Cold and dark spawn, first power-up                 | INIT and the seconds left in a yellow box for 90 s; HDG and PPOS flags meanwhile; then the normal SND.                         |
| Spawn with the aircraft powered (runway, cruise...) | The SND is on at once, no test.                                                                                                |
| Power loss                                          | The display stays on for 10 s; power back within 10 s: no new test. Longer: off, and the tests run again at the next power-up. |
| Power supply                                        | As the SFD: DC ESS bus, or DC HOT 1 above 50 kt.                                                                               |

## How to use

1. Nothing to do: after a cold and dark start, wait for the end of INIT (90 s) before using the SND.

## How to test

| # | Do this                                                        | Expected result                                                                     |
|---|----------------------------------------------------------------|-------------------------------------------------------------------------------------|
| 1 | A380X cold and dark. Switch the batteries on (DC ESS powered). | The upper (SFD) and lower (SND) ISIS both show INIT with a countdown from 90.       |
| 2 | Wait 90 seconds.                                               | The SND shows its rose; HDG / PPOS flags until the ADIRS give heading and position. |
| 3 | Remove the power for less than 10 seconds, then restore it.    | The SND stays on; no new INIT.                                                      |
| 4 | Remove the power for more than 10 seconds, then restore it.    | The SND goes off, then runs INIT again for 90 s.                                    |
| 5 | Spawn on a runway (powered).                                   | The SND is on at once, without INIT.                                                |

## 3. SFD/SND reconfiguration with the MODE pb

**Aircraft:** A380X | **Where:** MODE pb of either ISIS | **Status:** Tested in the sim by the user: OK (2026-10-02). 2 unit tests.

## What it is for

A380 FCOM DSC-34-10-20-20-10: the MODE pb "enables to switch from SFD to SND display or to switch off the corresponding standby display". Before, MODE only switched the SND off and on. Now each press goes to the next configuration, and one SFD is always displayed. Both ISIS screens carry both displays; the knob and the pushbuttons of an ISIS act on the display it shows.

## What you see

| MODE pressed | Upper ISIS (1) | Lower ISIS (2)       |
|--------------|----------------|----------------------|
| Normal       | SFD            | SND                  |
| 1st press    | SND            | SFD                  |
| 2nd press    | SFD            | off                  |
| 3rd press    | SFD            | SND (back to normal) |

- The SND waypoint list, DIR TO and FIX are the same whichever ISIS shows the SND.
- On the SFD, the **MENU** pb opens the BUGS page (the A380 FCOM puts the bugs in the SFD menu); the A320 ATT RST on that pb is gone (not in the A380 FCOM).

## Limitations and why

| Limitation                                     | Why                                                                                             | What to do                        |
|------------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------|
| No automatic reconfiguration.                  | The FCOM reconfigures automatically on an SFD display failure; FBW has no ISIS display failure. | Use the MODE pb.                  |
| A full MSFS restart is needed after an update. | The cockpit behaviour files and panel.cfg change.                                               | Restart the sim after installing. |

## How to use

1. Press **MODE** on either ISIS to go to the next configuration (swapped, SND off, normal).
2. Use the knob and the pushbuttons of the ISIS that shows the display you want to work on.

## How to test

| # | Do this                                                                | Expected result                                                                    |
|---|------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1 | A380X powered, both ISIS after INIT. Upper ISIS: SFD, lower ISIS: SND. | Normal configuration.                                                              |
| 2 | Press <b>MODE</b> on the lower ISIS.                                   | The upper ISIS shows the SND, the lower one the SFD.                               |
| 3 | Turn the knob of the upper ISIS (now SND), press its MENU.             | The SND menu opens on the upper ISIS; the waypoint list is the one entered before. |
| 4 | Press MENU on the lower ISIS (now SFD).                                | The SFD BUGS page.                                                                 |
| 5 | Press MODE again.                                                      | Upper ISIS SFD, lower ISIS off.                                                    |
| 6 | Press MODE again.                                                      | Back to normal: upper SFD, lower SND.                                              |

## 4. Normal ISIS configuration at each power-up

**Aircraft:** A380X | **Where:** Both ISIS | **Status:** Not sim-tested (2 unit tests).

### What it is for

The configuration chosen with the MODE pb survived a power cycle: an ISIS could come back swapped or off. The ISIS now start in the normal configuration (upper ISIS SFD, lower ISIS SND) at each power-up. The FCOM (DSC-34-10-20-10) says nothing about it: this is a design choice.

### What you should see

| Situation                                | What you should see                                |
|------------------------------------------|----------------------------------------------------|
| ISIS off, then powered (they run INIT)   | Normal configuration, whatever MODE showed before. |
| Power loss shorter than the 10 s standby | The configuration is kept (not a power-up).        |
| Spawn with the aircraft powered          | The configuration is not changed by the spawn.     |

## How to use

1. Nothing to do: after a power-up the ISIS are back to normal; use MODE again if you need another configuration.

## How to test

| # | Do this | Expected result |
|---|---------|-----------------|
|---|---------|-----------------|

|   |                                                                                                |                                                                 |
|---|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| 1 | A380X powered, both ISIS on. Press MODE once.                                                  | Upper ISIS SND, lower ISIS SFD.                                 |
| 2 | Remove the power for more than 10 seconds (batteries and external power off), then restore it. | Both ISIS run INIT; after it, upper SFD and lower SND (normal). |
| 3 | Press MODE once, then remove the power for less than 10 seconds and restore it.                | The swapped configuration is kept.                              |

# Lights: strobe and beacon timing, interior lighting presets

The wing strobes flash the double flash of the real Airbus LED strobes, the A380X beacons flash halfway between the strobes, and the flyPad interior lighting presets save and load again

|                  |                                                                                                                                                                                                                                                                                              |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX and A380X                                                                                                                                                                                                                                                                              |
| Where to find it | Exterior lights: overhead EXT LT panel, STROBE and BEACON switches, seen from the outside view; interior lighting presets: flyPad > Presets > Interior Lighting                                                                                                                              |
| Branch           | core/lights, based on master (FlyByWire master 255546cb0 merged in); independent.                                                                                                                                                                                                            |
| Status           | Strobe and beacon timing checked in the sim by the user at night on both aircraft: OK (2026-10-02). Lighting presets tested in the sim on the A32NX (save, load of a saved row, load of an unsaved row at 50 %): OK (2026-10-04); the A380X uses the same fixed code but was not sim-tested. |
| Pictures         | No pictures: a flash timing does not show on a still picture, and the presets page is the stock FBW flyPad page.                                                                                                                                                                             |

## 1. Strobe double flash and beacon phase

**Aircraft:** A32NX and A380X | **Where:** EXT LT panel: STROBE ON, BEACON ON; outside view | **Status:** Checked in the sim by the user at night on both aircraft ("both look right", 2026-10-02).

### What it is for

The FCOM gives no flash rates (A320 DSC-33-20-20, A380 DSC-33-30-20); the A380 FCOM only says that the strobes and the beacons alternate. The timing of the real lights comes from the Collins LED light data: a wing strobe double flash of 50 ms on, 60 ms off, 50 ms on, about 60 times a minute, the beacons flashing between the strobes. The FBW effects had a 50 ms gap (A32NX) and a 150 ms gap (A380X) in the double flash, and the A380X beacons flashed too close to the strobes.

### What changed

| Light                     | Before                      | Now                                                              |
|---------------------------|-----------------------------|------------------------------------------------------------------|
| A32NX wing strobes        | double flash 50-50-50 ms    | double flash <b>50-60-50 ms</b> , 60 per minute (unchanged rate) |
| A380X wing strobes        | double flash 50-150-50 ms   | double flash <b>50-60-50 ms</b> , 45 per minute (unchanged rate) |
| A380X beacons             | at +0.5 s in a 1.33 s cycle | at <b>+0.67 s</b> : exactly halfway between two strobe flashes   |
| A32NX beacon, tail strobe | -                           | unchanged (beacon already halfway, at +0.5 s in a 1 s cycle)     |

### Limitations and why

| Limitation                                     | Why                                                                                             | What to do                        |
|------------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------|
| The A380X keeps its 45 flashes per minute.     | There is no A380 source for the rate; 45 per minute is inside the Collins LED range (45 +/- 2). | -                                 |
| A full MSFS restart is needed after an update. | The effect files (.fx) are loaded at sim start.                                                 | Restart the sim after installing. |

### How to use

- Nothing to set: switch the **STROBE** and **BEACON** lights ON on the overhead EXT LT panel as usual.



How to test

| # | Do this                                                                                                                                               | Expected result                                                                                                                                                            |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at night (or dusk), on the ground. Switch <b>STROBE ON</b> and <b>BEACON ON</b> . Go to an outside view that shows a wing tip and the fuselage. | Each wing strobe gives a crisp double flash (two short flashes very close together) about once a second.                                                                   |
| 2 | Watch the beacon and the strobes together.                                                                                                            | The beacon flashes halfway between two strobe double flashes: strobe, beacon, strobe, beacon, evenly spaced.                                                               |
| 3 | Repeat with the A380X.                                                                                                                                | Same crisp double flash of the wing strobes, a little slower (45 per minute); the beacons (top and belly) flash exactly halfway between the strobes, not right after them. |

2. Interior lighting presets save and load again

|                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> flyPad > Presets > Interior Lighting   <b>Status:</b> Tested in the sim by the user on the A32NX: save, load of a saved row, load of an unsaved row at 50 %: OK (2026-10-04). Not sim-tested: the load with no presets file yet (fresh install), and the A380X (same code). Native unit tests: extra-backend test/run_tests.sh. |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

The flyPad interior lighting presets did nothing or the wrong thing on both aircraft, because of three bugs in the C++ extra-backend:

- **No preset was ever saved.** The shared ini library refused the existing work folder (it read the mkdir result the wrong way), so every save failed silently and no presets file was written. It now accepts an existing folder. The FADEC fuel configuration save uses the same library and benefits too.
- **An unsaved row faded every light to off.** Loading a row that was never saved left the target values unset, so every light, the PFD, ND, ECAM and MCDU brightness included, faded to 0. Such a row now loads the default preset, **all lights at 50 %**, as the flyPad page says. The A32NX default also had its DCDU and MCDU values in the wrong scale (0.5 instead of 50).
- **A load before the first save failed.** With no presets file yet (fresh install), a load now gives the default 50 % preset instead of leaving the lights untouched.

What you should see

| Situation                                                | What you should see                                                                         |
|----------------------------------------------------------|---------------------------------------------------------------------------------------------|
| Save Preset on a row (aircraft powered)                  | The current lighting levels are stored; the row loads them later, also after a sim restart. |
| Load Preset on a saved row                               | The cockpit lights and display brightness fade to the saved levels.                         |
| Load Preset on a row never saved                         | Every light and display brightness fades to 50 %; nothing goes dark.                        |
| Automatic loading (Day / Dawn/Dusk / Night set to a row) | The selected row loads as above: its saved levels, or 50 % if it was never saved.           |

Limitations and why

| Limitation                                 | Why                                   | What to do                |
|--------------------------------------------|---------------------------------------|---------------------------|
| Presets saved before the fix do not exist. | No save ever reached the file before. | Save the rows again once. |

|                                                |                                        |                                   |
|------------------------------------------------|----------------------------------------|-----------------------------------|
| The aircraft must be powered to save or load.  | Stock flyPad rule.                     | Power the aircraft first.         |
| A full MSFS restart is needed after an update. | The extra-backend WASM module changes. | Restart the sim after installing. |

## How to use

1. Power the aircraft and set the cockpit lights and display brightness as you like.
2. Open flyPad > Presets > Interior Lighting, optionally rename a row, and press **Save Preset** on it.
3. Later, press **Load Preset** on that row to get the same lighting back.

## How to test

| # | Do this                                                                                                                                                                                                              | Expected result                                                                             |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| 1 | A32NX (or A380X) powered, on the ground. Set the panel and flood lights and the display brightness to clearly different levels. flyPad > Presets > Interior Lighting: press <b>Save Preset</b> on row 1 and confirm. | The save completes.                                                                         |
| 2 | Change the lights, then press <b>Load Preset</b> on row 1.                                                                                                                                                           | The lights and displays fade back to the saved levels.                                      |
| 3 | Press <b>Load Preset</b> on a row that was never saved.                                                                                                                                                              | Every light and display brightness fades to 50 %: the PFD, ND, ECAM and MCDU stay readable. |
| 4 | Restart the sim, power the aircraft and load row 1 again.                                                                                                                                                            | The saved levels come back (the presets file was written).                                  |

# Fire warnings and the ENG FIRE pushbutton

The A32NX fire warnings come only from a detected fire or the FIRE TEST, and the ENG FIRE pushbutton closes the engine LP fuel valve on both aircraft, so the engine runs down as in the FCOM

|                  |                                                                                                                                                                                                                                                                                                                             |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX (fire warnings, LP fuel valve) and A380X (LP fuel valve)                                                                                                                                                                                                                                                              |
| Where to find it | Overhead FIRE panel (ENG and APU FIRE pushbuttons, AGENT pushbuttons, TEST); E/WD; SD FUEL page                                                                                                                                                                                                                             |
| Branch           | core/fire, based on master (FlyByWire master 255546cb0 merged in); independent of the other core branches. core/failures-a32nx merges it in (its fire failures use these warnings).                                                                                                                                         |
| Status           | All three features tested in the sim by the user on their feature branches (merged into develop): OK (2026-10-03); the A32NX LP valve starvation again on develop 2026-10-05 (engine failures test T9, verified live). The core branch itself was not sim-tested (its fire warning commit is adapted to the FWC of master). |
| Pictures         | No pictures: the warnings and the SD FUEL page are the stock FBW displays.                                                                                                                                                                                                                                                  |

## 1. A32NX fire warnings only from a detected fire or the FIRE TEST

**Aircraft:** A32NX | **Where:** E/WD, master warning, overhead FIRE panel | **Status:** Tested in the sim by the user on the feature branch: OK (2026-10-03), with an engine fire set through SimConnect. Not sim-tested on this branch (adapted to the FWC of master).

### What it is for

The ENG 1 FIRE, ENG 2 FIRE and APU FIRE warnings were raised by the FIRE TEST *or by the FIRE pushbutton*. Releasing (pushing) a FIRE pushbutton without any fire showed the fire warning: a regression of the FBW E/WD port. On the aircraft the fire warning comes from the fire detection or the FIRE TEST only (A320 FCOM DSC-26-20-10). The warnings now use the sim fire signals that the red FIRE pushbutton lights already read (ENG ON FIRE:1/2, APU ON FIRE DETECTED).

- The fire chime is a normal red warning chime: **MASTER WARN** cancels it (FCOM DSC-31-10), and pushing the FIRE pushbutton silences it (FCOM DSC-26-20-20).
- The forced master warning and chime of the FIRE TEST pushbuttons are unchanged.
- The **APU AGENT AFTER 10 S** countdown now starts with the **APU FIRE** pushbutton (FCOM PRO-ABN-APUF). Before, it started from the ENG 2 FIRE pushbutton and the ENG 1 AGENT 1 pushbutton (a copy-paste error).

### What you should see

| Situation                                  | What you should see                                                                 |
|--------------------------------------------|-------------------------------------------------------------------------------------|
| ENG or APU FIRE pushbutton pushed, no fire | No fire warning, no chime (before: ENG / APU FIRE warning).                         |
| Engine fire detected                       | ENG 1(2) FIRE warning, master warning, continuous chime, red FIRE pushbutton light. |
| MASTER WARN pressed during the fire        | The chime stops; the warning stays on the E/WD.                                     |
| FIRE pushbutton pushed during the fire     | The chime stops (the pushbutton silences the aural).                                |
| APU fire, APU FIRE pushbutton pushed       | The APU AGENT AFTER 10 S line counts down from the APU FIRE pushbutton.             |
| FIRE TEST pushbutton held                  | Same as before: test warnings, master warning, chime, lights.                       |

## Limitations and why

| Limitation                                            | Why                                                                                                                        | What to do                                                               |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| A fire set in the sim stays on while the engine runs. | MSFS keeps ENG ON FIRE at 1 while the engine turns and ignores the extinguish event; FBW AGENT pushbuttons do not send it. | Stop the engine (ENG MASTER OFF, or the LP valve below) to end the fire. |
| There is no flyPad fire failure on this branch.       | The fire detection model and the fire failures are on <code>core/failures-a32nx</code> .                                   | Use that branch, or set the sim variable with a SimConnect tool.         |

## How to use

1. Nothing to set: the warnings follow the fire detection.
2. In a fire, follow the ECAM: MASTER WARN to silence, then the ENG FIRE procedure (ENG MASTER OFF, FIRE pushbutton PUSH, AGENT 1 after 10 s...).

## How to test

| # | Do this                                                                                                                                                                             | Expected result                                                                                               |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, engines running, no fire. Push (release) the <b>ENG 1 FIRE</b> pushbutton on the overhead.                                                                     | No ENG 1 FIRE warning on the E/WD, no master warning, no chime. Reset the pushbutton afterwards.              |
| 2 | Push the <b>APU FIRE</b> pushbutton with the APU running and no fire.                                                                                                               | No APU FIRE warning, no chime.                                                                                |
| 3 | Hold the <b>ENG 1 FIRE TEST</b> pushbutton.                                                                                                                                         | ENG 1 FIRE test warning, master warning, chime and the FIRE pushbutton light, as before.                      |
| 4 | Start an engine 1 fire: set the sim variable <code>ENG ON FIRE:1</code> to 1 with a SimConnect tool (or, with <code>core/failures-a32nx</code> , the flyPad engine 1 fire failure). | ENG 1 FIRE warning in red, master warning flashing, continuous chime, red light in the ENG 1 FIRE pushbutton. |
| 5 | Press <b>MASTER WARN</b> .                                                                                                                                                          | The chime stops and the master warning goes off; the ENG 1 FIRE warning and its procedure stay on the E/WD.   |
| 6 | Start the fire again, then push the ENG 1 FIRE pushbutton without pressing MASTER WARN.                                                                                             | The chime stops when the pushbutton is pushed.                                                                |
| 7 | With an APU fire, push the APU FIRE pushbutton.                                                                                                                                     | The APU AGENT AFTER 10 S line counts down from that moment (not from the ENG 2 FIRE pushbutton).              |

## 2. A32NX: the ENG FIRE pushbutton closes the LP fuel valve

**Aircraft:** A32NX | **Where:** Overhead ENG FIRE pushbuttons; SD FUEL page | **Status:** Tested in the sim by the user: OK (2026-10-03): the engine starved, then restarted with IGN/START; again on develop 2026-10-05 (FIRE pb pushed: LP valve 0 %, residual fuel burned, engine down after about 2 min, verified live).

## What it is for

A32NX FCOM DSC-28-10-30: "The LP fuel valve is closed by either the engine master switch or the ENG FIRE PUSH pushbutton". Nothing linked the FIRE pushbutton to a fuel valve, so an engine kept running for ever with its FIRE pushbutton pushed. Each engine now has its LP valve: closed by the ENG MASTER switch OFF or the ENG FIRE pushbutton, with the 1.7 s travel of the engine valves.

Once the valve is closed, the fuel left between the valve and the engine is burned at the engine fuel flow. The FCOM ENG FIRE procedure says the engine stops "UP TO 2 MIN 30 S" after the LP valve closes, when that fuel is burned

(PRO-ABN-ENG). The amount is sized on the lowest ground idle fuel flow (14 100 ft ISA), so the engine stops after about 99 s at a sea-level idle, sooner at higher thrust. The fuel is refilled when the valve opens again.

What you should see

| Situation                                       | What you should see                                                                                                                                                                |
|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ENG FIRE pushbutton pushed, ENG MASTER still ON | SD FUEL: the LP valve symbol closes (crossline). The engine keeps running on the remaining fuel, then shuts down (about 1 min 40 s at sea-level idle, never more than 2 min 30 s). |
| ENG MASTER OFF                                  | The LP valve closes too (the engine also shuts down through its HP valve, as before).                                                                                              |
| Engine starved                                  | The FADEC handles it as a closed fuel valve: shutdown, no relight while starved.                                                                                                   |
| FIRE pushbutton reset and ENG MASTER ON again   | The LP valve opens, the line refills, the engine can be restarted with the normal start (IGN/START).                                                                               |

Limitations and why

| Limitation                                     | Why                                                                                                            | What to do                        |
|------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-----------------------------------|
| A full MSFS restart is needed after an update. | The systems and FADEC WASM modules and flight_model.cfg / systems.cfg change (new MSFS fuel valves 13 and 14). | Restart the sim after installing. |

How to use

1. In an engine fire, follow the ECAM procedure: **ENG MASTER OFF**, then **ENG FIRE pushbutton PUSH**. Both close the LP valve.
2. Watch the LP valve on the **SD FUEL** page: green inline = open, amber crossline = closed.

How to test

| # | Do this                                                                                                            | Expected result                                                                                                                                             |
|---|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, engines running at idle. Open the SD <b>FUEL</b> page.                                        | Both LP valve symbols green, inline (open).                                                                                                                 |
| 2 | Push the <b>ENG 1 FIRE</b> pushbutton. Leave the ENG 1 MASTER switch ON. Start a timer.                            | The ENG 1 LP valve symbol turns to an amber crossline within about 2 s (amber while in transit). No fire warning (no fire). Engine 1 keeps running for now. |
| 3 | Wait, watching N1 / N2 and the fuel flow of engine 1.                                                              | Engine 1 runs down by itself after about 1 min 40 s (sea level idle), never later than 2 min 30 s.                                                          |
| 4 | Reset the ENG 1 FIRE pushbutton, set ENG MASTER 1 OFF, then restart the engine with IGN/START and ENG MASTER 1 ON. | The LP valve opens again (green inline) and the engine starts normally.                                                                                     |
| 5 | Set ENG MASTER 2 OFF on a running engine.                                                                          | The ENG 2 LP valve closes on the SD and the engine shuts down as before.                                                                                    |

3. A380X: the ENG FIRE pushbutton closes the LP fuel valve

|                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> Overhead ENG FIRE pushbuttons; SD FUEL page   <b>Status:</b> Tested in the sim by the user: OK (2026-10-03). |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|

## What it is for

A380 FCOM DSC-28-10 ENGINE LP VALVES: "The ENG MASTER sw control the LP valves. The LP valves automatically close, when their associated ENG FIRE pb is pushed." Pushing an ENG FIRE pushbutton closed no valve, so the engine kept running. The four engines now have the same logic as the A32NX, with a 3 s valve travel.

The A380 FCOM gives no shutdown delay. The fuel left after the valve is the 1 gallon tank the FBW fuel model already has between each LP valve and its engine: the engine stops about **17 s** after the pushbutton at a sea-level idle (about 24 s at 14 100 ft).

## What you should see

| Situation                  | What you should see                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------|
| ENG FIRE pushbutton pushed | The engine LP valve closes; the engine shuts down after about 17 s at idle; no start or relight while it is starved. |
| SD FUEL page               | LP valve per FCOM DSC-28-20: green inline = open, amber inline = abnormally open, amber crossline = closed.          |
| ENG MASTER switches        | Unchanged: they still open and close their engine valves as before.                                                  |

## Limitations and why

| Limitation                                     | Why                                                                                                     | What to do                        |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------|-----------------------------------|
| A full MSFS restart is needed after an update. | The systems and FADEC WASM modules, flight_model.cfg and systems.cfg change (new feed valves 60 to 63). | Restart the sim after installing. |

## How to use

1. In an engine fire, follow the ECAM: **ENG MASTER OFF, ENG FIRE pushbutton PUSH.**
2. Check the LP valve of that engine on the **SD FUEL** page.

## How to test

| # | Do this                                                                      | Expected result                                                          |
|---|------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| 1 | A380X on the ground, four engines at idle. Open the SD <b>FUEL</b> page.     | Four LP valves green, inline.                                            |
| 2 | Push the <b>ENG 1 FIRE</b> pushbutton, ENG MASTER 1 left ON. Start a timer.  | The ENG 1 LP valve turns to an amber crossline after about 3 s.          |
| 3 | Watch engine 1.                                                              | It runs down by itself about 17 s after the pushbutton (sea-level idle). |
| 4 | Try to restart engine 1 with the FIRE pushbutton still pushed.               | No start: the engine is starved.                                         |
| 5 | Reset the FIRE pushbutton, ENG MASTER 1 OFF then ON with the start selector. | The valve opens (green) and the engine starts.                           |

# A380X MFD FMS and SURV pages

Every A380X MFD FMS and SURV page on its FCOM figure with the FCOM entry formats, the missing pages and functions (FUEL PLANNING, computed ALTN fuel, printing, DIRECT TO options, pilot-stored elements), the KCCU keyboard rules and the SURV memos

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X (the shared flight plan code of DIRECT TO, the 50 waypoint limit and the company winds is also in the A32NX FMS, unchanged for it)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Where to find it | MFD FMS pages (ACTIVE, POSITION, SEC INDEX, DATA menus) and SURV pages; KCCU; E/WD memos; flyPad Settings > Realism and Dispatch > Printouts                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Branch           | core/a380x-mfd-fms, based on core/surveillance (stacked: needs core/surveillance merged first). core/a380x-atccom-datalink, core/fuel, core/gps, core/a380x-interactive-nd and core/efb-performance are stacked on it, and core/a380x-wxr-controls merges it in.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Status           | FMS pages used in the sim since September 2026; tested in the sim by the user: FUEL PLANNING (2026-10-02), DEST EFOB fix (2026-09-26), printing (2026-09-26 and 2026-10-02), SEC page fix (2026-09-27), clickable checkboxes (2026-09-26). Computed ALTN fuel seen in the user's sim screenshots (2026-09-28). Not sim-tested: EXTRA time, company fuel figures, pilot-stored elements kept across sessions, 50 waypoint limit, DIRECT TO options, KCCU entry and switch rules (checked in the browser harness only), SURV memos, SURV page layout as a whole, company winds and FIX INFO fixes. Unit tests: 34 (DIRECT TO 10, pilot-stored elements 17, ALTN fuel 5, waypoint limit 2). |
| Pictures         | Captain MFD and flyPad in the local browser harness, running the full development build installed in the sim (pages that other core branches extend may show their extra items). The harness has no navigation database and no flight plan, so most values are dashes or amber boxes; the DIRECT TO geometry is a drawing. No pictures for the features without an old manual.                                                                                                                                                                                                                                                                                                           |

1. MFD FMS pages to the FCOM

2. FUEL PLANNING: minimum BLOCK computed and confirmed

3. DEST EFOB before takeoff without the TAXI fuel, ALTN EFOB units

4. Computed ALTN fuel and time

5. EXTRA time and the FINAL holding fuel flow

6. Fuel figures of the company flight plan

7. FMS print functions and the flyPad printouts

8. Pilot-stored elements kept across sessions
9. 50 pilot-stored waypoints

10. DIRECT TO options: ABEAM, CRS IN, CRS OUT

11. KCCU keyboard entries: ENT validates, ESC cancels

12. KCCU KBD and CCD switches: FCOM rules, ON by default

13. SURV pages laid out and wired per the FCOM

14. SURV memos, and TCAS STBY with ALT RPTG OFF

15. FMS function fixes: SEC pages, company winds, FIX INFO, STORE WPT, RTE SEL, WIND levels

16. MFD display fixes: sizes, labels, menus and clickable controls

## 1. MFD FMS pages to the FCOM

|                                                                                                                                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> MFD FMS pages, both sides   <b>Status:</b> Built in September 2026 and used in the sim since; individual pages were fixed after the in-sim checks (see the two fix features at the end). |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Every FMS page of the MFD is laid out on its figure of the A380 FCOM (DSC-22-FMS-20-30, PDF pages 1009 to 1409), the fields accept the FCOM entry formats, and the pages and functions the FCOM describes and FBW did not have are added.

### What changed, in short

- Layout:** each page is placed on its figure of the A380 FCOM (DSC-22-FMS-20-30, the 2011 KAL FCOM): field positions, 40 px entry fields, 22.5 px labels, 38 px tab bar, the title bar. Where FBW followed a newer FMS standard than this FCOM, the FCOM figure was followed.
- Entry formats:** every field accepts the FCOM entry formats (DSC-22-FMS-20-100) and answers with the FCOM messages (FORMAT ERROR, ENTRY OUT OF RANGE, NOT IN DATABASE...).

- **New pages:** ALTERNATE, CLOSEST AIRPORTS, OFFSET, EQUI-TIME POINT, LL XING / TIME MKR, WIND, the POSITION pages, DATA / WAYPOINT, NAVAID, ROUTE, PRINTER, company requests (wind, flight plan, report, takeoff data), TRANSFER TO MAILBOX, REJECTED ATC INFO.
- **New functions:** FUEL PLANNING with CONFIRM BLOCK, LRC and MAX TURB speeds, VERT REV RTA, FMS P/N, pilot-stored elements, automatic airway connection, printing.

The menus at the top of the FMS pages give access to everything: **ACTIVE** (the active flight plan and its pages), **POSITION**, **SEC INDEX** (the secondary flight plans) and **DATA**.

## ACTIVE menu

### INIT

The screenshot shows the 'FMS 1' INIT page. At the top, there are four menu buttons: 'ACTIVE', 'POSITION', 'SEC INDEX', and 'DATA'. Below these is a header bar labeled 'ACTIVE/INIT'. The main area contains several input fields and buttons:

- FLT NBR:** A field with eight orange boxes.
- ACFT STATUS:** A button.
- CPNY F-PLN REQUEST:** A button.
- FROM:** A field with four orange boxes.
- TO:** A field with four orange boxes.
- ALTN:** A field with four dashes.
- CPNY RTE:** A field with eight orange boxes.
- RTE SEL:** A button.
- ALTN RTE:** A field with eight dashes.
- ALTN RTE SEL:** A button.
- CRZ FL:** A field with 'FL' and three dashes.
- CRZ TEMP:** A field with three dashes and '°C'.
- CI:** A field with three dashes.
- TROPO:** A field with '36090 FT'.
- TRIP WIND:** A field with four dashes.
- WIND:** A button.
- CPNY WIND REQUEST:** A button.
- IRS:** A button.
- DEPARTURE:** A button.
- RTE SUMMARY:** A button.
- NAVAIDS:** A button.
- FUEL&LOAD:** A button.
- T.O. PERF:** A button.
- CPNY T.O. REQUEST:** A button.
- MSG LIST:** A button at the bottom left.

**Figure 1.** INIT: every button is live. CPNY F-PLN REQUEST (flight plan from the airline, i.e. SimBrief), RTE SEL / ALTN RTE SEL (route selection from the stored and company routes), CPNY WIND REQUEST, CPNY T.O. REQUEST, WIND, and the shortcuts IRS, DEPARTURE, NAVAIDS, FUEL&LOAD, T.O. PERF and RTE SUMMARY.

- Amber boxes are mandatory entries; blue dashes are optional ones.
- **CPNY RTE:** type a stored or company route of the city pair: it is inserted; otherwise NOT IN DATABASE.
- **RTE SUMMARY** stores the active route as a pilot-stored route (DATA / ROUTE).



FUEL&LOAD and FUEL PLANNING

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

---

.

-

T

CG

---

.

-

%

FOB

---

.

-

T

ZFW

000.0

T

ZFWCG

00.0

%

BLOCK

000.0

T

FUEL  
PLANNING \*

TAXI

1.5

T

PAX NBR

000

TRIP

---

.

-

T

---

:

---

CI

---

RTE RSV

---

.

-

T

5.0

%

JTSN GW

---

.

-

T

ALTN

0.0

T

---

:

---

TOW

---

.

-

T

FINAL

6.0

T

00:30

LW

---

.

-

T

UTC

EFOB

MIN FUEL AT DEST

DEST

NONE

---

:

---

---

.

-

T

6.0

T

ALTN

NONE

---

:

---

---

.

-

T

EXTRA

---

.

-

T

---

:

---

RETURN

MSG  
LIST

**Figure 2.** FUEL&LOAD. FUEL PLANNING (next to BLOCK) is available when the flight plan and the weights allow the predictions.

**FUEL PLANNING** computes the minimum block fuel from the FMS predictions (trip, reserves, alternate, final, taxi) and offers **CONFIRM BLOCK**, which inserts it (FCOM P 179; see the FUEL PLANNING feature below). The EXTRA line shows what is left above the minimum.

PERF

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/PERF

CRZ

FL 000

OPT FL ---

REC MAX FL ---

T.O

CLB

CRZ

DES

APPR

GA

RWY ---

T.O SHIFT --- M

V1

000 KT

F --- KT

☒ TOGA

VR

000 KT

S --- KT

☐ FLEX

V2

000 KT

O --- KT

☐ DERATED

FLAPS

---

THS FOR

00.0 %

PACKS

ON

ANTI-ICE

OFF

THR RED

----- FT

ACCEL

----- FT

NOISE

TRANS

----- FT

EO ACCEL

----- FT

CPNY T.O REQUEST

RETURN

POS MONITOR

MSG LIST

Figure 3. PERF T.O with the company takeoff data button (the flyPad takeoff calculator that answers it is on core/efb-performance ).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/PERF

CRZ

FL 000

OPT FL ---

REC MAX FL ---

T.O

CLB

CRZ

DES

APPR

GA

CI ---

| MODE     | MACH | SPD    | AT STEP TO FL |
|----------|------|--------|---------------|
| PRESEL   | .--  | --- KT |               |
| MANAGED  | .85  | --- KT | ---:-- --- NM |
| LRC      | .--  | --- KT |               |
| MAX TURB | .--  | --- KT |               |

DEST

---

---:--

---. T

CMS

STEP ALTs

RETURN

POS MONITOR

MSG LIST

Figure 4. PERF CRZ: MANAGED, PRESEL, and the LRC and MAX TURB speeds.

- **LRC** (long range cruise): the Mach giving 99 % of the maximum specific range (FCOM PER-IFT).
- **MAX TURB**: the recommended speed for flying in turbulence.

F-PLN and its revisions

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN

FROM

UTC

SPD

ALT

RK

DIST

FPA

P.POS

--:--

---

---

DISCONTINUITY

END OF F-PLN

NO ALTN F-PLN

DEST

F-PLN INFO

DIR TO

MSG  
LIST

Figure 5. F-PLN without a flight plan: P.POS, DISCONTINUITY, END OF F-PLN, NO ALTN F-PLN.

Click a waypoint name to open the lateral revision menu, a speed/altitude to open the vertical revision. The new pages below open from these menus or from F-PLN INFO.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/ALTERNATE

DATA FROM

-----

TO ALTN

CO RTE

DIR TRK

DIST

EXTRA

SELECTED

DATABASE

NO ALTN

OTHER ALTN

-----

-----

RETURN

MSG LIST

**Figure 6.** ALTERNATE: the selected alternate, the database alternates with their company route, track, distance and EXTRA fuel, and two OTHER ALTN fields.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/CLOSEST AIRPORTS

DATA FROM P.POS

TO ARPTs

DIST

BRG

UTC

EFOB

EFF WIND

CLOSEST ARPTs

OTHER ARPT

-----

RETURN

MSG LIST

**Figure 7.** CLOSEST AIRPORTS: the 4 closest airports from P.POS with distance, bearing, UTC, EFOB and effective wind, and up to three OTHER ARPTs.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/OFFSET

START WPT

END WPT

INTERCEPT ANGLE

P.POS

-----

30°

OFFSET DIST

-- NM


☐ LEFT
☐ RIGHT

RETURN

CANCEL OFFSET\*

MSG LIST

**Figure 8.** OFFSET: start and end waypoints, distance LEFT / RIGHT, intercept angle (30° by default), CANCEL OFFSET.

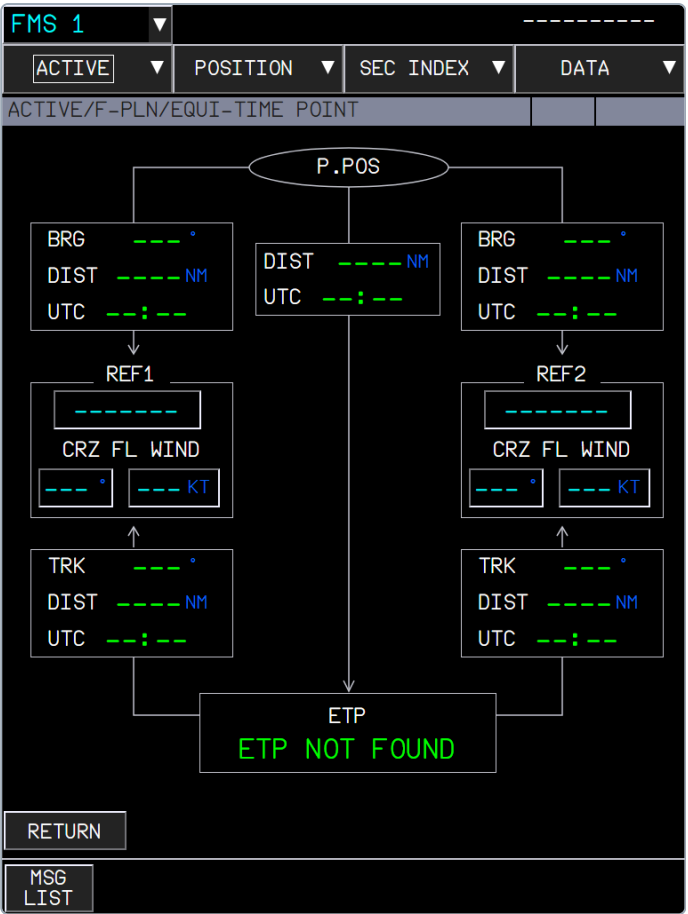

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/LL XING-TIME MKR

LAT/LONG XING

START WPT

---

▼

☒ LAT

---

☐ LONG

INCREMENT

1

NUMBER

--

INSERT AS WPT\*

TIME MKR

UTC

REMAINING TIME

AURAL ALERT

---:---:--

---:---:--

☐

RETURN

MSG LIST

**Figure 10.** LL XING / TIME MKR: a waypoint at every LAT or LONG crossing (start, increment, number, INSERT AS WPT); a time marker with remaining time and an aural alert.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/VERT REV

RTA

SPD

CMS

ALT

STEP ALTs

RTA AT

---

▼

DIST

---

NM

ETT

---:---:--

ETA

---

---

---

RTA

☐ AT

☐ AT OR BEFORE

☐ AT OR AFTER

RTA SPD

.

---

---

KT

RETURN

MSG LIST

**Figure 11.** VERT REV, RTA tab: time at a waypoint (AT, AT OR BEFORE, AT OR AFTER), ETA and the speed to meet it; the time error thresholds of the FCOM apply.

|                      |          |           |      |
|----------------------|----------|-----------|------|
| FMS 1                |          | -----     |      |
| ACTIVE               | POSITION | SEC INDEX | DATA |
| ACTIVE/F-PLN/AIRWAYS |          |           |      |
| AIRWAYS FROM         |          |           |      |
| <div></div>          |          |           |      |
|                      |          | ▲         | ▼    |
| RETURN               |          |           |      |
| MSG LIST             |          |           |      |

**Figure 12.** AIRWAYS: up to 31 segments; typing the next airway after a waypoint connects the two airways automatically at their intersection.

WIND and the company requests

FMS 1

-----

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/WIND

HISTORY

CLB

CRZ

DES

CLB WIND

----- FT

----- \* ----- KT

----- FT

----- \* ----- KT

----- FT

----- \* ----- KT

----- FT

----- \* ----- KT

----- FT

----- \* ----- KT

CPNY WIND REQUEST

MSG LIST

Figure 13. WIND: HISTORY (winds recorded in the last flight), CLB, CRZ (per waypoint, 4 levels and the SAT), DES; CPNY WIND REQUEST at the bottom.

FMS 1

-----

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY WIND DATA REQUEST

FREE TEXT

-----

SEND WIND REQUEST \*

RETURN

MSG LIST

Figure 14. COMPANY WIND DATA REQUEST: free text and SEND WIND REQUEST.



FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY F-PLN REQUEST

FLT NBR

CPNY RTE

FREE TEXT

SEND F-PLN REQUEST \*

RETURN

MSG LIST

**Figure 15.** COMPANY F-PLN REQUEST: flight number, company route, free text.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY F-PLN REPORT

FREE TEXT

SEND REPORT TO CPNY \*

RETURN

MSG LIST

**Figure 16.** COMPANY F-PLN REPORT: free text, SEND REPORT TO CPNY.

#### NOTE

The company functions use SimBrief (flight plan) and the flyPad (takeoff data). A request without a company able to answer ends after a timeout with the FCOM message.

POSITION menu

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/MONITOR

ACCURACY LOWEPU --.---RNP --.---

FMS1 00°00.0N/000°00.0E

RADIO --°--./--°--.

MIXIRS --°--./--°--.

GPIRS --°--./--°--.

FMS2 00°00.0N/000°00.0E

DEVIATION FROM FMS1

IRS1 --°--./--°--.

IRS2 --°--./--°--.

IRS3 --°--./--°--.

GPS1 00°00.0N/000°00.0E

GPS2 00°00.0N/000°00.0E

BRG / DIST TO

POSITION UPDATE

FREEZE POSITION \*

RETURN

NAVAIDS

GPS

IRS

MSG LIST

Figure 17. MONITOR: FMS1/2, RADIO, MIXIRS, GPIRS, IRS and GPS positions, accuracy, EPU and RNP, FREEZE POSITION, BRG / DIST TO.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/IRS

IRS ALIGNING ON GPS POS: 00°00.0N/000°00.0E

ALIGN ON OTHER REF

IRS 1 OFF

IRS 2 OFF

IRS 3 OFF

IRS1

IRS2

IRS3

FREEZE ALL IRS \*

POSITION 00°00.0N/000°00.0E

T.TRK 0.0°T

GND SPD 0.0KT

T.WIND 0.0° / 0.0KT

T.HDG 0.0°T

MAG HDG 0.0°

MAG VAR 0.0°E

GPIRS POSITION 00°00.0N/000°00.0E

ACCURACY ---FT

RETURN

MSG LIST

Figure 18. IRS: alignment, the three IRS with their data, FREEZE ALL IRS.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/NAVAIDS

TUNED FOR DISPLAY

SELECTED FOR FMS NAV

VOR 1

VOR 2

----

IDENT

----.-

FREQ

---- °

CRS

CLASS

ADF 1

----

IDENT

----.-

FREQ

☐ BFO

LS

IDENT

----

FREQ/CHAN

----.-

CRS

---- °

SLOPE

---- °

CLASS

DESELECT GLIDE \*

RETURN

MSG LIST

**Figure 19.** NAVAIDS: tuned for display (VOR, ADF, LS) and selected for FMS NAV, DESELECT GLIDE.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/GPS

GPS 1

GPS 2

00°00.0N/000°00.0E

00°00.0N/000°00.0E

NAV

MODE

NAV

9

NBR OF SAT

10

40FT

ACCURACY

43FT

0.0 °T

TRK

0.0 °T

00:00:00

UTC

00:00:00

0FT

ALT

0FT

0KT

GND SPD

0KT

RETURN

MSG LIST

**Figure 20.** GPS: both receivers: position, mode, satellites, accuracy, track, UTC, altitude, ground speed.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/TIME

UTC

00:00:00

DATE

---

FLT TIME

--:--

BLK TIME

--:--

OUT

--:--

OFF

--:--

ON

--:--

IN

--:--

PERM DATA SETUP

UTC ONLY

MSG LIST

**Figure 21.** TIME: UTC, date, flight and block time, OUT / OFF / ON / IN, and PERM DATA SETUP (what the permanent data shows).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

POSITION/REPORT

UTC

ALT

LAST SEQD WPT

---

---

TO WPT

---

---

NEXT WPT

---

---

LAST SEQD WPT

SAT

---

°C

T.WIND

---

°

/

---

KT

FOB

---

.

---

T

NEXT CRZ PROFILE CHANGE

NONE

DEST

NONE

FREE TEXT

---

SEND REPORT TO CPNY\*

MSG LIST

**Figure 22.** REPORT: last, to and next waypoints with time and altitude, the last sequenced waypoint data, the next cruise profile change, destination.

**NOTE**

The TIME page is not in the 2011 FCOM; it follows a later FMS standard at the user's request.

SEC INDEX

FMS 1

ACTIVE POSITION SEC INDEX DATA

SEC/INDEX

SEC 1

SEC 2

SEC 3

IMPORT

CPNY F-PLN REQUEST

F-PLN

PERF

WIND

FUEL&LOAD

INIT

DELETE \*

XFER TO MAILBOX \*

PRINT \*

MSG LIST

**Figure 23.** SEC INDEX: SEC 1 / 2 / 3, IMPORT, CPNY F-PLN REQUEST into a SEC, the pages of the SEC, DELETE, XFER TO MAILBOX and PRINT.

FMS 1

ACTIVE POSITION SEC INDEX DATA

TRANSFER TO MAILBOX

FREE TEXT

XFER TO MAILBOX \*

RETURN

MSG LIST

**Figure 24.** TRANSFER TO MAILBOX: sends the SEC flight plan to the ATC mailbox with a free text.

**REJECTED ATC INFO** (FCOM P 321-323) lists the elements of an ATC flight plan inserted in SEC 3 that the FMS rejected, 4 per page. MSFS cannot send an ATC flight plan, so the list stays empty.

DATA menu

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

DATA/STATUS

ACFT STATUS

FMS P/N

A380-800

ENGINETRENT 972

IDLE +0.0

PERF +0.0

MODIFY

NAV DATABASE

ACTIVE

SWAP \*

SECOND

PILOT STORED ELEMENTS

WAYPOINTS 00

ROUTES 00

DELETEDELETE ALL \*

NAVAIDS 00

RUNWAYS 00

MSG LIST

**Figure 25.** STATUS: aircraft and engine, IDLE / PERF factors (FMS P/N tab), navigation database SWAP, and the count of the pilot-stored elements with DELETE ALL.

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

DATA/PRINTER

ACTIVE DATA

CPNY DATA

AUTO PRINT ON RECEPTION

F-PLN INITPRINT\*

F-PLN INIT

T.O DATAPRINT\*

T.O DATA

WIND DATAPRINT\*

WIND DATA

ACTIVE F-PLN REPORT

AUTO PRINT

PRE-FLIGHTPRINT\*

PRE-FLIGHT

IN-FLIGHTPRINT\*

IN-FLIGHT

POST-FLIGHTPRINT\*

POST-FLIGHT

SEC F-PLN REPORT

SEC 1PRINT\*

SEC 1

SEC 2PRINT\*

SEC 2

SEC 3PRINT\*

SEC 3

MSG LIST

**Figure 26.** PRINTER: print the F-PLN INIT, T.O and wind data, the active and SEC flight plan reports, and the AUTO PRINT options.

FMS 1

-----

ACTIVE

POSITION

SEC INDEX

DATA

DATA/WAYPOINT

DATABASE WPTs

PILOT STORED WPTs

WPT IDENT

0000000

MSG

LIST

**Figure 27.** WAYPOINT: database waypoints by ident; pilot-stored waypoints (lat/long, place/bearing/distance, place-bearing/place-bearing), NEW WPT.

FMS 1

-----

ACTIVE

POSITION

SEC INDEX

DATA

DATA/NAVAID

DATABASE NAVAIDS

PILOT STORED NAVAIDS

NAVAID IDENT

0000

MSG

LIST

**Figure 28.** NAVAID: database nav aids (class, position, frequency, ILS course and slope...); pilot-stored nav aids, NEW NAVAID.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/ROUTE

DATABASE RTEs

PILOT STORED RTEs

FROM

0000

TO

0000

RTE IDENT

-----

0/0

◀

▶

↑

↓

MSG LIST

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/AIRPORT

DATABASE ARPTs

PILOT STORED RWYs

ARPT IDENT

-----

MSG LIST

**Figure 29.** ROUTE: database (company) routes of a city pair, pilot-stored routes with their summary, NEW RTE, DELETE.

**Figure 30.** AIRPORT: database airports, and the PILOT STORED RWYs tab.

The printouts appear in the flyPad printouts list (see the print feature below).

What to expect

| Situation                                | What you should see                                                       |
|------------------------------------------|---------------------------------------------------------------------------|
| An entry in a wrong format               | FORMAT ERROR in the message area; the field keeps its value.              |
| A value out of the FCOM range            | ENTRY OUT OF RANGE.                                                       |
| A waypoint or navaid not found           | NOT IN DATABASE (or the NEW WPT / NEW NAVAID page when the FCOM says so). |
| A company request with no company answer | The FCOM timeout message after a few minutes.                             |
| A page not available in the flight phase | Its button is greyed.                                                     |

Limitations and why

| Limitation                                                     | Why                                                                                                    | What to do                              |
|----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|-----------------------------------------|
| The layout follows the 2011 A380 FCOM.                         | It is the reference available; later FMS standards differ in places.                                   | Report a difference with its FCOM page. |
| Some values are FBW model stand-ins.                           | For example GPS satellites and accuracy, like on the A32NX MCDU GPS page; MSFS does not simulate them. | -                                       |
| Company functions answer only through SimBrief and the flyPad. | There is no airline datalink in MSFS.                                                                  | -                                       |



Pilot-stored nav aids cannot be tuned. The radio tuning uses the MSFS nav aids only.

-

## How to use

1. Open the FMS pages with the MFD menus: **ACTIVE** (F-PLN, PERF, FUEL&LOAD, WIND, INIT), **POSITION**, **SEC INDEX**, **DATA**.
2. Fill the amber boxes (mandatory) and the blue dashes you need (optional), in the FCOM formats.
3. Open the flight plan revisions by clicking a waypoint (lateral) or a speed / altitude (vertical) on F-PLN.
4. Read a wrong entry's message in the message area (FORMAT ERROR gives the expected format), clear it with CLR INFO.

## How to test

| # | Do this                                                                                   | Expected result                                                                                                                                   |
|---|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X powered on the ground, MFD on. MFD > ACTIVE > INIT.                                 | The INIT page as its picture above: CPNY F-PLN REQUEST, RTE SEL, ALTN RTE SEL, CPNY WIND REQUEST, CPNY T.O. REQUEST, the shortcuts at the bottom. |
| 2 | Type <b>ABC</b> in the TROPO field of INIT (or any altitude field).                       | FORMAT ERROR with the expected format in the message area; the field keeps its value.                                                             |
| 3 | Type <b>99999</b> in TROPO.                                                               | ENTRY OUT OF RANGE.                                                                                                                               |
| 4 | With a flight plan: F-PLN, click a waypoint, open the revision menu.                      | The menu items open the new pages: ALTERNATE, CLOSEST AIRPORTS, OFFSET, EQUI-TIME POINT, LL XING / TIME MKR, AIRWAYS, FIX INFO, HOLD.             |
| 5 | AIRWAYS: type an airway, then the next airway right after it.                             | The two airways are connected at their intersection automatically.                                                                                |
| 6 | PERF > CRZ.                                                                               | The LRC and MAX TURB speeds are shown.                                                                                                            |
| 7 | Open POSITION > MONITOR, IRS, NAVAIDS, GPS, TIME, REPORT.                                 | Each page as its figure in the POSITION menu section.                                                                                             |
| 8 | Open DATA > STATUS, PRINTER, WAYPOINT, NAVAID, ROUTE, AIRPORT.                            | Each page as its figure; DATA / STATUS counts the pilot-stored elements.                                                                          |
| 9 | ACTIVE > WIND: CPNY WIND REQUEST, SEND WIND REQUEST (SimBrief account set in the flyPad). | The company winds come back from SimBrief for insertion; without an answer, the FCOM timeout message.                                             |

## 2. FUEL PLANNING: minimum BLOCK computed and confirmed

**Aircraft:** A380X | **Where:** MFD > ACTIVE > FUEL&LOAD | **Status:** Tested in the sim by the user: OK (2026-10-02); the click and convergence fixes user-confirmed in the sim on 2026-09-26.

### What it is for

The FUEL PLANNING button of FUEL&LOAD (A380 FCOM DSC-22-FMS-20-30 P 179) could not be activated and did nothing. It now computes the minimum block fuel and offers CONFIRM BLOCK to enter it.

- **Available** before engine start, with a flight plan and a cruise flight level, the ZFW and ZFWCG entered and no BLOCK entered by the crew.

- **BLOCK = TAXI + TRIP + RTE RSV + MIN FUEL AT DEST.** The TRIP comes from the flight plan predictions, which need a fuel on board: they run with a trial BLOCK, replaced by the result until two computations in a row agree within 50 kg (no result after 8 iterations). A prediction is used only when it was computed with the current trial fuel (before, the first prediction still at the VNAV starting estimate of 4000 lb made the BLOCK grow by about 18 t per iteration: CYUL-CYVR 197.9 t instead of about 63 t).
- While it runs (about 20 to 30 s, several prediction cycles) the button reads **COMPUTING...**, greyed. Not in the FCOM: the real FMS computes the BLOCK at once.
- The minimum BLOCK shows in yellow next to the BLOCK field and the button becomes **CONFIRM BLOCK**, which enters it. A BLOCK entry or an engine start ends the fuel planning.
- FUEL PLANNING did not react at first: the hidden CONFIRM BLOCK at the same place took the click. Hidden FCOM page elements no longer take clicks (checked on 16 FMS and SURV pages).

### Limitations and why

| Limitation                              | Why                                                                                  | What to do                 |
|-----------------------------------------|--------------------------------------------------------------------------------------|----------------------------|
| A few seconds of <b>COMPUTING...</b>    | The FBW predictions need a fuel on board, so the BLOCK is found by iteration.        | Wait for the yellow value. |
| The TRIP comes from the FBW VNAV model. | It can differ from a SimBrief OFP (the user measured the model lower than SimBrief). | Compare with your OFP.     |

### How to use

1. Before engine start, with the flight plan, cruise FL, ZFW and ZFWCG entered, open ACTIVE > FUEL&LOAD.
2. Press **FUEL PLANNING** and wait for the yellow minimum BLOCK.
3. Press **CONFIRM BLOCK** to enter it (or type your own BLOCK).

### How to test

| # | Do this                                                                                                               | Expected result                                                                                                                                                                          |
|---|-----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X at the gate, engines off. Flight plan with a cruise FL, ZFW and ZFWCG entered, BLOCK empty. ACTIVE > FUEL&LOAD. | <b>FUEL PLANNING</b> * next to BLOCK is active.                                                                                                                                          |
| 2 | Press FUEL PLANNING.                                                                                                  | The button reads <b>COMPUTING...</b> , greyed, for about 20 to 30 s.                                                                                                                     |
| 3 | Wait.                                                                                                                 | A yellow BLOCK value next to the BLOCK field; the button reads <b>CONFIRM BLOCK</b> . The value is about TAXI + TRIP + RTE RSV + MIN FUEL AT DEST of the page (not tens of tonnes more). |
| 4 | Press <b>CONFIRM BLOCK</b> .                                                                                          | The BLOCK is entered (big cyan); EXTRA is about 0.                                                                                                                                       |
| 5 | Clear the BLOCK, start an engine, look at the button.                                                                 | FUEL PLANNING is no longer available after engine start.                                                                                                                                 |

## 3. DEST EFOB before takeoff without the TAXI fuel, ALTN EFOB units

|                        |                                                     |                                                                |
|------------------------|-----------------------------------------------------|----------------------------------------------------------------|
| <b>Aircraft:</b> A380X | <b>Where:</b> MFD FUEL&LOAD, PERF, F-PLN, ALTERNATE | <b>Status:</b> Tested in the sim by the user: OK (2026-09-26). |
|------------------------|-----------------------------------------------------|----------------------------------------------------------------|

### What it is for

- Before takeoff the predictions start from the BLOCK, which still holds the TAXI fuel. The DEST EFOB is now BLOCK - TAXI - TRIP, as the FCOM FUEL&LOAD formulas (EXTRA, LW) and the A32NX FMS do. This also corrects the ALTN

EFOB, the DEST EFOB BELOW MIN check, the PERF page DEST EFOB and the ALTERNATE page EXTRA.

- FUEL&LOAD: the ALTN EFOB in tonnes was set as kilograms (136.3 t displayed 0.1 t).

## How to use

1. Nothing to set: read DEST EFOB and ALTN EFOB on FUEL&LOAD as usual.

## How to test

| # | Do this                                                                                                       | Expected result                                                       |
|---|---------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| 1 | A380X before takeoff, flight plan with alternate, ZFW and BLOCK entered, TAXI e.g. 1.5 t. ACTIVE > FUEL&LOAD. | DEST EFOB = BLOCK - TAXI - TRIP (1.5 t less than before this fix).    |
| 2 | Read the ALTN EFOB.                                                                                           | A realistic tonnage (e.g. a few tonnes below DEST EFOB), never 0.1 t. |
| 3 | Open PERF and the ALTERNATE page.                                                                             | The same DEST EFOB on PERF; the ALTERNATE EXTRA uses it.              |

## 4. Computed ALTN fuel and time

**Aircraft:** A380X | **Where:** MFD FUEL&LOAD (ALTN line), F-PLN > ALTERNATE | **Status:** No dedicated sim test; the computed ALTN fuel shows in the user's sim screenshots of the fuel audit (RJTT-RKSI, 2026-09-28: ALTN 4.1 t / 0:11 for a 67 NM alternate). Unit tests: 5.

### What it is for

The block fuel includes the fuel to divert to the alternate. FBW used a fixed 6.5 t, whatever the alternate. The A380 FCOM (DSC-22-FMS-20-30, FUEL&LOAD page) defines the ALTN fuel as the fuel (and time) for the trip from the primary destination to the landing at the alternate, computed with **CI 0**, at **FL220** when the alternate route is shorter than 200 NM and **FL310** otherwise. This is what the FMS computes now.

Where you see it

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

CG

FOB

ZFW

ZFWCG

BLOCK

FUEL PLANNING \*

TAXI

PAX NBR

TRIP

CI

RTE RSV

JTSN GW

ALTN

TOW

FINAL

LW

UTC

EFOB

MIN FUEL AT DEST

DEST

ALTN

EXTRA

RETURN

MSG LIST

**Figure 31.** FUEL&LOAD: the ALTN line gets its fuel and its time; the arrival at the alternate (destination + ALTN time) is under ALTN in the UTC column.

- The distance is the alternate flight plan distance, without its missed approach; without an alternate route, the direct distance.
- The weight is the weight at the destination (ZFW + MIN FUEL AT DEST), with the ALTN wind of the WIND page.
- No ZFW: no default ALTN fuel. The value is recomputed only when its inputs change.

How much to expect

Results of the predictor for an alternate close to sea level, fuel on board 12.5 t at the destination (fuel in tonnes / time in minutes / cruise level):

| Alternate distance | ZFW 300 t              | ZFW 344 t         | ZFW 344 t, 30 kt headwind | ZFW 344 t, 30 kt tailwind |
|--------------------|------------------------|-------------------|---------------------------|---------------------------|
| 60 NM              | 2.3 t / 13 min / FL140 | 2.3 / 13 / FL120  | 2.5 / 14                  | 2.1 / 12                  |
| 100 NM             | 3.7 / 19 / FL220       | 3.7 / 19 / FL200  | 4.0 / 21                  | 3.4 / 18                  |
| 150 NM             | 4.9 / 26 / FL220       | 5.1 / 27 / FL220  | 5.5 / 29                  | 4.8 / 25                  |
| 199 NM             | 6.1 / 34 / FL220       | 6.3 / 34 / FL220  | 6.8 / 37                  | 5.9 / 32                  |
| 200 NM             | 6.3 / 32 / FL310       | 6.5 / 33 / FL310  | 6.9 / 36                  | 6.2 / 31                  |
| 300 NM             | 8.5 / 46 / FL310       | 8.8 / 46 / FL310  | 9.4 / 50                  | 8.3 / 44                  |
| 400 NM             | 10.8 / 59 / FL310      | 11.1 / 59 / FL310 | 11.8 / 64                 | 10.4 / 56                 |
| 500 NM             | 13.0 / 72 / FL310      | 13.3 / 73 / FL310 | 14.2 / 78                 | 12.5 / 68                 |

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/ALTERNATE

DATA FROM

TO ALTN

CO RTE

DIR TRK

DIST

EXTRA

SELECTED

DATABASE

NO ALTN

OTHER ALTN

RETURN

MSG LIST

**Figure 32.** ALTERNATE page: the fuel to each alternate (EXTRA column) uses the same computation.

- At 200 NM the level jumps from FL220 to FL310 (the FCOM rule): the time drops a little, the fuel rises a little.
- Short alternates (60-100 NM) fly lower than FL220: the cruise level is lowered until the climb and the descent fit in the distance.
- The old fixed value, 6.5 t, is about right only for an alternate 200 NM away.

### The computation

- Climb at climb thrust, cruise, idle descent, with the aircraft's VNAV prediction models (the same as the FMS predictions).
- Climb speeds of the A380 FMS: 290 kt climb and cruise, 288 kt descent, M0.84, 250 kt below FL100.

### What to expect

| Situation                                 | What you should see                                                             |
|-------------------------------------------|---------------------------------------------------------------------------------|
| No ZFW entered                            | ALTN fuel shown as dashes (no default).                                         |
| Alternate route entered                   | ALTN fuel and time from its distance; the arrival time at the alternate in UTC. |
| No alternate route, alternate airport set | Computed on the direct distance.                                                |
| ALTN wind entered                         | More fuel with a headwind, less with a tailwind.                                |

### Limitations and why

| Limitation                            | Why                                                                                 | What to do |
|---------------------------------------|-------------------------------------------------------------------------------------|------------|
| One mean wind for the alternate trip. | The FCOM computation uses the ALTN wind of the WIND page.                           | -          |
| No holding or approach fuel in ALTN.  | The FCOM definition ends at the landing at the alternate; FINAL covers the reserve. | -          |

### How to use

1. Enter the ZFW and an alternate (INIT ALTN, or an alternate route), and the ALTN wind on the WIND page if known.
2. Read the ALTN fuel and time on FUEL&LOAD; the arrival time at the alternate is under ALTN in the UTC column.

### How to test

| # | Do this                                                                        | Expected result                                                                                                                                   |
|---|--------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X, flight plan with destination, no ZFW. ACTIVE > FUEL&LOAD.               | ALTN fuel as dashes (no default).                                                                                                                 |
| 2 | Enter the ZFW (e.g. 300 t) and an alternate about 100 NM from the destination. | ALTN fuel and time computed, in the range of the table above (about 3.7 t / 19 min at 100 NM); the UTC column shows the arrival at the alternate. |
| 3 | Choose an alternate about 300 NM away.                                         | About 8.5 t / 46 min (FL310 from 200 NM on).                                                                                                      |
| 4 | Enter a 30 kt ALTN headwind on the WIND page.                                  | The ALTN fuel rises (and falls with a tailwind).                                                                                                  |
| 5 | Open F-PLN > ALTERNATE.                                                        | The EXTRA column of each alternate uses the same computation.                                                                                     |

## 5. EXTRA time and the FINAL holding fuel flow

|                                                                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> MFD FUEL&LOAD (EXTRA line)   <b>Status:</b> Not sim-tested (checked in the browser harness: 7.4 t shows 00:37, 12.0 t shows 01:00). |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## EXTRA time

The EXTRA time next to the EXTRA fuel (FCOM: the fuel, and time, that remains after landing at the destination, minus the MIN FUEL AT DEST) was never computed and always showed --:--. It is now the time the EXTRA fuel lasts at the holding fuel flow of the FINAL fuel default, **0.2 t/min** (30 min = 6 t): 7.4 t of EXTRA shows 00:37, 12.0 t shows 01:00.

|                  |          |                 |                  |
|------------------|----------|-----------------|------------------|
| FMS 1            |          | -----           |                  |
| ACTIVE           | POSITION | SEC INDEX       | DATA             |
| ACTIVE/FUEL&LOAD |          |                 |                  |
| GW               | ---      | CG              | ---              |
| ZFW              | 0.0 T    | ZFWCG           | 0.0 %            |
| BLOCK            | 000.0 T  | FUEL PLANNING * |                  |
| TAXI             | 1.5 T    | PAX NBR         | 000              |
| TRIP             | ---      | CI              | ---              |
| RTE RSV          | ---      | JTSN GW         | ---              |
| ALTN             | 0.0 T    | TOW             | ---              |
| FINAL            | 6.0 T    | LW              | ---              |
| TIME             |          | EFOB            | MIN FUEL AT DEST |
| DEST             | NONE     | ---             | 6.0 T            |
| ALTN             | NONE     | ---             | EXTRA            |
|                  |          | 7.4 T 00:37     |                  |
| RETURN           |          |                 |                  |
| MSG LIST         |          |                 |                  |

**Figure 33.** FUEL&LOAD with 7.4 t of EXTRA fuel: EXTRA time 00:37. The harness has no flight plan, so the EXTRA fuel is set by hand for this picture; the other values stay as dashes.

- The FCOM leaves the FINAL default to the airline fuel policy (AMI file) and gives no rule to turn the EXTRA fuel into a time: the same holding flow keeps FINAL and EXTRA consistent on the page.
- No EXTRA fuel (no flight plan predictions, or a SEC flight plan): --:-- as the fuel.

The 0.2 t/min holding flow is now one named constant used by both the FINAL fuel default (30 min = 6 t) and the EXTRA time.

## NOTE

On core/fuel1 (stacked on this branch) the FINAL default and the EXTRA time use the A380 holding fuel flow at the ZFW instead of the fixed 0.2 t/min.

## What to expect

| Situation        | What you should see                                  |
|------------------|------------------------------------------------------|
| EXTRA fuel shown | EXTRA time = EXTRA fuel at 0.2 t/min (6 t = 30 min). |

## Limitations and why

| Limitation                          | Why                                                                                                                            | What to do |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|------------|
| EXTRA time at a fixed holding flow. | The FCOM gives no fuel-to-time rule for EXTRA; the flow is the FINAL default one, not a computed holding at the actual weight. | -          |

## How to use

1. Read the EXTRA time next to the EXTRA fuel on FUEL&LOAD.

## How to test

| # | Do this                                                                                 | Expected result                                                                 |
|---|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| 1 | A380X, flight plan, ZFW and BLOCK entered so that EXTRA fuel shows. ACTIVE > FUEL&LOAD. | EXTRA time = EXTRA fuel / 0.2 t per min (6.0 t shows 00:30, 7.4 t shows 00:37). |
| 2 | Leave the FINAL fuel empty.                                                             | FINAL default 6.0 t / 00:30.                                                    |
| 3 | Open a SEC flight plan FUEL&LOAD, or remove the flight plan.                            | EXTRA time --:-- , as the EXTRA fuel.                                           |

## 6. Fuel figures of the company flight plan

**Aircraft:** A380X | **Where:** MFD INIT (CPNY F-PLN REQUEST), FUEL&LOAD | **Status:** Not sim-tested (checked in the browser harness).

### Fuel figures of the company flight plan

Before engine start, performance data come with the company flight plan (FCOM COMPANY F-PLN REQUEST). When the flight plan received from SimBrief is inserted (INIT CPNY F-PLN REQUEST, then INSERT), FUEL&LOAD takes from the OFP, as if typed by the crew: **TAXI**, **RTE RSV** (the OFP contingency, the % is cleared), **ALTN** (only with an alternate) and **FINAL** (the OFP final reserve).

- The **BLOCK is not taken**: press FUEL PLANNING, which computes it from these figures and the FMS TRIP.
- After engine start the flight plan comes in without its fuel figures.
- The FINAL time is computed from the FINAL fuel at 0.2 t/min (4.8 t shows 00:24).
- Any value can be overwritten as usual.

## What to expect

| Situation                                        | What you should see                                                                      |
|--------------------------------------------------|------------------------------------------------------------------------------------------|
| Company flight plan inserted before engine start | TAXI, RTE RSV, ALTN and FINAL from the OFP; BLOCK empty until FUEL PLANNING or an entry. |

## How to use

1. Set your SimBrief account in the flyPad and generate the OFP.
2. Before engine start: INIT > **CPNY F-PLN REQUEST**, then **INSERT** the received flight plan.
3. Check TAXI, RTE RSV, ALTN and FINAL on FUEL&LOAD, then press FUEL PLANNING for the BLOCK.

## How to test

| # | Do this | Expected result |
|---|---------|-----------------|
|---|---------|-----------------|

|   |                                                                                                         |                                                                                                                                                   |
|---|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X at the gate, engines off, SimBrief OFP with an alternate. INIT > CPNY F-PLN REQUEST, then INSERT. | FUEL&LOAD: TAXI, RTE RSV (the OFP contingency, no %), ALTN (the OFP alternate fuel) and FINAL (the OFP final reserve) as crew entries (big cyan). |
| 2 | Read the FINAL time.                                                                                    | FINAL fuel / 0.2 t per min (4.8 t shows 00:24).                                                                                                   |
| 3 | Look at the BLOCK.                                                                                      | Empty: press FUEL PLANNING to compute it.                                                                                                         |
| 4 | Request and insert the company flight plan again after engine start.                                    | No fuel figure is taken.                                                                                                                          |

## 7. FMS print functions and the flyPad printouts

**Aircraft:** A380X | **Where:** MFD DATA > PRINTER, SEC INDEX PRINT; flyPad Dispatch > Printouts | **Status:** Tested in the sim by the user: printouts reach the flyPad (2026-09-26), AUTO PRINT checkboxes (2026-09-26), MFD PRINT\* OK on 2026-10-02 (on the pedestal printer of core/prINTER ).

### What it is for

The DATA / PRINTER page and the SEC INDEX PRINT button work (A380 FCOM DSC-22-FMS-10-70, DSC-22-FMS-20-30 P 74-77). The FMS prints the active flight plan initialization, takeoff and wind data, and the pre-flight, in-flight, post-flight and secondary flight plan reports, laid out as the FCOM printout examples, with dashes for data the FMS does not have.



FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/PRINTER

ACTIVE DATA

F-PLN INIT

PRINT\*

T.O DATA

PRINT\*

WIND DATA

PRINT\*

CPNY DATA

AUTO PRINT ON RECEPTION

F-PLN INIT

☐

T.O DATA

☐

WIND DATA

☐

ACTIVE F-PLN REPORT

PRE-FLIGHT

PRINT\*

IN-FLIGHT

PRINT\*

POST-FLIGHT

PRINT\*

AUTO PRINT

☐

☐

☐

SEC F-PLN REPORT

SEC 1

PRINT\*

SEC 2

PRINT\*

SEC 3

PRINT\*

MSG LIST

**Figure 34.** DATA / PRINTER: ACTIVE DATA and CPNY DATA (F-PLN INIT, T.O DATA, WIND DATA), AUTO PRINT ON RECEPTION, the ACTIVE F-PLN REPORT (PRE-FLIGHT, IN-FLIGHT, POST-FLIGHT) with AUTO PRINT, and the SEC F-PLN REPORT.

| Print                       | Available (FCOM)                                | Automatic print (AUTO PRINT ticked)    |
|-----------------------------|-------------------------------------------------|----------------------------------------|
| PRE-FLIGHT report           | In PREFLIGHT, with the flight plan data entered | At engine start                        |
| IN-FLIGHT report            | From TAKEOFF to engine shutdown                 | At the transition to TAKEOFF           |
| POST-FLIGHT report          | After engine shutdown                           | At engine shutdown                     |
| SEC F-PLN report            | With the secondary flight plan                  | -                                      |
| CPNY F-PLN INIT / WIND DATA | With company data received                      | At reception (AUTO PRINT ON RECEPTION) |

- On this branch the printed pages go to the flyPad: **Dispatch > Printouts** (A380X only), which keeps the last 30 pages. A page appears there without any notification. With `core/prINTER` they also come out of the pedestal printer.
- The pages travel on the event bus, synced between the instruments (a view listener trigger did not cross instruments, so the first version never reached the flyPad).
- The AUTO PRINT checkboxes are clickable (they did not react before).

## How to use

- MFD > DATA > **PRINTER**: press the **PRINT\*** button of the data or report you want.
- Tick the AUTO PRINT boxes for the automatic reports.

3. Read the pages on the flyPad: **Dispatch > Printouts**.

## How to test

| # | Do this                                                                   | Expected result                                                                                                    |
|---|---------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| 1 | A380X at the gate, flight plan entered (PREFLIGHT). MFD > DATA > PRINTER. | PRE-FLIGHT PRINT* active; IN-FLIGHT and POST-FLIGHT greyed.                                                        |
| 2 | Press ACTIVE DATA F-PLN INIT <b>PRINT*</b> .                              | flyPad > Dispatch > Printouts: a new page FM ACTIVE FLIGHT PLAN INITIALIZATION DATA, laid out as the FCOM example. |
| 3 | Press PRE-FLIGHT PRINT*.                                                  | A pre-flight report page in the flyPad list.                                                                       |
| 4 | Tick and untick each AUTO PRINT box.                                      | Each box ticks and unticks.                                                                                        |
| 5 | Tick AUTO PRINT IN-FLIGHT, take off.                                      | An in-flight report is printed at the transition to TAKEOFF.                                                       |
| 6 | SEC INDEX with a SEC flight plan: <b>PRINT</b> .                          | A secondary flight plan report page.                                                                               |

## 8. Pilot-stored elements kept across sessions

**Aircraft:** A380X | **Where:** flyPad Settings > Realism; MFD DATA pages | **Status:** Not sim-tested (unit tests: 17; checked in the browser harness over two sessions and with the setting off).

### What it is for

On the A380 the crew can store its own waypoints, nav aids, routes and runways in the FMS (DATA pages). The FCOM says they are all deleted when all FMCs are shut down (DSC-22-FMS), and that is what happens by default: a new flight starts with an empty list.

In the simulator you may want to keep them from one session to the next (your own departure procedures, a favourite route). The setting below does that. It is marked **Unrealistic** because the real aircraft does not keep them.

### The setting

Keep MFD Pilot Stored Waypoints, Nav aids, Routes and Runways Between Sessions (Unrealistic) ☐

**Figure 35.** flyPad > Settings > Realism: the last line. Off by default.

- **Off** (default, as the FCOM): the stored elements are deleted at the end of the session.
- **On:** they are saved in the simulator storage and restored at the next session, before the FMS loads them.
- A reload of the flight (same session) never restores them twice.
- Turning the setting off drops the kept copy: the next session starts empty.
- The A380 OIT flyPad has the same option.

### Storing elements in the MFD

The DATA menu pages have a PILOT STORED tab each. The DATA / STATUS page counts them and DELETE ALL clears everything.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/STATUS

ACFT STATUS

FMS P/N

A380-800

ENGINE TRENT 972

IDLE +0.0

PERF +0.0

MODIFY

NAV DATABASE

ACTIVE

SWAP \*

SECOND

PILOT STORED ELEMENTS

WAYPOINTS 02

ROUTES 01

DELETE ALL \*

NAVAIDS 02

RUNWAYS 02

MSG LIST

**Figure 36.** DATA / STATUS: PILOT STORED ELEMENTS: 2 waypoints, 2 nav aids, 1 route, 2 runways.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/WAYPOINT

DATABASE WPTs

PILOT STORED WPTs

WPT IDENT GOUGOU

1/2

LAT

LONG

43°33.5N/001°33.3E

PLACE

BRG

PLACE

BRG

AGN - 123° / GAI - 250°

DELETE STORED WPT \*

DELETE ALL STORED WPTs \*

NEW WPT

MSG LIST

**Figure 37.** PILOT STORED WPTs: GOUGOU, defined by place/bearing - place/bearing (AGN 123° / GAI 250°), 1/2.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/NAVAID

DATABASE NAVAIDS

PILOT STORED NAVAIDS

NAVAID IDENT

TBS

1/2

CLASS

ILS

LAT/LONG

43°36.0N/001°22.5E

ELEVATION

500FT

RWY IDENT

LFB014R

FREQ

110.7

CAT

3

CRS

144°

FIG OF MERIT

0

DELETE  
STORED NAVAID \*

DELETE ALL  
STORED NAVAIDS \*

NEW NAVAID

MSG LIST

**Figure 38.** PILOT STORED NAVAIDS: an ILS with its class, position, elevation, runway, frequency, category, course and figure of merit.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/ROUTE

DATABASE RTEs

PILOT STORED RTEs

RTE IDENT

NEWROUTE

1/1

FROM

LFB0

TO

WSSS

|       |       |        |       |
|-------|-------|--------|-------|
| RWY   | 14L   | AMOL5H | AMOLO |
| UT24  | STP   | UM985  | NOSTA |
| DIR   | GEN   | DIR    | LUPOS |
| DIR   | BOA   | DIR    | FER   |
| UM859 | CHI   | DIR    | LABIN |
| DIR   | PUL   | UL614  | KEB   |
| UL5   | VENIN | UT85   | CND   |
| UM747 | SOBLO | B143   | IDLER |

DELETE  
STORED RTE \*

DELETE ALL  
STORED RTEs \*

NEW RTE ▾

MSG LIST

**Figure 39.** PILOT STORED RTEs: NEWROUTE LFB0 to WSSS with its summary (runway, SID, airways and waypoints).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/AIRPORT

DATABASE ARPTs

PILOT STORED RWYs

ARPT IDENT

LFFF

1/2

RWY

15R

LAT/LONG

48°35.1N/002°05.1W

ELEVATION

207.0FT

LENGTH

4918FT

CRS

145°

LS IDENT

TG

DELETE  
STORED RWY \*

DELETE ALL  
STORED RWYs \*

NEW RWY

MSG LIST

**Figure 40.** PILOT STORED RWYs (DATA / AIRPORT): runway 15R of LFFF with its position, elevation, length, course and LS ident.

## Limits of the database (FCOM)

| Element   | Limit | When full                                                                                                               |
|-----------|-------|-------------------------------------------------------------------------------------------------------------------------|
| Nav aids  | 20    | The first one created is deleted.                                                                                       |
| Runways   | 10    | The first one created is deleted.                                                                                       |
| Routes    | 5     | PILOT RTEs LIST FULL.                                                                                                   |
| Waypoints | 50    | The oldest one not used in a flight plan is replaced; if all are used: 50 WPTS MAX : ALL IN USE (see the next feature). |

Storing an element with the name of an existing one replaces it (no duplicates).

## What to expect

| Situation                         | What you should see                                                               |
|-----------------------------------|-----------------------------------------------------------------------------------|
| Setting off, new session          | DATA / STATUS shows 00 everywhere.                                                |
| Setting on, new session           | The elements of the last session are back.                                        |
| Setting on, flight reloaded       | The elements are there once (no duplicates).                                      |
| Setting turned off                | The kept copy is deleted; the current elements stay until the end of the session. |
| Stored route of another city pair | Not offered in INIT / RTE SEL (routes are per city pair).                         |

## Limitations and why

| Limitation                             | Why                                           | What to do                         |
|----------------------------------------|-----------------------------------------------|------------------------------------|
| Pilot-stored nav aids cannot be tuned. | The radio tuning uses the MSFS nav aids only. | -                                  |
| Keeping the elements is not realistic. | The real FMS deletes them at shutdown.        | Leave the setting off for realism. |

## How to use

1. flyPad > **Settings** > **Realism**: turn on *Keep MFD Pilot Stored Waypoints, Nav aids, Routes and Runways Between Sessions* (off by default, as the FCOM).
2. Store your elements on the MFD DATA pages (WAYPOINT, NAVAID, ROUTE, AIRPORT > PILOT STORED RWYs).
3. At the next session they are back; DATA / STATUS counts them, DELETE ALL clears them.

## How to test

| # | Do this                                                                                                          | Expected result                              |
|---|------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| 1 | A380X, setting off. Store a waypoint (DATA > WAYPOINT > NEW WPT) and a route (DATA > ROUTE or INIT RTE SUMMARY). | DATA / STATUS counts 1 waypoint and 1 route. |
| 2 | Close the session and start a new flight.                                                                        | DATA / STATUS shows 00 everywhere.           |
| 3 | Turn the setting on, store the elements again, start a new session.                                              | The elements are back, once each.            |
| 4 | Reload the flight (same session).                                                                                | No duplicates.                               |
| 5 | Turn the setting off, start a new session.                                                                       | Empty again (the kept copy is deleted).      |

## 9. 50 pilot-stored waypoints

**Aircraft:** A380X | **Where:** MFD DATA > WAYPOINT; DATA / STATUS | **Status:** Not sim-tested (unit tests: 2).

### What it is for

A380 FCOM DSC-22-FMS-20-30 (P 117) and DSC-22-FMS-10-40-10: the FMS stores 50 pilot-defined waypoints. FBW shared the A32NX list of 99 and its LIST OF 99 IN USE message.

- When the 50 are stored, a new one replaces the **oldest waypoint not used in a flight plan** (active, temporary or secondary).
- When all 50 are used in flight plans, the new entry is rejected with **50 WPTS MAX : ALL IN USE** (FCOM DSC-22-FMS-20-110).
- The A32NX keeps its 99 waypoints (same flight plan code, its own limit).

### How to use

1. Store waypoints as usual (DATA > WAYPOINT > NEW WPT, or the places you create in the flight plan).
2. Watch the count on DATA / STATUS; the oldest unused one is replaced from the 51st on.

### How to test

| # | Do this                                                                                                               | Expected result                                                                           |
|---|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| 1 | A380X. Store 50 waypoints (DATA > WAYPOINT > NEW WPT, lat/long), the first one named e.g. WPT01.                      | DATA / STATUS: 50 waypoints.                                                              |
| 2 | Store a 51st waypoint.                                                                                                | Still 50; WPT01 (the oldest, not in a flight plan) is gone from PILOT STORED WPTS.        |
| 3 | Insert the now oldest stored waypoint into the F-PLN, then store another one.                                         | The oldest waypoint that is not in a flight plan is replaced; the one in the F-PLN stays. |
| 4 | (Long; also covered by the unit tests) with all 50 used in the active, temporary or SEC flight plans, store one more. | 50 WPTS MAX : ALL IN USE in the message area; nothing is replaced.                        |

## 10. DIRECT TO options: ABEAM, CRS IN, CRS OUT

**Aircraft:** A380X | **Where:** MFD F-PLN > DIR TO (or the KCCU DIR key) | **Status:** Not sim-tested (unit tests: 10 on the flight plan geometry).


### What it is for

The DIRECT TO page of the A380 (FCOM DSC-22-FMS-20-30, DIRECT TO) has four options. FBW showed them but only the first one worked. All four work now:

| Option            | What the FMS builds                                                                                                                                                                                     |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DIRECT            | A direct leg from the aircraft to the target waypoint (as before).                                                                                                                                      |
| DIRECT WITH ABEAM | The direct leg, plus an <b>abeam point</b> for each waypoint it bypasses: the point of the direct leg abeam that waypoint, named <b>AB</b> + the first 5 letters of the waypoint (BERGI gives ABBERGI). |
| CRS IN            | An <b>inbound course</b> to the target: the aircraft continues on its current track to the intercept point <b>INTCPT</b> on that course, then flies the course to the target.                           |

## CRS OUT

An **outbound course** from the target: the aircraft continues on its current track to the intercept point INTCP on the outbound course, then follows it (without overflying the target).

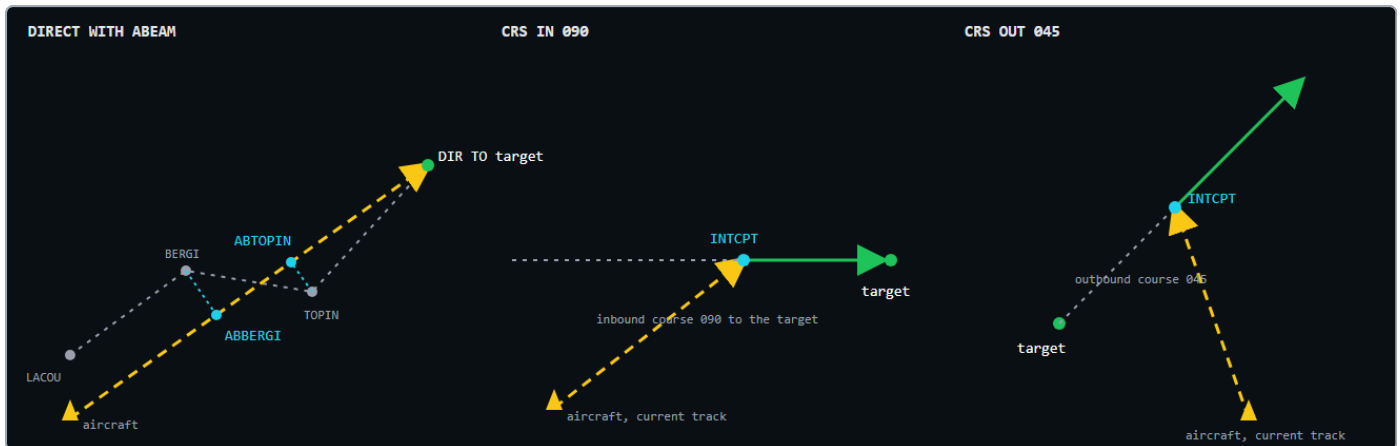

**Figure 41.** The three new options. Yellow: the aircraft and its path to the first point; green: the course flown after it; blue: the points the FMS creates.

*Diagram drawn for this manual: not representative of the in-game UI, reference for the explanation only.*

## Using the page

1. Choose the target in **DIRECT TO** (a flight plan waypoint from the list, or type any fix).
2. Choose the option. For CRS IN / CRS OUT a course field appears next to the option.
3. For a flight plan waypoint the course is already filled: CRS IN = the course from the previous waypoint to the target, CRS OUT = the course from the target to the next waypoint (FCOM P 131). Type another one if ATC asks (**NNN** magnetic, **NNNT** true).
4. Check the temporary flight plan (TMPY, yellow) and press **INSERT DIR TO**.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/DIRECT-TO

DIRECT TO

UTC

DIST

DIRECT

DIRECT WITH ABEAM

CRS IN

CRS OUT

RETURN

MSG LIST

**Figure 42.** The DIRECT TO page: target, UTC and distance, and the four OPTIONS.

With DIRECT WITH ABEAM, the temporary F-PLN shows **(ABEAM PTS)** in place of the abeam points until the direct is inserted (FCOM P 162).

### What to expect

| Situation                                                                            | What you should see                                         |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------|
| DIRECT WITH ABEAM, waypoints bypassed                                                | One ABxxxxx point per bypassed waypoint, on the direct leg. |
| DIRECT WITH ABEAM, a waypoint whose abeam is not between the aircraft and the target | No abeam point for it.                                      |
| CRS IN / OUT with a course that can be intercepted ahead                             | INTCPT on the course, then the course.                      |
| CRS IN more than 160° from the current track, parallel, or behind                    | No intercept point: a course to the target.                 |
| CRS OUT parallel to the track                                                        | No intercept point: a course from the target.               |
| CRS IN / OUT without a course                                                        | No DIR TO until a course is entered.                        |

### Limitations and why

| Limitation                                            | Why                                                                                                    | What to do |
|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------|------------|
| Abeam point names can repeat letters of the waypoint. | The FCOM rule is AB + 5 characters; two waypoints starting with the same 5 letters give the same name. | -          |

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/F-PLN/DIRECT-TO

DIRECT TO

UTC

DIST

DIRECT

DIRECT WITH ABEAM

CRS IN

CRS OUT

000

**Figure 43.** CRS IN selected: the course field (amber boxes until a course is known).



No intercept point when the geometry does not allow one.

Following the FCOM limits (160°, parallel, behind).

Use DIRECT, or another course.

#### NOTE

The intercept limits are named constants of the flight plan code (no other effect).

### How to use

1. F-PLN > **DIR TO**: choose the target waypoint.
2. Choose DIRECT, DIRECT WITH ABEAM, CRS IN or CRS OUT; for CRS IN / OUT check or type the course (NNN or NNNT).
3. Check the yellow TMPY flight plan and press **INSERT DIR TO**.

### How to test

| # | Do this                                                                                                         | Expected result                                                                                                           |
|---|-----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight on a flight plan, NAV engaged. F-PLN > DIR TO, target three waypoints ahead, DIRECT WITH ABEAM. | TMPY F-PLN: the direct leg with (ABEAM PTS) in place of the abeam points.                                                 |
| 2 | INSERT DIR TO.                                                                                                  | One ABxxxxx point (AB + the first 5 letters) per bypassed waypoint, on the direct leg.                                    |
| 3 | DIR TO a waypoint ahead with <b>CRS IN</b> .                                                                    | The course field is filled with the course from the previous waypoint; TMPY shows INTCPT on that course, then the target. |
| 4 | Type a course more than 160 degrees from the current track.                                                     | No INTCPT point: a course to the target.                                                                                  |
| 5 | DIR TO with <b>CRS OUT</b> .                                                                                    | INTCPT on the outbound course; the aircraft does not overfly the target.                                                  |
| 6 | CRS IN with the course field empty (fix not in the flight plan).                                                | No DIR TO until a course is entered.                                                                                      |

## 11. KCCU keyboard entries: ENT validates, ESC cancels

**Aircraft:** A380X | **Where:** KCCU; every MFD, OIT and OANS entry field | **Status:** Not sim-tested as a test of its own (checked in the browser harness); installed since 2026-09-26, so the MFD entries of the later sim tests use it.

### What it is for

On the A380 the crew types on the KCCU keyboard. Before this change a value typed on the 3D KCCU keys was often lost: the field was validated only when the display lost the focus, and clicking a 3D key ends the focus before the key reaches the field. Now the field follows the FCOM (DSC-31-30-20, KCCU):

- **ENT** validates the entry directly.
- **ESC** "cancels the current field edition. The field returns to the last valid value".
- Once a field is selected with the cursor, the edition continues whatever happens to the display focus and whatever the **KBD** switch: only ENT, ESC or the selection of another field end it (the previous field is then validated). One field is in edition per side.
- A click on a field selects it even when it already had the focus.
- KBD switch OFF: the KCCU keyboard keys are not active (see the KCCU switches feature below); the PC keyboard still types in the selected field.

Entering a value

- 1. Set the **KBD** switch of your KCCU ON.
- 2. Click the field with the cursor (trackball or mouse).
- 3. Type the value on the KCCU keys (or the PC keyboard).
- 4. Press **ENT**. The value is checked with the FCOM entry format of the field.

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

ACTIVE/INIT

FLT NBR

0000000000

ACFT STATUS

CPNY F-PLN REQUEST

FROM

0000

TO

0000

ALTN

----

CPNY RTE

0000000000

RTE SEL

ALTN RTE

-----

ALTN RTE SEL

CRZ FL

FL----

CRZ TEMP

--- °C

CI

----

TROPO

39000 FT

CPNY WIND REQUEST

TRIP WIND

-----

WIND

IRS

DEPARTURE

NAVAIDS

FUEL&LOAD

T.O. PERF

RTE SUMMARY

CPNY T.O. REQUEST

MSG LIST

Figure 44. TROPO selected, 39000 typed on the KCCU keys.

FMS 1

ACTIVEPOSITIONSEC INDEXDATA

ACTIVE/INIT

FLT NBR

0000000000

ACFT STATUS

CPNY F-PLN REQUEST

FROM

0000

TO

0000

ALTN

----

CPNY RTE

0000000000

RTE SEL

ALTN RTE

-----

ALTN RTE SEL

CRZ FL

FL----

CRZ TEMP

--- °C

CI

----

TROPO

39000 FT

CPNY WIND REQUEST

TRIP WIND

-----

WIND

IRS

DEPARTURE

NAVAIDS

FUEL&LOAD

T.O. PERF

RTE SUMMARY

CPNY T.O. REQUEST

MSG LIST

Figure 45. After ENT: TROPO 39000 FT entered (big cyan: a pilot entry).

Wrong entries

ENT on a wrong value leaves the field unchanged and shows the FCOM message in the message area; the message gives the expected format. CLR INFO (KCCU key) clears it.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/INIT

FLT NBR

0000000000

ACFT STATUS

CPNY F-PLN REQUEST

FROM

0000

TO

0000

ALTN

----

CPNY RTE

0000000000

RTE SEL

ALTN RTE

-----

ALTN RTE SEL

CRZ FL

FL----

CRZ TEMP

--- °C

CI

---

TROPO

39000 FT

CPNY WIND REQUEST

TRIP WIND

-----

WIND

IRS

DEPARTURE

RTE SUMMARY

NAVAIDS

FUEL&LOAD

T.O. PERF

CPNY T.O. REQUEST

CLEAR INFO

FORMAT ERROR

FORMAT: FOR ALT XXXXX FOR FL XXX

**Figure 46.** "ABC" in TROPO: FORMAT ERROR, FORMAT: FOR ALT XXXXX FOR FL XXX.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/INIT

FLT NBR

0000000000

ACFT STATUS

CPNY F-PLN REQUEST

FROM

0000

TO

0000

ALTN

----

CPNY RTE

0000000000

RTE SEL

ALTN RTE

-----

ALTN RTE SEL

CRZ FL

FL----

CRZ TEMP

--- °C

CI

---

TROPO

39000 FT

CPNY WIND REQUEST

TRIP WIND

-----

WIND

IRS

DEPARTURE

RTE SUMMARY

NAVAIDS

FUEL&LOAD

T.O. PERF

CPNY T.O. REQUEST

CLEAR INFO

ENTRY OUT OF RANGE

**Figure 47.** 99999 in TROPO: ENTRY OUT OF RANGE.

### Cancelling with ESC

TROPO

41000 FT

**Figure 48.** 41000 typed in TROPO, not validated...

TROPO

39000 FT

**Figure 49.** ... ESC: the field returns to its last valid value, 39000.

### What to expect

| Situation                                                       | What you should see                                                                                                                           |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Value typed, ENT                                                | The value is entered (or an FCOM error message).                                                                                              |
| Value typed, ESC                                                | The field returns to its last valid value.                                                                                                    |
| Value typed, another field clicked                              | The first value is validated, the new field is in edition.                                                                                    |
| Value typed, click on a 3D KCCU key or elsewhere in the cockpit | The field stays in edition, the value is not lost.                                                                                            |
| KBD switch OFF                                                  | The KCCU keyboard keys do nothing; the PC keyboard still types in the selected field, which stays in edition until ENT, ESC or another field. |

### Limitations and why

| Limitation                     | Why                                                | What to do |
|--------------------------------|----------------------------------------------------|------------|
| One field in edition per side. | As on the aircraft: each KCCU drives its own side. | -          |

How to use

- 1. Click the field with the cursor (trackball or mouse).
- 2. Type on the KCCU keys (KBD switch ON) or the PC keyboard.
- 3. Press **ENT** to enter, or **ESC** to go back to the last valid value.

How to test

| # | Do this                                                                             | Expected result                                                         |
|---|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------|
| 1 | A380X, KCCU KBD switch ON. MFD > ACTIVE > INIT, click TROPO.                        | TROPO in edition.                                                       |
| 2 | Type 39000 on the 3D KCCU keys, press <b>ENT</b> .                                  | TROPO 39000 FT entered (big cyan).                                      |
| 3 | Click TROPO, type 41000, click somewhere else in the cockpit (a 3D key, the panel). | The field stays in edition; 41000 is not lost.                          |
| 4 | Press <b>ESC</b> .                                                                  | TROPO back to 39000.                                                    |
| 5 | Type ABC in TROPO, ENT.                                                             | FORMAT ERROR, FORMAT: FOR ALT XXXXX FOR FL XXX; the field is unchanged. |
| 6 | Type a value in one field, click another field.                                     | The first value is validated; the second field is in edition.           |

12. KCCU KBD and CCD switches: FCOM rules, ON by default

**Aircraft:** A380X | **Where:** KCCU KBD and CCD switches (both KCCUs) | **Status:** Not sim-tested (part of the KCCU change checked in the browser harness, installed since 2026-09-26).

What it is for

- A380 FCOM DSC-31-30-20: the keyboard and the cursor control device of each KCCU have their own ON/OFF switch ("The KCCU keyboard is not active" when OFF), independent of each other.
- The keyboard keys work only with the **KBD** switch ON; the cursor control device keys (ESC2, KBD, REWIND, FORWARD) only with the **CCD** switch ON. Both the MFD and the ND follow this.
  - An entry field clicked with the mouse keeps the keyboard input until ENT or ESC whatever the KBD switch, so typing cannot land in another field; a field that disappears ends its edition. The 20 s unfocus timer and the end of edition on a display blur are removed.
  - Both switches are **ON** in every flight start (hanger, apron, taxi, runway, climb, cruise, approach, final) and the cold and dark preset no longer turns them off. The FCOM sets them ON during the preliminary cockpit preparation (PRO-NOR-SOP): ON by default is a convenience.

How to use

- 1. Leave the KBD and CCD switches ON (default). Set KBD OFF to stop the KCCU keyboard, CCD OFF to stop the cursor device keys.

How to test

| # | Do this                                                                                           | Expected result                        |
|---|---------------------------------------------------------------------------------------------------|----------------------------------------|
| 1 | Start an A380X flight cold and dark (or at the gate).                                             | Both KCCU KBD and CCD switches are ON. |
| 2 | Set the captain KCCU <b>KBD</b> switch OFF, click an MFD field, press letter keys on the 3D KCCU. | Nothing is typed.                      |

|   |                                                                             |                                                            |
|---|-----------------------------------------------------------------------------|------------------------------------------------------------|
| 3 | Type on the PC keyboard in that field.                                      | The PC keyboard still types; ENT / Escape end the edition. |
| 4 | KBD back ON, set <b>CCD</b> OFF, press the KCCU ESC2 key during an edition. | Nothing happens; with CCD ON ESC2 works again.             |

### 13. SURV pages laid out and wired per the FCOM

**Aircraft:** A380X | **Where:** MFD SURV > CONTROLS and STATUS & SWITCHING | **Status:** No full in-sim check recorded; the GAIN and ELEVN/TILT entry fields were used in the sim on 2026-10-02 (ND message test of `core/a380x-wxr-controls`).

#### What it is for

The SURV CONTROLS and STATUS & SWITCHING pages are laid out on their figures (A380 FCOM DSC-34-20-60-50 P 4 and P 6): area frames, 120 x 78 SURV buttons, the WXR and GPWS link lines, the SURV DEFAULT SETTINGS group, and SYS boxes that no longer run off the right of the screen. The options follow the FCOM rules of the XPDR, TCAS, WXR and TAWS sections (DSC-34-20-40, -50, -30-20, -10).

| Item                      | Rule                                                                                                                                                                                              |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| XPDR mode                 | Option list AUTO / ON / STBY; ON keeps the transponder replying as in flight on the ground.                                                                                                       |
| ALT RPTG OFF or XPDR STBY | The TCAS option lists are not available.                                                                                                                                                          |
| ALT RPTG ON               | Selects TA/RA and NORM.                                                                                                                                                                           |
| WXR button                | Needs a confirmation. AUTO resets PRED W/S, TURB, ELEVN/TILT, GAIN, MODE and WX ON VD; OFF sets PRED W/S, TURB and WX ON VD to OFF, inhibits them and hides GAIN and MODE.                        |
| ELEVN/TILT                | Option list (not available in MAP) with an ELEVN field (FL with the STD reference, FT with QNH: FL 0 to 600, 0 to 60 000 ft) and a TILT field ( $\pm$ NN.N, M for minus, -15.0 to +15.0 degrees). |
| GAIN                      | Entry field with GAIN MAN: 0 to 100 %.                                                                                                                                                            |
| DEFAULT SETTINGS          | Needs a confirmation.                                                                                                                                                                             |
| STATUS & SWITCHING        | The FCOM indication texts: WX DISPLAY, and XPDR / TCAS STBY when the system is not in use.                                                                                                        |

#### Limitations and why

| Limitation                                                       | Why                                                                                                                                                                                      | What to do                                                             |
|------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| The ELEVN, TILT and GAIN values do not change the radar picture. | They are stored in new documented LVars (A380X_WXR_ELEVN_TILT_MODE, A380X_WXR_ELEVN, A380X_WXR_TILT, A380X_WXR_GAIN); the MSFS radar has no gain and the native radar does not use them. | The ND messages for them are on <code>core/a380x-wxr-controls</code> . |

#### How to use

1. MFD > SURV > CONTROLS: choose the options in their lists; confirm the WXR and DEFAULT SETTINGS buttons.
2. For a manual radar setting, choose ELEVN or TILT and type the value, or GAIN MAN and the gain.

#### How to test

| # | Do this | Expected result |
|---|---------|-----------------|
|---|---------|-----------------|

|    |                                             |                                                                                                            |
|----|---------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 1  | A380X powered. MFD > SURV > CONTROLS.       | The page as the FCOM figure: frames, link lines, DEFAULT SETTINGS group.                                   |
| 2  | Open the XPDR mode list.                    | AUTO, ON, STBY.                                                                                            |
| 3  | Set ALT RPTG OFF.                           | The TCAS option lists are greyed (TCAS STBY on the ND).                                                    |
| 4  | Set ALT RPTG ON.                            | TCAS TA/RA and NORM are selected.                                                                          |
| 5  | Press the WXR button to OFF.                | A confirmation is asked; after it PRED W/S, TURB and WX ON VD are OFF and inhibited, GAIN and MODE hidden. |
| 6  | WXR back to AUTO (confirm).                 | PRED W/S, TURB, ELEVN/TILT, GAIN, MODE and WX ON VD back to their AUTO values.                             |
| 7  | ELEVN/TILT: choose TILT, type <b>M3.5</b> . | TILT -3.5 degrees; typing 20 gives ENTRY OUT OF RANGE.                                                     |
| 8  | Choose MODE MAP.                            | ELEVN/TILT is not available.                                                                               |
| 9  | Press DEFAULT SETTINGS.                     | A confirmation is asked before the defaults are set.                                                       |
| 10 | Open STATUS & SWITCHING.                    | The SYS boxes fit on the screen; the unused XPDR / TCAS system reads STBY.                                 |

## 14. SURV memos, and TCAS STBY with ALT RPTG OFF

**Aircraft:** A380X | **Where:** E/WD memo area; ND; MFD SURV CONTROLS | **Status:** Not sim-tested.

### What it is for

The ECAM follows the SURV CONTROLS page as in the A380 FCOM (DSC-34-20-60-140, flight phase inhibitions from its figures).

| Memo                 | When                                                                                                                                                                  |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TERR SYS OFF (green) | TERR SYS OFF on SURV CONTROLS.                                                                                                                                        |
| TERR STBY (green)    | The TAWS of the selected system is operative, but the TERR function cannot rely on the aircraft position, which the TAWS takes from ADIRU 1 (DSC-34-20-20-10).        |
| WXR OFF (amber)      | WXR button OFF. It also sets PRED W/S and TURB to OFF: only WXR OFF shows then.                                                                                       |
| PRED W/S OFF         | PRED W/S OFF by the crew: green in flight phases 2 and 8, amber in the takeoff and landing phases (the colours of the A320 PRED W/S OFF memo).                        |
| WXR TURB OFF (green) | TURB OFF by the crew.                                                                                                                                                 |
| WXR ON (green)       | On the ground, one engine running, WX selected on an EFIS CP and the WXR not OFF or failed: the WX pb turns the WXR on (DSC-34-20-30-20 P 1).                         |
| TCAS STBY (green)    | ALT RPTG OFF puts the TCAS in standby (DSC-34-20-50-20 P 7): also TCAS STBY on the ND and, in cruise, the <b>SURV TCAS STBY</b> caution (PRO-ABN-ECAM-10-34-20 P 18). |

## How to use

1. Nothing to set: the memos follow the SURV CONTROLS settings. Restore the normal settings (WXR AUTO, TERR SYS ON, ALT RPTG ON) to clear them.

## How to test

| # | Do this                                                                                   | Expected result                                                                |
|---|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| 1 | A380X on the ground, one engine running. MFD > SURV > CONTROLS: set <b>TERR SYS OFF</b> . | E/WD memo <b>TERR SYS OFF</b> in green.                                        |
| 2 | TERR SYS ON; set <b>PRED W/S OFF</b> .                                                    | Memo <b>PRED W/S OFF</b> , green (taxi).                                       |
| 3 | Set <b>TURB OFF</b> .                                                                     | Memo <b>WXR TURB OFF</b> .                                                     |
| 4 | Set the <b>WXR</b> button OFF (confirm).                                                  | Memo <b>WXR OFF</b> in amber; the PRED W/S OFF and WXR TURB OFF memos go away. |
| 5 | WXR AUTO again; press <b>WX</b> on the captain EFIS CP.                                   | Memo <b>WXR ON</b> .                                                           |
| 6 | Set <b>ALT RPTG OFF</b> .                                                                 | Memo <b>TCAS STBY</b> , TCAS STBY on the ND.                                   |
| 7 | In cruise, set ALT RPTG OFF.                                                              | Caution <b>SURV TCAS STBY</b> .                                                |
| 8 | Takeoff with PRED W/S OFF.                                                                | The PRED W/S OFF memo is amber in the takeoff phases.                          |

## 15. FMS function fixes: SEC pages, company winds, FIX INFO, STORE WPT, RTE SEL, WIND levels

**Aircraft:** A380X | **Where:** MFD SEC INDEX, INIT, WIND, F-PLN > FIX INFO, DATA > WAYPOINT | **Status:** SEC page fix tested in the sim by the user: OK (2026-09-27). SEND F-PLN REQUEST asterisk checked in the browser harness. The other fixes: not simulated.

## What it is for

| Fix                                               | Before                                                                                                                                                                                                             | Now                                                                                                                                                                       |
|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SEC page kept when another flight plan is created | A page opened for an empty SEC (e.g. its COMPANY F-PLN REQUEST) jumped to the ACTIVE copy as soon as any flight plan was created; RETURN had to be clicked twice and the page was bound to the active flight plan. | The page moves to ACTIVE only when its loaded SEC flight plan is deleted.                                                                                                 |
| One asterisk on SEND F-PLN REQUEST                | Two asterisks.                                                                                                                                                                                                     | One, on the right, as the FCOM figure (DSC-22-FMS-20-30 P 28).                                                                                                            |
| Received company winds kept until INSERT          | WIND INSERT did nothing after a flight plan revision: the answer went into the plan captured at the request, and a flight plan copy lost it.                                                                       | The answer goes to the current flight plan and stays pending across copies (revisions, temporary plan) until the crew inserts or clears it (A32NX and A380X).             |
| FIX INFO reference fix                            | An unknown ident opened NEW WAYPOINT.                                                                                                                                                                              | Looked up only (database and pilot-stored elements): an unknown ident gives NOT IN DATABASE; FIX INFO never creates or stores a waypoint (A380 FCOM DSC-22-FMS FIX INFO). |
| DATA / WAYPOINT STORE WPT                         | Stayed inactive (the waypoint was worked out before the last value was stored).                                                                                                                                    | Active as soon as the entries define the waypoint.                                                                                                                        |

|                     |                                                                                  |                                                                                                                                       |
|---------------------|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| INIT (ALTN) RTE SEL | Did not always open ROUTE SELECTION.                                             | Always opens the ROUTE SELECTION page; only the route entries are limited (FCOM P 199-200).                                           |
| WIND altitudes      | Without a transition altitude in the navigation database, levels came out wrong. | A wind altitude keeps the unit of its entry, FL for NNN (FCOM WIND ALTITUDE format); uplinked and history winds are at flight levels. |

## How to use

1. Nothing new to learn: use the pages as described in the FCOM; the fixes remove the wrong behaviours above.

## How to test

| # | Do this                                                                                                                                | Expected result                                                                                            |
|---|----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 1 | A380X, SimBrief account set in the flyPad, active flight plan, SEC 1 empty. SEC INDEX > SEC 1 > CPNY F-PLN REQUEST.                    | The COMPANY F-PLN REQUEST page; one asterisk, right of SEND F-PLN REQUEST.                                 |
| 2 | Press SEND F-PLN REQUEST; wait for the flight plan; press RETURN once.                                                                 | Back on SEC INDEX with one RETURN; the page stayed on SEC 1.                                               |
| 3 | Delete SEC 1 while one of its pages is open.                                                                                           | The page moves to its ACTIVE copy (unchanged behaviour).                                                   |
| 4 | WIND: CPNY WIND REQUEST; before the answer, revise the flight plan (insert a waypoint); then press INSERT when the winds are received. | The company winds are inserted.                                                                            |
| 5 | F-PLN, a waypoint > FIX INFO: type an unknown ident (e.g. ZZZZZ) as the reference fix.                                                 | NOT IN DATABASE; no NEW WAYPOINT page. A database ident is accepted; DATA / STATUS counts no new waypoint. |
| 6 | DATA > WAYPOINT > NEW WPT, enter a LAT/LONG.                                                                                           | STORE WPT becomes active after the last entry.                                                             |
| 7 | INIT: RTE SEL and ALTN RTE SEL.                                                                                                        | Both open the ROUTE SELECTION page.                                                                        |
| 8 | WIND: type an altitude <b>350</b> .                                                                                                    | Shown as FL350.                                                                                            |

## 16. MFD display fixes: sizes, labels, menus and clickable controls

**Aircraft:** A380X | **Where:** MFD FMS and SURV pages | **Status:** Found and fixed in the sim (September 2026); printer, BFO and LL XING AURAL checkboxes tested in the sim by the user: OK (2026-09-26). The other items: not individually sim-tested.

### What it is for

- **FCOM sizes in the sim:** the cockpit renderer counts padding and frame in a box size, so the buttons were 28 px narrower and 18 px lower than the FCOM figures and labels ran out. Buttons now have the full FCOM size as a minimum and grow around their label; labels keep the lines of the FCOM figure, 26 px apart (a one-line button is 44 px high); entry fields and selection lists are 44 px high, without a background painted over their frame. The AIRWAYS list and the RECEIVED COMPANY T.O DATA INSERT / CLEAR buttons moved to make room.
- **Button labels that change** (REQUEST PENDING..., RECEIVED CPNY WIND, FREEZE / UNFREEZE...) showed a raw "<br />": they now use line breaks.
- **Selection menus** that would leave the screen at the bottom (NEW RTE on DATA / ROUTE lost SEC 3) open upwards.
- **F-PLN EFOB / T.WIND:** the wind digits no longer run over the slash.



- **Clicks:** a hidden FCOM page element no longer takes the clicks of the visible one; the DATA / PRINTER AUTO PRINT checkboxes, the POSITION / NAVAIDS ADF BFO toggle and the LL XING / TIME MKR AURAL checkboxes react (an onClick on a plain element never fired).
- **DATA / NAVAID search:** written without an await used as an operand, which the sim's JavaScript engine can reject and blank the whole MFD. Same behaviour.
- Code clean-up with no visible effect: shared FREE TEXT controls of the company pages, one tonnes helper on FUEL&LOAD, a test set-up fix for Node 22 and later, typing fixes.

## How to use

1. Nothing to set: the pages look and react as the FCOM figures.

## How to test

| # | Do this                                                                        | Expected result                                                           |
|---|--------------------------------------------------------------------------------|---------------------------------------------------------------------------|
| 1 | A380X powered, open several FMS pages (INIT, FUEL&LOAD, PERF, POSITION, DATA). | No label runs out of its button; fields are one height; no "<br />" text. |
| 2 | DATA > ROUTE: open the NEW RTE menu.                                           | It opens upwards; SEC 3 is visible.                                       |
| 3 | F-PLN with winds: read the EFOB / T.WIND column.                               | Wind direction and speed fit their cells.                                 |
| 4 | DATA > PRINTER: tick and untick each AUTO PRINT box.                           | Each box ticks and unticks.                                               |
| 5 | POSITION > NAVAIDS: click the ADF BFO toggle.                                  | It toggles.                                                               |
| 6 | F-PLN revision > LL XING / TIME MKR: click the AURAL checkboxes.               | They tick and untick.                                                     |
| 7 | DATA > NAVAID: search a navaid ident.                                          | The navaid data shows; the MFD stays up.                                  |

# A380X ATC COM and datalink

The MFD ATC COM pages and the SD mailbox of the A380 FCOM on the FBW datalink, with a datalink that connects reliably, and ATC route clearances and constraints loaded into SEC 3

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A380X (the ACARS provider connection is shared with the A32NX)                                                                                                                                                                                                                                                                                                                                                        |
| <b>Where to find it</b> | MFD system menu <b>ATC COM</b> (or the KCCU ATC COM key); the SD <b>MAILBOX</b> ; MFD FMS <b>INIT</b> (FLT NBR); flyPad > Settings > ATSU / AOC                                                                                                                                                                                                                                                                       |
| <b>Branch</b>           | core/a380x-atccom-datalink , based on core/a380x-mfd-fms (stacked: needs core/surveillance and core/a380x-mfd-fms merged first). core/printer builds on it.                                                                                                                                                                                                                                                           |
| <b>Status</b>           | ATC COM pages and mailbox: tested in the sim 2026-09-27 (ATIS, frames, fixes), logon and MAYDAY 2026-09-28/29, PAN PAN PAN 2026-10-02. Flight number connection and SEND FAILED: OK 2026-09-28 and 2026-10-02. ACARS provider: seen working with BeyondATC 2026-09-29. Mailbox FILE FULL fix: OK 2026-10-02; @ markers: OK 2026-10-03. LOAD-SEC3: route clearance OK 2026-10-02; crossing constraints not sim-tested. |
| <b>Pictures</b>         | Captain MFD and SD in the local browser harness, running the build installed in the sim; the messages come from the harness (no ATC network). flyPad page in the same harness. No pictures for the mailbox fixes and LOAD-SEC3.                                                                                                                                                                                       |

1. ATC COM pages and the SD mailbox
2. Datalink connection with the flight number, and SEND FAILED
3. ACARS provider connection
4. SD mailbox fixes: FILE FULL after CANCEL, uplink @ markers
5. LOAD-SEC3: ATC route clearances and crossing constraints into SEC 3

## 1. ATC COM pages and the SD mailbox

**Aircraft:** A380X | **Where:** MFD ATC COM pages; SD MAILBOX | **Status:** Tested in the sim by the user: ATIS, REQUEST / OTHER REPORTS / EMERGENCY frames and the fixes of that test (frame delete, label layout, font sizes, ATIS time): OK (2026-09-27). Logon to BeyondATC (RJJJ) 2026-09-28, MAYDAY sent 2026-09-29, PAN PAN PAN sent 2026-10-02. Answering uplinks of a live controller (WILCO, UNABLE...) not recorded. Unit tests: 33.

### What it is for

The A380 talks to ATC by datalink: the crew logs on to a center, sends requests and reports, receives clearances and answers them, and gets the airport ATIS as text. The FCOM describes the MFD **ATC COM** pages (DSC-46-10-20-30) and the SD **MAILBOX** (DSC-46-10-10-70). They are all built on their FCOM figures and connected to the FBW ATSU, the same datalink system as the A32NX DCDU.

#### NOTE

The network is chosen in the flyPad: Settings > ATSU / AOC (Hoppie, BeyondATC or SayIntentions). The datalink needs VHF3 in DATA mode on the RMP.

| Page (header)   | Use                                                                                                                      |
|-----------------|--------------------------------------------------------------------------------------------------------------------------|
| CONNECT         | Logon (NOTIFICATION), CONNECTION STATUS with ADS, MAX UPLINK DELAY.                                                      |
| REQUEST         | Build a request from frames (climb, direct, offset, weather deviation, speed, clearances...) and send it to the mailbox. |
| REPORT & MODIFY | Position report, other reports, modify a prepared answer.                                                                |
| MSG RECORD      | The record of the closed dialogues.                                                                                      |
| ATIS            | Request and read the ATIS of three airports.                                                                             |
| EMER            | MAYDAY / PANPAN and the emergency reports.                                                                               |

Logging on: CONNECT

- 1. CONNECT > NOTIFICATION: type the **ATC CENTER** (4 letters) and press **NOTIFY**. The page shows NOTIFYING, then the center in NOTIFIED TO CENTERS (with the time), or NOTIFICATION FAILED.
- 2. When ATC accepts, CONNECTION STATUS shows the ACTIVE ATC (and the NEXT ATC after a transfer). DISCONNECT ends the connection.

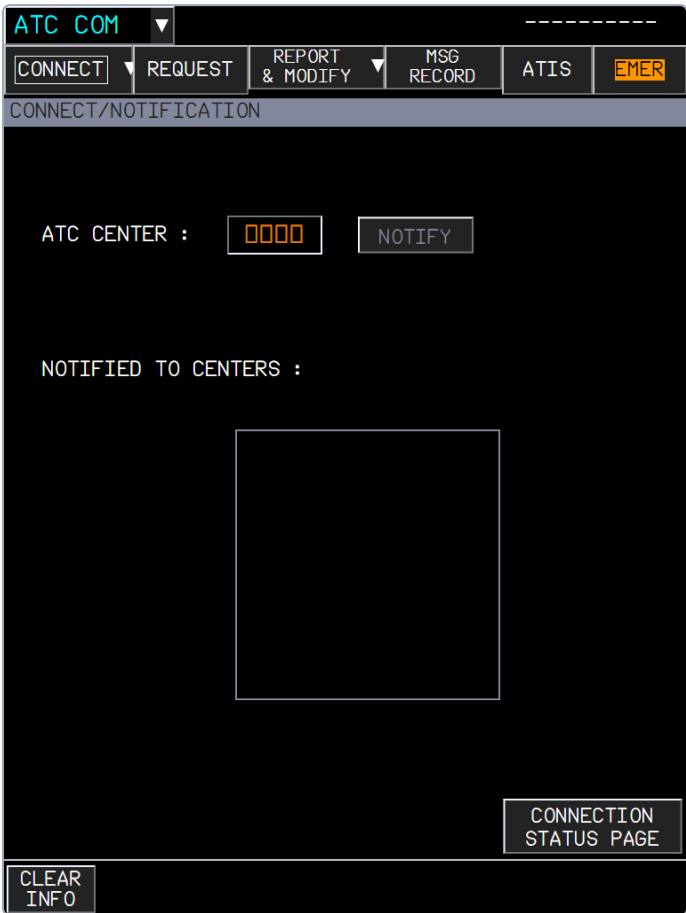


Figure 1. CONNECT / NOTIFICATION.

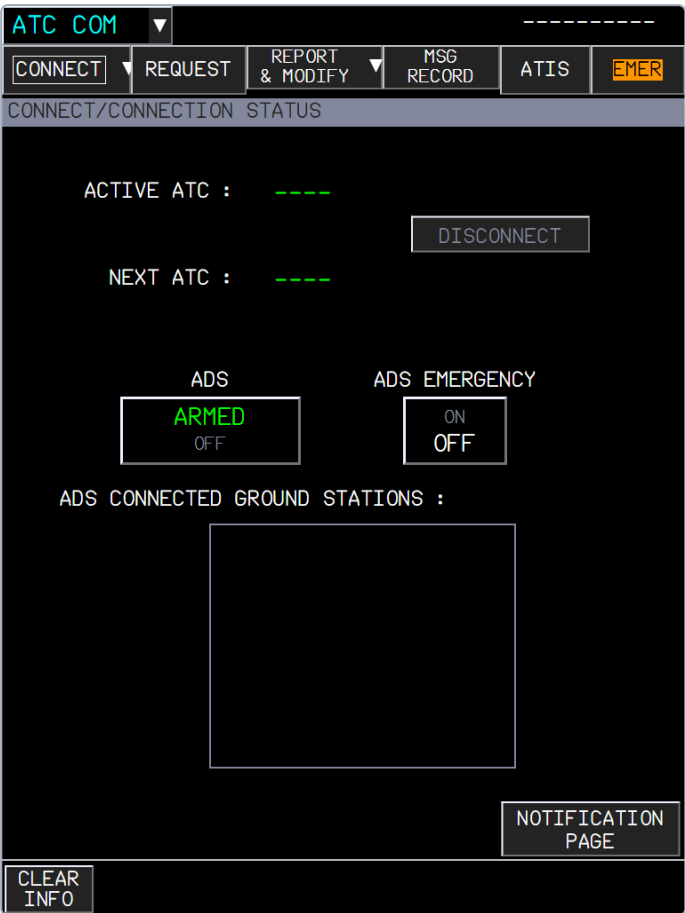


Figure 2. CONNECTION STATUS: active and next ATC, ADS ARMED / OFF, ADS EMERGENCY.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

CONNECT/MAX UPLINK DELAY

MAX UPLINK DELAY :

☒ NONE
   
☐ SET MAX UPLINK DELAY TO
   
 (ONLY ON DEMAND OF ACTIVE ATC)
   
 ACTIVE ATC :    ---

CLEAR INFO

**Figure 3.** MAX UPLINK DELAY: NONE, or a delay set on the demand of the active ATC.

### Asking ATC: REQUEST

1. Open the menus on the right (VERTICAL, LATERAL, SPEED, CLEARANCE, WHEN CAN WE EXPECT, OTHER) and pick the frames you need; up to 5 frames, each with its fields.
2. Fill the fields (FCOM entry formats; amber boxes are mandatory). ADD TEXT adds free text. The bin deletes a frame.
3. Press **XFR TO MAILBOX**: the request goes to the SD mailbox, where you **SEND** it.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

REQUEST

REQUEST DIR TO

TADEX

REQUEST CLB TO

FL360

AT

REQUEST OFFSET

0000

AT

REQUEST DEVIATION 20NM LEFT

-----

-----

DUE TO WEATHER

CANCEL

XFR TO MAILBOX

CLEAR INFO

VERTICAL

LATERAL

SPEED

CLEARANCE

WHEN CAN WE EXPECT

OTHER

ADD TEXT

**Figure 4.** A request of 5 frames: DIR TO TADEX, CLB TO FL360, OFFSET (amber: to fill), free text, DUE TO WEATHER.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

REQUEST

DEPARTURE ARPT

0000

DESTINATION

0000

GATE

-----

A/C TYPE

A388

ATIS CODE

0

VERTICAL

LATERAL

SPEED

CLEARANCE

WHEN CAN WE EXPECT

OTHER

ADD TEXT

CANCEL

XFR TO MAILBOX

CLEAR INFO

**Figure 5.** CLEARANCE > DEPARTURE: the departure clearance request (DCL): departure airport, destination, gate, aircraft type, ATIS code.

Reports: REPORT & MODIFY

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

REPORT/AUTO & MANUAL POSITION

AUTO POSITION REPORT

ONOFF

|      |       |                |
|------|-------|----------------|
|      | UTC   | ALT            |
| OVHD | MIPAK | 0946 Z32000 FT |
| PPOS | TAVUN | 1005 Z32000 FT |
| TO   | PUT   | 1022 Z         |
| NEXT | DALAN |                |

|          |        |            |           |
|----------|--------|------------|-----------|
|          | CAS    | GROUND     | VERTICAL  |
| SPEED    | 310 KT | 320 KT     | 0 FT/MIN  |
| HEADING  | 135 °T | TRACK      | 132 °T    |
| WIND     | -----  | SAT        | -40 C     |
| ICING    | TRACE  | TURBULENCE | LIGHT     |
| ETA DEST | 1133 Z | ENDURANCE  | 4 H30 MIN |

☐DEVIATING

☐CLIMBING TO

☐DESCENDING TO

ERASE ALL FIELDS

REFRESH DATA

ADD FREETEXT

XFR TO MAILBOX

CLEAR INFO

Figure 6. AUTO & MANUAL POSITION: the position report filled by the FMS (overhead, present position, to, next, times, levels, speeds, wind, SAT, ETA, endurance); AUTO POSITION REPORT ON sends it at each reporting point.

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

REPORT/OTHER REPORTS

BACK ON ROUTE

BACK ON ROUTE

PASSING POSITION

LEAVING ALTITUDE

LEVEL

REACHING ALTITUDE

REACHING BLOCK

ADD FREETEXT

CANCEL

XFR TO MAILBOX

CLEAR INFO

Figure 7. OTHER REPORTS: back on route, passing position, leaving / reaching altitude, level, reaching block, free text.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

REPORT/MODIFY

PRESENT ALTITUDE 12500 FT

CANCEL

ADD FREETEXT

XFR TO MAILBOX

CLEAR INFO

NO FMS DATA

**Figure 8.** MODIFY: a prepared answer (here PRESENT ALTITUDE 12500 FT) that the crew can change before sending.

## The SD MAILBOX

Every message to and from ATC goes through the mailbox at the bottom of the SD. It shows the active ATC, the ADS status, the message and the answer buttons the message expects.

SAT

XX °C

10:24: 00 GPS

GWCG

XX %

XX KG

ACTIVE ATC : LFBO

ADS OFF

RECALL

**Figure 9.** Mailbox without a message: ACTIVE ATC LFBO, ADS OFF.

|                                                                                                                                                                                                |                                                              |               |                                                                           |  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|---------------|---------------------------------------------------------------------------|--|
| SAT <span>XX</span> °C                                                                                                                                                                         |                                                              | 10:24: 00 GPS | GW <span>XX</span> KG<br>GWCG <span>XX</span> %<br>FOB <span>XX</span> KG |  |
| <br>MSG<br>1/3<br><br>RECALL | 1425Z FROM KZAK CTL OPEN<br>CLIMB TO REACH FL340 BY<br>BERGI |               | WILCO<br>STANDBY<br>UNABLE<br>PRINT                                       |  |

**Figure 10.** An uplink: CLIMB TO REACH FL340 BY BERGI, OPEN, with WILCO / STANDBY / UNABLE. MSG 1/3: three messages are waiting.

|                                                                                             |                                                                                                                       |               |                                                                           |  |
|---------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------|--|
| SAT <span>XX</span> °C                                                                      |                                                                                                                       | 10:24: 00 GPS | GW <span>XX</span> KG<br>GWCG <span>XX</span> %<br>FOB <span>XX</span> KG |  |
| <br>RECALL | TO KZAK CTL<br>REQUEST DEVIATION 20NM<br>LEFT OF ROUTE DUE TO CB<br>AHEAD WILL ADVISE WHEN<br>CLEAR OF WEATHER THANKS |               | SEND<br>CANCEL<br>PRINT                                                   |  |

**Figure 11.** A request ready to go: SEND or CANCEL.

| The message expects              | Buttons                   |
|----------------------------------|---------------------------|
| WILCO / UNABLE (a clearance)     | WILCO, STANDBY, UNABLE    |
| AFFIRM / NEGATIVE (a question)   | AFFIRM, STANDBY, NEGATIVE |
| ROGER (information)              | ROGER                     |
| A departure or oceanic clearance | ACK / REFUSE              |

UNABLE and NEGATIVE can add a reason (DUE TO WEATHER, A/C PERFORMANCE, TURBULENCE) and free text; MODIFY opens the answer on the MFD. The message colours follow the FCOM status legend.



MSG RECORD and ATIS

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

MSG RECORD/LIST

1250ZFROM LFBO CTL  
CLIMB TO FL380

1247ZFROM LFBO CTL  
MAINTAIN M.86

1246ZFROM LFBO CTL  
MAINTAIN M.85

1245ZFROM LFBO CTL  
MAINTAIN M.84

1244ZFROM LFBO CTL  
MAINTAIN M.83

1243ZFROM LFBO CTL  
MAINTAIN M.82

1242ZFROM LFBO CTL  
MAINTAIN M.81

1241ZFROM LFBO CTL  
MAINTAIN M.80

ERASE ALL

PRINT ALL

CLEAR INFO

Figure 12. MSG RECORD: the closed dialogues with their time and the answer given; ZOOM shows one in full; ERASE ALL, PRINT ALL.

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

ATIS/LIST

LFB0DEPR 1145Z

LFB0 DEP ATIS R 1145Z EXP ARR RWY 32R AND 21L /DEP /SID 5 B. 5 P WIND CALM VIS 3500 M - CB FEW 500 FT BKN 26000 FT /

LFP0ARR

LFB0ARRP 1200Z

LFB0 ARR ATIS P 1200Z ATIS INFO ARR/DEP APCH ILS APCH LDG 27L AND 26L / RWY 26 L WET TL 40 BIRD HAZARD AFTER VACATING RWY 26L HOLD SHORT OF RWY 26R TKOF 27L AND 26R SID 8A 8B 8Y 8Z QNH 1013 TEMP 12 DEWPOINT 8

SEND REQUEST

AUTO UPDATE

SEND AGAIN

PRINT ALL

UPDATE ALL

CLEAR INFO

Figure 13. ATIS: three request areas (departure, arrival, alternate, following the FMS airports), each with its ATIS text, AUTO UPDATE, and SEND REQUEST / SEND AGAIN.

ATC COM

CONNECT

REQUEST

REPORT  
& MODIFY

MSG  
RECORD

ATIS

EMER

ATIS/RECEIVED


LFB0 DEP R 1145Z  
LFB0 DEP ATIS R 1145Z EXP ARR RWY 32R AND  
21L /DEP /SID 5 B. 5 P WIND CALM VIS 3500 M  
- CB FEW 500 FT BKN 26000 FT /

RETURN  
TO LIST

CLEAR  
INFO

**Figure 14.** ATIS RECEIVED: the full text of an ATIS, RETURN TO LIST.

Emergency: EMER

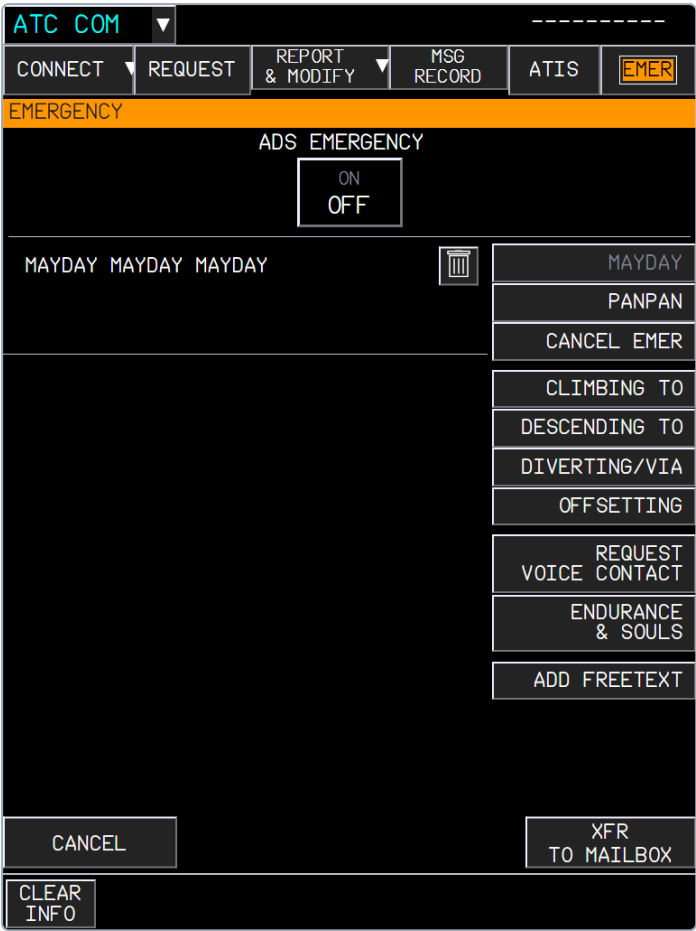

**Figure 15.** EMERGENCY (orange title): MAYDAY MAYDAY MAYDAY frame, PANPAN, CANCEL EMER and the emergency reports (climbing / descending to, diverting, offsetting, voice contact, endurance and souls). MAYDAY also switches the ADS to EMERGENCY.

What to expect

| Situation                             | What you should see                                                      |
|---------------------------------------|--------------------------------------------------------------------------|
| NOTIFY with no network set            | NOTIFICATION FAILED.                                                     |
| Request with an empty mandatory field | XFR TO MAILBOX stays greyed.                                             |
| Uplink received                       | Mailbox message with its answer buttons.                                 |
| Answer sent                           | The dialogue closes and goes to MSG RECORD.                              |
| ATIS requested                        | The text appears in its area; a newer version replaces it (AUTO UPDATE). |
| MAYDAY sent                           | ADS EMERGENCY ON.                                                        |

Limitations and why

| Limitation                                                        | Why                                                                                         | What to do                     |
|-------------------------------------------------------------------|---------------------------------------------------------------------------------------------|--------------------------------|
| Needs an online datalink network.                                 | ATC messages come from Hoppie, BeyondATC or SayIntentions through the flyPad ATSU settings. | Set the network in the flyPad. |
| No real ADS contracts.                                            | The ATSU networks do not handle ADS-C; ADS ARMED / EMERGENCY is shown locally.              | -                              |
| On this branch alone, every ATC COM PRINT says PRINTER NOT AVAIL. | Printing (ATIS, MSG RECORD, mailbox) is on core/printer , which builds on this branch.      | -                              |

|                                                                       |                                                                                                                                                                    |                                  |
|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| Answering the uplinks of a live controller is not recorded as tested. | Tested in the sim: logon, MAYDAY and PAN PAN PAN downlinks, the ATIS, a route clearance uplink (LOAD-SEC3). The answer buttons were checked with harness messages. | Report any wrong answer element. |
|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|

#### NOTE

The A380X README (list of what is not implemented, ATC / datalink line) now says that the MFD ATC COM pages and the SD mailbox work through the FBW ATSU and its ACARS providers, and that the datalink functions outside those pages are not implemented.

## How to use

1. Set the network in the flyPad (Settings > ATSU / AOC), VHF3 in DATA mode on the RMP, and your network callsign as FLT NBR on the MFD FMS INIT page.
2. MFD system menu > **ATC COM** > CONNECT > NOTIFICATION: type the ATC CENTER and press **NOTIFY**.
3. To ask ATC: REQUEST, pick the frames, fill them, **XFR TO MAILBOX**, then **SEND** in the SD mailbox.
4. To answer ATC: use the buttons of the message in the SD mailbox (WILCO / UNABLE, AFFIRM / NEGATIVE, ROGER...).
5. For the ATIS: ATIS page, airport of the request area, SEND REQUEST; tick AUTO UPDATE to get the new versions.
6. In an emergency: EMER, MAYDAY or PANPAN frame, XFR TO MAILBOX, SEND.

## How to test

| # | Do this                                                                                                                                                                                                                           | Expected result                                                                                                                                                                     |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X, any phase. flyPad > Settings > ATSU / AOC: ACARS provider set (Hopple with its logon code, or BeyondATC running); RMP VHF3 in DATA; MFD FMS INIT: FLT NBR = your network callsign. Open MFD system menu > <b>ATC COM</b> . | Header CONNECT / REQUEST / REPORT & MODIFY / MSG RECORD / ATIS / EMER; the REQUEST page opens.                                                                                      |
| 2 | CONNECT > NOTIFICATION: type a center (with BeyondATC: the one in its Frequencies tab, COM tuned to it), press <b>NOTIFY</b> .                                                                                                    | NOTIFYING, then the center in NOTIFIED TO CENTERS with the time (or NOTIFICATION FAILED). Once ATC accepts, CONNECTION STATUS shows the ACTIVE ATC and the SD mailbox shows it too. |
| 3 | ATIS page: in the first request area type an airport, press <b>SEND REQUEST</b> .                                                                                                                                                 | The ATIS text in the area; its time is the time written in the ATIS (e.g. 1151Z), ---- when it has none. Opening it shows ATIS RECEIVED with the full text.                         |
| 4 | REQUEST: VERTICAL menu > a climb frame, type FL360; add a second frame and delete it with the bin symbol.                                                                                                                         | The labels and fields of a line follow each other without overlap; the bin removes the frame.                                                                                       |
| 5 | Press <b>XFR TO MAILBOX</b> .                                                                                                                                                                                                     | The request in the SD mailbox with SEND and CANCEL.                                                                                                                                 |
| 6 | Press <b>SEND</b> in the mailbox (logged on).                                                                                                                                                                                     | The request is sent; when the dialogue closes it goes to MSG RECORD with its time.                                                                                                  |
| 7 | EMER page: MAYDAY MAYDAY MAYDAY frame, XFR TO MAILBOX, SEND.                                                                                                                                                                      | The MAYDAY is sent and CONNECT shows ADS EMERGENCY. BeyondATC answers NO MESSAGE HANDLING AVAILABLE FOR THIS REQUEST (not supported on its side).                                   |
| 8 | Receive an uplink (from a live controller, or self-sent, see LOAD-SEC3 below) and answer it.                                                                                                                                      | The message in the mailbox with the buttons it expects; after the answer the dialogue closes and goes to MSG RECORD.                                                                |

## 2. Datalink connection with the flight number, and SEND FAILED

**Aircraft:** A380X | **Where:** MFD FMS INIT (FLT NBR); FMS message area; SD MAILBOX | **Status:** Tested in the sim by the user: logon to BeyondATC after the FLT NBR fix OK (2026-09-28); flight number connection from the FMS and SEND FAILED without ATC OK (2026-10-02). FMS DATALINK NOT AVAIL not recorded as seen in the sim. Unit tests: 5.


### What it is for

The INIT page FLT NBR field wrote the flight plan only: the field did not refresh and the entry never connected the datalink networks (FBW TELEX and the ACARS provider), so ATC logons and downlinks failed. And a message sent from the mailbox with no ATC center was dropped without a word. Now the FMS connects the networks whenever the flight number of the active flight plan changes, and the mailbox says SEND FAILED (A380 FCOM DSC-46-10-20-60).

### What you see

The ATC COM pages send and receive through the aircraft datalink, which connects with the flight number of the active flight plan (FMS INIT, FLT NBR). It must be your callsign on the network (Hoppie, BeyondATC or SayIntentions: the one set in the flyPad, Settings > ATSU / AOC).

- The flight number connects the datalink however it gets there: typed on the INIT page, from the company flight plan (SimBrief), from an activated secondary flight plan, or already there when you reload the flight.
- If the connection is refused, or the datalink does not answer, the FMS message area shows **FMS DATALINK NOT AVAIL** (white). It goes away by itself once connected; typing the flight number again tries again.
- A message sent from the mailbox with no ATC center connected (no logon done, or the center logged you off) shows **SEND FAILED** instead of nothing.

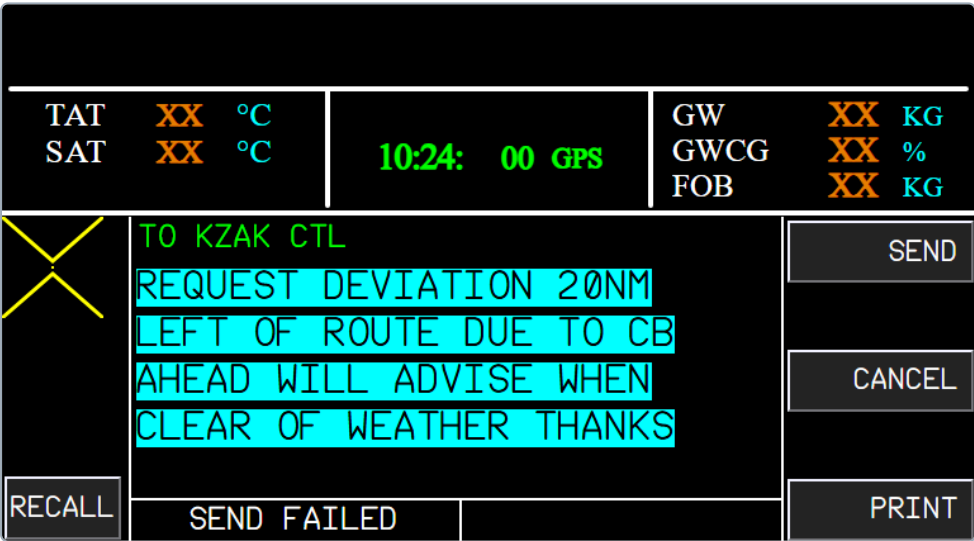

**Figure 16.** SEND FAILED under a message the mailbox could not send (no active ATC center).

**NOTE**  
With BeyondATC: log on to the center shown in its Frequencies tab (e.g. RJJJ), above FL145. BeyondATC does not handle MAYDAY or PAN PAN by datalink: it answers NO MESSAGE HANDLING AVAILABLE FOR THIS REQUEST. Declare an emergency by voice with it.

### How to use

1. Enter the flight number on the MFD FMS **INIT** page (FLT NBR), or get it with the company flight plan. It must be your callsign on the network.
2. If **FMS DATALINK NOT AVAIL** shows, check the ACARS provider, then type the flight number again to retry.
3. Log on (ATC COM > CONNECT) before sending: without an active ATC the mailbox says SEND FAILED.

## How to test


| # | Do this                                                                                                                                         | Expected result                                                                                                  |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, ACARS provider running and set in flyPad > Settings > ATSU / AOC. MFD FMS <b>INIT</b> : type the flight number in FLT NBR. | The field shows the new flight number at once. flyPad ATSU / AOC: the provider shows Connected (green).          |
| 2 | ATC COM > CONNECT > NOTIFICATION: NOTIFY a center.                                                                                              | The logon goes out (NOTIFYING, then NOTIFIED TO CENTERS): the networks are connected.                            |
| 3 | Load a flight with the flight number already in the active flight plan (or activate a SEC plan with a flight number).                           | The datalink connects without typing the number again.                                                           |
| 4 | Without logon (no ACTIVE ATC), prepare a request (REQUEST, XFR TO MAILBOX) and press <b>SEND</b> in the SD mailbox.                             | <b>SEND FAILED</b> under the message (before: nothing happened).                                                 |
| 5 | If the connection is refused (for example FBW TELEX refuses the flight number), look at the FMS message area.                                   | <b>FMS DATALINK NOT AVAIL</b> in white; it goes away once connected, and typing the flight number again retries. |

## 3. ACARS provider connection

**Aircraft:** A32NX and A380X | **Where:** flyPad > Settings > ATSU / AOC | **Status:** Late start and close / restart of BeyondATC seen working in the user's flights (2026-09-29); not re-checked after the final build. Unit tests: 4.

### What it is for

The ATC and company datalink of the aircraft (CPDLC logon, requests, messages, ATIS and METAR) goes through an ACARS provider you choose on the flyPad: Hoppie, BeyondATC or SayIntentions. The aircraft must find it, then connect your flight number to it.

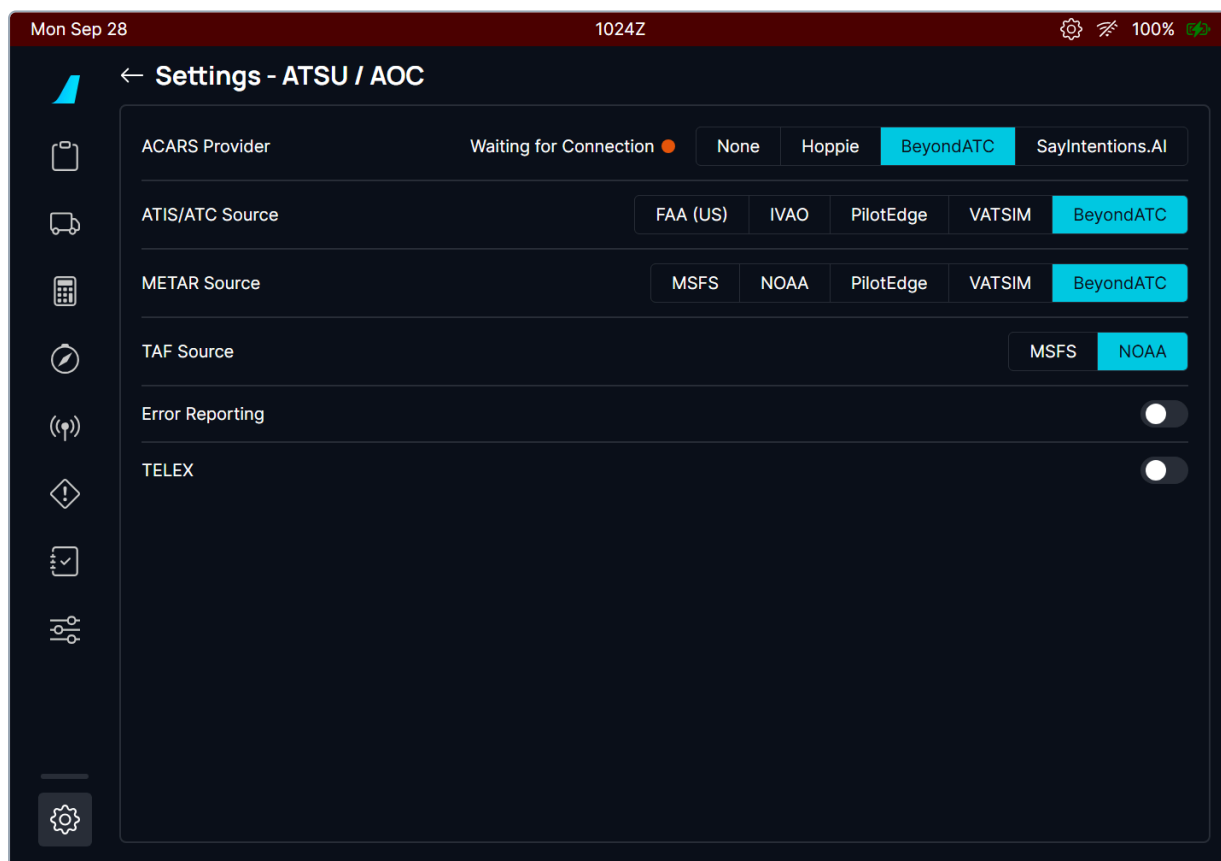

**Figure 17.** ACARS Provider: BeyondATC, "Waiting for Connection" until BeyondATC answers (then "Connected", green).

What happens now

- **Start the provider when you like.** The aircraft looks for it every 5 s for 5 minutes, then once a minute, without end. Your provider, ATIS and METAR settings are never changed.
- **Flight number.** Entered before the provider answers, it is connected as soon as it answers.
- **Provider closed.** Within about a minute the status goes back to "Waiting for Connection"; start it again and the aircraft connects your flight number again by itself. With BeyondATC, log on to the ATC center again (it forgets the logon when it closes).
- **TELEX on.** If FBW's TELEX service refuses your flight number, the ACARS provider is connected anyway (on the A380X, the FMS shows FMS DATALINK NOT AVAIL for the TELEX failure).

What to expect

- No extra traffic with Hoppie: once your flight number is connected, the regular polls (every 45 to 75 s) check the provider.
- Before this change, a provider started more than 5 minutes after the aircraft set the flyPad to NONE: select your provider again once if it shows NONE.

How to use

1. flyPad > Settings > **ATSU / AOC**: choose the ACARS provider (Hoppie, BeyondATC or SayIntentions).
2. Start the provider program whenever you like, before or after loading the aircraft.
3. Enter the flight number (MFD INIT on the A380X, MCDU INIT A on the A32NX): it is connected as soon as the provider answers.

How to test

| # | Do this                                                                                                   | Expected result                                                                                                                         |
|---|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Load the aircraft with BeyondATC NOT running. flyPad > Settings > ATSU / AOC: ACARS provider BeyondATC.   | "Waiting for Connection".                                                                                                               |
| 2 | Wait more than 5 minutes, then start BeyondATC.                                                           | Within about a minute the status turns to "Connected" (green). The provider, ATIS and METAR settings are unchanged (not reset to NONE). |
| 3 | Enter the flight number before BeyondATC answers (restart the test with the flight number entered first). | The flight number is connected as soon as BeyondATC answers.                                                                            |
| 4 | Close BeyondATC.                                                                                          | Within about a minute the status goes back to "Waiting for Connection".                                                                 |
| 5 | Start BeyondATC again.                                                                                    | The aircraft connects the flight number again by itself; log on to the ATC center again (BeyondATC forgets the logon when it closes).   |

4. SD mailbox fixes: FILE FULL after CANCEL, uplink @ markers

|                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> SD MAILBOX; MFD ATC COM MSG RECORD   <b>Status:</b> Tested in the sim by the user: FILE FULL no longer sticks after cancels, PAN PAN PAN sent to BeyondATC (2026-10-02); @ markers shown as cyan values (2026-10-03). |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

Two mailbox problems found in the sim with BeyondATC:

- **FILE FULL for good.** The mailbox keeps at most five open messages per direction and holds the next ones back with FILE FULL. A cancelled downlink (CANCEL of a prepared message) left the ATC function but kept its place in

the mailbox file, so after five cancels the file stayed full: every new downlink, a PAN PAN PAN included, waited behind FILE FULL. A cancel now frees the place, the held messages move in, and FILE FULL goes when the file has room again (A380 FCOM DSC-46: "File no more full").

- **Triangles around values.** Hoppie and BeyondATC mark the variable fields of a free text uplink with @ (CLRD TO @CYVR@ RWY @06R@), and the A380 display font draws @ as a triangle. The mailbox now shows the marked fields as main parameters, in blue (FCOM DSC-46-10-10-70), without the markers, as the A32NX DCDU does; an unclosed marker runs to the end of the text, and a word glued to a field ("@4611@.") stays glued. MSG RECORD drops the markers too.

What you should see

| Situation                                                    | What you should see                                                               |
|--------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Five downlinks prepared and cancelled, then a new one        | The new downlink is shown with SEND / CANCEL; no FILE FULL.                       |
| More than five open downlinks                                | FILE FULL for the extra ones, until a place is freed (sent, closed or cancelled). |
| BeyondATC departure clearance "CLRD TO @CYVR@ RWY @06R@ ..." | CLRD TO CYVR RWY 06R ..., the values in blue, no triangles.                       |

How to use

1. Nothing to set: CANCEL a prepared downlink as usual, read the uplinks as usual.

How to test

| # | Do this                                                                                                                                       | Expected result                                                                                            |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 1 | A380X, logged on (ATC COM > CONNECT). Prepare a request (REQUEST, XFR TO MAILBOX) and press <b>CANCEL</b> in the SD mailbox. Do it six times. | Each new request shows SEND / CANCEL; FILE FULL never stays.                                               |
| 2 | Then prepare an emergency (EMER, PANPAN frame, XFR TO MAILBOX) and SEND.                                                                      | The PAN PAN PAN is sent (no FILE FULL).                                                                    |
| 3 | With BeyondATC, ask for a departure clearance (REQUEST > CLEARANCE > DEPARTURE, XFR TO MAILBOX, SEND).                                        | The clearance uplink in the mailbox: values (destination, runway, squawk...) in blue, no triangle symbols. |
| 4 | Close the dialogue and open ATC COM > <b>MSG RECORD</b> .                                                                                     | The recorded text has no @ characters.                                                                     |

5. LOAD-SEC3: ATC route clearances and crossing constraints into SEC 3

**Aircraft:** A380X | **Where:** SD MAILBOX **LOAD-SEC3**; MFD FMS SEC INDEX | **Status:** Route clearance tested in the sim by the user (self-sent uplink): LOAD OK, ATC F-PLN INSERTED IN SEC 3 (2026-10-02). Crossing constraints and the REJECTED ATC INFO page not sim-tested. Unit tests: route clearance, constraints, mailbox logic.

What it is for

A route clearance or a crossing constraint received by CPDLC can be loaded into the FMS instead of being typed: the FCOM puts it in SEC 3, as a copy of the active flight plan with the clearance in it, for the crew to check and activate (A380 FCOM DSC-22-FMS-10-40, DSC-46-10-40). The mailbox has the **LOAD-SEC3** key in the 4th button position, on the uplinks that can be loaded only; it stays after WILCO, with CLOSE.

| Uplink (CPDLC element) | What is loaded into SEC 3 |
|------------------------|---------------------------|
|------------------------|---------------------------|



|                                                                                                                                        |                                                                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Route clearance: CLEARED TO ... VIA ... (UM79), CLEARED ... (UM80), AT ... CLEARED ... (UM83)                                          | SID (not once airborne), airways, waypoints, lat/long points, STAR and a new destination. The rest of the en route part is replaced; a UM79 route ends at its clearance limit.                                                                                 |
| Crossing constraints (UM46 to 53, 55, 56, 58 to 61): CROSS ... AT / AT OR ABOVE / AT OR BELOW / BETWEEN ..., AT ... speed, AT ... time | An altitude constraint, a speed constraint (90 kt to VMO 340 kt, in knots) or an RTA on that waypoint of the flight plan. The RTA is kept per secondary flight plan and follows it on a swap or an activation; the VERT REV RTA panel now works on a SEC plan. |

## What you should see

| Situation                                                      | What you should see                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LOAD-SEC3 pressed                                              | Mailbox information area: LOADING, then LOAD OK, LOAD PARTIAL or LOAD FAILED.                                                                                                                                                                                                            |
| Everything loaded                                              | FMS message ATC F-PLN INSERTED IN SEC 3. SEC 3 holds the active flight plan with the clearance.                                                                                                                                                                                          |
| Some elements rejected                                         | ATC F-PLN INSERTED IN SEC 3 / REJECTED INFO SEE SEC / INDEX. SEC INDEX, SEC 3: <b>REJECTED ATC INFO</b> button, listing each element (description, value, AT fix) and why: NOT IN DATABASE, AWY/WPT MISMATCH, DATA NOT ALLOWED IN PHASE, NOT IN F-PLN, FORMAT ERROR, ENTRY OUT OF RANGE. |
| Nothing usable                                                 | RECEIVED ATC MSG NOT VALID.                                                                                                                                                                                                                                                              |
| No FMS answer within 30 s, or a second LOAD-SEC3 while loading | LOAD NOT AVAIL.                                                                                                                                                                                                                                                                          |
| A speed as a Mach number (e.g. M.82)                           | Rejected: FORMAT ERROR (the FCOM speed format is in knots).                                                                                                                                                                                                                              |

### NOTE

The constraint upload awaits in a plain statement, not as an operand: the sim's JavaScript engine can reject an await used as an operand and then blanks the whole MFD. No visible change.

## Limitations and why

| Limitation                                                                                                                                                       | Why                                                                          | What to do                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|------------------------------------------------|
| A duplicate waypoint ident is taken as the one nearest to the previous point.                                                                                    | Design choice: no NON UNIQUE rejection.                                      | Check the route in SEC 3 before activating it. |
| A constraint on an en route waypoint with no climb or descent leg type is set as a descent constraint in cruise, else from the second half of the en route part. | The FMS needs CLB or DES for a constraint; this is a guess.                  | Check the constraint in SEC 3.                 |
| Needs an uplink of one of these CPDLC elements.                                                                                                                  | Live controllers rarely send them; BeyondATC route clearances were not seen. | Send yourself the uplink (How to test).        |

## How to use

1. Receive the clearance in the SD mailbox and press **LOAD-SEC3**.
2. Wait for LOAD OK (or LOAD PARTIAL), then read the FMS message.
3. MFD FMS: SEC INDEX, SEC 3: check the flight plan (and REJECTED ATC INFO if shown).
4. Answer the uplink (WILCO / UNABLE) and, if you accept the clearance, activate SEC 3 (or swap it).

## How to test

| # | Do this                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Expected result                                                                                                                           |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X with an active flight plan whose en route part has waypoints ahead, datalink connected (flight number entered). Send yourself a route clearance. With BeyondATC (tested way, ask the owner of the setup first): open its local relay <code>http://localhost:57698/acars/system/connect.html</code> with <code>from=CZUL&amp;to=&lt;callsign&gt;&amp;type=cpdlc&amp;packet=/data2/1//WU/CLEARED TO @&lt;DEST&gt;@ VIA @&lt;FIX1&gt; DCT &lt;FIX2&gt;@</code> (URL-encoded). With Hoppie, send the same CPDLC packet to your callsign through its connect.html. | Within a minute (next poll) the uplink is in the SD mailbox, the values in blue, with <b>LOAD-SEC3</b> in the 4th button position.        |
| 2 | Press <b>LOAD-SEC3</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | LOADING, then LOAD OK in the mailbox; FMS message ATC F-PLN INSERTED IN SEC 3.                                                            |
| 3 | MFD FMS > SEC INDEX > SEC 3 F-PLN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | The active route with the clearance: the cleared fixes joined, the waypoints after them removed, the route ending at the clearance limit. |
| 4 | Send a clearance with a fix that does not exist (e.g. VIA @ZZZZZ@).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | LOAD PARTIAL (or LOAD FAILED); SEC INDEX shows REJECTED ATC INFO with ZZZZZ and NOT IN DATABASE.                                          |
| 5 | Send a crossing constraint on a waypoint ahead (CPDLC UM46, e.g. CROSS <FIX> AT FL240) and press LOAD-SEC3.                                                                                                                                                                                                                                                                                                                                                                                                                                                         | SEC 3: an altitude constraint FL240 on that waypoint (not sim-tested yet).                                                                |
| 6 | Press LOAD-SEC3 on a second uplink while the first one is still LOADING.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | LOAD NOT AVAIL on the second one.                                                                                                         |

# A380X fuel jettison and FINAL fuel

Fuel jettison down to the JTSN GW with its ECAM memo and procedures, the jettison valve failures with their alerts, a fuel mist plume at the jettison outlets, and the FINAL fuel and time from the A380 holding fuel flow

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Where to find it | Overhead FUEL panel: JETTISON ARM and ACTIVE; MFD FMS ACTIVE/FUEL&LOAD: JTSN GW; E/WD and SD FUEL; flyPad > Failures > ATA 28; outside view of the wings; MFD FMS FUEL&LOAD: FINAL and EXTRA time                                                                                                                                                                                                                                                                                                                                                                          |
| Branch           | core/fuel , based on core/a380x-mfd-fms (stacked: needs core/surveillance and core/a380x-mfd-fms merged first). The plume needs the aircraft-large-files companion change fa6c5d1 (jettison outlet nodes, fork TCdr/aircraft-large-files).                                                                                                                                                                                                                                                                                                                                 |
| Status           | Jettison: tested in the sim (September 2026), rate checked live on 2026-10-02 (2.5 t/min, feed tanks untouched). Valve failures with FUEL JETTISON FAULT, VLV NOT CLOSED and INOP SYS JETTISON: OK 2026-10-02. Plume: look and logic OK in flight 2026-10-03, position at the outlets OK 2026-10-04. SD FUEL jettison lines white during a normal jettison: sim-tested on develop 2026-10-04. FINAL fuel and time from the holding fuel flow: OK at the gate on develop 2026-10-08 (user word); its EXTRA time: not sim-tested. The core branch itself was not sim-tested. |
| Pictures         | MFD and EWD in the local browser harness, running the builds installed in the sim; the EWD states are the ones the FWS sends in flight. No pictures for the failures and the plume.                                                                                                                                                                                                                                                                                                                                                                                        |

1. Fuel jettison with the JTSN GW, ECAM memo and procedures
2. Jettison valve failures: FUEL JETTISON FAULT, VLV NOT CLOSED, INOP SYS JETTISON
3. Fuel jettison plume at the outlets
4. FINAL fuel and time from the A380 holding fuel flow

## 1. Fuel jettison with the JTSN GW, ECAM memo and procedures

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> Overhead JETTISON ARM / ACTIVE; MFD FUEL&LOAD JTSN GW; ECP ABN PROC   <b>Status:</b> Tested in the sim by the user (September 2026); jettison rate measured live on 2026-10-02: 2.5 t per minute from the outer, mid and trim tanks, feed tanks untouched; SD FUEL jettison lines white during a normal jettison: sim-tested on develop 2026-10-04. Unit tests: FuelJettison.spec.ts (FCOM DSC-28-40), JettisonValveIndication.spec.ts (SD colours, DSC-28-20). |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

FBW had the overhead JETTISON ARM and ACTIVE pushbuttons, but they did nothing. The fuel management (FQMS) now jettisons the fuel of the transfer tanks down to the gross weight entered on the MFD, and the ECAM shows the memo and the procedures of the FCOM.

### 1. Set the jettison gross weight

1. MFD FMS **ACTIVE/FUEL&LOAD** page. **JTSN GW** is shown when the active flight plan has its mandatory data.
2. Enter the gross weight at which the jettison must stop, in tonnes (or 1000 lb with the LBS unit).
3. Allowed range: from **ZFW + 11 000 lb** (5.0 t) to the maximum gross weight (FCOM DSC-22-FMS-20-100). Outside it: ENTRY OUT OF RANGE with the range.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

---

.-

T

CG

---

.-

%

FOB

---

.-

T

ZFW

300.0

T

ZFWCG

36.0

%

BLOCK

150.0

T

FUEL  
PLANNING \*

TAXI

1.5

T

PAX NBR

000

TRIP

---

.-

T

---

:-

--

CI

---

RTE RSV

---

.-

T

5.0

%

JTSN GW

400.0

T

ALTN

0.0

T

---

:-

--

TOW

448.5

T

FINAL

6.0

T

00:30

LW

---

.-

T

TIME

EFOB

MIN FUEL AT DEST

DEST

NONE

---

:-

--

---

.-

T

6.0

T

ALTN

NONE

---

:-

--

---

.-

T

EXTRA

---

.-

T

---

:-

--

RETURN

MSG  
LIST

Figure 1. JTSN GW 400.0 t entered (ZFW 300.0 t).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

---

.-

T

CG

---

.-

%

FOB

---

.-

T

ZFW

300.0

T

ZFWCG

36.0

%

BLOCK

150.0

T

FUEL  
PLANNING \*

TAXI

1.5

T

PAX NBR

000

TRIP

---

.-

T

---

:-

--

CI

---

RTE RSV

---

.-

T

5.0

%

JTSN GW

400.0

T

ALTN

0.0

T

---

:-

--

TOW

448.5

T

FINAL

6.0

T

00:30

LW

---

.-

T

TIME

EFOB

MIN FUEL AT DEST

DEST

NONE

---

:-

--

---

.-

T

6.0

T

ALTN

NONE

---

:-

--

---

.-

T

EXTRA

---

.-

T

---

:-

--

RETURN

CLEAR  
INFO

ENTRY OUT OF RANGE  
RNG: 305.0 TO 512.0 T

Figure 2. 290 t is below ZFW + 5.0 t: the range is shown in the message area.

CAUTION

Without a JTSN GW the FQMS has no target weight: the jettison then runs until the transfer tanks are empty (or a pushbutton is set OFF).

2. Run the procedure

The ABN PROC procedure takes the crew through the steps. ECP **ABN PROC**, then FUEL, then JETTISON:

SMOKE / FUMES

EMER EVAC

EMER DESCENT

DITCHING

FORCED LANDING

UNRELIABLE AIRSPEED INDICATION

ENG

F/CTL

L/G

NAV

FUEL

MISCELLANEOUS

Figure 3. ABN PROC menu: FUEL selected.

ABNORMAL PROC


FUEL

JETTISON


FUEL LEAK

MAN BALANCING PROCEDURE

Figure 4. FUEL sub-menu: JETTISON.

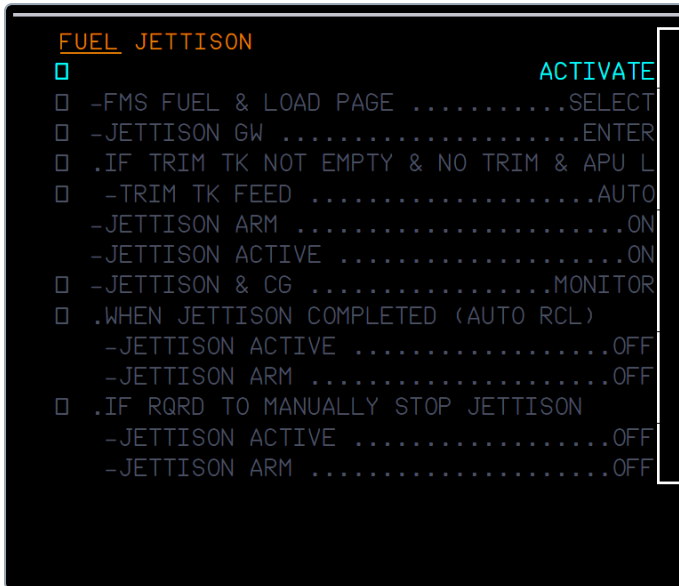


**Figure 5.** The procedure before ACTIVATE: all lines in grey.

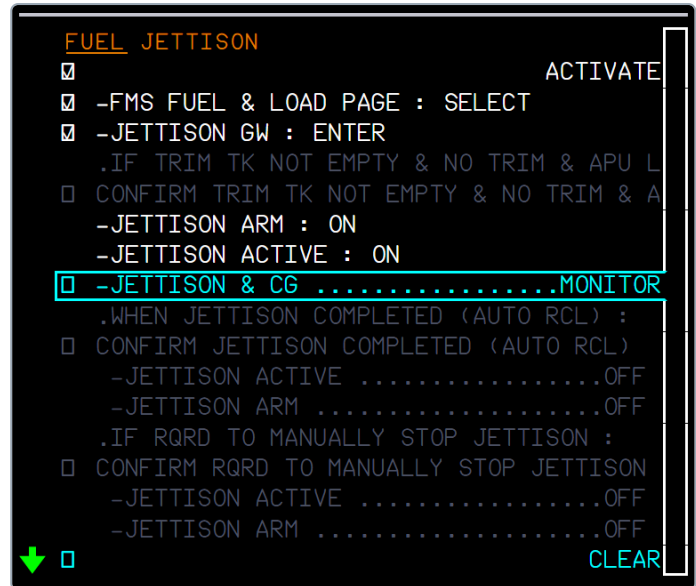

**Figure 6.** Activated: the FMS lines checked by the crew, JETTISON ARM and ACTIVE ticked by the FWS as the pushbuttons are set (sensed lines).

- FMS FUEL & LOAD PAGE ... SELECT, JETTISON GW ... ENTER: crew check lines.
- IF TRIM TK NOT EMPTY & NO TRIM & APU LINE FAULT: TRIM TK FEED AUTO (condition line, confirmed by the crew).
- **JETTISON ARM ON, JETTISON ACTIVE ON:** sensed, they tick themselves.
- JETTISON & CG ... MONITOR: watch the SD FUEL page and the CG.
- WHEN JETTISON COMPLETED (AUTO RCL) / IF RQRD TO MANUALLY STOP JETTISON: ACTIVE OFF then ARM OFF, sensed.


### 3. During the jettison

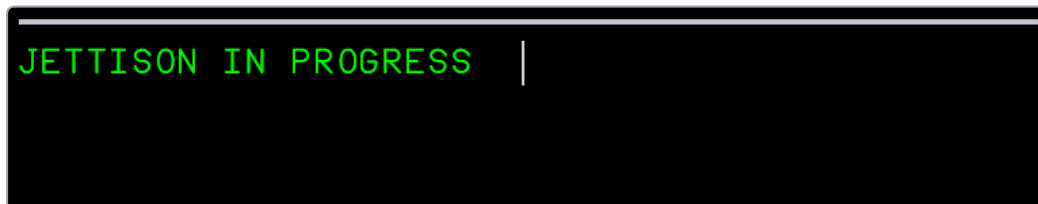

**Figure 7.** The EWD memo while the fuel is jettisoned.

- Memo **JETTISON IN PROGRESS** (green).
- Fuel leaves the **transfer tanks** (outer, mid, inner and trim) at the FCOM rate of **330 693 lb/h** (about 2.5 t per minute), in proportion to their content, so they empty together. The **feed tanks are never jettisoned**.
- The trim tank is held when the CG reaches the forward T.O/LDG limit, and resumes when the CG is 0.5 % aft of it.
- The other automatic transfers pause during the jettison.
- The SD FUEL page shows the two jettison valves open, with the jettison lines and JETTISON legends in white (normal, FCOM DSC-28-20), and the quantities decreasing. Before the fix on this branch they were amber during every jettison (the page did not know a jettison was running).

## 4. When it stops

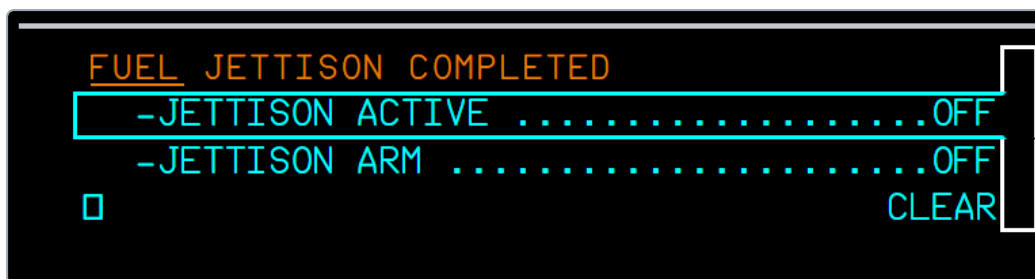

**Figure 8.** FUEL JETTISON COMPLETED: set ACTIVE then ARM OFF; the lines tick as the pushbuttons are released.

| Situation                                        | What you should see                                                              |
|--------------------------------------------------|----------------------------------------------------------------------------------|
| Gross weight reaches the JTSN GW                 | The jettison stops, FUEL JETTISON COMPLETED shows, the ACTIVE ON light goes off. |
| All transfer tanks empty (or no JTSN GW entered) | Same: stops and COMPLETED.                                                       |
| ACTIVE or ARM set OFF by the crew                | Stops at once (manual stop). No COMPLETED alert.                                 |
| Both pushbuttons OFF after COMPLETED             | The alert and the COMPLETED state clear; a new jettison can be started.          |
| ACTIVE ON without ARM                            | Nothing: ARM is needed.                                                          |
| AC 1 bus not powered                             | No jettison (FQMS channel unpowered).                                            |

## Limitations and why

| Limitation                                                                                     | Why                                                                                                                                                                                           | What to do                          |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| JETTISON FAULT, VLV NOT CLOSED and INOP SYS JETTISON come only from the flyPad valve failures. | No other cause of a jettison valve fault is simulated; the four valve failures are described in the next feature.                                                                             | -                                   |
| The fuel does not really flow out through the outlets.                                         | The MSFS fuel system has no overboard dump: the FQMS sets the tank quantities directly and opens valves 57 / 58 for the SD picture. A fuel mist plume is drawn at the outlets (last feature). | -                                   |
| After an update, the first flight needs a full MSFS restart.                                   | The change touches the behaviour XML of the overhead, which MSFS loads at start.                                                                                                              | Restart MSFS once after installing. |

## How to use

1. MFD FMS **ACTIVE/FUEL&LOAD**: enter **JTSN GW** (the gross weight at which the jettison stops).
2. ECP **ABN PROC** > FUEL > JETTISON, ACTIVATE, and follow the lines.
3. Overhead FUEL panel: **JETTISON ARM** ON, then **ACTIVE** ON. Monitor the SD FUEL page and the CG.
4. At FUEL JETTISON COMPLETED (or to stop earlier): ACTIVE OFF, then ARM OFF.

## How to test

| # | Do this                                                                                                                                                                     | Expected result                                                |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| 1 | A380X with fuel in the transfer tanks (e.g. 150 t block), AC power, active flight plan with its mandatory data. MFD FMS ACTIVE/FUEL&LOAD: type a JTSN GW below ZFW + 5.0 t. | ENTRY OUT OF RANGE with the allowed range in the message area. |

|   |                                                           |                                                                                                                                                                                                                                                                      |
|---|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | Type a JTSN GW about 20 t below the current gross weight. | JTSN GW shows the value.                                                                                                                                                                                                                                             |
| 3 | ECP ABN PROC > FUEL > JETTISON, ACTIVATE.                 | The ABN PROC FUEL JETTISON procedure; JETTISON ARM and ACTIVE lines not ticked.                                                                                                                                                                                      |
| 4 | Set <b>JETTISON ACTIVE</b> ON without ARM.                | Nothing happens (ARM is needed).                                                                                                                                                                                                                                     |
| 5 | Set <b>JETTISON ARM</b> ON (ACTIVE ON).                   | Memo JETTISON IN PROGRESS (green); the ARM and ACTIVE lines tick; SD FUEL: both jettison valves open, jettison lines and JETTISON legends white (not amber), the outer, mid, inner and trim quantities fall together (about 2.5 t per minute); feed tanks unchanged. |
| 6 | Wait until the gross weight reaches the JTSN GW.          | The jettison stops; FUEL JETTISON COMPLETED with ACTIVE OFF / ARM OFF; the ACTIVE ON light goes off.                                                                                                                                                                 |
| 7 | Set ACTIVE OFF, then ARM OFF.                             | The lines tick and the COMPLETED alert clears.                                                                                                                                                                                                                       |
| 8 | Start a new jettison and set ACTIVE OFF halfway.          | It stops at once, without COMPLETED.                                                                                                                                                                                                                                 |

## 2. Jettison valve failures: FUEL JETTISON FAULT, VLV NOT CLOSED, INOP SYS JETTISON

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 28; E/WD; SD STATUS; overhead JETTISON ACTIVE OPEN light | **Status:** Tested in the sim by the user: one valve stuck closed, both stuck closed, stuck open, all OK (2026-10-02, after the FAULT / INOP SYS fix); the cases again with the plume on 2026-10-03. Unit tests: FuelJettison.spec.ts, FuelJettisonFlags.spec.ts.

### What it is for

The A380 FCOM has two jettison alerts, FUEL JETTISON FAULT and FUEL JETTISON VLV NOT CLOSED (PRO-ABN-ECAM-10-28 P 61-63), and INOP SYS JETTISON on the STATUS page. FBW had no jettison valve failure to trigger them. There are now four failures, one per valve and position. A first version never showed the FAULT caution and the INOP SYS: the FWS read the FQMS flags as numbers (1) and combined them with a function that only counts `true`; they are now read as real booleans.

### The failures

| flyPad > Failures > ATA 28 (Fuel)                                    | Effect                                                                                                                                                                                                                          |
|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Jettison valve L stuck closed / Jettison valve R stuck closed</b> | That valve does not open: the fuel goes through the other one at <b>half the rate</b> . The FQMS records the valve fault when the jettison is selected (ARM and ACTIVE ON), until the failure is removed.                       |
| Both stuck closed                                                    | The jettison is <b>not available</b> : no fuel leaves.                                                                                                                                                                          |
| <b>Jettison valve L stuck open / Jettison valve R stuck open</b>     | That valve stays open: the <b>OPEN</b> light of the JETTISON ACTIVE pushbutton stays on and the SD shows the valve open, also with no jettison running. No fuel is lost by it (the jettison itself still needs ARM and ACTIVE). |

### What you should see

| Situation                                 | What you should see                                                                                                                                                                                                 |
|-------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| One valve stuck closed, jettison selected | Amber caution <b>FUEL JETTISON FAULT</b> ; on the ground with the line JETTISON L (R) VLV FAULT. Jettison at half rate. STATUS: INOP SYS <b>JETTISON</b> (the FWS lists it whenever FUEL JETTISON FAULT is active). |

|                                             |                                                                                                                                                                                                              |
|---------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Both valves stuck closed, jettison selected | <b>FUEL JETTISON FAULT</b> with JETTISON NOT AVAIL, then JETTISON ACTIVE ... OFF and JETTISON ARM ... OFF (they tick as the pushbuttons are set OFF). STATUS: INOP SYS <b>JETTISON</b> . No fuel jettisoned. |
| A valve stuck open, no jettison running     | Amber caution <b>FUEL JETTISON VLV NOT CLOSED</b> with JETTISON ACTIVE ... OFF and JETTISON ARM ... OFF; OPEN light on.                                                                                      |
| Takeoff and landing                         | The alerts are inhibited in the takeoff and landing flight phases (FCOM inhibitions).                                                                                                                        |

### How to use

- flyPad > **Failures** > **ATA 28**: activate one of the four jettison valve failures.
- Run a jettison (or not, for a valve stuck open) and follow the ECAM.
- Deactivate the failure in the flyPad to repair the valve.

### How to test

| # | Do this                                                                                                                                                                                                | Expected result                                                                                                                                                                                                                 |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground (or in cruise), fuel in the transfer tanks, AC power, JTSN GW entered. flyPad > Failures > ATA 28: activate <b>Jettison valve L stuck closed</b> . Set JETTISON ARM and ACTIVE ON. | Amber <b>FUEL JETTISON FAULT</b> (on the ground with JETTISON L VLV FAULT); SD FUEL: only the right jettison valve open; the transfer tanks empty at half the normal rate (about 1.25 t per minute). STATUS: INOP SYS JETTISON. |
| 2 | Also activate <b>Jettison valve R stuck closed</b> .                                                                                                                                                   | FUEL JETTISON FAULT with JETTISON NOT AVAIL, JETTISON ACTIVE OFF, JETTISON ARM OFF; no fuel leaves; STATUS: INOP SYS JETTISON.                                                                                                  |
| 3 | Set ACTIVE OFF, then ARM OFF.                                                                                                                                                                          | The ACTIVE and ARM lines tick.                                                                                                                                                                                                  |
| 4 | Deactivate both failures, activate <b>Jettison valve L stuck open</b> (pushbuttons OFF).                                                                                                               | Amber <b>FUEL JETTISON VLV NOT CLOSED</b> ; OPEN light of JETTISON ACTIVE on; SD FUEL: left jettison valve open; the fuel quantities do not change.                                                                             |
| 5 | Deactivate the failure.                                                                                                                                                                                | The valve closes, the OPEN light goes off and the alert clears.                                                                                                                                                                 |

## 3. Fuel jettison plume at the outlets

**Aircraft:** A380X | **Where:** Outside view: wing trailing edge, at the second-outermost flap track fairing | **Status:** Tested in the sim by the user in flight: look, both / left only / right only and the valve failure cases OK (2026-10-03); position at the outlets OK (2026-10-04).

### What it is for

The jettisoned fuel left no trace outside. A fuel mist plume now trails from each wing's jettison outlet while fuel flows out of that side. The FCOM says there is "one discharge point on the trailing edge of each wing" (DSC-28-40); the outlet is the tube at the aft end of the second-outermost flap track fairing (MFTF 5, forum source), where the companion model adds the effect points.

### What you should see

| Situation                              | What you should see                                                                                                        |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Jettison in progress, both valves open | A mist plume behind each wing outlet; it gets longer with the true airspeed (its particles stay where they were released). |



|                                       |                                                                                            |
|---------------------------------------|--------------------------------------------------------------------------------------------|
| One valve stuck closed                | The plume on the other side only.                                                          |
| Valve stuck open, no jettison running | No plume (no fuel flows).                                                                  |
| Below 40 kt true airspeed             | The low-speed version of the mist (the stock MSFS water-ballast effect switches at 40 kt). |

### Limitations and why

| Limitation                                | Why                                                                                                                                     | What to do                                                  |
|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| Needs the aircraft-large-files companion. | The effect hangs on the FX_JETTISON_LH / RH nodes added at the outlets in the A380_WINGS models (fa6c5d1); without them no plume shows. | Install it; a full MSFS restart is needed after the update. |
| The look is the stock water-ballast mist. | Closest stock MSFS effect: design choice.                                                                                               | -                                                           |
| No fuel puddle on the ground.             | Jettisoned fuel evaporates; nothing is drawn on the ground.                                                                             | -                                                           |

### How to use

1. Run a fuel jettison (first feature) and look at the wings from the outside view.

### How to test

| # | Do this                                                                                                                                | Expected result                                                                                       |
|---|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight (companion models installed, MSFS restarted), JTSN GW entered. Set JETTISON ARM and ACTIVE ON. Outside view of a wing. | A mist plume trails from the trailing edge at the second-outermost flap track fairing, on both wings. |
| 2 | Speed up or slow down.                                                                                                                 | The plume gets longer at a higher true airspeed.                                                      |
| 3 | flyPad > Failures > ATA 28: <b>Jettison valve L stuck closed</b> .                                                                     | The left plume stops; the right one goes on.                                                          |
| 4 | Set ACTIVE OFF.                                                                                                                        | Both plumes stop.                                                                                     |
| 5 | Remove the failure, activate <b>Jettison valve R stuck open</b> without a jettison.                                                    | No plume.                                                                                             |

## 4. FINAL fuel and time from the A380 holding fuel flow

**Aircraft:** A380X | **Where:** MFD FMS ACTIVE/FUEL&LOAD: FINAL fuel and time, EXTRA time | **Status:** FINAL fuel and time: tested in the sim by the user on develop at the gate: OK (2026-10-08, optional A380X card T1: ZFW 342.6 t, FINAL entry, ZFW 300.0 t; user word, no simvar to record). The EXTRA time: not sim-tested. Unit tests: FinalHoldingPredictor.spec.ts. The core branch itself was not sim-tested.

### What it is for

The FINAL fuel default of the FUEL&LOAD page was a fixed 6.0 t per 30 min (0.2 t per minute, the same flow for the EXTRA time), whatever the weight. The A380 FCOM defines the holding fuel as 30 min at 1 500 ft above the alternate, at holding speed (green dot + 25 kt, CONF CLEAN), ISA, with the landing weight at the alternate (PER-IFT-FPL-MRF HOLDING FUEL). The FINAL fuel now comes from that holding.

- The fuel flow comes from the one A380 holding computation in the FCOM (PER-IFT-HLD-HMI, IN-FLT PERF example: 940.0 klb, 30 min, 13 100 lb), brought back from ISA+10 to ISA, and taken proportional to the weight.
- FINAL fuel: a holding of the FINAL time (30 min by default) that ends at the ZFW, rounded up to the 0.1 t of the entry field, like the ALTN fuel. Check: RJTT-RKSI at ZFW 342.6 t gives 4.70 t, shown 4.8 (the airline OFP gives 4.8 t).

- FINAL time from a FINAL fuel entry: the time that fuel lasts in the same holding.
- EXTRA time: the time the EXTRA fuel lasts in the same holding, ending with the ZFW plus the MIN FUEL AT DEST on board.
- Without a ZFW: the FCOM conservative quantity, 10 600 lb per 30 min.
- This replaces the fixed 0.2 t per minute flow (30 min = 6 t) of `core/a380x-mfd-fms`.

## What you should see

| Situation                                         | What you should see                                                                 |
|---------------------------------------------------|-------------------------------------------------------------------------------------|
| RJTT/RKSI, ALTN RKSS, ZFW 342.6 t, no FINAL entry | FINAL 4.8, time 00:30.                                                              |
| ZFW 300.0 t                                       | FINAL 4.2, time 00:30.                                                              |
| FINAL fuel 6.0 entered (ZFW 342.6 t)              | FINAL time 00:38.                                                                   |
| FINAL fuel cleared (CLR)                          | Back to FINAL 4.8, 00:30.                                                           |
| 5.0 t of EXTRA fuel at ZFW 342.6 t                | EXTRA time about 00:30 or 00:31 (about 6.3 min per tonne; before: 5 min per tonne). |

## Limitations and why

| Limitation                                             | Why                                                                                                                                                           | What to do |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| The FINAL time stays 00:30 with a calculated fuel.     | Design choice: the time shown is the one the fuel was computed from, not the slightly longer time of the rounded-up fuel.                                     | -          |
| The holding altitude and the temperature are not used. | The A380 FCOM has no holding table; the A320neo table varies by less than 5 % from FL15 to FL140, and the FCOM figure is brought back to ISA (design choice). | -          |
| The fuel flow is taken proportional to the weight.     | Maximum endurance: thrust follows the weight; the A320neo holding table confirms the near linear law (design choice).                                         | -          |

## How to use

1. MFD FMS **INIT**: FROM/TO and ALTN. **FUEL&LOAD**: enter the ZFW and ZFWCG.
2. Read the FINAL fuel and time. Overwrite the FINAL fuel or the FINAL time if the company policy asks for another value; CLR returns to the calculated value.
3. Read the EXTRA time next to the EXTRA fuel once the BLOCK is entered.

## How to test

| # | Do this                                                                                                                                                              | Expected result                                           |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| 1 | A380X at the gate, aircraft powered, no flight plan. MFD (FMS) INIT: FROM/TO <b>RJTT/RKSI</b> , ALTN <b>RKSS</b> . FUEL&LOAD: ZFW <b>342.6</b> , ZFWCG <b>30.0</b> . | FINAL <b>4.8</b> , time <b>00:30</b> (before: 6.0).       |
| 2 | Change the ZFW to <b>300.0</b> .                                                                                                                                     | FINAL <b>4.2</b> , time 00:30. Set the ZFW back to 342.6. |
| 3 | Enter <b>6.0</b> in the FINAL fuel field.                                                                                                                            | FINAL time <b>00:38</b> (before: 00:30).                  |
| 4 | CLR the FINAL fuel.                                                                                                                                                  | FINAL back to <b>4.8</b> , time 00:30.                    |

**5** Run FUEL PLANNING, then add 5 t to the BLOCK (not simulated yet).

EXTRA time about **00:30** or **00:31** for 5.0 t (before: 00:25).

# GPS receivers, GPS deselection and ECAM STATUS

Real GPS receivers in MMR 1 and 2 for both aircraft, with the GPIRS position, GPS PRIMARY from the real accuracy, the GPS pages, the NAV GPS FAULT alerts, GPS deselection and the A32NX ECAM STATUS page

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX and A380X (shared systems code); the ECAM STATUS page and STS reminder are A32NX only                                                                                                                                                                                                                                                                                                                     |
| Where to find it | MCDU DATA > GPS MONITOR and SELECTED NAVAIDS (A32NX); MFD FMS > POSITION > GPS and NAVAIDS (A380X); E/WD and SD STATUS page; flyPad > Failures > ATA 34 Navigation                                                                                                                                                                                                                                              |
| Branch           | core/gps , based on core/a380x-mfd-fms (stacked: needs core/surveillance and core/a380x-mfd-fms merged first). core/a32nx-air-conditioning , core/a380x-elec and core/failures-a32nx build on it.                                                                                                                                                                                                               |
| Status           | All six features tested in the sim by the user: OK (2026-10-02): receivers and pages, A380X DIFF mode, GPS deselection on both aircraft, NAV GPS FAULT alerts, A32NX STATUS page and STS reminder, A380X INOP SYS (on the develop build). Not sim-tested on this branch: the A32NX STS reminder, adapted here to the FlyByWire master CLR logic. A full MSFS restart is needed after installing (systems WASM). |
| Pictures         | One picture: the A380X POSITION/GPS page layout, taken in the browser harness before the receivers existed (the values on it are the old stand-in values). The other displays are text only.                                                                                                                                                                                                                    |

1. GPS receivers in MMR 1 and 2
2. GPIRS position and GPS PRIMARY
3. GPS pages: MCDU GPS MONITOR and MFD POSITION/GPS
4. NAV GPS 1(2) FAULT alerts
5. GPS deselection and position uncertainty
6. A32NX ECAM STATUS page and STS reminder

## 1. GPS receivers in MMR 1 and 2

**Aircraft:** A32NX and A380X | **Where:** No control: the receivers run when powered | **Status:** Tested in the sim by the user: OK (2026-10-02). Degraded modes also covered by 21 Rust unit tests.

### What it is for

There was no GPS receiver in either aircraft: the pages showed the sim GPS position for both receivers with random satellite counts and figures of merit, and GPS PRIMARY came from a random estimate. Now each Multi-Mode Receiver (MMR 1 and MMR 2) has a GPS receiver. A320 FCOM DSC-34: "Worldwide, 24 satellites broadcast accurate navigation data"; the two independent receivers process them and send their data to the ADIRUs.

- Satellites:** the sim has none, so they are computed from the nominal 24-slot GPS constellation (six orbital planes, four satellites each) at the sim UTC date and time. A satellite counts when it is more than 5° above the horizon. Their geometry gives the dilution of precision, and from it the figure of merit (accuracy) and the integrity limit (HIL) of the position. Fewer than 5 satellites: no integrity limit.
- Modes** (A320 FCOM DSC-22\_20 GPS MONITOR, A380 FCOM DSC-34-10-40-10): **TEST** (self test at power up, 1.5 to 2.5 s), **INIT** (2.5 to 4.5 s), **ACQ** (satellite acquisition), **NAV** (4 or more satellites, data to the ADIRUs), **FAULT** (failed receiver).
- Acquisition time:** 15 to 30 s after a short power cut (unpowered 15 min or less: warm start), 80 to 130 s from a cold start, 5 to 15 s to re-acquire after a loss of the signals.
- Degraded modes** (the FCOMs only name them; the behaviour follows ARINC 743A, a design choice): **ALTAID** with 3 satellites (the ADR barometric altitude is the fourth measurement, no integrity limit); **AIDED** with fewer satellites, the receiver coasts on the IR velocities for up to 2 min, its accuracy gets worse with time and it gives no integrity limit. After that: back to ACQ.

- **Antenna masking:** the antenna is on top of the fuselage. In a turn or a steep climb, satellites low on the far side of the aircraft are masked.
- **DIFF (A380X only):** the A380 receivers use satellite based augmentation. In NAV inside a WAAS (North America), EGNOS (Europe), MSAS (Japan) or GAGAN (India) service area, the mode shows DIFF and the position is several times more accurate. The service areas are coarse latitude/longitude boxes (design choice).
- **Power:** the FCOM gives none. GPS 1 is on AC ESS and GPS 2 on AC 2, as the other side 1 / side 2 navigation receivers (design choice). On the A380X the bus named AC ESS in the code is the AC EMER busbar.
- **Failures:** flyPad > Failures > ATA 34 Navigation > **GPS 1** and **GPS 2** put the receiver in FAULT.

### Limitations and why

| Limitation                                                                                 | Why                                                                                                      | What to do                      |
|--------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|---------------------------------|
| The satellite positions are the nominal constellation, not the real satellites of the day. | No almanac file is used: the 24 nominal slots give a realistic count and geometry anywhere in the world. | None needed.                    |
| ALTAID and AIDED are rarely seen in flight.                                                | With 24 satellites, 4 or more are almost always in view; masking in a steep turn seldom leaves fewer.    | Covered by the Rust unit tests. |
| A full MSFS restart is needed after installing.                                            | The receivers are in the systems WASM module.                                                            | Restart the sim.                |

### How to use

1. Nothing to set: power the aircraft and the receivers start (TEST, INIT, ACQ, then NAV).
2. Watch them on the A32NX MCDU **DATA > GPS MONITOR** page or the A380X MFD **FMS > POSITION > GPS** page (see "GPS pages" below).

### How to test

| # | Do this                                                                                                                                   | Expected result                                                                                                           |
|---|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1 | Cold and dark (aircraft unpowered more than 15 min). Power the aircraft (batteries, external power or APU) and open the GPS page at once. | Both receivers show TEST briefly, then INIT, then ACQ with a rising number of satellites; NAV after about 80 to 130 s.    |
| 2 | Remove the power for less than 15 min, then power again.                                                                                  | ACQ lasts only 15 to 30 s (warm start).                                                                                   |
| 3 | In NAV, read the satellites and the figure of merit.                                                                                      | Between 4 and 12 satellites (7 to 10 on average) and a merit of about 30 to 100 ft; the two receivers slightly different. |
| 4 | A380X in Europe or North America (for example EGLL or KJFK): open POSITION / GPS.                                                         | MODE shows <b>DIFF</b> on both receivers.                                                                                 |
| 5 | A380X outside the service areas (for example SBGR, FAOR or YSSY).                                                                         | MODE shows <b>NAV</b> .                                                                                                   |
| 6 | flyPad > Failures > ATA 34 Navigation > <b>GPS 1</b> .                                                                                    | GPS 1 shows FAULT, its data dashed; GPS 2 unchanged. Clear the failure: GPS 1 goes back through ACQ to NAV.               |

## 2. GPIRS position and GPS PRIMARY

|                                                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> MCDU PROG page (A32NX); MFD POSITION / MONITOR (A380X); ND messages   <b>Status:</b> Tested in the sim by the user: OK (2026-10-02). |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## What it is for

Each IR of the ADIRUs now mixes its inertial position with the position of one GPS receiver: the GPIRS position. The selection follows A320 FCOM DSC-22\_20: IR 1 uses GPS 1, IR 2 uses GPS 2, IR 3 uses GPS 1 (GPS 2 with the ATT HDG selector on F/O 3). If one receiver is rejected, all the IRs use the other one. The same rule is used on the A380X (design choice: the A380 FCOM does not give it).

The FMS (the same code in the A32NX FMGC and the A380X FMC) uses the onside GPIRS, else GPIRS 3, else the offside one (A380 FCOM DSC-22-FMS-10-30-10). Its estimated position uncertainty (EPU) is the GPIRS figure of merit. Accuracy is **HIGH** when the EPU is within the required navigation performance (RNP), and **GPS PRIMARY** needs accuracy HIGH and the integrity limit within the RNP. Before, a random estimate gave GPS PRIMARY.

## What you should see

| Situation                                 | What you should see                                                     |
|-------------------------------------------|-------------------------------------------------------------------------|
| IRs aligned, receivers in NAV             | GPS PRIMARY (A32NX PROG page, A380X POSITION / MONITOR), accuracy HIGH. |
| Receivers still in ACQ, or IRs not in NAV | No GPIRS position: no GPS PRIMARY; the FMS uses radio or IRS positions. |
| GPS 1 failed                              | IR 1 and IR 3 switch to GPS 2: GPS PRIMARY stays.                       |
| Both GPS failed                           | GPS PRIMARY is lost: the FMS shows GPS PRIMARY LOST.                    |

## How to use

1. Align the IRs as usual. GPS PRIMARY comes once the IRs are in NAV and the receivers are in NAV.
2. Check GPS PRIMARY on the A32NX MCDU PROG page or the A380X MFD POSITION / MONITOR page before an RNAV procedure.

## How to test

| # | Do this                                                                                                                        | Expected result                                                                                                                 |
|---|--------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 1 | Cold and dark, power the aircraft and start the IR alignment. Open the A32NX PROG page (or the A380X POSITION / MONITOR page). | No GPS PRIMARY until the IRs are aligned and the receivers in NAV.                                                              |
| 2 | Wait for the end of the alignment.                                                                                             | GPS PRIMARY appears (green on the A32NX PROG page).                                                                             |
| 3 | flyPad > Failures > ATA 34 Navigation > <b>GPS 1</b> .                                                                         | GPS PRIMARY stays (the IRs use GPS 2).                                                                                          |
| 4 | Also fail <b>GPS 2</b> .                                                                                                       | GPS PRIMARY disappears; GPS PRIMARY LOST is shown. Clear both failures: GPS PRIMARY comes back once a receiver is in NAV again. |

## 3. GPS pages: MCDU GPS MONITOR and MFD POSITION/GPS

**Aircraft:** A32NX (MCDU), A380X (MFD) | **Where:** A32NX MCDU DATA > GPS MONITOR; A380X MFD FMS > POSITION > GPS | **Status:** Tested in the sim by the user: OK (2026-10-02).

## What it is for

Both pages showed the sim GPS solution for both receivers with random satellite counts and figures of merit. They now show the data of each receiver.

A32NX MCDU GPS MONITOR

Per receiver (A320 FCOM DSC-22\_20-50-10-28): GPS1(2) POSITION, TTRK (true track, in degrees: the old page showed the magnetic track in radians), GS, UTC, MERIT (figure of merit, FT), MODE/SAT (mode and number of satellites), GPS ALT. The data is dashed while the receiver is not in NAV (or ALTAID / AIDED), and for a receiver that no ADIRU has selected ("the data of the GPS that is not selected is dashed").

A380X MFD POSITION/GPS

Per receiver (A380 FCOM DSC-22-FMS-20-30): position, MODE (TEST, INIT, ACQ, NAV, ALTAID, AIDED, DIFF, FAULT), NBR OF SAT (while acquiring and navigating), ACCURACY (HFOM, in FT as on the FCOM figure), TRK, UTC, ALT and GND SPD. Dashes while the receiver does not compute a position.

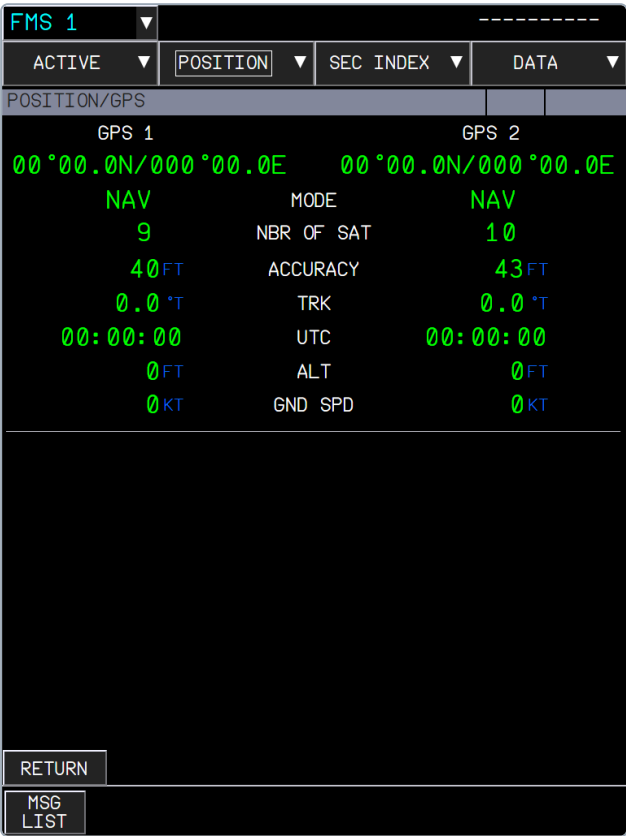


Figure 1. MFD POSITION/GPS: the page layout (picture from the browser harness, taken before the receivers existed: the values are the old stand-in values).

How to use

- 1. A32NX: MCDU **DATA** key > **GPS MONITOR**.
- 2. A380X: MFD **FMS** > **POSITION** menu > **GPS**.

How to test

| # | Do this                                                             | Expected result                                                                                                              |
|---|---------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX, powered, receivers in NAV: MCDU DATA > GPS MONITOR.          | Two receivers with their own position, TTRK in degrees (same as the true track), GS, MERIT in FT and MODE/SAT such as NAV/9. |
| 2 | Fail GPS 1 (flyPad > Failures > ATA 34 Navigation > <b>GPS 1</b> ). | GPS1 line: MODE/SAT shows FAULT, position, TTRK, GS, MERIT and GPS ALT dashed.                                               |
| 3 | A380X, powered: MFD FMS > POSITION > GPS.                           | GPS 1 and GPS 2 columns with their own values; MODE NAV or DIFF.                                                             |

## 4. NAV GPS 1(2) FAULT alerts

**Aircraft:** A32NX and A380X | **Where:** E/WD; SD STATUS page | **Status:** Tested in the sim by the user: OK (2026-10-02).

### What it is for

There was no GPS alert. A failed receiver (mode FAULT) now raises the FCOM alert:

- **A32NX: NAV GPS 1 FAULT / NAV GPS 2 FAULT** (FCOM PRO-ABN-NAV: "GPS 1(2) is failed"), amber caution, no procedure line. Flight phase inhibition as the radio altimeter faults (design choice). STATUS: INOP SYS GPS 1(2); with both: INOP SYS GPS 1+2 and the information FLS LIMITED TO F-APP + RAW (see "A32NX ECAM STATUS page").
- **A380X: NAV GPS 1 FAULT, NAV GPS 2 FAULT or NAV GPS 1+2 FAULT**, crew awareness (the A380 FCOM gives no procedure), inhibited as the ADR faults (design choice). STATUS (FCOM PRO-ABN-ECAM-10-34-10): INOP SYS GPS 1, GPS 2 or GPS 1+2; with both also BTV and ROW/ROP in APPR & LDG.

### How to use

1. Read the alert on the E/WD and clear it with CLR.
2. Check the inoperative systems on the SD STATUS page (STS key).

### How to test

| # | Do this                                                                                                                          | Expected result                                                                                  |
|---|----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, engines off or at idle (not during the takeoff run). flyPad > Failures > ATA 34 Navigation > <b>GPS 1</b> . | E/WD: <b>NAV GPS 1 FAULT</b> in amber, MASTER CAUT.                                              |
| 2 | Press CLR, then open the SD STATUS page.                                                                                         | INOP SYS: GPS 1.                                                                                 |
| 3 | Also fail <b>GPS 2</b> .                                                                                                         | NAV GPS 2 FAULT; STATUS: INOP SYS GPS 1+2, and FLS LIMITED TO F-APP + RAW in green.              |
| 4 | A380X on the ground: fail <b>GPS 1</b> .                                                                                         | E/WD: <b>NAV GPS 1 FAULT</b> . SD STATUS: INOP SYS GPS 1.                                        |
| 5 | Also fail <b>GPS 2</b> .                                                                                                         | The alert becomes <b>NAV GPS 1+2 FAULT</b> . STATUS: INOP SYS GPS 1+2; APPR & LDG: BTV, ROW/ROP. |

## 5. GPS deselection and position uncertainty

**Aircraft:** A32NX and A380X | **Where:** A32NX MCDU SELECTED NAVAIDS; A380X MFD POSITION > NAVAIDS | **Status:** Tested in the sim by the user: OK on both aircraft (2026-10-02).

### What it is for

The crew can tell the FMS not to use the GPS (for example when told GPS is unreliable in an area). The A32NX DESELECT key was inoperative and the A380X had no GPS option. Now:

- **A32NX** SELECTED NAVAIDS page, key [6L] (A320 FCOM DSC-22\_20-50-10-28): GPS SELECTED / DESELECTED in blue small font, the action ({DESELECT or {SELECT) in white.
- **A380X** POSITION / NAVAIDS page: GPS SELECTED / DESELECTED radio buttons (A380 FCOM DSC-22-FMS-20-30).
- With the GPS deselected the GPIRS position is no longer used: the FMS goes to IRS/DME/DME, IRS/VOR/DME or IRS only, and GPS PRIMARY is lost.
- The deselection is reset at the end of the flight (DONE phase).



- **GPS IS DESELECTED** (A32NX, white MCDU message) / **GPS DESELECTED** (A380X, white MFD message) when the GPS is deselected and the aircraft is less than 80 NM from the top of descent, or in the approach phase. The message is removed when the GPS is selected again.
- **Position uncertainty without GPS** (A320 FCOM DSC-22\_20-20-20 table): IRS/DME/DME 0.27 to 0.37 NM, IRS/VOR/DME 0.30 to 0.42 NM (growing with the distance to the nav aids, up to 100 NM: design choice), IRS only growing from its starting value at 6 NM/h for 40 min, 0 for 50 min, 4 NM/h for 40 min, 0 for 45 min, then 2 NM/h; 5 NM after an IRS alignment.

### Limitations and why

| Limitation                                                  | Why                      | What to do |
|-------------------------------------------------------------|--------------------------|------------|
| The 0.2 NM reset of the uncertainty at takeoff is not done. | Not part of this change. | None.      |

### How to use

1. A32NX: MCDU **DATA** > **POSITION MONITOR** > **NAVAIDS**> [6R] > press [6L] **{DESELECT**. Press [6L] **{SELECT** to use the GPS again.
2. A380X: MFD **FMS** > **POSITION** > **NAVAIDS**, GPS: select **DESELECTED** (or **SELECTED**).

### How to test

| # | Do this                                                                                         | Expected result                                                                                                                              |
|---|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX, IRs aligned, GPS PRIMARY on the PROG page. MCDU DATA > POSITION MONITOR > NAVAIDS> [6R]. | Line 6 left: GPS SELECTED in blue small font, {DESELECT in white.                                                                            |
| 2 | Press [6L].                                                                                     | GPS DESELECTED, {SELECT. The PROG page loses GPS PRIMARY; the EPU becomes a radio or IRS only value (for example 0.27 to 0.42 NM near DMEs). |
| 3 | Type something in the scratchpad, then press [6L].                                              | NOT ALLOWED; the selection does not change.                                                                                                  |
| 4 | In flight with a flight plan, GPS deselected, fly to less than 80 NM from the T/D.              | White MCDU message <b>GPS IS DESELECTED</b> .                                                                                                |
| 5 | Press [6L] {SELECT.                                                                             | The message is removed; GPS PRIMARY comes back.                                                                                              |
| 6 | A380X: MFD FMS > POSITION > NAVAIDS, GPS: DESELECTED.                                           | POSITION / MONITOR no longer shows GPS PRIMARY. Near the T/D (80 NM) or in approach: MFD message <b>GPS DESELECTED</b> .                     |
| 7 | Finish the flight (DONE phase).                                                                 | The GPS is selected again.                                                                                                                   |

## 6. A32NX ECAM STATUS page and STS reminder

|                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX   <b>Where:</b> SD STATUS page (STS key on the ECAM control panel); bottom of the E/WD   <b>Status:</b> Tested in the sim by the user on develop: OK (2026-10-02). On this branch the STS reminder logic was adapted to the CLR logic of FlyByWire master (develop's version sits on a fork-only commit): that adaptation is not sim-tested. |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The A32NX STATUS page was a frame that always showed NORMAL. The FWC now fills it (A320 FCOM DSC-31-20 and DSC-31-25-20):

- Left column: the information lines in green (the limitations in blue are added by `core/a32nx-air-conditioning`).
- Right column: **INOP SYS** (white, underlined) and the inoperative systems in amber. An empty page shows

NORMAL in green.

- The page appears by itself when it is not empty and the crew clears the last alert of the E/WD with CLR, or selects CONF 1 for the approach (flaps lever 0 to 1 in flight). The next CLR (or STS) push removes it.
- **STS reminder:** STS in white, framed, at the bottom of the E/WD, while the STATUS page is not empty and not shown and no alert is shown.
- On this branch only the GPS alerts fill it (INOP SYS GPS 1, GPS 2, GPS 1+2; FLS LIMITED TO F-APP + RAW). Other branches add their alerts.

## How to use

1. After clearing the alerts with CLR, read the STATUS page that comes up, then press CLR to remove it.
2. When STS shows at the bottom of the E/WD, press **STS** to review the status.

## How to test

| # | Do this                                                                             | Expected result                                                                       |
|---|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 1 | A32NX powered, no failure. Press STS.                                               | STATUS page: NORMAL in green.                                                         |
| 2 | Fail GPS 1 (flyPad > Failures > ATA 34 Navigation > <b>GPS 1</b> ).                 | NAV GPS 1 FAULT on the E/WD.                                                          |
| 3 | Press CLR.                                                                          | The SD shows the STATUS page by itself: INOP SYS (underlined) and GPS 1 in amber.     |
| 4 | Press CLR again.                                                                    | The STATUS page goes; <b>STS</b> , white and framed, shows at the bottom of the E/WD. |
| 5 | Press STS.                                                                          | The STATUS page shows; the STS reminder goes off while it is shown.                   |
| 6 | Clear the failure.                                                                  | STATUS back to NORMAL; no STS reminder.                                               |
| 7 | In flight with GPS 1 failed and its alert cleared, select flaps 1 for the approach. | The STATUS page comes up by itself.                                                   |

# A380X interactive ND

Revise the flight plan on the navigation display with the KCCU cursor, as in the A380 FCOM: DIR TO, INSERT NEXT WPT, DELETE and DATA from a click on the map

|                         |                                                                                                                                |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A380X                                                                                                                          |
| <b>Where to find it</b> | Captain and F/O ND (ARC, PLAN, ROSE-NAV) with the KCCU cursor; MFD FMS > ACTIVE > F-PLN > DIRECT TO                            |
| <b>Branch</b>           | core/a380x-interactive-nd, based on core/a380x-mfd-fms (stacked: needs core/surveillance and core/a380x-mfd-fms merged first). |
| <b>Status</b>           | Tested in the sim by the user: OK (by 2026-10-01, before the commit). Unit tests: the DIR TO UTC estimate.                     |
| <b>Pictures</b>         | No pictures: the ND pages follow the A380 FCOM figures (DSC-31-20-30-90).                                                      |

## 1. Interactive ND

**Aircraft:** A380X | **Where:** Lateral ND, KCCU cursor; MFD DIRECT TO page (UTC) | **Status:** Tested in the sim by the user: OK (by 2026-10-01).

### What it is for

A380 FCOM DSC-31-20-30-90: with the KCCU cursor on the lateral ND in ARC, PLAN or ROSE-NAV mode, the flight crew revises the flight plan directly on the ND, without going to the MFD. The FBW ND was not interactive.

### What you see

- **Interactive areas:** a blue box around every waypoint, NAVAID or airport under the cursor. A click gives the list of the elements there (P.POS for the aircraft mock-up), then the revision list of the chosen one.
- **Revision list:** the ident (green in the active flight plan, yellow in the temporary one), then: for a flight plan waypoint FROM P.POS DIR TO \*, INSERT NEXT WPT, DELETE \*; for a database element FROM P.POS DIR TO \*; for an airport also DATA; for the aircraft mock-up DIR TO.
- **DIRECT TO page** at the bottom of the ND: the DIRECT TO target field (with a list of the flight plan waypoints, or a KCCU entry), UTC and DIST, the options DIRECT, DIRECT WITH ABEAM, CRS IN, CRS OUT, and the CRS field next to CRS IN / CRS OUT (default course from the flight plan, typed NNN, with M or T for magnetic or true). CANCEL closes the page when there is no temporary flight plan.
- **INSERT DIR TO \* / ERASE DIR TO \*** buttons either side of the aircraft while the cursor is in the ND; **INSERT TMPY \* / ERASE TMPY \*** for the other revisions.
- **INSERT NEXT WPT page:** FROM and the revised waypoint (green, or yellow with IN TMPY), its latitude / longitude, and the NEXT WPT field. A click on a blank area of the ND creates a latitude/longitude waypoint.
- **DUPLICATE page** (DIST(NM), LAT/LONG, RETURN, scroll arrows) when a typed ident is not unique, nearest first.
- **DATA** on an airport opens the DATA / AIRPORT page on the MFD of the same side.
- **DIR TO UTC:** the FMS has no predictions of the temporary flight plan, so the UTC at the target is estimated from the distance and the ground speed, on the ND and on the MFD DIRECT TO page. Below 30 kt ground speed it shows --:--.

### Limitations and why

| Limitation | Why | What to do |
|------------|-----|------------|
|------------|-----|------------|

|                                                                                                               |                                                                                           |                                                             |
|---------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| No revision on a DIR TO temporary flight plan; no DIRECT TO while the ND shows another temporary flight plan. | FCOM DSC-31-20-30-90 P 1 and P 9.                                                         | Insert or erase the temporary flight plan first.            |
| The vertical display is not interactive.                                                                      | Only the lateral ND is interactive in the FCOM.                                           | None.                                                       |
| Pilot-defined entries (lat/long, typed places) stay as stored waypoints after ERASE.                          | They are stored waypoints, as on the FBW MFD.                                             | Delete them on the MFD DATA pages if needed.                |
| The UTC is an estimate (distance / ground speed).                                                             | The FMS computes no predictions for a temporary flight plan.                              | Read the UTC on the F-PLN page once the DIR TO is inserted. |
| Only the interactions listed above work.                                                                      | The other ND interactions of the FCOM are not implemented yet (the A380X README says so). | Use the MFD pages for the other revisions.                  |

## How to use

1. Set the ND to ARC, PLAN or ROSE-NAV (map, not the OANS) and move the KCCU cursor onto the ND.
2. Click a waypoint, NAVAID or airport (or the aircraft symbol); pick it in the list if several are there.
3. Choose the revision: FROM P.POS DIR TO \*, INSERT NEXT WPT, DELETE \* or DATA.
4. Complete the page at the bottom of the ND (target, option, course, next waypoint) by clicks or KCCU entries.
5. Click **INSERT** (DIR TO \* or TMPY \*) to activate, or **ERASE** to discard.

## How to test

| # | Do this                                                                                                                                                | Expected result                                                                                                                                                                                                                 |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight (or on the ground) with an active flight plan. Captain ND in ARC, range 20 or 40 NM. Move the KCCU cursor over a flight plan waypoint. | A blue box appears around the waypoint.                                                                                                                                                                                         |
| 2 | Click it.                                                                                                                                              | Revision list: the ident in green, FROM P.POS DIR TO *, INSERT NEXT WPT, DELETE *.                                                                                                                                              |
| 3 | Click FROM P.POS DIR TO *.                                                                                                                             | DIRECT TO page at the bottom of the ND: the waypoint as target, a yellow temporary flight plan, DIST in NM, UTC (estimated, in flight), DIRECT option selected; INSERT DIR TO * and ERASE DIR TO * either side of the aircraft. |
| 4 | Select CRS IN.                                                                                                                                         | A CRS field appears next to it with the default course of the flight plan.                                                                                                                                                      |
| 5 | Click the CRS field, type a course with the KCCU (for example 090) and ENT.                                                                            | The course shows; the temporary DIR TO follows it.                                                                                                                                                                              |
| 6 | Click INSERT DIR TO *.                                                                                                                                 | The DIR TO becomes active (green); the page closes.                                                                                                                                                                             |
| 7 | Open the MFD FMS > ACTIVE > F-PLN > DIRECT TO page and select a waypoint.                                                                              | The UTC shows an estimate (distance / ground speed) instead of dashes.                                                                                                                                                          |
| 8 | Click the aircraft symbol on the ND, then DIR TO.                                                                                                      | DIRECT TO page with an empty target. Open the list (▼) and pick a waypoint, or click the target field and type an ident with the KCCU + ENT.                                                                                    |
| 9 | Type an ident that exists several times (a common NAVAID ident).                                                                                       | DUPLICATE page with DIST(NM) and LAT/LONG; pick one, or RETURN.                                                                                                                                                                 |

|    |                                                                                     |                                                                                                                                                                                          |
|----|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10 | Click ERASE DIR TO *.                                                               | The temporary flight plan and the page go.                                                                                                                                               |
| 11 | Click a flight plan waypoint > INSERT NEXT WPT, then click a blank area of the map. | INSERT NEXT WPT page with FROM and the waypoint; a latitude/longitude waypoint is created and inserted after it in a yellow temporary flight plan; INSERT TMPY * / ERASE TMPY * buttons. |
| 12 | Click INSERT TMPY *.                                                                | The new waypoint is in the active flight plan.                                                                                                                                           |
| 13 | Click a flight plan waypoint > DELETE *.                                            | Temporary flight plan without that waypoint; INSERT TMPY * keeps the change, ERASE TMPY * discards it.                                                                                   |
| 14 | Click an airport > DATA.                                                            | The Captain MFD opens the DATA / AIRPORT page of that airport.                                                                                                                           |
| 15 | Repeat one revision on the F/O ND with the F/O KCCU.                                | Same behaviour; DATA opens on the F/O MFD.                                                                                                                                               |

# flyPad performance calculators

Takeoff (A380 new, A320 with MCDU uplink), landing and descent calculators on the flyPad, the company datalink reply time of the A380X FMS, and the later additions: BTV braking mode, 40 kt landing crosswind, descent target waypoint and T/D slider

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X and A32NX (one shared flyPad screen per calculator; the company datalink reply time is A380X only)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Where to find it | flyPad > <b>Performance</b> (Takeoff, Landing, Top of Descent tabs); flyPad > Settings > Realism; A380X MFD PERF T.O / INIT / WIND; A32NX MCDU PERF TAKE OFF                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Branch           | core/efb-performance , based on core/a380x-mfd-fms (stacked: needs core/surveillance and core/a380x-mfd-fms merged first). core/efb-ground is stacked on it (the taxi page uses its runway exits).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Status           | Landing calculator (both aircraft) with the BTV braking mode and the 40 kt crosswind, descent calculator (A32NX 2026-10-01, A380X 2026-10-02), descent target waypoint and the fix for an FMS without waypoints: tested in the sim by the user, OK (2026-10-01 / 2026-10-02). A380 takeoff calculator: used in the sim with the company T.O flow (2026-09-25), TOW in tonnes and CG envelope edges OK (2026-10-02). Company datalink reply time: on the user's sim test list done on 2026-10-02. A320 takeoff calculator: flyPad part used in the sim, MCDU uplink pages checked in the browser harness only. T/D slider: no separate sim record. All calculators have unit tests (back-filled and mutation-tested on 2026-10-02). |
| Pictures         | flyPad, MFD and MCDU pages in the local browser harness, running the build installed in the sim (from the feature manuals of September 2026). The harness has no navigation database and no FMS: runways and inputs are typed, uplinks simulated. The later additions (BTV mode, 40 kt, target waypoint) have no pictures.                                                                                                                                                                                                                                                                                                                                                                                                         |

1. A380 takeoff calculator and company T.O data

2. A320 takeoff calculator and MCDU uplink takeoff data

3. A380X company datalink reply time

4. Landing calculator

5. A380 landing calculator: BTV braking mode
6. A380 landing calculator: 40 kt crosswind on dry and wet runways

7. Descent calculator

8. Descent calculator: T/D distance slider

9. Descent calculator: target waypoint from the flight plan

10. Descent calculator with an FMS that sends no waypoints

## 1. A380 takeoff calculator and company T.O data

|                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X (the flyPad screen is shared with the A32NX, next feature)   <b>Where:</b> flyPad > Performance > Takeoff; MFD PERF T.O   <b>Status:</b> Used in the sim by the user with the company T.O data flow (2026-09-25); TOW in tonnes and the CG envelope edges tested OK (2026-10-02). Unit tests against the Airbus charts and the FCOM. |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Before each takeoff the crew needs the takeoff weight limit of the runway, the FLEX temperature (reduced thrust), the speeds V1, VR, V2 and the flaps. On the real A380 they come from the OIS takeoff application or from the airline (company takeoff data, sent to the FMS by datalink). The flyPad calculator does the computation; SEND TO FMS plays the airline: the MFD receives the data as company T.O data, and the crew checks and inserts it, as in FCOM DSC-22-FMS-20-30.

The flyPad screen


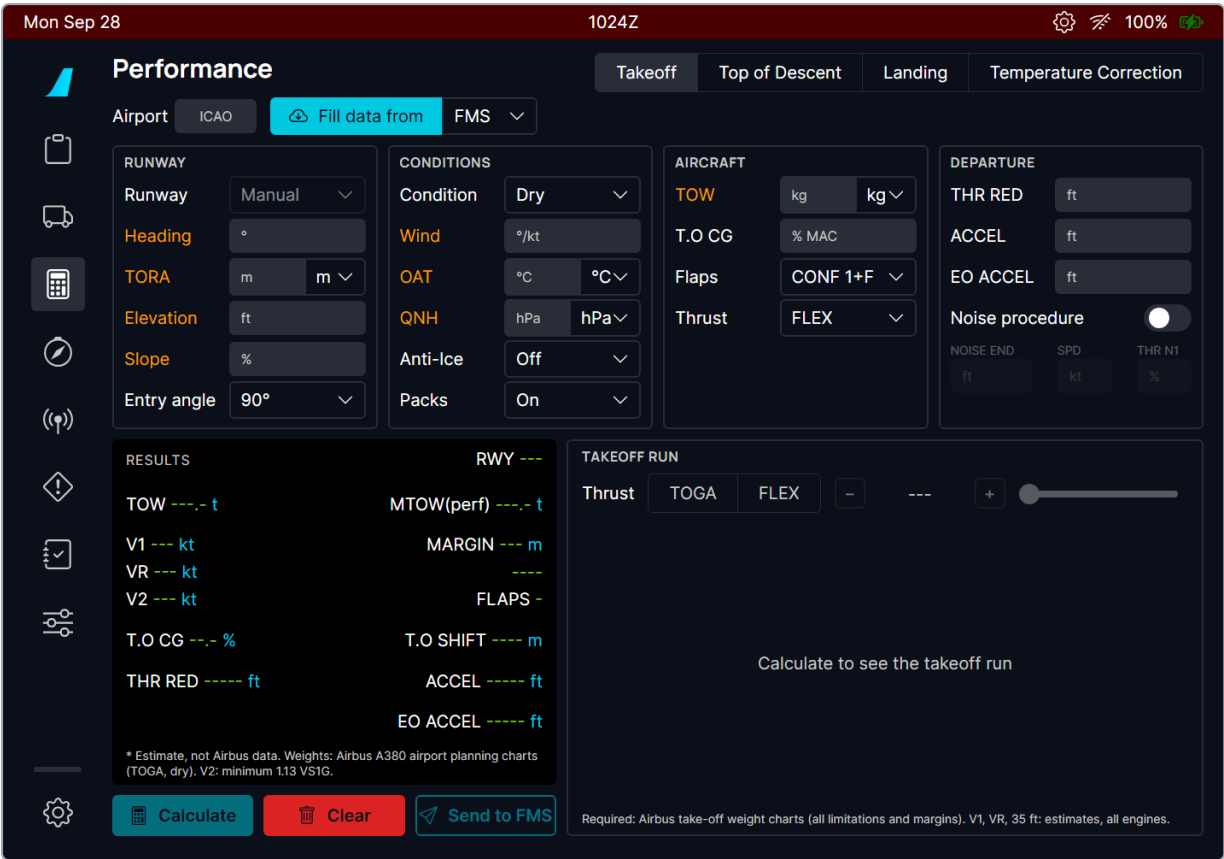


Figure 1. The takeoff screen. Amber labels: inputs still missing (Calculate stays dim).

| Part                    | Contents                                                                                                                                                                                             |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Airport, Fill data from | ICAO code; imports from the <b>FMS</b> (departure, runway, TOW, CG, THR RED / ACCEL), the <b>OPF</b> (SimBrief) or the <b>METAR</b> (wind, OAT, QNH).                                                |
| RUNWAY                  | Runway from the list (or Manual), heading, TORA, elevation, slope, and the <b>entry angle</b> (90° or 180° turn onto the runway, or 0° when rolling straight on: it sets the line-up distance lost). |
| CONDITIONS              | Runway condition, wind, OAT, QNH, anti-ice, packs.                                                                                                                                                   |
| AIRCRAFT                | TOW in t (or klb), one decimal, T.O CG in % MAC, flaps (CONF 1+F, 2, 3 or OPT = the best one), thrust (TOGA or FLEX).                                                                                |
| DEPARTURE               | THR RED, ACCEL, EO ACCEL altitudes (they default to the elevation + 1500 ft), and the noise abatement procedure (NOISE END altitude, speed, N1).                                                     |
| RESULTS                 | The results in the layout of the OIS takeoff application (FCOM PER-TOF-TOR-SRS).                                                                                                                     |
| TAKEOFF RUN             | The runway with the V1, VR and 35 ft points, the required distance and the margin, for TOGA or any FLEX temperature of the allowed range.                                                            |

A FLEX takeoff

1. Fill the airport and runway (or **Fill data from FMS / OPF**), the conditions (METAR), the TOW and the T.O CG.
2. Keep **Thrust FLEX** and press **Calculate**.
3. Read the FLEX temperature and the speeds in RESULTS; check the takeoff run and its margin.
4. **Send to FMS**, then insert the data on the MFD (see "On the MFD: company T.O data" below).

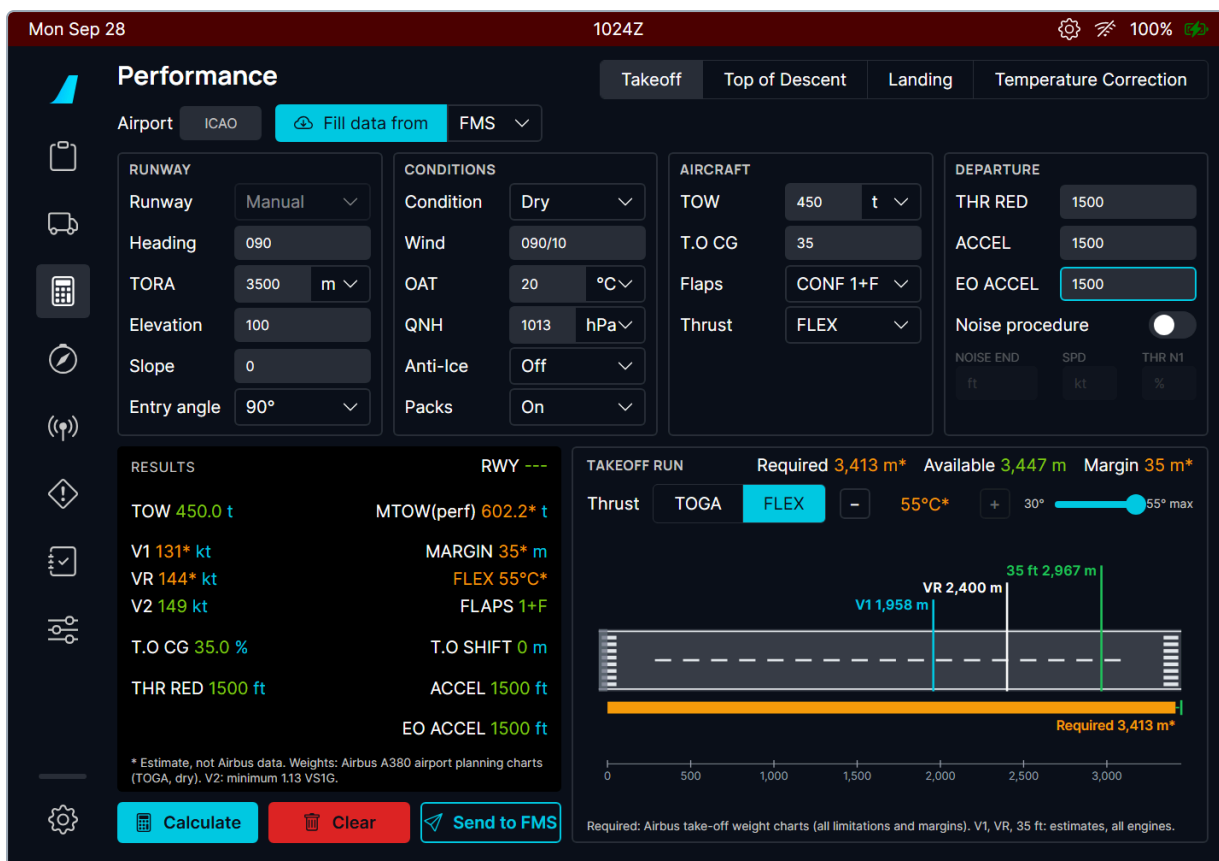

**Figure 2.** 450 t, 3500 m, 20 °C, CONF 1+F: FLEX 55 °C (the maximum, amber: estimate), V1 131 / VR 144 / V2 149 kt, MTOW(perf) 602 t. The takeoff run needs 3413 m of the 3447 m available after line-up: 35 m margin.

## Reading the results

| Line                     | Meaning                                                                                                                     |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| TOW / MTOW(perf)         | Your takeoff weight, and the maximum the runway and conditions allow at TOGA.                                               |
| V1, VR, V2               | The takeoff speeds. V2 is at least 1.13 VS1G and 1.10 VMCA, VR at least 1.05 VMCA, V1 at least VMCG (FCOM PER-TOF-TOR-SRS). |
| MARGIN                   | Runway left beyond the required distance.                                                                                   |
| FLEX / TOGA              | The FLEX temperature, or TOGA.                                                                                              |
| FLAPS, T.O CG, T.O SHIFT | The configuration, the CG entered, the takeoff shift (distance lost at line-up or an intersection).                         |
| THR RED, ACCEL, EO ACCEL | The altitudes of the DEPARTURE section.                                                                                     |


### NOTE

**Green** values come from Airbus data (the takeoff weight charts of the A380 Aircraft Characteristics); **amber with a star** are estimates of the FBW model (see Limitations).


## TOGA or another FLEX temperature

The TAKEOFF RUN panel lets you look at the run for TOGA, or for any FLEX temperature between the OAT and the maximum (FCOM PER-TOF-THR-FLX). Use - / + or the slider; the speeds and the run follow.



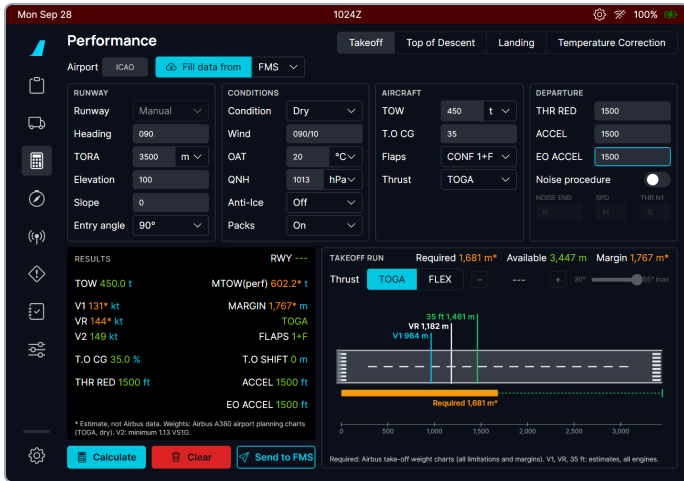

**Figure 3.** TOGA: the run needs 1681 m, margin 1767 m.

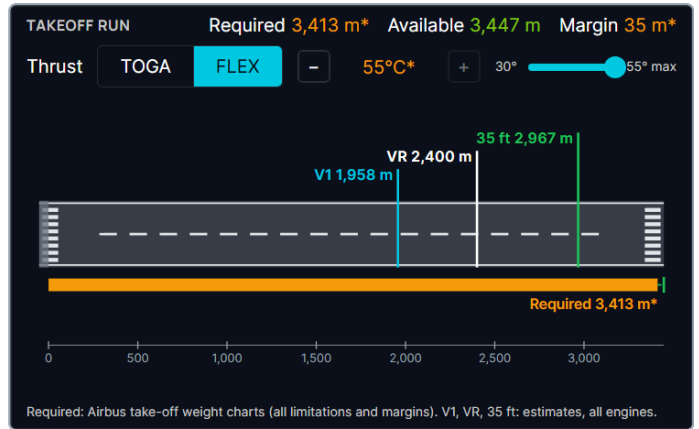

**Figure 4.** FLEX range 30 °C to 55 °C max: the selected temperature is the one sent to the FMS.

**Send to FMS** sends the thrust selected for the takeoff run only (TOGA, or FLEX at its temperature), with its own speeds.


## Options

**Figure 5.** Flaps: CONF 1+F, 2, 3, or OPT (the calculator picks the best).


**Figure 6.** Noise procedure: NOISE END altitude, speed and N1 become available; they are sent with the data.

## Errors


When the takeoff is not possible, a message says why and there is no result:

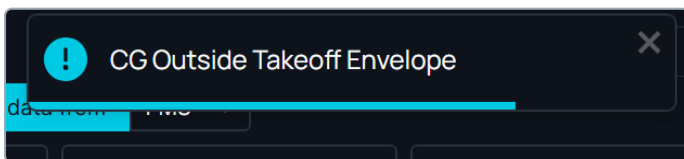

**Figure 7.** CG outside the takeoff envelope (here 30 % at 450 t: the forward limit moves aft with the weight).

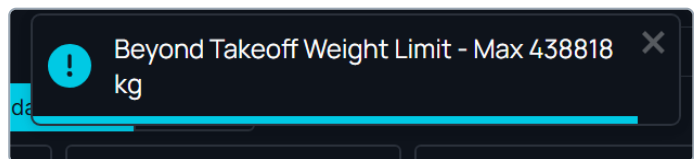

**Figure 8.** 510 t on 2100 m at 40 °C: the maximum takeoff weight is 438.8 t.

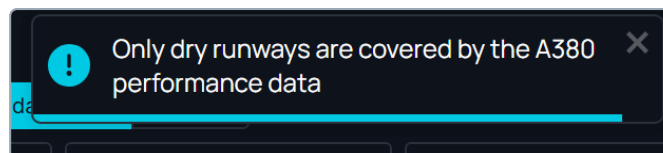

**Figure 9.** A wet or contaminated runway: the A380 data covers dry runways only.

| Message                                                | Meaning                                                              |
|--------------------------------------------------------|----------------------------------------------------------------------|
| Beyond Takeoff Weight Limit - Max ...                  | TOW above the runway limit: reduce the weight or use another runway. |
| CG Outside Takeoff Envelope                            | The CG is outside the A380 takeoff CG envelope for this weight.      |
| Above Structural MTOW                                  | TOW above 510 t.                                                     |
| Only dry runways are covered...                        | The A380 data has no wet or contaminated takeoff.                    |
| Runway shorter than the A380 performance data (1700 m) | The charts start at 1700 m.                                          |
| Above Maximum Tailwind / OAT / Pressure Altitude       | Outside the A380 limits (FCOM LIM-12).                               |
| Flex Not Possible                                      | No FLEX temperature is possible at this weight: take off at TOGA.    |

## On the MFD: company T.O data

The MFD PERF T.O page gets two buttons: **CPNY T.O REQUEST** (ask the airline) and, once data has arrived, **RECEIVED CPNY T.O.**

 The MFD PERF T.O page. At the top, it says "FMS 1" and "ACTIVE/PERF". Below that are tabs for "ACTIVE", "POSITION", "SEC INDEX", and "DATA". The main display area shows various performance parameters: CRZ (FL 000), OPT (FL ---), REC MAX (FL ---), T.O (CLB, CRZ, DES, APPR, GA), RWY (---), T.O SHIFT (--- M), V1 (000 KT), F (--- KT), TOGA (selected), VR (000 KT), S (--- KT), FLEX (unselected), V2 (000 KT), O (--- KT), DERATED (unselected). There are also sections for FLAPS, THS FOR (00.0%), PACKS (ON), ANTI-ICE (OFF), THR RED (--- FT), ACCEL (--- FT), NOISE, TRANS (--- FT), EO ACCEL (--- FT), and a "CPNY T.O REQUEST" button at the bottom right. Navigation buttons like "RETURN", "POS MONITOR", and "MSG LIST" are at the bottom.

**Figure 10.** PERF T.O before any data: the CPNY T.O REQUEST button (bottom right).

 The MFD COMPANY T.O DATA REQUEST page. At the top, it says "FMS 1" and "COMPANY T.O DATA REQUEST". Below that are tabs for "ACTIVE", "POSITION", "SEC INDEX", and "DATA". The main display area shows: REQUEST FOR RWY (---), RWY 1/2, T.O SHIFT (--- M), T.O LIMIT (--- FT), TOW (--- T), MAG WIND (--- °, --- KT), T.O CG (--- %), RWY COND (DRY), TEMP (--- °C), QNH (0.00). There are radio buttons for TOGA (selected), FLEX, and DERATED. Below that is a "FLAPS" dropdown, a "FREE TEXT" input field, and a "SEND T.O REQUEST \*" button. At the bottom, there are "RETURN", "MSG LIST", and "RECEIVED T.O DATA" buttons.

**Figure 11.** COMPANY T.O DATA REQUEST: up to 2 runways, TOGA / FLEX / DERATED, free text; SEND T.O REQUEST.

- After SEND T.O REQUEST the page shows *REQUEST PENDING...*; without an answer after 4 minutes, *NO COMPANY REPLY*. The flyPad **Send to FMS** is that answer.
- When data arrives: the message *COMPANY T.O DATA RECEIVED WAITING FOR INSERTION* and the button **RECEIVED CPNY T.O** on PERF.

FMS 1

ACTIVE POSITION SEC INDEX DATA

ACTIVE/PERF

CRZ **FL 000** OPT **FL ---** REC MAX **FL ---**

T.O CLB CRZ DES APPR GA

RWY **---** T.O SHIFT **---- M**

V1 **000 KT** F **--- KT** ☒ TOGA  
 VR **000 KT** S **--- KT** ☐ FLEX  
 V2 **000 KT** **o --- KT** ☐ DERATED

FLAPS THS FOR PACKS ANTI-ICE

**-** **00.0 %** **ON** **OFF**

THR RED **---- FT**  
 ACCEL **---- FT**  
 NOISE

TRANS **---- FT** EO ACCEL **---- FT** RECEIVED CPNY T.O

RETURN POS MONITOR

CLEAR INFO COMPANY T.O DATA RECEIVED WAITING FOR INSERTION

**Figure 12.** Data received: the message and the RECEIVED CPNY T.O button.

FMS 1

ACTIVE POSITION SEC INDEX DATA

RECEIVED COMPANY T.O DATA

DATA FOR RWY **05** **FLEX 59** RWY 1/1

T.O WEIGHT **371 T** MAG WIND **058 KT**  
 T.O CG **32.0 %** RWY COND **DRY**  
 TEMP **--- °C** QNH **1017**

V1 **119 KT** ☐ TOGA  
 VR **131 KT** ☒ FLEX  
 V2 **136 KT** ☐ DERATED

FLAPS **1** T.O SHIFT **---- M**  
 T.O LIMIT **8166 FT**

THR RED **1530 FT**  
 ACCEL **1530 FT** EO ACCEL **1530 FT**

NOISE END **---- FT** SPD **--- KT** INSERT \*  
 THR **--- %** CLEAR \*

T.O PERF CPNY T.O REQUEST

CLEAR INFO COMPANY T.O DATA RECEIVED WAITING FOR INSERTION

**Figure 13.** RECEIVED COMPANY T.O DATA: runway 05 in amber (not the flight plan runway), TOW in amber with UPLINK/ACTIVE TOW DISAGREE: INSERT is not available.

### The RECEIVED COMPANY T.O DATA page

- Up to 4 runways (arrows, RWY 1/4) × 2 thrust ratings (the TOGA / FLEX list at the top).
- **Runway in amber:** not the departure runway of the active flight plan.
- **TOW in amber** with *UPLINK/ACTIVE TOW DISAGREE*: the uplink TOW is more than 2 t below or 7 t above the FMS TOW (FUEL&LOAD).
- TEMP shows dashes for a FLEX takeoff; T.O LIMIT is the TORA; the noise fields are filled when the procedure was sent.
- **INSERT** (only when runway and TOW agree) fills PERF T.O: speeds, flaps, thrust, shift, THR RED, ACCEL, EO ACCEL and noise. It does not fill THS FOR: the crew enters the CG there. **CLEAR** deletes the data.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

RECEIVED COMPANY T.O DATA

DATA FOR RWY 05

FLEX 59

◀

▶

RWY 1/1

T.O WEIGHT 371 T

MAG WIND 058 °

6 KT

T.O CG 32.0%

RWY COND DRY

TEMP --- °C

QNH 1017

V1 119 KT

VR 131 KT

V2 136 KT

FLAPS 1

TOGA

FLEX

DERATED

T.O SHIFT --- M

T.O LIMIT 8166 FT

THR RED 1530 FT

ACCEL 1530 FT

EO ACCEL 1530 FT

NOISE END 3000 FT

SPD 180 KT

THR 85 %

INSERT \*

CLEAR \*

T.O PERF

CPNY T.O REQUEST

CLEAR INFO

COMPANY T.O DATA RECEIVED  
WAITING FOR INSERTION

**Figure 14.** An uplink with the noise procedure: NOISE END 3000 ft, SPD 180 kt, THR 85 %.

#### TIP

The flyPad warns you right after Send to FMS if INSERT will not work: another departure runway in the FMS, no TOW in the FMS, or a TOW outside -2 t / +7 t of the FMS one.

## What to expect

| Situation                                        | What you should see                                                                                        |
|--------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| Inputs missing                                   | Amber labels; Calculate stays dim.                                                                         |
| Calculate with valid inputs                      | RESULTS and the takeoff run; FLEX at its maximum by default.                                               |
| TOW too high, CG out of envelope, wet runway...  | A message with the reason; no result.                                                                      |
| Send to FMS with a runway from the list          | "Takeoff data sent to the FMS: RECEIVED CPNY T.O on the PERF page"; the MFD shows the data a moment later. |
| Send to FMS with a manual runway                 | Nothing is sent: the FMS needs the runway ident.                                                           |
| RECEIVED page, other runway than the flight plan | Runway in amber; INSERT not available.                                                                     |
| INSERT                                           | PERF T.O filled; THS FOR still to enter.                                                                   |

## Limitations and why

| Limitation                                                                 | Why                                                                                                                                                                       | What to do                                                                          |
|----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Dry runways only.                                                          | The only public A380 takeoff data is the takeoff weight charts of the Airbus A380 Aircraft Characteristics (dry, ISA and ISA+15, runway 1700-5100 m, altitude 0-8000 ft). | On a wet runway, use the dry result with extra margin, as a training estimate only. |
| Speeds, FLEX, wind, slope and temperature effects are estimates (amber *). | The charts give weights only. The rest is a model fitted on them and checked on the FCOM examples (FLEX 38 at 560 t / 614 t).                                             | -                                                                                   |
| The run distances (V1, VR, 35 ft points) are all-engine estimates.         | No A380 distance data is public.                                                                                                                                          | -                                                                                   |
| Send to FMS needs a runway from the list.                                  | The FMS checks the uplink against its departure runway.                                                                                                                   | Choose the runway in the list.                                                      |
| Not certified data.                                                        | For simulation and training.                                                                                                                                              | -                                                                                   |

## How to use

1. On the MFD, enter the flight plan with its departure runway and fill FUEL&LOAD (ZFW, ZFWCG, block).
2. flyPad > **Performance** > **Takeoff: Fill data from FMS**, then METAR (or type the data).
3. Check TOW, T.O CG, flaps and thrust; press **Calculate**.
4. In TAKEOFF RUN, choose TOGA or the FLEX temperature you will use; press **Send to FMS**.
5. On the MFD PERF T.O page: **RECEIVED CPNY T.O**, check the page, **INSERT**; enter the T.O CG in THS FOR.

## How to test

| # | Do this                                                                                                                              | Expected result                                                                                                                                                            |
|---|--------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, ADIRS aligned. MFD: flight plan with a departure runway, FUEL&LOAD filled. Open flyPad > Performance > Takeoff. | Empty screen: amber labels on the missing inputs, Calculate dim.                                                                                                           |
| 2 | Choose FMS in <b>Fill data from</b> and press it, then METAR.                                                                        | Airport, runway, TOW (in t, one decimal), CG, THR RED / ACCEL filled; wind, OAT and QNH from the METAR.                                                                    |
| 3 | Press <b>Calculate</b> .                                                                                                             | RESULTS: TOW, MTOW(perf), V1 / VR / V2, FLEX (or TOGA), flaps; chart values green, estimates amber with a star; TAKEOFF RUN with the V1 / VR / 35 ft marks and the margin. |
| 4 | On a long runway (e.g. 4000 m near sea level, 15 °C), type TOW 510.0 t with T.O CG 35.75 %, then 43 %, and Calculate each time.      | Both accepted (envelope edges included).                                                                                                                                   |
| 5 | T.O CG 35.7 % at 510 t; then 43.5 % at 400 t.                                                                                        | Message "CG Outside Takeoff Envelope", no result, each time.                                                                                                               |
| 6 | Set the runway condition to Wet and Calculate.                                                                                       | Message that only dry runways are covered; no result.                                                                                                                      |
| 7 | Back to dry. In TAKEOFF RUN press TOGA, then FLEX and move the slider.                                                               | The run, the speeds and the margin follow; the FLEX range runs from the OAT up to the maximum.                                                                             |

|    |                                                                                                  |                                                                                                                                                                                                                                                                            |
|----|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8  | Press <b>Send to FMS</b> .                                                                       | Toast "Takeoff data sent to the FMS: RECEIVED CPNY T.O on the PERF page". After the transit time of the Company Datalink Reply Time setting (Real: 5 to 15 s), the MFD shows COMPANY T.O DATA RECEIVED WAITING FOR INSERTION and the RECEIVED CPNY T.O button on PERF T.O. |
| 9  | MFD PERF T.O > <b>RECEIVED CPNY T.O</b> > <b>INSERT</b> .                                        | PERF T.O gets the speeds, flaps, thrust, T.O shift, THR RED / ACCEL / EO ACCEL (and the noise data when sent); THS FOR stays empty.                                                                                                                                        |
| 10 | Change the FMS departure runway, then Send to FMS again.                                         | flyPad warning about the runway; on the RECEIVED page the runway is amber and INSERT is not available.                                                                                                                                                                     |
| 11 | PERF T.O > <b>CPNY T.O REQUEST</b> > <b>SEND T.O REQUEST</b> , and send nothing from the flyPad. | REQUEST PENDING..., then NO COMPANY REPLY after 4 minutes.                                                                                                                                                                                                                 |

## 2. A320 takeoff calculator and MCDU uplink takeoff data

**Aircraft:** A32NX | **Where:** flyPad > Performance > Takeoff; MCDU PERF TAKE OFF > <TO DATA (6L) | **Status:** The flyPad calculation was used in the sim; the MCDU uplink pages are checked in the browser harness only; the full flow is not sim-tested. Unit tests of the takeoff distances.

### What it is for

The A320 takeoff speeds, FLEX temperature and THS come from the airline or the crew's own tool. Here the flyPad computes them with the FlyByWire A320neo performance model (built from Airbus data) and sends them to the FMGC as an **uplink takeoff data** message, which the crew inserts from the MCDU PERF TAKE OFF page as on the real aircraft.

### The flyPad screen (A320)

The screen is the one of the A380 (see "A380 takeoff calculator and company T.O data" above) with these A320 differences:

- No noise procedure fields; T.O CG is optional: below 27 % MAC the forward CG performance applies (A320 FCOM PER-LOD) and the THS is shown in RESULTS.
- All values come from the FBW A320 model: they are shown in green (no estimates).
- Wet and contaminated runways are computed (the A380 page accepts dry only).

Mon Sep 28

1024Z

100%

Performance

Takeoff

Top of Descent

Landing

Temperature Correction

Airport

ICAO

Fill data from

FMS

RUNWAY

Runway

Manual

Heading

TORA

Elevation

Slope

Entry angle

CONDITIONS

Condition

Dry

Wind

OAT

QNH

Anti-Ice

Packs

AIRCRAFT

TOW

T.O CG

Flaps

Thrust

DEPARTURE

THR RED

ACCEL

EO ACCEL

RESULTS

TOW

MTOW(perf)

V1

VR

V2

T.O CG

THR RED

MARGIN

FLAPS

T.O SHIFT

ACCEL

EO ACCEL

TAKEOFF RUN

Thrust

TOGA

FLEX

Calculate to see the takeoff run

Calculate

Clear

Send to FMS

Required: FlyByWire A320neo performance model (all limitations). V1, VR, 35 ft: estimates, all engines.

Figure 15. The A320 takeoff screen before any input.

Mon Sep 28

1024Z

100%

Performance

Takeoff

Top of Descent

Landing

Temperature Correction

Airport

ICAO

Fill data from

FMS

RUNWAY

Runway

Manual

Heading

TORA

Elevation

Slope

Entry angle

CONDITIONS

Condition

Dry

Wind

OAT

QNH

Anti-Ice

Packs

AIRCRAFT

TOW

T.O CG

Flaps

Thrust

DEPARTURE

THR RED

ACCEL

EO ACCEL

RESULTS

TOW

MTOW(perf)

V1

VR

V2

T.O CG

THR RED

MARGIN

FLAPS

T.O SHIFT

ACCEL

EO ACCEL

TAKEOFF RUN

Required 2,961 m

Available 3,480 m

Margin 519 m

Thrust

TOGA

FLEX

64°C

44°

64° max

VR 2,243 m

V1 2,243 m

Required 2,961 m

Calculate

Clear

Send to FMS

Required: FlyByWire A320neo performance model (all limitations). V1, VR, 35 ft: estimates, all engines.

Figure 16. LFBO 14R-like runway (3500 m, 499 ft), 68 t, 22 °C: FLEX 64 °C (maximum), required 2961 m of 3480 m, margin 519 m.

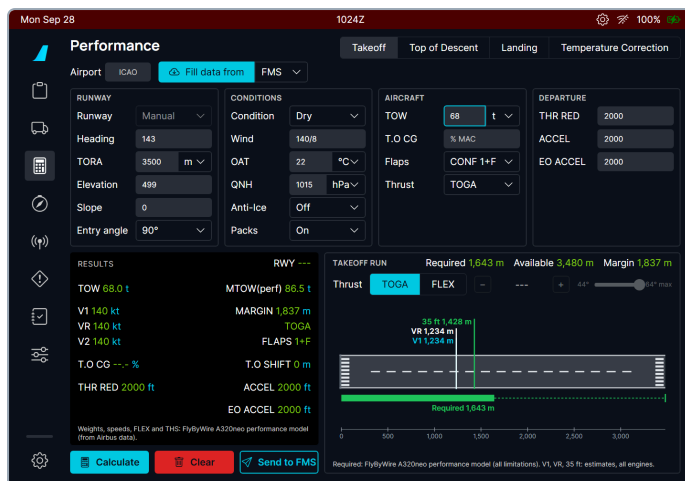


Figure 17. The TOGA run at the same weight: 1643 m.

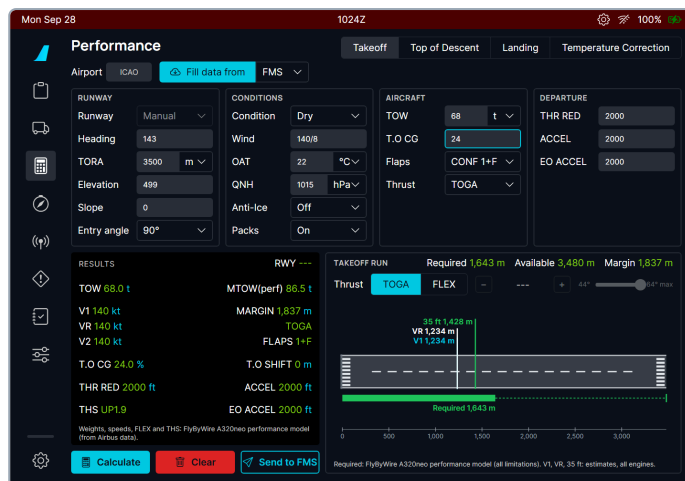


Figure 18. T.O CG 24 % (forward CG) at TOGA: the THS (UP1.9) appears in RESULTS.


## NOTE

At light weights the FBW A320 model gives **V1 = VR = V2** (the pictures show 148/148/148 at FLEX and 140/140/140 at TOGA for 68 t). This comes from the FlyByWire model itself (the same with the FBW version before this change), not from this feature.


## Sending to the MCDU

1. On the flyPad, choose the **runway from the list** (the uplink carries the runway ident), calculate, choose TOGA or the FLEX temperature for the takeoff run, and press **Send to FMS**.
2. The flyPad says "Takeoff data sent to the FMS: MCDU PERF TAKE OFF, UPLINK TO DATA, RECEIVED TO DATA", and warns right away if the FMGC departure runway or TOW will prevent the insertion.
3. On the MCDU the scratchpad shows **TAKEOFF DATA UPLINK**.
4. PERF TAKE OFF > **<TO DATA (6L) > RECEIVED <TO DATA (6L)**: the UPLINK MAX TO DATA page (or FLX TO DATA with 4R). Check it, then **INSERT UPLINK**.




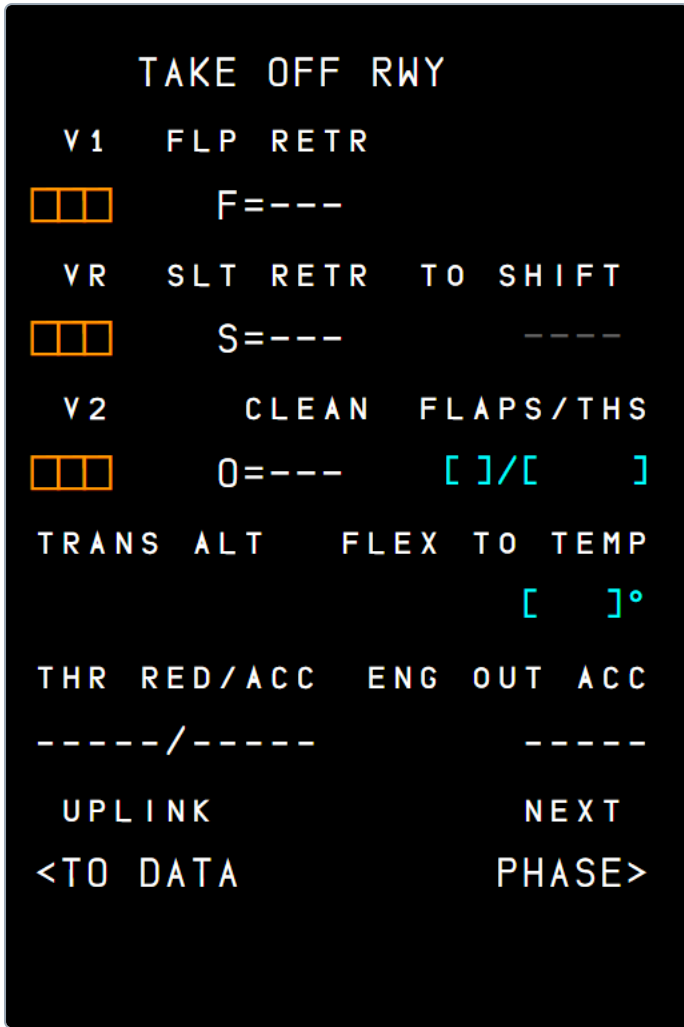


**Figure 19.** PERF TAKE OFF: the new UPLINK <TO DATA prompt (6L), in PREFLIGHT and DONE.

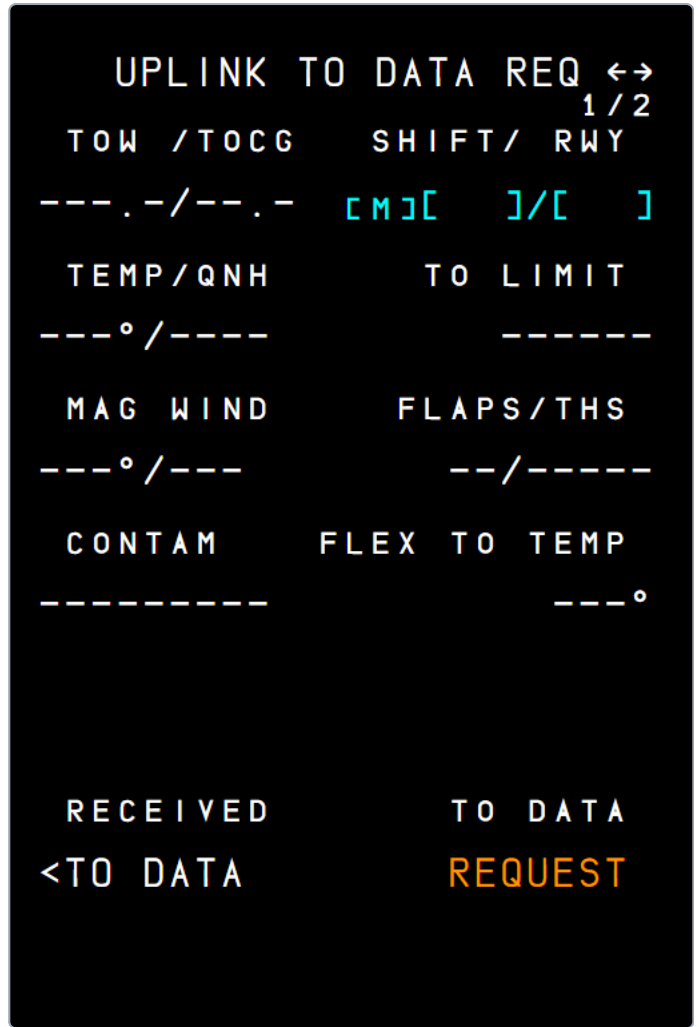

**Figure 20.** UPLINK TO DATA REQ: the request page (two runways, 1/2). RECEIVED <TO DATA (6L), TO DATA REQUEST (6R).

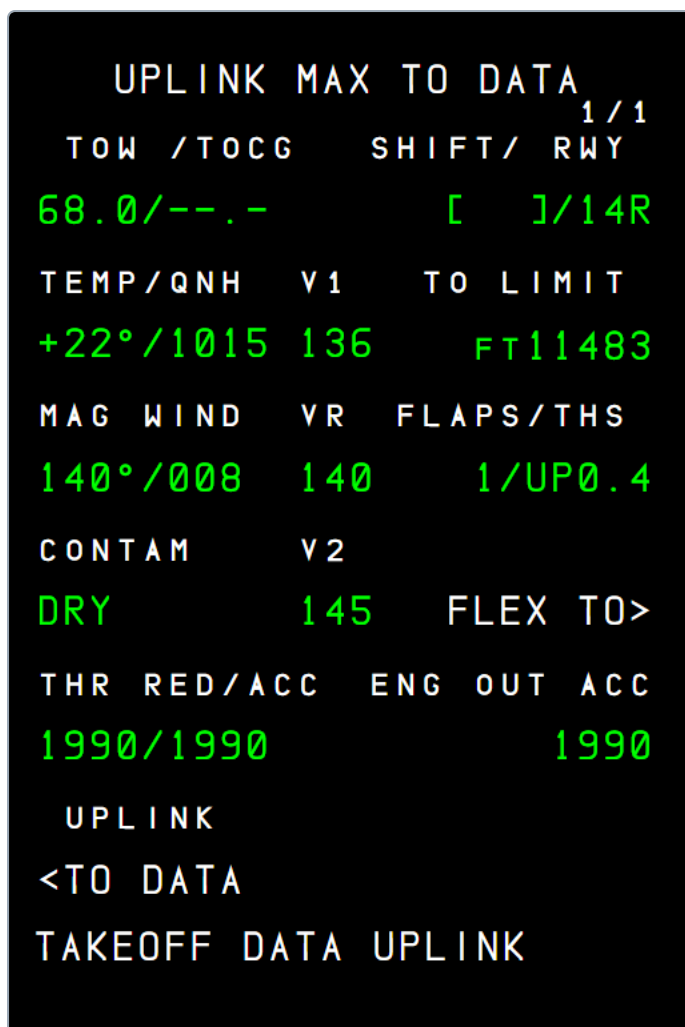

**Figure 21.** UPLINK MAX TO DATA after TAKEOFF DATA UPLINK: TOW, runway 14R, temperature and QNH, V1 / VR / V2, TO LIMIT, flaps / THS, THR RED / ACC, ENG OUT ACC. FLEX TO > (4R) shows the FLEX data.

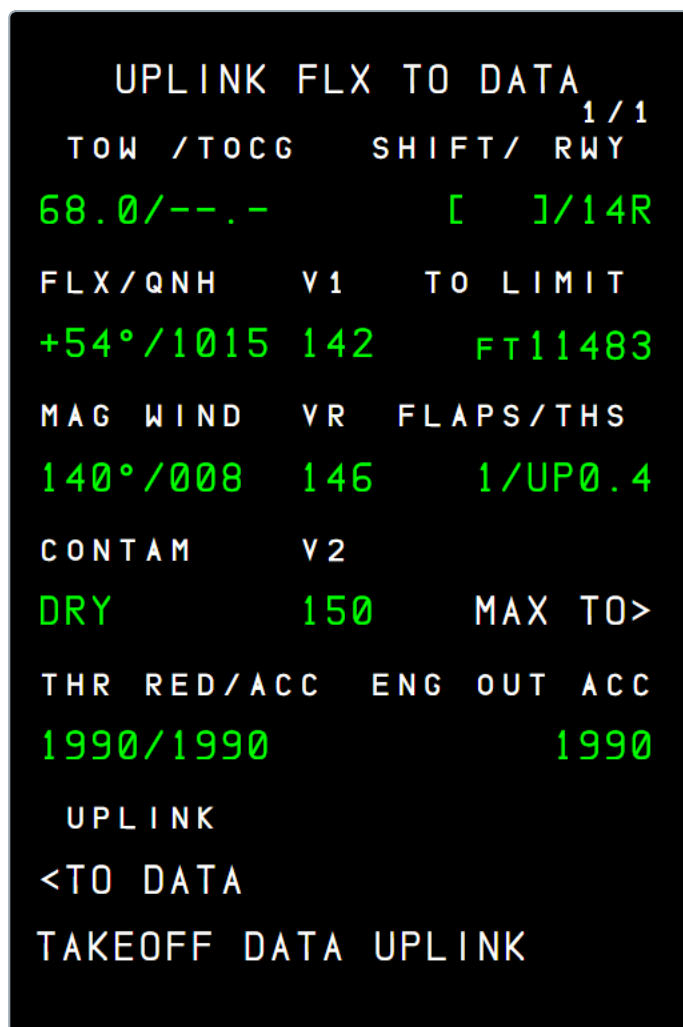

**Figure 22.** UPLINK FLX TO DATA: FLX +54 °C with its own speeds.

There is **no INSERT UPLINK prompt** in these pictures because the harness FMGC has no flight plan. The prompt appears only when the uplink is complete (V1 and VR present) and the checks below pass.

#### The insertion rules (A320 FCOM)

- The uplink runway must be the departure runway of the flight plan.
- The uplink TOW must be **not more than 1 t below or 3 t above** the FMGC TOW; otherwise there is no insertion.
- INSERT UPLINK fills V1, VR, V2, FLAPS/THS, FLEX TO TEMP (cleared for a MAX takeoff), THR RED/ACC, ENG OUT ACC and the TO SHIFT.
- An incomplete uplink (for example without V1 or VR) gives no INSERT UPLINK prompt (DSC-22\_20-70 P 6).



**Figure 23.** An uplink the FMGC cannot read: INVALID TAKEOFF UPLINK in the scratchpad.

| MCDU message           | Meaning                                   |
|------------------------|-------------------------------------------|
| TAKEOFF DATA UPLINK    | Uplink takeoff data received.             |
| INVALID TAKEOFF UPLINK | The uplink is not valid (missing data).   |
| REQUEST IS PENDING     | A request was sent and has no answer yet. |
| NO ANSWER TO REQUEST   | No answer 4 minutes after the request.    |

PERF TAKE OFF also gets the **TO SHIFT** field (1 m up to the runway length, CLR to delete): the distance lost when taking off from an intersection.

## What to expect

| Situation                                 | What you should see                                                              |
|-------------------------------------------|----------------------------------------------------------------------------------|
| Send to FMS with a runway from the list   | Success message; TAKEOFF DATA UPLINK on the MCDU.                                |
| Send to FMS with a manual runway          | Nothing is sent: choose the runway in the list.                                  |
| FMGC departure runway differs             | flyPad warning; no INSERT UPLINK on the MCDU.                                    |
| FMGC TOW differs by more than -1 t / +3 t | flyPad warning "INSERT UPLINK needs a TOW within -1 t / +3 t"; no INSERT UPLINK. |
| No TOW in the FMGC                        | flyPad warning "No TOW in the FMS (INIT B: ZFW and BLOCK)": fill INIT B first.   |
| INSERT UPLINK                             | PERF TAKE OFF filled with the uplink.                                            |

## Limitations and why

| Limitation                                            | Why                                                                                                             | What to do                          |
|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|-------------------------------------|
| Only the thrust selected for the takeoff run is sent. | The airline sends what the crew asked for; the MCDU holds MAX and FLEX pages, the flyPad fills the one you use. | Select TOGA or FLEX before sending. |
| V1 = VR = V2 at light weights.                        | The FlyByWire A320 model (upstream).                                                                            | Check against your own tools.       |
| No real airline datalink.                             | The flyPad plays the airline.                                                                                   | -                                   |

## How to use

1. On the MCDU, enter the flight plan with its departure runway and INIT B (ZFW, BLOCK).
2. flyPad > **Performance** > **Takeoff**: choose the **runway from the list**, fill the data, **Calculate**.
3. Choose TOGA or the FLEX temperature in TAKEOFF RUN, press **Send to FMS**.
4. MCDU PERF TAKE OFF > **<TO DATA (6L) > RECEIVED <TO DATA (6L)**: check, then **INSERT UPLINK**.

## How to test

| # | Do this                                                                                                                                                                 | Expected result                                                                                                                  |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground. MCDU: flight plan with a departure runway, INIT B ZFW and BLOCK. flyPad > Performance > Takeoff, runway from the list, conditions, TOW, Calculate. | RESULTS in green (FBW A320 model); THS shown when the T.O CG is below 27 %.                                                      |
| 2 | Press <b>Send to FMS</b> .                                                                                                                                              | Toast "Takeoff data sent to the FMS: MCDU PERF TAKE OFF, UPLINK TO DATA, RECEIVED TO DATA"; MCDU scratchpad TAKEOFF DATA UPLINK. |
| 3 | MCDU PERF TAKE OFF > <b>&lt;TO DATA (6L) &gt; RECEIVED &lt;TO DATA (6L)</b> .                                                                                           | UPLINK MAX TO DATA (or FLX TO DATA with 4R): V1 / VR / V2 and their labels in column 11, not over the left labels.               |
| 4 | Press <b>INSERT UPLINK</b> .                                                                                                                                            | PERF TAKE OFF filled: V1, VR, V2, FLAPS/THS, FLEX TO TEMP (cleared for MAX), THR RED/ACC, ENG OUT ACC, TO SHIFT.                 |
| 5 | Change the INIT B block so that the TOW differs by more than +3 t, then Send to FMS again.                                                                              | flyPad warning "INSERT UPLINK needs a TOW within -1 t / +3 t"; no INSERT UPLINK prompt.                                          |
| 6 | Clear INIT B and send again.                                                                                                                                            | flyPad warning "No TOW in the FMS (INIT B: ZFW and BLOCK)".                                                                      |
| 7 | Choose a Manual runway on the flyPad and press Send to FMS.                                                                                                             | Nothing is sent: the runway must come from the list.                                                                             |

## 3. A380X company datalink reply time

**Aircraft:** A380X (the A32NX MCDU uplink stays instant) | **Where:** flyPad > Settings > Realism; MFD INIT, WIND, PERF T.O |  
**Status:** On the user's sim test list done on 2026-10-02 ("datalink"); checked in the browser harness.

## What it is for

On the A380 the flight plan, the winds and the takeoff data come from the airline by datalink (FCOM DSC-22-FMS-10-40-90). A request takes time: the button shows **REQUEST PENDING...** until the answer, and **NO COMPANY REPLY** appears when nothing comes within 4 minutes. FBW answered instantly; now the answer arrives after a reply time you choose.

The setting

Company Datalink Reply Time (F-PLN, Winds, T.O Data)

Instant

Fast

Real

Figure 24. flyPad > Settings > Realism: Company Datalink Reply Time, Real by default.

| Setting        | Answer to a request | Message sent without a request (e.g. SEND TO FMS) |
|----------------|---------------------|---------------------------------------------------|
| Instant        | immediately         | immediately                                       |
| Fast           | 5 to 15 s           | 1 to 3 s                                          |
| Real (default) | 60 to 120 s         | 5 to 15 s                                         |

Airbus gives no figure: these are typical airline values, below the 4 minute limit of the FCOM.

Requesting the flight plan

- 1. INIT > **CPNY F-PLN REQUEST** opens COMPANY F-PLN REQUEST (flight number, company route, free text).
- 2. Press **SEND F-PLN REQUEST**. The button becomes **REQUEST PENDING...**, here and on INIT; one request at a time.
- 3. After the reply time the SimBrief flight plan is delivered to the FMS, as before.
- 4. If SimBrief does not answer (no network, no flight plan), **NO COMPANY REPLY** appears after 4 minutes.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

COMPANY F-PLN REQUEST

FLT NBR

CPNY RTE

FREE TEXT

REQUEST PENDING...

RETURN

MSG LIST

Figure 25. Request sent: REQUEST PENDING... (greyed until the answer).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/INIT

FLT NBR

ACFT STATUS

REQUEST PENDING...

FROM

TO

ALTN

CPNY RTE

RTE SEL

ALTN RTE

ALTN RTE SEL

CRZ FL

CRZ TEMP

CI

TROPO

CPNY WIND REQUEST

TRIP WIND

WIND

IRS

DEPARTURE

RTE SUMMARY

NAVAIDS

FUEL&LOAD

T.O. PERF

CPNY T.O. REQUEST

MSG LIST

Figure 26. INIT shows the pending request too.

**Figure 27.** Without a Navigraph account or a SimBrief ID in the flyPad settings: NO NAVIGRAPH USER, no request.

## Winds and takeoff data

- **CPNY WIND REQUEST** (INIT or WIND page): the winds are delivered after the reply time.
- **Takeoff data** (PERF T.O > CPNY T.O REQUEST, see the A380 takeoff calculator above): the answer of the flyPad Send to FMS reaches the FMS not before the reply time of the request; without a request, after the transit time only.

## What to expect

| Situation                             | What you should see                                       |
|---------------------------------------|-----------------------------------------------------------|
| Real, request sent                    | REQUEST PENDING... for one to two minutes, then the data. |
| Instant                               | The data at once, as before this change.                  |
| A second request while one is pending | Not possible: the button stays REQUEST PENDING....        |
| No answer                             | NO COMPANY REPLY after 4 minutes.                         |
| No Navigraph user / SimBrief ID       | NO NAVIGRAPH USER; nothing is sent.                       |

## Limitations and why

| Limitation                           | Why                                                                    | What to do                            |
|--------------------------------------|------------------------------------------------------------------------|---------------------------------------|
| The reply times are typical values.  | Airbus publishes no figure for the airline answer.                     | Choose Fast or Instant if you prefer. |
| The A32NX MCDU uplink stays instant. | This change is for the A380 FMS; the A320 uplink has its own messages. | -                                     |

## How to use

1. flyPad > **Settings** > **Realism** > *Company Datalink Reply Time (F-PLN, Winds, T.O Data)*: Instant, Fast or Real (default).
2. Send the company requests as usual (CPNY F-PLN REQUEST, CPNY WIND REQUEST, CPNY T.O REQUEST) and wait for the answer while the button shows REQUEST PENDING....

## How to test

| # | Do this                                                                                                                    | Expected result                                                                          |
|---|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, a SimBrief OFP available, Navigraph / SimBrief set in the flyPad. Set the reply time to <b>Real</b> . | Setting saved.                                                                           |
| 2 | MFD INIT > <b>CPNY F-PLN REQUEST</b> > <b>SEND F-PLN REQUEST</b> .                                                         | REQUEST PENDING... (greyed) here and on INIT; the flight plan arrives 60 to 120 s later. |
| 3 | Press the request button again while it is pending.                                                                        | Nothing happens: one request at a time.                                                  |
| 4 | Set <b>Instant</b> and request again (after clearing the plan).                                                            | The flight plan arrives at once.                                                         |
| 5 | INIT or WIND > <b>CPNY WIND REQUEST</b> with Real.                                                                         | The winds arrive after the reply time.                                                   |
| 6 | Disconnect the network (or no OFP) and send a F-PLN request.                                                               | NO COMPANY REPLY after 4 minutes.                                                        |
| 7 | Remove the Navigraph user / SimBrief ID and press CPNY F-PLN REQUEST.                                                      | NO NAVIGRAPH USER; nothing is sent.                                                      |

## 4. Landing calculator

**Aircraft:** A380X and A32NX | **Where:** flyPad > Performance > Landing | **Status:** Tested in the sim by the user on both aircraft: OK (2026-10-02), including the BTV exit advice on dry, wet and contaminated runways. Unit tests (mutation-tested).

### What it is for

Before the descent, the crew checks that the aircraft can land on the planned runway: the landing distance for the runway condition and braking, the margin left, the approach speed VAPP and the go-around performance. On the real A380 this is the LDG PERF application of the OIS (FCOM PER-LND); on the A320 it is the QRH (in flight) and the FCOM tables (dispatch). This page does both, with the data of each aircraft.

- **IN-FLIGHT** (default): the actual landing distance for the braking mode you will use, as in the QRH / OIS, with the stop margin.
- **DISPATCH**: the regulatory (factored) required landing distance, to check a runway before departure.

## The screen

Mon Sep 28

1024Z

  100% 



Performance

Takeoff

Top of Descent

Landing

Temperature Correction

Airport

ICAO

Fill data from

FMS

Computation

Dispatch

In-flight

RUNWAY

RunwayManual

Heading0

LDAmm

Elevationft

Slope%

GA altitudeft

CONDITIONS

Rwy condDry

Wind°/kt

OAT°C

QNHhPa

A-ICEOff

Air condOn

AIRCRAFT

LWMLWt

Ldg confCONF FULL

Appr typeNormal

GA gradientMIN 2.7 %

VLS +kt

LANDING

TechniqueManual

Brk modeManual

Reverse Thrust

RESULTS

RWY---

LW---t

MLW(perf)---t

LIMITATION CODE---

FLAPS 03 0FULL

LDG DIST---m

VAPP---kt

STOP MARGIN---m

GA SPEED---kt

GA GRADIENT--%

LANDING ROLL

Enter the landing data, then calculate

Calculate

Clear

Green: Airbus data. Amber\*: estimate. BTV exits: distance from the threshold, the first beyond the WET line is recommended (FCOM SOP), even on a dry runway.

**Figure 28.** The A380 landing screen before any input. Amber labels are the inputs still missing for a calculation.

| Part                    | Contents                                                                                                                                                                   |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Airport, Fill data from | The ICAO code; <b>Fill data from</b> imports the data from the <b>FMS</b> (A380 FMC / A320 MCDU), the <b>OFP</b> (SimBrief) or the <b>METAR</b> .                          |
| Computation             | DISPATCH or IN-FLIGHT.                                                                                                                                                     |
| RUNWAY                  | Runway from the list (or Manual), heading, landing distance available (LDA), elevation, slope, and on the A380 the go-around altitude.                                     |
| CONDITIONS              | Runway condition, wind (direction/speed), OAT, QNH; on the A380 the anti-ice and air conditioning (they change the go-around gradient).                                    |
| AIRCRAFT                | Landing weight (MLW button = the maximum landing weight), landing configuration, and on the A380 the approach type, the required go-around gradient and the VLS increment. |
| LANDING                 | Manual landing or autoland, braking mode, reverse thrust, and on the A320 the overweight procedure.                                                                        |
| RESULTS                 | The results in the OIS layout (below).                                                                                                                                     |
| LANDING ROLL            | A picture of the runway with the touchdown, the stop point of each braking mode, the stop margin, and on the A380 the BTV lines and the runway exits.                      |



**Figure 29.** Fill data from: FMS (destination, runway, predicted landing weight and the PERF APPR QNH, temperature, wind and landing configuration), OFF or METAR.

## A normal in-flight calculation (A380)

1. In flight, with the destination and the arrival runway in the flight plan and PERF APPR filled: choose **FMS** and press **Fill data from**. Otherwise type the airport, choose the runway and fill the conditions.
2. Check the landing weight (the FMS prediction) and the configuration.
3. Choose the braking mode you plan to use (manual, autobrake LO / 2 / 3 / HI, or BTV).
4. Press **Calculate**.

**Figure 30.** Dry runway, 3000 m, 380 t, CONF FULL, manual braking: landing distance 1130 m, stop margin 1870 m, VAPP 141 kt (VLS 136 + 5). The landing roll shows where each braking mode would stop.

## Reading the results

| Line      | Meaning                                                                                                                                                                                                                                                                                                                                                                            |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LW        | The landing weight used.                                                                                                                                                                                                                                                                                                                                                           |
| MLW(perf) | The <b>highest landing weight the runway and the go-around allow</b> : the lower of the weight whose landing distance just fits the LDA and the weight that still gives the required go-around gradient. It is a performance limit, not the structural maximum landing weight (395 t on the A380): it can be above it. Above the structural MLW the page shows OVERWEIGHT LANDING. |

|                         |                                                                                                                                                                           |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LIMITATION CODE         | <b>WGT</b> : your weight is below MLW(perf), nothing limits you. <b>LDA</b> (red): the landing distance limits the weight. <b>ACG</b> : the go-around gradient limits it. |
| FLAPS                   | The landing configuration used (with AUTO CONF: the one the page chose).                                                                                                  |
| LDG DIST / REG LDG DIST | In flight: the actual landing distance for the braking mode. Dispatch: the required (regulatory) distance.                                                                |
| STOP MARGIN             | LDA minus the landing distance. Negative (red): the aircraft does not stop on the runway.                                                                                 |
| GA SPEED, GA GRADIENT   | The go-around speed and the climb gradient of the go-around configuration.                                                                                                |
| VAPP                    | VLS of the landing configuration + the VLS increment (the wind increment, or what you enter).                                                                             |
| Bottom line             | The actual landing distance (ALD), the wind taken into account, the go-around configuration, and whether reverse thrust was credited.                                     |

Colours follow the flyPad takeoff calculator: **green** values come from Airbus data; values in **amber with a star (\*)** are estimates of a model fitted on that data (see Limitations).

Braking modes

LANDING

TechniqueManual

Brk modeManual

Reverse ThruLO23HI

**Figure 31.** A380 braking modes: Manual, autobrake LO, 2, 3, HI (picture taken before the BTV mode was added: the list now ends with BTV, see "A380 landing calculator: BTV braking mode" below).

AIRCRAFT

LWMLW420t


Ldg confCONF FULL

Appr typeAUTO CONF

GA gradientCONF 3

VLS +5 kt (Wind)

**Figure 32.** Landing configuration: CONF FULL, CONF 3 or AUTO CONF (the page chooses, as the OIS does).

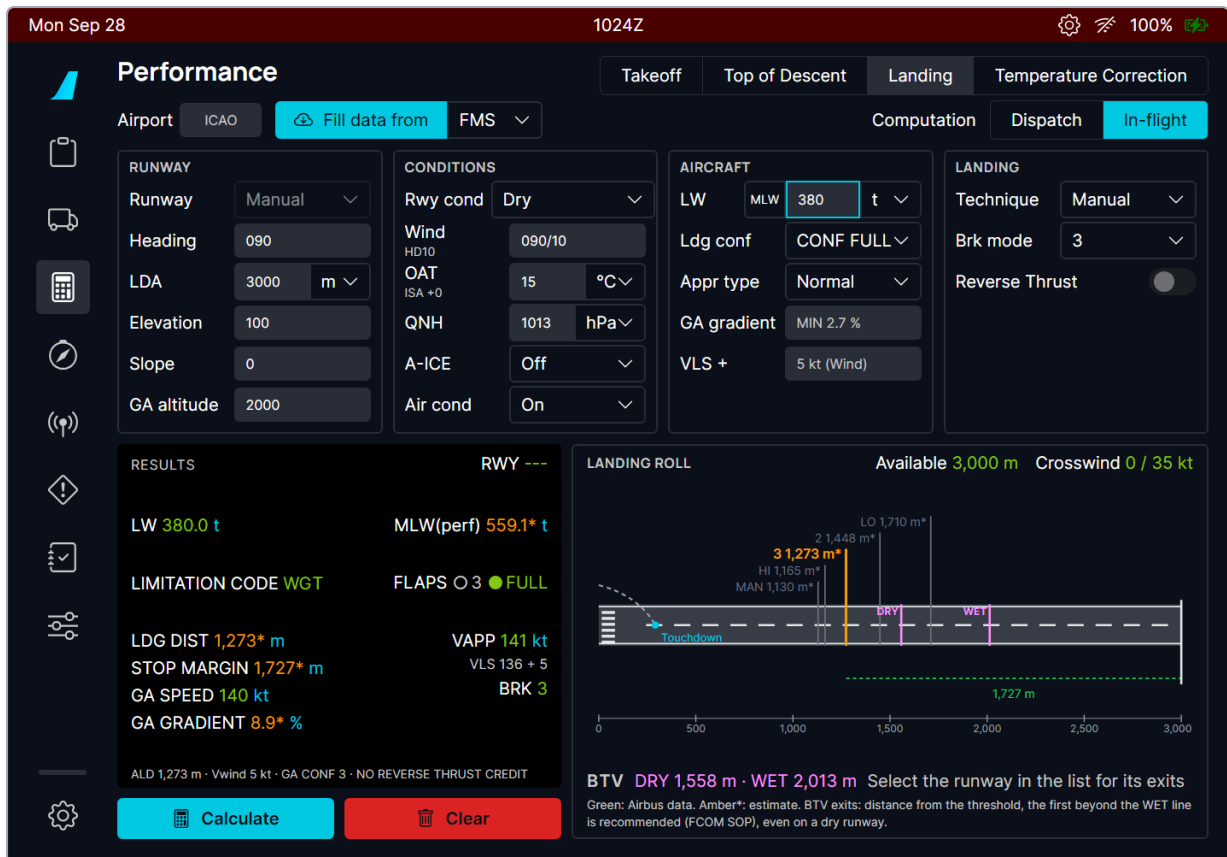

**Figure 33.** Same landing with autobrake 3: 1507 m. The stop point of the chosen mode is highlighted; the others stay visible for comparison.

**AUTO CONF** (A380, FCOM PER-LND): CONF FULL when its go-around in CONF 3 gives the required gradient, otherwise CONF 3 with a go-around in CONF 2; for an overweight landing, CONF 3 with a go-around in CONF 1+F.

### Runway condition and reverse thrust

The runway condition follows the runway condition codes (RWYCC): dry, wet, water and slush 1/4" or 1/2", compacted snow, ice. The crosswind limit of the condition is shown at the top of the landing roll.

- **Reverse thrust** is credited only on a **contaminated** runway (FCOM: no credit on dry and wet runways); the result line says *REVERSE THRUST CREDIT* or *NO REVERSE THRUST CREDIT*.
- On the A380, **BTV is prohibited on a contaminated runway** (FCOM LIM-32-30): the BTV line says so and advises autobrake 3.
- With 1/2" of water or slush, a message reminds you that Airbus does not recommend these distances: a deeper contaminant gives a shorter distance in the data.

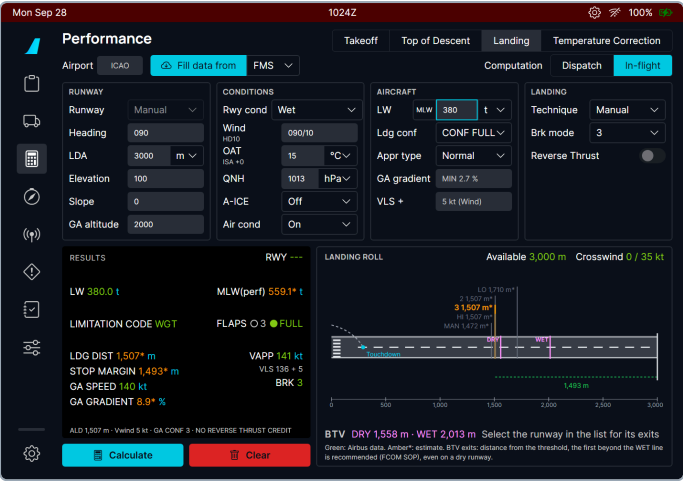


Figure 34. Wet runway, autobrake 3.

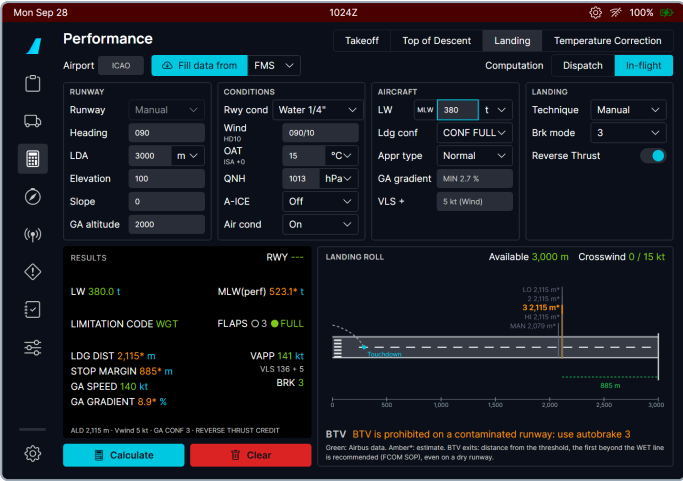


Figure 35. Water 1/4" with reverse thrust: credited, BTV prohibited, crosswind limit 15 kt.

BTV exits (A380)


On the A380, the page shows the **BTV DRY** and **WET** lines: where the aircraft stops with the BTV decelerations (FCOM DSC-32-10-30-20), from 400 m after the threshold plus 5 s of roll. When the runway comes from the list and a Navigraph account is linked, the runway exits of the airport map are drawn and rated:

| Exit           | Meaning                                                                         |
|----------------|---------------------------------------------------------------------------------|
| Recommended    | The first exit beyond the WET line (the FCOM SOP choice, even on a dry runway). |
| Beyond WET     | Achievable wet or dry.                                                          |
| Dry only       | Between the DRY and WET lines: only on a dry runway.                            |
| Not achievable | Before the DRY line.                                                            |

Without the runway list or the Navigraph data, the line says "Select the runway in the list for its exits". This is information for your briefing: the BTV selection itself is made on the OANS, as on the real aircraft.


Dispatch

DISPATCH gives the **required landing distance** used to check a runway before departure: the actual distance divided by 0.6 on a dry runway, ×1.15 on a wet one, and on a contaminated runway the higher of the wet value and ALD ×1.15 (A380 FCOM PER-LND). Braking is manual (the braking mode is greyed out). The orange bar is the required distance.

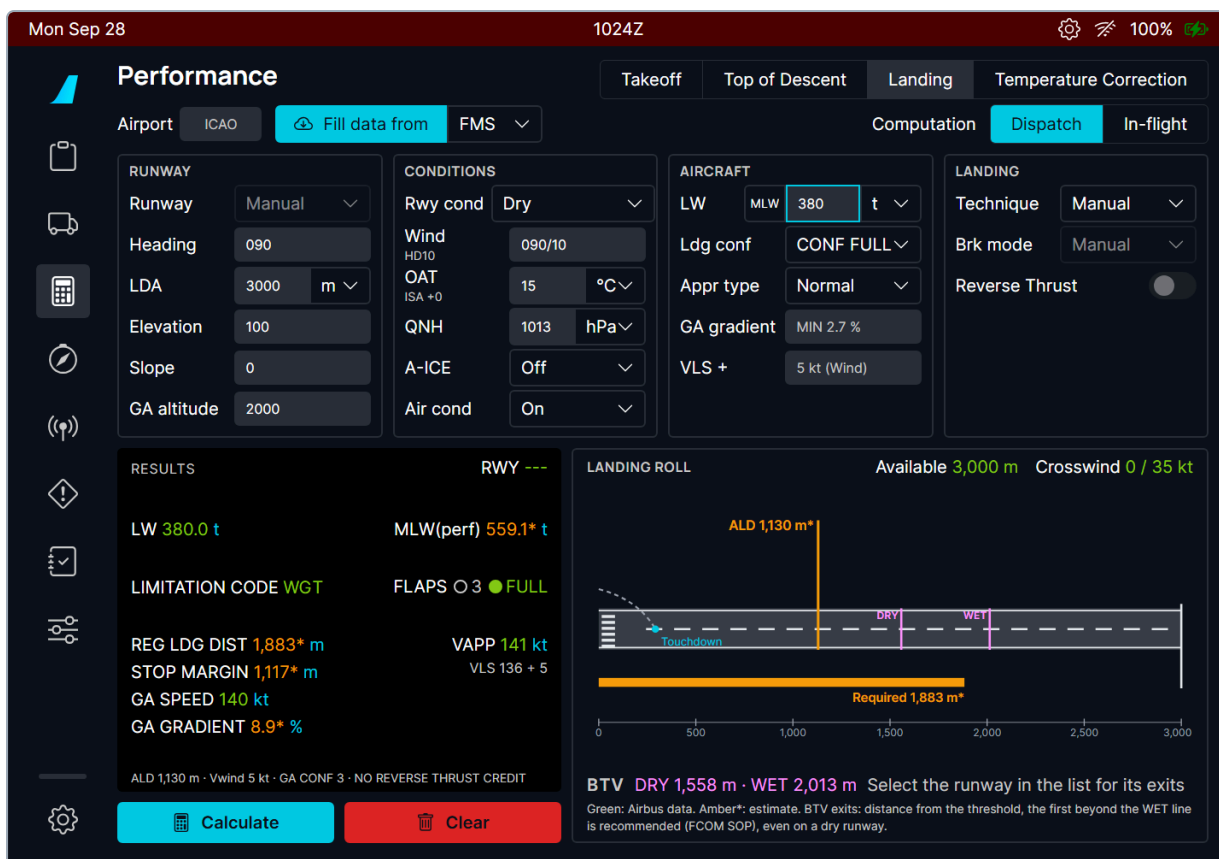

**Figure 36.** Dispatch on the same runway: required landing distance 1883 m (REG LDG DIST).

## When the runway is too short or the aircraft too heavy

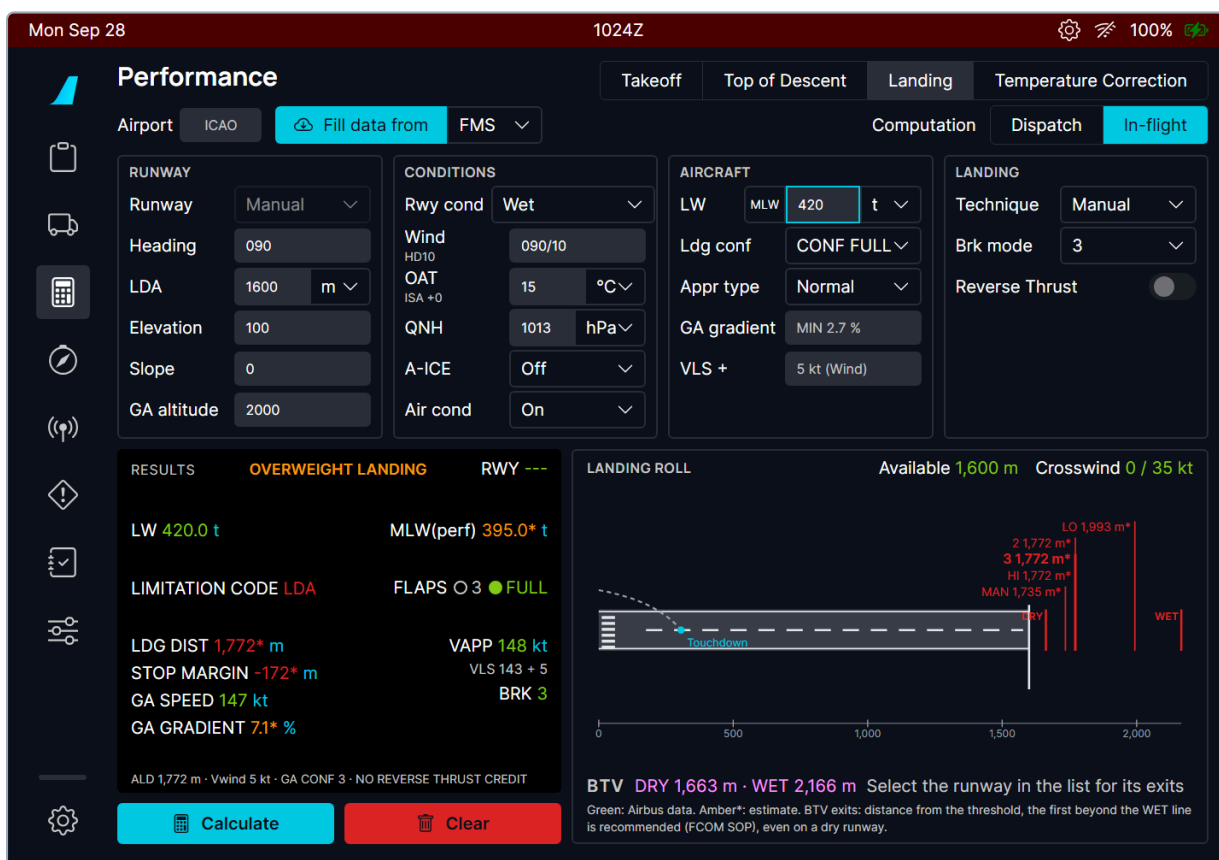

**Figure 37.** 1600 m wet runway at 420 t: OVERWEIGHT LANDING (above the 395 t MLW), limitation code LDA in red, negative stop margin (-172 m): the aircraft does not stop on this runway with autobrake 3.

The A320 version

The A320 uses the same screen with its own data: the **QRH in-flight landing distances** (shown  $\times 1.15$ , the QRH margin) and the **FCOM dispatch tables** (PER-LDG-DIS-RLD) with the autoland correction and the wet minimum. Braking modes are Manual, LO and MED; the **Overweight Procedure** switch applies the QRH overweight landing corrections. There is no go-around section.

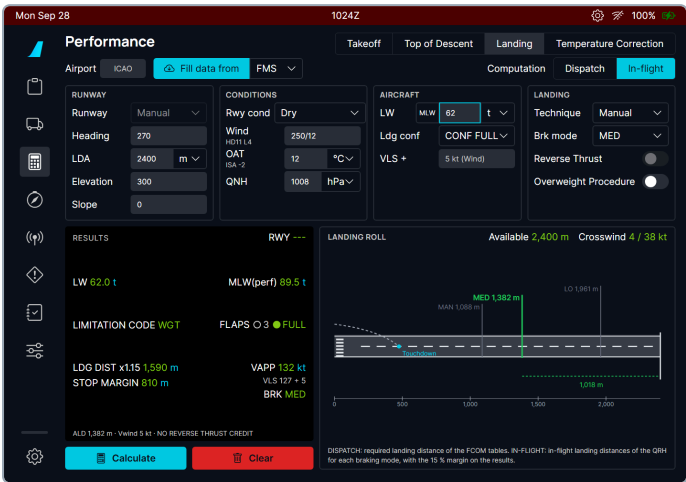


Figure 38. A320 in flight: 62 t, 2400 m dry, autobrake MED: 1382 m (1590 m with the 15 % margin).

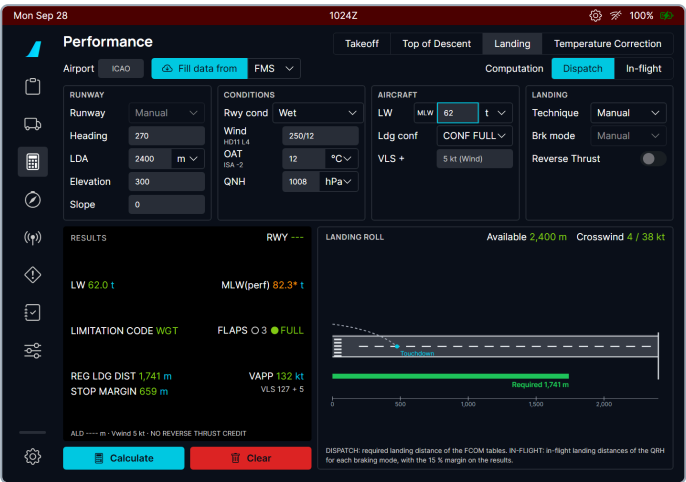


Figure 39. A320 dispatch on a wet runway: required 1741 m from the FCOM tables (green: Airbus data).

What to expect

| Situation                                | What you should see                                                 |
|------------------------------------------|---------------------------------------------------------------------|
| Inputs missing                           | Amber labels; the Calculate button stays dim until they are filled. |
| Fill data from FMS without a flight plan | Only what the FMS has is filled; complete the rest by hand.         |
| Dry or wet runway, reverse thrust on     | NO REVERSE THRUST CREDIT: the FCOM gives none there.                |
| Contaminated runway                      | Longer distances, lower crosswind limit; A380: BTV prohibited.      |
| Landing weight above the MLW             | OVERWEIGHT LANDING in the RESULTS; A380 AUTO CONF lands in CONF 3.  |
| LW above MLW(perf)                       | Limitation code LDA or ACG in red; the stop margin may be negative. |
| Change of an input after Calculate       | Press Calculate again.                                              |

Limitations and why

| Limitation                                                       | Why                                                                                                                                                                                                                               | What to do                                                        |
|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
| Most A380 values are estimates (amber *).                        | The only public A380 landing data is the landing field length chart of the Airbus A380 Aircraft Characteristics (dry, manual, CONF FULL). The other cases use a model fitted on it (0.8 % error on the chart) and the FCOM rules. | Use the results for training and planning, not as certified data. |
| Autobrake and BTV distances are estimates.                       | They come from the autobrake decelerations of the FCOM, not from Airbus tables.                                                                                                                                                   | -                                                                 |
| BTV exits need the runway from the list and a Navigraph account. | The exits come from the Navigraph airport map (the OANS data).                                                                                                                                                                    | Choose the runway in the list; link Navigraph.                    |
| No BTV on the A320.                                              | The A320 has no BTV.                                                                                                                                                                                                              | -                                                                 |

The go-around gradient is calibrated on one FCOM example.

No A380 go-around tables are public.

-

## How to use

1. In flight, with the destination, the arrival runway and PERF APPR (QNH, temperature, wind) in the FMS: flyPad > **Performance** > **Landing, Fill data from** FMS. Otherwise type the airport, choose the runway and enter the conditions.
2. Keep IN-FLIGHT (DISPATCH before departure), check the landing weight and the configuration, choose the braking mode and reverse thrust.
3. Press **Calculate**; read LDG DIST, STOP MARGIN, VAPP and the landing roll; on the A380 note the recommended BTV exit.

## How to test

| # | Do this                                                                                                                                                                                   | Expected result                                                                                                                                              |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in flight (or on the ground with the destination entered), destination and arrival runway in the flight plan, PERF APPR filled. flyPad > Performance > Landing, Fill data from FMS. | Airport, runway, landing weight, QNH, temperature, wind and configuration filled.                                                                            |
| 2 | Dry runway, manual braking, <b>Calculate</b> .                                                                                                                                            | RESULTS: LW, MLW(perf), limitation code, FLAPS, LDG DIST, STOP MARGIN, GA SPEED / GRADIENT, VAPP; the landing roll with the stop point of each braking mode. |
| 3 | Choose autobrake 3 and Calculate.                                                                                                                                                         | A longer LDG DIST; the stop point of mode 3 highlighted.                                                                                                     |
| 4 | With a Navigraph account linked and the runway from the list: look under the landing roll.                                                                                                | The BTV DRY and WET lines and the runway exits rated (recommended = first beyond WET; dry only; not achievable).                                             |
| 5 | Set Water 1/4", reverse thrust on, Calculate.                                                                                                                                             | REVERSE THRUST CREDIT; "BTV is prohibited on a contaminated runway: use autobrake 3"; lower crosswind limit at the top of the landing roll.                  |
| 6 | Dry runway with reverse thrust on.                                                                                                                                                        | NO REVERSE THRUST CREDIT.                                                                                                                                    |
| 7 | Choose DISPATCH and Calculate.                                                                                                                                                            | REG LDG DIST (actual / 0.6 on dry); the braking mode is greyed.                                                                                              |
| 8 | IN-FLIGHT, landing weight 420 t on a short wet runway.                                                                                                                                    | OVERWEIGHT LANDING, limitation code LDA in red, negative stop margin when the runway is too short.                                                           |
| 9 | A32NX: same page.                                                                                                                                                                         | Braking modes Manual, LO, MED; Overweight Procedure switch; LDG DIST x1.15 in IN-FLIGHT; no go-around section.                                               |

## 5. A380 landing calculator: BTV braking mode

**Aircraft:** A380X | **Where:** flyPad > Performance > Landing > LANDING > Brk mode | **Status:** Tested in the sim by the user: OK (2026-10-01). Unit tests.

What it is for

The A380 can land with the Brake To Vacate (BTV) autobrake. The calculator gave the BTV DRY and WET lines and the exit advice, but BTV was not a braking mode. A380 FCOM DSC-32-20-220: the BTV landing distance is the BTV DRY line on a dry runway and the BTV WET line on a wet one (autoland plus autobrake distances until an exit is selected). **BTV** is now the last entry of the *Brk mode* list.

What you should see

| Situation                                  | What you should see                                                                                                                                    |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| IN-FLIGHT, dry runway, Brk mode <b>BTV</b> | LDG DIST = the BTV DRY line of the landing roll; the BTV stop point is drawn with the other modes.                                                     |
| IN-FLIGHT, wet runway, <b>BTV</b>          | LDG DIST = the BTV WET line.                                                                                                                           |
| Contaminated runway, <b>BTV</b>            | Error "BTV: dry or wet runway only", no result (BTV is prohibited there, FCOM LIM-32-30). With another mode, the landing roll shows no BTV stop point. |
| DISPATCH                                   | Braking is manual (the mode is greyed), as before.                                                                                                     |

Limitations and why

| Limitation                                          | Why                                                                                                  | What to do                   |
|-----------------------------------------------------|------------------------------------------------------------------------------------------------------|------------------------------|
| The BTV distance is an estimate (amber).            | The BTV lines come from the BTV decelerations of the FCOM (DSC-32-10-30-20), not from Airbus tables. | Use it for planning only.    |
| Selecting BTV here does not arm BTV in the cockpit. | On the aircraft the BTV runway and exit are selected on the OANS.                                    | Select the exit on the OANS. |

How to use

1. On the Landing page, in IN-FLIGHT, set *Brk mode* to **BTV** on a dry or wet runway.
2. Press **Calculate** and compare LDG DIST with the exits shown under the landing roll.

How to test

| # | Do this                                                                                                         | Expected result                                                               |
|---|-----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1 | A380X, flyPad > Performance > Landing, IN-FLIGHT, a runway from the list, dry, Brk mode <b>BTV</b> , Calculate. | LDG DIST equals the distance of the BTV DRY line; STOP MARGIN = LDA minus it. |
| 2 | Set the runway condition to Wet, Calculate.                                                                     | LDG DIST equals the BTV WET line (longer).                                    |
| 3 | Set Water 1/4" (or any contaminated condition) with BTV, Calculate.                                             | Error "BTV: dry or wet runway only"; no result.                               |
| 4 | Keep the contaminated runway, choose autobrake 3, Calculate.                                                    | A result; the landing roll has no BTV stop point.                             |

6. A380 landing calculator: 40 kt crosswind on dry and wet runways

**Aircraft:** A380X | **Where:** flyPad > Performance > Landing | **Status:** Tested in the sim by the user on dry and wet runways: OK (2026-10-02). Unit test.

What it is for

The landing calculator limited the crosswind to 35 kt on dry and wet runways (A380 FCOM PER-LND-CTA-CWD). The A380 FCOM revision for the EA engines (the GP7200 of the FBW A380X) increases the maximum certified crosswind at



landing from 35 kt to **40 kt**, gust included. The contaminated runway values are unchanged: 20 kt with slush or dry snow, 15 kt with standing water or compacted snow, 5 kt on ice. The 30 kt takeoff limit is unchanged too.

What you should see

| Situation                                | What you should see                                                                                                                    |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Dry or wet runway, crosswind up to 40 kt | The calculation runs without a question; the crosswind limit shown at the top of the landing roll is 40 kt.                            |
| Crosswind above 40 kt                    | A question "Crosswind above 40 kt": "The crosswind of N kt is above the maximum of 40 kt for this runway condition. Calculate anyway?" |
| Contaminated runway                      | The lower limit of the condition (20, 15 or 5 kt), as before.                                                                          |

How to use

1. Enter the wind as usual (or Fill data from FMS / METAR); the page computes the crosswind component.
2. If the question appears, answer it: the result is computed anyway when you accept.

How to test

| # | Do this                                                                      | Expected result                                                                        |
|---|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| 1 | A380X, Landing page, a dry runway of heading 090, wind 180/38 kt, Calculate. | No crosswind question (before: question above 35 kt); limit 40 kt on the landing roll. |
| 2 | Wind 180/42 kt, Calculate.                                                   | Question "Crosswind above 40 kt ... Calculate anyway?".                                |
| 3 | Wet runway, wind 180/38 kt.                                                  | No question.                                                                           |
| 4 | Water 1/4", wind 180/18 kt.                                                  | Question "Crosswind above 15 kt".                                                      |

7. Descent calculator

|                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X and A32NX   <b>Where:</b> flyPad > Performance > Top of Descent   <b>Status:</b> Tested in the sim by the user: A32NX OK (2026-10-01, after the fix of the last feature of this manual), A380X OK (2026-10-02). Unit tests. |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

The FMS computes the top of descent (T/D) for the managed descent. The crew still needs other answers: how long an emergency descent takes, where to start a descent at a given V/S, whether the aircraft is late on the profile after a shortcut, and a cross-check of the FMS T/D. The A380 OIS has an in-flight descent module for this (FCOM PER-IFT-DES); this page does the same on both aircraft, and replaces the old Top of Descent calculator.

It uses the **same flight and engine models as the FBW FMS predictions**, so its T/D agrees with the one drawn on the ND for the same inputs.

## The screen

Mon Sep 28

1024Z

100%

# Performance

Fill data from FMS

Descent type

ECON

Standard

Given V/S

Emergency

DESCENT

Initial alt

ft

A/C

Target alt

ft

Speed brakes

☐

SPEED SCHEDULE

Mach

0.85 M

Speed

300 kt

Speed limit

250 kt

Limit altitude

10000 ft

CONDITIONS

Gross weight

t

t

ISA dev

ISA +0

A/C

Wind

HD/TL kt

Anti-ice

Off

Fuel factor

0.0 %

RESULTS

TIME --- min

DIST --- NM

FUEL --- kg

V/S --- ft/min

FPA --- °

3 x alt ---

DESCENT CHECK

0 ft - GS 0 kt

Distance to target

NM

Enter the distance to the target (Fill data from FMS: to the destination)

Calculate

Clear

DESCENT PROFILE

Profile

Table

Enter the descent data, then calculate


Idle descent (or given V/S) with the flight and engine models of the FMS predictions. ECON: the managed descent speeds of the FMS. Amber\*: anti-Ice corrections of the A320 FCOM descent table.

**Figure 40.** The descent calculator. Amber labels: inputs still needed.


| Part               | Contents                                                                                                                                                                                                                                                       |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fill data from FMS | Cruise level (or the current altitude when lower), destination elevation + 1500 ft, gross weight, the FMS speed limit, the ECON speeds and the distance to the destination.                                                                                    |
| Descent type       | <b>ECON:</b> the managed descent speeds of the FMS. <b>Standard:</b> the FCOM speed schedule (A380 M.85 / 300 kt / 250 kt below FL100; A320 M.78 / 300 / 250). <b>Given V/S:</b> a constant vertical speed. <b>Emergency:</b> MMO / VMO with the speed brakes. |
| DESCENT            | Initial altitude ( <b>A/C:</b> the current one) and target altitude; speed brakes.                                                                                                                                                                             |
| SPEED SCHEDULE     | Mach, speed, speed limit and its altitude. Empty = the standard values shown in grey.                                                                                                                                                                          |
| CONDITIONS         | Gross weight, ISA deviation ( <b>A/C:</b> from the current temperature), wind component (positive = headwind, negative = tailwind), anti-ice (off / engine / total), fuel factor.                                                                              |
| RESULTS            | Time, distance, fuel, mean V/S and flight path angle, and the "3 × altitude" rule of thumb for comparison; the crossover altitude and where the aircraft slows to the speed limit.                                                                             |
| DESCENT CHECK      | With the distance to the target: when to start down, or how late you are.                                                                                                                                                                                      |
| DESCENT PROFILE    | Profile chart or table every 5000 ft.                                                                                                                                                                                                                          |

## Standard descent

1. Press **Fill data from FMS** in cruise with a flight plan, or type the initial altitude, the target altitude and the weight.
2. Choose the descent type and, if needed, the wind component and anti-ice.
3. Press **Calculate**.

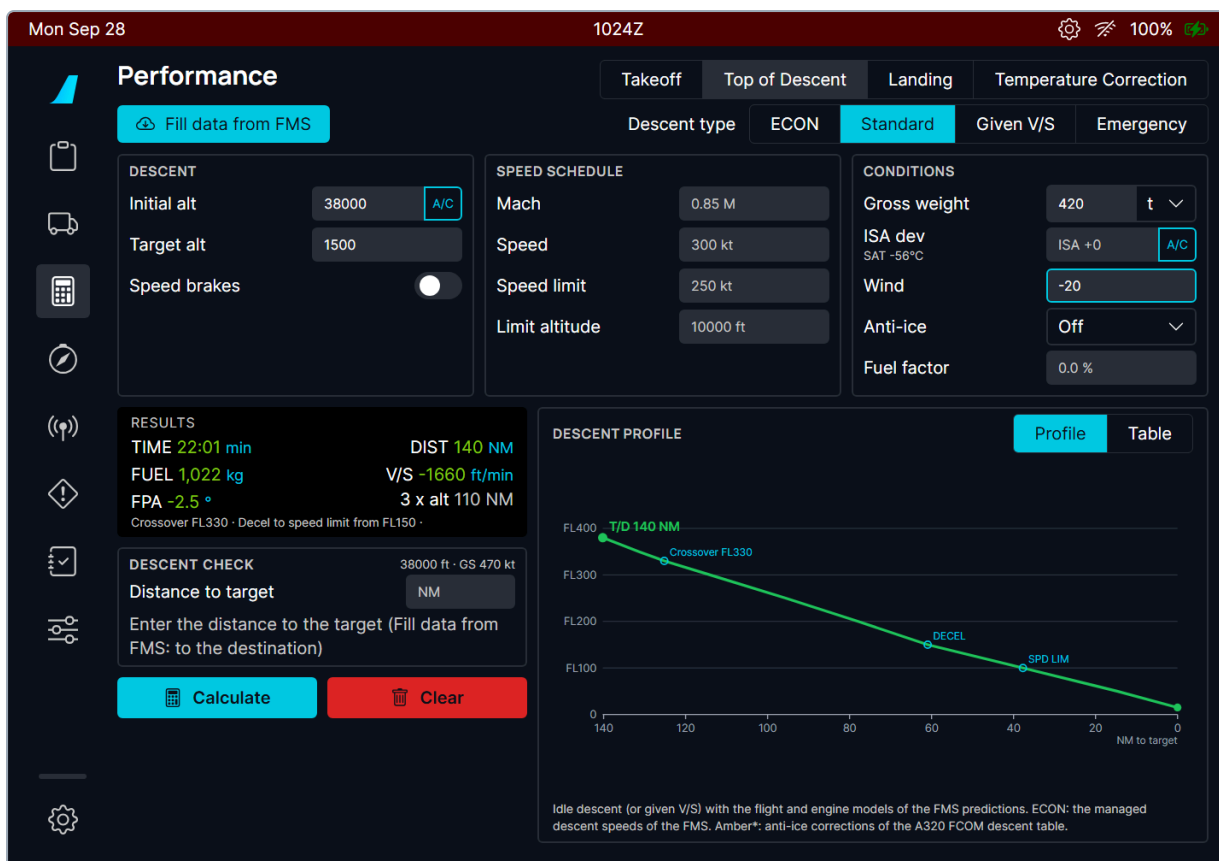

**Figure 41.** FL380 to 1500 ft, 420 t, 20 kt tailwind, standard speeds: 22 min, 140 NM, 1022 kg, -1660 ft/min on average (-2.5°). The chart shows the T/D, the crossover altitude (Mach to CAS), the deceleration (DECEL) and the speed limit (SPD LIM).

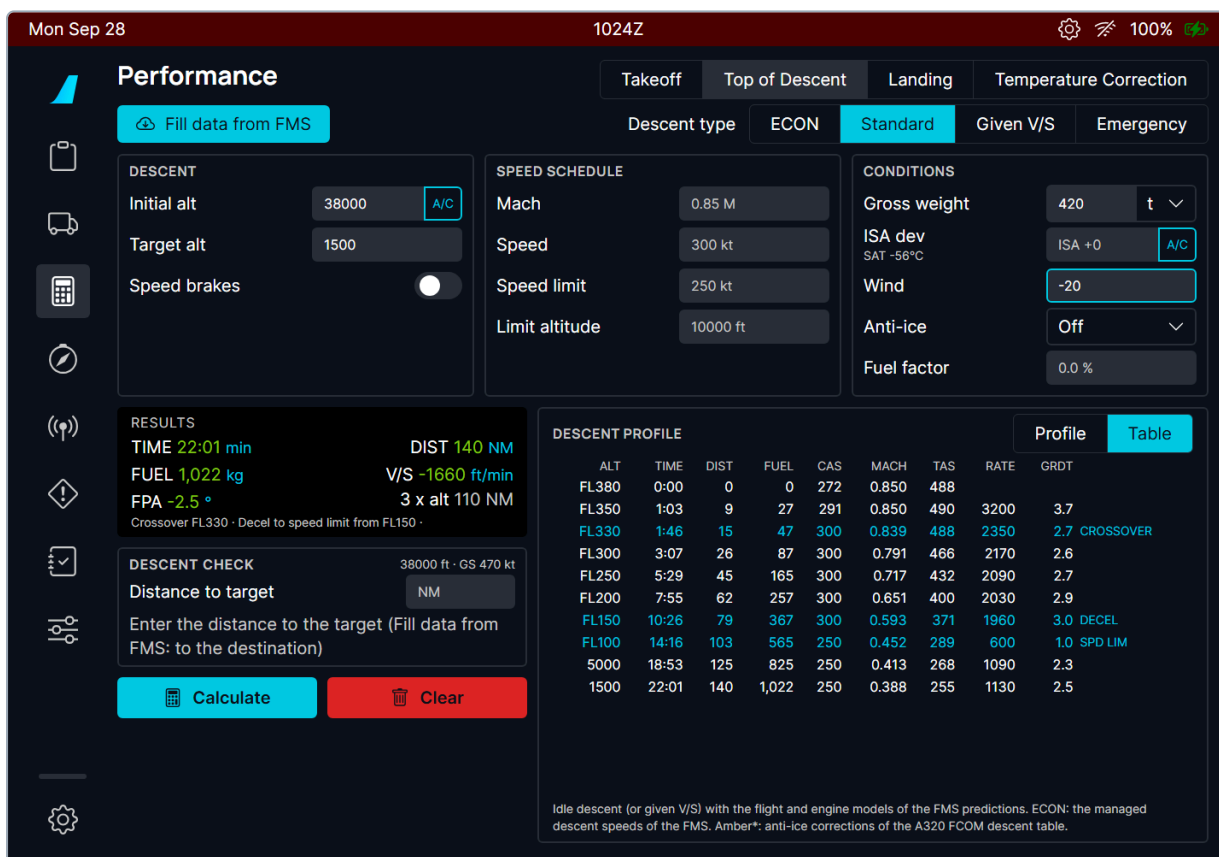

**Figure 42.** Table view: time, distance, fuel, CAS, Mach, TAS, RATE (rate of descent, ft/min) and GRDT (descent gradient, degrees) every 500 ft, named and signed like the FCOM table results (PER-IFT-DES-DSR: both positive in descent); the crossover, DECEL and SPD LIM lines in blue. The RESULTS line gives V/S and FPA negative, as set on the FCU.

The deceleration to the speed limit is flown on the  $-1^\circ$  idle path of the FMS descent strategy, which is why the profile flattens between DECEL and SPD LIM.

Descent check

Enter the **distance to the target** (Fill data from FMS enters the distance to the destination). The page reads the aircraft altitude and ground speed (shown top right of the box) and compares the aircraft with the profile. The aircraft is the triangle on the chart.

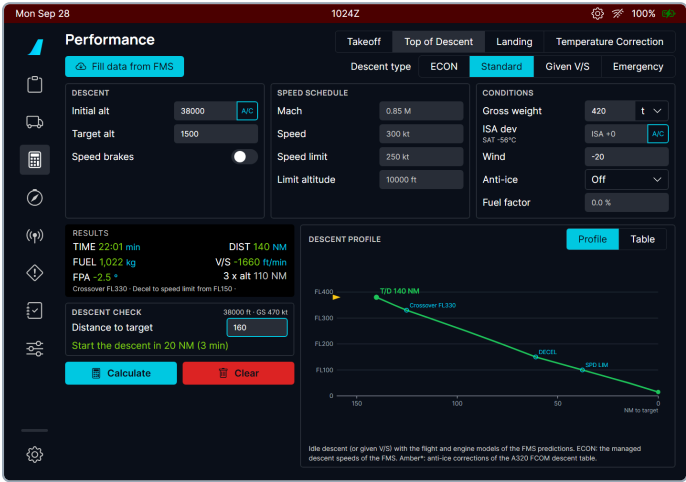


Figure 43. 160 NM to go, T/D at 140 NM: "Start the descent in 20 NM (3 min)".

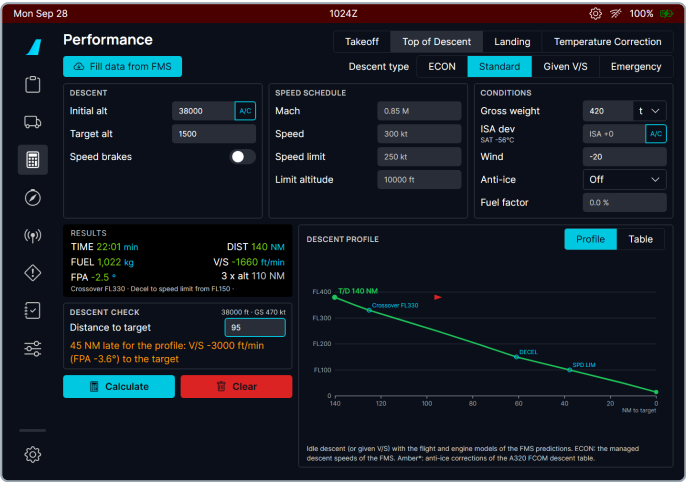



Figure 44. 95 NM to go at FL380: "45 NM late for the profile: V/S -3000 ft/min (FPA -3.6°) to the target".

TIP

After a shortcut, the late message gives the V/S (or FPA) that still makes the target, to set in V/S or FPA mode, or tells you to use the speed brakes.


Given V/S, emergency and ECON

**Given V/S** adds a V/S field. The page flies that V/S with the thrust it needs. Where the V/S is steeper than an idle descent can give, the page flies idle there and says so in amber (the aircraft cannot descend faster at idle without speed brakes).

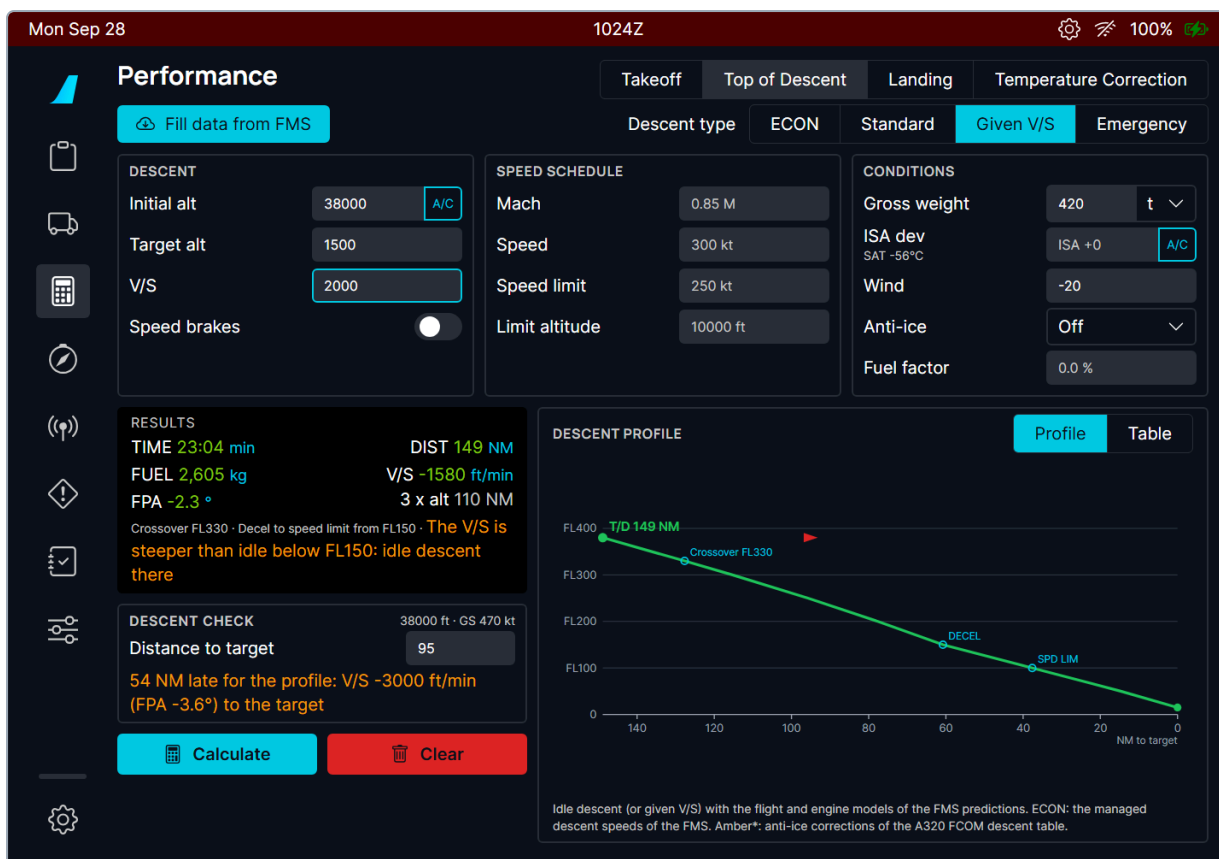

**Figure 45.** 2000 ft/min: shallower than idle at high level (149 NM, more fuel: 2605 kg), and steeper than idle below FL150, where the page flies idle.

**Emergency** uses MMO / VMO with the speed brakes extended (the schedule fields turn grey).

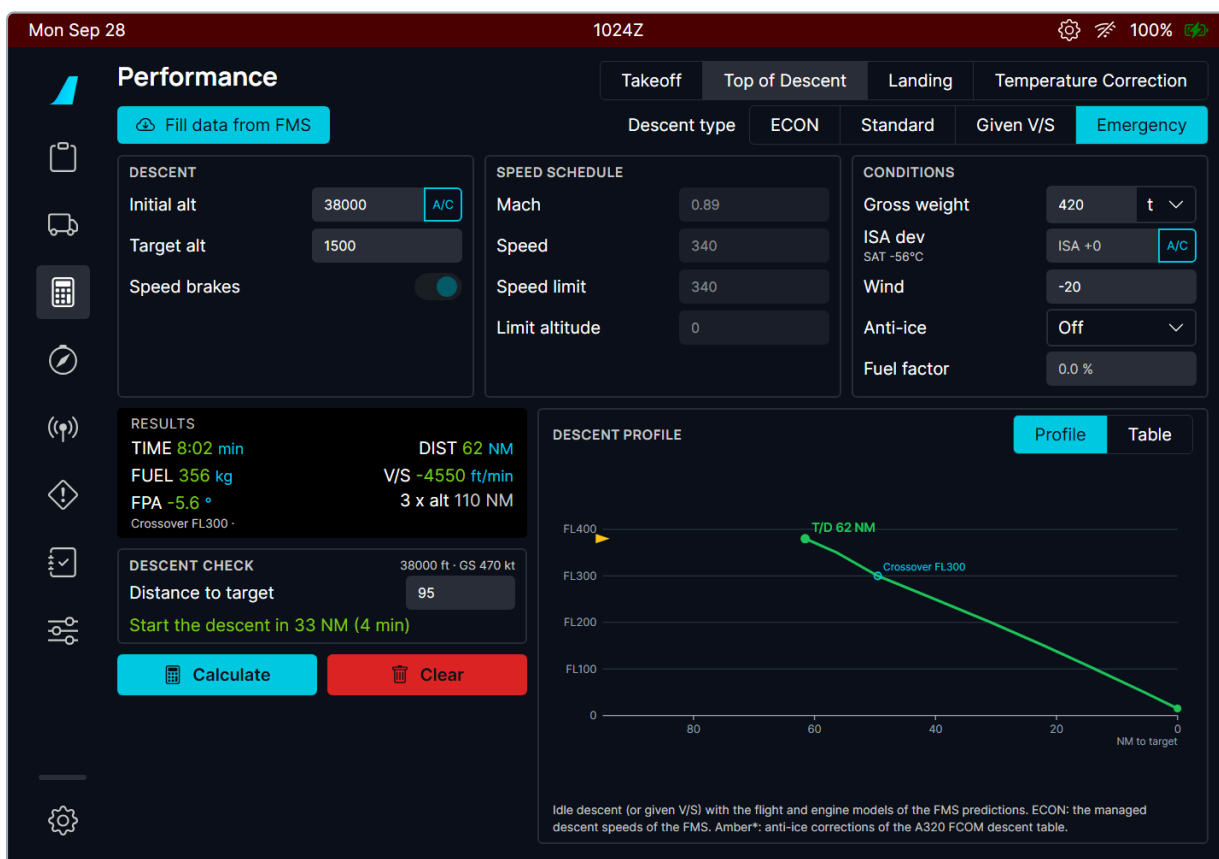

**Figure 46.** Emergency descent from FL380: 8 min, 62 NM, -4550 ft/min on average.

**ECON** needs the FMS: it asks the FMS for its managed descent speeds. Without a flight plan in the FMS, a message says so and the page stays on the previous type.

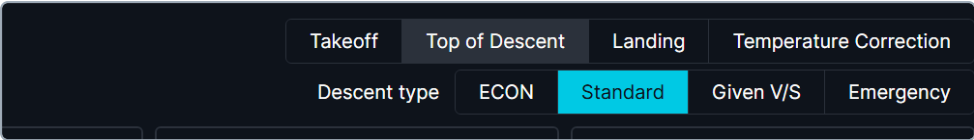


Figure 47. ECON without FMS data.

Anti-ice, fuel factor and estimates

Anti-ice (engine or total) raises the idle thrust and flattens the descent. Its effect uses the corrections of the A320 FCOM descent table (no A380 table is public): the values it changes turn **amber with a star**. The fuel factor (a percentage) scales the fuel burn, like the FMS PERF FACTOR.

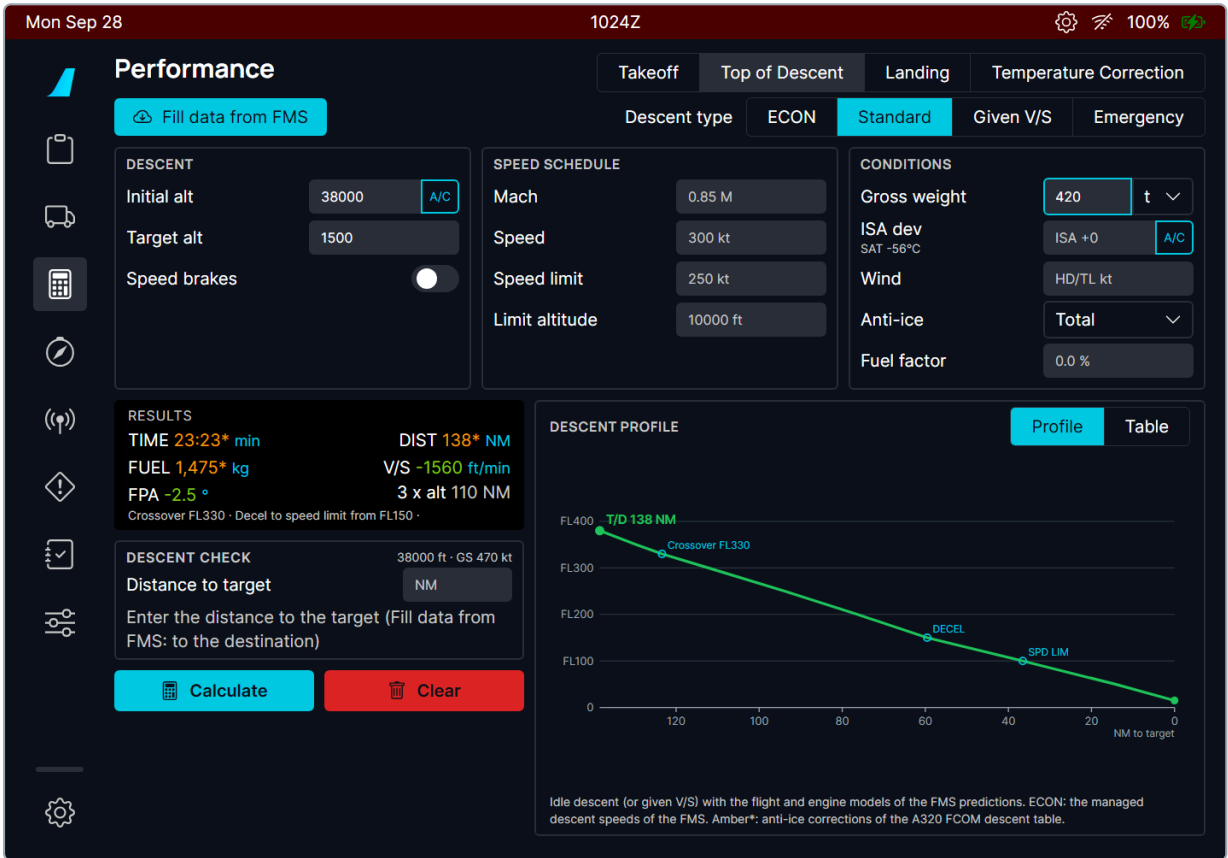


Figure 48. Total anti-ice: 138 NM, 23 min, 1475 kg, in amber (estimate).

What to expect

| Situation                                                           | What you should see                                                                                  |
|---------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Inputs missing                                                      | Amber labels; no results.                                                                            |
| Any input changed                                                   | The results are cleared: press Calculate again.                                                      |
| Target above the initial altitude                                   | Message "The target altitude must be below the initial altitude".                                    |
| Initial altitude above the aircraft ceiling, or weight out of range | A message gives the limit (maximum altitude, or the weight range from the empty weight to the MTOW). |
| Given V/S steeper than idle                                         | Amber line: idle descent below the altitude it names.                                                |
| ECON without FMS flight plan                                        | "No FMS data: enter a flight plan in the FMS".                                                       |
| Distance to target larger than the descent                          | Green "Start the descent in X NM (Y min)".                                                           |

|                                   |                                                                |
|-----------------------------------|----------------------------------------------------------------|
| Distance shorter than the descent | Amber "N NM late for the profile" with the V/S and FPA needed. |
|-----------------------------------|----------------------------------------------------------------|

## Limitations and why

| Limitation                                           | Why                                                                                                              | What to do                                           |
|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| The descent is a still-air profile plus a mean wind. | The wind is one component for the whole descent, as in the FCOM and OIS; the FMS uses the wind of each altitude. | Use the mean wind of the descent.                    |
| About 8 % longer than the A320 FCOM table.           | The FCOM table is for the CFM56 A320; the FBW A320neo engine model idles differently.                            | Compare with the FMS T/D, which uses the same model. |
| Anti-ice values are estimates.                       | Only the A320 FCOM has anti-ice descent corrections.                                                             | -                                                    |
| No descent path constraints or approach.             | The page computes a clean descent to one target altitude, not the FMS path with its constraints.                 | Use it as a cross-check of the FMS.                  |

## How to use

1. In cruise with a flight plan: flyPad > **Performance** > **Top of Descent, Fill data from FMS** (or type the initial and target altitudes and the weight).
2. Choose the descent type (ECON, Standard, Given V/S, Emergency), the wind component and anti-ice.
3. Press **Calculate**; read TIME, DIST, FUEL, V/S and FPA, and the DESCENT CHECK line (start in X NM, or late with the V/S needed).

## How to test

| # | Do this                                                                                                            | Expected result                                                                                                                                |
|---|--------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in cruise (e.g. FL380) with a flight plan to a destination. Top of Descent page, <b>Fill data from FMS</b> . | Initial altitude, target (destination elevation + 1500 ft), gross weight, speed limit, ECON speeds and the distance to the destination filled. |
| 2 | Descent type Standard, <b>Calculate</b> .                                                                          | RESULTS TIME / DIST / FUEL / V/S / FPA and 3 x alt; the profile with T/D, crossover, DECEL and SPD LIM.                                        |
| 3 | Switch to the Table view.                                                                                          | Rows every 5000 ft with RATE and GRDT positive; the RESULTS line keeps V/S and FPA negative.                                                   |
| 4 | Compare the T/D distance with the FMS T/D on the ND.                                                               | About the same (same models).                                                                                                                  |
| 5 | Enter a distance to target longer than DIST.                                                                       | Green "Start the descent in X NM".                                                                                                             |
| 6 | Enter a distance shorter than DIST.                                                                                | Amber "N NM late for the profile: V/S ... (FPA ...) to the target".                                                                            |
| 7 | Given V/S 2000 ft/min, Calculate.                                                                                  | Amber line "The V/S is steeper than idle below ...: idle descent there" where it applies.                                                      |
| 8 | Emergency, Calculate.                                                                                              | MMO / VMO with speed brakes; schedule fields grey.                                                                                             |
| 9 | Repeat on the A32NX.                                                                                               | Same page and behaviour with the A320 speeds (M.78 / 300 / 250).                                                                               |

## 8. Descent calculator: T/D distance slider

**Aircraft:** A380X and A32NX | **Where:** Top of Descent page, under the profile | **Status:** No separate sim-test record of the slider (the descent page itself was tested OK, see above); checked in the browser harness.

What it is for

After a calculation, a quick answer to "what if I start down earlier (vectors) or later (a shortcut)?" without a new calculation: the V/S and path angle the moved descent needs, against the calculated ones.

What if the descent starts earlier or later?

After a calculation, the **T/D distance** slider under the profile moves the start of the descent: to the left farther from the target (earlier, e.g. vectors), to the right closer (later, e.g. a shortcut), up to 60 NM each way. The chart draws the moved top of descent dashed, straight to the target, and the line under the slider gives the V/S and the path angle it needs, to compare with the calculated ones.

- **Later:** steeper than the idle descent: the figures turn amber, "speed brakes or a higher speed needed" (red when the calculation already used the speed brakes: start earlier).
- **Earlier:** shallower than the idle descent: "thrust needed, more fuel".
- The figures keep the mean ground speed of the calculated descent: an estimate for the decision, not a new calculation.

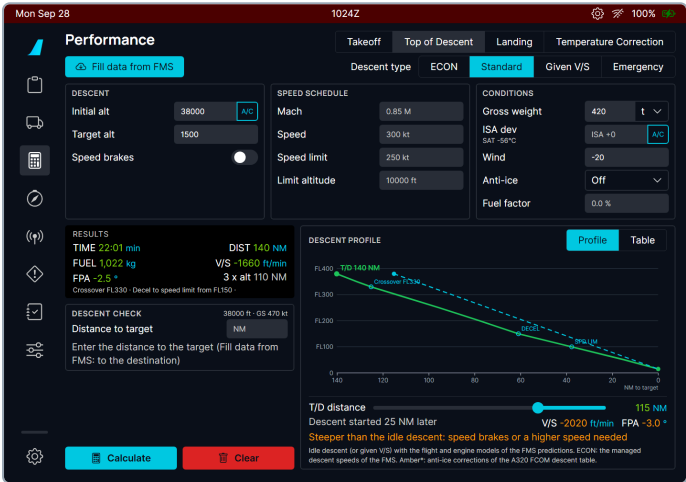


Figure 49. Slider 25 NM later: 115 NM, -2020 ft/min, -3.0°: steeper than idle.

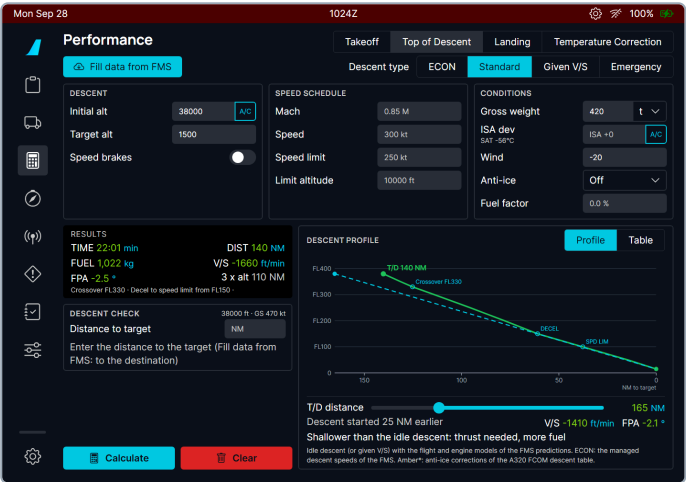


Figure 50. Slider 25 NM earlier: 165 NM, -1410 ft/min, -2.1°: shallower.

The **Calculate** and **Clear** buttons are at the bottom of the page, where they are on the takeoff and landing pages.

How to use

1. Calculate a descent.
2. Move the **T/D distance** slider under the profile: left = earlier (farther from the target), right = later.
3. Read the line under the slider: the V/S and FPA needed, and whether speed brakes or thrust are needed.

How to test

| # | Do this                                                               | Expected result                                                                                                                                                                    |
|---|-----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Calculate a standard descent from FL380 (e.g. 420 t, 20 kt tailwind). | Slider centred: "Descent as calculated".                                                                                                                                           |
| 2 | Move the slider 25 NM to the right.                                   | "Descent started 25 NM later", steeper V/S and FPA in amber, "Steeper than the idle descent: speed brakes or a higher speed needed"; dashed line from the moved T/D to the target. |
| 3 | Move it 25 NM to the left.                                            | "Descent started 25 NM earlier", shallower values, "Shallower than the idle descent: thrust needed, more fuel".                                                                    |



|   |                                                        |                                                                              |
|---|--------------------------------------------------------|------------------------------------------------------------------------------|
| 4 | Emergency type (speed brakes in), slider to the right. | Red "Steeper than the descent with speed brakes: start the descent earlier". |
| 5 | Look at the buttons.                                   | Calculate and Clear at the bottom of the page.                               |

## 9. Descent calculator: target waypoint from the flight plan

|                                                                                                                                                                          |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X and A32NX   <b>Where:</b> Top of Descent page > DESCENT > Target wpt   <b>Status:</b> Tested in the sim by the user: OK (2026-10-01). Unit tests. |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The target of a descent is often a waypoint with an altitude constraint (the first constraint of the STAR, a crossing restriction from ATC), not the destination. The FMS (A380 FMC, A32NX MCDU) now sends the waypoints ahead of the aircraft, up to the missed approach, with their altitude constraints and their distance along the route. The **Target wpt** list of the flyPad picks one as the target.

### What you see

- The list shows each waypoint with its constraint written as on the F-PLN: 9000 (at), +9000 (at or above), -9000 (at or below), 11000/9000 (window). A dash = no target waypoint (the destination).
- Picking a waypoint sets the **target altitude** from its constraint (the upper altitude of a window, to the nearest 100 ft; a waypoint without a constraint keeps the target altitude you entered) and the **distance to target** along the flight plan.
- The distance follows the aircraft: it is refreshed every 5 s. When the waypoint is sequenced, the target waypoint is cleared.
- Typing a distance yourself clears the target waypoint (the distance is no longer the waypoint's).

### Limitations and why

| Limitation                                            | Why                                                           | What to do                                          |
|-------------------------------------------------------|---------------------------------------------------------------|-----------------------------------------------------|
| The waypoints need the FMS.                           | They come from the active flight plan.                        | Without a flight plan the list holds only the dash. |
| Climb constraints of the SID are not used as targets. | An "at or above altitude 2" constraint is a climb constraint. | -                                                   |

### How to use

1. In cruise, with a STAR in the flight plan: Top of Descent page, **Fill data from FMS**.
2. Open **Target wpt** and pick the waypoint with the constraint you must meet.
3. Press **Calculate** and watch the DESCENT CHECK line as you fly.

### How to test

| # | Do this                                                                                                     | Expected result                                                                                                |
|---|-------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| 1 | A380X or A32NX in cruise with a flight plan that has a STAR with altitude constraints. Top of Descent page. | The Target wpt list shows the waypoints ahead with their constraints (e.g. ABCDE +11000 ).                     |
| 2 | Pick a waypoint with an "at" constraint.                                                                    | Target alt = the constraint; Distance to target = its distance along the flight plan (compare with the F-PLN). |
| 3 | Pick a waypoint with a window constraint.                                                                   | Target alt = the upper altitude of the window.                                                                 |

|   |                                                  |                                                                             |
|---|--------------------------------------------------|-----------------------------------------------------------------------------|
| 4 | Calculate and wait 10 s.                         | The distance to target decreases as the aircraft flies (refresh every 5 s). |
| 5 | Type a distance in the Distance to target field. | The Target wpt list goes back to the dash.                                  |

## 10. Descent calculator with an FMS that sends no waypoints

**Aircraft:** A32NX (any aircraft whose FMS sends no waypoint list) | **Where:** Top of Descent page | **Status:** User-confirmed in the sim on the A32NX: no more crash (2026-10-01). Unit tests.

### What it is for

An FMS built before the waypoints were added to the descent data (for example an older A32NX MCDU) answers without a waypoint list. The page then crashed with the flyPad error screen ("fmsWaypoints.map is not a function"). The descent data now always carries a waypoint list, empty when the FMS sends none.

### What you should see

| Situation             | What you should see                                                                   |
|-----------------------|---------------------------------------------------------------------------------------|
| FMS without waypoints | The page opens and Fill data from FMS works; the Target wpt list holds only the dash. |
| Current FMS           | The waypoints as in the previous feature.                                             |

### How to use

1. Nothing to do: open the Top of Descent page as usual.
2. After an update, install the flyPad and the FMS (MCDU / MFD) together: they exchange the descent data.

### How to test

| # | Do this                                                                               | Expected result                                                                                                                            |
|---|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX in flight with a flight plan. flyPad > Performance > Top of Descent.            | The page opens (no error screen).                                                                                                          |
| 2 | Press <b>Fill data from FMS</b> , then Calculate.                                     | Data filled, results shown, no crash.                                                                                                      |
| 3 | Delete the flight plan on the MCDU, open the page again and press Fill data from FMS. | No crash; a message says what the FMS lacks (e.g. "No FMS data: enter a flight plan in the FMS"); the Target wpt list holds only the dash. |

# Cockpit printers

The A380X MFD and ATC COM print on the paper of the pedestal printer, whose buttons work, and both aircraft get a printer paper door and no torn paper stuck in the slit

|                  |                                                                                                                                                                                                                                                                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X (printing, buttons) and A32NX (paper door, no torn paper edge)                                                                                                                                                                                                                                                                                      |
| Where to find it | Pedestal printer; A380X MFD FMS > DATA > PRINTER, SEC INDEX, ATC COM ATIS and MSG RECORD; SD MAILBOX PRINT                                                                                                                                                                                                                                                |
| Branch           | core/printer , based on core/a380x-atccom-datalink (stacked: needs core/surveillance , core/a380x-mfd-fms and core/a380x-atccom-datalink merged first). The 3D parts are in four aircraft-large-files companion changes: pedestal paper 36b4bd9, A380X door 27d6123, A380X ON light 8c14d21, A32NX door 99237fb (fork TCdr/aircraft-large-files).         |
| Status           | FMS and ATIS printing: tested in the sim 2026-09-27, FMS print again 2026-10-02. Mailbox PRINT: OK 2026-10-02 (MSG RECORD print not sim-tested). Paper doors: A32NX OK 2026-10-01; A380X looked at during the work and committed at the user's request 2026-10-01. No torn paper edge: no sim test recorded. Printer buttons and ON light: OK 2026-10-03. |
| Pictures         | MFD pages in the local browser harness (build installed in the sim); the paper sheets rendered by the printer page of the build, with the printouts of the unit tests (test flight plan LFPG - EGLL). No pictures for the doors, the slit and the buttons.                                                                                                |

1. A380X pedestal printer: FMS pages and the ATIS on paper
2. A380X ATC COM print: SD mailbox and MSG RECORD
3. Printer paper door (A380X and A32NX)
4. No torn paper edge left in the printer slit
5. A380X printer control panel: ON/OFF, SLEW, TEST, ABORT

## 1. A380X pedestal printer: FMS pages and the ATIS on paper

|           |       |        |                                                                     |         |                                                                                                                                                                                                                                                                                     |
|-----------|-------|--------|---------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft: | A380X | Where: | MFD FMS > DATA > PRINTER, SEC INDEX, ATC COM ATIS; pedestal printer | Status: | Tested in the sim by the user with the paper added to the installed cockpit model (feed animation, tear-off, sheets on the pedestal and the CPT table, FMS pages and ATIS): OK (2026-09-27); FMS print again OK (2026-10-02). Unit tests: 26 FMS print + printer tests, ATIS print. |
|-----------|-------|--------|---------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The A380 has a printer on the pedestal. The FMS prints its data (initialization, takeoff, winds, flight reports) and the ATC COM prints the ATIS, so the crew has them on paper. The printer now works as on the FBW A320: the sheet comes out of the printer, you tear it off and read it.

### Printing

| From                 | What prints                                                                                                                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FMS > DATA > PRINTER | F-PLN INIT, T.O DATA, WIND DATA; the active flight plan PRE-FLIGHT, IN-FLIGHT and POST-FLIGHT reports; the SEC 1 to 3 reports; the AUTO PRINT options (company data on reception, reports at engine start, takeoff and shutdown) |
| FMS > SEC INDEX      | PRINT of a secondary flight plan                                                                                                                                                                                                 |
| ATC COM > ATIS       | PRINT of one ATIS, PRINT ALL (all the ATIS on one printout), and the auto print (printer icon) when an ATIS is received                                                                                                          |

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

DATA/PRINTER

ACTIVE DATA

CPNY DATA

F-PLN INIT

PRINT\*

T.O DATA

PRINT\*

WIND DATA

PRINT\*

F-PLN INIT

T.O DATA

WIND DATA

ACTIVE F-PLN REPORT

AUTO PRINT

PRE-FLIGHT

PRINT\*

IN-FLIGHT

PRINT\*

POST-FLIGHT

PRINT\*

SEC F-PLN REPORT

SEC 1

PRINT\*

SEC 2

PRINT\*

SEC 3

PRINT\*

MSG LIST

**Figure 1.** FMS DATA / PRINTER: the PRINT buttons and the AUTO PRINT options.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

ATIS/LIST

LFB0

DEP

R 1145Z

OPTIONS

LFB0 DEP ATIS R 1145Z EXP ARR RWY 32R AND 21L /DEP /SID 5 B. 5 P WIND CALM VIS 3500 M - CB FEW 500 FT BKN 26000 FT /

LFP0

ARR

SEND REQUEST

AUTO UPDATE

LFPG

ARR

P 1200Z

SEND AGAIN

OPTIONS

LFPG ARR ATIS P 1200Z ATIS INFO ARR/DEP APCH ILS APCH LDG 27L AND 26L / RWY 26 L WET TL 40 BIRD HAZARD AFTER VACATING RWY 26L HOLD SHORT OF RWY 26R TKOF 27L AND 26R SID 8A 8B 8Y 8Z QNH 1013 TEMP 12 DEWPOINT 8

PRINT ALL

UPDATE ALL

CLEAR INFO

**Figure 2.** ATC COM ATIS: the printer icon (auto print) and PRINT ALL.

### The paper

- Each printout starts with its title, the date and the time (UTC); an ATIS printout shows the time of the ATIS message.
- A sheet holds 45 lines: a longer page (e.g. a flight report) comes out on several sheets, one after the other.
- Click the sheet in the printer to tear it off: it goes on the pedestal (or the captain's pull-out table), where you can page through the torn sheets and discard them, as on the A320.

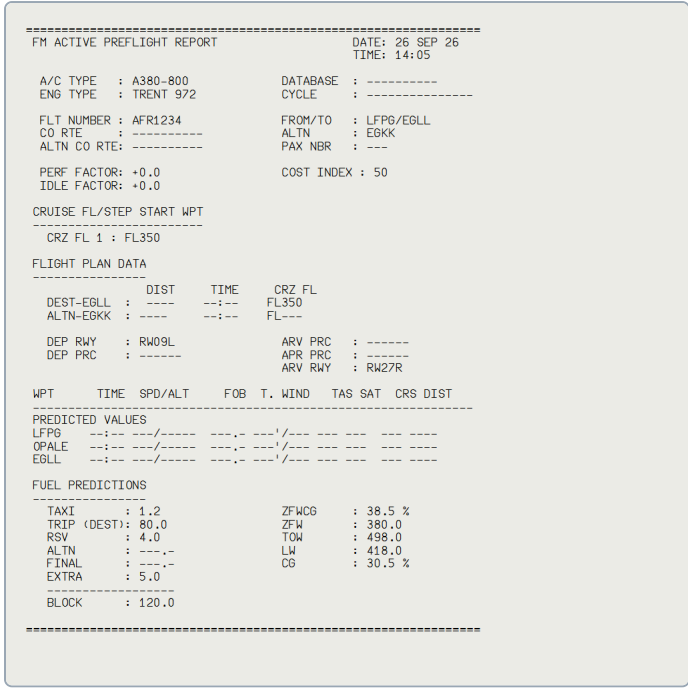


Figure 3. FM ACTIVE PREFLIGHT REPORT.

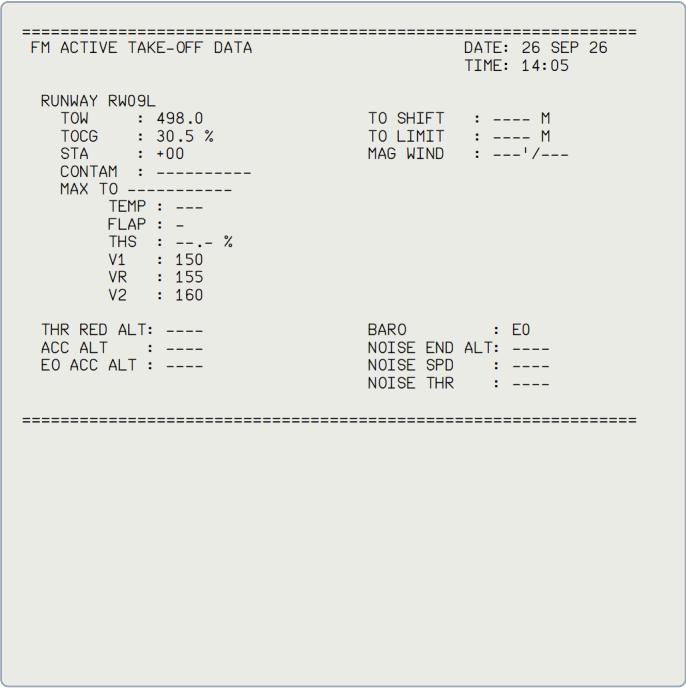


Figure 4. FM ACTIVE TAKE-OFF DATA.

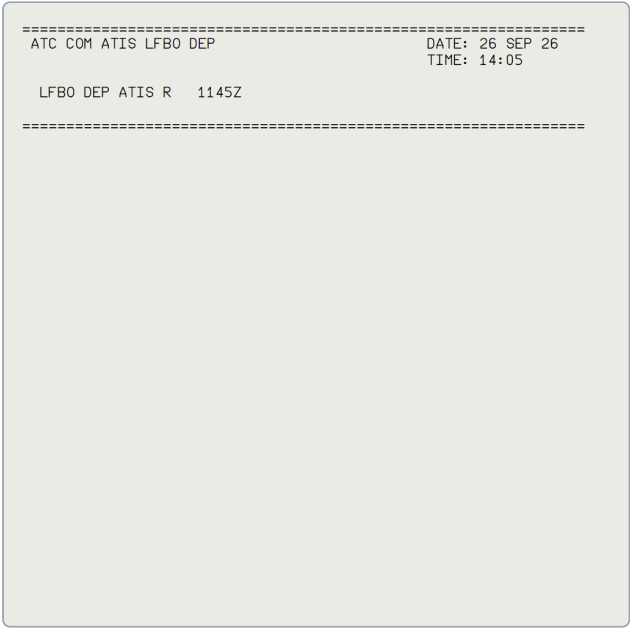


Figure 5. ATC COM ATIS printout.

Limitations and why

| Limitation                                         | Why                                                                                                                                                                                                                                         |
|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The paper needs the aircraft-large-files companion | the FBW A380 cockpit model has no paper nodes: they are in the aircraft-large-files companion <i>pedestal printer paper</i> (36b4bd9 on the fork TCdr/aircraft-large-files). Without it the printouts still reach the flyPad Printouts page |
| The paper looks like the A320 one                  | the paper, its animation and its buttons come from the A320 printer                                                                                                                                                                         |

How to use

- 1. Printer powered (AC 1) and ON (green window on the printer control panel).
- 2. MFD FMS > DATA > **PRINTER**: press the PRINT of the page or report; or SEC INDEX > PRINT; or ATC COM > ATIS: PRINT (OPTIONS menu), PRINT ALL, or the printer icon for the auto print.

3. Watch the sheet come out of the printer, click it to tear it off.
4. Read the torn sheets on the pedestal (or the CPT pull-out table when it is out): page through them, discard them.

## How to test

| # | Do this                                                                                                                                                                | Expected result                                                                                                                    |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X with the paper companion model installed, on the ground, AC power, flight plan entered (e.g. LFPG - EGLL). MFD FMS > DATA > PRINTER: press PRINT for F-PLN INIT. | A sheet comes out of the printer slit: title, date and UTC time, then the page in 64 columns; no characters cut at the right edge. |
| 2 | Print a long report (PRE-FLIGHT report).                                                                                                                               | Several sheets of 45 lines, one after the other (about 2.5 s apart).                                                               |
| 3 | Click the sheet in the printer.                                                                                                                                        | It is torn off and lies on the pedestal beside the printer; the page buttons page through the torn sheets; discard removes them.   |
| 4 | Pull out the CPT table, print again and tear the sheet off.                                                                                                            | The sheet lies on the table and slides aft with the meal table.                                                                    |
| 5 | ATC COM > ATIS with an ATIS received: OPTIONS > PRINT, then PRINT ALL with two areas filled.                                                                           | PRINT: the ATIS of that area, with the time written in the ATIS. PRINT ALL: all the ATIS on ONE printout, one after the other.     |
| 6 | Tick the printer icon (AUTO PRINT) of an area and wait for a new ATIS version.                                                                                         | The new version prints when it is received.                                                                                        |
| 7 | MFD FMS > SEC INDEX: PRINT of a secondary flight plan.                                                                                                                 | The SEC report prints.                                                                                                             |

## 2. A380X ATC COM print: SD mailbox and MSG RECORD

**Aircraft:** A380X | **Where:** SD MAILBOX PRINT; MFD ATC COM > MSG RECORD | **Status:** Mailbox PRINT tested in the sim by the user (a route clearance printed): OK (2026-10-02). MSG RECORD PRINT ALL / PRINT not sim-tested (unit tests).

### What it is for

The FCOM lets the crew print an ATC message from the mailbox (DSC-46-10-20-60) and the message record from the MFD (DSC-46-10-20-30 P 29, DSC-46-10-40 P 30). These buttons said PRINTER NOT AVAIL; they now print on the pedestal printer, through the same queue as the FMS prints.

### What you see

| From                                       | What prints                                                                                                   | Printout title     |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------|--------------------|
| SD MAILBOX: PRINT                          | The message displayed in the mailbox; PRINTING in the information area while it prints                        | ATC COM MAILBOX    |
| MFD ATC COM > MSG RECORD (list): PRINT ALL | All the recorded messages: for each one its time, direction, station and status, then its text, in 64 columns | ATC COM MSG RECORD |
| MFD ATC COM > MSG RECORD (zoom): PRINT     | The message shown in the zoom                                                                                 | ATC COM MSG RECORD |

A stray closing brace at the end of the printed CPDLC text is gone. With the printer off or unpowered, the buttons show PRINTER NOT AVAIL (see the printer buttons below).

### How to use

1. SD mailbox: with the message displayed, press **PRINT**.

2. MFD ATC COM > **MSG RECORD**: PRINT ALL for the whole record, or ZOOM a message and PRINT it.
3. Tear the sheet off the pedestal printer as for any printout.

## How to test

| # | Do this                                                                                                                                                                              | Expected result                                                                                                                             |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X, datalink connected, printer ON. Receive an uplink (a live controller, or the self-sent route clearance of core/a380x-atccom-data1ink ). Press <b>PRINT</b> in the SD mailbox. | PRINTING in the mailbox information area; a sheet titled ATC COM MAILBOX with the message comes out of the printer, without a } at the end. |
| 2 | Close a few dialogues, open MFD ATC COM > MSG RECORD, press <b>PRINT ALL</b> .                                                                                                       | One printout ATC COM MSG RECORD: each message with its time, direction, station and status, then its text.                                  |
| 3 | ZOOM one message and press <b>PRINT</b> .                                                                                                                                            | A printout of that message only.                                                                                                            |
| 4 | Set the printer OFF (ON/OFF button) and press PRINT again.                                                                                                                           | PRINTER NOT AVAIL; nothing prints.                                                                                                          |

## 3. Printer paper door (A380X and A32NX)

**Aircraft:** A32NX and A380X | **Where:** Pedestal printer: paper door and its latch / handle | **Status:** A32NX: tested in the sim by the user, OK (2026-10-01). A380X: looked at in the sim during the work (2026-10-01) and committed at the user's request after the model crash fix; no separate test record of the final version.

### What it is for

Neither cockpit model had an animated printer door. A click on the paper door (or its latch on the A380X, its handle on the A32NX) now opens or closes it: the door swings up about its forward edge and shows the paper roll and the roller unit under the slit. The A320 FCOM has a PRINTER DOOR LATCH (DSC-45-30); the A380 FCOM does not describe the door: its look and travel are design choices. Opening the door has no effect on printing.

### What you see

| Situation                                    | What you should see                                                                                               |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Click on the closed door (or latch / handle) | The door swings up (about 80 degrees on the A380X): paper roll, roller unit and the paper going up into the slit. |
| Click again                                  | The door closes.                                                                                                  |
| Printing with the door open (A380X)          | The sheet still comes out of the slit; its lower part shows in the open compartment.                              |

### Limitations and why

| Limitation                                       | Why                                                                                                                                        | What to do                                                                         |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Needs the aircraft-large-files companion models. | The door parts, the compartment and the mechanism are in the cockpit models: A380X 27d6123 (on the pedestal paper 36b4bd9), A32NX 99237fb. | Install them with this branch; a full MSFS restart is needed after a model change. |

### How to use

1. Click the printer paper door (or its latch / handle) to open it; click again to close it.

## How to test

| # | Do this                                                                                                   | Expected result                                                                                                                |
|---|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X with the companion models installed (MSFS restarted). Click the printer paper door on the pedestal. | The door swings up about its forward edge; paper roll and roller unit visible; variable <code>L:A380X_PRINTER_DOOR</code> = 1. |
| 2 | Click the latch.                                                                                          | The door closes (variable back to 0).                                                                                          |
| 3 | Print an FMS page with the door open.                                                                     | Printing works as with the door closed.                                                                                        |
| 4 | A32NX with its companion model installed. Click the printer door, then its handle.                        | The door opens, then closes ( <code>L:A32NX_PRINTER_DOOR</code> ).                                                             |

## 4. No torn paper edge left in the printer slit

**Aircraft:** A32NX and A380X | **Where:** Pedestal printer slit | **Status:** No sim test recorded (behaviour change only).

### What it is for

The torn paper edge of the FBW printer (the `PRINT_TORN` part) stood in the slit whenever the printer was not printing: it looked like a sheet stuck in the printer. It is no longer shown on either aircraft: paper only comes out of the slit while printing.

### What you should see

| Situation    | What you should see                                                                |
|--------------|------------------------------------------------------------------------------------|
| Printer idle | Empty slit, no paper strip.                                                        |
| Printing     | The sheet comes out of the slit as before; once torn off, the slit is empty again. |

## How to use

1. Nothing to set: print and tear off sheets as usual.

## How to test

| # | Do this                                                        | Expected result                                                           |
|---|----------------------------------------------------------------|---------------------------------------------------------------------------|
| 1 | A32NX cold and dark, look at the pedestal printer.             | No paper strip in the slit.                                               |
| 2 | Print a page (e.g. MCDU or flyPad print), tear the sheet off.  | The sheet comes out while printing; after the tear-off the slit is empty. |
| 3 | Same on the A380X (print an FMS page from MFD DATA > PRINTER). | Empty slit before and after the print.                                    |

## 5. A380X printer control panel: ON/OFF, SLEW, TEST, ABORT

**Aircraft:** A380X | **Where:** Pedestal printer control panel | **Status:** Tested in the sim by the user: OK (2026-10-03), the green ON window after the emissive fix of the companion model. Unit tests: `PedestalPrinter.spec.ts`, `FmsPrinter.spec.ts`.

### What it is for

The A380 cockpit model has the printer control panel (ON/OFF with a green window, SLEW, TEST, ABORT), but nothing was clickable. The printer is supplied by AC 1 (FCOM DSC-46-20-70). The A380 FCOM does not describe the buttons: SLEW, TEST and ABORT follow the usual printer functions (design choices).



## What you see

| Button | What it does                                                                                                                                                                                                                                                             |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ON/OFF | Switches the printer on or off. The green window shows while the printer is on and AC 1 is powered. Off or unpowered: an FMS print shows <b>PRINTER NOT AVAIL</b> (type II, FCOM DSC-22-FMS-20-110) and nothing prints; the ATC COM prints show their PRINTER NOT AVAIL. |
| SLEW   | Feeds out one blank sheet.                                                                                                                                                                                                                                               |
| TEST   | Prints the test page: PRINTER TEST, date and time, lines of the character set, END OF TEST.                                                                                                                                                                              |
| ABORT  | Drops the sheets waiting to be printed.                                                                                                                                                                                                                                  |

## Limitations and why

| Limitation                                                 | Why                                                                                                 | What to do                |
|------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|---------------------------|
| The green window needs the aircraft-large-files companion. | Its emissive material is in the companion change 8c14d21 (on the door 27d6123).                     | Install it; restart MSFS. |
| No buttons on the A32NX printer.                           | The A32NX model has no printer button parts (the FCOM SLEW switch, DSC-45-30): it needs model work. | -                         |

## How to use

1. Keep the printer ON (green window) to print.
2. SLEW to feed a blank sheet, TEST to check the printer, ABORT to cancel a long printout.

## How to test

| # | Do this                                                                                      | Expected result                                                                                               |
|---|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| 1 | A380X with the companion models installed, cold and dark. Look at the printer control panel. | Green window off.                                                                                             |
| 2 | Switch the batteries and AC power on (AC 1 powered).                                         | Green window on.                                                                                              |
| 3 | Press <b>ON/OFF</b> .                                                                        | Green window off ( L:A380X_PRINTER_OFF = 1).                                                                  |
| 4 | MFD FMS > DATA > PRINTER: PRINT F-PLN INIT.                                                  | MFD message <b>PRINTER NOT AVAIL</b> ; no sheet.                                                              |
| 5 | Press ON/OFF again, then <b>TEST</b> .                                                       | Green window on; the test page prints: PRINTER TEST with the date and time, the character lines, END OF TEST. |
| 6 | Press <b>SLEW</b> .                                                                          | One blank sheet comes out.                                                                                    |
| 7 | Print a long report (PRE-FLIGHT) and press <b>ABORT</b> after the first sheet.               | The remaining sheets are not printed.                                                                         |

# flyPad ground: taxi route, ATC frequencies and GSX

A taxi route page on the Navigraph airport map (with green flags on the A380X OANS), the airport ATC frequencies on it, the Services page linked to GSX, and the GSX external power sync fixed when it is enabled

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A32NX and A380X (the OANS flags are A380X only)                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Where to find it</b> | flyPad > <b>Ground</b> > <b>Taxi</b> and <b>Services</b> ; flyPad > Settings > 3rd Party Options; A380X ND (OANS)                                                                                                                                                                                                                                                                                                                                   |
| <b>Branch</b>           | core/efb-ground, based on core/efb-performance (stacked: needs core/surveillance, core/a380x-mfd-fms and core/efb-performance merged first; the taxi page uses the runway exits of the landing calculator). core/efb-redesign is stacked on it.                                                                                                                                                                                                     |
| <b>Status</b>           | Taxi route tested in the sim by the user at RJTT (2026-09-28) and CYUL (2026-09-29), and on both aircraft with the A380X OANS flags: OK (2026-10-02). ATC frequencies: OK (2026-10-01). GSX power sync: OK (2026-09-30). GSX services link: first version tested on 2026-10-01 (four bugs found); the fixes of those bugs on this branch are not sim-tested here (the reworked version on core/efb-redesign was sim-tested on develop, 2026-10-07). |
| <b>Pictures</b>         | Taxi pages in the local browser harness, running the build installed in the sim, on a small test airport (XTST) made for the pictures; in the sim, the page uses the Navigraph map of the real airport. No pictures for the frequencies and GSX (they need the sim data and GSX).                                                                                                                                                                   |

1. Taxi route page
2. A380X: the accepted taxi route on the OANS
3. Airport ATC frequencies on the taxi page
4. Services page linked to GSX
5. GSX external power sync when it is enabled

## 1. Taxi route page

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Taxi | **Status:** Tested in the sim by the user at RJTT (2026-09-28) and Montreal CYUL (2026-09-29, the fixes in "Locate the aircraft..."), and on both aircraft: OK (2026-10-02). Unit tests of the route finder.

### What it is for


Before taxiing, the crew gets a taxi clearance from ATC such as "*taxi to holding point runway 09 via M, K, A*". On an unknown airport, following it on the chart is where mistakes happen: a wrong turn, a runway crossed without clearance. This page draws the route of the clearance on the airport map, lists the runways it crosses and stops it at the runway holding point.

The real A380 has no taxi routing: its OANS (the airport map on the ND) only lets the crew place green flags and white crosses (FCOM DSC-34-10-70-20), and MSFS has no datalink taxi clearance (D-TAXI). So the route is built on the flyPad, and the cockpit displays stay as the FCOM describes them. On the A380, the accepted route is marked on the OANS with those green flags (see "A380X: the accepted taxi route on the OANS" below).

- **Departure** (default): from a gate, a ramp or cargo stand, or the aircraft position, to a runway entry.
- **Arrival:** from the runway exit you plan to take (or the aircraft position) to your gate.
- The page **suggests** the shortest route; you type the taxiways of the ATC clearance and **accept** it.

### Before you start

- **Navigraph account** linked in the flyPad settings (third party options). The airport map comes from the Navigraph airport database, the same data as the A380 OANS. Without it the page says "*No airport database*".
- **Airport:** type the ICAO code, or press **ORIG** / **DEST** to take the airports of the SimBrief flight plan loaded in the flyPad. The line below shows how many gates, ramp and cargo stands the map has.
- An airport that is not in the Navigraph airport database shows "*Not in the Navigraph airport database*".

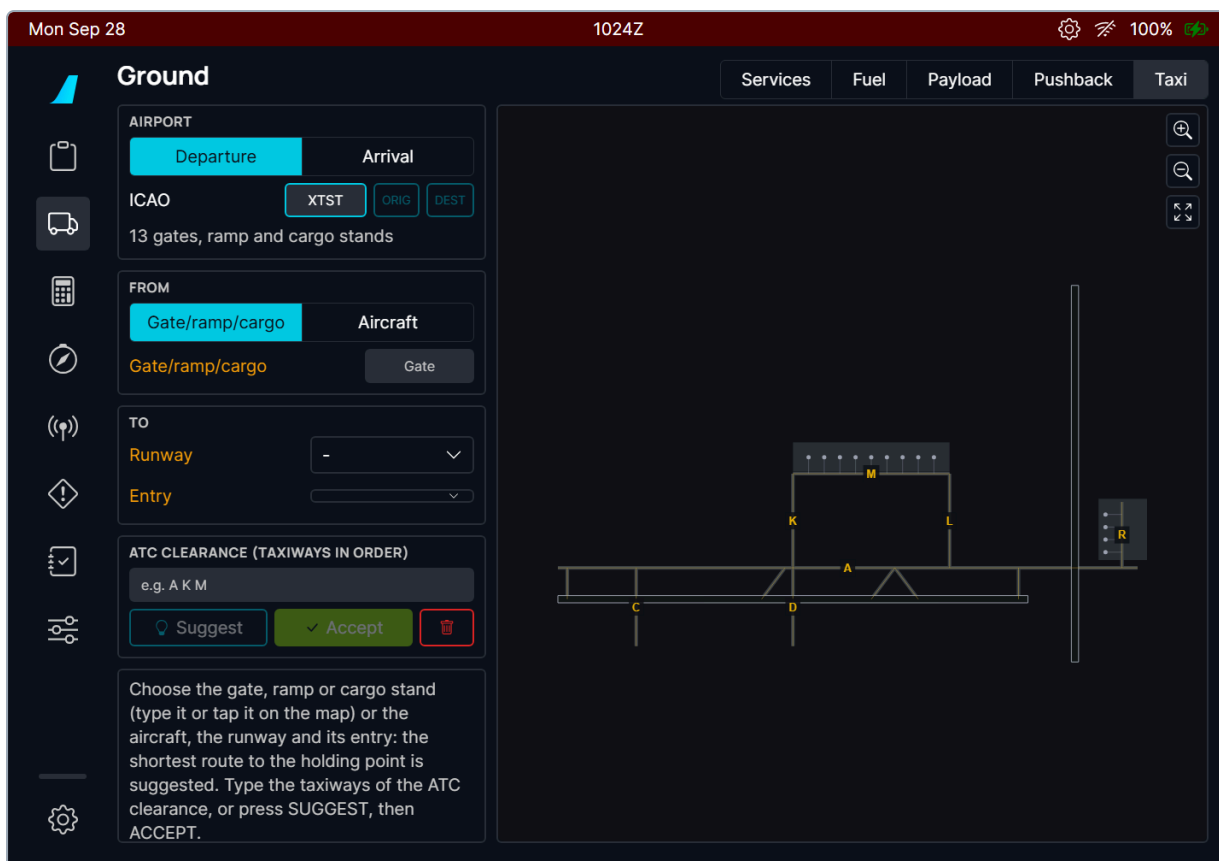


**Figure 1.** The Taxi page after entering the airport: the airport map on the right, the route inputs on the left. Amber labels show what is still missing.


| Part of the page | What it does                                                                                                                                                     |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AIRPORT          | Departure or Arrival, the ICAO code, ORIG / DEST buttons, the number of stands on the map.                                                                       |
| FROM             | Where the taxi starts: a gate / ramp / cargo stand (departure), a runway exit (arrival), or the aircraft.                                                        |
| TO               | Where it ends: the runway and its entry (departure), or the gate (arrival).                                                                                      |
| ATC CLEARANCE    | The taxiways of the clearance, in order. SUGGEST fills it with the shortest route, ACCEPT confirms it, the red bin clears the page.                              |
| Route box        | The route as a clearance reads, its length, the taxiways and the runway crossings in red.                                                                        |
| Map              | The airport with the route, the runway entries (cyan), the holding point (amber bar), the aircraft (yellow). Drag to move, buttons to zoom and to fit the route. |

## Departure: from the gate to the runway

1. Keep **Departure** selected and enter the airport.
2. In FROM, keep **Gate/ramp/cargo** and type your gate. While you type, the gates that match appear as buttons under the field: tap one. You can also **tap the gate on the map** (zoom in to see the names).
3. In TO, choose the **runway**. The **entry** is set to the full length entry; choose another one for an intersection departure.
4. The shortest route appears on the map as a **dashed magenta line** ending at the **HOLD** bar of the runway holding point.

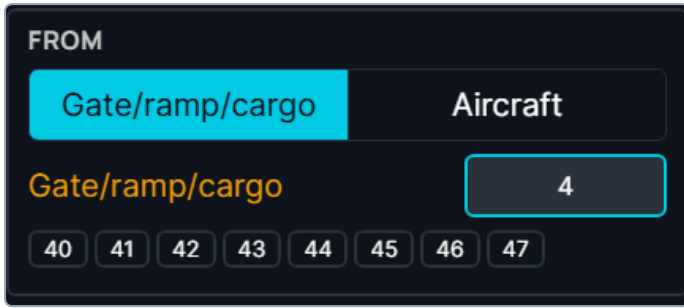


**Figure 2.** Typing "4" lists the gates 40 to 47: tap one.

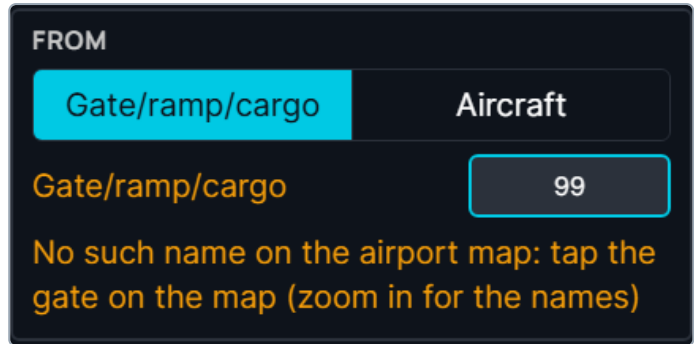

**Figure 3.** A name that is not on the map: the amber line says so.

Gate names are found even when they are written differently on the map: "**16**" finds "**016**", spaces and dashes do not matter. If nothing matches, the airport map uses another name (for example a letter prefix): tap the gate on the map instead.

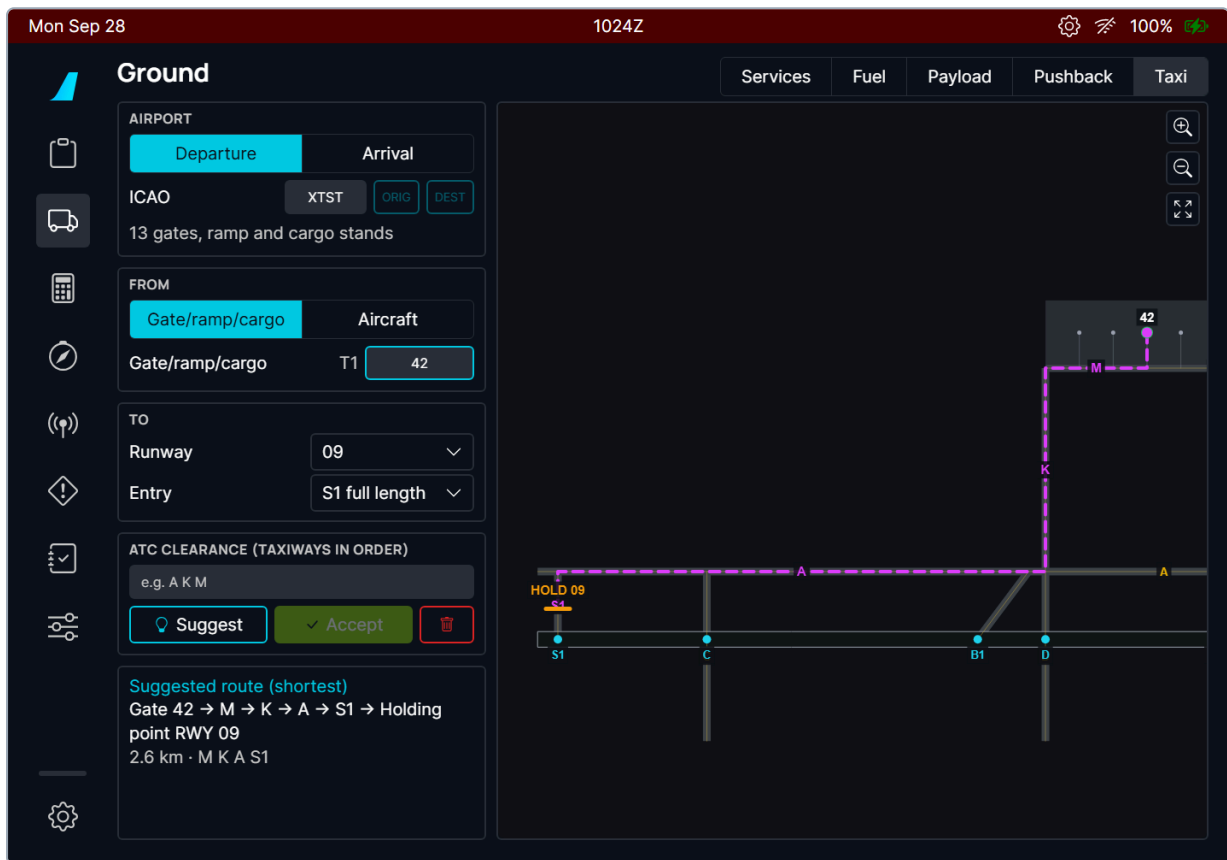

**Figure 4.** Gate 42 to runway 09, full length: the suggested route (dashed) along M, K and A to entry S1, stopped at the holding point (HOLD 09). The route box reads it as a clearance: Gate 42 → M → K → A → S1 → Holding point RWY 09, 2.6 km.

## Runway entries

The **Entry** list shows every taxiway that enters the runway, in order from the threshold. The first one is the **full length** entry; the others show the **runway length remaining** from them, to check an intersection departure against your takeoff performance. On the map, the entries of the selected runway are the cyan dots with their names.

TO

Runway 09 ▼

Entry S1 full length ▼

ATC CLEARANCE (TAXIWAYS IN ORDER)

e.g. A K M

💡 Suggest ✓ Accept 🗑️

Suggested route (shortest)  
Gate 42 → M → K → A  
point RWY 09  
2.6 km · M K A S1

C 2500 m

B1 1700 m

D 1500 m

B2 1000 m

B3 700 m

S2 60 m

**Figure 5.** The entries of runway 09: S1 full length, then C (2500 m left), B1 (1700 m), D (1500 m) and so on.

Mon Sep 28 1024Z 100%

**Ground**

AIRPORT

Departure Arrival

ICAO XTST ORIG DEST

13 gates, ramp and cargo stands

FROM

Gate/ramp/cargo Aircraft

Gate/ramp/cargo T1 42

TO

Runway 09 ▼

Entry D 1500 m ▼

ATC CLEARANCE (TAXIWAYS IN ORDER)

e.g. A K M

💡 Suggest ✓ Accept 🗑️

Suggested route (shortest)  
Gate 42 → M → K → D → Holding point  
RWY 09  
1.1 km · M K D

Services Fuel Payload Pushback Taxi

40 41 42 43 44

M K A

HOLD 09


**Figure 6.** Intersection departure from D: the route stops at the holding point of D, with 1500 m of runway ahead.

## The ATC clearance


Type the taxiways of your clearance in the order ATC gives them, separated by spaces (commas and dashes work too). The route then follows them strictly, in that order:

- Short unnamed connecting lines between two cleared taxiways are allowed.
- The runway entry can be left out: "via M, K, A" to a holding point still ends on the entry you chose.
- While the typed route is not accepted, the box reads "Route along the clearance (not accepted)" and the line stays dashed.


**SUGGEST** copies the taxiways of the suggested route into the clearance field: a quick start when ATC clears you along the obvious way. **ACCEPT** confirms the route: the line turns **solid**. Any change (gate, runway, entry, clearance) takes the acceptance away.

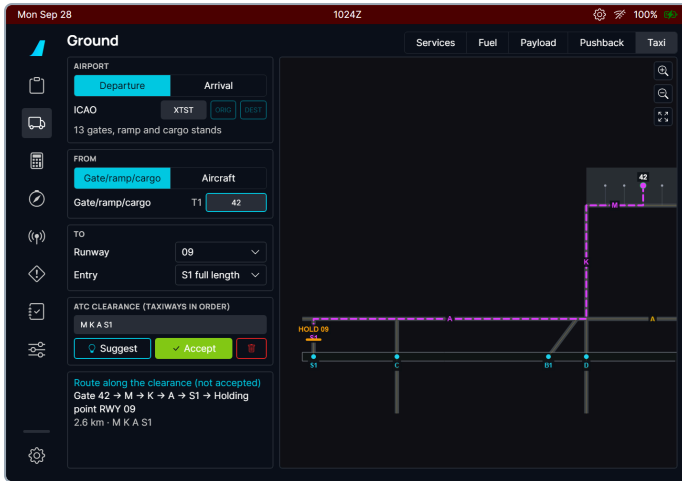

**Figure 7.** After SUGGEST: the clearance field holds M K A S1, the route is a preview.

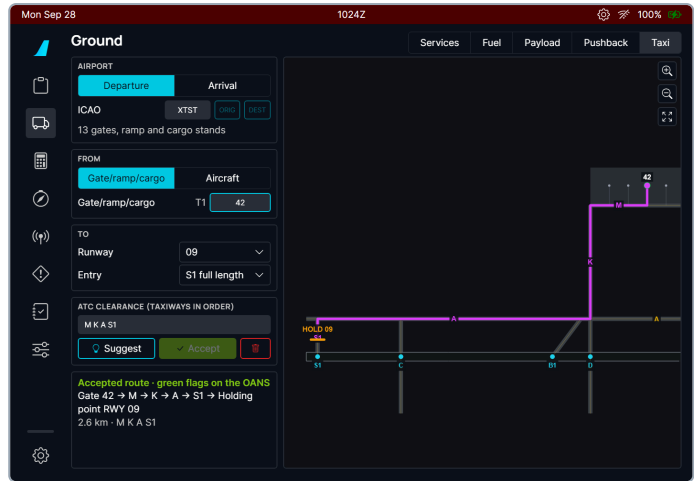

**Figure 8.** After ACCEPT: solid line, "Accepted route". On the A380 the route is also flagged on the OANS.

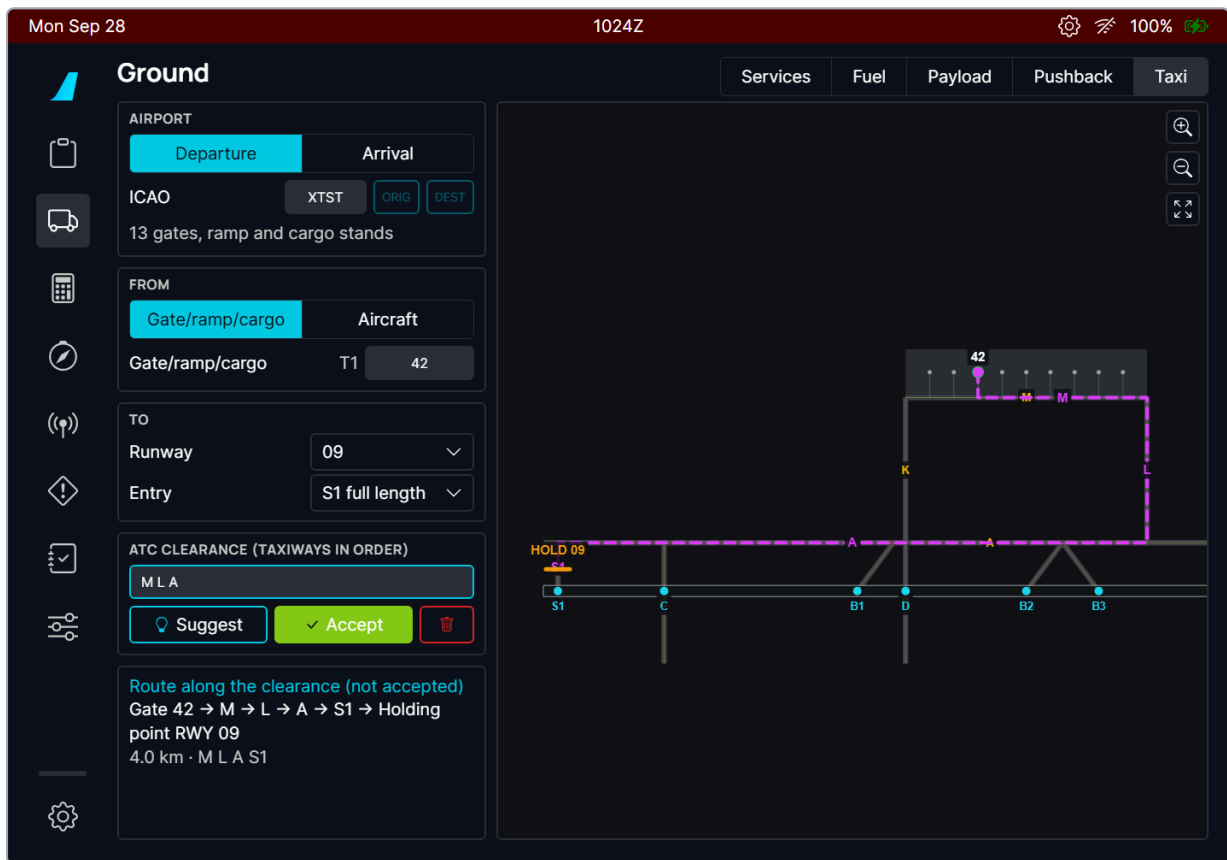

**Figure 9.** A different clearance, "M L A": the route goes the long way round via L (4.0 km instead of 2.6 km), as ATC asked.

ATC CLEARANCE (TAXIWAYS IN ORDER)

K Z

Suggest

Accept

No route along these taxiways, in this order

**Figure 10.** A clearance with a taxiway that does not exist here, or taxiways that do not connect in that order: "No route along these taxiways, in this order". Check the spelling and the order.

## Runway crossings

Every runway the route crosses is circled in **red** on the map with its name, and listed in red under the route ("Crossing runway 01/19"). A runway crossing always needs its own ATC clearance: stop at the holding point before it and ask if you do not have it.

Mon Sep 28

1024Z

100%

Ground

Departure

Arrival

ICAO

XTST

ORIG

DEST

13 gates, ramp and cargo stands

FROM

Gate/ramp/cargo

Aircraft

Gate/ramp/cargo

CARGO

R2

TO

Runway

09

Entry

S1 full length

ATC CLEARANCE (TAXIWAYS IN ORDER)

e.g. A K M

Suggest

Accept

Suggested route (shortest)

Gate R2 → R → A → S1 → Holding point

RWY 09

3.9 km · R A S1

Crossing runway 01/19

Services

Fuel

Payload

Pushback

Taxi

HOLD 09

S1

C

B1

D

B2

B3

S2

K

M

L

01/19

R2

**Figure 11.** From cargo stand R2 to runway 09: taxiway A crosses runway 01/19 (red circle, red line in the route box).

## Arrival: from the runway exit to the gate

1. Select **Arrival** and enter the airport (DEST fills it from the flight plan).
2. In FROM, keep **Runway exit**, choose the landing runway and the exit you plan to take. The exits are those of the landing calculator, with their distance from the threshold.
3. In TO, type or tap the gate.
4. Check the route, type the clearance if ATC gives another one, and ACCEPT.

**FROM**

Runway exit **Aircraft**

Runway **09** ✓

Exit **-** ✓

**B1 1300 m**

**B2 2000 m**

**TO**

Gate/ramp/cargo **C**

**ATC CLEARANCE (TAXIWAYS IN ORDER)**

e.g. A K M

**Suggest** **Accept** **Cancel**


**Figure 12.** The exits of runway 09 with their distance from the threshold.

#### TIP

Prepare the arrival route during the descent briefing with the exit from the landing calculator: after landing, the page is ready. If you vacate by another exit, choose it (or use the aircraft position) and the route updates.


### From the aircraft position

Choose **Aircraft** in FROM to start the route where the aircraft is, for example after a pushback, or when ATC changes the route while you taxi. The page takes the position when you select it; press **Update** to take it again. The route starts on the taxi line nearest to the aircraft and **prefers its heading**: it does not start by turning back if there is a way ahead.

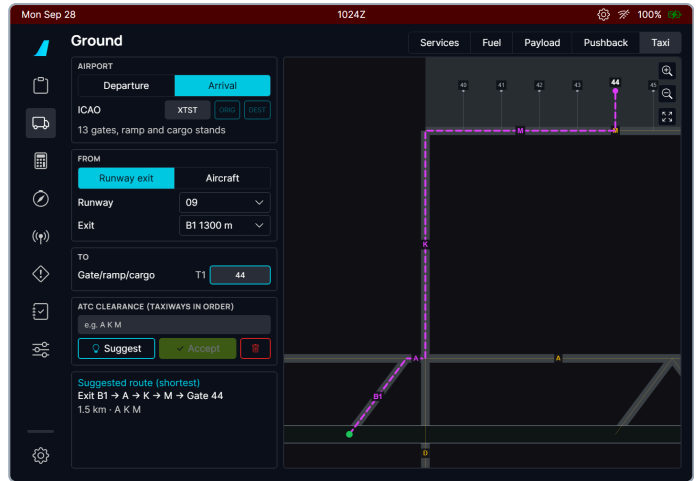

**Figure 13.** Exit B1 to gate 44: Exit B1 → A → K → M → Gate 44. The green dot is the start.



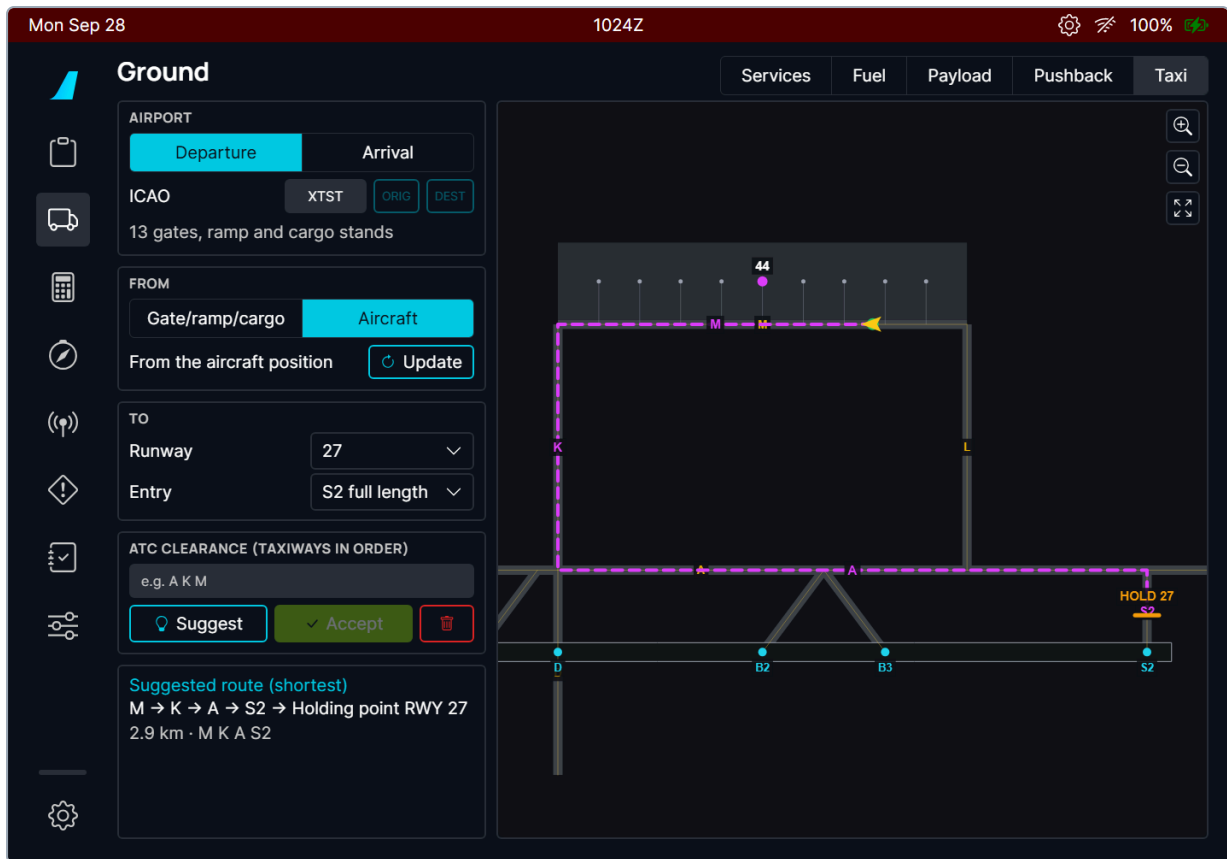


**Figure 14.** The aircraft (yellow) on M facing west, for runway 27: the route goes ahead via K and A (2.9 km) rather than turning back on M.


"The aircraft is not at this airport" means the aircraft is more than 8 km from the airport of the page.

### Locate the aircraft, taxiway names of several words, proposed entry

- **Locate button** (pin, under the zoom buttons): centres the map on the aircraft and zooms in until the stand names show. It is greyed when the aircraft is not at this airport.
- Taxiways named with **several words** (e.g. SOUTH RAMP, NORTH RAMP at Montreal CYUL) are read as one taxiway in the clearance: type them as the map shows them, or press SUGGEST.
- The **runway entry** proposed first is the first one from the threshold you can reach **without crossing a runway**. At CYUL, runway 24L full length (R) is across 06R/24L from the terminal: the entry proposed is the first one on the terminal side; choose R in the Entry list if ATC clears you across.

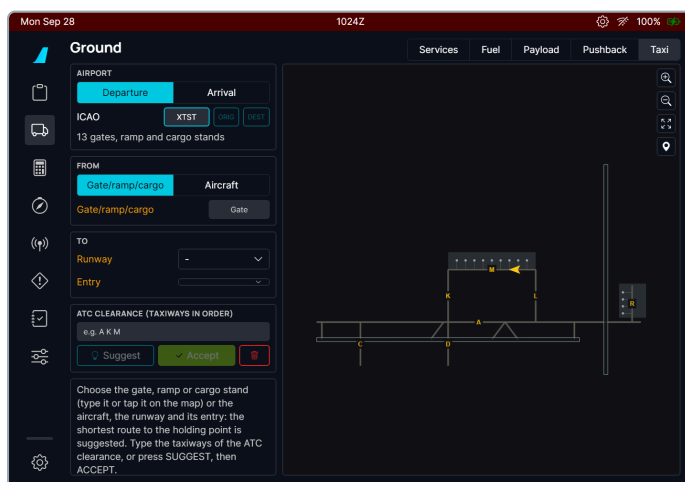


**Figure 15.** The whole airport, the aircraft on M.

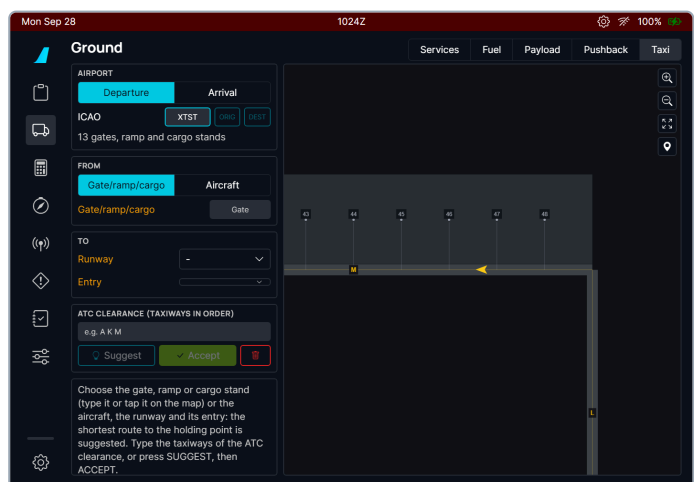

**Figure 16.** After the locate button: centred on the aircraft, stand names shown.

## The map

- **Drag** the map to move it; + / - zoom; the **frame** button fits the route (or the whole airport).
- The map is north up. Aprons are lighter grey, taxiways dark grey, runways black with a white edge. The thin yellow lines are the taxi guidance lines the route follows.
- Taxiway names are shown in yellow; the taxiways of the route in magenta. Gate names appear when you zoom in.
- **Tap a gate** on the map to choose it (when the page asks for a gate).

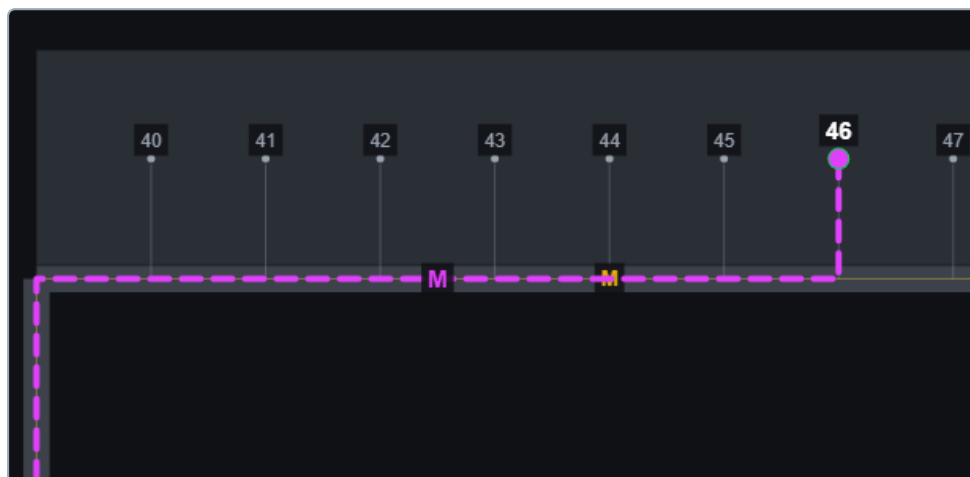

**Figure 17.** Zoomed on the apron: the gate names, the route to gate 46 along M.

## What to expect

| Situation                                                               | What you should see                                                                                                                       |
|-------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Airport entered, nothing else                                           | The airport map, amber labels on the inputs still missing, the help text in the route box.                                                |
| Start and end chosen                                                    | The suggested route, dashed, with its clearance text, length and crossings.                                                               |
| SUGGEST                                                                 | The clearance field holds the taxiways of the suggested route; the route is a preview (dashed).                                           |
| Clearance typed                                                         | The route follows the typed taxiways in order (dashed until accepted), or the red message "No route along these taxiways, in this order". |
| ACCEPT                                                                  | Solid line, "Accepted route" in green (A380: green flags on the OANS).                                                                    |
| Any input changed after ACCEPT                                          | Back to a preview: accept again.                                                                                                          |
| Departure to a runway with holding position lines                       | The route stops at the HOLD bar before the runway.                                                                                        |
| Two entries behind the same HOLD bar (e.g. RJTT 34R C2 and C3)          | The same route to the holding point: the entries only differ after it.                                                                    |
| Gate whose lead-in is another stand's line (e.g. RJTT gate 5 behind 5R) | The route leaves along that line: "Gate 5 → Gate 5R → W ...".                                                                             |
| Runway without holding position lines on the map                        | The route ends on the runway entry itself and the box says "Runway 09" instead of "Holding point RWY 09".                                 |
| The route crosses a runway                                              | Red circle with the runway name on the map, red "Crossing runway" line.                                                                   |
| Aircraft start, aircraft far from the airport                           | "The aircraft is not at this airport"; no route.                                                                                          |
| Leaving the page and coming back                                        | Everything is kept, except an Aircraft start: press Aircraft or Update again.                                                             |

## Limitations and why

| Limitation                                                | Why                                                                                                                                                          | What to do                                                                                                                                      |
|-----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Needs a Navigraph account.                                | The airport map (taxi lines, stands, holding points) exists only in the Navigraph airport database; MSFS does not give it to the aircraft.                   | Link your account in the flyPad settings.                                                                                                       |
| Closed taxiways, one-way taxiways and NOTAMs are unknown. | The airport database has the lines painted on the ground, not their status of the day.                                                                       | Type the taxiways of the ATC clearance: the route follows them.                                                                                 |
| The suggestion is the shortest route, not the usual one.  | Airports have preferred flows (ATC habits, one-way loops) that are not in the data.                                                                          | Always check against the clearance and the airport chart.                                                                                       |
| Some real airports have gaps in their taxi lines.         | A lead-in line may stop a few metres short of the taxi line. Gaps up to 15 m between parts that are otherwise not connected are joined; larger ones are not. | If "No taxi line of the airport map connects the start to the end" appears, choose another start (the nearest taxiway, or the aircraft) or end. |
| Gate names follow the airport database.                   | The database may use names that differ from the gate signs.                                                                                                  | Tap the gate on the map.                                                                                                                        |
| No route on the A380 OANS, only flags.                    | The A380 FCOM has no taxi route display; the flags are the FCOM way to mark points on the airport map.                                                       | -                                                                                                                                               |
| The aircraft position is taken once.                      | The route is a plan to check, not a moving map that follows you.                                                                                             | Press Update after a change.                                                                                                                    |

## Troubleshooting

| What you see                                                    | Why                                                                                                                                | What to do                                                                              |
|-----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| SUGGEST and ACCEPT are greyed                                   | There is no route yet: the gate is not found (amber label, no terminal next to the name), or the runway / entry / exit is missing. | Pick the gate from the suggestion buttons or tap it on the map; check the amber labels. |
| "No such name on the airport map"                               | No stand of the map has this name.                                                                                                 | Tap the gate on the map.                                                                |
| "No taxi line of the airport map connects the start to the end" | The start and the end are on parts of the map that are not connected.                                                              | Start from the nearest taxiway (Aircraft), or choose another gate or entry.             |
| "No route along these taxiways, in this order"                  | A taxiway of the clearance is misspelt, missing, or they do not connect in that order.                                             | Check the clearance; press SUGGEST to see the names the map uses.                       |
| "Not in the Navigraph airport database"                         | Navigraph has no airport map for this airport.                                                                                     | -                                                                                       |

## How to use

1. Link your Navigraph account (flyPad > Settings > 3rd Party Options).
2. flyPad > **Ground** > **Taxi**: Departure or Arrival, the airport (or ORIG / DEST).
3. FROM: your gate (departure), the runway exit (arrival) or the aircraft; TO: the runway and its entry, or the gate.
4. Type the taxiways of the ATC clearance in order (or SUGGEST), check the route and the runway crossings, press **ACCEPT**.

## How to test

| #  | Do this                                                                                                                                    | Expected result                                                                                              |
|----|--------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 1  | Navigraph account linked. A32NX or A380X parked at a gate of a large airport (e.g. RJTT). flyPad > Ground > Taxi, Departure, airport RJTT. | The airport map; the line under the airport gives the number of stands; amber labels on the missing inputs.  |
| 2  | In FROM type your gate number.                                                                                                             | Matching gates as buttons under the field ("16" also finds "016"); tap one, or tap the gate on the map.      |
| 3  | In TO choose a runway; keep the proposed entry.                                                                                            | Dashed magenta route to the HOLD bar; the proposed entry is the first one reached without crossing a runway. |
| 4  | Open the Entry list.                                                                                                                       | All entries from the threshold: full length first, then the remaining length of each.                        |
| 5  | Press SUGGEST, then ACCEPT.                                                                                                                | The clearance field holds the taxiways; after ACCEPT the line is solid and the box says "Accepted route".    |
| 6  | Type another clearance with existing taxiways (e.g. a longer way round), without ACCEPT.                                                   | The route follows them in order, dashed, "Route along the clearance (not accepted)".                         |
| 7  | Type a taxiway that does not exist.                                                                                                        | "No route along these taxiways, in this order".                                                              |
| 8  | Choose a runway the route must cross to reach.                                                                                             | Red circle with the runway name on the map and a red "Crossing runway" line.                                 |
| 9  | FROM = Aircraft.                                                                                                                           | The route starts at the aircraft and goes ahead along its heading (no U-turn through the aircraft).          |
| 10 | Press the locate button (pin) under the zoom buttons.                                                                                      | The map centres on the aircraft, stand names shown.                                                          |
| 11 | Arrival: DEST, runway, exit, gate.                                                                                                         | Route from the exit to the gate; exits with their distance from the threshold.                               |
| 12 | Leave the page and come back.                                                                                                              | Everything kept, except an Aircraft start.                                                                   |

## 2. A380X: the accepted taxi route on the OANS

**Aircraft:** A380X | **Where:** ND (OANS) after ACCEPT on the flyPad Taxi page | **Status:** Tested in the sim by the user: OK (2026-10-02).

### What it is for

The A380 FCOM has no taxi route display: the OANS lets the crew mark points of the airport with green flags (DSC-34-10-70-20). When the crew accepts a route on the flyPad, the A380X marks it with those flags, so the route can be followed on the ND.

### On the A380: the route on the OANS

When you **accept** the route on the A380 flyPad, green flags appear on the OANS (the airport map on the ND) at the start of each taxiway of the route and at the gate or holding point. They are the crew flags of the FCOM ("*to locate or mark a given point on the airport*"), so you can remove them like any flag: click one and DELETE, or ERASE ALL SYMBOLS in the ND menu. Flags you placed yourself are never touched.

- The flags appear when the OANS displays that airport (they come back if the OANS reloads it).
- A new accepted route replaces the flags of the previous one; a route that is no longer accepted removes them.
- The A320 has no OANS: nothing else changes on it.



**Figure 18.** The A380 ND (OANS, ARC, zoom range) at gate 42 facing south, after ACCEPT of the departure route above (gate 42 to runway 09): green flags where M, K and A start (S1 and the holding point are further west, off the picture). Harness picture: the test airport has no buildings.

#### NOTE

Tested in the sim by the user: OK (2026-10-02): the flags are set on ACCEPT and removed when the route changes.

### Limitations and why

| Limitation                                                                                     | Why                                                                               | What to do                        |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------|
| Flags only, no route line.                                                                     | The A380 FCOM has no route display on the OANS; flags are its way to mark points. | -                                 |
| An Aircraft start is lost when leaving the Taxi page, so its flags go away when you come back. | The aircraft start is local to the page.                                          | Select Aircraft again and ACCEPT. |

### How to use

1. Accept a route on the flyPad Taxi page (A380X).
2. On the ND, select the OANS (ARC or ROSE, a zoom range) at that airport: the flags show the start of each taxiway and the end of the route.

## How to test

| # | Do this                                                                                                                     | Expected result                                                                                                                               |
|---|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X at a gate, Navigraph linked, OANS showing the airport on the ND. flyPad Taxi page: route to a runway, <b>ACCEPT</b> . | Green flags on the OANS at the start of each taxiway of the route and at the holding point; the flyPad status says "green flags on the OANS". |
| 2 | Place your own flag on the OANS, then change the clearance on the flyPad (route no longer accepted).                        | The route flags go away; your own flag stays.                                                                                                 |
| 3 | ACCEPT a new route.                                                                                                         | Its flags replace those of the previous route.                                                                                                |
| 4 | Click a route flag on the OANS and DELETE, or ERASE ALL SYMBOLS in the ND menu.                                             | The flags are removed like crew flags.                                                                                                        |

## 3. Airport ATC frequencies on the taxi page

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Taxi, bottom left of the map | **Status:** Tested in the sim by the user: OK (2026-10-01).

### What it is for

Before taxi the crew needs the ground, tower and delivery frequencies of the airport. The taxi page shows them in a box laid out like the frequency box of an airport chart, for the origin, the destination or the airport of the page. The Navigraph airport map has no frequencies: they come from the sim's own airport data.

### What you see

- A green **Frequencies** button at the bottom left of the map; it opens the **FREQUENCIES** box (X closes it).
- Airport buttons at the top: **ORIG** and **DEST** of the SimBrief flight plan loaded in the flyPad, and **Airport** when the page airport is another one.
- One row per chart label, in the chart order: ATIS, AWOS, ASOS, CTL, APP, DEP, TWR, GND, DLV, CTAF, UNICOM, MULTICOM, FSS; the frequencies in MHz, two columns, without duplicates, in the order of the sim data. Other types (ILS...) are left out.
- Messages: "Enter an airport", "Loading the frequencies...", "Not in the sim's airport data", "No frequency for this airport in the sim's airport data".

### Limitations and why

| Limitation                              | Why                                                                                                       | What to do                          |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------------------------------|
| The list is the sim's, not the chart's. | The chart's selection of frequencies is in no data the aircraft can read; MSFS lists all its frequencies. | Check the chart for the one to use. |
| No station names, no tuning.            | The box is a reference, like the chart box.                                                               | Tune the RMP as usual.              |

### How to use

1. On the Taxi page, press **Frequencies** (bottom left of the map).
2. Choose ORIG, DEST or the page airport; read the frequency you need.

### How to test

| # | Do this | Expected result |
|---|---------|-----------------|
|---|---------|-----------------|

|   |                                                                                                                           |                                                                                                                               |
|---|---------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| 1 | SimBrief OFP loaded in the flyPad (e.g. RJTT to another airport). Ground > Taxi, airport RJTT. Press <b>Frequencies</b> . | The FREQUENCIES box with ORIG RJTT selected and DEST; rows ATIS, APP, DEP, TWR, GND, DLV... with MHz values (three decimals). |
| 2 | Press DEST.                                                                                                               | The frequencies of the destination.                                                                                           |
| 3 | Change the page airport to a third airport.                                                                               | An "Airport" button appears and is selected; its frequencies.                                                                 |
| 4 | Compare with the airport chart or the sim world map.                                                                      | The same frequencies (the sim may list more).                                                                                 |
| 5 | Press X.                                                                                                                  | Back to the Frequencies button.                                                                                               |

## 4. Services page linked to GSX

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Services, GSX panel | **Status:** First version tested in the sim by the user with GSX 4 (A380X, RJTT, 2026-10-01): four bugs found. Their fixes on this branch (panel position, counters, greyed switch, status lines) are not sim-tested on this classic page. The Material 3 Services page of `core/efb-redesign`, which carries them with further GSX fixes, was tested in the sim on develop (A32NX, 2026-10-07: 170 passengers given to GSX, count 0 to 170, Done).

### What it is for

With GSX installed, the ground services are GSX's, but the flyPad Services buttons called the sim's own vehicles. A **GSX services** switch now links the page to GSX through the GSX Remote API (version 2, local server on port 8744): the service buttons request the GSX services and show what GSX is doing. With the switch off the page works as before.

### What you see

- The **GSX panel** under the right-hand group of buttons (GPU, cargo door): the switch and a status line: "GSX not found: start GSX, with its Remote control server on (GSX settings)" (switch greyed), "GSX is starting...", "GSX found" (switch off) or "Service buttons linked to GSX, GSX menus and messages shown here".
- Linked: **Jet Bridge**, **Stairs**, **Fuel Truck**, **GPU** and **Catering Truck** request the GSX services. The **Baggage Truck** button is hidden: GSX loads the bags during boarding.
- The panel adds the services without an aircraft button: Deboarding, Boarding, Pushback (Departure), De-ice, Water, Lavatory, Cleaning, named as GSX names them.
- Under each linked button a status line: *On its way*, *Waiting*, GSX's own phase (or *In progress*), *Leaving*, *Done*, with its count; a progress bar for the fuel truck from the "x / y kg" refuelling status. Button colours follow the service: amber when called or waiting, green while performed, amber and locked while leaving, dim when GSX cannot serve it.
- Linking switches on the flyPad **GSX Fueling** and **GSX Payload Synchronization** (Settings > 3rd Party Options), so GSX boards the passengers and loads the fuel set on the Payload and Fuel pages.
- While linked, GSX is under remote control: no GSX pop-up menu or notification in the sim. GSX's questions (menus that stay open, e.g. the choice of operator) and its messages appear on the panel; tap an answer, or "Close the GSX menu".
- A request GSX refuses (e.g. boarding before the doors are open) gives the message "GSX did not accept <service>" with GSX's reason.

### Limitations and why

| Limitation                                   | Why                                       | What to do                                             |
|----------------------------------------------|-------------------------------------------|--------------------------------------------------------|
| Needs GSX with its Remote control server on. | The link uses the GSX Remote API (GSX 4). | Turn on the Remote control server in the GSX settings. |

|                                                                                                                                                                                                                    |                                                                                                                                                                                                                                            |                                                                          |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| The four bugs of the first sim test (panel over the fuselage drawing, Board counter stuck at 0, passenger count not moving, switch not greyed without GSX) are fixed here but not checked in the sim on this page. | The fixes came after the test. <code>core/efb-redesign</code> reworks the counter (the flyPad counts the GSX passengers itself and gives GSX its passenger number) and the greyed switch again; that version is the one tested in the sim. | Merge <code>core/efb-redesign</code> ; report any of them if seen again. |
| Turning the link off leaves the GSX fuel and payload syncs on.                                                                                                                                                     | Only linking changes them.                                                                                                                                                                                                                 | Turn them off in Settings > 3rd Party Options if wanted.                 |
| The page keeps the classic FBW look on this branch.                                                                                                                                                                | The Material 3 redesign of the Services page is in <code>core/efb-redesign</code> .                                                                                                                                                        | -                                                                        |

## How to use

1. Start GSX with its Remote control server on.
2. flyPad > **Ground** > **Services**: when the panel says "GSX found", turn on **GSX services**.
3. Request the services with the buttons and the GSX panel; answer GSX's questions on the panel.
4. Turn the switch off to go back to the FBW services.

## How to test

| # | Do this                                                                      | Expected result                                                                                                                                                                                                                         |
|---|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X (or A32NX) at a gate, GSX not running. flyPad > Ground > Services.     | GSX panel under the GPU / cargo door group; switch greyed; amber "GSX not found: start GSX, with its Remote control server on (GSX settings)".                                                                                          |
| 2 | Start GSX with the Remote control server on.                                 | "GSX is starting...", then "GSX found"; the switch becomes active.                                                                                                                                                                      |
| 3 | Turn on <b>GSX services</b> .                                                | Green "Service buttons linked to GSX..."; the Baggage Truck button disappears; the panel lists Deboarding, Boarding, Pushback, De-ice, Water, Lavatory, Cleaning; Settings > 3rd Party Options shows the GSX fuel and payload syncs on. |
| 4 | Press <b>Jet Bridge</b> (or Stairs).                                         | Amber, status "On its way", then green while performed, "Done" at the end. No GSX menu pops up in the sim.                                                                                                                              |
| 5 | Press <b>Fuel Truck</b> .                                                    | Status and progress bar following "x / y kg"; the fuel set on the Fuel page.                                                                                                                                                            |
| 6 | Press <b>Boarding</b> on the panel (doors open).                             | The count of boarded passengers rises to the number set on the Payload page.                                                                                                                                                            |
| 7 | When GSX asks a question (e.g. the operator choice), answer it on the panel. | GSX continues with that answer.                                                                                                                                                                                                         |
| 8 | Turn the switch off.                                                         | The Baggage Truck button is back; the buttons call the FBW services again.                                                                                                                                                              |

## 5. GSX external power sync when it is enabled

**Aircraft:** A32NX and A380X | **Where:** flyPad > Settings > 3rd Party Options > GSX External Power Synchronization | **Status:** Tested in the sim by the user (A380X, GSX 4, RJTT): EXT AVAIL on the ELEC panel with the GSX GPU, OK (2026-09-30).



## What it is for

The FBW option *GSX External Power Synchronization* makes the external power available ( `L:A32NX_EXT_PWR_AVAIL` ) when the GSX GPU is connected or the jetway is requested or connected, until pushback. It only looked at GSX when a GSX state changed: enabling the option with the GPU or the jetway already connected did nothing until the next GSX change. It now checks GSX at once when it is enabled.

## What you should see

| Situation                                                   | What you should see                                                     |
|-------------------------------------------------------------|-------------------------------------------------------------------------|
| Option enabled with the GSX GPU or jetway already connected | External power available at once: EXT AVAIL on the overhead ELEC panel. |
| Option enabled before GSX connects                          | As before: available when the GPU connects.                             |

## Limitations and why

| Limitation                                                           | Why                                                    | What to do                                                                            |
|----------------------------------------------------------------------|--------------------------------------------------------|---------------------------------------------------------------------------------------|
| With GSX 4, EXT AVAIL may already show before the option is enabled. | GSX 4 also sets the sim's own external power variable. | Watch <code>L:A32NX_EXT_PWR_AVAIL:1</code> with a SimVar tool to see the sync itself. |

## How to use

- flyPad > **Settings** > **3rd Party Options**: turn on **GSX External Power Synchronization**, before or after GSX connects its GPU or jetway.
- Press the EXT PWR pushbutton when AVAIL shows.

## How to test

| # | Do this                                                                                                                        | Expected result                                                                                                                            |
|---|--------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X (or A32NX) cold and dark at a GSX gate, the option OFF. Call the GSX GPU (or the jetway) and wait until it is connected. | <code>L:A32NX_EXT_PWR_AVAIL:1</code> stays 0 (unless GSX 4 already made EXT AVAIL show, see Limitations).                                  |
| 2 | Turn on <b>GSX External Power Synchronization</b> .                                                                            | At once: <code>L:A32NX_EXT_PWR_AVAIL:1</code> = 1, EXT AVAIL on the overhead ELEC panel (before: nothing until the next GSX state change). |
| 3 | Press EXT PWR.                                                                                                                 | The aircraft is powered by the ground power.                                                                                               |
| 4 | Request the GSX pushback.                                                                                                      | The external power becomes unavailable, as before.                                                                                         |

# flyPad Material 3 redesign and independent flyPads

A new Material 3 look for every flyPad page, a flyPad per pilot on both aircraft, a custom flyPad theme, the A32NX buffet onset (coffin corner) page, GSX services link fixes, flyPad fixes, a landing calculator that keeps calculating above the wind limits, and the RAT stow row of the Services page

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A32NX and A380X (the Buffet tab: A32NX only)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Where to find it</b> | The captain and first officer flyPads (all pages)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Branch</b>           | core/efb-redesign , based on core/efb-ground (stacked: needs core/surveillance , core/a380x-mfd-fms , core/efb-performance and core/efb-ground merged first). The independent flyPads need two companion commits in the aircraft-large-files repository: 24f7b02 (A380X) and d3060ea (A32NX). The RAT stow row needs core/rat-ground-stow (the systems side of the stow).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Status</b>           | Sim-tested by the user: Services and Pushback look (2026-10-01), quick controls fix (2026-10-01), A32NX independent flyPads (2026-10-01), frame and Dashboard / Dispatch / Performance / other pages on both aircraft (2026-10-02). Fuel / Payload / Taxi look approved by the user (2026-10-01). Not sim-tested (browser harness only): the flyPad UI fixes, the Payload LOAD row change, the checklist and lighting preset fixes, the landing wind check. RAT stow row: sim-tested on both aircraft on develop (2026-10-05). Tested in the sim by the user on develop (the integration build, not this core branch itself): Buffet tab on the A32NX (2026-10-06 and 2026-10-07) and its Live / What if pill row fix (A32NX, 2026-10-07), custom theme (A32NX, 2026-10-07, user word), the first colour wheel (2026-10-07, "the wheel works"), GSX boarding passenger count (A32NX, 2026-10-07), GSX turnaround Done memory, Baggage row Done, Turnaround scrollbar and tug slider fixes (A380X, 2026-10-07). The vivid colour wheel that replaced the first one: OK in the sim on develop 2026-10-09 (A380X). Not sim-tested: the Light theme label fix, the greyed GSX switch, the GSX deboarding passenger number. |
| <b>Pictures</b>         | No pictures: the flyPad pictures of the older manuals show the look before this redesign.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

1. Material 3 look of the Ground pages
2. Material 3 look of the frame and of the other pages
3. flyPad UI fixes after the redesign
4. Payload page: LOAD title row and balance chart
5. Independent captain and first officer flyPads
6. Quick controls clicks no longer open the troubleshooting page
7. Checklists: always loaded, green check when marked complete
8. Automatic lighting preset loading lists all eight presets
9. Error details on the flyPad error screen
10. Landing calculator above the wind limits, with a wind check
11. RAT stow (maintenance) row on the Services page
12. Custom flyPad theme, and a readable Light theme
13. Performance & Buffet: A32NX buffet onset envelope (coffin corner)
14. GSX services link: passenger counts, request chips, greyed switch
15. GSX turnaround: completed services remembered, Baggage steps

## 1. Material 3 look of the Ground pages

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground | **Status:** Services and Pushback tested in the sim by the user: OK (2026-10-01). Fuel, Payload and Taxi: approved by the user (2026-10-01), checked in the browser harness. Pushback map drag fix: not sim-tested. Tug speed slider fix: confirmed in the sim by the user on develop (A380X, 2026-10-07).

### What it is for

The flyPad pages get a Material 3 dark look on the flyPad cyan: tonal cards, dense list rows with switches and chips, a segmented control for the tabs. A shared Material kit (page, cards, section headers, list rows, status and action chips, switch, segmented control, buttons, progress bar, banner) on new theme tokens for the blue, dark and light themes is used by every redesigned page. The Ground pages came first. The functions of the pages do not change.

## What you see

| Page     | New look                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Services | Three columns: the doors and the ground equipment as scrolling lists (switch or Request / Release chip, GSX status and fuel progress on the rows); the aircraft from above, nose up and zoomed on the fuselage, its doors coloured with their state, the holds and service tags (A380X two decks, A32NX one); the GSX card (switch, turnaround timeline of the departure or arrival with its Baggage step, other GSX services as chips, GSX questions and messages; see "GSX services link" and "GSX turnaround" below). Status chips: GPU, tug, doors open, chocks and cones (A32NX). |
| Pushback | The map fills the left card. A control rail: system switch, Call / Release tug button, parking brake row, Backward / Paused / Forward, a steering dial over the direction slider, the speed slider, Left / Straight / Right and the controller switch. When the aircraft is at the SimBrief origin or destination, the Navigraph airport map (aprons, taxiways, runways, guidance lines, stands) is drawn under the pushback map, heading up.                                                                                                                                          |
| Fuel     | The aircraft with its tanks on a wide card and a refuel rail (target, slider, start and stop, duration, plan summary). A380X: the whole aircraft outline with the tank quantities in tables (each feed tank now shows its own quantity; before, the four feed tanks of the drawing read feed tank 3). A32NX: the over-wing outline with its tanks filled, the quantities as tiles.                                                                                                                                                                                                     |
| Payload  | The cabin and seat map on a full-width card with the holds under it (load over capacity, click to plan), then the load table, the boarding controls and the balance chart.                                                                                                                                                                                                                                                                                                                                                                                                             |
| Taxi     | The route form as cards, the runway crossings as banners, the map buttons and the frequency box in the kit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

Pushback map fix: the airport under the pushback map redraw only after the map centre had moved about 100 m, so the aircraft slid over a frozen airport while the map was dragged. It now redraws on every move.

Tug speed slider fix: the handle of the vertical tug speed slider of the Pushback rail sat 5 px right of its rail (the slider library offset suits its own 14 px handle, the flyPad handle is 24 px). It is now centred on the rail.

## Limitations and why

| Limitation                                                          | Why                                                                                          | What to do                                                  |
|---------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| The airport under the pushback map needs the Navigraph airport map. | It is drawn from the Navigraph airport database, only at the SimBrief origin or destination. | Link a Navigraph account and import a SimBrief flight plan. |
| Spacing is made with margins, not the CSS gap.                      | The sim browser (Coherent GT) ignores the CSS gap property.                                  | -                                                           |

## How to use

1. Open **flyPad > Ground** and pick the tab (Services, Fuel, Payload, Pushback, Taxi) at the top right.
2. Use the switches, chips and buttons as before: open or close a door, request a service, refuel, board, push back.

## How to test

| # | Do this                                                                                            | Expected result                                                                                                                              |
|---|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X at a gate, aircraft powered, SimBrief flight plan imported. Open flyPad > Ground > Services. | Three columns: DOORS and ground equipment lists, the aircraft from above (two decks) with its doors, the GSX card. Nothing cut at the edges. |
| 2 | Open a door with its switch in the list.                                                           | The row status changes and the door shape on the aircraft drawing changes colour.                                                            |
| 3 | Repeat on the A32NX.                                                                               | Same layout with the single-deck A320 drawing and the chocks and cones chips.                                                                |

|   |                                                                             |                                                                                                                                                            |
|---|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | Open Ground > Pushback (Navigraph linked, aircraft at the SimBrief origin). | The map on the left with the airport under it; the control rail on the right.                                                                              |
| 5 | Drag the pushback map.                                                      | The airport moves with the aircraft symbol at once (no sliding over a frozen airport).                                                                     |
| 6 | Look at the vertical tug speed slider on the Pushback rail and move it.     | The handle is centred on its rail over the whole travel.                                                                                                   |
| 7 | Open Ground > Fuel on the A380X, then on the A32NX.                         | A380X: whole aircraft with tank tables, each feed tank with its own quantity. A32NX: wing tanks filled, quantities as tiles. The refuel rail on the right. |
| 8 | Open Ground > Payload, then Ground > Taxi.                                  | Payload: cabin card across the page, holds under it, load table, boarding and balance cards. Taxi: route cards and map in the new look.                    |

## 2. Material 3 look of the frame and of the other pages

**Aircraft:** A32NX and A380X | **Where:** flyPad frame; Dashboard, Dispatch, Performance, Navigation, ATC, Failures, Checklists, Presets, Settings | **Status:** Tested in the sim by the user on both aircraft: OK (2026-10-02), incl. the quick controls on both tablets.

### What it is for

The rest of the flyPad in the same Material look, so that every page matches. The shared switch, segmented selects, text fields, drop-downs and tooltips take the new look, so every page follows.

### What you see

| Part        | New look                                                                                                                                                                                                                                                                                          |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Frame       | A navigation rail with the icon names (the open section in a tonal pill), the status bar, the quick controls as a card (brightness sliders with their Auto switch, state tiles, sim rate tile at the bottom right), the section tabs as a segmented control.                                      |
| Dashboard   | The flight card (airports, progress, figure tiles, route, SimBrief import) and the Important Information column (weather readings or raw report, pinned charts, maintenance and checklists as rows).                                                                                              |
| Dispatch    | Overview: the nose drawing on a wide card and the aircraft figures in three lists; OFP and Printouts in kit cards and buttons.                                                                                                                                                                    |
| Performance | A shared calculator kit (form cards, labelled rows, result tiles, the fill-from button): takeoff, landing and descent results as tiles; temperature correction with one row per published altitude and its corrected value beside it. A32NX: a new Buffet tab (see "Performance > Buffet" below). |
| Navigation  | Chart list, viewer controls and pinned charts in the kit.                                                                                                                                                                                                                                         |
| ATC         | Type filter chips, controller cards with their buttons always shown, the COM 1 card.                                                                                                                                                                                                              |
| Failures    | Chapter cards with failure and active counts, failure tiles.                                                                                                                                                                                                                                      |
| Checklists  | The list with done / next marks and counts, the open checklist with its progress.                                                                                                                                                                                                                 |
| Presets     | State tiles with the loading card; lighting presets beside the automatic loading.                                                                                                                                                                                                                 |
| Settings    | Two panes: the categories beside the open page. Settings > flyPad has the theme choice, with a custom theme (see "Custom flyPad theme" below).                                                                                                                                                    |

### How to use

1. Pick a section on the navigation rail on the left, then a tab in the segmented control at the top right.

2. Open the quick controls from the status bar (brightness, Auto, state tiles, sim rate).

How to test

| # | Do this                                                                                   | Expected result                                                                                               |
|---|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| 1 | Either aircraft, flyPad on. Look at the left rail.                                        | Icons with their names; the open section in a cyan pill.                                                      |
| 2 | Open the quick controls from the status bar.                                              | A card with the brightness slider and its Auto switch, state tiles and the sim rate tile at the bottom right. |
| 3 | Open Dashboard, then Dispatch > Overview, OFP, Printouts.                                 | Cards in the new look; the A380X / A320 nose drawing on the Overview.                                         |
| 4 | Open Performance > Takeoff, Descent, Landing, Temperature Correction.                     | Form cards and result tiles; the temperature correction lists one row per altitude with its corrected value.  |
| 5 | Open Navigation, ATC, Failures, Checklists, Presets.                                      | Every page in the new look, no old grey boxes.                                                                |
| 6 | Open Settings and pick a category.                                                        | Two panes: categories on the left, the open page on the right.                                                |
| 7 | Repeat on the first officer flyPad (see "Independent captain and first officer flyPads"). | Same look; the quick controls work there too.                                                                 |

3. flyPad UI fixes after the redesign

**Aircraft:** A32NX and A380X | **Where:** Settings, dialogs, toasts, Ground pages, texts | **Status:** Checked in the browser harness on both aircraft (2026-10-03). Not sim-tested. Unit tests: detent gauge, Settings categories, fuel percentage, failure counts, descent notes.

What it is for

A check of every flyPad page on both aircraft and both tablets after the redesign found 23 problems: three layout bugs and parts still in the old look or with poor texts. They are fixed:

| Area                     | Fix                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Throttle calibration     | Opened inside the two-pane Settings it was taller and wider than the pane: the button bar was cut and, with 4 axes on the A380X, Axis 4 and Save and Apply were off screen. It is now one card that fits, the axes in one row, the button bar always visible, a new detent gauge. The in-detent highlight also works at exactly 0 (its colour is now the light primary, not green).                |
| Settings                 | About: the content covered the title, now in the page flow with build info rows. The open Settings category gets its icon colour and bold label (the active class was lost). Navigraph sign-in, SimBrief trash, Aircraft Options Select, Automatic Call Outs Reset and the Sim Options Calibrate button and SimBridge status in the kit look; language and keyboard selects sized like the others. |
| Dialogs and shared parts | Confirmation and alert dialogs, scroll buttons, progress bar, card, divider, the critical error page and the toasts (each toast type its own colour, errors red) no longer use the old colours.                                                                                                                                                                                                    |
| Ground pages             | Services legend at its small size; Taxi frequencies button and panel, empty-state text, one-line database chip, Entry chevron; Payload balance chart in the new colours and font; Fuel: no "NaN %" or full bars while the tank capacities are still 0.                                                                                                                                             |
| Texts                    | Presets help in cards, with the A380X wording (MFD with KCCU, AFS CP); Performance tab "Descent"; "1 active failure", "1 failure"; descent notes without a trailing separator; the A380X descent legend names the A320 FCOM anti-ice source; chart list and pinned charts empty texts; ATC network name in capitals and an empty controller list message.                                          |

Limitations and why

| Limitation                                                                                                              | Why                                           | What to do                            |
|-------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|---------------------------------------|
| A tooltip ("Click Text to Change the Preset's Name") can stay on screen after leaving the Presets page under the mouse. | An older flyPad bug, not part of these fixes. | Move the mouse over the flyPad again. |

How to use

1. Nothing to set. Calibrate the throttle from **flyPad > Settings > Sim Options > Calibrate** as before.

How to test

| # | Do this                                                                       | Expected result                                                                                  |
|---|-------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| 1 | A380X: flyPad > Settings > Sim Options > Calibrate.                           | The calibration fits the pane: four axes in one row, the button bar with Save and Apply visible. |
| 2 | Same on the A32NX.                                                            | Two axes, the button bar visible.                                                                |
| 3 | Move a throttle into a detent, incl. the 0 (idle) detent.                     | The detent is highlighted, also at exactly 0.                                                    |
| 4 | Settings > About.                                                             | The title is not covered; build info as rows.                                                    |
| 5 | Click several Settings categories.                                            | The open category has a coloured icon and a bold label.                                          |
| 6 | Trigger a confirmation dialog (e.g. Ground > Payload deboarding) and a toast. | Both in the Material colours; an error toast is red.                                             |
| 7 | Ground > Fuel right after loading the aircraft.                               | No "NaN %" and no full bars before the tank capacities are known.                                |
| 8 | Failures page with one failure active.                                        | The text reads "1 active failure" (singular).                                                    |
| 9 | Performance tabs.                                                             | The descent calculator tab is named "Descent".                                                   |

4. Payload page: LOAD title row and balance chart

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Payload | **Status:** Checked in the browser harness on both aircraft; the user reviewed the first version in the sim (screenshot, 2026-10-03) and chose the grid end. Final version not sim-tested. Unit tests: chart fit.

What it is for

On the redesigned Payload page the LOAD title sat on its own line above the load table and the balance chart left an empty band in its card. Now:

- The LOAD title sits on the PLANNED / CURRENT header row of the load table.
- The SimBrief fill action is a full-width button under the table, as on the Fuel page. It shows with the same rule as before (an OFP loaded that differs from the planned load, no boarding or GSX payload sync running).
- The balance chart fills the height of its card (never smaller than the former 280 px).
- The weight grid ends at the lowest labelled weight (A32NX 40 t, A380X 270 t) instead of leaving an empty band under the envelope; the weight labels are centred on their grid lines, the unit sits under the lowest label, and the MTOW / MLDW / MZFW names are re-placed for the new scale.

Limitations and why

| Limitation | Why | What to do |
|------------|-----|------------|
|------------|-----|------------|

|                                                |                                                                            |                                   |
|------------------------------------------------|----------------------------------------------------------------------------|-----------------------------------|
| A full MSFS restart is needed after an update. | The chart scale lives in the aircraft config files (flypad-payload.json5). | Restart the sim after installing. |
|------------------------------------------------|----------------------------------------------------------------------------|-----------------------------------|

### How to use

1. Open **flyPad > Ground > Payload**; plan the load in the table or with the SimBrief button under it.
2. Read the centre of gravity on the balance chart.

### How to test

| # | Do this                                                                                      | Expected result                                                                                                  |
|---|----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at a gate, flyPad > Ground > Payload.                                                  | LOAD is on the PLANNED / CURRENT row of the load table.                                                          |
| 2 | Import a SimBrief flight plan whose load differs from the planned one (no boarding running). | A full-width SimBrief button appears under the table.                                                            |
| 3 | Look at the balance chart.                                                                   | It fills its card; the lowest grid line is 40 t, labels centred on their lines, the unit under the lowest label. |
| 4 | Repeat on the A380X.                                                                         | Same layout; the lowest grid line is 270 t.                                                                      |

## 5. Independent captain and first officer flyPads

|                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> Captain and first officer tablets   <b>Status:</b> A32NX tested in the sim by the user: OK (2026-10-01). A380X: no separate record; both tablets were used in the 2026-10-02 sim test of the redesigned pages (quick controls on both tablets OK). Unit tests: tablet index. |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Both tablets showed the same flyPad: their screens share one material in the cockpit model and one gauge drew on it, so one pilot changing a page changed it for the other. Now the first officer tablet has its own flyPad gauge ( `efb.html?Index=2` ), with a new material on its screen in the cockpit model.

### What is per tablet and what is shared

| Per tablet                                                                                                                                              | Shared                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| The page shown and the navigation                                                                                                                       | The flyPad settings                                 |
| The loaded OFP (SimBrief import)                                                                                                                        | The aircraft state (doors, services, fuel, payload) |
| The checklists and their progress                                                                                                                       |                                                     |
| The brightness and its Auto setting (first officer: <code>L:A32NX_EFB_2_BRIGHTNESS</code> , settings <code>EFB_2_*</code> )                             |                                                     |
| A32NX: the power button (first officer: <code>H:A32NX_EFB_2_POWER</code> ; before, both buttons sent the same event, so one press toggled both tablets) |                                                     |

The actions that change the shared aircraft state by themselves run on the captain flyPad only: the tug release after a pushback, the automatic loading of lighting presets, GSX remote control, and the pushback stop when the Pushback page is opened or left. A flyPad clears only the OANS taxi flags it has set itself.

### Limitations and why

| Limitation | Why | What to do |
|------------|-----|------------|
|------------|-----|------------|

|                                                                                                        |                                                                                                                                                                                            |                                                                       |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| Without the aircraft-large-files companion, the first officer tablet keeps showing the captain flyPad. | The new screen material is in the high-detail cockpit model, which lives in aircraft-large-files (A380X 24f7b02, A32NX d3060ea); the large-files pointer of this branch is not bumped yet. | Merge the two large-files commits, then bump the large-files pointer. |
| A full MSFS restart is needed after an update.                                                         | panel.cfg, the cockpit behaviour and the model change.                                                                                                                                     | Restart the sim after installing.                                     |
| Lighting presets load automatically from the captain flyPad only.                                      | Two flyPads would load them twice.                                                                                                                                                         | Keep the captain flyPad on.                                           |

### How to use

1. Use each tablet on its own: open any page, import the OFP, run the checklists.
2. Set each tablet brightness from its own quick controls.
3. A32NX: each tablet has its own power button.

### How to test

| # | Do this                                                                                                                                                                         | Expected result                                                                               |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 1 | A380X with this branch and the large-files companion, MSFS restarted. Turn both tablets on. Open Dashboard on the captain tablet and Ground > Fuel on the first officer tablet. | Each tablet shows its own page.                                                               |
| 2 | Import the SimBrief OFP on the captain tablet only.                                                                                                                             | The captain Dispatch > OFP shows it; the first officer OFP stays empty until imported there.  |
| 3 | Change the brightness in the quick controls of the first officer tablet.                                                                                                        | Only that tablet changes.                                                                     |
| 4 | Open a checklist and check items on one tablet.                                                                                                                                 | The other tablet checklist is unchanged.                                                      |
| 5 | Repeat on the A32NX; then press the power button of the right tablet.                                                                                                           | Only the right tablet turns off.                                                              |
| 6 | Push back with the flyPad, then open and leave the Pushback page on the first officer tablet during the push.                                                                   | The pushback does not stop (only the captain flyPad stops it on opening or leaving the page). |

## 6. Quick controls clicks no longer open the troubleshooting page

|                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> Status bar > quick controls   <b>Status:</b> Tested in the sim by the user: OK (2026-10-01). |
|-----------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The quick controls pane is drawn inside the status bar. When the status bar shows an issue (red), a click on it opens the troubleshooting page, so every click in the quick controls, and the click that closes them, also opened that page. The pane and its backdrop now keep their clicks, and the backdrop closes the pane on the click itself (closing on mouse down let the click land on the status bar under it).

### How to use

1. Open the quick controls from the status bar, use them, close them with a click outside.
2. To open the troubleshooting page, click the red status bar itself.



## How to test

| # | Do this                                                                                                          | Expected result                                                       |
|---|------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| 1 | A flyPad with a red status bar (an issue listed in Settings > About > Troubleshooting). Open the quick controls. | The quick controls open.                                              |
| 2 | Click a switch or slider in the quick controls.                                                                  | The control works; the page under it stays (no troubleshooting page). |
| 3 | Click outside the quick controls.                                                                                | They close; the troubleshooting page does not open.                   |
| 4 | Click the red status bar.                                                                                        | The troubleshooting page opens, as before.                            |

## 7. Checklists: always loaded, green check when marked complete

**Aircraft:** A32NX and A380X | **Where:** flyPad > Checklists | **Status:** Checked in the browser harness. Not sim-tested. Unit tests: checklist marks.

### What it is for

- **Checklists sometimes missing.** The checklist file was read without waiting for its text, so an empty list was returned; the flyPad stored (and froze) it and the checklists parsed later could not be added. The file is now read and parsed before the list is returned; a second call waits for the same read, and a failed read is tried again by the next call.
- **Green check.** The list showed the done mark only for the checklists of the current or previous flight phases, so with the aircraft unpowered (flight phase 0) a completed checklist kept an empty circle. A checklist marked with **Mark checklist as complete** now shows a filled green check, whatever the flight phase. One with all items done but not marked keeps the empty circle.

### How to use

1. Open **flyPad > Checklists**, pick a checklist, check its items.
2. Press **Mark checklist as complete** at the end.

### How to test

| # | Do this                                                                                        | Expected result                                                                 |
|---|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| 1 | Load the aircraft several times (new flights) and open flyPad > Checklists each time.          | The checklists are always listed.                                               |
| 2 | Aircraft cold and dark (unpowered). Open a checklist, check all its items, but do not mark it. | The list shows an empty circle for it.                                          |
| 3 | Press Mark checklist as complete.                                                              | The list shows a filled green check for it, although the aircraft is unpowered. |

## 8. Automatic lighting preset loading lists all eight presets

**Aircraft:** A32NX and A380X | **Where:** flyPad > Presets > Interior Lighting | **Status:** Checked in the browser harness. Not sim-tested. Unit tests: preset list.

### What it is for

The Day, Dawn/Dusk and Night drop-downs of the automatic preset loading offered only the presets that had a name: with unnamed presets they offered only "None". They now list the eight presets as "<number> - <name>" ("No

Name" when unnamed).

How to use

- 1. Open **flyPad > Presets > Interior Lighting** and save the cockpit lighting into a preset.
- 2. Turn on the automatic loading and pick a preset for Day, Dawn/Dusk and Night.

How to test

| # | Do this                                                                                                              | Expected result                           |
|---|----------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| 1 | flyPad > Presets > Interior Lighting with no preset named. Turn on the automatic loading and open the Day drop-down. | None, then 1 - No Name ... 8 - No Name.   |
| 2 | Name preset 2 "Taxi" and open the drop-down again.                                                                   | It lists 2 - Taxi among the eight.        |
| 3 | Pick 2 for Day, reload the flight in daytime with the aircraft powered.                                              | Preset 2 is loaded by the captain flyPad. |

9. Error details on the flyPad error screen

|                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> flyPad error screen   <b>Status:</b> Used in the sim by the user (2026-10-01): it showed the error of the Top of Descent crash, which was then fixed. |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

The flyPad error screen only said that something went wrong. It now shows the error (name and message), the first lines of its stack and the React components it was thrown in, so a crash can be reported and found.

How to use

- 1. If the flyPad shows the error screen, take a screenshot of the error box and report it.
- 2. Press **Reset Display** on the error screen to recover.

How to test

| # | Do this                                                                                                                                           | Expected result                                                                                                                                             |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | There is no normal way to crash the flyPad on purpose. When the error screen appears (or in the browser harness with a forced error), look at it. | Under "A critical error has been encountered.": a box with the error name and message, up to 6 lines of its stack and up to 6 lines of the component stack. |

10. Landing calculator above the wind limits, with a wind check

|                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> flyPad > Performance > Landing   <b>Status:</b> Checked in the browser harness on both aircraft (2026-10-03). Not sim-tested. Unit tests: wind ranking, calculators beyond the tailwind limit. |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

What it is for

A crosswind above the maximum asked "Calculate anyway?" and a tailwind above the limit gave an error and no result. Now the calculation always runs: the pilot sees the figures with a warning and can compare the other runways and the alternate. This is on this branch because it changes the redesigned performance widgets.

What you should see

| Situation | What you should see |
|-----------|---------------------|
|-----------|---------------------|

|                                                                              |                                                                                                                                                                                                                                 |
|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Crosswind above the maximum                                                  | Results shown, with a red banner "Crosswind <i>n</i> kt, maximum <i>m</i> kt": above the maximum for this runway condition, figures for information.                                                                            |
| Tailwind above the limit                                                     | Red banner "Tailwind <i>n</i> kt, limit <i>m</i> kt". The distances, stop margin and MLW(PERF) continue the tailwind correction of the data and are marked extrapolated (~ and a dagger, amber), with a note under the results. |
| Wind check tab (beside Landing roll, red dot when the wind is above a limit) | The destination runways ranked by wind: within limits first, most headwind on top; LDA, HEAD/TAIL, CROSS and LIMITS columns; each with a <b>Use</b> button that loads it.                                                       |
| Alternate card in the wind check                                             | The OFP alternate (ICAO editable), its METAR from the weather source of the settings and its best runway, with <b>Calculate for &lt;ICAO&gt; &lt;runway&gt;</b> .                                                               |
| Wind entered without a direction                                             | The ranking asks for the wind with its direction (e.g. 330/45).                                                                                                                                                                 |

## The limits used

|                                  | A32NX                                                                                           | A380X                                                                                      |
|----------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Maximum crosswind, gust included | Dry, good or wet 38 kt; 29, 25, 20 or 15 kt on contaminated runways (A320 FCOM PER-LDG-DIS-MAT) | Dry / wet 40 kt; 20 kt slush or dry snow; 15 kt standing water or compacted snow; 5 kt icy |
| Tailwind limit                   | 15 kt                                                                                           | 10 kt                                                                                      |

Gusts are included in the components as in FCOM LIM; a variable wind is taken from the worst direction.

## Limitations and why

| Limitation                                                    | Why                                                                                                      | What to do                                            |
|---------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------|
| The wind check is not an Airbus function.                     | It is a design choice of the flyPad: advice only, the flight crew decides.                               | -                                                     |
| Figures beyond the tailwind limit are extrapolated.           | The Airbus data stop at the limit; the tailwind correction is continued.                                 | Use them as an indication only.                       |
| The alternate check needs an internet connection and the OFP. | The METAR comes from the weather source set in the flyPad settings; the alternate from the SimBrief OFP. | Enter the alternate ICAO by hand if the OFP has none. |

## How to use

1. Fill the landing calculator as usual and press Calculate.
2. If a red wind banner shows, open the **Wind check** tab beside the landing roll picture.
3. Load a better runway with **Use**, or the alternate with **Calculate for**, and calculate again.

## How to test

| # | Do this                                                                                                                                                                     | Expected result                                                                                                         |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X, SimBrief OFP with an alternate loaded. flyPad > Performance > Landing. Enter a runway, a dry runway condition and a wind giving about 45 kt of crosswind. Calculate. | Results shown; red banner "Crosswind 45 kt, maximum 40 kt"; red dot on the Wind check tab. No Yes/No prompt.            |
| 2 | Enter a wind giving a 15 kt tailwind. Calculate.                                                                                                                            | Results shown with "Tailwind 15 kt, limit 10 kt"; distances marked ~ and a dagger in amber, and the extrapolation note. |

|   |                                            |                                                                                                                           |
|---|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 3 | Open the Wind check tab.                   | The destination runways ranked, those within limits first; LIMITS column says "Within limits" or which limit is exceeded. |
| 4 | Press Use on the best runway.              | The runway is loaded into the calculator; calculate again: no banner if it is within limits.                              |
| 5 | Look at the alternate card.                | The OFP alternate, "Fetching the METAR..." then its METAR and best runway; "Calculate for <ICAO> <runway>" loads it.      |
| 6 | Repeat on the A32NX with a 16 kt tailwind. | Banner "Tailwind 16 kt, limit 15 kt", extrapolated figures.                                                               |

## 11. RAT stow (maintenance) row on the Services page

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Services, equipment list | **Status:** Tested in the sim by the user on develop: OK on both aircraft (2026-10-05). Unit test: ratStow.spec (row look and status text).

### What it is for

The flyPad side of the RAT ground stow: a maintenance row that asks the systems to stow the RAT after the landing (A320 FCOM DSC-29-10-20: the RAT "can be stowed only when the aircraft is on the ground"). The systems side (L:A32NX\_RAT\_STOW\_REQUEST, the shared Rust RAT model) is on `core/rat-ground-stow`; see that manual for the rules, the limitations and the full test.

**CAUTION**

Merge both branches: without `core/rat-ground-stow` the row shows while the RAT is out but pressing Stow has no effect.

### What you should see

| Situation                               | What you should see                                                                                                                               |
|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| RAT stowed                              | No RAT row.                                                                                                                                       |
| RAT out, aircraft stopped on the ground | "RAT stow (maintenance)", status "RAT extended", button <b>Stow</b> .                                                                             |
| RAT out, in flight or moving            | Row greyed, status "RAT extended · stow when stopped on the ground".                                                                              |
| Stow pressed                            | Status "Stowing" for about 3 s; the row disappears when the systems have stowed the RAT, or stays if they refused (an extension still commanded). |

### How to use

- Stop on the ground with the RAT out and normal electrical power back.
- flyPad > Ground > Services: press **Stow** on the row "RAT stow (maintenance)".

### How to test

| # | Do this                                                                                                  | Expected result                                                                 |
|---|----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| 1 | A380X on the ground, engines running: EMER ELEC PWR panel RAT MAN ON (then release it). flyPad Services. | Row "RAT stow (maintenance)", active.                                           |
| 2 | Press Stow.                                                                                              | "Stowing", the RAT rig retracts, the row disappears.                            |
| 3 | A32NX on the ground: HYD panel RAT MAN ON (or EMER ELEC PWR MAN ON), then Stow on the flyPad.            | The HYD page RAT goes back to stowed, HYD RAT FAULT clears, the row disappears. |

## 12. Custom flyPad theme, and a readable Light theme

**Aircraft:** A32NX and A380X | **Where:** flyPad > Settings > flyPad > Theme | **Status:** Custom theme: tested in the sim by the user on develop: OK by the user's word (A32NX, 2026-10-07; no recording). The first colour wheel (12 hues on 4 rings, alert hues hatched): confirmed in the sim by the user on develop (2026-10-07, "the wheel works"). The vivid colour wheel that replaced it: OK in the sim on develop 2026-10-09 (A380X, "the wheel works"). The Light theme label fix: not sim-tested (harness only). Unit tests: themePalette.spec, colourWheel.spec (contrast, alert hue note, stored red / yellow themes kept, presets unchanged).

### What it is for

The flyPad had three fixed themes: Blue, Dark and Light. A fourth choice, **Custom**, lets the pilot pick the colours: a base (the surfaces and text of the Gray, Black or Light theme) plus a primary and a secondary colour. The Blue, Dark and Light themes keep their exact colours.

- **Primary colour:** buttons, switches, progress bars, chart lines.
- **Secondary colour:** selected tabs, segmented buttons, chips and the navigation rail. "Same" uses the primary colour.
- The flyPad adjusts only the lightness of the picked colours until every text and control pair reaches the WCAG 2.1 AA contrast (4.5:1 for text, 3:1 for controls). A contrast list beside a preview card shows each pair with "AA" (or "FAIL").
- Amber and red are the alert colours: the preset discs offer none, and a colour close to their hues (picked on the wheel or typed) is accepted with a note that buttons and switches in it may look like warnings.
- The pencil button at the end of the colour discs opens the **colour wheel**: the 12 pure colours of the painter's wheel (yellow at the top, then clockwise yellow-green, green, sky blue, blue, violet, magenta, crimson, red, red-orange, orange, amber) on 5 rings, from the pure colour at the rim to pale tints next to the centre. Every wedge can be picked, red and yellow included; a theme stored in red or yellow is kept. Beside the wheel: the picked colour, a hex field (type a code, then Enter), a preview, the contrast checks of that colour, and, when the flyPad must adjust the colour for the chosen base, the shade it will really use. Nothing changes before **Apply**; **Cancel** keeps the theme as it was. The secondary wheel also offers "Same"; only the hue and colourfulness of a secondary colour count (the base sets its lightness).
- The theme applies to both tablets and to the Payload balance chart. An existing user keeps their theme after the update (the old setting is carried over once).

Light theme fix: several titles and labels were hard-coded white and disappeared on the Light theme (and on a Light base): the Settings page title, the ATC frequency cards and callsign, the checklist and failure (ATA) titles, the preset names, the aircraft symbol of the pushback map, the battery level and the slider labels. They now use the theme text colour; a selected ATC frequency card uses its own text colour.

### Limitations and why

| Limitation                                                            | Why                                                                                                                                 | What to do          |
|-----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| Orange, amber or red theme colours look like alerts.                  | These hues mean caution and warning on the flyPad; the warn and error colours are never themed. The flyPad allows them with a note. | Prefer another hue. |
| A picked colour can look lighter or darker than its disc or hex code. | Its lightness is moved until the contrast reaches AA on the chosen base.                                                            | -                   |

### How to use

1. Open **flyPad > Settings > flyPad** and scroll to **Theme**.
2. Press Blue, Dark or Light for a standard theme, or **Custom**.

3. Custom: pick the **Base** (Gray, Black, Light), then a **Primary color** and a **Secondary color** disc, or press the pencil button to pick it on the colour wheel (or type a hex code, then Enter), then **Apply**.
4. Check the contrast list beside the preview card; press **Reset to Blue** to go back to the usual cyan flyPad.

## How to test

| # | Do this                                                                                                                                                                              | Expected result                                                                                                                                                               |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Either aircraft, cold and dark at the gate, flyPad on. Note the theme used before the update. Open flyPad > Settings > flyPad, scroll to the bottom.                                 | Theme shows the same theme as before (Blue, Dark or Light), the same colours; no Base / Primary color / Secondary color rows.                                                 |
| 2 | Press Custom, Base Black, the violet Primary color disc (4th) and the teal Secondary color disc (6th after "Same").                                                                  | Theme Custom, Base Black; filled buttons and switches violet; the selected tabs (left rail, segmented buttons) teal; the contrast list shows "AA" on every line.              |
| 3 | Open flyPad > Ground > Payload.                                                                                                                                                      | The MTOW line of the balance chart and the "Boarded" seats are violet.                                                                                                        |
| 4 | Reload the flight, then open Settings > flyPad.                                                                                                                                      | The same custom theme (Black, violet, teal) is back.                                                                                                                          |
| 5 | Primary color: press the pencil button.                                                                                                                                              | The colour wheel: 12 pure colours at the rim (yellow at the top) and 5 rings down to pale tints; no hatched wedge.                                                            |
| 6 | Press the red wedge of the rim, then Apply.                                                                                                                                          | The note "Close to the amber and red of the alerts: buttons and switches in this color may look like warnings"; after Apply the primary is red. Reload the flight: still red. |
| 7 | Pencil button, type 2E86AB and press Enter, then Apply.                                                                                                                              | No note; the primary becomes a steel blue.                                                                                                                                    |
| 8 | Press Reset to Blue.                                                                                                                                                                 | Theme Blue, the usual cyan flyPad.                                                                                                                                            |
| 9 | Choose the Light theme. Open Settings, ATC, Checklists, Failures (an ATA chapter), Presets and Ground > Pushback; look at the battery level in the status bar and at a slider label. | Every title, callsign, preset name, the pushback aircraft symbol, the battery level and the slider labels are dark and readable on the light background (none white).         |

## 13. Performance &gt; Buffet: A32NX buffet onset envelope (coffin corner)

**Aircraft:** A32NX | **Where:** flyPad > Performance > Buffet | **Status:** Tested in the sim by the user on develop: Live page in cruise and in a turn OK, REC MAX 398 as on the MCDU (2026-10-06); What if checked from a user screenshot (2026-10-07); Live / What if pill row fix OK (2026-10-07). Unit tests: 41 (buffet, buffetLive, buffetUnits, RecMaxFlightLevel).

### What it is for

A new Performance tab, on the A32NX only: the buffet onset envelope (the coffin corner) from the A320 FCOM LIM-13 BUFFET ONSET chart, for the aircraft now (**Live**) or for any weight, CG, level, Mach and bank (**What if**). It shows how much margin is left before the low speed and high speed buffet, how far the aircraft can bank, the 1.3 g ceiling and the FMS REC MAX.

- The digitised FCOM chart (Mach, pressure altitude, CG, weight) is reduced to one lift table scaled by the ISA pressure ratio, with the chart CG correction (within 1.5 t of the 18 curves; within about 1 % of the QRH M .78 1.3 / 1.4 g lines).
- REC MAX: the FMS value of the MCDU PROG page (A320 FCOM DSC-22\_20-40-30: lowest of the 0.3 g buffet margin, MAX CRZ level flight, 300 ft/min at MAX CLB, green dot to VMO/MMO, the certified FL 398). The MCDU now publishes it in `L:A32NX_FM_REC_MAX_FL` (0 without a gross weight) for the flyPad.
- The A380X has no Buffet tab: the A380 FCOM has no buffet onset chart.

## What you see

| Part           | Content                                                                                                                                                                                                                                                                                                                                                |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Live / What if | A segmented pill at the top. Live reads the aircraft every second; What if takes typed values (the <b>A/C</b> button copies the live values).                                                                                                                                                                                                          |
| Inputs         | Gross weight (tag FMS GW, or W&B without an FMS weight; t or klb as set in the flyPad), CG (% MAC), Altitude and Mach (ADR 1, or SIM when ADR 1 is not valid), Bank (IR 1 or SIM).                                                                                                                                                                     |
| Chart          | Pressure altitude against Mach: the grey 1.0 g line (coffin corner), the cyan 1.3 g line (0.3 g margin), the 1.4 g line (QRH turbulence margin, off by default: chip 1.4 g above the chart), the red VMO / MMO line, the dashed REC MAX line (Live), the aircraft or the entered point; in a turn of 3 degrees or more a dashed amber "NN° bank" line. |
| Results        | The big tile "Buffet margin" (wings level) or "Margin in the turn" with the Level margin (bank 3 degrees or more), then tiles such as Max bank, 1.3 g ceiling, 1.3 g Mach range, REC MAX (Live), Max operating (Mach, MMO or VMO) and 1.0 g ceiling. Margins amber under 0.3 g, red under 0.2 g.                                                       |
| Banners        | Red: buffet onset in the turn ("Buffet onset in a 30° turn: max bank 27°..."), level margin below the FMS 0.2 g limit. Amber: level margin below the 0.3 g of REC MAX. Neutral: no gross weight, Mach outside the chart (M .50 to .82).                                                                                                                |

Pill row fix: the row of the Live / What if pill was 2 px shorter than the pill, so the top of the pill was cut off. The row now takes the height of the pill.

## Limitations and why

| Limitation                                                                               | Why                                                                                          | What to do                                                 |
|------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|------------------------------------------------------------|
| A32NX only.                                                                              | No A380 buffet onset chart in the FCOM (its BUFFET CEILING figure is qualitative).           | -                                                          |
| No REC MAX tile and line in What if, and none in Live without a gross weight in the FMS. | REC MAX is the FMS value for the aircraft now.                                               | Complete MCDU INIT A and INIT B (ZFW / ZFWCG, block fuel). |
| Live values from ADR 1 and IR 1.                                                         | Design choice: the real flyPad has no ADIRS link; ADR 1 / IR 1 are the captain side sources. | The tag beside each value says where it comes from.        |
| The envelope is advice only.                                                             | It is a flyPad design choice built on the FCOM chart, not an Airbus flyPad function.         | The FMS REC MAX and the FCOM stay the reference.           |

## How to use

1. Open **flyPad > Performance**, then the **Buffet** tab (5th tab, top right).
2. In cruise, keep **Live**: read the buffet margin, the max bank and REC MAX.
3. To plan a level or a turn, press **What if**, enter Gross weight, CG, Altitude, Mach and Bank, and read the margin and the banner.
4. Turn on the **1.4 g** chip to see the turbulence margin line.

## How to test

| # | Do this                                                                                                                                                           | Expected result                |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| 1 | A32NX in cruise at FL350 to FL390, about M .78, wings level, autopilot ON, MCDU INIT A and INIT B done. On the MCDU press PROG and note the REC MAX flight level. | A REC MAX FL on the PROG page. |

|   |                                                                                                |                                                                                                                                                                                                                                                                                                                   |
|---|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | flyPad > Performance > Buffet.                                                                 | Buffet is the 5th tab; Live selected (the pill not cut at the top); Gross weight tagged FMS GW, Altitude and Mach ADR 1, Bank 0 with IR 1; chart with the grey 1.0 g, cyan 1.3 g and red VMO/MMO lines and the aircraft at your FL and Mach; the REC MAX tile and dashed line show the MCDU value; no red banner. |
| 3 | Turn the FCU HDG knob 90 degrees left (about 25 degrees of bank) and watch the page.           | While the bank is 3 degrees or more: Bank follows the roll, a dashed amber "NN° bank" line, the big tile reads "Margin in the turn", Max bank and Level margin shown. Wings level again: "Buffet margin", no amber line.                                                                                          |
| 4 | Press What if. Enter Gross weight 76 t (167.6 klb), CG 24, Altitude 39000, Mach 0.76, Bank 30. | Red banner "Buffet onset in a 30° turn: max bank 27° at FL390, M .760. Level margin 0.13 g is below the FMS 0.2 g limit."; Margin in the turn -0.02 g in red; 1.3 g Mach range "none"; 1.3 g ceiling FL361; no REC MAX tile or line.                                                                              |
| 5 | Press the 1.4 g chip above the chart.                                                          | A light cyan 1.4 g line and its legend line appear.                                                                                                                                                                                                                                                               |
| 6 | Open flyPad > Performance on the A380X.                                                        | No Buffet tab.                                                                                                                                                                                                                                                                                                    |

## 14. GSX services link: passenger counts, request chips, greyed switch

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Services, GSX services card; Ground > Payload | **Status:** GSX boarding passenger number and counter: tested in the sim by the user on develop: OK (A32NX, 2026-10-07: GSX given 170 passengers at switch-on, count 0 to 170, Done). Greyed switch, request chips and the deboarding number: not sim-tested. Unit tests: GsxRemote, GsxServicesPanel, ServicesLayout, gsxPassengers, gsxPassengerSync, Material.

### What it is for

Fixes of the GSX link of the Services page (the GSX services card, from `core/efb-ground`), found in the sim on 2026-10-01 (A380X at RJTT, GSX Remote API). The link needs the third-party add-on GSX Pro (FSDreamTeam) with its Remote control server on.

- **Passenger number.** GSX boarded its own number of passengers and the Board counter stayed at 0. The flyPad now gives GSX its passenger number (`L:FSDT_GSX_NUMPASSENGERS`, which GSX uses in place of its own figure when set before the boarding or deboarding, GSX manual DEVELOPERS): the passengers planned on the Payload page, or the passengers on board once a deboarding is requested or after landing. The Services page and the Payload pages of both aircraft use the same rule; before, a GSX deboarding started from the Payload page was given 0 passengers.
- **Passenger counter.** The flyPad counts the GSX boarding and deboarding passengers itself: the Board line shows boarded over planned (e.g. 45/120) and its bar fills; before, it showed GSX's own figure twice.
- **Request chips.** A turnaround step offers **Request** only while GSX lets the service be triggered, and **Stop** while it runs. A completed service no longer offers Request (also the Ground equipment rows, e.g. the Catering Truck).
- **Greyed switch.** Without GSX the GSX services switch is faded and does not move. The disabled look of the Material controls is now set by the flyPad itself (the sim browser does not reliably support the CSS `:disabled` state).

### Limitations and why

| Limitation     | Why                                                            | What to do                                                            |
|----------------|----------------------------------------------------------------|-----------------------------------------------------------------------|
| Needs GSX Pro. | A third-party add-on (FSDreamTeam); the flyPad only drives it. | Install GSX Pro and turn on its Remote control server (GSX settings). |



GSX resets its passenger number to 0 when it restarts.

GSX behaviour (GSX manual).

The flyPad gives the number again while the Services page is linked, and just before a Board / Deboard request.

## How to use

1. Start GSX Pro with its Remote control server on.
2. Plan the passengers on **flyPad > Ground > Payload** (do not press Board).
3. On **Ground > Services**, turn the **GSX services** switch on when the card says "GSX found".
4. Request the jet bridge or stairs, then **Board > Request** in the Turnaround card; after landing, **Deboard > Request**.

## How to test

| # | Do this                                                                                                                                                                                                                         | Expected result                                                                                                                                                                  |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Needs GSX Pro (third-party) with its Remote control server on. A380X (or A32NX) at a gate with a jet bridge, GSX not started yet (start the flight before Couatl, or Couatl tray icon > Exit). Open flyPad > Ground > Services. | In the GSX services card: the switch faded and it does not move when tapped; red text "GSX not found: start GSX, with its Remote control server on (GSX settings)".              |
| 2 | Start GSX (Couatl) and wait.                                                                                                                                                                                                    | The card says "GSX found"; the switch is at full brightness and can be turned on.                                                                                                |
| 3 | Ground > Payload: set 120 passengers (do not press Board). Back on Services, turn the GSX services switch on.                                                                                                                   | Within 2 s GSX is given 120 passengers ( L : FSDT_GSX_NUMPASSENGERS = 120).                                                                                                      |
| 4 | Ground equipment > Jet Bridge > Request; when connected, Turnaround > Board > Request. Watch the Board line for 2 minutes.                                                                                                      | GSX boards 120 passengers; the Board line reads boarded/120, starting near 0 and rising, its bar filling; at the end "Done 120/120"; Ground > Payload shows the same passengers. |
| 5 | Look at the Board line, and at Catering (Turnaround and Ground equipment) if catering is done.                                                                                                                                  | No Request chip on a Done service.                                                                                                                                               |
| 6 | After the next landing at a gate with GSX: Turnaround > Deboard > Request (Payload page open or not).                                                                                                                           | GSX is given the passengers on board (not 0) and deboards them; the Deboard line counts them.                                                                                    |

## 15. GSX turnaround: completed services remembered, Baggage steps

**Aircraft:** A32NX and A380X | **Where:** flyPad > Ground > Services, GSX services card > Turnaround | **Status:** Tested in the sim by the user on develop (A380X, 2026-10-07): Done kept after GSX reset the boarding to available (recording), Baggage row Done (recording: boarding cargo 50 to 100 %), Turnaround horizontal scrollbar gone. Unit tests: gsxTurnaround, GsxServicesPanel.

### What it is for

Needs the third-party add-on GSX Pro. GSX gives one completion signal, the service state 6 "completed", and does not keep it: in the sim (A32NX, 2026-10-06) GSX set the boarding state back to 1 (available) 14 s after the end of the boarding, so the turnaround offered the boarding again as if it had not been done.

- **Completed services remembered.** The flyPad itself remembers the completed boarding, deboarding, catering and refuelling of the current turnaround (also across flyPad page changes). A service requested or running again is forgotten; the boarding is forgotten when a deboarding starts, and the reverse; everything is forgotten at the end of the turnaround (an engine running or the pushback requested). The jet bridge, stairs and GPU follow the sim.
- **Baggage steps.** A Baggage row after Board in the departure turnaround (catering, boarding, baggage, pushback) and after Deboard in the arrival turnaround (deboarding, baggage, catering). GSX has no baggage service to request: it loads the baggage during the boarding and unloads it during the deboarding, so the row has no

Request button ("Loaded with the boarding" / "Unloaded with the deboarding" while idle) and shows the GSX baggage progress ( `L:FSDT_GSX_BOARDING_CARGO_PERCENT` / `L:FSDT_GSX_DEBOARDING_CARGO_PERCENT` ). It is Done when 100 % is reached after the loading was seen running in this turnaround (a 100 % left from an earlier loading does not count), remembered and forgotten with its boarding or deboarding.

- **List fixes.** The Turnaround list scrolls vertically only (no horizontal scrollbar), and the progress bar of a step sits in its own full-width box under the texts (it was pushed out of the card).

## Limitations and why

| Limitation                                           | Why                                                                                                        | What to do                                         |
|------------------------------------------------------|------------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| Needs GSX Pro.                                       | A third-party add-on; the states come from its variables and Remote API.                                   | Install GSX Pro with its Remote control server on. |
| The Done marks last for the current turnaround only. | GSX does not keep its completion; the flyPad clears them when an engine runs or the pushback is requested. | -                                                  |
| No Request on the Baggage rows.                      | GSX has no separate baggage service.                                                                       | Request Board or Deboard.                          |

## How to use

1. On **Ground > Services**, link GSX with the GSX services switch.
2. Run the turnaround steps in order with their Request chips; a Done step keeps its check mark.
3. Follow the baggage on the Baggage row during the boarding or deboarding.

## How to test

| # | Do this                                                                                                                                                                    | Expected result                                                                                                                                                                                                            |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Needs GSX Pro (third-party) with its Remote control server on. A380X or A32NX at a gate, GSX linked on Ground > Services, passengers planned. Look at the Turnaround card. | The departure steps in this order: catering, boarding, Baggage, pushback (service names as GSX gives them); the Baggage row reads "Loaded with the boarding", with no Request button. No horizontal scrollbar in the list. |
| 2 | Request Board and watch the Board and Baggage rows.                                                                                                                        | The progress bars stay inside the card, under the texts; the Baggage progress rises with the GSX baggage loading.                                                                                                          |
| 3 | Wait for the end of the boarding and the baggage loading.                                                                                                                  | Board and Baggage both Done with a check mark.                                                                                                                                                                             |
| 4 | Wait about 30 s (GSX resets the boarding to available), then open Ground > Payload and come back to Services.                                                              | Board and Baggage are still Done; Board offers no Request.                                                                                                                                                                 |
| 5 | Start an engine (or request the pushback).                                                                                                                                 | The turnaround is cleared: the Done marks go.                                                                                                                                                                              |
| 6 | After landing at a gate with GSX, look at the Turnaround card, then Request Deboard.                                                                                       | The arrival steps: deboarding, Baggage ("Unloaded with the deboarding"), catering; at the end the deboarding and Baggage are Done.                                                                                         |

# A32NX air conditioning per the FCOM

The A32NX air conditioning controllers, alerts, STATUS lines and SD COND / BLEED pages follow the A320 FCOM (DSC-21-10, PRO-ABN-AIR, PRO-ABN-COND)

|                  |                                                                                                                                                                                                                                                                                       |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX                                                                                                                                                                                                                                                                                 |
| Where to find it | Overhead AIR COND panel (PACK, HOT AIR, temperature selectors), ENG FIRE pushbuttons; E/WD; SD COND, BLEED and STATUS pages                                                                                                                                                           |
| Branch           | core/a32nx-air-conditioning , based on core/gps (stacked: needs core/surveillance, core/a380x-mfd-fms and core/gps merged first; the STATUS lines use the A32NX STATUS page of core/gps).                                                                                             |
| Status           | All four features tested in the sim by the user: OK (2026-10-02). Two triggers cannot be produced in the sim (fourth duct excursion above 80 °C, pack valve position disagree): covered by Rust and vitest unit tests. A full MSFS restart is needed after installing (systems WASM). |
| Pictures         | No pictures: the COND and BLEED pages are the stock FBW pages with the changes described.                                                                                                                                                                                             |

1. Air conditioning controller per the FCOM

2. COND page trim air valve XX and air conditioning STATUS lines
3. Packs regulate cockpit and cabin separately with the hot air valve closed

4. BLEED page: each pack's own outlet temperature

## 1. Air conditioning controller per the FCOM

**Aircraft:** A32NX | **Where:** Overhead AIR COND panel, ENG FIRE pb; SD BLEED / COND | **Status:** Tested in the sim by the user: OK (2026-10-02): trim air valves, galley fan, FIRE pb per side, 30 s reopening. Fourth excursion and valve disagree: unit tests only.

### What it is for

An audit of the air conditioning system controllers (ACSC) against A320 FCOM DSC-21-10 and PRO-ABN-AIR / PRO-ABN-COND found six deviations. All six are fixed:

- ENG FIRE pushbutton:** each one closes the pack of its own side (DSC-21-10-50). Before, the pack flow controller read the ENG 1 FIRE pb for both packs: ENG 2 FIRE closed pack 1.
- Pack valves after an engine start:** on the ground they reopen 30 s after the engine start (DSC-21-10-50 PACK pb: "reopening of the valves is delayed for 30 s to avoid a supplementary pack closure cycle during second engine start"); in flight at once.
- Hot air valve and trim air valve failures:** the hot air pressure regulating valve closes when the cockpit trim air valve fails or both cabin ones fail, and stays open with one cabin trim air valve failed (DSC-21-10-20). Before, it closed on any trim air valve failure.
- LAV + GALLEY FAN fault:** the cabin temperature sensors are no longer ventilated, so the FWD / AFT CABIN selectors set the cabin duct temperature directly (it was fixed at 15 °C). With ACSC 2 also lost, the cabin gets the cockpit duct air (PRO-ABN-COND).
- DUCT OVHT** also triggers on the fourth excursion of a duct temperature above 80 °C in one flight, not only above 88 °C (PRO-ABN-COND). The count restarts at each takeoff run.
- PACK 1(2) FAULT** also triggers when the pack flow control valve position disagrees with its command, not only on the loss of both lanes of the ACSC (PRO-ABN-AIR).

### What you should see

| Situation                               | What you should see                                                       |
|-----------------------------------------|---------------------------------------------------------------------------|
| ENG 2 FIRE pb pushed                    | SD BLEED: pack 2 valve closes, pack 1 stays open (before: pack 1 closed). |
| Engine start on the ground, PACK pbs ON | The pack valves stay closed for 30 s after the start, then open.          |

|                                                   |                                                                                                                            |
|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Forward (or aft) cabin trim air valve failed      | The hot air valve stays open; only that zone loses its trim.                                                               |
| Cockpit trim air valve failed, or both cabin ones | The hot air valve closes (SD COND: hot air valve symbol closed). The HOT AIR pb shows no FAULT for this automatic closure. |
| Lavatory and galley extraction fan failed         | COND LAV+GALLEY FAN FAULT; turning the FWD / AFT CABIN selectors moves the cabin duct temperature directly.                |

Limitations and why

| Limitation                                                                                      | Why                                                                                                                                                      | What to do                                                 |
|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| The fourth-excursion DUCT OVHT and the valve-disagree PACK FAULT cannot be produced in the sim. | There is no pack valve failure, and the valve closes by itself on low pressure; the duct temperature cannot be driven above 80 °C four times on purpose. | Covered by Rust tests and the AcscPackFaults vittest spec. |
| Not simulated: PACK REGUL FAULT, bypass valve and ram air inlet, pack overheat.                 | The packs are a placeholder in the FBW model.                                                                                                            | None.                                                      |
| A full MSFS restart is needed after installing.                                                 | The controllers are in the systems WASM module.                                                                                                          | Restart the sim.                                           |

How to use

- 1. Nothing new to set: use the AIR COND panel as usual (PACK 1 / 2, HOT AIR, COCKPIT / FWD CABIN / AFT CABIN).
- 2. In an engine fire the ENG FIRE pb closes the pack of that side only.

How to test

| # | Do this                                                                                                                                                        | Expected result                                                                                                                                                        |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, both engines running, PACK 1 and 2 ON. Open the SD <b>BLEED</b> page. Push the <b>ENG 2 FIRE</b> pb.                                      | Pack 2 valve closes; pack 1 stays open. (Without core/fire the stock FBW also shows an ENG 2 FIRE warning when the pb is pushed: not part of this test.) Reset the pb. |
| 2 | Engines off, APU bleed ON, PACKs ON. Start engine 1 and watch the pack valves on the BLEED page.                                                               | The pack valves close during the start and reopen about 30 s after the engine is started.                                                                              |
| 3 | Open the SD <b>COND</b> page. flyPad > Failures > ATA 21 Air Conditioning > <b>Forward Zone Trim Air Valve</b> .                                               | The hot air valve stays open; the FWD valve shows amber XX (see the next feature).                                                                                     |
| 4 | Add <b>Aft Zone Trim Air Valve</b> .                                                                                                                           | The hot air valve closes (both cabin valves failed).                                                                                                                   |
| 5 | Clear them; fail <b>Cockpit Trim Air Valve</b> alone.                                                                                                          | The hot air valve closes.                                                                                                                                              |
| 6 | Clear the failures. flyPad > Failures > ATA 21 Air Conditioning > <b>Extraction Fan of lavatory and galley</b> . Turn the FWD CABIN selector from cold to hot. | E/WD: COND LAV+GALLEY FAN FAULT. The FWD cabin duct temperature on the COND page follows the selector directly.                                                        |
| 7 | Also fail <b>ACSC 2 Lane 1</b> and <b>ACSC 2 Lane 2</b> .                                                                                                      | The cabin ducts take the cockpit duct temperature.                                                                                                                     |

2. COND page trim air valve XX and air conditioning STATUS lines

|                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------|
| Aircraft: A32NX   Where: SD COND page; E/WD; SD STATUS page   Status: Tested in the sim by the user: OK (2026-10-02). |
|-----------------------------------------------------------------------------------------------------------------------|

## What it is for

FCOM DSC-21-10-50 (COND page, zone trim air valve): "The arrow is green. It is replaced by amber crosses ("XX") if the valve fails". The FBW page had a TODO there. It now shows amber XX for a valve that either ACSC reports failed.

The air conditioning alerts now fill the ECAM STATUS page (PRO-ABN-AIR, PRO-ABN-COND). The STATUS page gains a limitations part (blue, before the information):

| Alert                                   | STATUS left column                                                           | INOP SYS                                           |
|-----------------------------------------|------------------------------------------------------------------------------|----------------------------------------------------|
| AIR PACK 1(2) FAULT                     | CKPT (CAB) AT FIXED TEMP when ACSC 1 (2) is lost                             | PACK 1(2), COND CTL 1(2) when the ACSC is lost     |
| AIR PACK 1+2 FAULT                      | MAX FL.....100/MEA-MORA (blue, first), CKPT AT FIXED TEMP, CAB AT FIXED TEMP | PACK 1+2, COND CTL 1, COND CTL 2                   |
| AIR PACK 1(2) OFF                       | -                                                                            | PACK 1(2)                                          |
| AIR COND CTL 1(2)-A(B) FAULT            | -                                                                            | COND CTL 1(2)-A(B)                                 |
| COND CKPT / FWD CAB / AFT CAB DUCT OVHT | CAB TEMP BY PACK ONLY                                                        | HOT AIR                                            |
| COND HOT AIR FAULT                      | CAB TEMP BY PACK ONLY (hot air closed, packs on)                             | HOT AIR; PACK 1+2 with both packs off              |
| COND L+R CAB FAN FAULT                  | -                                                                            | L+R CAB FAN                                        |
| COND LAV+GALLEY FAN FAULT               | CAB TEMP CKPT CTL ONLY (ACSC 2 working) or CAB AT FIXED TEMP (ACSC 2 lost)   | GALLEY FAN (+ PACK 2, COND CTL 2 with ACSC 2 lost) |

- COND HOT AIR FAULT gets the full FCOM procedure: -HOT AIR...OFF, then ".IF HOT AIR STILL OPEN AND DUCT OVHT PERSISTS:" -PACK 1 OFF, -PACK 2 OFF, -DES TO FL 100/MEA-MORA, ".WHEN DIFF PR <1 PSI AND FL BELOW 100:" -RAM AIR ON, MAX FL 100/MEA-MORA (the descent lines in flight only).
- The TRIM AIR SYS FAULT line "CPKT TRIM VALVE" is now spelled **CKPT TRIM VALVE**.
- The FCOM FWD CRG HEAT line is left out: the FBW A320 has no cargo heating.

## How to use

- After an air conditioning alert, clear it with CLR and read the STATUS page (it comes up by itself, or press STS).
- On the SD COND page, an amber XX in place of a zone arrow means that trim air valve has failed.

## How to test

| # | Do this                                                                                                              | Expected result                                                                                                      |
|---|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX powered, packs on. SD COND page. flyPad > Failures > ATA 21 Air Conditioning > <b>Cockpit Trim Air Valve</b> . | COND page: amber XX in place of the cockpit valve arrow. E/WD: COND TRIM AIR SYS FAULT, -CKPT TRIM VALVE (not CPKT). |
| 2 | Clear it. Fail <b>Cabin Fan 1</b> and <b>Cabin Fan 2</b> .                                                           | COND L+R CAB FAN FAULT, -PACK FLOW...HI. After CLR, STATUS: INOP SYS L+R CAB FAN.                                    |
| 3 | Clear them. Fail <b>ACSC 1 Lane 1</b> .                                                                              | AIR COND CTL 1-A FAULT; STATUS: INOP SYS COND CTL 1-A.                                                               |
| 4 | Also fail <b>ACSC 1 Lane 2</b> .                                                                                     | AIR PACK 1 FAULT; STATUS: CKPT AT FIXED TEMP (green), INOP SYS PACK 1 and COND CTL 1.                                |

|   |                                                                                                                                                                                                 |                                                                                                                                                                                     |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5 | Also fail <b>ACSC 2 Lane 1</b> and <b>ACSC 2 Lane 2</b> .                                                                                                                                       | AIR PACK 1+2 FAULT; STATUS: MAX FL.....100/MEA-MORA in blue on top, then CKPT AT FIXED TEMP and CAB AT FIXED TEMP; INOP SYS PACK 1+2, COND CTL 1, COND CTL 2.                       |
| 6 | Clear all. Fail <b>Cockpit Duct Overheat</b> .                                                                                                                                                  | COND CKPT DUCT OVHT; STATUS: CAB TEMP BY PACK ONLY, INOP SYS HOT AIR.                                                                                                               |
| 7 | In flight, with <b>Trim Air Pressure Regulating Valve</b> failed (the valve stays where it is) and a duct overheat failure, watch COND HOT AIR FAULT if it is raised with the valve still open. | The lines .IF HOT AIR STILL OPEN AND DUCT OVHT PERSISTS;, -PACK 1 / -PACK 2 OFF, -DES TO FL 100/MEA-MORA, .WHEN DIFF PR <1 PSI AND FL BELOW 100;, -RAM AIR ON, MAX FL 100/MEA-MORA. |

### 3. Packs regulate cockpit and cabin separately with the hot air valve closed

**Aircraft:** A32NX | **Where:** Overhead HOT AIR pb and temperature selectors; SD BLEED | **Status:** Tested in the sim by the user: OK (2026-10-02): HOT AIR OFF pack 1 16 °C / pack 2 29 °C; ON both back to the same value within 60 s.

#### What it is for

With the hot air pressure regulating valve closed (failure, HOT AIR pb OFF or the automatic closure), the trim air valves cannot mix the zones. FCOM DSC-21-10-40 (hot air valve failed closed): pack 1 regulates to the cockpit demand and pack 2 to the mean of the FWD and AFT cabin demands. With ACSC 2 lost, pack 2 follows the cockpit demand (PRO-ABN-COND). With the valve open, both packs still supply the lowest zone demand (DSC-21-10-20). Before, both packs always followed the lowest demand.

#### Limitations and why

| Limitation                                                         | Why                                                                                       | What to do                                                  |
|--------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| The zone temperatures do not separate as much as the pack outlets. | The FBW air mixer gives every zone the same air, so pack 1 cannot cool the cockpit alone. | Read the effect on the BLEED page pack outlet temperatures. |

#### How to use

1. With the HOT AIR pb OFF (or the valve failed closed), set the COCKPIT selector for the cockpit and the FWD / AFT CABIN selectors for the cabin: pack 1 serves the cockpit, pack 2 the cabin.

#### How to test

| # | Do this                                                                                             | Expected result                                                                                   |
|---|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| 1 | A32NX, packs running, SD <b>BLEED</b> page. HOT AIR pb ON. Set COCKPIT cold, FWD and AFT CABIN hot. | Both pack outlet temperatures are the same (the lowest demand).                                   |
| 2 | Set the HOT AIR pb OFF and wait about a minute.                                                     | Pack 1 outlet colder (cockpit demand), pack 2 warmer (cabin demand): for example 16 °C and 29 °C. |
| 3 | Set the HOT AIR pb ON again.                                                                        | Both pack outlets go back to the same value within about 60 s.                                    |

### 4. BLEED page: each pack's own outlet temperature

**Aircraft:** A32NX | **Where:** SD BLEED page | **Status:** Tested in the sim by the user: OK (2026-10-02): HOT AIR ON 10 / 10 °C, OFF 15 / 30 °C.

## What it is for

The pack outlet temperatures of the SD BLEED page were a placeholder showing the FWD cabin zone temperature on both packs. They now show the outlet temperature the air conditioning system computes for each pack, in 5 °C steps, amber above 90 °C (FCOM DSC-21-10-50, ECAM BLEED page, item 1).

## Limitations and why

| Limitation                                                                          | Why                                        | What to do |
|-------------------------------------------------------------------------------------|--------------------------------------------|------------|
| The pack bypass valve and the compressor outlet temperature are still placeholders. | The packs are not modelled internally yet. | None.      |

## How to use

1. Open the SD **BLEED** page: the temperature above each pack is that pack's outlet temperature.

## How to test

| # | Do this                                               | Expected result                                                                                                      |
|---|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX, packs running, SD BLEED page, HOT AIR pb ON.   | Both pack outlet values equal (for example 10), in steps of 5.                                                       |
| 2 | HOT AIR pb OFF, COCKPIT cold and cabin selectors hot. | The two values differ (for example 15 and 30): they are each pack's own outlet, no longer the FWD cabin temperature. |

# A380X cockpit buttons, lights and probes

Dead A380X cockpit pushbuttons now work, the 52 RESET panel buttons can be clicked, the FMC-C reset button is checked, the AUTOLAND lights flash, and the side slip and angle of attack vanes on the nose move

|                  |                                                                                                                                                                                                                                                                          |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X                                                                                                                                                                                                                                                                    |
| Where to find it | Thrust levers, overhead EVAC and RESET panels, right pedestal, glareshield AUTOLAND lights, nose probes (outside view)                                                                                                                                                   |
| Branch           | core/a380x-cockpit , based on master (FlyByWire master 255546cb0 merged in); independent of the other core branches. The MFP vanes also need the companion aircraft-large-files change (fork TCdr/aircraft-large-files, branch feat/a380x-mfp-vane-animations, b8fb739). |
| Status           | All five features tested in the sim by the user: OK. Pushbuttons, RESET panel and side slip vanes, FMC-C reset check on 2026-10-03; AUTOLAND light and MFP vanes on 2026-10-04.                                                                                          |
| Pictures         | No pictures: the buttons and the vanes are the existing cockpit and fuselage models.                                                                                                                                                                                     |

1. A/THR disconnect, EVAC HORN, DFDR EVENT and ACMS TRIGGER pushbuttons work
2. Clickable RESET panel buttons and side slip probe vanes
3. FMC-C reset button checked in the all-FMCs-reset test
4. AUTOLAND light press-to-test and flashing
5. MFP vanes follow the angle of attack

## 1. A/THR disconnect, EVAC HORN, DFDR EVENT and ACMS TRIGGER pushbuttons work

|                                                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> Thrust levers 1 and 4, overhead EVAC panel, right pedestal   <b>Status:</b> Tested in the sim by the user: OK (2026-10-03). |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The cockpit behaviour XML named model nodes or animations that are not in the A380X cockpit model, so these pushbuttons could not be clicked or did not move. Checked against the cockpit model:

| Pushbutton                                               | Before                              | Now                                                                                              |
|----------------------------------------------------------|-------------------------------------|--------------------------------------------------------------------------------------------------|
| A/THR instinctive disconnect pbs (thrust levers 1 and 4) | Not clickable (PUSH_THROTTLE_1/2)   | Clickable (ATHR_DISCONNECT_ENG1/2): they disconnect the A/THR through the existing FBW interface |
| EVAC HORN SHUT OFF                                       | Not clickable (PUSH_OVHD_EVAC_HORN) | Clickable (PUSH_OVHD_EVAC_HORN_OFF)                                                              |
| DFDR EVENT, ACMS TRIGGER (right pedestal)                | Did not move                        | Move when pressed (ANIM_PUSH_DFDR_EVENT / ANIM_PUSH_ACMS_TRIGGER)                                |

### Limitations and why

| Limitation                             | Why                                                                                              | What to do |
|----------------------------------------|--------------------------------------------------------------------------------------------------|------------|
| DFDR EVENT and ACMS TRIGGER only move. | There is no flight data recorder or ACMS function behind them; their tooltips still say (Inop.). | None.      |

### How to use

1. Press an A/THR instinctive disconnect pushbutton on thrust lever 1 or 4 to disconnect the A/THR.
2. Press EVAC HORN SHUT OFF on the overhead EVAC panel, DFDR EVENT or ACMS TRIGGER on the right pedestal as on the aircraft.



How to test

| # | Do this                                                                                       | Expected result                                                        |
|---|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| 1 | A380X in flight, A/THR active. Click the instinctive disconnect pushbutton on thrust lever 1. | The pushbutton moves and the A/THR disconnects (A/THR leaves the FMA). |
| 2 | Engage the A/THR again and click the pushbutton on thrust lever 4.                            | Same result.                                                           |
| 3 | Click EVAC HORN SHUT OFF on the overhead EVAC panel.                                          | The pushbutton can be clicked and moves.                               |
| 4 | Click DFDR EVENT and ACMS TRIGGER on the right pedestal.                                      | Each one moves in and out when pressed.                                |

2. Clickable RESET panel buttons and side slip probe vanes

**Aircraft:** A380X | **Where:** Overhead RESET panels; nose side slip probes | **Status:** Tested in the sim by the user: OK (2026-10-03); the user accepted that 42 buttons only drive their variable, and confirmed the vane direction.

What it is for

All 52 circuit breakers of the overhead RESET panels can now be pulled and pushed, with their FCOM label as tooltip. Each one writes `L:A32NX_RESET_PANEL_<name>` (true = pulled, computer reset).

- Read by the avionics: ARPT NAV, FMC A, FMC B, FMC C, FWS 1, FWS 2, AESU 1, AESU 2, NSS AVNCS, NSS FLT OPS.
- The other 42 (AICU, ATC, AVS, BSCS, CIDS, CPCS, DSMS, DTLNK ROUTER, EIPMs, ESS TR, TR 1, TR 2A, FLAPS, FQMS, GCU, LGCIS, PACK CTL, PAX BBAND, SCS, SDF, SLATS, TCS, VCS) are clickable but no system reads them yet.

The three side slip probe vanes on the nose now follow the side slip angle (sim `INCIDENCE BETA`, up to 60 degrees each side): they line up with the airflow.

Limitations and why

| Limitation                                  | Why                                                          | What to do                             |
|---------------------------------------------|--------------------------------------------------------------|----------------------------------------|
| 42 RESET buttons do nothing in the systems. | The systems they reset are not wired to the RESET panel yet. | Use the 10 wired ones to test a reset. |

How to use

1. Hover a RESET panel button to read its label; click to pull it (reset), click again to push it back.
2. Look at the nose from the outside view to see the side slip vanes.

How to test

| # | Do this                                                                                                | Expected result                                                                            |
|---|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| 1 | Hover the buttons of the overhead RESET panels.                                                        | Each one shows its FCOM label as tooltip.                                                  |
| 2 | Click a button.                                                                                        | It pulls out; click again: it pushes in.                                                   |
| 3 | Click one of the 42 not wired buttons, for example a PACK CTL button.                                  | It moves; no system reacts.                                                                |
| 4 | In flight, outside view on the nose. Fly a steady sideslip with the rudder (for example right rudder). | The three side slip vanes turn to line up with the airflow; centred in coordinated flight. |

### 3. FMC-C reset button checked in the all-FMCs-reset test

**Aircraft:** A380X | **Where:** Overhead RESET panels: FMC A, FMC B, FMC C | **Status:** Tested in the sim by the user: OK (2026-10-03): FMC-A and FMC-B pulled, the FMS kept the plan with FMC-C in. Unit tests: FmcResetPanel.spec.ts.

#### What it is for

The FMS stops and resets when all the FMC reset buttons are pulled. The check read FMC-B twice and never FMC-C, so pulling FMC-A and FMC-B alone reset the FMS and lost the flight plan while FMC-C was still in. Per A380 FCOM DSC-22-FMS-30 FMC-C is the standby FMC, and FMS 1 and FMS 2 are only lost when FMC-A, FMC-B and FMC-C all fail (PRO-ABN-ECAM-10-22-FMS AUTO FLT FMS 1+2 FAULT). The check now covers A, B and C.

#### What you should see

| Situation                        | What you should see                                            |
|----------------------------------|----------------------------------------------------------------|
| FMC-A and FMC-B pulled, FMC-C in | The FMS keeps running; the flight plan stays.                  |
| FMC-A, FMC-B and FMC-C pulled    | The FMS stops and resets (the flight plan is lost), as before. |

#### How to use

1. Pull FMC A, FMC B and / or FMC C on the overhead RESET panels to reset those FMCs; push them back in to restore.

#### How to test

| # | Do this                                               | Expected result                                    |
|---|-------------------------------------------------------|----------------------------------------------------|
| 1 | A380X with a flight plan in the MFD F-PLN page.       | The plan is shown.                                 |
| 2 | Pull the <b>FMC A</b> and <b>FMC B</b> reset buttons. | The flight plan stays on the MFD (FMC-C still in). |
| 3 | Pull <b>FMC C</b> as well.                            | The FMS resets: the flight plan is lost.           |

### 4. AUTOLAND light press-to-test and flashing

**Aircraft:** A380X | **Where:** Glareshield, captain and F/O AUTOLAND lights | **Status:** Tested in the sim by the user: OK (2026-10-04).

#### What it is for

A380 FCOM DSC-22-FG-80-100: the AUTOLAND light flashes in autoland below 200 ft RA when the autoland conditions are lost, and "as long as the AUTOLAND light is pressed, the AUTOLAND light flashes" (light test). The cockpit lamp code cannot read the sim time, so the old flashing expression never lit the light. The flashing (1 Hz: half on, half off) is now computed in the systems host, for the light test and for the autoland warning.

#### What you should see

| Situation                                          | What you should see                                                        |
|----------------------------------------------------|----------------------------------------------------------------------------|
| AUTOLAND light held pressed                        | It flashes red at 1 Hz until released.                                     |
| Autoland below 200 ft RA, autoland conditions lost | Both AUTOLAND lights flash (the warning itself is the existing FBW logic). |

#### How to use

1. Press and hold the AUTOLAND light on the glareshield to test it (cockpit preparation).

How to test

| # | Do this                                                                  | Expected result                        |
|---|--------------------------------------------------------------------------|----------------------------------------|
| 1 | A380X powered, on the ground. Press and hold the captain AUTOLAND light. | It flashes red, about once per second. |
| 2 | Release it.                                                              | It goes off.                           |
| 3 | Repeat with the F/O AUTOLAND light.                                      | Same.                                  |

5. MFP vanes follow the angle of attack

**Aircraft:** A380X | **Where:** Nose multifunction probes (outside view) | **Status:** Tested in the sim by the user: OK (2026-10-04).

What it is for

The angle of attack vanes of the three multifunction probes on the nose (one on the left, two on the right, A380 FCOM DSC-34-10-30-10) now follow the angle of attack (sim `INCIDENCE ALPHA`, up to 60 degrees each way, smoothed so that the jumps at very low speed on the ground do not show).

Limitations and why

| Limitation                                                | Why                                                                                                                                                       | What to do                                  |
|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| The vanes do not move without the companion model change. | The MFP_ANGLE1..3 animations are in the A380_FUSELAGE model of the aircraft-large-files repository (fork branch feat/a380x-mfp-vane-animations, b8fb739). | Install that model change with this branch. |

How to use

- 1. Look at the nose probes from the outside view in flight.

How to test

| # | Do this                                                                                         | Expected result                                                              |
|---|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| 1 | A380X in flight, outside view on the nose probes. Pitch up slowly to raise the angle of attack. | The three MFP vanes turn: their trailing tip rises with the angle of attack. |
| 2 | Lower the nose to a small angle of attack.                                                      | The vanes come back near their neutral position.                             |

# A32NX exterior spoilers by panel group

The A32NX exterior spoilers move by panel group from their own deflection instead of the wing average, so spoiler 1 stays down in turns and with the speedbrakes

|                  |                                                                                                                                                                                                      |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX                                                                                                                                                                                                |
| Where to find it | Outside view of the wings                                                                                                                                                                            |
| Branch           | core/a32nx-exterior , based on master (FlyByWire master 255546cb0 merged in); independent of the other core branches. The exterior model is in the main repository (no aircraft-large-files change). |
| Status           | Tested in the sim by the user: OK (2026-10-03).                                                                                                                                                      |
| Pictures         | No pictures: the movement does not show well on a still picture.                                                                                                                                     |

## 1. Exterior spoilers move by panel group

|           |       |  |        |                           |  |         |                                                 |
|-----------|-------|--|--------|---------------------------|--|---------|-------------------------------------------------|
| Aircraft: | A32NX |  | Where: | Outside view of the wings |  | Status: | Tested in the sim by the user: OK (2026-10-03). |
|-----------|-------|--|--------|---------------------------|--|---------|-------------------------------------------------|

### What it is for

Each wing has five spoiler panels: 2 to 5 help the ailerons in roll, 2 to 4 are the speedbrakes, and all five are ground spoilers (A320 FCOM DSC-27). The exterior model moved all the panels of a wing together from the wing average, so spoiler 1 rose in turns and with the speedbrakes. The panels now follow their own deflection from the hydraulic model, by group, and the angle is shown in true degrees.

- Three groups per wing: panel 1, panels 2 + 3, panels 4 + 5. Panels 2 and 3 share their skin joints in the model, and so do panels 4 and 5, so a group shows the mean of its two panels.
- True degrees: the model animation goes to 45 degrees; the ground spoilers (50 degrees) show as the model maximum.

### What you should see

| Situation                                      | What you should see                                                                                                             |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Roll in flight                                 | The panels 2 to 5 of the down-going wing rise (as two groups); spoiler 1 stays down.                                            |
| Speedbrakes extended                           | Panels 2 to 4 rise; spoiler 1 stays down; the 4 + 5 group shows the mean of panels 4 and 5 (half way when only panel 4 is out). |
| Ground spoilers at landing or rejected takeoff | All three groups rise to the model maximum.                                                                                     |

### Limitations and why

| Limitation                                     | Why                                                                                                                           | What to do                        |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| Panels 2 / 3 and 4 / 5 move together.          | Their vertices are blended between two skin joints in the model; five separate panels need an edit of the model skin weights. | None for now.                     |
| A full MSFS restart is needed after an update. | The exterior model and its behaviour XML change.                                                                              | Restart the sim after installing. |

### How to use

1. Nothing to set: fly as usual and watch the wings from the outside view or the cabin.

## How to test

| # | Do this                                                                    | Expected result                                                                                                               |
|---|----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX in flight, outside view behind a wing. Roll left with the sidestick. | On the left wing, the spoiler groups 2 + 3 and 4 + 5 rise; spoiler 1 (inboard) stays down. The right wing spoilers stay down. |
| 2 | Level the wings and extend the speedbrakes fully.                          | Panels 2 to 4 rise on both wings; spoiler 1 stays down; the outboard 4 + 5 group is lower than the 2 + 3 group.               |
| 3 | Retract the speedbrakes. Land with the ground spoilers armed.              | At touchdown all spoilers of both wings, spoiler 1 included, rise fully.                                                      |

# A380X electrical alerts and AC ESS loads

The A380X ECAM raises the FCOM ELEC alerts from the electrical network, the AC ESS loads are on the AC ESS busbar, and the two transponders and the second NSS ANSU are wired

|                         |                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A380X                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Where to find it</b> | Overhead ELEC panel; E/WD and SD (ELEC AC / DC, STATUS); pedestal SURV panel and MFD SURV > STATUS & SWITCHING; OIT                                                                                                                                                                                                                                                           |
| <b>Branch</b>           | core/a380x-elec , based on core/gps (stacked: needs core/surveillance, core/a380x-mfd-fms and core/gps merged first).                                                                                                                                                                                                                                                         |
| <b>Status</b>           | Tested in the sim by the user: ELEC AC BUS 2 and AC BUS 4 FAULT OK (2026-10-03); ELEC AC ESS BUS FAULT with its STATUS, GEN OFF, the AC ESS and AC EMER failures, XPDR 1 / XPDR 2 with the SURV alerts and ANSU 1 / 2 OK (2026-10-04). The other ELEC alerts are not sim-tested (unit tests: 30). A full MSFS restart is needed after installing (systems WASM, cockpit XML). |
| <b>Pictures</b>         | No pictures: the alerts use the stock E/WD and SD STATUS pages.                                                                                                                                                                                                                                                                                                               |

1. ELEC alerts from the electrical network
2. AC ESS and AC EMER loads
3. XPDR 1 / XPDR 2, per-system TCAS faults and SURV XPDR alerts
4. NSS AVNCS ANSU 2

## 1. ELEC alerts from the electrical network

**Aircraft:** A380X | **Where:** E/WD; SD ELEC AC / DC and STATUS | **Status:** Tested in the sim by the user: AC BUS 2 / AC BUS 4 FAULT OK (2026-10-03), AC ESS BUS FAULT with STATUS and GEN OFF OK (2026-10-04). Other alerts not sim-tested (unit tests: 30).

### What it is for

The A380X ECAM had the ELEC alert texts but nothing raised them. The flight warning system now computes them from the electrical network (busbars, engine and APU generators, TRs, pushbuttons), with the procedures, the flight phase inhibitions and the master lights of A380 FCOM PRO-ABN-ECAM-10-24:

- **ELEC AC BUS 1(2)(3)(4) FAULT, AC ESS BUS FAULT, AC ESS BUS ALTN** (AC ESS supplied through AC 4: AC ESS FEED in ALTN), **DC BUS 1(2) FAULT, DC ESS BUS FAULT, EMER CONFIG** (all four AC busbars lost, master warning).
- **ELEC GEN 1(2)(3)(4) FAULT** (stays, with its GEN OFF line ticked, after the generator is switched off, until it works again), **GEN 1(2)(3)(4) OFF** (GEN pb-sw OFF with its engine running, after 5 s), **DRIVE 1(2)(3)(4) DISCONNECTED, APU GEN A(B) FAULT, TR 1(2)(ESS) FAULT** (no master light, no chime), **APU TR FAULT, BUS TIE OFF**.
- Procedure lines are sensed where the FCOM says so (switches set, OFF THEN ON resets, AIR DATA SWTG, WXR & TAWS / XPDR & TCAS SYS 2...). Lines that the FBW texts had from another FCOM standard and that the FCOM procedure does not contain are hidden.
- ELEC AC BUS 2 FAULT shows **LDG DIST: AFFECTED** (FCOM: LDG DIST IMPACT ON WET/CONTAM RWY ONLY).
- **ELEC AC ESS BUS FAULT** has its FCOM STATUS: LIMITATIONS (APPR & LDG) SLATS SLOW; INOP SYS all phases ADR 1, GPS 1, WXR 1, XPDR 1, TCAS 1, HF 1, FEED TK 2 MAIN PMP, STBY PITOT HEATG, L WINDSHIELD HEATG, DFDR; INOP SYS APPR & LDG SLAT SYS 1, CAT 2, GLS AUTOLAND, LS 1, TAWS 1; REDUND LOSS (STATUS MORE) RA SYS C, FEED TK 3 STBY PMP, TRIM TK L PMP, ENG 1+2+3+4 IGN A, PACK 1 CTL 1, PACK 2 CTL 1. GPWS 1, TERR SYS 1 and ADS-B RPTG 1 are not shown as separate alerts while it is active.

### NOTE

The XPDR 1 INOP SYS text is defined once for the ELEC and the SURV XPDR alerts, and the L WINDSHIELD HEATG INOP SYS text of this STATUS is added here (the same text and code as on core/ecam-fws ).

## Limitations and why

| Limitation                                                                                                                                    | Why                                                                                                                                                  | What to do                                |
|-----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| A bus fault alert needs at least one AC busbar powered.                                                                                       | Design choice: with all four AC busbars off the aircraft is unpowered on the ground or in ELEC EMER CONFIG, whose procedure covers the lost busbars. | None.                                     |
| "Failed" means "no normal output although it should give one".                                                                                | The sim gives no health word for the generators and TRs, only their output.                                                                          | None.                                     |
| Not done: combined faults, BAT faults, DRIVE OIL, units that are not simulated, T.O CONFIG, STATUS of the alerts other than AC ESS BUS FAULT. | First batch of the ELEC alerts.                                                                                                                      | None.                                     |
| VENT AVNCS EXTRACT lines are never ticked.                                                                                                    | There is no avionics ventilation pushbutton in the sim.                                                                                              | None.                                     |
| REDUND LOSS needs the ECP MORE key fix.                                                                                                       | The MORE key and light fix is on core/ecam-fws .                                                                                                     | Merge that branch to page to STATUS MORE. |

## How to use

1. When an ELEC alert shows, follow the E/WD procedure (the sensed lines tick by themselves as you act).
2. Check the ELEC AC / DC SD page (called with the alert) and the STATUS page afterwards.

## How to test

| # | Do this                                                                                                                                | Expected result                                                                                                                                                                                                                                 |
|---|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, four engines running, all GEN pb-sw ON, BUS TIE AUTO. flyPad > Failures > ATA 24 Electrical Power > <b>AC 2</b> . | E/WD: <b>ELEC AC BUS 2 FAULT</b> with its procedure, including LDG DIST: AFFECTED; SD ELEC AC page.                                                                                                                                             |
| 2 | Clear it. Fail <b>AC 4</b> .                                                                                                           | <b>ELEC AC BUS 4 FAULT</b> ; on the ground the line FOR ENG STOP : KEEP ENG 1 LAST.                                                                                                                                                             |
| 3 | Clear it. Fail <b>AC ESS</b> (this label is the A380 AC ESS busbar).                                                                   | <b>ELEC AC ESS BUS FAULT</b> , first line AC ESS FEED ..... ALTN; FAULT light in the AC ESS FEED pb-sw. No separate GPWS 1, TERR SYS 1 or ADS-B RPTG 1 alert.                                                                                   |
| 4 | Press CLR until the STATUS page shows (or press STS).                                                                                  | SLATS SLOW; INOP SYS ADR 1, GPS 1, WXR 1, XPDR 1, TCAS 1, HF 1, FEED TK 2 MAIN PMP, STBY PITOT HEATG, L WINDSHIELD HEATG, DFDR; APPR & LDG SLAT SYS 1, CAT 2, GLS AUTOLAND, LS 1, TAWS 1. With core/ecam-fws : MORE shows the REDUND LOSS list. |
| 5 | Clear it. Set the <b>GEN 2</b> pb-sw OFF (engine 2 running).                                                                           | After 5 s: <b>ELEC GEN 2 OFF</b> . GEN 2 ON: the alert goes.                                                                                                                                                                                    |
| 6 | Fail <b>Generator 3</b> .                                                                                                              | <b>ELEC GEN 3 FAULT</b> with GEN 3 ... OFF. Set GEN 3 OFF: the line ticks and the alert stays. Clear the failure and set GEN 3 ON: the alert goes.                                                                                              |
| 7 | APU running, APU GEN A pb-sw ON. Fail <b>APU Generator 1</b> .                                                                         | <b>ELEC APU GEN A FAULT</b> with APU GEN A ... OFF.                                                                                                                                                                                             |
| 8 | Fail <b>TR 1</b> , then <b>TR APU</b> .                                                                                                | <b>ELEC TR 1 FAULT</b> (no master caution, no chime), then <b>ELEC APU TR FAULT</b> .                                                                                                                                                           |

|    |                                                                           |                                                                                                                                                   |
|----|---------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 9  | Fail <b>DC 1</b> , then (cleared) <b>DC ESS</b> .                         | <b>ELEC DC BUS 1 FAULT</b> , then <b>ELEC DC ESS BUS FAULT</b> , with their procedures.                                                           |
| 10 | No failure. Set the BUS TIE pb-sw OFF.                                    | <b>ELEC BUS TIE OFF</b> .                                                                                                                         |
| 11 | Set the AC ESS FEED pb-sw to ALTN.                                        | <b>ELEC AC ESS BUS ALTN</b> .                                                                                                                     |
| 12 | In flight, fail <b>AC 1</b> , <b>AC 2</b> , <b>AC 3</b> and <b>AC 4</b> . | <b>ELEC EMER CONFIG</b> in red (master warning) with its procedure; the descent / APU lines depend on whether it triggered above or below FL 230. |

## 2. AC ESS and AC EMER loads

**Aircraft:** A380X | **Where:** Overhead ELEC panel (AC ESS FEED); flyPad failures AC ESS / AC EMER | **Status:** Tested in the sim by the user: OK (2026-10-04) with the AC ESS and AC EMER failures.

### What it is for

The A380X electrical model uses the A320 bus names: the real A380 **AC ESS** busbar (400XP) is the A320 "AC ESS SHED" bus in the code, and the **AC EMER** busbar (491XP) is the A320 "AC ESS" bus. About twenty consumers read the wrong one, so they were on AC EMER where the FCOM puts them on AC ESS. They now use the AC ESS busbar (TypeScript, cockpit XML and Rust):

- SURV SYS 1 (XPDR 1, TCAS 1, TAWS 1, WXR 1), RA SYS C, the slat motor, the 427XP EHAs, the feed tank 2 main, feed tank 3 standby and trim tank left pumps, channel 1 of both pack controllers, the F/O OIT and the FLT OPS ANSU (A380 FCOM DSC-24, DSC-34-20-100, DSC-46-20-70, DSC-21).
- The **AC ESS FEED** FAULT light shows a loss of the AC ESS busbar (FCOM DSC-24-20: "The AC ESS busbar is not supplied"). An AC EMER failure leaves AC ESS supplied: no FAULT light.
- The manual crossbleed control is powered by DC ESS (FCOM DSC-36-30) and the outflow valve manual control by its controller supplies DC 1 / 2 or DC ESS (FCOM DSC-21-30-10). Before, both were on A320 buses that the A380 does not have, so they had no power.
- With only the batteries (static inverter on AC EMER), the AC ESS loads (427XP EHAs, TAWS 1, XPDR 1...) are unpowered and the AC EMER loads (VOR 1, LS 1, GPS 1...) remain.

### Limitations and why

| Limitation                                                                                                           | Why                                                      | What to do             |
|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|------------------------|
| The flyPad labels are <b>AC ESS</b> (the real AC ESS busbar) and <b>AC EMER</b> ; the code names stay the A320 ones. | Renaming the buses in the code would touch every system. | Use the flyPad labels. |

### How to use

1. Nothing new to set. In an AC ESS loss, follow ELEC AC ESS BUS FAULT (AC ESS FEED ALTN).

### How to test

| # | Do this                                                                                       | Expected result                                                                                                                             |
|---|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X powered, engines running. flyPad > Failures > ATA 24 Electrical Power > <b>AC ESS</b> . | AC ESS FEED pb-sw FAULT light on; ELEC AC ESS BUS FAULT; the F/O OIT goes dark; MFD SURV STATUS & SWITCHING shows XPDR 1 and TCAS 1 failed. |
| 2 | Clear it. Fail <b>AC EMER</b> .                                                               | No AC ESS FEED FAULT light, no ELEC AC ESS BUS FAULT; XPDR 1, TCAS 1 and the F/O OIT keep working.                                          |



### 3. XPDR 1 / XPDR 2, per-system TCAS faults and SURV XPDR alerts

**Aircraft:** A380X | **Where:** Pedestal SURV panel; MFD SURV > STATUS & SWITCHING; E/WD; SD STATUS | **Status:** Tested in the sim by the user: OK (2026-10-04) with XPDR 1, XPDR 2 and both failed.

#### What it is for

The A380 has two surveillance systems, each with its transponder and TCAS: SURV SYS 1 on AC ESS and SURV SYS 2 on AC 4 (FCOM DSC-34-20-100). MSFS has one transponder: it now acts as the transponder of the selected system (XPDR & TCAS SYS 1 / SYS 2 on the SURV panel or the MFD SURV page). The XPDR 2 failure did nothing before.

- XPDR 1 failed or unpowered: TCAS 1 is inoperative too; same for 2. The sim TCAS computer fault counts for the selected system only.
- SURV TCAS 1(2) FAULT** is per system: no false TCAS 2 FAULT when AC ESS is lost (TCAS 2 is on AC 4). They need the busbar of that system powered (ELEC AC ESS BUS FAULT lists XPDR 1 / TCAS 1 itself).
- New **SURV XPDR 1 FAULT**, **XPDR 2 FAULT** and **XPDR 1+2 FAULT** (FCOM PRO-ABN-ECAM-10-34-20): caution, line XPDR & TCAS ..... SYS 2 (1) when the failed system is selected and the other one works; STATUS INOP SYS XPDR 1(2) and TCAS 1(2), plus AP/FD TCAS MODE when the failed system is selected; XPDR 1+2 FAULT: XPDR 1+2, TCAS 1+2. The TCAS FAULT alert of the same system is not shown with it.
- MFD SURV STATUS & SWITCHING: XPDR 1(2) and TCAS 1(2) shown failed when that XPDR is failed or unpowered.

#### How to use

- Select the XPDR & TCAS system on the pedestal SURV panel or MFD SURV > STATUS & SWITCHING.
- On SURV XPDR 1(2) FAULT, select the other system as the E/WD line asks.

#### How to test

| # | Do this                                                                                                           | Expected result                                                                                                                                                                                 |
|---|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, powered, XPDR & TCAS SYS 1 selected. flyPad > Failures > ATA 34 Navigation > <b>XPDR 1</b> . | E/WD: <b>SURV XPDR 1 FAULT</b> with XPDR & TCAS ..... SYS 2. MFD SURV STATUS & SWITCHING: XPDR 1 and TCAS 1 failed. STATUS: INOP SYS XPDR 1, TCAS 1, AP/FD TCAS MODE. No separate TCAS 1 FAULT. |
| 2 | Select SYS 2.                                                                                                     | The line ticks; AP/FD TCAS MODE leaves the STATUS; the transponder works again (as XPDR 2).                                                                                                     |
| 3 | Also fail <b>XPDR 2</b> .                                                                                         | <b>SURV XPDR 1+2 FAULT</b> ; STATUS: XPDR 1+2, TCAS 1+2.                                                                                                                                        |
| 4 | Clear both; with SYS 1 selected fail only <b>XPDR 2</b> .                                                         | <b>SURV XPDR 2 FAULT</b> without the switching line; STATUS XPDR 2, TCAS 2, no AP/FD TCAS MODE.                                                                                                 |
| 5 | Clear it. flyPad > Failures > ATA 24 Electrical Power > <b>AC ESS</b> .                                           | No SURV TCAS 2 FAULT (before: a false one); XPDR 1 / TCAS 1 are listed by ELEC AC ESS BUS FAULT.                                                                                                |

### 4. NSS AVNCS ANSU 2

**Aircraft:** A380X | **Where:** OIT (NSS AVNCS applications) | **Status:** Tested in the sim by the user: OK (2026-10-04).

#### What it is for

A380 FCOM DSC-46-20-30: the avionics side of the network server system (NSS AVNCS) has two servers; ANSU 2 provides the functions when ANSU 1 fails. Only ANSU 1 existed (the ANSU 2 failure did nothing). ANSU 2 is now built and takes over; with both failed the NSS AVNCS applications (AOC, eLogbook, maintenance) are lost. Supplies (FCOM DSC-46-20-70): ANSU 1 AC 2 or BAT 2, ANSU 2 AC 1 or AC EMER or BAT 1, FLT OPS ANSU AC ESS or BAT 1.

## How to use

1. Nothing to set: the OIT avionics applications use whichever NSS AVNCS ANSU works.

## How to test

| # | Do this                                                                                                             | Expected result                                        |
|---|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| 1 | A380X powered, OIT on an NSS AVNCS page. flyPad > Failures > ATA 46 Information Systems > <b>NSS AVNCS ANSU 1</b> . | The OIT avionics applications stay available (ANSU 2). |
| 2 | Also fail <b>NSS AVNCS ANSU 2</b> .                                                                                 | The NSS AVNCS applications are lost on the OIT.        |
| 3 | Clear both failures.                                                                                                | The applications become available again.               |

# A380X flyPad failures

The A380X flyPad failure list says what each failure really fails, lists the landing gear sensor and actuator failures, and adds brake, trim air, feed tank pump, crossfeed valve and transfer pump failures, with the trim air duct overhear and fuel pump alerts of the FCOM, and the A380X engine failures: flameout and seizure with the in-flight relight envelope and the FCOM auto relight, ignition and start, oil, stall, EGT and vibration, FADEC, thrust lever, reverser and fuel filter clog failures, with their ECAM alerts and SD ENGINE page indications, the THR LEVERS NOT SET and OIL TEMP LO alerts, the thrust loss and FLEX TEMP not received FADEC failures, and the E/WD N1 red limit with its red cross

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A380X                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Where to find it</b> | flyPad > Failures (ATA 21, 24, 26, 28, 32, 34, 72, 73, 74, 77, 78, 79, 80); overhead FUEL, AIR and ENG MAN START panels; ENG MASTER levers and ENG START selector; thrust levers; E/WD, STATUS and the SD FUEL, COND and ENGINE pages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Branch</b>           | core/failures-a380x, based on master (FlyByWire master 255546cb0 merged in), with core/fire and core/ecam-fws merged in (2026-10-05, for the engine failures: they cut the fuel on the LP valve starvation of core/fire and complete the ENG FAIL ECAM procedures of core/ecam-fws). Merge core/fire and core/ecam-fws first, or with it. It also carries, as identical files: the shared engine failure modules of the A32NX engine failures (systems engine failure, start, oil, malfunction and engine control modules, the FADEC oil failures and the in-flight start throttle hold; the fbw-common part of core/failures-a32nx), the EWD EGT limits part of a core/fcom-audit-fixes fix, and the A380X crossbleed valve supply fix of core/a380x-e1ec. The ELEC EMER CONFIG alert itself is on core/a380x-e1ec: merged with it, that alert must read the FWS signal of this branch (inhibited by ALL ENG FLAME OUT). The fire and ECAM features are described in the core/fire and core/ecam-fws manuals.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Status</b>           | Gear failures tested in the sim by the user: OK (2026-10-03). Brake / trim air failures and feed pump / crossfeed valve failures tested in the sim by the user: OK (2026-10-04); the trim air duct overhear / jammed valve alerts and the transfer pump failures with the fuel follow-ups too (2026-10-04). Clearer names: not sim-tested (labels only, checked by the a380.spec.ts unit tests). Engine failures: all tested on develop, the core branch itself was not sim-tested. Flameout / seizure / relight: OK 2026-10-05 and 2026-10-06 (two and four engines out). Auto relight, igniter indication, ground start with a failed igniter, stall / EGT / vibration, oil failures, FADEC network link and reverser unlocked: tested 2026-10-06; the three faults found then (restart after a shutdown, FADEC network link thrust, oil overhear) are fixed on this branch. HP fuel valve, restart after shutdown and reverse thrust: OK 2026-10-07. Core spike guard (E/WD N3 at the end of a relight), fuel filter clog, ENG MASTER FAULT light, SD start valve and the starter failure fix: OK 2026-10-08 (recorded). The other start, FADEC, thrust lever and reverser failures: not sim-tested (Rust, native and unit tests). Engine alerts 2026-10-08 (feature branch, recorded): THR LEVERS NOT SET, THRUST LOSS and T.O THRUST DISAGREE OK; OIL TEMP LO, the E/WD N1 and SD N3 red crosses, and the stall during a relight fix: not sim-tested; the N1 / FF / EGT part of the core spike guard: OK on develop 2026-10-09. The core branch itself was not sim-tested. |
| <b>Pictures</b>         | No pictures: the failures page, the ECAM alerts and the SD ENGINE page are the stock FBW displays.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

1. Landing gear sensor and actuator failures listed, ROLLOUT removed
2. Clearer failure names
3. Brake and trim air failures
4. Trim air duct overhear and jammed valve alerts
5. Feed tank pump and crossfeed valve failures
6. Transfer pump failures and fuel follow-ups
7. A380X engine failures (flameout, seizure, relight)
8. Automatic relight with both igniters, and the engine feed tank fuel draw
9. SD ENGINE page igniter indication
10. Engine ignition and start failures, FCOM ground start
11. HP fuel valve: no engine burning without a FADEC start
12. Engine oil failures (leak, filter clog, overhear)
13. Engine fuel filter clog, ENG MASTER FAULT light, SD start valve and N3 red cross
14. Engine stall, EGT overtemperature and vibration failures

15. FADEC, thrust lever and reverser failures

16. ENG THR LEVERS NOT SET and ENG OIL TEMP LO
17. FADEC thrust failures: ENG THRUST LOSS and ENG T.O THRUST DISAGREE

18. E/WD N1 red above 111 % with a red cross

## 1. Landing gear sensor and actuator failures listed, ROLLOUT removed

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 32 Landing Gear | **Status:** Tested in the sim by the user: OK (2026-10-03). Unit tests: a380.spec.ts.

### What it is for

The landing gear proximity sensor and jammed actuator failures (ids 32004 to 32025) were already simulated by the common FBW gear system and mapped in the A380X systems, but the flyPad listed only one of them, and with the wrong name: "uplock nose gear #1" failed the **right main gear** uplock sensor #1. All 18 failures are now listed, with the ids and names of the Rust failure map (the same as on the A32NX).

The **ROLLOUT** failure (ATA 22) only set an FCDC input that nothing reads (there is no steering control system yet). It is no longer listed; its id stays in the code so the C++ failure list keeps in step.

### What changed in the list

| Id             | Before                                                                  | Now                                                                                       |
|----------------|-------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| 32004          | not listed                                                              | Proximity sensor damage uplock nose gear #1                                               |
| 32005          | not listed                                                              | Proximity sensor damage downlock nose gear #2                                             |
| 32006          | Proximity sensor damage uplock nose gear #1 (but failed the right gear) | Proximity sensor damage uplock right gear #1                                              |
| 32007          | not listed                                                              | Proximity sensor damage downlock right gear #2                                            |
| 32008          | not listed                                                              | Proximity sensor damage uplock left gear #2                                               |
| 32009          | not listed                                                              | Proximity sensor damage downlock left gear #1                                             |
| 32010 to 32015 | not listed                                                              | Proximity sensor damage closed / opened nose, right, left gear door #1 / #2 (six entries) |
| 32020          | not listed                                                              | Nose gear jammed actuator                                                                 |
| 32021, 32022   | not listed                                                              | Left / Right main gears (body + wing) jammed actuator                                     |
| 32023          | not listed                                                              | Nose gear door jammed actuator                                                            |
| 32024, 32025   | not listed                                                              | Left / Right main gear doors jammed actuator                                              |
| 22001          | ROLLOUT (ATA 22)                                                        | not listed                                                                                |

**NOTE**  
A door *uplock* sensor ("closed ... door") detects the door closed, a door *downlock* sensor ("opened ... door") the door open. The 32021 / 32022 and 32024 / 32025 names come from the clearer names feature below: one failure jams the whole left or right main gear group.

### What you should see

| Situation | What you should see |
|-----------|---------------------|
|-----------|---------------------|

|                                                      |                                                                                                                                                      |
|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| A jammed gear actuator failure set, gear lever moved | That gear (or gear door) group stays where it was: the common FBW gear system freezes its actuator.                                                  |
| A proximity sensor failure set                       | That sensor gives its LGCIS a wrong signal. The gear logic and its indications are the existing FBW gear model: this branch only lists the failures. |
| ATA 22 list                                          | No ROLLOUT entry.                                                                                                                                    |

### How to use

1. Open flyPad > Failures > ATA 32 Landing Gear.
2. Pick the sensor or actuator failure by its name (the table above gives what each one fails) and activate it.
3. Deactivate it to clear the failure.

### How to test

| # | Do this                                                                                       | Expected result                                                                                                                                                                                   |
|---|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Open flyPad > Failures > ATA 32 Landing Gear.                                                 | The 12 "Proximity sensor damage ..." and 6 "... jammed actuator" entries are listed, among them "Proximity sensor damage uplock right gear #1" and "Proximity sensor damage uplock nose gear #1". |
| 2 | Open flyPad > Failures > ATA 22 Auto Flight.                                                  | No ROLLOUT entry (FMC-A, FMC-B, FMC-C, FCU 1, FCU 2 are still there).                                                                                                                             |
| 3 | In flight, gear down, activate <b>Nose gear jammed actuator</b> , then set the gear lever UP. | The nose gear does not retract; the main gears do.                                                                                                                                                |
| 4 | Deactivate the failure.                                                                       | The nose gear retracts.                                                                                                                                                                           |

## 2. Clearer failure names

|                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> flyPad > Failures   <b>Status:</b> Not sim-tested (labels only). Unit tests: a380.spec.ts. |
|-----------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The failure names were audited ATA by ATA against what the systems code fails (the Rust failure map, the C++ failure lists and the TypeScript consumers). Names that were misleading or misspelt now say what is failed. Only the labels change: the ids and the failures themselves are the same.

### Old name and new name

| ATA | Before                                                     | Now                                                               |
|-----|------------------------------------------------------------|-------------------------------------------------------------------|
| 21  | Foward Cargo Isolation Valve / Foward Cargo Extraction Fan | Forward Cargo Isolation Valve / Forward Cargo Extraction Fan      |
| 24  | TR ESS                                                     | ESS TR                                                            |
| 24  | TR APU                                                     | APU TR                                                            |
| 24  | AC 247XP                                                   | AC EHA (247XP)                                                    |
| 24  | DC 247PP                                                   | DC EHA (247PP)                                                    |
| 24  | DC 309PP                                                   | DC APU (309PP)                                                    |
| 26  | Engine 1 Loop A ... Engine 4 Loop B                        | Engine 1 fire detection loop A ... Engine 4 fire detection loop B |

|    |                                                |                                                       |
|----|------------------------------------------------|-------------------------------------------------------|
| 26 | APU Loop A / APU Loop B                        | APU fire detection loop A / APU fire detection loop B |
| 26 | Main Landing Gear Bay Loop A / B               | MLG bay fire detection loop A / B                     |
| 32 | LGCIU 1 Power supply, LGCIU 2 Power supply     | LGCIS 1 power supply, LGCIS 2 power supply            |
| 32 | LGCIU 1 Internal error, LGCIU 2 Internal error | LGCIS 1 internal error, LGCIS 2 internal error        |
| 32 | Main left / right gear jammed actuator         | Left / Right main gears (body + wing) jammed actuator |
| 32 | Main left / right gear door jammed actuator    | Left / Right main gear doors jammed actuator          |
| 34 | RA SYS A Interrupted (B, C)                    | RA SYS A antenna interrupted (B, C)                   |
| 34 | RA SYS A Direct Coupling (B, C)                | RA SYS A antenna direct coupling (B, C)               |
| 34 | TERR 1 / TERR 2                                | TERR SYS 1 / TERR SYS 2                               |

Limitations and why

| Limitation                                                                                        | Why                                                                                                                                                | What to do                                                            |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| "AC ESS" (24105) and "AC EMER" (24104) keep their names.                                          | The A380X electrical model calls the real AC ESS busbar "AC ESS SHED" and the AC EMER busbar "AC ESS"; the labels already follow the real busbars. | Use "AC ESS" for the AC ESS busbar, "AC EMER" for the AC EMER busbar. |
| "XPDR 2" (34004) and "NSS AVNCS ANSU 2" (46002) keep their names but fail nothing on this branch. | Nothing reads them on master. They are wired on <code>core/a380x-elec</code> .                                                                     | Test them with that branch.                                           |

How to use

1. Open flyPad > Failures and pick the failure by its new name (table above).

How to test

| # | Do this                                           | Expected result                                                                                                                                      |
|---|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Open flyPad > Failures > ATA 24 Electrical Power. | The entries read "ESS TR", "APU TR", "AC EHA (247XP)", "DC EHA (247PP)", "DC APU (309PP)".                                                           |
| 2 | Open ATA 26 Fire Protection.                      | The loop failures read "Engine 1 fire detection loop A" ... "MLG bay fire detection loop B".                                                         |
| 3 | Open ATA 32 Landing Gear and ATA 34 Navigation.   | "LGCIS 1 power supply" ... "LGCIS 2 internal error"; "RA SYS A antenna interrupted", "RA SYS A antenna direct coupling", "TERR SYS 1", "TERR SYS 2". |
| 4 | Open ATA 21 Air Conditioning.                     | "Forward Cargo Isolation Valve" and "Forward Cargo Extraction Fan" are spelt right.                                                                  |
| 5 | Activate "ESS TR" with the aircraft powered.      | The ESS TR fails, as "TR ESS" did before (same id 24002).                                                                                            |

3. Brake and trim air failures

|                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> flyPad > Failures > ATA 32 and ATA 21   <b>Status:</b> Tested in the sim by the user: OK (2026-10-04); the brake leak works but shows nothing on the SD HYD page. |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## What it is for

The A380X hydraulic and air conditioning models already had brake leak and trim air faults, but the flyPad had no failure for them. Eleven failures are now listed (same ids as on the A32NX for the brakes), and a spec checks that every id of the systems failure map is listed with its label.

| flyPad name (ATA)                                                                                | What it fails                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Brakes NORM circuit leak (green hydraulic) (32)                                                  | The NORM brakes are fed by the GREEN system in this model: GREEN fluid leaks out (0.1 gal/s) while the circuit is pressurised.                                                                                       |
| Brakes ALTN circuit leak (yellow hydraulic) (32)                                                 | The ALTN brakes (with the brake accumulator) are fed by the YELLOW system: YELLOW fluid leaks out while pressurised.                                                                                                 |
| Brakes ALTN accumulator gas leak (32)                                                            | The ALTN brake accumulator loses its gas charge: the stored brake pressure drops when the YELLOW system is not pressurised.                                                                                          |
| Cockpit / Main deck zone 1 / Upper deck zone 1 / Forward cargo trim air valve jammed (21)        | The trim air valve of that zone stays where it was when the failure was set.                                                                                                                                         |
| Cockpit / Main deck zone 1 / Upper deck zone 1 / Forward cargo duct overheat (hot trim air) (21) | 200 deg C air is blown into the zone duct while its hot air valve is open. The zone gets too hot and the controller closes the trim air valves; HOT AIR OFF stops the overheat (A380 FCOM COND DUCT OVHT procedure). |

## Limitations and why

| Limitation                                                 | Why                                                                                                                                                                 | What to do                                                      |
|------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| No ECAM alert and no SD indication for the brake failures. | The SD HYD page has no brake leak indication. The trim air failures now have their alerts and SD marks: see "Trim air duct overheat and jammed valve alerts" below. | Watch the hydraulic quantity / pressure and the brake pressure. |
| A full MSFS restart is needed after an update.             | The systems WASM module changes.                                                                                                                                    | Restart the sim after installing.                               |

## How to use

1. Brakes: flyPad > Failures > ATA 32 Landing Gear, the three "Brakes ..." entries.
2. Trim air: flyPad > Failures > ATA 21 Air Conditioning, the "... trim air valve jammed" and "... duct overheat (hot trim air)" entries.

## How to test

| # | Do this                                                                                                                                | Expected result                                                                                                |
|---|----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, four engines running (GREEN and YELLOW pressurised). Activate <b>Brakes NORM circuit leak (green hydraulic)</b> . | The GREEN system loses fluid; YELLOW is not affected. Nothing is shown for the leak itself on the SD HYD page. |
| 2 | Deactivate it, activate <b>Brakes ALTN circuit leak (yellow hydraulic)</b> .                                                           | The YELLOW system loses fluid; GREEN is not affected.                                                          |
| 3 | Set the parking brake, then stop the engines (YELLOW no longer pressurised). Activate <b>Brakes ALTN accumulator gas leak</b> .        | The brake pressure held by the accumulator drops.                                                              |
| 4 | In flight, HOT AIR pushbuttons ON, activate <b>Cockpit duct overheat (hot trim air)</b> . Open the SD COND page.                       | The cockpit zone gets hotter; then the trim air valves close. Setting HOT AIR OFF stops the overheat.          |

|   |                                                                                                |                                                                                                                                    |
|---|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| 5 | Activate <b>Cockpit trim air valve jammed</b> , then change the cockpit temperature selection. | The cockpit trim air valve no longer moves: the cockpit temperature stops following the selection; the other zones still regulate. |
|---|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|

## 4. Trim air duct overheat and jammed valve alerts

**Aircraft:** A380X | **Where:** overhead AIR panel (HOT AIR 1 / 2, PACK 1 / 2); E/WD, STATUS; SD COND page | **Status:** Tested in the sim by the user: OK (2026-10-04). Rust tests (air\_conditioning), unit tests: CondTrimAirFlags.spec.ts, CondTrimAirMarks.spec.ts.

### What it is for

The trim air failures above now give the alerts of the A380 FCOM (PRO-ABN-ECAM-10-21-10). The temperature controller monitors each trim air duct and valve: a duct above 70 deg C for 1.2 s is an overheat, latched until its HOT AIR pushbutton is set OFF; a valve that does not follow its demand is jammed. The FWS reads both from the controller and raises:

- **COND DUCT OVHT** (master caution, single chime, FAULT light in the HOT AIR pushbutton, SD COND page) with the CKPT DUCT OVHT, CABIN DUCT OVHT and FWD CARGO DUCT OVHT cases, the deferred procedure **WHEN DUCT OVHT OUT**, and its STATUS lines (INOP SYS, CABIN TEMP REGUL DEGRADED, FWD CRG TEMP REGUL DEGRADED).
- **COND FWD CARGO TEMP REGUL FAULT** for a jammed forward cargo trim air valve: CARGO TRIM AIR VLV FAULT, CARGO TEMP ... MONITOR, STATUS INFO FWD CRG TEMP REGUL DEGRADED (SD COND page only: no chime, no master light).
- SD COND page: the amber OVHT mark of an overheated cockpit or cabin zone duct and the trim air valve mark of a jammed valve (before: never shown).

### What you should see

| Situation                                | What you should see                                                                                                                                                        |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cockpit duct overheat                    | COND DUCT OVHT, CKPT DUCT OVHT: HOT AIR 2 ... OFF; if the hot air valve stays open (HOT AIR JAMMED OPEN): PACK 2 ... OFF. HOT AIR 2 FAULT light, OVHT on the SD COND page. |
| Main deck zone duct overheat             | CABIN DUCT OVHT: HOT AIR 1 ... OFF (HOT AIR 2 for an upper deck zone); if jammed open, PACK 1 (2) ... OFF; CARGO TEMP ... MONITOR.                                         |
| Forward cargo duct overheat              | FWD CARGO DUCT OVHT: HOT AIR 1 ... OFF; if jammed open, PACK 1 ... OFF.                                                                                                    |
| Overheat gone (duct cooled, HOT AIR OFF) | Deferred procedure WHEN DUCT OVHT OUT: HOT AIR 1 (2) ... ON, and PACK 1 (2) ... ON if it was switched off.                                                                 |
| Forward cargo trim air valve jammed      | COND FWD CARGO TEMP REGUL FAULT; STATUS INFO FWD CRG TEMP REGUL DEGRADED; the valve mark on the SD COND page.                                                              |

### Limitations and why

| Limitation                                                                  | Why                                                                                                                                  | What to do |
|-----------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|------------|
| Which HOT AIR valve supplies which zone is a design choice.                 | The FCOM does not say it: the main deck zones and the forward cargo are on HOT AIR 1, the cockpit and the upper deck on HOT AIR 2.   | -          |
| A jammed forward cargo valve counts as a degraded regulation (no INOP SYS). | Design choice: the aircraft has two forward cargo trim air valves and the FCOM says a jammed valve loses the "optimized" regulation. | -          |



|                                                                                         |                                                                                                       |                                                 |
|-----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| The alerts are inhibited during the takeoff and the landing (FWS phases 3 to 7, 9, 10). | The FCOM gives the inhibition as a figure: that of COND HOT AIR FAULT / FWD CARGO ISOL FAULT is used. | Test on the ground before takeoff or in cruise. |
| A full MSFS restart is needed after an update.                                          | The systems WASM module changes.                                                                      | Restart the sim after installing.               |

## How to use

1. Open flyPad > Failures > ATA 21 Air Conditioning and activate a "... duct overheat (hot trim air)" or a "... trim air valve jammed" failure.
2. Follow the ECAM with the HOT AIR and PACK pushbuttons of the overhead AIR panel; check the SD COND page.
3. Deactivate the failure; when the duct has cooled, follow WHEN DUCT OVHT OUT.

## How to test

| # | Do this                                                                                                                               | Expected result                                                                                                                                                                          |
|---|---------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X in cruise (or on the ground before takeoff), packs and HOT AIR 1 / 2 ON. Activate <b>Cockpit duct overheat (hot trim air)</b> . | After the duct passes 70 deg C: master caution, E/WD COND DUCT OVHT, CKPT DUCT OVHT with HOT AIR 2 ... OFF; HOT AIR 2 FAULT light; SD COND page with the amber OVHT mark on the cockpit. |
| 2 | Set HOT AIR 2 OFF. Open the STATUS page.                                                                                              | The line is done; STATUS INOP SYS and INFO lines of COND DUCT OVHT.                                                                                                                      |
| 3 | Deactivate the failure and wait for the duct to cool.                                                                                 | The alert goes; WHEN DUCT OVHT OUT asks HOT AIR 2 ... ON.                                                                                                                                |
| 4 | Activate <b>Main deck zone 1 duct overheat (hot trim air)</b> .                                                                       | COND DUCT OVHT, CABIN DUCT OVHT with HOT AIR 1 ... OFF and CARGO TEMP ... MONITOR.                                                                                                       |
| 5 | Deactivate it. Activate <b>Forward cargo trim air valve jammed</b> , then change the cargo temperature selection.                     | COND FWD CARGO TEMP REGUL FAULT (no chime): CARGO TRIM AIR VLV FAULT, CARGO TEMP ... MONITOR; STATUS INFO FWD CRG TEMP REGUL DEGRADED.                                                   |
| 6 | Activate <b>Cockpit trim air valve jammed</b> and change the cockpit temperature selection.                                           | The trim air valve mark appears on the cockpit zone of the SD COND page.                                                                                                                 |

## 5. Feed tank pump and crossfeed valve failures

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 28 Fuel; overhead FUEL panel; SD FUEL | **Status:** Tested in the sim by the user: OK (2026-10-04), after the fix that holds the MSFS pump / valve switch.

### What it is for

Twelve new failures: the main and standby pump of each feed tank and the four crossfeed valves. The FUEL panel pushbuttons now set a selection, and the systems host moves the MSFS pump or valve switch from it: a failed pump is held off, a jammed valve is held where it was. The FAULT lights, the SD FUEL page and the FCOM alerts compare the selection with the real state (A380 FCOM PRO-ABN-ECAM-10-28, DSC-28-20).

| flyPad name (ATA 28)                                                    | What it fails                            |
|-------------------------------------------------------------------------|------------------------------------------|
| Feed tank 1 main pump ... Feed tank 4 main pump                         | That main pump stops (held off).         |
| Feed tank 1 standby pump ... Feed tank 4 standby pump                   | That standby pump stops (held off).      |
| Crossfeed valve 1 jammed in place ... Crossfeed valve 4 jammed in place | That crossfeed valve stays where it was. |

## What you should see

| Situation                                       | What you should see                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Feed pump failed, its pushbutton ON             | FAULT light in the pushbutton; the pump amber on the SD FUEL page.                                                                                                                                                                                                                                                                      |
| One main pump failed                            | <b>FUEL FEED TK 1 MAIN PMP FAULT</b> (tank 1 to 4), SD FUEL page; procedure FEED TK 1 MAIN PMP ... OFF; STATUS INOP SYS FEED TK 1 MAIN PMP.                                                                                                                                                                                             |
| One standby pump failed                         | <b>FUEL FEED TK 1 STBY PMP FAULT</b> , crew awareness; STATUS MORE: REDUND LOSS FEED TK 1 STBY PMP.                                                                                                                                                                                                                                     |
| Main and standby pumps of one tank failed       | <b>FUEL FEED TK 1 MAIN + STBY PMPs FAULT</b> (replaces the two single alerts). After takeoff: CROSSFEED 1 ON, CROSSFEED 2 ON (CROSSFEED 3 and 4 for tanks 3 and 4), FEED TK 1 MAIN PMP OFF, FEED TK 1 STBY PMP OFF, AVOID NEG G LOAD; before takeoff only the two pump lines. STATUS: INOP SYS FEED TK 1 PMPs, FEED TK 1 BY GRVTY ONLY. |
| Crossfeed valve jammed and its pushbutton moved | The valve disagrees with its pushbutton: FAULT light, valve amber on the SD FUEL page, <b>FUEL CROSSFEED VLV 1 FAULT</b> (crew awareness), STATUS INOP SYS CROSSFEED VLV 1; if the valve is stuck closed and engine 1 is not running, FEED TK 1 NOT USABLE.                                                                             |

## Limitations and why

| Limitation                                                      | Why                                                                                                                                              | What to do                                      |
|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| The alerts are inhibited during the takeoff and the landing.    | The FCOM gives the inhibition as a figure: the one of JETTISON VLV NOT CLOSED is used (FWS flight phases 4 to 7, 9 and 10).                      | Test on the ground before takeoff or in cruise. |
| A pump turned OFF by the crew also gives the FAULT alert.       | FCOM: a pump is faulty when it runs at low pressure, is abnormally not running, or is turned off by the crew (except in flight phases 1 and 12). | Expected behaviour.                             |
| The gravity feed ceiling (MAX FL 280, 50/MEA) is not simulated. | No gravity feed model.                                                                                                                           | None.                                           |
| A full MSFS restart is needed after an update.                  | The cockpit behaviour XML changes.                                                                                                               | Restart the sim after installing.               |

## How to use

1. Open flyPad > Failures > ATA 28 Fuel and activate a pump or crossfeed valve failure.
2. Follow the ECAM procedure with the overhead FUEL panel pushbuttons; check the SD FUEL page.
3. Deactivate the failure to restore the pump or valve.

## How to test

| # | Do this                                                                                                                    | Expected result                                                                                                                          |
|---|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, engines running, all feed pumps ON, crossfeed valves in their normal position. Open the SD FUEL page. | No FAULT light, no fuel alert.                                                                                                           |
| 2 | Activate <b>Feed tank 1 main pump</b> .                                                                                    | FAULT light in the FEED TK 1 MAIN pushbutton, pump amber on the SD, E/WD: FUEL FEED TK 1 MAIN PMP FAULT with FEED TK 1 MAIN PMP ... OFF. |
| 3 | Set the FEED TK 1 MAIN pushbutton OFF. Open the STATUS page.                                                               | The procedure line is done; STATUS INOP SYS: FEED TK 1 MAIN PMP.                                                                         |

|   |                                                                                                          |                                                                                                                                                                   |
|---|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | Set it ON again and also activate <b>Feed tank 1 standby pump</b> .                                      | The single alerts are replaced by FUEL FEED TK 1 MAIN + STBY PMPs FAULT (on the ground: the two pump OFF lines); STATUS: FEED TK 1 PMPs, FEED TK 1 BY GRVTY ONLY. |
| 5 | Deactivate both. Activate <b>Feed tank 2 standby pump</b> only.                                          | FUEL FEED TK 2 STBY PMP FAULT; STATUS MORE: REDUND LOSS FEED TK 2 STBY PMP.                                                                                       |
| 6 | Deactivate it. Activate <b>Crossfeed valve 1 jammed in place</b> , then move the CROSSFEED 1 pushbutton. | The valve does not move: FAULT light, valve amber on the SD, FUEL CROSSFEED VLV 1 FAULT, STATUS INOP SYS CROSSFEED VLV 1.                                         |
| 7 | Deactivate the failure.                                                                                  | The valve follows its pushbutton again; the alert clears.                                                                                                         |

## 6. Transfer pump failures and fuel follow-ups

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 28 Fuel; overhead FUEL panel; E/WD, STATUS; SD FUEL page | **Status:** Tested in the sim by the user: OK (2026-10-04). Unit tests: FuelPumpValveFlags.spec.ts, FuelPumpsAndValves.spec.ts, failable-fuel-switches.spec.ts.

### What it is for

Eight new failures of the transfer pumps that the FBW fuel transfers use: **L outer tank pump, R outer tank pump, L mid tank fwd pump, R mid tank fwd pump, L inner tank fwd pump, R inner tank fwd pump, Trim tank L pump, Trim tank R pump**. A failed pump is held off whatever the fuel system commands. The pushbutton FAULT light, the amber pump on the SD FUEL page and the FUEL ... PMP FAULT alerts of the A380 FCOM (PRO-ABN-ECAM-10-28) come as soon as a pump fails, runs in an empty tank with its pushbutton ON, or is switched OFF by the crew (except in flight phases 1 and 12). A repaired pump follows the automatic transfers again.

- **FUEL FEED TK 1(2)(3)(4) LEVEL LO** now triggers for a single low feed tank: the four tanks shared one 30 s confirmation, so only all four low together could trigger it.
- The **CROSSFEED** pushbutton OPEN light now follows its valve.
- The sensed CROSSFEED ... ON and ALL FEED TKs PMPs ON items of the ECAM procedures tick on the pushbuttons, even with a jammed valve or a failed pump.
- Corrupted degree signs in the ECAM texts are fixed.

### What you should see

| Situation                          | What you should see                                                                                                                                                                                                                                    |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L outer tank pump failed           | FAULT light; <b>FUEL L OUTR TK PMP FAULT</b> : L OUTR TK PMP ... OFF; STATUS: OUTR TKs XFR BY GRVTY ONLY, INOP SYS L OUTR TK PMP.                                                                                                                      |
| L inner (mid) tank fwd pump failed | <b>FUEL L INR (MID) TK FWD PMP FAULT</b> : L INR (MID) TK FWD PMP ... OFF; STATUS INOP SYS L INR (MID) TK FWD PMP.                                                                                                                                     |
| Its aft pump switched OFF too      | <b>FUEL L INR (MID) TK FWD+AFT PMPs FAULT</b> replaces the single alerts: both pumps ... OFF; L INR (MID) TK NOT USABLE; INOP SYS L INR (MID) TK PMPs.                                                                                                 |
| Trim tank L and R pumps failed     | <b>FUEL TRIM TK L+R PMPs FAULT</b> : both pumps ... OFF, PITCH ATT < 3° FOR GRVTY FWD XFR, TRIM TK FEED ... OPEN, TRIM TK : 2300 KG MAX NOT USABLE; STATUS: TRIM TK XFR BY GRVTY ONLY, TRIM TK GRVTY XFR : AROUND 3000 KG / HR, INOP SYS TRIM TK PMPs. |
| One feed tank low                  | FUEL FEED TK n LEVEL LO for that tank after 30 s.                                                                                                                                                                                                      |
| CROSSFEED pushbutton ON            | The OPEN light comes on when the valve is open.                                                                                                                                                                                                        |

## Limitations and why

| Limitation                                                   | Why                                                                           | What to do                                      |
|--------------------------------------------------------------|-------------------------------------------------------------------------------|-------------------------------------------------|
| The aft gallery pumps (inner and mid tank aft) cannot fail.  | They never run in the simulation; switching them OFF still gives their alert. | -                                               |
| No gravity transfer.                                         | Not simulated: the STATUS gravity lines are information only.                 | None.                                           |
| The alerts are inhibited during the takeoff and the landing. | Same inhibition as the feed pump alerts above.                                | Test on the ground before takeoff or in cruise. |
| A full MSFS restart is needed after an update.               | The cockpit behaviour XML changes (OPEN light).                               | Restart the sim after installing.               |

## How to use

1. Open flyPad > Failures > ATA 28 Fuel and activate one of the eight transfer pump failures.
2. Follow the ECAM with the overhead FUEL panel; check the SD FUEL page.
3. Deactivate the failure to restore the pump; it follows the automatic transfers again.

## How to test

| # | Do this                                                                                                                                | Expected result                                                                                                                                 |
|---|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground before takeoff (or in cruise) with fuel in the outer tanks, all fuel pumps ON. Activate <b>L outer tank pump</b> . | FAULT light in the L OTR TK pushbutton, pump amber on the SD FUEL page, master caution, E/WD FUEL L OTR TK PMP FAULT with L OTR TK PMP ... OFF. |
| 2 | Set the L OTR TK pushbutton OFF. Open STATUS.                                                                                          | The line is done; STATUS: OTR TKs XFR BY GRVTY ONLY, INOP SYS L OTR TK PMP.                                                                     |
| 3 | Deactivate it and set the pushbutton ON. Activate <b>L inner tank fwd pump</b> , then set the L INR TK AFT pushbutton OFF.             | FUEL L INR TK FWD+AFT PMPs FAULT replaces the single alert; L INR TK NOT USABLE.                                                                |
| 4 | Restore everything. Activate <b>Trim tank L pump</b> and <b>Trim tank R pump</b> .                                                     | FUEL TRIM TK L+R PMPs FAULT with its procedure; the degree sign of PITCH ATT < 3° is shown correctly.                                           |
| 5 | Restore everything. Set a CROSSFEED pushbutton ON.                                                                                     | Its OPEN light comes on with the valve.                                                                                                         |

## 7. A380X engine failures (flameout, seizure, relight)

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 72 Engine; pedestal ENG MASTER 1-4 and ENG START selector; overhead AIR panel X BLEED selector; E/WD, STATUS, SD ENGINE page | **Status:** Sim-tested OK on develop, recorded: 2026-10-05 ground card T1-T3 and in-flight card T1-T3 (windmilling, quick and crossbleed relights without APU), earlier T1, T7, T8 (relight with APU bleed) and T9; 2026-10-06 relight batch (quick relight of engine 4 levers in CL: stops at idle, then accelerates), Flight A S2 T2 (starter duct vents after the start), S4 T2 (two engines out, windmilling relight at 255 kt) and S6 T1 (all engines out: ALL ENG FLAME OUT, RAT, no ELEC EMER CONFIG on develop, relight). The core spike guard (the MSFS core jump at the end of a relight, below): sim-tested OK on develop 2026-10-08 (E/WD N3 held at 61.6 % while MSFS jumped to 96.8 %); its N1 / FF / EGT hold: OK on develop 2026-10-09 (FL150 relight: E/WD N1 held at 26.4 % and FF at 615 while MSFS N1 went to 62.5 %). The stall during a relight fix: not sim-tested (installed 2026-10-08, no visible effect expected; native test R12). Rust tests (a380\_systems engine\_failure.rs, engine\_out\_aircraft\_tests.rs, pneumatic.rs, hydraulic), native tests (relight\_start\_test, engine\_start\_throttle\_hold\_test), unit tests EngineFailAlerts.spec.ts, FwsAbnormalSensedItems.spec.ts, a380.spec.ts. The core branch itself was not sim-tested.

## What it is for

The A380X port of the A32NX engine failures. Eight new failures in the flyPad chapter ATA 72 Engine. A **flameout** cuts the engine fuel once: the crew relights the engine with ENG MASTER OFF then ON inside the in-flight relight envelope

of the A380 FCOM. A **seizure** also stops the core: no relight while the failure is active. The FWS gives the FCOM ENG FAIL, ENG SHUT DOWN, TWO ENGS OUT and ALL ENG FLAME OUT alerts for the four engines.

| Id          | flyPad failure (ATA 72 Engine)                      | What the code does                                                                                                                                                                                                                                            |
|-------------|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 72000-72003 | Engine 1 (2)(3)(4) flameout (crew relight possible) | Cuts the engine fuel (latched, MSFS fuel valve 60-63). The engine runs down and windmills. ENG MASTER OFF then ON inside the envelope relights it; it then runs normally while the failure stays listed. Deactivate and activate it again for a new flameout. |
| 72010-72013 | Engine 1 (2)(3)(4) seizure (no relight)             | Cuts the fuel and stops the core (N3). No relight while the failure is active; once it is cleared the engine relights by the normal procedure.                                                                                                                |

## What changed after the first sim tests

- **No N3 overshoot at the end of an in-flight start.** The three in-flight relights of 2026-10-05 took N3 from 61 % to 97.5 % for 5 to 7 s with the levers in CL: while the engine was out the FADEC thrust loop wound the MSFS throttle up to 100 %. Now the MSFS throttle stays at idle while the engine is out or starting and until it runs at idle, then the engine accelerates to the lever or A/THR demand (A380 FCOM DSC-70-30 "FADEC stabilizes the engine at idle speed"; ENG RELIGHT IN FLIGHT: THR LEVER IDLE, then WHEN IDLE REACHED).
- **A compressor stall no longer ends that idle hold early.** The hold ends when the commanded N1 reaches idle; with the "Engine n compressor stall" failure active at the end of a relight, the stall N1 loss (up to 15 %) was counted in the commanded N1 and the hold ended about 0.8 s early. The stall N1 loss is now taken out of that check (native test R12: FL200, 300 kt relight, levers in CL, with a stall).
- **TWO ENGS OUT STATUS** lists the FCOM lines PART SPLRs, PART L/G RETRACTION, G (Y) HYD SYS, PACK 1 (2) and one GEN line for the two generators lost (GEN 1+2, 3+4 on the same side; GEN 1+3, 1+4, 2+3, 2+4 on opposite sides).
- **ALL ENG FLAME OUT:** its RAT MAN ON line is sensed (it turns green when the RAT is deployed), it has the missing L/G GRVTY (EXTN 2 MIN) DOWN line before a forced landing, and it inhibits ELEC EMER CONFIG as in the FCOM. The ELEC EMER CONFIG alert itself is on `core/a380x-elec`: this branch only computes the inhibited signal, so the inhibition shows once both branches are merged.
- **ENG RELIGHT IN FLIGHT** shows the single engine limits MAX GUARANTEED ALTITUDE : 30000 FT and MIN SPEED FOR WINDML RELIGHT : 260 KT (FCOM I.174902-174904).
- **No starter air without a source.** A starter assisted relight was granted with no APU or crossbleed air: the air trapped in a stopped engine bleed duct and the slowly venting starter duct (about 45 s) kept the starter pressurised. The duct of an engine with no air source now empties within about 3 s, and the starter duct is empty (below 5 PSIG) about 3 s after the start valve closes (design values: the FCOM gives none).
- **X BLEED selector OPEN opens the crossbleed valves.** Their manual control used the A320 DC ESS SHED busbar, which the A380 does not have; it now uses DC ESS (A380 FCOM DSC-36-30). The crossbleed starter air of a starter assisted relight depends on it.
- **The FADECs read the ENG START selector.** They read a non-existent variable (always 0) and never saw the selector at IGN START; a static check now guards the variable names.
- **Each FADEC reads the LGCIU of its side:** engines 1 and 2 LGCIU 1, engines 3 and 4 LGCIU 2 (design choice, the FCOM does not say). Before, the on-ground input of engines 3 and 4 was read past the end of the two-LGCIU list.
- **ENG MASTER OFF closes the HP fuel valve** and the engine stops burning at once: see "HP fuel valve" below.

## FCOM references

| A380 FCOM (a380_fcom.txt) | What it says | Used for |
|---------------------------|--------------|----------|
|---------------------------|--------------|----------|

|                                                                             |                                                                                                                                                                                                                               |                                             |
|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|
| PRO-ABN-ECAM-10-70 ENG RELIGHT IN FLIGHT, I.174864-175027, chart PDF p.5854 | Single engine: "MAX GUARANTEED ALTITUDE : 30000 FT", "MIN SPEED FOR WINDMILL RELIGHT : 260 KT"; multiple engines: 28 000 ft and 250 kt; ENG START SEL IGN START; "Engine must relight within 30 s after fuel flow increases". | The relight envelope and the 30 s attempt   |
| DSC-70-30 IN FLIGHT, I.113552-113575                                        | Engine start valve opens "if N2 is below 11 %, or if the aircraft airspeed (CAS) is below 260 kt"; it closes above 58.4 %.                                                                                                    | The start valve in flight and for a restart |
| DSC-70-80-30-20, I.112539-112571                                            | Quick relight: MASTER ON-OFF-ON within 30 s, "provided that N2 is greater than 45 %"; starter assisted below 11 % N2, windmilling at or above 260 kt; during a windmilling start the FADEC disconnects both hydraulic pumps.  | Quick relight, start type, engine pumps     |
| ENG 1(2)(3)(4) FAIL, I.171712-171981                                        | Triggered when the engine is not running; "If more than two engines failed: ENG (AFFECTED) RELIGHT PROC ... APPLY" (I.171871).                                                                                                | ENG FAIL and RELIGHT PROC APPLY             |
| ENG 1(2)(3)(4) SHUT DOWN, I.172693-172806                                   | Shown when the ENG MASTER is OFF or the ENG FIRE pb pushed; STATUS INOP SYS BTM (engine 2 or 3), CAT 3 DUAL and CAT 3 SINGLE ONLY if the APU is off.                                                                          | ENG SHUT DOWN STATUS                        |
| ENG TWO ENGS OUT ON SAME / OPPOSITE SIDE, I.175216-175635                   | Two engines failed on the same side / on opposite sides, LAND ANSA, STATUS (CAT 2 / CAT 3 INOP, CAT 2 ONLY).                                                                                                                  | The two cautions                            |
| ENG ALL ENG FLAME OUT, I.114538                                             | The title of the all-engines procedure.                                                                                                                                                                                       | Title of the old ALL ENGINES FAILURE        |

The relight envelope, read off the chart (IAS, flight level):

| Zone                              | Where                                                                   | Needs                                                                                                           |
|-----------------------------------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| 3, windmilling start              | 260-340 kt up to FL300 (multiple engines out: from 250 kt, up to FL280) | ENG START IGN START, ENG MASTER OFF then ON; the start valve stays closed                                       |
| 1 and 2, starter assisted relight | 150-260 kt up to FL200; 185-260 kt from FL200 to FL250                  | ENG START IGN START, ENG MASTER OFF then ON, and starter air: APU BLEED, or X BLEED OPEN with the other engines |
| 2 (and 3), quick relight          | 220-260 kt up to FL200 (and zone 3), N3 above 45 %                      | ENG MASTER OFF then ON within 30 s, at any ENG START position                                                   |

## What you should see

| Situation                            | What you should see                                                                                                                                                                                                                 |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Flameout in flight                   | N3, EGT and FF run down, FF 0, N1 / N3 settle at the windmill values. Amber <b>ENG n FAIL</b> with its FCOM procedure lines (THR LEVER n IDLE reads its own lever; ENG n RELIGHT PROC CONSIDER).                                    |
| ENG MASTER OFF in flight             | ENG n FAIL goes, <b>ENG n SHUT DOWN</b> comes with its STATUS: INOP SYS BTM for engine 2 or 3, CAT 3 DUAL and CAT 3 SINGLE ONLY with the APU off; the engine 4 bleed INOP comes from engine 4 (it came from another engine before). |
| Windmilling relight (zone 3, no APU) | At the MASTER ON the fuel comes back; engine at idle in about 35 s; the start valve stays closed; both engine pumps of that engine are off-loaded during the start.                                                                 |

|                                                                                  |                                                                                                                                                                                                                                                              |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Crossbleed relight (zone 1, X BLEED OPEN)                                        | The start valve opens and the starter is pressurised in about 0.5 s; engine at idle in about 35 s; the start valve closes at N3 about 58 %.                                                                                                                  |
| Quick relight (ENG START at NORM)                                                | MASTER OFF then ON at once: the engine relights from about 75 % N3, at idle in about 25 s.                                                                                                                                                                   |
| Any in-flight relight with the levers in CL (A/THR ON)                           | N3 reaches idle (about 62 %) and holds there until the engine runs, then rises in about 5 s to the N3 of the other engines; it does not go more than 1-2 % above them.                                                                                       |
| ENG RELIGHT IN FLIGHT procedure                                                  | Single engine: MAX GUARANTEED ALTITUDE : 30000 FT, MIN SPEED FOR WINDML RELIGHT : 260 KT; multiple engines: 28000 FT and 250 KT.                                                                                                                             |
| Two engines failed                                                               | ENG TWO ENGS OUT ON SAME SIDE or ON OPPOSITE SIDE caution with LAND ANSA; the multiple-engine envelope applies. STATUS: PART SPLRs, PART L/G RETRACTION, G (Y) HYD SYS, PACK 1 (2), the GEN line of the two generators lost, CAT 2 / CAT 3 INOP, CAT 2 ONLY. |
| Three engines failed                                                             | ENG FAIL shows RELIGHT PROC APPLY instead of CONSIDER.                                                                                                                                                                                                       |
| All four engines failed                                                          | Red ENG ALL ENG FLAME OUT (the FCOM title; it was ALL ENGINES FAILURE). RAT MAN ON turns green once the RAT is out; L/G GRVTY (EXTN 2 MIN) DOWN before a forced landing. With core/a380x-elec merged: no ELEC EMER CONFIG while it is shown.                 |
| Starter assisted relight below 260 kt without APU BLEED and with X BLEED at AUTO | No starter air: the engine does not relight (the starter duct is empty). Set X BLEED OPEN.                                                                                                                                                                   |
| On the ground                                                                    | A failed engine starts again as a normal start, with APU air (ENG START IGN START, MASTER OFF then ON). Two engines shut down for taxi give no TWO ENGS OUT caution.                                                                                         |

## Design choices

- The envelope governs **every** in-flight relight, also after a crew shutdown without any failure: MSFS would otherwise relight anywhere.
- The quick relight also works in zone 3, where the windmill alone lights the engine.
- A windmilling engine keeps  $N3 = 11 \% \times IAS / 260 \text{ kt}$  and  $N1 = 1.5 \times N3$  (the FCOM gives no values).
- FBW models the Trent 972 (three spools): the FCOM N2 (GP7200 core) is read on the Trent N3. ENG FAIL keeps the  $N3 < 50 \%$  threshold of FBW (the FCOM says N2 below 61 %).
- TWO ENGS OUT is shown only with exactly two engines out (with three, ENG FAIL RELIGHT PROC APPLY; with four, ALL ENG FLAME OUT).
- During a windmilling start the two engine pumps are off-loaded (depressurised), not disconnected: the ENG PUMPS DISC clutch cannot be reconnected in flight.
- Once a relight is granted in flight the FADEC holds the MSFS core at 25 % N2: MSFS only burns above 20 % N2, and its starter only turns with the APU bleed, so without it a windmilling or crossbleed relight would never burn.
- The throttle hold of an in-flight start (idle until the engine runs) works in flight only; a fallback ends it for a start that settles just below the FBW idle N3.
- With the ENG MASTER OFF in flight the MSFS core runs down to the windmill speed: also so on develop, not a fault.

## Limitations and why

| Limitation | Why | What to do |
|------------|-----|------------|
|------------|-----|------------|



|                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                     |
|----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| ENG TWO ENGS OUT ON OPPOSITE SIDE has no PACK line in its procedure. | Not added yet (FCOM I.175519); its STATUS has the PACK 1 (2) INOP SYS line.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | -                                   |
| A short yaw when a relit engine comes back to idle.                  | At the end of a start the MSFS engine model jumps its core from its low idle (60 % corrected) to the top of its fuel flow table (about 97 %) for 2 to 6 s. The FADEC filters this jump (core spike guard, 2026-10-08): the E/WD N1/N3, fuel flow, EGT and the FADEC logic stay at idle (sim-tested: MSFS 96.8 %, E/WD 61.6 %), but the MSFS thrust itself still jumps for that time (recorded 2026-10-08: a pulse of about 10 s, yaw rate at most 0.2 deg/s, heading 0.4 deg). The guard also holds the N1 (and so the fuel flow and EGT) while the MSFS fan follows the core jump a few frames late: that recording showed 59.3 % N1 on the E/WD; the replay test gives at most 25.8 % with the guard (not sim-tested yet). A ground start shows no jump (recorded 2026-10-08). | None; it ends within a few seconds. |
| Multiple engines out: the windmilling relight needs at least 250 kt. | FCOM envelope (sim-confirmed 2026-10-06).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Descend to keep the speed.          |
| A full MSFS restart is needed after an update.                       | The systems, FADEC and fbw WASM modules change.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Restart the sim after installing.   |

## How to use

1. Open flyPad > Failures > ATA 72 Engine and activate a flameout or a seizure.
2. Follow the ECAM. To relight: get inside the envelope (table above), ENG START selector (pedestal, engine panel) IGN START, ENG MASTER OFF for 30 s, then ON. Below 260 kt without the APU, set the X BLEED selector (overhead AIR panel) to OPEN for starter air.
3. For a quick relight, set the ENG MASTER OFF then ON at once (within 30 s, N3 above 45 %), at any ENG START position.
4. When the engine is at idle: ENG START NORM, X BLEED AUTO; clear the failure in the flyPad (a seizure must be cleared before a relight).

## How to test

Short card in the sim-test format (from `reports/test-card-b1-inflight.md`, `test-card-b1-ground-2026-10-05.md`, `test-card-relight-batch-2026-10-06.md` and the S4 / S6 sessions of `test-plan-integration-2026-10-06.md`). Needs one MSFS restart after installing the branch.

### T1 Windmilling relight: engine 1 relights by the airflow alone, no APU

Setup: in flight at FL200, 300 kt, AP and A/THR ON, APU OFF, X BLEED selector AUTO (overhead AIR panel), ENG START selector NORM (pedestal, engine panel with the four ENG MASTER levers).

| # | Do this                                                                                | Expected result                                   |
|---|----------------------------------------------------------------------------------------|---------------------------------------------------|
| 1 | flyPad > Failures > ATA 72 > "Engine 1 flameout (crew relight possible)": activate it. | Amber ENG 1 FAIL; engine 1 FF 0, N3 and EGT fall. |
| 2 | ENG START selector: IGN START. ENG MASTER 1: OFF, wait 30 s.                           | ENG 1 SHUT DOWN replaces ENG 1 FAIL.              |



|   |                                                          |                                                                                                                                                                                                                                                                                                |
|---|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3 | ENG MASTER 1: ON.                                        | FF appears within a few seconds, engine 1 at idle within about 60 s, the alerts clear; SD ENGINE page: the engine 1 start valve stays closed. Lever in CL: engine 1 N3 holds at idle until the engine runs, then rises to the N3 of the other engines without passing them by more than 1-2 %. |
| 4 | ENG START selector NORM; flyPad: deactivate the failure. | -                                                                                                                                                                                                                                                                                              |

## T2 Quick relight: engine 4 relights at NORM

Setup: FL150, 240 kt, ENG START selector NORM.

| # | Do this                                                                                               | Expected result                                                                                           |
|---|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| 1 | Activate "Engine 4 flameout (crew relight possible)"; at once (within 5 s) ENG MASTER 4 OFF, then ON. | Engine 4 FF and EGT rise within a few seconds, back at idle, ENG 4 FAIL goes; the selector stays at NORM. |
| 2 | flyPad: deactivate the failure.                                                                       | -                                                                                                         |

## T3 Starter assisted relight with crossbleed air: engine 3

Setup: FL150, 210 kt, APU OFF.

| # | Do this                                                                      | Expected result                                                                                                                                    |
|---|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | X BLEED selector OPEN. Activate "Engine 3 flameout (crew relight possible)". | ENG 3 FAIL.                                                                                                                                        |
| 2 | ENG START selector IGN START; ENG MASTER 3 OFF, wait 30 s; ENG MASTER 3 ON.  | SD ENGINE page: engine 3 start valve open, FF within a few seconds, engine 3 at idle within about 60 s, start valve closed again, ENG 3 FAIL goes. |
| 3 | ENG START NORM, X BLEED AUTO, deactivate the failure.                        | -                                                                                                                                                  |

## T4 On the ground: relight with APU air, and two engines out for taxi

Setup: on the ground, four engines at idle, parking brake ON, APU AVAIL, APU BLEED pb ON (overhead AIR panel), ENG START NORM.

| # | Do this                                                                                                                                        | Expected result                                                                                         |
|---|------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| 1 | Activate "Engine 1 flameout (crew relight possible)"; when N1 is below 5 %: ENG MASTER 1 OFF, ENG START IGN START, wait 30 s, ENG MASTER 1 ON. | ENG 1 FAIL, then a normal start: start valve open, engine 1 at idle within about 60 s, ENG 1 FAIL goes. |
| 2 | ENG START NORM, deactivate the failure. ENG MASTER 1 OFF and ENG MASTER 4 OFF, wait 20 s.                                                      | No TWO ENGS OUT ON OPPOSITE SIDE caution, no ENG 1 / ENG 4 FAIL.                                        |

## T5 Two engines out at 255 kt: engine 1 relights by windmilling

Setup: FL100, 255 kt (FCU speed), flaps 0, AP and A/THR ON, APU OFF, APU BLEED OFF, X BLEED AUTO. Keep at least 250 kt: descend if needed.

| # | Do this                                                                                                            | Expected result                                                                                                                      |
|---|--------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Activate "Engine 1 flameout (crew relight possible)", then "Engine 3 flameout (crew relight possible)". Wait 30 s. | ENG TWO ENGS OUT ON OPPOSITE SIDE with LAND ANSA; STATUS INOP SYS GEN 1+3.                                                           |
| 2 | ENG START selector IGN START. ENG MASTER 1 OFF, wait 30 s, ENG MASTER 1 ON.                                        | Engine 1 lights up (fuel flow, EGT rise) and reaches idle; engine 3 stays out. SD ENGINE page: "A B" on engine 1 during the relight. |

|   |                                                                          |   |
|---|--------------------------------------------------------------------------|---|
| 3 | Deactivate both failures; relight engine 3 the same way; ENG START NORM. | - |
|---|--------------------------------------------------------------------------|---|

### T6 All engines out at FL200

Setup: FL200, 300 kt, APU OFF, ENG START selector NORM, four engines running.

| # | Do this                                                                                                | Expected result                                                                                                                          |
|---|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Activate the four "Engine n flameout (crew relight possible)" failures one after the other. Wait 20 s. | Red ENG ALL ENG FLAME OUT; the RAT deploys; AC ESS powered by the emergency generator. With core/a380x-e1ec merged: no ELEC EMER CONFIG. |
| 2 | Press the RAT MAN ON pb (overhead EMER ELEC PWR panel, guarded).                                       | The RAT MAN ON line turns green.                                                                                                         |
| 3 | ENG START selector IGN START. ENG MASTER 4 OFF, wait 30 s, ENG MASTER 4 ON.                            | Engine 4 relights and ALL ENG FLAME OUT goes; the ENG FAIL alerts of the other engines follow.                                           |
| 4 | Deactivate the failures and relight the other engines.                                                 | -                                                                                                                                        |

**NOTE**

Recording used for the 2026-10-05 tests: per engine FUEL\_CUT, RELIGHT\_ATTEMPT, RELIGHT\_IGNITION, ENGINE\_STATE, ENGINE\_N3, PNEU starter valve / pressurized, MSFS TURB ENG N2, GENERAL ENG COMBUSTION and fuel flow, with the airspeed, altitude, ENG START selector, X BLEED and APU BLEED.

## 8. Automatic relight with both igniters, and the engine feed tank fuel draw

**Aircraft:** A380X | **Where:** Automatic (FADEC); pedestal ENG MASTER levers; E/WD | **Status:** Auto relight sim-tested OK on develop 2026-10-06 (relight batch T3, recorded: ignition 0.5 s after the combustion loss with the ENG START selector at NORM, relit when the fuel came back, ignition off 60 s later). Feed tank draw: passive check in the Flight A climb of 2026-10-06 (four engines kept burning), no dedicated reproduction. Native tests auto\_relight\_test (recorded flameout replay), feed\_tank\_draw\_test. The core branch itself was not sim-tested.

### What it is for

In a flight of 2026-10-06 MSFS dropped the combustion of all four engines by itself at 7 900 ft. With the ENG START selector at NORM nothing relit them: the engines windmilled for 150 s until the crew selected IGN START. Two changes:

- AUTO RELIGHT** (A380 FCOM DSC-70-80-30-20 QUICK AND AUTO RELIGHT: "If the FADEC detects an engine flame out, on ground or in flight, continuous ignition with both igniters is automatically selected. The ignition is maintained for 60 s after engine relight."). When a running engine (ENG MASTER ON, FADEC supplied, fuel not cut) loses its combustion for 0.5 s, its FADEC turns on both igniters whatever the ENG START selector position, until 60 s of continuous combustion after the relight.
- Feed tank draw.** Each engine is fed by MSFS through a 1 gallon buffer tank that the FADEC drains by the fuel burned. The FADEC took the whole burn of an update at once and compared kilograms with pounds, so one long sim frame could empty the four buffer tanks together and leave no fuel at any engine (the suspected cause of the four-engine flameout). Now, while the feed tank holds fuel, the FADEC leaves a small quantity in the buffer and carries the rest of the burn over to the next updates, so the fuel burned is still taken in full. A dry feed tank still empties the buffer and the engine flames out (fuel exhaustion).

### What you should see

| Situation | What you should see |
|-----------|---------------------|
|-----------|---------------------|

|                                                                              |                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MSFS loses the combustion of a running engine, ENG START at NORM             | Within about 1 s the FADEC turns on the ignition; the engine burns again as soon as it has fuel, back at the thrust of the others within about 30 s. SD ENGINE page: "A B" on that engine. 60 s after the relight the ignition goes off. |
| ENG MASTER OFF, ENG FIRE pb released, or a flyPad flameout / seizure failure | No auto relight: a manual abort, an unpowered FADEC or a failure the crew must relight (section above).                                                                                                                                  |
| Long sim frame (stutter) in a climb                                          | The four engines keep burning; the fuel used rises steadily.                                                                                                                                                                             |

## Limitations and why

| Limitation                                       | Why                                                                                                                                   | What to do                                                                                                                                                                                                                                          |
|--------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There is no flyPad failure for an MSFS flameout. | The flyPad flameout cuts the fuel on purpose and asks for a crew relight; the auto relight is for a flameout the FADEC did not cause. | The 2026-10-06 test closed the MSFS fuel valve of engine 4 for 5 s with a SimConnect tool. Since the HP fuel valve hold (below) the systems reopen an MSFS valve that disagrees with them, so that way of testing probably no longer cuts the fuel. |
| A full MSFS restart is needed after an update.   | The FADEC WASM module changes.                                                                                                        | Restart the sim after installing.                                                                                                                                                                                                                   |

## How to use

1. Nothing to set: keep the ENG MASTER levers ON and the ENG START selector at NORM in flight.
2. If an engine flames out by itself, watch it relight on the E/WD; follow ENG FAIL if it does not.

## How to test

The flameout needs MSFS to lose the combustion by itself, or a SimConnect tool that interrupts the engine fuel (see the limitation above).

| # | Do this                                                                                                                                                                               | Expected result                                                                                                                                                                                                          |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X at FL150, 240 kt, flaps 0, four engines running, levers in CL, A/THR ON, ENG START selector NORM, ENG 4 ANTI ICE and WING ANTI ICE OFF (so the MSFS automatic ignition is off). | -                                                                                                                                                                                                                        |
| 2 | Interrupt the fuel of engine 4 for 5 s (SimConnect tool). Touch nothing for 90 s.                                                                                                     | Engine 4 N1 and N3 start to fall; within about 1 s of the fuel coming back it burns again with the selector still at NORM, and it is back at the thrust of the others within about 30 s. A brief ENG 4 FAIL is possible. |
| 3 | Climb from FL50 to FL100 at 250 kt, levers in CL, without touching the engine controls.                                                                                               | No ENG FAIL, no N1 / N3 drop; the FUEL USED rises steadily on the four engines.                                                                                                                                          |

## 9. SD ENGINE page igniter indication

**Aircraft:** A380X | **Where:** SD ENGINE page, start parameters of each engine | **Status:** Sim-tested OK on develop: 2026-10-06 (Flight A S2 T1 ground start with igniter A failed: "A", nothing during the crank, then "A B"; S3 T3 "A B" on all engines at IGN START in flight; S4 T2 "A B" during a relight) and 2026-10-07 (a second ground start of the same engine shows "B"). Native test igniter\_selection\_test, unit test StartParameters.spec.ts. The core branch itself was not sim-tested.

## What it is for

The SD ENGINE page drew an "A" from the N2 during a start, whatever the FADEC did. It now shows the igniters the FADEC really energizes (A380 FCOM DSC-70-90: "The igniter A(B) is energized." / "Both igniters A and B are energized."), in this priority order:

1. None with the ENG MASTER OFF or the FADEC unpowered (ENG FIRE pb released).
2. "A B" when the FADEC selects both igniters itself: auto relight, an in-flight relight that lights up.
3. "A B" for the quick relight (ENG MASTER OFF then ON within 30 s above 45 % N3), for 60 s.
4. Start: in flight "A B"; on the ground the igniters of the start sequence (next section): one igniter from 20 % to 58 % N3, A or B alternated at each start, "A B" for a new automatic attempt, none during the automatic dry crank.
5. Continuous ignition (ENG START at IGN START, engine running): "A B" at once in flight; on the ground only after the selector was set to NORM then back to IGN START after the start, and not at low power (N1 below 53 % for more than 30 s), as in FCOM DSC-70-80-20.

## Limitations and why

| Limitation                                                                                                 | Why                                                                                                   | What to do                        |
|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------|
| A failed igniter is still shown when it is energized ("A" during the first attempt with igniter A failed). | The FCOM shows the igniter energized and has no line for a failed one; kept by decision (2026-10-08). | -                                 |
| The continuous ignition inhibition at high combustion chamber pressure is not modelled.                    | MSFS has no combustion chamber pressure.                                                              | -                                 |
| A full MSFS restart is needed after an update.                                                             | The FADEC WASM module changes.                                                                        | Restart the sim after installing. |

## How to use

1. Open the SD ENGINE page (ECP ENG key); the start parameters show the igniter letters above the start valve of each engine during a start, a relight or the continuous ignition.

## How to test

| # | Do this                                                                                                      | Expected result                                                                                                                   |
|---|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, APU AVAIL, APU BLEED ON, ENG START selector IGN START, SD ENGINE page. ENG MASTER 2 ON. | A green "A" (or "B") above the engine 2 start valve from about 20 % N3 to about 58 % N3, then no letter; no letter below 20 % N3. |
| 2 | ENG MASTER 2 OFF; wait until N3 is below 10 %; ENG MASTER 2 ON.                                              | The other letter, in the same way (A, then B).                                                                                    |
| 3 | In flight at FL100, all engines running, ENG START selector NORM. Set IGN START, wait 5 s.                   | On all four engines the start parameters replace the nacelle temperatures and show "A B".                                         |
| 4 | Set NORM, wait 5 s.                                                                                          | The letters go out and the nacelle temperatures come back.                                                                        |

## 10. Engine ignition and start failures, FCOM ground start

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 74 Ignition and ATA 80 Starting; ENG START selector, ENG MASTER levers, ENG MAN START pbs; E/WD, STATUS, SD ENGINE page | **Status:** Sim-tested OK on develop 2026-10-06 (Flight A S2 T1, recorded): dry

crank with the ENG MAN START pb, then "Engine 1 igniter A": no light up, START FAULT NO LIGHT UP, automatic crank, light up at the second attempt. The other start failures (start valve, hot, hung, stall, starter) are not sim-tested. Rust tests (engine\_start.rs, a380\_systems engine\_failure.rs), native test start\_sequence\_test, unit tests EngineStartAlerts.spec.ts, a380.spec.ts. The core branch itself was not sim-tested.

## What it is for

The FBW FADEC ran the engine model but not what a real FADEC does during a start. The ground start now follows the A380 FCOM (DSC-70-80-20 IGNITION, DSC-70-80-30 STARTING, DSC-70-80-40 CRANKING): ENG START selector to IGN START, then ENG MASTER ON; one igniter (alternated between starts) and fuel at 20 % N3; start valve closed and ignition off at about 58 % N3. A start that does not light up within 20 s, stalls, hangs or goes above 745 °C EGT is aborted, dry cranked for 30 s and tried again with both igniters, up to three attempts. A start valve stuck closed, no starter air or a failed starter leaves the core at rest. The ENG MAN START pbs work: dry crank (ENG START at CRANK, MAN START ON, ENG MASTER OFF), wet crank and manual start.

| flyPad failure (ATA)                                     | What it does                                                                                                                                                                                                                  |
|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1 (2)(3)(4) igniter A / igniter B (74)            | That igniter does not light the engine. The first automatic attempt with only that igniter does not light up: START FAULT NO LIGHT UP, then a new attempt with both. ENG n IGN A (B) FAULT; both failed: ENG n IGN A+B FAULT. |
| Engine 1 (2)(3)(4) start valve stuck closed (80)         | No starter air: the core stays at rest. ENG n START VLV FAULT (NOT OPEN) with VLV STUCK CLOSED.                                                                                                                               |
| Engine 1 (2)(3)(4) start valve stuck open (80)           | The valve does not close after the start: ENG n START VLV FAULT (NOT CLOSED).                                                                                                                                                 |
| Engine 1 (2)(3)(4) hot start (start EGT over limit) (80) | The start EGT overshoots: START FAULT EGT OVERLIMIT, the start is aborted.                                                                                                                                                    |
| Engine 1 (2)(3)(4) hung start (N3 stops below idle) (80) | The core stops accelerating below idle: START FAULT HUNG START.                                                                                                                                                               |
| Engine 1 (2)(3)(4) stall during the start (80)           | START FAULT ENG STALL.                                                                                                                                                                                                        |
| Engine 1 (2)(3)(4) starter shaft shear (80)              | The starter does not turn the core although it gets air: START FAULT LOW N2, no further attempt.                                                                                                                              |

## ECAM alerts

| Alert                              | Lines (A380 FCOM PRO-ABN-ECAM-10-70)                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ENG n START FAULT                  | The sub-case (NO STARTER AIR PRESSURE, LOW N2, HUNG START, EGT OVERLIMIT, NO LIGHT UP, ENG STALL, STARTER TIME EXCEEDED, THR LEVERS NOT AT IDLE), then: no starter air: XBLEED OPEN, APU BLEED ON (in flight MIN SPEED FOR WINDML RELIGHT : 260 KT); automatic start on the ground: NEW START IN PROGRESS, then ENG n MASTER OFF once aborted; manual start: ENG n MASTER OFF, ENG START SEL CRANK, AFTER 30S: ENG START SEL NORM, ENG n MAN START OFF; levers not at idle: ALL THR LEVERS IDLE. |
| ENG n START VLV FAULT (NOT CLOSED) | ENG n BLEED OFF (in flight), APU BLEED OFF (engine 1), X BLEED CLOSE, ENG n MAN START OFF (manual start), ENG n MASTER OFF (on the ground), WING A-ICE OFF and AVOID ICING CONDs (engines 1 and 4).                                                                                                                                                                                                                                                                                              |
| ENG n START VLV FAULT (NOT OPEN)   | VLV STUCK CLOSED; on the ground ENG n MAN START OFF, ENG n MASTER OFF; in flight MIN SPEED FOR WINDML RELIGHT : 260 KT, WINDMILL START INITIATED, ENG PARAMETERS MONITOR WITH CARE.                                                                                                                                                                                                                                                                                                              |
| ENG n IGN A (B) FAULT              | STATUS MORE: REDUND LOSS ENG n IGN A (B).                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

|                        |                                 |
|------------------------|---------------------------------|
| ENG n IGN<br>A+B FAULT | STATUS INOP SYS ENG n IGNITION. |
|------------------------|---------------------------------|

#### NOTE

The start alerts are inhibited in the flight phases 3 to 7, 9 and 10 (IGN A (B) FAULT also in phase 8), per the FCOM figures.

### Limitations and why

| Limitation                                                       | Why                                                                                          | What to do                        |
|------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-----------------------------------|
| Hung start, stall and starter detection times are design values. | The FCOM gives the symptoms, not the times; the FBW engine model has no compressor pressure. | -                                 |
| START FAULT LOW N1 is not modelled.                              | No N1 rotor failure.                                                                         | -                                 |
| A full MSFS restart is needed after an update.                   | The systems and FADEC WASM modules and the pedestal behaviour XML change.                    | Restart the sim after installing. |

### How to use

1. Normal start: APU BLEED ON, ENG START selector IGN START, ENG MASTER ON; the FADEC does the rest (ENG START NORM when the engines are running).
2. Failures: flyPad > Failures > ATA 74 Ignition or ATA 80 Starting; activate one, start the engine and follow the ECAM.
3. Dry crank: ENG START selector CRANK, ENG MAN START n pb ON (ENG MASTER OFF), then OFF.

### How to test

From S2 T1 of `test-plan-integration-2026-10-06.md`. Setup: A380X cold and dark, batteries ON, APU AVAIL, APU BLEED ON, all ENG MASTER levers OFF, thrust levers at IDLE, SD ENGINE page.

| # | Do this                                                                                                                         | Expected result                                                                                                                                                                                                                                                                                                                       |
|---|---------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | ENG START selector CRANK. ENG MAN START 2 pb (overhead ENG MAN START panel) ON, wait 20 s, then OFF.                            | Engine 2 N3 rises to about 20-25 % and stays there; no fuel flow, no EGT rise; it does not start. After MAN START OFF its N3 runs down. No ENG 2 START FAULT.                                                                                                                                                                         |
| 2 | flyPad > Failures > ATA 74 Ignition > "Engine 1 igniter A": activate. ENG START selector IGN START. ENG MASTER 1 ON, wait 80 s. | About 22 s after MASTER ON: amber ENG 1 START FAULT with NO LIGHT UP and NEW START IN PROGRESS, and amber ENG 1 IGN A FAULT; N3 at 20-30 %, no EGT, no fuel flow. SD: "A" during the first attempt, nothing during the crank, "A B" for the second attempt. About 55 s after MASTER ON: EGT rises, engine 1 starts, START FAULT goes. |
| 3 | Deactivate the failure. Activate "Engine 3 start valve stuck closed"; ENG MASTER 3 ON.                                          | Engine 3 stays at rest; ENG 3 START VLV FAULT (NOT OPEN) with VLV STUCK CLOSED. ENG MASTER 3 OFF, deactivate.                                                                                                                                                                                                                         |
| 4 | Activate "Engine 3 hot start (start EGT over limit)"; ENG MASTER 3 ON.                                                          | The EGT overshoots: ENG 3 START FAULT EGT OVERLIMIT, the start is aborted and cranked, then a new attempt. ENG MASTER 3 OFF, deactivate.                                                                                                                                                                                              |

## 11. HP fuel valve: no engine burning without a FADEC start

**Aircraft:** A380X | **Where:** Pedestal ENG MASTER levers and ENG START selector | **Status:** Sim-tested on develop: the fault found 2026-10-06 (Flight A S2 T3, a restart 34 s after a shutdown skipped the start sequence); 2026-10-07 restart after shutdown OK (full

start sequence, igniter B), ENG MASTER ON at NORM stays dark, a start at IGN START opens the HP valve at the fuel-on point; 2026-10-07 evening the HP valves stayed closed from load through power-up (more than 200 s). Rust tests (engine\_failure.rs HpFuelValve, sim\_fuel\_valve.rs), native start\_sequence tests. The core branch itself was not sim-tested.

## What it is for

A380 FCOM DSC-70-30 ENGINE SHUTDOWN: with the ENG MASTER OFF "The FADEC closes the LP and HP fuel valves. The engine decelerates and stops." The ENG MASTER only closed an MSFS valve upstream of the engine buffer tank, so MSFS kept burning a shut down engine for 20 to 60 s, and a restart in that time skipped the start sequence. And with the ENG START selector at NORM, ENG MASTER ON on the ground let the MSFS starter turn the core and MSFS lit it at 22 % N2 without any FADEC start (the FCOM: IGN START first, fuel at 20 %; at NORM the MASTER ON starts nothing).

- The HP fuel valve of each engine (the MSFS fuel valves 60-63 after the buffer tanks) is now closed with the ENG MASTER OFF or the fuel cut, and on the ground until the FADEC start sequence reaches its fuel-on point (IGN START then MASTER ON) or the quick relight opens it (MASTER OFF then ON within 30 s above 45 % N3). It is open for the aircraft presets and a flight loaded with the master ON. In flight the relight logic keeps the fuel cut until the engine may light up. Once open it stays open until the MASTER OFF or a fuel cut, so a running engine keeps its fuel at NORM and its auto relight has fuel.
- MSFS could reopen a closed valve by itself a few seconds later (flight load, power-up of the valve circuit). The systems now watch the MSFS valve switch and command it again whenever it disagrees, and once on the first update of a flight.
- An engine is shown running (ON) only when MSFS really burns in it: a core turned past 20 % by the MSFS starter at NORM no longer shows ON unlit (and no longer triggers the auto relight).

## What you should see

| Situation                                                         | What you should see                                               |
|-------------------------------------------------------------------|-------------------------------------------------------------------|
| ENG MASTER OFF                                                    | The engine stops burning at once (FF 0, EGT falls) and runs down. |
| ENG MASTER ON again soon after a shutdown, ENG START at IGN START | A full start sequence: start valve, one igniter, fuel at 20 % N3. |
| ENG MASTER ON on the ground with the ENG START selector at NORM   | Nothing lights up: no fuel flow, no EGT.                          |

## Limitations and why

| Limitation                                     | Why                              | What to do                        |
|------------------------------------------------|----------------------------------|-----------------------------------|
| A full MSFS restart is needed after an update. | The systems WASM module changes. | Restart the sim after installing. |

## How to use

1. Start an engine the FCOM way: ENG START selector IGN START first, then ENG MASTER ON.
2. Shut it down with ENG MASTER OFF.

## How to test

| # | Do this                                                                                                          | Expected result                                                               |
|---|------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1 | A380X cold and dark on the ground, APU AVAIL, APU BLEED ON, ENG START selector NORM. ENG MASTER 1 ON, wait 60 s. | Engine 1 stays dark (no fuel flow, no EGT), also after the aircraft power-up. |
| 2 | ENG MASTER 1 OFF. ENG START selector IGN START, ENG MASTER 1 ON.                                                 | A normal start: fuel at about 20 % N3, engine 1 at idle.                      |



|   |                                                                            |                                                                                                                                              |
|---|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 3 | ENG MASTER 1 OFF; after about 30 s (engine still turning) ENG MASTER 1 ON. | Fuel flow goes to 0 at once at the MASTER OFF; the restart goes through the start sequence again (start valve opens, one igniter on the SD). |
|---|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|

## 12. Engine oil failures (leak, filter clog, overheat)

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 79 Oil; E/WD; SD ENGINE page | **Status:** Sim-tested on develop 2026-10-06 (Flight A S5 T2): filter clog and leak to OIL PRESS LO and the shutdown OK; the overheat stopped at 128 °C (fixed: the FADEC keeps its own temperature). 2026-10-07: the overheat reached the 196 °C limit only after 4 min (then retuned), the cool-down after clearing the failure OK. The retuned overheat curve (OIL TEMP HI about 2 min at cruise) and the oil pressure from the whole oil system are not sim-tested on the A380X (the latter checked on the A32NX 2026-10-07). Native tests engine\_oil\_failures\_test, oil\_system\_test, unit tests OilIndications.spec.ts, EngineOilAlerts.spec.ts. The core branch itself was not sim-tested.

### What it is for

Twelve new failures, three per engine, computed by the FADEC on the oil quantity, pressure and temperature, with the SD ENGINE page indications and the ECAM alerts of the A380 FCOM (DSC-70-90, PRO-ABN-ECAM-10-70).

| flyPad failure (ATA 79 Oil)         | What it does                                                                                                                                                                                                                                                                                             |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1 (2)(3) (4) oil leak        | The oil system empties at 2 qt/min (the tank reading falls about 1.6 qt/min); the pump pressure stays full down to 1.3 qt in the system and is gone at 0.3 qt, so OIL PRESS LO follows the low oil quantity indication.                                                                                  |
| Engine 1 (2)(3) (4) oil filter clog | CLOGGED on the SD ENGINE page and ENG n OIL FILTER CLOGGED; no other effect.                                                                                                                                                                                                                             |
| Engine 1 (2)(3) (4) oil overheat    | The oil temperature rises towards a target that grows with the core speed (170 °C at idle, 230 °C at 100 % N3, 60 s time constant): OIL TEMP HI about 2 min after the failure at cruise; reducing thrust brings it below 196 °C, at IDLE within about 1 min. Once cleared, the oil cools down gradually. |

### What you should see

| Situation                       | What you should see                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| SD ENGINE page, oil quantity    | Pulses below the 1.2 qt advisory (first white dash).                                                                     |
| SD ENGINE page, oil temperature | Pulses above 163 °C.                                                                                                     |
| SD ENGINE page, oil pressure    | FCOM scale 0-100 / 100-440 PSI, red at or below 25 PSI; CLOGGED below it for a clogged filter.                           |
| Oil pressure below 25 PSI       | Red <b>ENG n OIL PRESS LO</b> (MASTER WARN, continuous chime): THR LEVER n IDLE, ENG n MASTER OFF; then ENG n SHUT DOWN. |
| Oil temperature above 196 °C    | Amber <b>ENG n OIL TEMP HI</b> : THR LEVER n REDUCE BELOW OIL TEMP LIM, IF HI TEMP PERSISTS: ENG n MASTER OFF.           |
| Clogged filter                  | Amber <b>ENG n OIL FILTER CLOGGED</b> on the ground (phases 1, 2, 11 and 12); in flight only the SD CLOGGED.             |

### Limitations and why

| Limitation                                     | Why                      | What to do |
|------------------------------------------------|--------------------------|------------|
| The leak and overheat rates are design values. | The FCOM gives no rates. | -          |



|                                                                              |                                                                                                               |                                   |
|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|-----------------------------------|
| The alerts are monitored only with the engine running and its ENG MASTER ON. | Design choice: a stopped engine has no oil pressure, and the procedures end with the MASTER OFF.              | -                                 |
| Flight phase inhibitions.                                                    | OIL PRESS LO: phases 1, 5, 6, 12; OIL TEMP HI: 1, 4-7, 9, 10, 12; OIL FILTER CLOGGED: 3 to 10 (FCOM figures). | Test in cruise.                   |
| A full MSFS restart is needed after an update.                               | The systems and FADEC WASM modules change.                                                                    | Restart the sim after installing. |

### How to use

1. Open flyPad > Failures > ATA 79 Oil and activate a leak, a filter clog or an overheat.
2. Watch the SD ENGINE page; follow the ECAM (reduce thrust, or IDLE and ENG MASTER OFF).
3. Deactivate the failure.

### How to test

From S5 T2 of `test-plan-integration-2026-10-06.md`. Setup: level at FL200, 300 kt, A/THR ON, four engines running, SD ENGINE page.

| # | Do this                                                                                         | Expected result                                                                                                                                                                                                |
|---|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Activate "Engine 2 oil filter clog", "Engine 4 oil overheat" and "Engine 1 oil leak".           | SD: amber CLOGGED under the engine 2 oil pressure (no E/WD alert in flight). Engine 4 oil temperature rises and pulses above 163; then amber ENG 4 OIL TEMP HI with THR LEVER 4 ... REDUCE BELOW OIL TEMP LIM. |
| 2 | When ENG 4 OIL TEMP HI shows: A/THR off, THR LEVER 4 IDLE; fly the speed with the other levers. | Engine 4 oil temperature falls below 196 and the alert goes within about 1-2 minutes.                                                                                                                          |
| 3 | Wait for engine 1 (several minutes).                                                            | Engine 1 oil quantity falls and pulses below 1.2 qt; then its oil pressure falls and turns red at 25 PSI: red ENG 1 OIL PRESS LO with MASTER WARN, THR LEVER 1 ... IDLE, ENG 1 MASTER ... OFF.                 |
| 4 | THR LEVER 1 IDLE, ENG MASTER 1 OFF. Deactivate the three failures.                              | OIL PRESS LO goes, ENG 1 SHUT DOWN comes. Engine 4 oil cools down gradually.                                                                                                                                   |

## 13. Engine fuel filter clog, ENG MASTER FAULT light, SD start valve and N3 red cross

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> flyPad > Failures > ATA 73 and ATA 80; pedestal ENG MASTER levers; SD ENGINE page; E/WD   <b>Status:</b> Sim-tested by the user on develop, data-checked OK (2026-10-08): fuel filter clog on engine 3 at idle; start valve stuck closed (START VALVE FAULT 5 s after ENG MASTER ON); starter shaft shear (start aborted and ENG 1 FAULT light 9.8 s after ENG MASTER ON, N3 at most 0.2 %). The N3 red cross is unit-tested only (not reachable on the ground). |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

- **Fuel filter clog:** new failures Engine 1-4 fuel filter clog (ATA 73). Amber **CLOGGED** below the fuel flow on the SD ENGINE page while the engine runs, and the **ENG n FUEL FILTER CLOGGED** caution (FCOM: pressure drop above 35 PSI, crew awareness, inhibited in flight phases 3 to 10). No effect on the engine: the filter is bypassed.
- **ENG MASTER FAULT light:** it comes on when the FADEC aborts an automatic start (FCOM DSC-70-90), and goes off with the ENG MASTER OFF. It followed the MSFS engine failure before, which a start abort does not set.
- **SD start valve:** amber when the start valve is abnormally open or closed (START VLV FAULT); with a valve fault the start parameters show even at NORM, so a valve stuck open after the start is seen.

- **N3 red cross:** above the 118.7 % red limit a red "+" shows next to N3 until the next start of that engine on the ground (FCOM: N2 of the GP7200 core, read on the Trent N3).
- **Starter failure fix:** with a sheared starter the MSFS starter could still turn the core to about 6 %, past the 5 % starter fault detection, so the start never aborted. The FADEC now keeps the core at rest and aborts the start without a new attempt (FCOM DSC-70-80-30-20).

## Limitations and why

| Limitation                                                    | Why                                                                                                   | What to do                        |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------|
| The FAULT light has no HP fuel valve and no overthrust cause. | FBW has no HP fuel valve failure (the valve always follows its command) and no overthrust protection. | -                                 |
| A full MSFS restart is needed after an update.                | The systems and FADEC WASM modules and the cockpit behaviour change.                                  | Restart the sim after installing. |

## How to use

1. Call the SD ENGINE page (ECP ENG key).
2. Open flyPad > Failures > ATA 73 (fuel filter clog) or ATA 80 (starter shaft shear, start valve stuck) and activate the failure, then start or run the engine as below.
3. Deactivate the failures after the test.

## How to test

From `reports/test-card-engine-leftovers-2026-10-08.md` (recorded OK on develop 2026-10-08). Setup: at the gate, APU running, APU BLEED ON, all ENG MASTER levers OFF, ENG START selector IGN START.

| # | Do this                                                                                          | Expected result                                                                                                                                                                                                  |
|---|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | flyPad ATA 80 <b>Engine 1 starter shaft shear</b> ON; ENG MASTER 1 ON, wait 30 s; then OFF.      | N3 stays near 0; about 10 s after the MASTER ON the start aborts: E/WD ENG 1 START FAULT and the amber FAULT light in the ENG 1 MASTER lever (the other three stay off); the light goes off with the MASTER OFF. |
| 2 | flyPad ATA 80 <b>Engine 2 start valve stuck closed</b> ON; ENG MASTER 2 ON, wait 15 s; then OFF. | The engine 2 start valve circle and bar are amber on the SD; E/WD ENG 2 START VLV FAULT.                                                                                                                         |
| 3 | ENG MASTER 3 ON, wait until idle; flyPad ATA 73 <b>Engine 3 fuel filter clog</b> ON.             | Amber CLOGGED below the engine 3 fuel flow; E/WD amber ENG 3 FUEL FILTER CLOGGED with MASTER CAUT; engine 3 keeps running.                                                                                       |

## 14. Engine stall, EGT overtemperature and vibration failures

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 72 Engine and ATA 77 Engine Indicating; E/WD; SD ENGINE page | **Status:** Sim-tested OK on develop 2026-10-06 (Flight A S5 T1: engine 3 stall, engine 2 EGT overtemperature and high vibration). The returned vibration (square of the rotor speed, 2026-10-07) is not sim-tested on the A380X. EWD EGT amber limit from the thrust limit: tested on develop 2026-10-04. Rust tests (engine\_malfunction.rs), native test `egt_failure_offset_test`, unit tests `EngineParameterAlerts`, `EgtLimits`, `EngineVibration` specs. The core branch itself was not sim-tested.

## What it is for

Twelve new failures where the engine keeps running. What each one does is a design choice: the FCOM gives the symptoms, not values.

| flyPad failure (ATA) | What it does |
|----------------------|--------------|
|----------------------|--------------|

|                                                          |                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1 (2)(3)(4) compressor stall (above 60 % N1) (72) | Above 60 % N1 command the engine stalls: it loses thrust (the thrust loop aims lower), the EGT rises quickly, N1 / N3 fluctuate. It recovers with the lever at idle and stalls again above the threshold.                                                                                                                                                      |
| Engine 1 (2)(3)(4) EGT overtemperature (72)              | The EGT is higher, more so at high thrust: ENG EGT OVER LIMIT at climb thrust.                                                                                                                                                                                                                                                                                 |
| Engine 1 (2)(3)(4) high vibration (77)                   | N1, N2 and N3 vibrations growing with the square of the rotor speed: above the SD advisory (5 units) at climb and cruise thrust, below it at reduced thrust and at idle. At a low cruise power the advisory can show on N3 only (fan 60 %: N1 4.7; core 81 %: N3 5.3), as the FCOM advisory is per rotor; reducing thrust clears it. No ECAM alert (ABN PROC). |

### What you should see

| Situation                    | What you should see                                                                                                                                                                                            |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stall                        | Amber <b>ENG n STALL</b> (SD ENGINE page): THR LEVER n IDLE, ENG n PARAMETERS CHECK, IF ABNORMAL: ENG n MASTER OFF, ENG n RELIGHT PROC CONSIDER. Inhibited from V1 to 400 ft unless two or more engines stall. |
| EGT above its limit          | Amber <b>ENG n EGT OVER LIMIT</b> : THR LEVER n REDUCE BELOW EGT LIMIT, IF OVER LIMIT PERSISTS: ENG n MASTER OFF; the amber attention box on the engine.                                                       |
| N1 or N2 above the red limit | Red <b>ENG n N1/N2 OVER LIMIT</b> : THR LEVER n REDUCE BELOW N1 LIMIT, IF OVER LIMIT PERSISTS: ENG n MASTER OFF.                                                                                               |
| E/WD EGT gauge               | A red mark at the highest EGT reached above the red line. The amber limit comes from the active thrust limit (none at FLEX / TOGA or in reverse, the CLB / MCT limit otherwise), not from the lever angle.     |
| SD ENGINE page               | Separate N1, N2 and N3 vibrations that pulse above 5 units; N3 red above its limit.                                                                                                                            |

### Limitations and why

| Limitation                                              | Why                                             | What to do                        |
|---------------------------------------------------------|-------------------------------------------------|-----------------------------------|
| The A380X has no overspeed failure (the A32NX has one). | Not part of this stage.                         | -                                 |
| A full MSFS restart is needed after an update.          | The systems, FADEC and fbw WASM modules change. | Restart the sim after installing. |

### How to use

1. Open flyPad > Failures > ATA 72 Engine (stall, EGT) or ATA 77 Engine Indicating (vibration) and activate the failure at climb or cruise thrust.
2. Follow the ECAM: reduce the thrust of that engine; deactivate the failure.

### How to test

From S5 T1 of `test-plan-integration-2026-10-06.md`. Setup: four engines running, A/THR ON, CLB, climbing at 280 kt.

| # | Do this                                                                                  | Expected result                                                                                              |
|---|------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 1 | Climbing through FL150: activate "Engine 3 compressor stall (above 60 % N1)", wait 20 s. | Amber ENG 3 STALL with its lines; SD ENGINE page shown; engine 3 THR / N1 drops and fluctuates, EGT 3 rises. |

|   |                                                                                   |                                                                                                                                                  |
|---|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | Thrust lever 3 IDLE, wait 20 s; deactivate the stall; lever 3 back to CL.         | The stall alert goes.                                                                                                                            |
| 3 | Activate "Engine 2 EGT overtemperature" and "Engine 2 high vibration", wait 30 s. | EGT 2 above 850 °C, amber, with amber ENG 2 EGT OVER LIMIT and the attention box on engine 2; SD VIB N1, N2 and N3 of engine 2 above 5, pulsing. |
| 4 | Deactivate both.                                                                  | The EGT and vibrations come back to normal; the alert goes.                                                                                      |

## 15. FADEC, thrust lever and reverser failures

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 73 Engine - Fuel And Control and ATA 78 Exhaust; thrust levers; E/WD, STATUS, SD ENGINE page | **Status:** Sim-tested on develop 2026-10-06 (Flight A S4 T1): "Engine 1 FADEC network link" alerts and displays OK but the engine stayed at its thrust (fixed: the engine now follows its lever, not re-tested in the sim); "Reverser 2 unlocked (engine at idle)" OK. Reverse thrust OK 2026-10-07 (engines 2 and 3). The other FADEC, thrust lever and reverser failures and ENG REVERSER SELECTED are not sim-tested. Rust tests (engine\_control\_failure.rs, reverser), native tests (fadec\_failure\_inputs\_test, fadec\_fault\_manual\_thrust\_test), unit tests FadecReverserAlerts.spec.ts, EngineParametersAvailability.spec.ts. The core branch itself was not sim-tested.

### What it is for

Twenty-six new failures with the alerts, procedures and STATUS of the A380 FCOM (PRO-ABN-ECAM-10-70). Reversers exist on engines 2 and 3 only.

| flyPad failure (ATA)                                   | What it does                                                                                                                                                        | ECAM                                                                                                                                                                            |
|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1 (2)(3)(4) FADEC network link (73)             | The FADEC still controls the engine, but the A/THR and the SD ENGINE page lose it (XX on the SD; the E/WD keeps N1, THR, EGT). The engine follows its thrust lever. | ENG n FADEC FAULT: THR LEVER n MAN ADJUST, ENG n PARAMETERS MONITOR, IF ABNORMAL: THR LEVER n IDLE, ENG n MASTER OFF; STATUS INOP SYS ENG n A/THR (A/THR engaged).              |
| Engine 1 (2)(3)(4) FADEC system fault (73)             | Alert only (crew awareness).                                                                                                                                        | ENG n FADEC SYS FAULT                                                                                                                                                           |
| Engine 1 (2)(3)(4) FADEC overheat (73)                 | Alert only (crew awareness).                                                                                                                                        | ENG n FADEC TEMP HI                                                                                                                                                             |
| Thrust lever 1 (2)(3) (4) resolvers (both) (73)        | The FADEC has lost the lever: the engine is at idle on the ground and limited to CLB in flight (the A/THR still manages it between idle and CLB).                   | ENG n THR LEVER FAULT: on the ground ENG n IDLE ONLY, THR LEVER n IDLE; in flight ENG n CLB ONLY, THR LEVER n CLB; STATUS INOP SYS ENG n THR LEVER, INFO ENG n IDLE (CLB) ONLY. |
| Reverser 2 (3) fault (does not deploy) (78)            | The reverser does not deploy; the engine stays at reverse idle.                                                                                                     | ENG 2 (3) REVERSER FAULT: T.O PERF CHECK (on the ground), LDG DIST IMPACT ON WET/CONTAM RWY ONLY.                                                                               |
| Reverser 2 (3) unlocked (engine at idle) (78)          | The cowl stays stowed (no reverse thrust, no buffet); the FADEC sets the engine at idle.                                                                            | ENG 2 (3) REVERSER UNLOCKED: ENG n IDLE ONLY, THR LEVER n IDLE, ENG n MASTER OFF on the ground; in flight IF BUFFET: ENG n MASTER OFF; STATUS INFO ENG n IDLE ONLY.             |
| Reverser 2 (3) energized (tertiary lock unlocked) (78) | The tertiary lock stays released; the primary locks hold the cowl stowed.                                                                                           | ENG 2 (3) REVERSER ENERGIZED: THR LEVER n IDLE.                                                                                                                                 |

|                                                     |                                            |                                                                                       |
|-----------------------------------------------------|--------------------------------------------|---------------------------------------------------------------------------------------|
| Reverser 2 (3) failed locked (does not deploy) (78) | The locks are not released: no deployment. | ENG 2 (3) REV LOCKED: T.O PERF CHECK, LDG DIST IMPACT ON WET/CONTAM RWY ONLY.         |
| Reverser 2 (3) control fault (ETRAC) (78)           | The reverser is inoperative.               | ENG 2 (3) REVERSER CTL FAULT: T.O PERF CHECK, LDG DIST IMPACT ON WET/CONTAM RWY ONLY. |

## Also in this feature

- **Reverse thrust stays at reverse idle until the reverser is fully deployed** (FCOM DSC-70-70): a reverser that does not deploy no longer gives forward thrust with the lever in reverse.
- **Reverse thrust reaches MSFS.** The in-flight start throttle hold (engine failures section) clamped the MSFS throttle at 0 and so blocked all reverse thrust; the reverse throttle now goes through.
- **An engine with a FADEC FAULT follows its thrust lever.** In the 2026-10-06 test the engine stayed at its N1 with the levers in CL: the FADEC THRUST LOCK latched when the lost link took the A/THR away. The A380 ENG FADEC FAULT does not disconnect the A/THR (only that engine is lost, INOP SYS ENG n A/THR), and the procedure says THR LEVER ... MAN ADJUST, so the lock no longer latches for it.
- **ENG REVERSER SELECTED** comes up when the lever of engine 2 or 3 is in reverse in flight: THR LEVER 2 (3)(2+3) FWD THR.

## Limitations and why

| Limitation                                                           | Why                                                          | What to do                        |
|----------------------------------------------------------------------|--------------------------------------------------------------|-----------------------------------|
| ENG 2 (3) REVERSER INHIBITED and REVERSER MINOR FAULT are not wired. | No flyPad failure for them (maintenance action / no effect). | -                                 |
| "Before takeoff" lines (T.O PERF CHECK) show on the ground.          | Design choice: before takeoff = on the ground.               | -                                 |
| A full MSFS restart is needed after an update.                       | The systems and fbw WASM modules change.                     | Restart the sim after installing. |

## How to use

1. Open flyPad > Failures > ATA 73 Engine - Fuel And Control (FADEC, thrust lever) or ATA 78 Exhaust (reversers 2 and 3) and activate a failure.
2. Follow the ECAM; for a FADEC FAULT adjust that thrust lever by hand.
3. Deactivate the failure.

## How to test

From S4 T1 of [test-plan-integration-2026-10-06.md](#) and the 2026-10-07 retest. Setup: FL100, 250 kt, flaps 0, AP and A/THR ON, four levers in CL.

| # | Do this                                 | Expected result                                                                                                                                                                                                                                      |
|---|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Activate "Engine 1 FADEC network link". | Amber ENG 1 FADEC FAULT with THR LEVER 1 .... MAN ADJUST; SD ENGINE page XX for engine 1 while the E/WD keeps its N1 / THR / EGT; STATUS INOP SYS ENG 1 A/THR. Engine 1 goes to the CLB thrust of its lever; the A/THR still manages engines 2 to 4. |
| 2 | Move thrust lever 1 out of CL and back. | Engine 1 follows its lever (it does not stay frozen).                                                                                                                                                                                                |

|   |                                                                          |                                                                                                                                                                      |
|---|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3 | Activate "Reverser 2 unlocked (engine at idle)".                         | Amber ENG 2 REVERSER UNLOCKED with ENG 2 IDLE ONLY, THR LEVER 2 .... IDLE, .IF BUFFET, ENG 2 MASTER .... OFF; engine 2 N1 goes to idle; STATUS INFO ENG 2 IDLE ONLY. |
| 4 | Deactivate both. Activate "Thrust lever 4 resolvers (both)".             | ENG 4 THR LEVER FAULT with ENG 4 CLB ONLY, THR LEVER 4 CLB; engine 4 limited to CLB. Deactivate it.                                                                  |
| 5 | After landing: all thrust levers to full reverse until 70 kt, then IDLE. | REV on engines 2 and 3 only; their N1 rises above idle once the reversers are deployed.                                                                              |

## 16. ENG THR LEVERS NOT SET and ENG OIL TEMP LO

|                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> E/WD; thrust levers; T.O CONFIG pb; MFD FMS PERF T.O (FLEX)   <b>Status:</b> THR LEVERS NOT SET: tested in the sim by the user: OK, data-confirmed (2026-10-08, on the feature branch). OIL TEMP LO: not sim-tested. Unit tests EngineTakeoffAlerts.spec.ts. |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Two take-off alerts of the A380 FCOM (PRO-ABN-ECAM-10-70) that the A380X did not trigger. Both are amber cautions (MASTER CAUT, single chime), shown in flight phases 2 and 3 only.

- ENG THR LEVERS NOT SET** (I.175146-175184): a thrust lever of a running engine is at or between CL and FLX/MCT, or at FLX/MCT without a FLEX TEMP, for 3 s. Line: ALL THR LEVERS ... TOGA (no FLEX TEMP: TOGA take-off) or THR LEVERS ... MCT/FLEX (FLEX TEMP entered, levers below FLX/MCT).
- ENG 1(2)(3)(4) OIL TEMP LO** (I.172605-172628): on the ground the engine oil is below 50 °C 30 s after the engine is running, or after the T.O CONFIG pb, or at take-off power. Lines: THR LEVER n ... IDLE, DELAY T.O FOR WARM UP.

### Limitations and why

| Limitation                                                             | Why                                                           | What to do |
|------------------------------------------------------------------------|---------------------------------------------------------------|------------|
| No derated take-off case.                                              | FBW has no derated take-off.                                  | -          |
| A T.O CONFIG press keeps the oil monitor armed until the engine stops. | Design choice: the FCOM says "after the flight crew presses". | -          |

### How to use

- Nothing to set. Set all thrust levers to FLX/MCT (FLEX TEMP entered) or TOGA for take-off.
- After an engine start in the cold, wait until the oil is warm before take-off.

### How to test

| # | Do this                                                                                                                                | Expected result                                                                                                            |
|---|----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, PARKING BRK ON, engine 4 running at idle, all levers at IDLE, no FLEX TEMP. Thrust lever 4 only to the CL detent. | After 3 s: amber ENG THR LEVERS NOT SET with ALL THR LEVERS ... TOGA, MASTER CAUT.                                         |
| 2 | Lever 4 back to IDLE.                                                                                                                  | The caution goes.                                                                                                          |
| 3 | Cold and dark at a cold airport (oil at the outside temperature, below 50 °C): start engine 1 and wait 30 s.                           | Amber ENG 1 OIL TEMP LO with THR LEVER 1 ... IDLE and DELAY T.O FOR WARM UP while the oil is below 50 °C (SD ENGINE page). |

## 17. FADEC thrust failures: ENG THRUST LOSS and ENG T.O THRUST DISAGREE

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 73; E/WD; thrust levers | **Status:** Tested in the sim by the user on the feature branch: T.O THRUST DISAGREE OK (2026-10-08, FADEC 4 take-off mode recorded); THRUST LOSS OK with levers 3 and 4 at FLX/MCT (2026-10-08, max THR 85 recorded, the caution seen). Unit tests EngineThrustAlerts.spec.ts, a380.spec.ts; native test fadec\_thrust\_failures\_test.cpp.

### What it is for

Two FCOM cautions that need a FADEC fault the sim cannot produce, with the failures that make them possible (they act on the FADEC models of the fbw WASM):

- New flyPad failures, ATA 73: **Engine 1 (2, 3, 4) max thrust miscalculated (thrust loss)** (73050-73053): that FADEC computes a maximum THR 15 % lower, so the engine gives less thrust above idle ( $N1 \text{ command} = \text{IDLE} + 0.85 \times (\text{limit} - \text{IDLE})$ ).
- **ENG 1(2)(3)(4) THRUST LOSS** (amber, I.173378-173408, phase 3 only): the maximum THR of an engine is 10 % lower than that of at least two other engines. Lines: THR LEVER n ... IDLE, ENG n MASTER ... OFF.
- New flyPad failures, ATA 73: **FADEC 1 (2, 3, 4) FLEX TEMP not received (T.O mode TOGA)** (73060-73063): that FADEC takes off in TOGA mode (MCT thrust in the FLX/MCT detent).
- **ENG T.O THRUST DISAGREE** (amber, I.175054-175070, phases 2 and 11): the FADECs do not all have the same take-off mode. No line (crew awareness).

### Limitations and why

| Limitation                                     | Why                                                                            | What to do                                       |
|------------------------------------------------|--------------------------------------------------------------------------------|--------------------------------------------------|
| THRUST LOSS shows in phase 3 only.             | FCOM inhibition; the A380X FWS needs two levers at take-off power for phase 3. | Set two levers (for example 3 and 4) to FLX/MCT. |
| Use FADEC 2, 3 or 4 for the FLEX TEMP failure. | The E/WD thrust rating is the one of FADEC 1.                                  | -                                                |
| A full MSFS restart is needed after an update. | The fbw WASM module changes.                                                   | Restart the sim after installing.                |

### How to use

1. flyPad > Failures > ATA 73 Engine - Fuel And Control: activate one of the failures before take-off.
2. Follow the caution; clear the failure to end it.

### How to test

| # | Do this                                                                                                                                                                                                                          | Expected result                                                                                                                                                              |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, PARKING BRK ON, engines running at idle, all levers at IDLE, FLEX TEMP 60 on the MFD FMS ACTIVE/PERF T.O page. flyPad > Failures > ATA 73: activate <b>FADEC 4 FLEX TEMP not received (T.O mode TOGA)</b> . | Amber ENG T.O THRUST DISAGREE (no line), single chime, MASTER CAUT.                                                                                                          |
| 2 | Clear the failure.                                                                                                                                                                                                               | The caution goes.                                                                                                                                                            |
| 3 | Activate <b>Engine 4 max thrust miscalculated (thrust loss)</b> ; thrust levers 3 and 4 to FLX/MCT, hold 5 s.                                                                                                                    | Phase 3: amber ENG 4 THRUST LOSS with THR LEVER 4 ... IDLE and ENG 4 MASTER ... OFF (a red CONFIG PARK BRK ON also shows: normal with take-off power and the parking brake). |
| 4 | Levers back to IDLE, clear the failure.                                                                                                                                                                                          | The cautions go.                                                                                                                                                             |

## 18. E/WD N1 red above 111 % with a red cross

**Aircraft:** A380X | **Where:** E/WD N1 indication | **Status:** Not sim-tested. Unit test N1.spec.ts.

### What it is for

FCOM DSC-70-90 N1 INDICATIONS: the N1 value turns red above the 111 % red limit, and a red cross stays next to it after an exceedance until the next engine start on the ground. The A380X E/WD N1 stayed green.

### Limitations and why

| Limitation              | Why                                                                | What to do |
|-------------------------|--------------------------------------------------------------------|------------|
| Hard to see in the sim. | The A380X has no N1 overspeed failure; the N1 rarely passes 111 %. | -          |

### How to use

- Nothing to set. After an N1 exceedance the red cross stays until the next engine start on the ground.

### How to test

| # | Do this                                                                                         | Expected result                                                                  |
|---|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| 1 | A380X, engines started on the ground, normal take-off thrust.                                   | N1 values green, no red cross.                                                   |
| 2 | Run <code>npx vitest run fbw-a380x/src/systems/instruments/src/EWD/elements/N1.spec.ts</code> . | All tests pass (red above 111 %, the cross latched until the next ground start). |



# A32NX flyPad failures

Clearer A32NX failure names and new failures with their FCOM alerts: transponders, RMPs and VHF radios, FWC 1 and 2, engine and APU fires with a real fire detection model and fire detection unit failures, wing tank pumps, the X FEED valve, the centre tank transfer valves, engine flameouts and seizures with the in-flight relight envelope, and the engine oil, ignition and start, stall, EGT, overspeed, vibration, FADEC, thrust lever and reverser failures with the FCOM start sequence, the fan blocked failure with ENG LOW N1, and the THR LEVER ABV IDLE and SAT ABOVE FLEX TEMP alerts

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Where to find it | flyPad > Failures (ATA 21, 22, 23, 26, 28, 31, 34, 72, 73, 74, 77, 78, 79, 80); E/WD, STATUS and SD pages; pedestal ATC and RMP panels; overhead FIRE, FUEL and ENG MAN START panels; ENG MASTER and ENG MODE controls; thrust levers                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Branch           | core/failures-a32nx, based on core/gps (stacked: needs core/surveillance, core/a380x-mfd-fms and core/gps merged first), with core/fire merged in (the fire failures use its fire warnings, and the engine failures use its ENG FIRE pb LP valve starvation). Only the seventeen features below belong to this branch; the GPS and fire warning features are described in the core/gps and core/fire manuals. Some engine commits also carry A380X files (they are on core/failures-a380x ); this manual describes only what the A32NX gets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Status           | Transponder, RMP/VHF, FWC, fire and fuel failures tested in the sim by the user: OK (2026-10-04); the fire detection unit failures, the FIRE TEST light logic, the APU fire horn and the centre tank transfer valve failures too (2026-10-04, the horn itself is silent in MSFS 2024); the engine flameout and seizure failures on develop: OK, tests T1-T9 (2026-10-05); their LEAP-1A relight envelope: sim-tested OK 2026-10-05 (recorded); the in-flight start without N2 overshoot: OK on develop (2026-10-06, recorded). Engine failures A2-A5 on develop (2026-10-06 integration flight and 2026-10-07 retest, recorded): oil failures, ground starts with a failed igniter and the dry crank, stall, EGT overtemperature and vibration, thrust lever resolvers and FADEC FAULT, normal reverse thrust: OK; the other engine failures, the later tuning and the T.O CONFIG NORMAL / WING TK LO LVL fixes: not sim-tested. Clearer names: not sim-tested (labels only). Engine alerts 2026-10-08 (feature branch): SAT ABOVE FLEX TEMP OK (recorded); THR LEVER ABV IDLE and the fan blocked / LOW N1 OK on develop 2026-10-09 (recorded). The fuel filter clog and the stall during a relight fix: not sim-tested. Nothing is sim-tested on this branch itself. |
| Pictures         | No pictures: the failures page, the ECAM alerts and the panels are the stock FBW displays.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

1. Clearer failure names

2. Transponder failures

3. RMP and VHF failures

4. FWC 1 and FWC 2 failures

5. Fire detection model and fire failures

6. Fire detection unit failures, FIRE TEST light logic, APU fire horn

7. Wing tank pump and X FEED valve failures

8. Centre tank transfer valve failures and fuel follow-ups

9. Engine flameout and seizure failures, in-flight relight
10. Engine oil failures: leak, filter clog, overheat

11. Engine fuel filter clog

12. Engine ignition and start failures, FCOM start sequence

13. Engine stall, EGT overtemperature, overspeed and vibration failures

14. FADEC, thrust lever and reverser failures

15. T.O CONFIG NORMAL and FUEL WING TK LO LVL fixes

16. ENG THR LEVER ABV IDLE and ENG SAT ABOVE FLEX TEMP

17. Engine fan blocked failure and ENG LOW N1

## 1. Clearer failure names

|           |       |        |                   |         |                               |
|-----------|-------|--------|-------------------|---------|-------------------------------|
| Aircraft: | A32NX | Where: | flyPad > Failures | Status: | Not sim-tested (labels only). |
|-----------|-------|--------|-------------------|---------|-------------------------------|

### What it is for

The failure names were audited ATA by ATA against what the systems code fails. Three names were misleading: the ATA 21 valve is the hot air pressure regulating valve, the FMGC failures only fail the flight guidance part of the FMGC,

and the RA failures are antenna failures. Only the labels change.

| ATA | Before                                      | Now                                                         |
|-----|---------------------------------------------|-------------------------------------------------------------|
| 21  | Trim Air Pressure Regulating Valve          | Hot Air Pressure Regulating Valve                           |
| 22  | FMGC 1 / FMGC 2                             | FMGC 1 (flight guidance) / FMGC 2 (flight guidance)         |
| 34  | RA 1 Interrupted / RA 2 Interrupted         | RA 1 antenna interrupted / RA 2 antenna interrupted         |
| 34  | RA 1 Direct Coupling / RA 2 Direct Coupling | RA 1 antenna direct coupling / RA 2 antenna direct coupling |

## How to use

1. Open flyPad > Failures and pick the failure by its new name (table above).

## How to test

| # | Do this                                           | Expected result                                                                                                         |
|---|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| 1 | Open flyPad > Failures > ATA 21 Air Conditioning. | "Hot Air Pressure Regulating Valve" is listed.                                                                          |
| 2 | Open ATA 22 Auto Flight.                          | "FMGC 1 (flight guidance)" and "FMGC 2 (flight guidance)".                                                              |
| 3 | Open ATA 34 Navigation.                           | "RA 1 antenna interrupted", "RA 2 antenna interrupted", "RA 1 antenna direct coupling", "RA 2 antenna direct coupling". |

## 2. Transponder failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 34 Navigation; pedestal ATC/TCAS panel; E/WD, STATUS | **Status:** Tested in the sim by the user: OK (2026-10-04).

## What it is for

Two new failures, **ATC/XPDR 1** and **ATC/XPDR 2**. MSFS has a single transponder: it stands for the transponder selected on the ATC panel (SYS 1 / SYS 2). When the selected one fails, the sim transponder stops replying and the ATC FAIL light comes on; selecting the other system brings the replies back. With both lost, the TCAS goes to standby. The ECAM alerts and STATUS follow the A320 FCOM PRO-ABN-NAV procedures.

Fix on the way: the ATC/XPDR STBY indication read a second sim transponder that does not exist; the standby state of each transponder now comes from the system selection and the mode selector.

## What you should see

| Situation                         | What you should see                                                                                                                                                                                  |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ATC/XPDR 1 failed, SYS 1 selected | ATC FAIL light; no transponder reply. E/WD amber <b>NAV ATC/XPDR 1 FAULT</b> with -ATC/XPDR ..... SYS 2 (only while XPDR 1 is selected and XPDR 2 works). STATUS INOP SYS: ATC/XPDR 1, ADS-B RPTG 1. |
| SYS 2 selected                    | ATC FAIL off, replies again; the procedure line is done.                                                                                                                                             |
| ATC/XPDR 2 failed                 | The same with NAV ATC/XPDR 2 FAULT, -ATC/XPDR ..... SYS 1, INOP SYS ATC/XPDR 2, ADS-B RPTG 2.                                                                                                        |
| Both failed                       | <b>NAV ATC/XPDR 1+2 FAULT</b> (crew awareness); STATUS INOP SYS: TCAS, ATC/XPDR 1, ATC/XPDR 2, ADS-B RPTG 1, ADS-B RPTG 2; the TCAS goes to standby.                                                 |

A transponder loses its bus (AC ESS SHED for XPDR 1, AC 2 for XPDR 2)      The transponder is lost, but no ATC/XPDR FAULT: a bus loss is an ELEC alert.

## Limitations and why

| Limitation                                                                                             | Why                                                                                                        | What to do                     |
|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|--------------------------------|
| The ATC/XPDR alerts are inhibited during the takeoff and below 800 ft in approach to the landing roll. | The FCOM gives the inhibition as a figure: the one of the RA faults is used (flight phases 3, 4, 5, 7, 8). | Test at the gate or in cruise. |

## How to use

1. Open flyPad > Failures > ATA 34 Navigation and activate **ATC/XPDR 1** or **ATC/XPDR 2**.
2. Follow the ECAM: select the other system on the ATC/TCAS panel.

## How to test

| # | Do this                                                               | Expected result                                                                                                                                                    |
|---|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate, powered, ATC/TCAS panel: SYS 1, mode AUTO (or ON). | No ATC FAIL light.                                                                                                                                                 |
| 2 | Activate <b>ATC/XPDR 1</b> .                                          | ATC FAIL light on; master caution and single chime; E/WD NAV ATC/XPDR 1 FAULT with -ATC/XPDR ..... SYS 2. ATC (or a traffic tool) no longer sees your transponder. |
| 3 | Open the STATUS page.                                                 | INOP SYS: ATC/XPDR 1, ADS-B RPTG 1.                                                                                                                                |
| 4 | Select SYS 2 on the ATC panel.                                        | ATC FAIL off, the transponder replies again, the SYS 2 line is done.                                                                                               |
| 5 | Activate <b>ATC/XPDR 2</b> as well.                                   | NAV ATC/XPDR 1+2 FAULT; STATUS INOP SYS: TCAS, ATC/XPDR 1, ATC/XPDR 2, ADS-B RPTG 1, ADS-B RPTG 2; the TCAS is in standby.                                         |
| 6 | Deactivate both failures.                                             | The alerts clear; the TCAS works again.                                                                                                                            |

## 3. RMP and VHF failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 23 Communication; pedestal RMP 1 and RMP 2 | **Status:** Tested in the sim by the user: OK (2026-10-04).

## What it is for

Five new ATA 23 failures: **RMP 1**, **RMP 2**, **VHF 1**, **VHF 2** and **VHF 3** (same ids as the A380X ATA 23 failures). A failed RMP goes blank and stops tuning; the other RMP still tunes every VHF (A320 FCOM DSC-23-10-20: "If one RMP fails, the remaining one controls all the VHF transceivers"). A failed VHF switches its MSFS COM radio off: it neither receives nor transmits.

## What you should see

| Situation           | What you should see                                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------|
| RMP 1 (or 2) failed | Both frequency displays blank, the green key lights and SEL off, the keys and knobs do nothing (FCOM DSC-23-60 failure cases). |

|                     |                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------|
| The other RMP       | Still tunes VHF 1, 2 and 3.                                                                       |
| VHF 1 (2, 3) failed | COM 1 (2, 3) silent: no reception, no transmission. The RMPs still show and change its frequency. |

### Limitations and why

| Limitation                                                            | Why                                                                                           | What to do                               |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|------------------------------------------|
| No ECAM alert for these failures.                                     | Not part of this change.                                                                      | Check the RMP and the radio.             |
| A NAV key left on on a failed RMP still holds the FMGC navaid tuning. | As with an RMP switched off: the navaid tuner (shared with the A380X) reads the NAV key only. | Avoid the NAV key before failing an RMP. |
| No RMP 3 and no audio control panel / AMU failure.                    | RMP 3 is not in the A32NX cockpit, and the MSFS radios have no audio channel to fail.         | None.                                    |

### How to use

1. Open flyPad > Failures > ATA 23 Communication and activate RMP 1, RMP 2, VHF 1, VHF 2 or VHF 3.
2. With an RMP failed, tune the radios from the other RMP.

### How to test

| # | Do this                                                                | Expected result                                                                                              |
|---|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 1 | A32NX powered, an ATIS frequency on VHF 1, audible.                    | The ATIS is heard.                                                                                           |
| 2 | Activate <b>RMP 1</b> .                                                | RMP 1 goes blank, its key lights go off, its knobs do nothing. The ATIS is still heard (VHF 1 itself works). |
| 3 | On RMP 2, press the VHF 1 key and tune another frequency, transfer it. | VHF 1 changes frequency: RMP 2 tunes VHF 1.                                                                  |
| 4 | Deactivate RMP 1. Activate <b>VHF 1</b> .                              | COM 1 goes silent; transmitting on VHF 1 is not possible. RMP 1 still shows the frequency.                   |
| 5 | Deactivate VHF 1.                                                      | The ATIS is heard again.                                                                                     |

## 4. FWC 1 and FWC 2 failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 31 Indicating / Recording System; E/WD, STATUS | **Status:** Tested in the sim by the user: OK (2026-10-04).

### What it is for

Two new failures, **FWC 1** and **FWC 2** (A320 FCOM DSC-31-05-30, PRO-ABN-FWS). With one FWC failed, the other one keeps the warning system working and shows the fault. With both failed, the ECAM alerts, memos, STATUS, MASTER WARN / CAUT lights, aural (including the STALL aural) and the altitude callouts are lost, and the E/WD shows the FWC 1+2 FAULT display. Each FWC also follows its own electrical supply.

### What you should see

| Situation    | What you should see                                                                                                                      |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------|
| FWC 1 failed | E/WD <b>FWS FWC 1 FAULT</b> (shown by FWC 2), level 1: no MASTER CAUT, no chime. STATUS: CAT 3 SINGLE ONLY; INOP SYS: CAT 3 DUAL, FWC 1. |
| FWC 2 failed | The same with FWS FWC 2 FAULT and FWC 2.                                                                                                 |

|                  |                                                                                                                                                                                                                   |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Both failed      | E/WD: <b>FWS FWC 1+2 FAULT</b> , -MONITOR SYS, -MONITOR OVERHEAD PANEL; right side NOT AVAIL: ECAM WARN, ALTI ALERT, STATUS, A/CALL OUT, MEMO. No other alert, memo, STATUS, STS reminder, master light or aural. |
| One FWC restored | Every active alert is shown again, as a new one.                                                                                                                                                                  |

## Limitations and why

| Limitation                                                                                             | Why                                                                                                       | What to do                     |
|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------------|
| FWS FWC 1(2) FAULT is level 1 and inhibited during the takeoff and the landing (phases 3, 4, 5, 7, 8). | The FCOM gives the level and the inhibition in figures only: those of the other computer faults are used. | Test at the gate or in cruise. |

## How to use

1. Open flyPad > Failures > ATA 31 Indicating / Recording System and activate FWC 1 and / or FWC 2.
2. With both failed, monitor the systems and the overhead panel yourself.

## How to test

| # | Do this                                                       | Expected result                                                                                                                                     |
|---|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate, powered, no alert. Activate <b>FWC 1</b> . | E/WD: FWS FWC 1 FAULT, no master caution, no chime.                                                                                                 |
| 2 | Open the STATUS page.                                         | CAT 3 SINGLE ONLY; INOP SYS: CAT 3 DUAL, FWC 1.                                                                                                     |
| 3 | Activate <b>FWC 2</b> as well.                                | E/WD: FWS FWC 1+2 FAULT, -MONITOR SYS, -MONITOR OVERHEAD PANEL, and NOT AVAIL: ECAM WARN, ALTI ALERT, STATUS, A/CALL OUT, MEMO. The memos are gone. |
| 4 | Press the STS key on the ECAM control panel.                  | No STATUS page (STATUS is in the NOT AVAIL list).                                                                                                   |
| 5 | Deactivate FWC 2.                                             | FWS FWC 1 FAULT again; the active alerts come back as new ones.                                                                                     |

## 5. Fire detection model and fire failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 26 Fire Protection; overhead FIRE panel; ENG MASTER panel; E/WD, STATUS | **Status:** Tested in the sim by the user: OK (2026-10-04).

### What it is for

Nine new failures: **Engine 1 fire, Engine 2 fire, APU fire**, and **Engine 1 fire detection loop A, Engine 1 fire detection loop B, Engine 2 fire detection loop A, Engine 2 fire detection loop B, APU fire detection loop A, APU fire detection loop B**.

Each zone now has the two detection loops and the fire detection unit of the aircraft (A320 FCOM DSC-26-20-10). A fire warning comes when both loops detect the fire, when one loop detects it and the other one is failed, or when both loops break within 5 s (flame effect). The logic moved from the A380X into the common code; the A380X behaviour is unchanged. The fires of the MSFS failures menu still give the warnings, through the loops. The FIRE TEST is unchanged.

- The ENG MASTER panel FIRE light comes on with the engine fire warning (before: FIRE TEST only).
- APU fire on the ground: the APU shuts down and the APU AGENT discharges automatically 3 s after the warning (FCOM DSC-26-20-20).

- Each AGENT discharge has one chance in two to put a flyPad fire out.
- Loop supplies (FCOM PRO-ABN-ELEC INOP SYS): DC BUS 2 for ENG 1 LOOP B and ENG 2 LOOP A, DC ESS BUS for ENG 1 LOOP A and ENG 2 LOOP B, DC BAT BUS for both APU loops. An unpowered loop is a failed loop.

## What you should see

| Situation                   | What you should see                                                                                                                                                                                   |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1 fire               | ENG 1 FIRE warning (from core/fire), red ENG 1 FIRE pushbutton light and red FIRE light on the ENG MASTER panel.                                                                                      |
| APU fire on the ground      | APU FIRE warning; the APU shuts down; 3 s later the APU AGENT discharges (DISCH light).                                                                                                               |
| AGENT discharged            | The fire goes out, or not (one chance in two per discharge).                                                                                                                                          |
| One loop failed             | Amber <b>ENG 1 FIRE LOOP A FAULT</b> (LOOP B, ENG 2, APU FIRE LOOP A / B); STATUS INOP SYS ENG 1 LOOP A (ENG 1 LOOP B, ENG 2 LOOP A / B, APU LOOP A / B). A fire is still detected by the other loop. |
| Both loops of a zone failed | <b>ENG 1 FIRE DET FAULT</b> (ENG 2, APU FIRE DET FAULT) instead of the two loop cautions; STATUS INOP SYS FIRE DET 1 (FIRE DET 2, APU FIRE DET).                                                      |

## Limitations and why

| Limitation                                                                                               | Why                                                                                           | What to do                        |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|-----------------------------------|
| FIRE DET FAULT also comes from a failed fire detection unit.                                             | See the next feature, "Fire detection unit failures".                                         | -                                 |
| The LOOP and DET FAULT cautions are inhibited during the takeoff and the landing (phases 3, 4, 5, 7, 8). | The FCOM gives the inhibition as a figure: that of the other crew awareness cautions is used. | Test at the gate or in cruise.    |
| A full MSFS restart is needed after an update.                                                           | The systems WASM module and the cockpit behaviour XML change.                                 | Restart the sim after installing. |

## How to use

1. Open flyPad > Failures > ATA 26 Fire Protection and activate a fire or a loop failure.
2. Fight a fire with the ECAM procedure (FIRE pushbutton, AGENT 1, AGENT 2). Deactivating the failure also ends the fire.

## How to test

| # | Do this                                                                                             | Expected result                                                                                                             |
|---|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, engines running. Activate <b>Engine 1 fire</b> .                               | ENG 1 FIRE warning, master warning, continuous chime, red light in the ENG 1 FIRE pushbutton and on the ENG MASTER 1 panel. |
| 2 | Follow the ECAM: ENG MASTER 1 OFF, push the ENG 1 FIRE pushbutton, press AGENT 1.                   | AGENT 1 DISCH; the fire goes out or not (one chance in two). If not, AGENT 2 gives another chance.                          |
| 3 | Deactivate the failure, reset the FIRE pushbutton. With the APU running, activate <b>APU fire</b> . | APU FIRE warning; the APU shuts down; about 3 s later the APU AGENT discharges by itself.                                   |
| 4 | Deactivate it. Activate <b>Engine 2 fire detection loop A</b> .                                     | Amber ENG 2 FIRE LOOP A FAULT; STATUS INOP SYS ENG 2 LOOP A.                                                                |

|   |                                                                              |                                                                                     |
|---|------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| 5 | Activate <b>Engine 2 fire</b> with loop A still failed.                      | ENG 2 FIRE warning: loop B alone detects the fire.                                  |
| 6 | Deactivate the fire, activate <b>Engine 2 fire detection loop B</b> as well. | The loop cautions are replaced by ENG 2 FIRE DET FAULT; STATUS INOP SYS FIRE DET 2. |
| 7 | Optional: start an engine fire from the MSFS failures menu.                  | The ENG FIRE warning still comes (through the loops).                               |

## 6. Fire detection unit failures, FIRE TEST light logic, APU fire horn

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 26 Fire Protection; overhead FIRE panel; ENG MASTER panel; E/WD, STATUS | **Status:** Tested in the sim by the user: OK (2026-10-04); the horn sound itself is silent in MSFS 2024. Rust tests (fire\_protection), unit tests: FireDetectionFaults.spec.ts, EngineMasterFireLight.spec.ts.

### What it is for

Three follow-ups of the fire detection model above:

- **Fire detection unit failures:** three new failures, **Engine 1 fire detection unit (FDU)**, **Engine 2 fire detection unit (FDU)** and **APU fire detection unit (FDU)**. A failed FDU gives the FIRE DET FAULT caution of its zone even with healthy loops, and detects no fire. Clearing the failure with a fire present gives the fire warning at once.
- **ENG MASTER panel FIRE light during the FIRE TEST:** the A320 FCOM (DSC-26-20-20, ENG 1(2) FIRE TEST pb) says that the FIRE lights do not come on with an engine 1 loop A fault or an engine 2 loop B fault. The light now stays dark in those cases (a loop fault is its failure or the loss of its DC ESS supply).
- **APU fire external horn:** an APU fire on the ground sounds the horn in the nose gear bay (FCOM DSC-26-20-20 APU FIRE light, DSC-49-10-20), on the same sound as the MECH call; not during the FIRE TEST.

### What you should see

| Situation                                                  | What you should see                                                                                                                                                                                                             |
|------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1 FDU failed                                        | Amber <b>ENG 1 FIRE DET FAULT</b> (ENG 2 FIRE DET FAULT, APU FIRE DET FAULT for the other units), no LOOP FAULT caution (a failed FDU cannot tell which loop is failed); STATUS INOP SYS FIRE DET 1 (FIRE DET 2, APU FIRE DET). |
| A fire in a zone with its FDU failed                       | No fire warning.                                                                                                                                                                                                                |
| FDU failure cleared while the fire burns                   | The fire warning comes at once.                                                                                                                                                                                                 |
| ENG 1 FIRE TEST with Engine 1 fire detection loop A failed | The ENG MASTER 1 FIRE light stays dark; the rest of the test as before.                                                                                                                                                         |
| ENG 2 FIRE TEST with Engine 2 fire detection loop B failed | The ENG MASTER 2 FIRE light stays dark.                                                                                                                                                                                         |
| APU fire on the ground                                     | The external horn variable is set (L:A32NX_FIRE_APU_EXTERNAL_HORN); the horn sound plays at the nose gear.                                                                                                                      |

### Limitations and why

| Limitation                                                            | Why                                                                      | What to do                                         |
|-----------------------------------------------------------------------|--------------------------------------------------------------------------|----------------------------------------------------|
| The APU fire horn is not heard in MSFS 2024.                          | The Asobo horn sound it uses is silent in MSFS 2024 (the MECH call too). | Check the L:var with a SimConnect / variable tool. |
| No APU SHUT OFF pb and no APU FIRE light on the external power panel. | The exterior model has no such panel.                                    | None.                                              |

|                                                |                                                                              |                                   |
|------------------------------------------------|------------------------------------------------------------------------------|-----------------------------------|
| A full MSFS restart is needed after an update. | The systems WASM module, the cockpit behaviour XML and the sound.xml change. | Restart the sim after installing. |
|------------------------------------------------|------------------------------------------------------------------------------|-----------------------------------|

### How to use

1. Open flyPad > Failures > ATA 26 Fire Protection and activate an "... fire detection unit (FDU)" failure.
2. Follow the ECAM (crew awareness); deactivate the failure to restore the unit.

### How to test

| # | Do this                                                                                          | Expected result                                                                                                  |
|---|--------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate, powered, no failure. Activate <b>Engine 1 fire detection unit (FDU)</b> .     | Amber ENG 1 FIRE DET FAULT, no ENG 1 FIRE LOOP A / B FAULT; STATUS INOP SYS FIRE DET 1.                          |
| 2 | Also activate <b>Engine 1 fire</b> .                                                             | No ENG 1 FIRE warning.                                                                                           |
| 3 | Deactivate <b>Engine 1 fire detection unit (FDU)</b> .                                           | The ENG 1 FIRE warning comes at once. Deactivate the fire.                                                       |
| 4 | Repeat with <b>Engine 2 fire detection unit (FDU)</b> and <b>APU fire detection unit (FDU)</b> . | ENG 2 FIRE DET FAULT / STATUS FIRE DET 2; APU FIRE DET FAULT / STATUS APU FIRE DET.                              |
| 5 | Activate <b>Engine 1 fire detection loop A</b> , then press and hold the ENG 1 FIRE TEST pb.     | The ENG 1 FIRE pushbutton lights as in the normal test, but the FIRE light on the ENG MASTER 1 panel stays dark. |
| 6 | Deactivate it, activate <b>Engine 2 fire detection loop B</b> , hold the ENG 2 FIRE TEST pb.     | The ENG MASTER 2 FIRE light stays dark. With loop A of engine 2 failed instead, it comes on.                     |
| 7 | On the ground with the APU running, activate <b>APU fire</b> .                                   | APU FIRE warning;<br>L:A32NX_FIRE_APU_EXTERNAL_HORN is 1 (the horn itself is silent in MSFS 2024).               |

## 7. Wing tank pump and X FEED valve failures

|                                                                                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX   <b>Where:</b> flyPad > Failures > ATA 28 Fuel; overhead FUEL panel; SD FUEL   <b>Status:</b> Tested in the sim by the user: OK (2026-10-04), after the fix that holds the MSFS pump / valve switch. |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Five new failures: **L TK pump 1**, **L TK pump 2**, **R TK pump 1**, **R TK pump 2** and **X FEED valve jammed in place**. The FUEL panel pushbuttons now set a selection, and the systems host moves the MSFS pump or valve switch from it: a failed pump is held off, the jammed valve is held where it was. The FAULT lights, the SD FUEL page and the cautions compare the selection with the real state (A320 FCOM PRO-ABN-FUEL).

- SD FUEL page: amber LO only for a pump that is ON with a low pressure; the X FEED valve is amber when it disagrees with its pushbutton (FCOM colours).
- The FUEL X FEED memo now needs the X FEED pushbutton ON and the valve not fully closed.

### What you should see

| Situation                         | What you should see                                                                                                                                                                      |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L TK pump 1 failed, pushbutton ON | FAULT light; amber LO on the SD FUEL page (page called). E/WD <b>FUEL L TK PUMP 1 LO PR</b> with -L TK PUMP 1 ..... OFF (shown while the pushbutton is ON). STATUS INOP SYS L TK PUMP 1. |



|                                       |                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Both pumps of one wing failed         | <b>FUEL L TK PUMP 1+2 LO PR</b> (R for the right wing): .IF NO FUEL LEAK: -FUEL X FEED ON (above FL 150 only), -ENG MODE SEL IGN, -L TK PUMP 1 OFF, -L TK PUMP 2 OFF, .WHEN L TK FUEL RQRD: L TK FEED GRVTY ONLY, -FUEL X FEED OFF (below FL 150, X FEED ON), PROC:GRVTY FUEL FEEDING, AVOID NEGATIVE G FACTOR. Each action line goes once done. STATUS INOP SYS L TK PUMPS. |
| X FEED valve jammed, pushbutton moved | The valve stays: amber on the SD FUEL page, <b>FUEL X FEED VALVE FAULT</b> (crew awareness), STATUS INOP SYS FUEL X FEED. With the valve stuck closed, no FUEL X FEED memo.                                                                                                                                                                                                  |

## Limitations and why

| Limitation                                                                            | Why                                                                                                                                                          | What to do                     |
|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| The cautions are inhibited during the takeoff and the landing (phases 3, 4, 5, 7, 8). | The FCOM gives the inhibition as a figure: that of the other single system faults is used.                                                                   | Test at the gate or in cruise. |
| The centre tank has no pump failure.                                                  | The A320neo centre tank has no pumps: its fuel is moved by the jet pumps through the CTR TK L / R XFR valves, whose jams are a feature of their own (below). | None.                          |

## How to use

1. Open flyPad > Failures > ATA 28 Fuel and activate a pump or the X FEED valve failure.
2. Follow the ECAM with the overhead FUEL panel; check the SD FUEL page.

## How to test

| # | Do this                                                                                                                          | Expected result                                                                                                                                                                      |
|---|----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate, APU or engines running, all fuel pumps ON. Activate <b>L TK pump 1</b> .                                      | After a few seconds: FAULT light in the L TK PUMP 1 pushbutton, SD FUEL page with amber LO, master caution, E/WD FUEL L TK PUMP 1 LO PR with -L TK PUMP 1 ..... OFF.                 |
| 2 | Set the L TK PUMP 1 pushbutton OFF. Open STATUS.                                                                                 | The FAULT light and the OFF line go; no LO on the SD; STATUS INOP SYS L TK PUMP 1.                                                                                                   |
| 3 | Set it ON again and also activate <b>L TK pump 2</b> .                                                                           | FUEL L TK PUMP 1+2 LO PR with its procedure (on the ground, below FL 150: .IF NO FUEL LEAK; -ENG MODE SEL IGN, -L TK PUMP 1 OFF, -L TK PUMP 2 OFF, ...); STATUS INOP SYS L TK PUMPS. |
| 4 | Deactivate both. With the X FEED valve closed, activate <b>X FEED valve jammed in place</b> , then set the X FEED pushbutton ON. | The valve stays closed: amber X FEED valve on the SD, FUEL X FEED VALVE FAULT, STATUS INOP SYS FUEL X FEED, no FUEL X FEED memo.                                                     |
| 5 | Deactivate the failure.                                                                                                          | The valve opens; the FUEL X FEED memo comes; the caution clears.                                                                                                                     |

## 8. Centre tank transfer valve failures and fuel follow-ups

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 28 Fuel; overhead FUEL panel; SD FUEL; flyPad checklists | **Status:** Tested in the sim by the user: OK (2026-10-04). Unit tests: FuelPumpValveFaults.spec.ts, FuelPumpsAndValves.spec.ts, FuelPumpValveIndications.spec.ts, CheckItemStates.spec.ts.

## What it is for

Two new failures, **CTR TK L XFR valve jammed in place** and **CTR TK R XFR valve jammed in place**: the centre tank transfer valve of that side stays open or closed, whatever its CTR TK XFR pushbutton commands. The FWC raises the A320 FCOM PRO-ABN-FUEL cautions: FUEL CTR L(R) XFR FAULT (valve not fully closed, or not fully open) and, with both valves stuck the same way, FUEL CTR L + R XFR FAULT, which replaces the two single ones. The SD FUEL page shows the valve amber and boxes the centre tank quantity.

- The centre tank fuel only transfers while an inner tank pump of the same wing runs: the jet pumps are driven by the wing tank pumps (FCOM DSC-28-10). Switching the wing pumps off stops the centre tank transfer.
- flyPad checklist: the securing / parking checklist item **FUEL PUMPS ... OFF** now reads the four wing tank pump pushbuttons, not whether the pumps run (the CTR TK XFR pushbuttons are items of their own in the FCOM).

## What you should see

| Situation                                 | What you should see                                                                                                                                                                                                                                                            |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L valve stuck open (CTR TK L XFR pb OFF)  | E/WD <b>FUEL CTR L XFR FAULT</b> : -CTR TK L XFR ... OFF, -FUEL X FEED ... ON, -L TK PUMP 1 ... OFF, -L TK PUMP 2 ... OFF, .WHEN CTR TK EMPTY: -L TK PUMP 1 ... ON, -L TK PUMP 2 ... ON, -FUEL X FEED ... OFF (each action line goes once done). STATUS INOP SYS CTR TK L XFR. |
| L valve stuck closed (CTR TK L XFR pb ON) | <b>FUEL CTR L XFR FAULT</b> : -FUEL MODE SEL ... MAN, .IF UNSUCCESSFUL: -FUEL X FEED ... ON, -L TK PUMP 1 / 2 ... OFF, .WHEN CTR TK EMPTY: pumps ON, X FEED OFF. STATUS INOP SYS CTR TK L XFR.                                                                                 |
| Both valves stuck open                    | <b>FUEL CTR L+R XFR FAULT</b> : -CTR TK L XFR ... OFF, -CTR TK R XFR ... OFF; STATUS INOP SYS CTR TK XFR.                                                                                                                                                                      |
| Both valves stuck closed                  | <b>FUEL CTR L+R XFR FAULT</b> : -FUEL MODE SEL ... MAN, .IF UNSUCCESSFUL: CTR AVAIL BY GRAVITY, 2T (4400LBS) UNUSABLE; STATUS: CTR TK USABLE BY GRAVITY, 2T (4400LBS) UNUSABLE, INOP SYS CTR TK XFR.                                                                           |
| SD FUEL page                              | The jammed valve amber; the centre tank quantity boxed.                                                                                                                                                                                                                        |

## Limitations and why

| Limitation                                                                            | Why                                                                                 | What to do                                  |
|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------|
| The cautions are inhibited during the takeoff and the landing (phases 3, 4, 5, 7, 8). | The FCOM gives the inhibition as a figure: that of the other fuel cautions is used. | Test at the gate or in cruise.              |
| No gravity transfer from the centre tank.                                             | Not simulated: with both valves stuck closed, the centre tank fuel stays there.     | Plan with the centre tank fuel as unusable. |

## How to use

1. Open flyPad > Failures > ATA 28 Fuel and activate **CTR TK L XFR valve jammed in place** or **CTR TK R XFR valve jammed in place**.
2. Move the CTR TK XFR pushbutton (or let the automatic control move the valve), then follow the ECAM with the overhead FUEL panel.

## How to test

| # | Do this | Expected result |
|---|---------|-----------------|
|---|---------|-----------------|

|   |                                                                                                                                                                                                                        |                                                                                                                                                                                                 |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate with fuel in the centre tank, engines or APU running, all FUEL pushbuttons ON. Activate <b>CTR TK L XFR valve jammed in place</b> while the valve is open, then set the CTR TK L XFR pushbutton OFF. | The valve stays open: master caution, E/WD FUEL CTR L XFR FAULT with -CTR TK L XFR ... OFF done, -FUEL X FEED ... ON, -L TK PUMP 1 ... OFF, -L TK PUMP 2 ... OFF; SD FUEL with the valve amber. |
| 2 | Open the STATUS page.                                                                                                                                                                                                  | INOP SYS: CTR TK L XFR.                                                                                                                                                                         |
| 3 | Also activate <b>CTR TK R XFR valve jammed in place</b> and set the CTR TK R XFR pushbutton OFF.                                                                                                                       | The two single cautions are replaced by FUEL CTR L+R XFR FAULT; STATUS INOP SYS CTR TK XFR.                                                                                                     |
| 4 | Deactivate both failures, CTR TK XFR pushbuttons ON. Set L TK PUMP 1 and 2 OFF.                                                                                                                                        | The left centre tank transfer stops (no jet pump drive) while the right one goes on.                                                                                                            |
| 5 | Set every wing tank pump pushbutton OFF and open the flyPad checklist with the FUEL PUMPS ... OFF item.                                                                                                                | The item is checked from the four wing tank pump pushbuttons.                                                                                                                                   |

## 9. Engine flameout and seizure failures, in-flight relight

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 72 Engine; ENG MASTER 1 / 2, ENG MODE selector; E/WD, STATUS, SD ENG | **Status:** Tested in the sim by the user on develop: OK, tests T1-T9 (2026-10-05); the LEAP-1A relight envelope (a27ba6c35): sim-tested OK 2026-10-05 (recorded), tests L1-L2. Rust tests (engine\_failure.rs of systems and a320\_systems, incl. the LEAP-1A envelope corners and two test-bed relights; full-aircraft tests incl. the ENG FIRE pb LP valve starvation), unit tests: EngineFailAlerts.spec.ts, A32NX\_FADEC.spec.ts, Eng.spec.ts, a320.spec.ts. The end of an in-flight start without N2 overshoot: sim-tested OK on develop 2026-10-06 (relight test T1, recorded), native test engine\_start\_throttle\_hold\_test. The engine fuel valve hold: not sim-tested on the A32NX (Rust tests sim\_fuel\_valve.rs). The stall during a relight fix: not sim-tested (installed 2026-10-08, no visible effect expected; native test T8). Not sim-tested on this branch.

### What it is for

Four new failures in a new flyPad chapter, ATA 72 Engine. A **flameout** cuts the engine fuel once: the crew can relight the engine with the ENG MASTER OFF then ON, inside the in-flight relight envelope. A **seizure** also stops the core: no relight while the failure is active. The FWC gives the A320 FCOM ENG 1(2) FAIL and ENG 1(2) SHUT DOWN alerts with their STATUS, and the flyPad failures page now describes the ATA 28 Fuel and ATA 72 Engine chapters like the others.

| Id    | flyPad failure (ATA 72 Engine)            | What the code does                                                                                                                                                                                                                                                                |
|-------|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 72000 | Engine 1 flameout (crew relight possible) | Cuts the engine 1 fuel (latched). The engine runs down and windmills; the FADEC does not relight it. ENG MASTER 1 OFF then ON inside the relight envelope relights it; it then runs normally while the failure stays listed. Deactivate and activate it again for a new flameout. |
| 72001 | Engine 2 flameout (crew relight possible) | The same for engine 2.                                                                                                                                                                                                                                                            |
| 72010 | Engine 1 seizure (no relight)             | Cuts the fuel; the core (N2) stops in about 3 s while N1 windmills. No relight while the failure is active; once it is cleared the engine relights by the normal procedure.                                                                                                       |
| 72011 | Engine 2 seizure (no relight)             | The same for engine 2.                                                                                                                                                                                                                                                            |

The **relight envelope** comes from the LEAP-1A chart ENG RELIGHT IN FLIGHT of the Air Arabia A320 QRH (18-Aug-21, ABN-19.06A, A6-ATA to ATF, CFM LEAP-1A engines, the engines FBW models). It replaces the PW1100G chart of the IndiGo A320neo FCOM (PDF page 4761), used until 2026-10-05 while no LEAP-1A chart was available. Vc is the indicated airspeed, Zp the pressure altitude.

| Zone | Where | Needs |
|------|-------|-------|
|------|-------|-------|

|                                           |                                                                                               |                                                                                                                            |
|-------------------------------------------|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| 3, stabilized windmill relight (N2 > 8 %) | 270-350 kt up to 27 000 ft; the ceiling falls from 27 000 ft at 330 kt to 24 000 ft at 350 kt | ENG MODE IGN, ENG MASTER OFF then ON                                                                                       |
| 1, starter assisted relight               | 135-270 kt up to 15 000 ft; 200-270 kt from 15 000 to 27 000 ft                               | ENG MODE IGN, ENG MASTER OFF then ON, and starter air (APU BLEED, or X BLEED OPEN with the other engine)                   |
| 2, windmill quick relight (t < 20 s)      | 230-270 kt up to 20 000 ft                                                                    | ENG MASTER OFF then ON within 20 s, with N2 above 15 % (design choice, not on the LEAP-1A chart), at any ENG MODE position |

- Above these limits (e.g. in cruise at FL 350) no relight lights up.
- A windmilling engine (no combustion, in flight) keeps  $N2 = 8 \% \times IAS / 270 \text{ kt}$  and  $N1 = 1.5 \times N2$  (at 300 kt: N2 8.9 %, N1 13.3 %); on the ground it runs down to 0. Its fuel flow shows 0 and its oil pressure falls with N2.
- During an in-flight relight both igniters are supplied (A320 FCOM DSC-70-80-30), whatever the ENG MODE selector: the SD ENG page shows A B.
- The SD ENG page reads the N2 the FADEC shows, so a seized core reads 0 there as on the E/WD.
- ENG ALL ENGINES FAILURE gets its FCOM flight phase inhibition (phases 1-4 and 8-10). Its OPT RELIGHT SPD line reads 270/.77, the LEAP-1A value of the same QRH (ABN-19.01A ALL ENG FAIL; the CFM56 aircraft use 300/.77); the removal of the unused 280/300/260 lines is on core/fcom-audit-fixes.
- **End of an in-flight start (fix):** an engine started or relit in flight used to overshoot to 110-114 % N2 for 3-7 s at the end of the start, because the thrust loop wound the MSFS throttle up while the engine was out. In flight, the MSFS throttle is now held at idle while the engine is out or starting, until the engine runs at idle; then the engine accelerates to the lever or A/THR demand (A320 FCOM DSC-70-80-40, QRH ENG RELIGHT IN FLIGHT "When idle reached"). Ground starts are unchanged, and reverse thrust passes through this hold (a first version of it blocked the reverse thrust).
- **Stall during a relight (fix):** the hold ends when the commanded N1 reaches idle. With the "Engine 1(2) compressor stall" failure active at the end of a relight, the stall N1 loss (up to 15 %) was counted in the commanded N1 and the hold ended about 0.8 s early; the stall N1 loss is now taken out of that check (native test T8: a relight with a stall).
- **ENG MODE selector (fix):** the FADEC read a selector variable that does not exist (always NORM), so it never saw IGN/START; it now reads the real selector.
- **Engine fuel valve hold (fix):** MSFS can reopen the engine fuel valve (valves 13 and 14 of the A32NX engine fuel cut) on its own after the systems closed it. The systems now command the valve again whenever MSFS disagrees, and once when a flight is loaded.

## What you should see

| Situation          | What you should see                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Flameout in flight | N2, EGT and FF run down, FF 0, N1 / N2 settle at the windmill values. Amber <b>ENG 1 FAIL</b> , single chime, MASTER CAUT, SD ENG page: -ENG MODE SEL ..... IGN, -THR LEVER 1 ..... IDLE, .IF NO RELIGHT AFT 30S; 30 s after the alert -ENG MASTER 1 ..... OFF, .IF DAMAGE: -ENG 1 FIRE P/B ..... PUSH, -AGENT1 AFTER 10S ..... DISCH, .IF NO DAMAGE: -ENG 1 RELIGHT ..... CONSIDER (A320 FCOM PRO-ABN-ENG ENG 1(2) FAIL). LAND ASAP amber. The ENG 1 FAULT light stays off (FCOM: a flameout does not light it). |

|                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ENG MASTER 1 OFF in flight (after a failure or not)</b> | ENG 1 FAIL goes, <b>ENG 1 SHUT DOWN</b> comes: .IF NO FUEL LEAK; - IMBALANCE ..... MONITOR, -TCAS MODE SEL ..... TA (with the wing anti-ice on: the pack of the affected side OFF and X BLEED OPEN; with the ENG FIRE pb pushed: X BLEED SHUT, WING ANTI ICE OFF, AVOID ICING CONDITIONS). STATUS: IF PERF PERMITS: X BLEED ..... OPEN, IF NO ENG 1 DAMAGE: CONSIDER ENG 1 RELIGHT, CAT 3 SINGLE ONLY, ONE PACK ONLY IF WAI ON; INOP SYS: CAT 3 DUAL, ENG 1 BLEED, PACK 1, MAIN GALLEY, GEN 1, G ENG 1 PUMP (WING A. ICE with the ENG FIRE pb pushed). |
| <b>Relight inside the envelope</b>                         | Light-up: FF, N2 and EGT rise, A B igniters on the SD ENG page, AVAIL; the engine alerts and LAND ASAP clear.                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Relight outside the envelope</b>                        | No light-up: N2 stays at the windmill value, FF 0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Seizure</b>                                             | N2 to 0 in about 3 s, N1 windmills, oil pressure 0 (red), ENG 2 FAIL as above; GEN 2 and the yellow engine pump lost.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Both engines failed</b>                                 | Red ENG ALL ENGINES FAILURE; the single ENG 1 / ENG 2 FAIL alerts do not show while it is active. Relighting one engine brings the single alert of the other one.                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>On the ground</b>                                       | ENG 1 FAIL with the ground lines (-THR LEVER 1 ..... IDLE, -ENG MASTER 1 ..... OFF, .IF DAMAGE: ..., -AGENT 1 ..... DISCH, .IF NO DAMAGE: ...), no LAND ASAP; N1 / N2 run down to 0. ENG MASTER OFF gives no ENG SHUT DOWN in flight phases 1-2 and 9-10 (FCOM: phases 3-8 only).                                                                                                                                                                                                                                                                      |

## Limitations and design choices

| Limitation                                                                                               | Why                                                                                                                                                 | What to do                                                                  |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| The relight envelope applies to every in-flight relight, also after a crew shutdown without any failure. | Design choice: MSFS would otherwise relight anywhere; the QRH chart is the limit of any relight.                                                    | Relight inside the envelope (descend and adjust the speed).                 |
| The envelope corners are read off the QRH chart grid.                                                    | The chart gives no table; the calibrated airspeed is taken as the indicated airspeed.                                                               | -                                                                           |
| The quick relight also needs N2 above 15 %.                                                              | Design choice kept from the PW1100G chart (the LEAP-1A chart only says $t < 20$ s): the sign of an engine that was running before the MASTER cycle. | An engine that has windmilled for a while needs ENG MODE IGN (zone 1 or 3). |
| The windmill N1 / N2 values are design values.                                                           | The chart only marks zone 3 "N2 > 8 %"; N2 is taken proportional to the airspeed, 8 % at 270 kt, and $N1 = 1.5 \times N2$ .                         | -                                                                           |
| The seizure stops the core in about 3 s.                                                                 | Design choice: the FCOM gives no rate.                                                                                                              | -                                                                           |
| ENG 1(2) FAIL does not come back after the ENG MASTER OFF, even if the relight does not light up.        | Design choice: the MASTER OFF disarms the alert; ENG SHUT DOWN is shown meanwhile.                                                                  | After a failed attempt (no light-up within 30 s), MASTER OFF and try again. |
| While ENG ALL ENGINES FAILURE is active, the single engine alerts are not shown.                         | Design choice: its procedure replaces them.                                                                                                         | -                                                                           |

|                                                                                                    |                                                                                                                                                                         |                                   |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| In flight, the HP fuel valve opening at N2 > 15 % is not modelled.                                 | The fuel comes back when the engine lights up inside the envelope (on the ground the start sequence of "Engine ignition and start failures" opens the fuel at 22 % N2). | -                                 |
| The idle hold after an in-flight start ends after a fixed time if MSFS settles below the FBW idle. | Design choice (no FCOM value): MSFS can end its start slightly below the FBW idle core speed.                                                                           | -                                 |
| A full MSFS restart is needed after an update.                                                     | The systems WASM module, the FADEC WASM module and the fbw WASM module (throttle hold) change.                                                                          | Restart the sim after installing. |

## How to use

1. Open flyPad > Failures > ATA 72 Engine and activate a flameout or a seizure.
2. Follow the ECAM (ENG FAIL, then ENG SHUT DOWN). To relight, get inside the envelope (table above), ENG MODE IGN, ENG MASTER OFF for 30 s, then ON. For a quick relight in zone 2, set the MASTER OFF then ON at once (within 20 s, N2 above 15 %, 230-270 kt up to 20 000 ft).
3. Clear the failure in the flyPad after the test; a seizure must be cleared before a relight.

## How to test

From the test plan [reports/test-plan-engine-failures-a1.md](#). Setups: S1 cruise 60 t, FL 350, M.78; S2 60 t, 10 000 ft, 300 kt; S3 60 t, 15 000 ft, 210 kt, APU running with APU BLEED ON; S4 on the ground, both engines at idle.

| # | Do this                                                                                                           | Expected result                                                                                                                                                                  |
|---|-------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | T1 (S1): activate <b>Engine 1 flameout (crew relight possible)</b> .                                              | ENG 1 FAIL with its lines, LAND ASAP, windmill N1 / N2, FF 0, oil pressure falling with N2; the 30 s lines come after 30 s. ENG MODE IGN and THR LEVER 1 IDLE clear their lines. |
| 2 | T1: after 30 s, ENG MASTER 1 OFF; then MASTER ON at FL 350.                                                       | ENG 1 SHUT DOWN with its STATUS and INOP SYS; at FL 350 no light-up (outside the envelope), A B igniters on the SD ENG page.                                                     |
| 3 | T2: descend to 20 000 ft or below at 280-300 kt; ENG MODE IGN, MASTER 1 OFF 30 s, ON.                             | Light-up at once; the engine back at idle in about 30-60 s; all engine 1 alerts and LAND ASAP clear.                                                                             |
| 4 | T3 (S3): flameout; MASTER 1 OFF; APU BLEED OFF, X BLEED not open; 30 s; MASTER 1 ON.                              | No light-up (210 kt is below zone 3, no starter air). MASTER OFF, APU BLEED ON, 30 s, MASTER ON: the start valve opens and the engine lights up.                                 |
| 5 | T4 (S2 slowed to 245 kt below 13 000 ft, ENG MODE NORM): flameout, then at once MASTER 1 OFF then ON within 20 s. | Quick relight at NORM; the ENG MODE knob stays at NORM and still works afterwards. Waiting until N2 is below 15 % before the MASTER OFF / ON: no light-up.                       |
| 6 | T5 (S2): activate <b>Engine 2 seizure (no relight)</b> .                                                          | N2 to 0 in about 3 s, N1 windmills, oil pressure 0, ENG 2 FAIL; MASTER 2 OFF 30 s / ON at 300 kt: no light-up. Clear the seizure, MASTER 2 OFF 30 s / ON: light-up.              |
| 7 | T6 (S2, optional): activate both flameouts.                                                                       | ENG ALL ENGINES FAILURE without the single ENG FAIL alerts; relighting engine 1 brings ENG 2 FAIL.                                                                               |
| 8 | T7 (S1): no failure, MASTER 1 OFF at FL 350, then ON with ENG MODE IGN.                                           | ENG 1 SHUT DOWN; no light-up at FL 350; at FL 200 / 290 kt, MASTER OFF 30 s then ON: light-up.                                                                                   |

|    |                                                                                                                                               |                                                                                                                                                                                                           |
|----|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9  | T8 (S4): activate <b>Engine 1 flameout (crew relight possible)</b> on the ground.                                                             | ENG 1 FAIL with the ground lines, no LAND ASAP, N1 / N2 to 0; MASTER 1 OFF gives no ENG 1 SHUT DOWN; a normal start works.                                                                                |
| 10 | T9: normal flight (starts, single-engine taxi, takeoff to descent, shutdown); on the ground at idle, push the ENG 1 FIRE pb with MASTER 1 ON. | No ENG FAIL / SHUT DOWN alert in the normal flight. With the FIRE pb: ENG 1 SHUT DOWN at once, no ENG 1 FAIL; the engine stops after about 100 s on its residual fuel (LP valve starvation of core/fire). |

LEAP-1A envelope re-test ( `reports/test-card-a32nx-leap-relight.md` , recorded over SimConnect, OK 2026-10-05): two points the old PW1100G envelope refused. L1 setup: FL 150, 250 kt, AP and A/THR ON, APU OFF, ENG MODE NORM, both engines running. L2 setup: climbed to FL 265 at 290 kt (279 kt at the relight), AP and A/THR ON, APU OFF, X BLEED AUTO, ENG MODE NORM.

| # | Do this                                                                                                                                                                                                                                           | Expected result                                                                                                                                                                  |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | L1 (quick relight at FL 150): ENG MASTER 1 OFF, count 5 s, ENG MASTER 1 ON.                                                                                                                                                                       | Engine 1 fuel flow comes back within a few seconds, N2 and EGT rise, engine 1 back at idle; no ENG 1 FAIL stays; the ENG MODE selector stays at NORM.                            |
| 2 | L2 (windmill relight at FL 265): activate <b>Engine 1 flameout (crew relight possible)</b> ; THR LEVER 1 IDLE; ENG MODE IGN/START; ENG MASTER 1 OFF, count 10 s; ENG MASTER 1 ON. At idle: ENG MODE NORM, THR LEVER 1 CL, deactivate the failure. | Engine 1 fuel flow appears within a few seconds, N2 and EGT rise, engine 1 at idle within about 60 s, ENG 1 FAIL goes away (the aircraft may sink a few hundred feet meanwhile). |

End of the in-flight start ( `reports/test-card-relight-batch-2026-10-06.md` T1, recorded, OK 2026-10-06 on develop). Setup: FL 150, 250 kt, AP and A/THR ON, APU OFF, ENG MODE NORM, both engines running, both thrust levers in CL.

| # | Do this                                                                                               | Expected result                                                                                                                                                                                                                                                 |
|---|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | ENG MASTER 1 OFF, count 5 s, ENG MASTER 1 ON. Leave both levers in CL and watch engine 1 N2 for 40 s. | Engine 1 relights within about 10 s; its N2 rises to idle (about 70 %) and holds there until the engine runs, then rises in about 5 s to the N2 of engine 2 (about 93 %). Engine 1 N2 never goes more than 1-2 % above engine 2 N2 (before the fix: 110-114 %). |

## 10. Engine oil failures: leak, filter clog, overheat

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 79 Oil; SD ENGINE and CRUISE pages; E/WD | **Status:** Sim-tested by the user on develop, data-checked OK (2026-10-07 retest card T1: no false oil alert in a climb to FL 300; the three oil failures together in cruise: overheat 81 to 158 °C with ENG 2 OIL HI TEMP, leak to the red oil pressure below 13 PSI with ENG 1 OIL LO PR, then the shutdown). The later tuning (gradual cool-down after the overheat, overheat times): not sim-tested on the A32NX. Rust tests `oil_failure.rs`, native tests `engine_oil_failures_test` and `oil_system_test`, unit tests `EngineOilAlerts.spec.ts`, `EngOilIndications.spec.ts`.

### What it is for

Six new failures: **Engine 1 oil leak**, **Engine 2 oil leak**, **Engine 1 oil filter clog**, **Engine 2 oil filter clog**, **Engine 1 oil overheat** and **Engine 2 oil overheat**, with the oil indications and the ECAM alerts of the A320 FCOM (DSC-70-90-40, PRO-ABN-ENG).

The FADEC computes the oil quantity, pressure and temperature again: its oil model had been dead since a FADEC migration and is restored (from the A380X FADEC, with the A32NX engine imbalance effect on the oil pressure). The failures act on that model:

- **Leak:** the oil system empties at 2 qt per minute of simulation time (the SD tank reading falls about 1.6 qt/min). The pump keeps its normal pressure down to 2.5 qt in the whole system and gives none at 0.6 qt, so the pressure



falls once the tank reads nearly empty.

- **Filter clog:** CLOG on the SD ENGINE page and the ENG OIL FILTER CLOG caution, no other effect.
- **Overheat:** the oil goes to 135 °C at idle and 175 °C at 100 % N2 (about 165 °C at cruise), with a 60 s time constant: ENG OIL HI TEMP after about 2 minutes in cruise; THR LEVER IDLE brings it below 155 °C within about 30 s. Once the failure is cleared the oil cools down gradually to its normal temperature.
- **SD ENGINE page:** the FCOM 0-22 QT scale; the quantity pulses below 3.25 QT (until 4.75 QT); the oil pressure red below 13 PSI, pulsing between 13 and 16 PSI with N2 above 75 % (until it is back above 20 PSI); amber CLOG under the oil pressure. The CRUISE page shows the same FADEC oil quantity.
- **Fixes found in the sim tests:** the SD oil quantity read nearly empty in every climb (the oil gulping formula got the thrust in newtons instead of pounds), and the pressure followed the tank reading, which gave a false ENG OIL LO PR in a normal climb: the pump pressure now follows the oil of the whole system. The overheat stopped far below its target because MSFS pulls the oil temperature back to its own model: the FADEC now keeps its own overheat temperature.
- The start N2 and fuel flow of the FADEC model also blend smoothly at low N2 now (they overshoot below about 10 % N2).

## What you should see

| Situation                       | What you should see                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Oil leak, after several minutes | Oil quantity falling, then pulsing below 3.25 QT; the oil pressure falls and turns red below 13 PSI; red <b>ENG 1 OIL LO PR</b> , MASTER WARN and continuous chime: -THR LEVER 1 ... IDLE, -ENG MASTER 1 ... OFF.                |
| Oil filter clog                 | Amber <b>ENG 2 OIL FILTER CLOG</b> (title only, single chime) and amber CLOG on the SD ENGINE page.                                                                                                                              |
| Oil overheat                    | The oil temperature rises from about 85 °C, pulses above 140 °C and is amber above 155 °C; amber <b>ENG 2 OIL HI TEMP</b> : -THR LEVER 2 ... IDLE, -ENG MASTER 2 ... OFF. It also comes after more than 15 minutes above 140 °C. |
| Lever at idle                   | The -THR LEVER line goes.                                                                                                                                                                                                        |
| ENG MASTER OFF                  | The oil alert ends and ENG SHUT DOWN takes over (FCOM associated procedure).                                                                                                                                                     |

## Limitations and why

| Limitation                                                                                                     | Why                                                                                                  | What to do      |
|----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-----------------|
| Inhibitions: OIL LO PR in flight phases 1 and 10, OIL HI TEMP in 4, 5, 7, 8, OIL FILTER CLOG in 3, 4, 5, 7, 8. | The FCOM figures (2019 FCOM pages 2281-2283).                                                        | Test in cruise. |
| The oil alerts and CLOG only show with the engine running and its ENG MASTER ON.                               | Design choice: a stopped engine has no oil pressure, and the procedures end with the ENG MASTER OFF. | -               |
| The leak rate, the pressure loss and the overheat temperatures are design values.                              | The FCOM gives no rates; the overheat cause is not modelled either.                                  | -               |
| The leak rate is per simulation minute.                                                                        | At 4x sim rate the oil goes four times faster on the real clock.                                     | -               |



|                                                                                  |                                                                                                                  |                                   |
|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| The upper oil pressure scale stays the FBW one (130 PSI, advisory from 129 PSI). | The FCOM 0-100 PSI scale is the CFM56 one; the FBW LEAP-1A oil pressure reaches about 90 PSI at take-off thrust. | -                                 |
| A full MSFS restart is needed after an update.                                   | The systems and FADEC WASM modules change.                                                                       | Restart the sim after installing. |

### How to use

1. Call the SD ENGINE page (ECAM control panel ENG key).
2. Open flyPad > Failures > ATA 79 Oil and activate a leak, a filter clog or an overheat.
3. Follow the ECAM (THR LEVER IDLE, then ENG MASTER OFF if needed). Deactivate the failure after the test.

### How to test

From `reports/test-card-retest-2026-10-07.md` T1 (recorded OK on develop 2026-10-07). Setup: normal departure, takeoff and climb at CL with A/THR ON, then cruise at FL 300-390.

| # | Do this                                                                                                                           | Expected result                                                                                                                                                                                    |
|---|-----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Climb normally and watch the oil indications.                                                                                     | No OIL LO PR, no pulsing oil quantity; oil quantity about 10-15 qt in the climb.                                                                                                                   |
| 2 | In cruise, SD ENGINE page. Activate <b>Engine 2 oil filter clog</b> , <b>Engine 2 oil overheat</b> and <b>Engine 1 oil leak</b> . | Amber ENG 2 OIL FILTER CLOG and CLOG on the SD; engine 2 oil temperature rises past 155 °C within about 3 minutes, then amber ENG 2 OIL HI TEMP with -THR LEVER 2 ... IDLE, -ENG MASTER 2 ... OFF. |
| 3 | Deactivate <b>Engine 2 oil filter clog</b> and <b>Engine 2 oil overheat</b> .                                                     | Both engine 2 alerts and CLOG go; the temperature falls gradually.                                                                                                                                 |
| 4 | Wait for the leak (about 6 to 10 minutes after it began).                                                                         | Engine 1 oil quantity falls about 2 QT/min and pulses below 3.25 QT; the pressure falls and turns red below 13 PSI; red ENG 1 OIL LO PR with MASTER WARN.                                          |
| 5 | THR LEVER 1 IDLE, ENG MASTER 1 OFF. Deactivate <b>Engine 1 oil leak</b> .                                                         | The lever line goes; after the MASTER OFF, ENG 1 SHUT DOWN replaces the oil alert.                                                                                                                 |

## 11. Engine fuel filter clog

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 73 Engine - Fuel And Control; SD ENGINE page; E/WD | **Status:** Not sim-tested (offline: Rust `fuel_filter_failure.rs` tests, `EngFuelFilterIndication.spec`, `EngineFuelFilterAlerts.spec`, failure list specs). The A380X version of the same code path was sim-tested on develop (2026-10-08).

### What it is for

Two new failures, **Engine 1 fuel filter clog** and **Engine 2 fuel filter clog**: "the pressure loss across the fuel filter is excessive" (FCOM DSC-70-90-40). Amber **CLOG** below FUEL USED on the SD ENGINE page while the engine runs, and the **ENG 1(2) FUEL FILTER CLOG** caution (crew awareness, "short term engine operation is not affected"). No effect on the engine: the filter is bypassed.

### Limitations and why

| Limitation                                   | Why                      | What to do                       |
|----------------------------------------------|--------------------------|----------------------------------|
| Inhibited in flight phases 3, 4, 5, 7 and 8. | The FCOM procedure page. | Test on the ground or in cruise. |

|                                       |                                                   |   |
|---------------------------------------|---------------------------------------------------|---|
| No fuel system contamination failure. | Not modelled; the clog only gives the indication. | - |
|---------------------------------------|---------------------------------------------------|---|

## How to use

1. Call the SD ENGINE page (ECAM control panel ENG key).
2. Open flyPad > Failures > ATA 73 and activate **Engine 1 fuel filter clog** with engine 1 running.
3. Deactivate it after the test.

## How to test

On the ground with engine 1 running at idle (flight phase 1 or 2), SD ENGINE page.

| # | Do this                                     | Expected result                                                                                                         |
|---|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| 1 | Activate <b>Engine 1 fuel filter clog</b> . | Amber CLOG below FUEL USED of engine 1; amber ENG 1 FUEL FILTER CLOG with MASTER CAUT. Engine 1 keeps running normally. |
| 2 | Deactivate it.                              | CLOG and the caution go.                                                                                                |

## 12. Engine ignition and start failures, FCOM start sequence

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 74 Ignition, ATA 80 Starting; ENG MODE, ENG MASTER, ENG MAN START; E/WD, STATUS, SD ENGINE | **Status:** Sim-tested by the user on develop: OK (2026-10-06 integration flight S7, recorded: a ground start with Engine 1 igniter A failed, the automatic dry crank and the new start with both igniters; the dry crank with ENG MAN START). The other start failures: not sim-tested (Rust tests). Rust tests engine\_start.rs, native test start\_sequence\_test, unit tests EngineStartAlerts.spec.ts, StartIndications.spec.ts.

## What it is for

The FBW FADEC ran the engine model but not what a real FADEC does during a start. The systems now run the start sequence of the A320 FCOM (DSC-70-80-30, DSC-70-80-40):

- **Igniters:** one igniter for a first automatic start on the ground, alternated between starts; both for a new attempt, a manual start and an in-flight start. Continuous ignition with the ENG MODE selector at IGN/START (one igniter, both if it has failed), with the green IGNITION memo. The SD igniter indication now comes from this sequence.
- **Automatic start:** ignition from 16 % N2, fuel (HP valve) at 22 % N2, ignition off and start valve closed at 50 % N2. On the ground, a start that does not light up within 18 s, stalls, hangs or goes above 725 °C EGT is aborted, dry cranked for 30 s and tried again with both igniters, up to three attempts; then the ENG FAULT light (ENG MASTER panel) until ENG MASTER OFF.
- **ENG MAN START pushbuttons:** manual start, dry crank (ENG MODE CRANK, MAN START ON, MASTER OFF) and wet crank. The MSFS starter turns the core while the sequence keeps the fuel cut, with no EGT rise.
- The SD ENGINE page shows the start indications at CRANK too.
- Tuning: an engine that is OFF only shows running once MSFS really burns fuel in it.

| flyPad failure (both engines)                     | ATA         | What the code does                                                                                  |
|---------------------------------------------------|-------------|-----------------------------------------------------------------------------------------------------|
| Engine 1(2) igniter A / igniter B                 | 74 Ignition | The igniter does not light the engine: ENG IGN A (B) FAULT; a start that uses it does not light up. |
| Engine 1(2) start valve stuck closed / stuck open | 80 Starting | The start valve stays as it is whatever the FADEC commands: ENG START VALVE FAULT.                  |
| Engine 1(2) hot start (start EGT over limit)      | 80 Starting | The start EGT overshoots: START FAULT EGT OVERLIMIT, abort and new attempts.                        |

|                                              |                |                                                                                                                            |
|----------------------------------------------|----------------|----------------------------------------------------------------------------------------------------------------------------|
| Engine 1(2) hung start (N2 stops below idle) | 80<br>Starting | N2 hangs below idle: START FAULT HUNG START.                                                                               |
| Engine 1(2) stall during the start           | 80<br>Starting | N2 hangs and the EGT overshoots: START FAULT STALL.                                                                        |
| Engine 1(2) starter shaft shear              | 80<br>Starting | The starter gets air but does not turn the engine: no start, no starter assisted relight; START FAULT STARTER SHAFT SHEAR. |

## What you should see

| Situation                                   | What you should see                                                                                                                                                                                                                                                                                                       |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Start fault on the ground (automatic start) | Amber <b>ENG 1 START FAULT</b> with the cause (IGNITION FAULT, STALL, EGT OVERLIMIT, HUNG START, STARTER SHAFT SHEAR, LO START AIR PRESS or THR LEVER NOT AT IDLE), then AUTO CRANK IN PROGRESS during the dry crank, NEW START IN PROGRESS during the next attempt, and -ENG MASTER 1 ... OFF once the start is aborted. |
| Start fault, manual start or in flight      | Manual start on the ground: -ENG MASTER 1 ... OFF, -MAN START 1 ... OFF. In flight: -ENG MASTER 1 ... OFF. Starter shaft shear in flight: WINDMILL START ONLY, and STATUS ENG 1 WINDMILL START ONLY. Low start air: -BLEED AIR SUPPLY ... CHECK; lever not at idle: -THR LEVER 1 ... IDLE.                                |
| Start valve stuck open after the start      | <b>ENG 1 START VALVE FAULT</b> , START VALVE NOT CLOSED: -APU BLEED ... OFF (engine 1), -X BLEED ... SHUT; in flight -ENG 1 BLEED ... OFF, -MAN START 1 ... OFF, -WING ANTI ICE ... OFF, AVOID ICING CONDITIONS (with its STATUS); on the ground -ENG MASTER 1 ... OFF.                                                   |
| Start valve stuck closed at a start         | ENG 1 START VALVE FAULT, START VALVE NOT OPEN: -X BLEED ... OPEN (other engine running), -APU BLEED ... ON (APU available, below FL 200), .IF UNSUCCESSFUL: MAN START / ENG MASTER OFF.                                                                                                                                   |
| Igniter failed                              | <b>ENG 1 IGN A FAULT</b> (IGN B FAULT) crew awareness, STATUS INOP SYS ENG 1 IGN A (B); both failed: ENG 1 IGN A+B FAULT, AVOID ADVERSE CONDITIONS, INOP SYS ENG 1 IGN.                                                                                                                                                   |
| ENG MODE IGN/START with the engines running | Green IGNITION memo.                                                                                                                                                                                                                                                                                                      |

## Limitations and why

| Limitation                                                                                                                                           | Why                                                         | What to do                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|----------------------------------|
| The numbers are those of the CFM56-5B FCOM.                                                                                                          | FBW models the LEAP-1A, for which no FCOM is available.     | -                                |
| The 30 s automatic dry crank is a design value.                                                                                                      | The FCOM gives no length (30 s is its minimum ventilation). | -                                |
| No starter time limit.                                                                                                                               | The A320 FCOM gives none.                                   | -                                |
| The SD still shows the selected igniter when that igniter has failed.                                                                                | Design choice: the FCOM shows the igniter energized.        | -                                |
| Inhibitions: the three cautions in flight phases 3, 4, 5, 7, 8; IGN A or B FAULT also in 6; START FAULT also in 6 when due to the lever not at idle. | The FCOM figures.                                           | Test on the ground or in cruise. |

|                                                                 |                                                                                            |                                                                              |
|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| The "EEC control of start valve failed" lines are not modelled. | They are for IAE and PW engines.                                                           | -                                                                            |
| An aborted automatic start takes about 2.5 minutes in the sim.  | Up to three attempts with 30 s dry cranks.                                                 | Use the igniter test below; the other abort paths are covered by Rust tests. |
| A full MSFS restart is needed after an update.                  | The systems and FADEC WASM modules and the cockpit behaviour XML (ENG FAULT light) change. | Restart the sim after installing.                                            |

## How to use

1. Open flyPad > Failures > ATA 74 Ignition or ATA 80 Starting and activate a failure before the start.
2. Start the engine as usual (ENG MODE IGN/START, ENG MASTER ON) and follow the ECAM; the FADEC aborts and retries a failed automatic start on the ground by itself.
3. For a dry crank: ENG MODE CRANK, ENG MAN START ON with the ENG MASTER OFF.

## How to test

From the integration plan `reports/test-plan-integration-2026-10-06.md` S7 (recorded OK on develop 2026-10-06).  
 Setup: A32NX cold and dark at the gate, freshly loaded, external power or batteries ON, APU AVAIL, APU BLEED ON, parking brake ON, thrust levers IDLE.

| # | Do this                                                                                                                                               | Expected result                                                                                                                                                                                              |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | flyPad > Failures > ATA 74 Ignition: activate <b>Engine 1 igniter A</b> . ENG MODE IGN/START, ENG MASTER 1 ON. Wait 75 s.                             | About 20 s after MASTER ON: amber ENG 1 START FAULT, IGNITION FAULT, AUTO CRANK IN PROGRESS and amber ENG 1 IGN A FAULT; SD ENG: N2 about 20-30 %, no EGT rise, start valve open, igniter A shown then gone. |
| 2 | Keep waiting.                                                                                                                                         | About 50 s after MASTER ON: NEW START IN PROGRESS, SD igniters A B, EGT rises, engine 1 starts to idle, START FAULT goes; the ENG 1 FAULT light stays off. Deactivate the failure.                           |
| 3 | ENG MODE CRANK; ENG MAN START 2 pb ON (overhead, guarded) for 20 s, then OFF; ENG MODE NORM.                                                          | SD ENG: engine 2 start valve open, N2 about 20-25 % and steady, no fuel flow, no EGT rise, no igniter; engine 2 does not start. Then the valve closes and N2 runs down. No ENG 2 START FAULT.                |
| 4 | Optional (not sim-tested): activate <b>Engine 2 starter shaft shear</b> , ENG MODE IGN/START, ENG MASTER 2 ON.                                        | N2 does not rise; ENG 2 START FAULT with STARTER SHAFT SHEAR, -ENG MASTER 2 ... OFF, -MAN START 2 ... OFF. ENG MASTER 2 OFF and deactivate the failure.                                                      |
| 5 | Optional (not sim-tested): engine 1 off, activate <b>Engine 1 start valve stuck open</b> , then start engine 1 (ENG MODE IGN/START, ENG MASTER 1 ON). | Above 50 % N2 the valve stays open: ENG 1 START VALVE FAULT, START VALVE NOT CLOSED with its ground lines (-APU BLEED ... OFF, -X BLEED ... SHUT, -ENG MASTER 1 ... OFF).                                    |

## 13. Engine stall, EGT overtemperature, overspeed and vibration failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 72 Engine, ATA 77 Engine Indicating; E/WD, SD ENGINE | **Status:** Sim-tested by the user on develop: OK (2026-10-06 integration flight, recorded: S8 T3 stall in the climb, S9 T1 EGT overtemperature with high vibration). VIB N2 then stayed at 4.6 at idle, above the 4.3 advisory: the vibration tuning that brings it below at idle is not sim-tested. The overspeed indication: not sim-tested. Rust tests engine\_malfunction.rs, unit tests EngineParameterAlerts.spec.ts, EngineLimits.spec.ts, EngVibration.spec.ts, Eng.spec.ts.

## What it is for

Eight new failures; the engine keeps running:

| flyPad failure (both engines)                | ATA                  | What the code does                                                                                                                                                                                                                                |
|----------------------------------------------|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1(2) compressor stall (above 60 % N1) | 72 Engine            | Above 60 % N1 command the engine stalls: it loses N1 (about 15 %), the EGT rises (about 100 °C or more), N1 and N2 fluctuate, N1 vibrates. It recovers with the lever at IDLE and stalls again above the threshold (QRH: reduce thrust below it). |
| Engine 1(2) EGT overtemperature              | 72 Engine            | The EGT is higher in proportion to N1 (about 100 °C at climb thrust): ENG EGT OVER LIMIT at climb thrust.                                                                                                                                         |
| Engine 1(2) N1/N2 overspeed indication       | 72 Engine            | The N1 and N2 indications read 7 % / 6 % high: ENG N1 OVER LIMIT at takeoff thrust. The thrust is unchanged.                                                                                                                                      |
| Engine 1(2) high vibration                   | 77 Engine Indicating | N1 and N2 vibrations growing with the square of the rotor speed: above the SD advisory (6 / 4.3) at climb and cruise thrust, below it at reduced thrust and clearly below at idle. No ECAM alert (QRH procedure).                                 |

- **E/WD limits** (now in one shared place): EGT amber above 940 °C at TOGA/FLX, 905 °C at CLB/MCT, 725 °C without a rated limit or in the start; red above 975 °C, with a red mark at the highest EGT reached (it stays until the next engine start on the ground). N1 amber above its limit, red above 104 %; N2 red above 105 % with a red cross. These are the CFM56-5B TCDS values the user chose.
- **SD ENGINE page:** separate N1 and N2 vibrations, pulsing above the advisory.

## What you should see

| Situation                      | What you should see                                                                                                                                                                                                       |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stall in flight                | Amber <b>ENG 1 STALL</b> : -THR LEVER 1 ... IDLE, -ENG 1 PARAMETERS ... CHECK, -ENG 1 STALL PROC ... APPLY; SD ENGINE page. On the ground: -THR LEVER 1 ... IDLE, -ENG MASTER 1 ... OFF.                                  |
| A parameter above its limit    | Amber <b>ENG 1 EGT OVER LIMIT</b> (N1, N2 OVER LIMIT; the title names the parameter): -THR LVR 1 .. BELOW LIMIT; once the EGT went above 975 °C (or N1 / N2 above 105.8 %): -THR LEVER 1 ... IDLE, -ENG MASTER 1 ... OFF. |
| High vibration at climb thrust | VIB N1 6 or more and VIB N2 4.3 or more, pulsing green.                                                                                                                                                                   |

## Limitations and why

| Limitation                                                                                         | Why                                                                        | What to do                                               |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------|
| What each failure does (N1 loss, EGT and indication offsets, vibration levels) is a design choice. | The FCOM gives the symptoms, not values.                                   | -                                                        |
| The EGT limits are the CFM56-5B TCDS values.                                                       | The LEAP-1A limits are an open question; the FCOM text gives 950 / 915 °C. | -                                                        |
| Inhibitions: STALL in flight phases 3, 4, 5, 7, 8; OVER LIMIT in 4 and 8.                          | The FCOM figures.                                                          | Test the stall in the climb above 1 500 ft or in cruise. |
| A full MSFS restart is needed after an update.                                                     | The systems, FADEC and fbw WASM modules change.                            | Restart the sim after installing.                        |

How to use

- 1. Open flyPad > Failures > ATA 72 Engine or ATA 77 Engine Indicating and activate a failure at climb or cruise thrust.
- 2. Follow the ECAM (THR LEVER IDLE or below the limit); deactivate the failure after the test.

How to test

From the integration plan S8 T3 and S9 T1 (recorded OK on develop 2026-10-06). Setup: climbing through FL 150 at about 280 kt, A/THR ON at CLB, AP ON, both engines running.

| # | Do this                                                                                             | Expected result                                                                                                                                                                                                                                          |
|---|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Activate <b>Engine 1 compressor stall (above 60 % N1)</b> . Wait 20 s.                              | Amber ENG 1 STALL with its three lines; SD ENGINE page; N1 1 fluctuates and settles about 15 % below N1 2; EGT 1 rises by about 100 °C or more.                                                                                                          |
| 2 | Thrust lever 1 to IDLE, wait 20 s.                                                                  | Within about 10 s the alert goes; N1 1, EGT 1 and the vibration back to normal.                                                                                                                                                                          |
| 3 | Thrust lever 1 back to CL, wait 10 s; deactivate the failure.                                       | The stall comes back, then ends with the failure.                                                                                                                                                                                                        |
| 4 | At CL, activate <b>Engine 1 EGT overtemperature</b> and <b>Engine 1 high vibration</b> . Wait 30 s. | EGT 1 about 100 °C above EGT 2, amber above 905 °C with ENG 1 EGT OVER LIMIT and -THR LVR 1 .. BELOW LIMIT (above 975 °C: red, -THR LEVER 1 ... IDLE, -ENG MASTER 1 ... OFF, and a red mark stays); SD VIB N1 6 or more and VIB N2 4.3 or more, pulsing. |
| 5 | Thrust lever 1 to IDLE, wait 30 s; deactivate both failures, lever back to CL.                      | The alert goes; EGT 1 green; both vibrations steady green below the advisory (VIB N2 stayed above it at idle before the tuning). A red EGT mark stays.                                                                                                   |
| 6 | Optional (not sim-tested): at takeoff thrust, activate <b>Engine 1 N1/N2 overspeed indication</b> . | N1 1 and N2 1 read higher than engine 2 with the same thrust; ENG 1 N1 OVER LIMIT.                                                                                                                                                                       |

14. FADEC, thrust lever and reverser failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 73 Engine - Fuel And Control, ATA 78 Exhaust; thrust levers; E/WD, STATUS, SD | **Status:** Sim-tested by the user on develop: OK (2026-10-06 integration flight S8 T2, recorded: Thrust lever 1 resolvers (both), then Engine 2 FADEC channel A and B). The reverser fault test of that flight found no reverse thrust at all (the in-flight start hold clamped it): fixed, normal reverse on the ground data-checked OK 2026-10-07; the reverser failures were not re-tested after the fix. FADEC overheat, resolver disagree, reverser unlocked and pressurized: not sim-tested. Rust tests engine\_control\_failure.rs and hydraulic, native tests fadec\_failure\_inputs\_test and reverse\_throttle\_test, unit tests FadecReverserAlerts.spec.ts, A32NX\_FADEC.spec.ts.

What it is for

| flyPad failure (both engines / levers / reversers) | ATA | What the code does                                                                                                                                                                                                         |
|----------------------------------------------------|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine 1(2) FADEC channel A / channel B            | 73  | One channel lost: the other takes control (ENG FADEC A (B) FAULT). Both lost: ENG FADEC FAULT, the engine data are lost (XX on the E/WD and SD), the A/THR disconnects, no reverser; the engine keeps following its lever. |
| Engine 1(2) FADEC overheat                         | 73  | ENG FADEC HI TEMP (ECU above 105 °C).                                                                                                                                                                                      |
| Thrust lever 1(2) resolvers (both)                 | 73  | The FADEC selects idle, CLB or frozen takeoff thrust by the FCOM rules: in flight it keeps CLB (or the takeoff thrust if the lever failed in TO/FLX) until the slats are out, then idle; idle on the ground; no reverser.  |

|                                                |            |                                                                                                                                |
|------------------------------------------------|------------|--------------------------------------------------------------------------------------------------------------------------------|
| Thrust lever 1(2) resolver disagree            | 73         | ENG THR LEVER DISAGREE: idle on the ground, CLB as the maximum in cruise, idle in approach.                                    |
| Reverser 1(2) fault (does not deploy)          | 78 Exhaust | The reverser stays stowed; its engine stays at reverse idle: ENG REVERSER FAULT.                                               |
| Reverser 1(2) unlocked (engine at idle)        | 78 Exhaust | The doors leave their stowed and locked position (no reverse thrust); the FADEC sets the engine at idle: ENG REVERSE UNLOCKED. |
| Reverser 1(2) pressurized (shutoff valve open) | 78 Exhaust | ENG REV PRESSURIZED.                                                                                                           |

- Reverse thrust stays at reverse idle until the reverser is fully deployed (FCOM DSC-70-70): a reverser that does not deploy no longer gives forward thrust with the lever in reverse. The hydraulic reversers report their status to the FADECs and stop deploying without a FADEC command.
- Fix: the in-flight start throttle hold (feature "Engine flameout ...") clamped the MSFS throttle at 0, which blocked all reverse thrust on the ground; the reverse throttle now reaches MSFS.

## What you should see

| Situation                                    | What you should see                                                                                                                                                                                                                                  |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| One FADEC channel failed                     | Amber <b>ENG 1 FADEC A FAULT</b> (B), crew awareness.                                                                                                                                                                                                |
| Both channels failed                         | <b>ENG 2 FADEC FAULT</b> : in flight -THR LEVER 2 ... IDLE, -ENG 2 PARAMETERS ... CHECK, .IF ABN ENG OPERATION: -ENG MASTER 2 ... OFF (on the ground THR LVR 2 NOT ABV IDLE); engine 2 N1, EGT, N2, FF XX; A/THR OFF; STATUS THR LVR 2 NOT ABV IDLE. |
| FADEC overheat                               | <b>ENG 1 FADEC HI TEMP</b> , FADEC OVHT; in flight -ENG 1 PARAMETERS ... CHECK, .IF ABN ENG OPERATION: -THR LEVER 1 ... IDLE, -ENG MASTER 1 ... OFF; on the ground also -ENG MODE SEL ... NORM, -FADEC GND PWR ... CHK OFF.                          |
| Thrust lever resolvers lost, in flight at CL | <b>ENG 1 THR LEVER FAULT</b> with -A/THR ... KEEP ON (A/THR engaged) or ENG 1 HI PWR IN MAN THR; LAND ASAP amber; STATUS WHEN SLATS OUT: ENG 1 AT IDLE, INOP SYS REVERSER 1, ENG 1 THR. With the slats out: ENG 1 AT IDLE.                           |
| Resolver disagree                            | <b>ENG 1 THR LEVER DISAGREE</b> : on the ground ENG 1 IDLE POWER ONLY; in cruise AVAIL MAX POWER : CLB with -A/THR ... KEEP ON (or ON); in approach ENG 1 AT IDLE. STATUS ENG 1 AVAIL MAX PWR:CLB, GND ENG 1 MAX PWR: IDLE, INOP SYS ENG 1 THR.      |
| Reverser fault                               | Amber <b>ENG 1 REVERSER FAULT</b> (title only); STATUS INOP SYS REVERSER 1; with the levers in reverse, REV only on the other engine.                                                                                                                |
| Reverser unlocked in flight                  | <b>ENG 1 REVERSE UNLOCKED</b> : ENG 1 AT IDLE, -THR LEVER 1 ... IDLE, -MAX SPEED ... 300/.78, .IF BUFFET: -MAX SPEED ... 240 KT, -ENG MASTER 1 ... OFF; STATUS MAX SPEED 300/.78.                                                                    |
| Reverser pressurized                         | <b>ENG 1 REV PRESSURIZED</b> : in flight -THR LEVER 1 ... IDLE; on the ground THR LVR 1 NOT ABV IDLE.                                                                                                                                                |

## Limitations and why

| Limitation | Why | What to do |
|------------|-----|------------|
|------------|-----|------------|

|                                                                                                                                                                                                                                                                                                                    |                                                                                                       |                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------|
| Inhibitions (FCOM figures):<br>FADEC A(B) FAULT and FADEC HI<br>TEMP phases 3, 4, 5, 7, 8; FADEC<br>FAULT 4, 5, 7, 8; REV<br>PRESSURIZED 4, 5, 8; REVERSE<br>UNLOCKED 4, 5, 8; REVERSER<br>FAULT 3, 4, 5; THR LEVER FAULT<br>/ DISAGREE 4, 5. Some are not<br>inhibited when the FADEC sets<br>the engine at idle. | The FCOM gives them as figures.                                                                       | Test on the ground or in cruise.  |
| The flyPad reverser fault gives<br>the title only.                                                                                                                                                                                                                                                                 | It is not a position fault: the FCOM lines are for a<br>position fault with the reverser pressurized. | -                                 |
| A reverser that really deploys in<br>flight is not modelled.                                                                                                                                                                                                                                                       | The unlocked doors stay in the stowed position.                                                       | -                                 |
| FADEC OVHT is always shown<br>with ENG FADEC HI TEMP.                                                                                                                                                                                                                                                              | Design choice: the flyPad overheat is an ECU above<br>105 °C.                                         | -                                 |
| A full MSFS restart is needed<br>after an update.                                                                                                                                                                                                                                                                  | The systems and fbw WASM modules change.                                                              | Restart the sim after installing. |

## How to use

1. Open flyPad > Failures > ATA 73 Engine - Fuel And Control or ATA 78 Exhaust and activate a failure.
2. Follow the ECAM and STATUS; deactivate the failure after the test.

## How to test

From the integration plan S8 T1-T2 and the retest card T2. Check the flyPad throttle calibration (reverse and idle detents) first.

| # | Do this                                                                                                                                  | Expected result                                                                                                                                                                |
|---|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | On the runway, both engines at idle, parking brake ON.<br>Activate <b>Reverser 1 fault (does not deploy)</b> .                           | Amber ENG 1 REVERSER FAULT; STATUS INOP SYS<br>REVERSER 1.                                                                                                                     |
| 2 | Both thrust levers to full reverse for 5 s, then IDLE. Deactivate<br>the failure.                                                        | REV green on engine 2 only; engine 2 N1 rises, engine 1<br>N1 stays near idle; at IDLE the reverser stows, no other<br>caution.                                                |
| 3 | After a landing (no failure): both levers to full reverse until 70<br>kt, then IDLE.                                                     | REV green on both engines, N1 well above idle, the<br>aircraft decelerates; no forward thrust jump at IDLE (OK<br>2026-10-07).                                                 |
| 4 | FL 100, 220 kt, flaps 0, AP and A/THR ON, levers in CL. Activate<br><b>Thrust lever 1 resolves (both)</b> , then thrust lever 1 to IDLE. | ENG 1 THR LEVER FAULT with -A/THR ... KEEP ON and<br>LAND ASAP; STATUS WHEN SLATS OUT: ENG 1 AT IDLE,<br>INOP SYS REVERSER 1, ENG 1 THR; engine 1 N1 does<br>not drop to idle. |
| 5 | FLAPS 1.                                                                                                                                 | Engine 1 N1 goes to idle and stays there.                                                                                                                                      |
| 6 | Activate <b>Engine 2 FADEC channel A</b> , then <b>Engine 2 FADEC<br/>channel B</b> .                                                    | ENG 2 FADEC FAULT; engine 2 N1, EGT, N2, FF XX on the<br>E/WD and the SD ENGINE page; the A/THR disconnects;<br>thrust lever 2 still changes engine 2 thrust.                  |
| 7 | Deactivate all failures, FLAPS 0, lever 1 to CL, A/THR ON.                                                                               | All alerts clear.                                                                                                                                                              |



## 15. T.O CONFIG NORMAL and FUEL WING TK LO LVL fixes

**Aircraft:** A32NX | **Where:** ECAM control panel T.O CONFIG key; E/WD, STATUS | **Status:** Not sim-tested. Unit tests ToConfigNormal.spec.ts, WingTankLowLevel.spec.ts.

### What it is for

Two deviations from the A320 FCOM found by the FCOM gap audit (the rest of that batch is on `core/fcom-audit-fixes`). They use the wing tank pump alerts of this branch.

- T.O CONFIG NORMAL** is no longer given with a FUEL L(R) TK PUMP 1+2 LO PR alert (FCOM DSC-31-15: the T.O CONFIG test triggers it, and NORMAL needs no such alert).
- FUEL L(R) WING TK LO LVL** (inner tank below 750 kg for 30 s) asks for -FUEL MODE SEL ... MAN only if the centre tank is not empty, then .IF NO FUEL LEAK AND FUEL IMBALANCE: -FUEL X FEED ... ON, -L TK PUMP 1 / 2 ... OFF. It now gives its STATUS: INOP SYS L (R) TK PUMPS and, with fuel in the centre tank, CTR TK FEED: MAN ONLY (FCOM PRO-ABN-FUEL).

### Limitations and why

| Limitation                                                             | Why                                          | What to do                                                                            |
|------------------------------------------------------------------------|----------------------------------------------|---------------------------------------------------------------------------------------|
| FUEL WING TK LO LVL is inhibited in flight phases 3, 4, 5, 7, 8 and 9. | FBW inhibition, unchanged.                   | Test at the gate or in cruise.                                                        |
| A low level in one wing only needs a fuel tool.                        | The flyPad fuel page fills both wings alike. | Set the tank quantity with a SimConnect variable tool (FUEL TANK LEFT MAIN QUANTITY). |

### How to use

- Nothing to set: the alerts follow the FCOM by themselves.
- Press the T.O CONFIG key before takeoff as usual; follow FUEL WING TK LO LVL and its STATUS if it comes.

### How to test

| # | Do this                                                                                                                                         | Expected result                                                                                                                             |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate, engines running, all FUEL pumps ON.<br>flyPad > Failures > ATA 28 Fuel: activate <b>L TK pump 1</b> and <b>L TK pump 2</b> . | FUEL L TK PUMP 1+2 LO PR.                                                                                                                   |
| 2 | Press the T.O CONFIG key (ECAM control panel).                                                                                                  | No T.O CONFIG NORMAL in the T.O memo. Deactivate the failures: T.O CONFIG gives T.O CONFIG NORMAL again (with a takeoff configuration set). |
| 3 | Centre tank empty; set the left inner tank to about 600 kg with a SimConnect tool (right inner tank above 750 kg). Wait 30 s.                   | FUEL L WING TK LO LVL without the -FUEL MODE SEL ... MAN line; STATUS INOP SYS L TK PUMPS.                                                  |
| 4 | Put fuel in the centre tank (FUEL MODE SEL at AUTO).                                                                                            | The -FUEL MODE SEL ... MAN line shows; STATUS also CTR TK FEED: MAN ONLY.                                                                   |

## 16. ENG THR LEVER ABV IDLE and ENG SAT ABOVE FLEX TEMP

**Aircraft:** A32NX | **Where:** E/WD; thrust levers; MCDU PERF TAKE OFF page (FLEX TO TEMP) | **Status:** SAT ABOVE FLEX TEMP: tested in the sim by the user: OK, data-confirmed (2026-10-08, on the feature branch). THR LEVER ABV IDLE: OK on develop 2026-10-09 after a real landing (phase 9, lever 1 at CL with lever 2 in reverse: red warning and its line within 0.4 s; it stays with lever 2 back at idle and goes with lever 1 out of CL; recorded). Unit tests EngineThrustSettingAlerts.spec.ts.

What it is for

Two thrust setting alerts of the A320 FCOM (PRO-ABN-ENG) that the A32NX did not have. They need no failure: they come from the thrust levers and the FLEX TEMP.

- **ENG 1(2) THR LEVER ABV IDLE** (red, MASTER WARN, repetitive "RETARD-RETARD"; FCOM I.81632-81666): during the landing roll (FWC phases 8 and 9), one thrust lever is above idle while the other one is in reverse, or stays above idle after the other one came out of reverse. Line: -THR LEVER 1(2) ... IDLE. The voice is heard above 40 kt and stops when all levers are at IDLE or REVERSE.
- **ENG SAT ABOVE FLEX TEMP** (amber, MASTER CAUT; FCOM I.80984-81000): before take-off (phase 2 only) the outside air temperature is above the FLEX TEMP entered in the MCDU. Line: T.O DATA ... CHECK. No FLEX TEMP entered gives no alert.

Limitations and why

| Limitation                                               | Why                                                                                                                                          | What to do               |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| THR LEVER ABV IDLE only after a real landing.            | The FWC goes to phase 9 only after a touchdown or a take-off aborted above 80 kt; a take-off power cut at a standstill goes back to phase 2. | Test it after a landing. |
| "At reverser deselection" has no time limit in the FCOM. | Design choice: the memory of a reverse selection is kept until both levers are at idle or the landing roll ends.                             | -                        |

How to use

1. Nothing to set. Before take-off, enter a FLEX TEMP above the outside temperature (or none for TOGA).
2. After landing, bring both thrust levers to REVERSE or IDLE together; follow the RETARD call if it comes.

How to test

| # | Do this                                                                                                                                                     | Expected result                                                                                    |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| 1 | A32NX at the gate, engines running, FWC phase 2. MCDU PERF TAKE OFF: enter a FLEX TO TEMP 10 °C below the outside temperature (SAT).                        | Within a second: amber ENG SAT ABOVE FLEX TEMP with T.O DATA ... CHECK, single chime, MASTER CAUT. |
| 2 | Enter a FLEX TO TEMP of 60.                                                                                                                                 | The caution goes; the T.O memo is back.                                                            |
| 3 | After a landing, stopped on the runway or a taxiway (phase 9), both levers at IDLE, PARKING BRK ON: lever 2 to REVERSE IDLE, then lever 1 to the CL detent. | Red ENG 1 THR LEVER ABV IDLE with -THR LEVER 1 ... IDLE, MASTER WARN.                              |
| 4 | Lever 2 forward to IDLE (lever 1 stays at CL), then lever 1 to IDLE.                                                                                        | The warning stays while lever 1 is at CL, and goes once it is at IDLE.                             |

17. Engine fan blocked failure and ENG LOW N1

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 72; ENG MASTER and ENG MODE; E/WD | **Status:** OK on develop 2026-10-09 (recorded: N1 0 % while N2 rose; ENG 1 LOW N1 with .IF CONFIRMED and ENG MASTER 1 OFF 2.5 s after N2 35 %; core hung at 41.5 %, start aborted; alert gone at ENG MASTER OFF; normal restart without it). Unit tests EngineLowN1Alerts.spec.ts, a320.spec.ts; native test fan\_blocked\_start\_test.cpp; Rust failure type.

What it is for

The A320 FCOM alert **ENG 1(2) LOW N1** (on ground, PRO-ABN-ENG I.80343-80363) is for a start in which the fan does not turn (a blocked fan, for example ice). The sim cannot produce that by itself, so the branch adds a failure for it.

- New flyPad failures, ATA 72: **Engine 1 fan blocked (no N1 rotation at start)** and **Engine 2 fan blocked (no N1 rotation at start)** (ids 72020, 72021). During a start on the ground the FADEC holds the N1 at 0 and the core hangs below idle (about 41 % N2).
- ENG 1(2) LOW N1 (amber, MASTER CAUT, single chime): N2 at or above 35 % with N1 below 2 % for 2 s, on the ground; lines .IF CONFIRMED:, -THR LEVER 1(2) ... IDLE (only with the lever above idle), -ENG MASTER 1(2) ... OFF. It stays until the ENG MASTER is set OFF; inhibited in flight phases 4 to 9.

## Limitations and why

| Limitation                                              | Why                                                                     | What to do                              |
|---------------------------------------------------------|-------------------------------------------------------------------------|-----------------------------------------|
| The 35 % N2, 2 % N1 and 2 s values are not in the FCOM. | Design choices for "no N1 rotation".                                    | -                                       |
| ENG START FAULT may follow.                             | The FADEC aborts an automatic start whose core hangs, about 20 s later. | Both alerts are expected; LOW N1 stays. |
| A full MSFS restart is needed after an update.          | The systems and FADEC WASM modules change.                              | Restart the sim after installing.       |

## How to use

1. flyPad > Failures > ATA 72 Engine: activate "Engine 1 (2) fan blocked (no N1 rotation at start)" before the engine start.
2. Start the engine as usual; follow ENG LOW N1 (ENG MASTER OFF). Clear the failure before the next start.

## How to test

| # | Do this                                                                                                                                                                            | Expected result                                                                                                                                                                                        |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, PARKING BRK ON, APU BLEED ON, engine 1 OFF, both levers at IDLE. flyPad > Failures > ATA 72: activate <b>Engine 1 fan blocked (no N1 rotation at start)</b> . | No alert yet.                                                                                                                                                                                          |
| 2 | ENG MODE selector IGN/START, ENG MASTER 1 ON. Watch engine 1 for 60 s.                                                                                                             | N2 rises, N1 stays at 0. Once N2 is above 35 % for 2 s: amber ENG 1 LOW N1 with .IF CONFIRMED: and -ENG MASTER 1 ... OFF, single chime, MASTER CAUT. N2 hangs near 41 %; ENG 1 START FAULT may follow. |
| 3 | ENG MASTER 1 OFF.                                                                                                                                                                  | ENG 1 LOW N1 goes (and START FAULT with it).                                                                                                                                                           |
| 4 | Clear the failure, wait 30 s, ENG MASTER 1 ON.                                                                                                                                     | A normal start: N1 rises with N2, no LOW N1.                                                                                                                                                           |

# Display unit failures and reconfiguration

flyPad failures for the A32NX ND and ECAM display units and the eight A380X CDS display units: the failed display goes blank, with the A380X CDS ... DU FAULT alert; both aircraft move a lost display to another display unit (A32NX: PFD/ND XFR pbs, ECAM/ND XFR selector, held system page keys; A380X: PFD/ND and DU RECONF pushbuttons, the EWD and the SD also on the ND display unit)

|                  |                                                                                                                                                                                                                                                                                                                             |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX and A380X                                                                                                                                                                                                                                                                                                             |
| Where to find it | flyPad > Failures > ATA 31 Indicating / Recording System; the display units; A32NX PFD/ND XFR pbs, brightness knobs, SWITCHING panel ECAM/ND XFR, ECAM control panel; A380X E/WD and SD STATUS; A380X PFD/ND and DU RECONF pushbuttons                                                                                      |
| Branch           | core/display-unit-failures , based on core/nd-weather-terrain (stacked: needs core/nd-weather-terrain merged first, the radar / terrain gauge goes blank with a failed ND). The A32NX reconfiguration also needs the cockpit model companion in aircraft-large-files (fork branch feat/a32nx-du-reconfiguration , b790e8d). |
| Status           | All four features tested in the sim by the user: the failures and the A380X reconfiguration OK (2026-10-04), the EWD and SD on the ND display unit included (load, CAPT, F/O, both sides); the A32NX reconfiguration OK on all steps (2026-10-05).                                                                          |
| Pictures         | No pictures: a failed display unit is blank, the alerts are the stock FBW E/WD and SD displays.                                                                                                                                                                                                                             |

1. A32NX ND and ECAM display unit failures
2. A32NX display unit reconfiguration
3. A380X CDS display unit failures
4. A380X display unit reconfiguration

## 1. A32NX ND and ECAM display unit failures

**Aircraft:** A32NX | **Where:** flyPad > Failures > ATA 31; CPT / F/O ND, upper and lower ECAM | **Status:** Tested in the sim by the user: OK (2026-10-04).

### What it is for

The flyPad could fail the two PFDs only. Four more display units (DUs) can now be failed: the CAPT and F/O NDs and the upper and lower ECAM DUs. A failed DU goes blank, the way a failed PFD already did. The A320 FCOM (DSC-31-05-60, FAILURE OF A DU) lists a blank screen with an amber F, a distorted display or a blank screen with INVALID DISPLAY UNIT; the blank (OFF) screen is used here.

- The weather radar and terrain picture of the ND (the native gauge over it) goes blank with a failed ND.
- It is also no longer drawn on an ND that is switched off (brightness knob OFF) or still in its self-test.
- The lower ECAM failure blanks the whole SD (both of its display layers). Before, the SD display unit ignored a failure change.
- When the failure is cleared, the DU runs its self-test, then shows its picture again.

### The flyPad failures (ATA 31 Indicating / Recording System)

| flyPad failure name | Display unit that goes blank                |
|---------------------|---------------------------------------------|
| Captain PFD display | CAPT PFD (existing failure)                 |
| F/O PFD display     | F/O PFD (existing failure)                  |
| Captain ND display  | CAPT ND, with its weather / terrain picture |
| F/O ND display      | F/O ND, with its weather / terrain picture  |
| Upper ECAM display  | Upper ECAM DU (E/WD)                        |

|                    |                    |
|--------------------|--------------------|
| Lower ECAM display | Lower ECAM DU (SD) |
|--------------------|--------------------|

## Limitations and why

| Limitation                                       | Why                                                                                                                                                                                                                                          | What to do          |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| No ECAM alert for a failed DU.                   | The branch only blanks the DU.                                                                                                                                                                                                               | -                   |
| A lost DU's picture moves only as the FCOM says. | See "A32NX display unit reconfiguration" below: the PFD goes to the ND DU and the E/WD to the lower ECAM DU by themselves; the ND and the SD need the PFD/ND XFR pb, the ECAM/ND XFR selector or a held system page key (FCOM DSC-31-05-60). | Use those controls. |
| Always a blank screen.                           | The amber F, the distorted picture and INVALID DISPLAY UNIT of the FCOM are not drawn.                                                                                                                                                       | -                   |

## How to use

1. Open **flyPad > Failures**, chapter **ATA 31 Indicating / Recording System**.
2. Activate one of the display failures (table above): that DU goes blank.
3. Deactivate it to get the DU back (after its self-test).

## How to test

| # | Do this                                                                                                                                                                     | Expected result                                                                                                         |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX, any phase, all displays on. CPT ND in ARC with the weather radar on (weather around) or TERR ON ND. flyPad > Failures > ATA 31: activate <b>Captain ND display</b> . | The CPT ND goes blank, with no weather or terrain left on it. The F/O ND is not affected.                               |
| 2 | Deactivate <b>Captain ND display</b> .                                                                                                                                      | The CPT ND shows its self-test, then the ND picture with the weather / terrain.                                         |
| 3 | Activate <b>F/O ND display</b> , then deactivate it.                                                                                                                        | Same on the F/O ND.                                                                                                     |
| 4 | Activate <b>Upper ECAM display</b> .                                                                                                                                        | The upper ECAM DU goes blank; the E/WD moves to the lower ECAM DU (automatic reconfiguration, next section).            |
| 5 | Deactivate it; activate <b>Lower ECAM display</b> .                                                                                                                         | The E/WD comes back on the upper DU after its self-test; the lower ECAM DU (SD) goes blank, whatever SD page was shown. |
| 6 | Deactivate it.                                                                                                                                                              | The SD comes back after its self-test.                                                                                  |
| 7 | No failure. With the weather radar picture on the CPT ND, turn the CPT ND brightness knob fully OFF, then back on.                                                          | The ND and its weather picture go dark together (no weather left on the dark ND) and come back together.                |

## 2. A32NX display unit reconfiguration

**Aircraft:** A32NX | **Where:** PFD/ND XFR pbs; PFD and ND brightness knobs; SWITCHING panel ECAM/ND XFR; ECAM control panel page keys | **Status:** Tested in the sim by the user on all steps: OK (2026-10-05). Unit tests: DisplayReconfiguration.spec.ts (shared), DmcDisplayReconfiguration.spec.ts (systems host), displayUnit.spec.tsx (common DU and legacy SD).

## What it is for

The A320 moves the picture of a lost display unit (DU) to another one (A320 FCOM DSC-31-05-60 RECONFIGURING DUS). Before, a failed or switched-off A32NX DU simply lost its picture. Now the PFD, the ND, the E/WD and the SD

can be shown on another DU, automatically or with the cockpit controls, as the FCOM describes.

**NOTE**  
A320 FCOM DSC-31-05-60 (a320\_fcom.txt I.45264, I.45304): if the upper ECAM display fails or is switched off, "the engine/warning page automatically replaces the system/status page on the lower ECAM DU"; "If a PFDU fails, the system automatically transfers the PFD image to the NDU." (I.45259-45325)

**NOTE**  
A320 FCOM DSC-31-50 (I.49317-49332): turning the PFD brightness knob fully counterclockwise switches off the PFD, its image goes to the NDU, and the pilot can recover the ND with the PFD/ND XFR pushbutton. DSC-31-30 (I.46861-46867): the ECAM/ND XFR selector moves the system/status display to the CAPT or F/O ND with "ECAM ON ND" on the lower ECAM display; with both ECAM DUs failed it moves the E/WD, without that message.

What you should see

| Situation                                                          | What you should see                                                                                                                                                                                                                                    |
|--------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PFD DU lost (flyPad failure, PFD brightness knob OFF, or no power) | The PFD DU is blank and the PFD is shown on the ND DU of the same side (the ND is lost until the PFD/ND XFR pb is pressed).                                                                                                                            |
| PFD/ND XFR pb pressed                                              | The PFD and the ND of that side swap DUs; press again to swap back. After an automatic transfer, the pb brings the ND back on the ND DU (FCOM DSC-31-50).                                                                                              |
| ND DU lost                                                         | Nothing automatic; the PFD/ND XFR pb puts the ND on the PFD DU (FCOM I.45325).                                                                                                                                                                         |
| Upper ECAM DU lost                                                 | The E/WD replaces the SD on the lower ECAM DU.                                                                                                                                                                                                         |
| Lower ECAM DU lost                                                 | Nothing automatic; the SD is lost until ECAM/ND XFR or a held page key is used.                                                                                                                                                                        |
| ECAM/ND XFR on CAPT (F/O)                                          | The SD is shown on the CAPT (F/O) ND DU; the lower ECAM DU shows <b>ECAM ON ND</b> . The SWITCHG PNL memo comes on only if a PFD/ND XFR pb is pressed as well (FCOM DSC-31-30 MEMO DISPLAY, I.46928-46935; the EIS DMC selector alone still shows it). |
| Both ECAM DUs lost, ECAM/ND XFR on CAPT (F/O)                      | The E/WD is shown on that ND DU, with no ECAM ON ND message.                                                                                                                                                                                           |
| A system page key held (0.5 s) with one ECAM DU lost               | The SD (the page of that key) is shown on the remaining ECAM DU instead of the E/WD, for at most 3 minutes; releasing the key brings the E/WD back. With both ECAM DUs lost, it shows the SD on the ND chosen with ECAM/ND XFR.                        |
| Lost DU recovered                                                  | Each picture goes back to its own DU; the recovered DU runs its self-test first.                                                                                                                                                                       |

How it is done

No extra copies of the instruments. MSFS draws a gauge on the model material of the same name, so every DU has one glass per picture it can show (17 overlay glasses carrying the material of that picture, an ECAM ON ND glass and a blank glass). The DMC logic of the systems host writes the picture of each DU, and the cockpit behaviour shows the matching glass. The brightness stays the DU's own knob. A new small gauge (DuMessage) draws the ECAM ON ND message.

Design choices

- The DU that receives a picture does not run a self-test: the picture is already live (the FCOM gives none).
- A system page key must be held 0.5 s before the SD appears: a click that only selects or deselects a page does not flash the SD, and the SD has its new page drawn before it is shown.

- ECAM ON ND is drawn in the style of the SELF TEST IN PROGRESS message: the FCOM gives no colour.
- A lost DU shows dark glass (a blank screen, which the FCOM allows for a failed DU).
- An unpowered DU counts as unavailable, like a failed one or one switched off with its knob, so its picture moves.
- A change of the PFD DU (lost or back) restarts from the automatic configuration: the PFD always goes to an available DU first.

## Limitations and why

| Limitation                                                                                                          | Why                                                                                                                                                                                                                                                                                                                                     | What to do                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No DMC failures, no INVALID DATA, the EIS DMC selector only feeds the memo.                                         | The three DMCs are not modelled (FCOM DSC-31-05-50).                                                                                                                                                                                                                                                                                    | -                                                                                                                                                             |
| No STS re-press within 2 s for the next STATUS page and no advisory key-light pulse in the single-display mode.     | Not part of this change; there is no ECAM advisory logic yet.                                                                                                                                                                                                                                                                           | -                                                                                                                                                             |
| An ECAM picture on an ND DU is replaced by the PFD when that side's PFD DU is lost or its PFD/ND XFR pb is pressed. | Design choice: the PFD keeps the priority on the ND DU; the picture moved to the PFD DU is always the ND.                                                                                                                                                                                                                               | Use the other ND with ECAM/ND XFR.                                                                                                                            |
| Needs the cockpit model companion and an MSFS restart.                                                              | The glasses are in the A32NX interior model (aircraft-large-files fork branch <code>feat/a32nx-du-reconfiguration</code> , b790e8d, stacked on <code>feat/a32nx-printer-door</code> 99237fb and the F/O flyPad screen d3060ea); panel.cfg (new DuMessage gauge, <code>[VCockpit21]</code> on this branch) and the behaviour XML change. | Install the model companion and restart the sim. With <code>core/efb-redesign</code> also merged, renumber one of the two <code>[VCockpit21]</code> sections. |

## How to use

1. Nothing to do for the automatic transfers: a lost PFD DU or upper ECAM DU moves its picture by itself.
2. Press the **PFD/ND XFR** pushbutton of your side to swap your PFD and ND (or to get the ND back after an automatic PFD transfer).
3. To see the SD with an ECAM DU lost: turn the **ECAM/ND XFR** selector on the SWITCHING panel to CAPT or F/O, or hold the system page key on the ECAM control panel.
4. Turn the ECAM/ND XFR selector back to NORM to get the ND back.

## How to test

| # | Do this                                                                                           | Expected result                                                                             |
|---|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| 1 | A32NX powered, all displays on. flyPad > Failures > ATA 31: activate <b>Captain PFD display</b> . | The CAPT PFD DU goes blank; the PFD appears on the CAPT ND DU at once (no self-test there). |
| 2 | Press the CAPT <b>PFD/ND XFR</b> pushbutton.                                                      | The ND comes back on the CAPT ND DU; the PFD DU stays blank.                                |
| 3 | Deactivate the failure.                                                                           | The CAPT PFD DU runs its self-test and shows the PFD; the ND DU shows the ND.               |
| 4 | Press the CAPT PFD/ND XFR pb, then again.                                                         | The PFD and ND swap DUs, then swap back.                                                    |
| 5 | Turn the F/O PFD brightness knob fully OFF, then back on.                                         | The PFD appears on the F/O ND DU, then goes back to the PFD DU.                             |

|    |                                                                                        |                                                                                                                                                                                                        |
|----|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6  | Activate <b>Upper ECAM display</b> .                                                   | The upper ECAM DU goes blank; the E/WD replaces the SD on the lower ECAM DU.                                                                                                                           |
| 7  | Hold a system page key (e.g. <b>HYD</b> ) on the ECAM control panel, then release it.  | After about half a second the HYD page is shown on the lower ECAM DU; on release the E/WD comes back. A short click does not flash the SD.                                                             |
| 8  | Turn the <b>ECAM/ND XFR</b> selector to CAPT.                                          | The SD is shown on the CAPT ND DU; the lower ECAM DU keeps the E/WD (the upper DU is still lost).                                                                                                      |
| 9  | Deactivate the failure, keep ECAM/ND XFR on CAPT.                                      | The E/WD is back on the upper DU; the lower ECAM DU shows <b>ECAM ON ND</b> ; no SWITCHG PNL memo.                                                                                                     |
| 10 | Press the CAPT PFD/ND XFR pb.                                                          | The CAPT PFD and ND swap DUs (the PFD replaces the SD on the CAPT ND DU, design choice) and the SWITCHG PNL memo appears in green. Press it again: the SD is back on the CAPT ND DU and the memo goes. |
| 11 | Activate <b>Upper ECAM display</b> and <b>Lower ECAM display</b> , ECAM/ND XFR on F/O. | The E/WD is shown on the F/O ND DU, without ECAM ON ND. Holding a page key shows the SD there instead.                                                                                                 |
| 12 | Deactivate all failures, ECAM/ND XFR to NORM.                                          | Every DU shows its own picture again.                                                                                                                                                                  |

### 3. A380X CDS display unit failures

**Aircraft:** A380X | **Where:** flyPad > Failures > ATA 31; the 8 CDS DUs; E/WD; SD STATUS | **Status:** Tested in the sim by the user: OK (2026-10-04).

#### What it is for

The eight display units of the A380 CDS (A380 FCOM DSC-31-15-10: CAPT PFD, CAPT ND, CAPT MFD, E/WD, SD, F/O MFD, F/O ND, F/O PFD) can be failed from the flyPad. The failed DU goes blank (on an ND, the weather radar and terrain picture too, the VD included) and the FWS raises the **CDS ... DU FAULT** alert with its FCOM procedure and its INOP SYS line (FCOM PRO-ABN-ECAM-10-31).

#### The flyPad failures (ATA 31 Indicating / Recording System)

| flyPad failure name   | ECAM alert (amber)    | STATUS INOP SYS                   |
|-----------------------|-----------------------|-----------------------------------|
| CAPT PFD display unit | CDS CAPT PFD DU FAULT | CAPT PFD DU                       |
| CAPT ND display unit  | CDS CAPT ND DU FAULT  | CAPT ND DU                        |
| CAPT MFD display unit | CDS CAPT MFD DU FAULT | CAPT MFD DU                       |
| EWD display unit      | CDS EWD DU FAULT      | EWD DU                            |
| SD display unit       | CDS SD DU FAULT       | (none: the FCOM lists no SD line) |
| F/O MFD display unit  | CDS F/O MFD DU FAULT  | F/O MFD DU                        |
| F/O ND display unit   | CDS F/O ND DU FAULT   | F/O ND DU                         |
| F/O PFD display unit  | CDS F/O PFD DU FAULT  | F/O PFD DU                        |

#### What you should see

| Situation                | What you should see                                                            |
|--------------------------|--------------------------------------------------------------------------------|
| <b>Failure activated</b> | The DU goes blank. Single chime, MASTER CAUT, and the amber alert on the E/WD. |



|                          |                                                                                                                                                                       |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ECAM procedure (each DU) | xx DU ..... OFF 5 S THEN ON; IF NOT SUCCESSFUL: xx DU ..... OFF; DU RECONF P/B AVAIL (green). The SD DU FAULT adds: IF SD DU OFF : F/O DU RECONF P/B FOR ATC MAILBOX. |
| SD STATUS page           | INOP SYS (all phases): the DU line of the table above.                                                                                                                |
| Takeoff and landing      | The alert is inhibited in the FWS flight phases 3 to 7, 9 and 10 (FCOM PDF p. 5386); the DU is blank anyway.                                                          |
| DU without power         | No DU FAULT alert (design choice): the lost busbar has its own ELEC alert.                                                                                            |
| Failure cleared          | The DU runs its self-test and shows its picture again; the alert and the INOP SYS line go.                                                                            |

## Limitations and why

| Limitation                                                                                 | Why                                                                                                                                                                                                   | What to do                                                                                                                    |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| The reconfiguration has limits.                                                            | See "A380X display unit reconfiguration" below: the PFD and the EWD move to another DU by themselves, the MFD never does, and the SD only on an ND DU with the DU RECONF pb, without the ATC mailbox. | With the SD DU failed, press the F/O DU RECONF pb (it acts on the F/O ND DU) until the SD pages (STATUS included) show there. |
| The OFF 5 S THEN ON item does not bring the DU back.                                       | The flyPad failure stays until it is cleared, which is the procedure's NOT SUCCESSFUL branch.                                                                                                         | Clear the failure in the flyPad.                                                                                              |
| The second FCOM trigger (a DU that declared two other DUs faulty in turn) is not modelled. | It needs the DU monitoring loops, which are not simulated.                                                                                                                                            | -                                                                                                                             |

## How to use

1. Open **flyPad > Failures**, chapter **ATA 31 Indicating / Recording System**.
2. Activate one of the eight ... **display unit** failures.
3. Follow the ECAM procedure, then check the SD STATUS page.
4. Deactivate the failure to get the DU back.

## How to test

| # | Do this                                                                                                                                                                                           | Expected result                                                                                                                                                                                                                              |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground (before the takeoff power) or in cruise, all DUs on. CPT ND in ARC with the WX overlay and weather around. flyPad > Failures > ATA 31: activate <b>CAPT ND display unit</b> . | The CAPT ND and its VD go blank, with no weather or terrain left. Single chime, MASTER CAUT. E/WD: <b>CDS CAPT ND DU FAULT</b> with CAPT ND DU ..... OFF 5 S THEN ON, IF NOT SUCCESSFUL, CAPT ND DU ..... OFF, DU RECONF P/B AVAIL in green. |
| 2 | Open the SD <b>STATUS</b> page.                                                                                                                                                                   | INOP SYS: <b>CAPT ND DU</b> .                                                                                                                                                                                                                |
| 3 | Deactivate the failure.                                                                                                                                                                           | The CAPT ND runs its self-test, then shows the ND, the VD and the weather again; the alert and the INOP SYS line are gone.                                                                                                                   |
| 4 | Repeat with <b>CAPT PFD display unit</b> , <b>CAPT MFD display unit</b> , <b>F/O PFD display unit</b> , <b>F/O ND display unit</b> and <b>F/O MFD display unit</b> .                              | Each time the named DU goes blank and the E/WD shows the matching CDS ... DU FAULT, with its INOP SYS line on the STATUS.                                                                                                                    |

|   |                                                                        |                                                                                                                                                                                            |
|---|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5 | Activate <b>SD display unit</b> .                                      | The SD goes blank; E/WD: <b>CDS SD DU FAULT</b> with the extra green line IF SD DU OFF : F/O DU RECONF P/B FOR ATC MAILBOX (the FCOM gives this alert no INOP SYS line).                   |
| 6 | Deactivate it; activate <b>EWD display unit</b> .                      | The EWD DU goes blank and the E/WD moves to the SD DU (automatic reconfiguration), where CDS EWD DU FAULT can be read; single chime and MASTER CAUT; INOP SYS <b>EWD DU</b> on the STATUS. |
| 7 | Activate any DU failure during the takeoff roll (above takeoff power). | The DU goes blank but no alert until the end of the inhibition.                                                                                                                            |

## 4. A380X display unit reconfiguration

**Aircraft:** A380X | **Where:** CAPT and F/O PFD/ND and DU RECONF pushbuttons; the 8 CDS DUs | **Status:** Tested in the sim by the user on all steps: OK (2026-10-04). Unit tests: CdsReconfiguration.spec.ts (shared and systems host), HostedDisplay.spec.ts, hostedInstrument.spec.ts; native ndwxr test cds\_display\_test.

### What it is for

The A380 CDS moves a lost display to another display unit (A380 FCOM DSC-31-15-20 CDS abnormal operations, DSC-31-20-50 PFD/ND pb). Before, a failed or switched-off DU simply lost its picture. Now:

- **Automatic:** when a PFD DU fails, loses its power or is switched off, the PFD is shown on the ND DU of the same side (the ND is lost). When the EWD DU is lost, the E/WD is shown on the SD DU.
- **PFD/ND pushbutton:** exchanges the on-side PFD and ND. With the exchange selected, the PFD is on the ND DU and comes back to the PFD DU if the ND DU fails (the PFD keeps the priority).
- **DU RECONF pushbutton:** active only with a failed on-side DU; it acts on the DU the FCOM gives (CAPT: the MFD DU, then the ND DU if the MFD DU is failed, then the PFD DU if the ND and MFD DUs are failed; F/O: the ND DU, the MFD DU if the PFD or ND DU is failed, then the PFD DU) and steps through the displays of the FCOM order that this DU can draw, then back to its normal display.
- **EWD and SD on the ND DU:** with the CAPT (F/O) PFD and MFD DUs failed, the pb acts on the ND DU, which shows the PFD automatically; it now cycles **PFD > EWD > SD > PFD** (the MFD of the FCOM sequence cannot be drawn there). With only the MFD DU (CAPT) or the SD DU (F/O) failed, the ND DU cycles ND > EWD > SD > ND the same way. The EWD (SD) is never shown on both sides at once (A380 FCOM DSC-31-15-20), and a PFD that moves to the ND DU later (its PFD DU fails afterwards) wins over a selection there.
- The weather radar and terrain picture (ndwxr) is hidden while its ND DU shows another display (the PFD, the EWD or the SD).

### What you should see

| Situation                                      | What you should see                                                                                                                                    |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| CAPT PFD display unit failed (or switched off) | The CAPT PFD DU is blank and the PFD appears on the CAPT ND DU, without weather or terrain on it.                                                      |
| EWD display unit failed                        | The E/WD appears on the SD DU.                                                                                                                         |
| PFD/ND pb pressed (CAPT or F/O)                | The PFD and the ND of that side swap DUs; press again to swap back.                                                                                    |
| CAPT ND and MFD DUs failed, DU RECONF pressed  | The CAPT PFD DU steps from the PFD to the ND (with no weather or terrain image), then back to the PFD.                                                 |
| CAPT PFD and MFD DUs failed, DU RECONF pressed | The CAPT ND DU, which shows the PFD, steps to the E/WD, then to the SD, then back to the PFD. While the E/WD (SD) is shown there, the F/O pb skips it. |

|                                     |                                                                                                                   |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| SD DU failed, F/O DU RECONF pressed | The F/O ND DU steps from the ND to the E/WD, then to the SD pages (without the ATC mailbox), then back to the ND. |
| Failure cleared                     | Each DU goes back to its normal display.                                                                          |

## Limitations and why

| Limitation                                                                                                                                            | Why                                                                                                                                                                                                                                                                 | What to do                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| The MFD is never drawn on another DU, and nothing is drawn on the MFD DUs; the DU RECONF pb skips them, so it does nothing when it acts on an MFD DU. | Every display is a gauge of its own on its DU texture: the MFD is one gauge over both MFD screens (one texture) that also runs the FMS. Design choice: the PFD and the ND on both DUs of a side, the E/WD and the SD also on the ND DUs, and the E/WD on the SD DU. | Use the other side's MFD.                       |
| The SD on an ND DU has no ATC mailbox.                                                                                                                | The mailbox stays with the SD DU's own SD (design choice of the hosted SD).                                                                                                                                                                                         | With the SD DU failed, the ATC mailbox is lost. |
| A selected E/WD or SD replaces the PFD on that side.                                                                                                  | With the PFD and MFD DUs of a side failed, the ND DU is the only DU left for the PFD (FCOM: the pb acts on the ND DU).                                                                                                                                              | Press DU RECONF again to get the PFD back.      |
| The ND on the PFD DU has no weather radar or terrain image.                                                                                           | The native ndwxr gauges stay on the ND DUs.                                                                                                                                                                                                                         | Use the other side's ND.                        |
| The KCCU keys do not reconfigure the DUs.                                                                                                             | Not modelled.                                                                                                                                                                                                                                                       | Use the DU RECONF pb.                           |
| A full MSFS restart is needed after an update.                                                                                                        | panel.cfg (new hosted gauges, the E/WD and the SD on the ND DUs included) and the cockpit behaviour XML change.                                                                                                                                                     | Restart the sim after installing.               |

## How to use

1. Nothing to do for the automatic reconfiguration: a lost PFD or EWD DU moves its display by itself.
2. Press the **PFD/ND** pushbutton of your side to exchange your PFD and ND.
3. With a failed on-side DU, press **DU RECONF** to step the display of the DU it acts on.
4. With your PFD and MFD DUs failed, press **DU RECONF** to bring the E/WD, then the SD, onto your ND DU; once more for the PFD.

## How to test

| # | Do this                                                                                                                        | Expected result                                                                                                          |
|---|--------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X powered, all DUs on. flyPad > Failures > ATA 31: activate <b>CAPT PFD display unit</b> .                                 | The CAPT PFD DU goes blank; the PFD appears on the CAPT ND DU (no weather / terrain image on it); CDS CAPT PFD DU FAULT. |
| 2 | Deactivate it. Press the CAPT <b>PFD/ND</b> pushbutton.                                                                        | The CAPT PFD and ND swap DUs. Press again: back to normal.                                                               |
| 3 | Turn the F/O PFD DU brightness knob OFF.                                                                                       | The PFD appears on the F/O ND DU. Turn it back on: normal again.                                                         |
| 4 | Activate <b>EWD display unit</b> .                                                                                             | The E/WD appears on the SD DU. Deactivate it: the SD comes back.                                                         |
| 5 | Activate <b>CAPT ND display unit</b> and <b>CAPT MFD display unit</b> , then press the CAPT <b>DU RECONF</b> pushbutton twice. | The CAPT PFD DU shows the ND, then the PFD again.                                                                        |

|    |                                                                                                                                                                             |                                                                                                                                    |
|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| 6  | Deactivate them. Activate <b>CAPT PFD display unit</b> and <b>CAPT MFD display unit</b> .                                                                                   | The PFD appears on the CAPT ND DU.                                                                                                 |
| 7  | Press the CAPT <b>DU RECONF</b> pushbutton three times.                                                                                                                     | The CAPT ND DU shows the E/WD, then the SD (the current SD page), then the PFD again. No weather or terrain image on it meanwhile. |
| 8  | Press the CAPT DU RECONF pb once (E/WD on the CAPT ND DU). Then activate <b>F/O PFD display unit</b> and <b>F/O MFD display unit</b> and press the F/O <b>DU RECONF</b> pb. | The F/O ND DU skips the E/WD (shown on the CAPT side) and shows the SD.                                                            |
| 9  | Deactivate all failures. Activate <b>SD display unit</b> and press the F/O <b>DU RECONF</b> pb twice.                                                                       | The F/O ND DU shows the E/WD, then the SD pages (no ATC mailbox); once more: the ND again.                                         |
| 10 | Deactivate all failures.                                                                                                                                                    | Every DU shows its normal display.                                                                                                 |

# A380X weather radar GAIN, ELEVN and TILT

The manual GAIN, ELEVN and TILT settings of the MFD SURV CONTROLS page reach the ND messages, the VD white line and the radar picture itself (GAIN moves the colour levels, a TILT or ELEVN in the ground cuts the weather), and start from their FCOM default values

|                         |                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft</b>         | A380X                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Where to find it</b> | MFD SURV > CONTROLS (WXR block: GAIN, ELEVN/TILT); ND weather picture and message (right side above the TERR box); VD                                                                                                                                                                                                                                                         |
| <b>Branch</b>           | core/a380x-wxr-controls , based on core/nd-weather-terrain with core/a380x-mfd-fms merged in (stacked: needs core/nd-weather-terrain, core/surveillance and core/a380x-mfd-fms merged first). The terrain view resend fix of 2026-10-07 comes with its base core/nd-weather-terrain .                                                                                         |
| <b>Status</b>           | ND messages tested in the sim by the user: OK (2026-10-02); FCOM defaults user-checked in the sim (2026-10-02); VD white line tested in the sim by the user: OK (2026-10-03). GAIN acting on the radar picture tested in the sim by the user: OK (2026-10-08); TILT / ELEVN cutting the picture not sim-tested (left out of that test flight); native test wxr_controls_test. |
| <b>Pictures</b>         | No pictures: the messages and the line are drawn by the stock ND / VD code (no screenshot of this state).                                                                                                                                                                                                                                                                     |

1. ND messages of the manual GAIN, ELEVN and TILT
2. GAIN, TILT and ELEVN take the FCOM defaults at the first selection
3. VD white line of the manual ELEVN and TILT
4. GAIN and ELEVN/TILT change the radar picture

## 1. ND messages of the manual GAIN, ELEVN and TILT

**Aircraft:** A380X | **Where:** ND, right side above the TERR box | **Status:** Tested in the sim by the user: OK (2026-10-02).

### What it is for

The GAIN button and the ELEVN/TILT option list of the MFD SURV CONTROLS page kept their state but showed nothing. The ND now shows the manual radar settings as the A380 FCOM WXR MESSAGES (DSC-34-20-30-20 P 17).

### What you see

| SURV CONTROLS setting                                | ND message                                                                                                            |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| GAIN AUTO, ELEVN/TILT AUTO                           | <b>WX</b> in green (as before)                                                                                        |
| GAIN MAN, value 53                                   | <b>GAIN 53%</b> in cyan, above the mode line; with ELEVN/TILT at AUTO the mode line is empty and GAIN takes its place |
| ELEVN/TILT at TILT, value -12.0                      | <b>TILT -12.0°</b> in cyan instead of WX                                                                              |
| ELEVN/TILT at ELEVN, value 12500, QNH reference      | <b>ELEVN 12500FT</b> in cyan instead of WX                                                                            |
| ELEVN/TILT at ELEVN, STD baro reference on that side | <b>ELEVN FL125</b> in cyan                                                                                            |
| Manual mode without a value                          | GAIN ---%, TILT ---.-°, ELEVN -----FT (or ELEVN FL---)                                                                |
| MODE MAP                                             | MAP in green (GAIN nn% above it with GAIN MAN); no ELEVN / TILT message                                               |
| WXR OFF                                              | WXR OFF in white, no GAIN line                                                                                        |

## Limitations and why

| Limitation                                                           | Why                                                                                                                                       | What to do                                                                                                           |
|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| GAIN, ELEVN and TILT act on the radar picture only in part.          | The MSFS radar has no gain, no cell heights and no tilt; tilting its beam crashed the gauge.                                              | GAIN moves the colour levels; ELEVN / TILT only hide the weather where they reach the ground (see the last feature). |
| Cyan is a choice.                                                    | The A380 FCOM gives no colour; cyan is the colour of the manual modes of the same radar family in the A320 FCOM (DSC-34-SURV-30-30 P 10). | -                                                                                                                    |
| The grey background the FCOM figure prints behind GAIN is not drawn. | Not reproduced.                                                                                                                           | -                                                                                                                    |

## How to use

1. MFD **SURV** > **CONTROLS**, WXR block (WXR AUTO, MODE WX).
2. GAIN: press the button to **MAN**, enter a value in the field below it (0 to 100 %).
3. ELEVN/TILT: select **ELEVN** (enter an altitude or FL) or **TILT** (enter -15.0 to +15.0 degrees) in the field below the list.
4. Read the message on the ND (WX overlay selected). Back to **AUTO** for WX.

## How to test

| # | Do this                                                                                                        | Expected result                                         |
|---|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| 1 | A380X, CPT EFIS <b>WX</b> overlay, ND ARC. MFD SURV > CONTROLS: WXR AUTO, MODE WX, GAIN AUTO, ELEVN/TILT AUTO. | ND: <b>WX</b> in green on the right.                    |
| 2 | GAIN to <b>MAN</b> , enter <b>53</b> .                                                                         | ND: <b>GAIN 53%</b> in cyan, the WX message gone.       |
| 3 | ELEVN/TILT: select <b>TILT</b> , enter <b>-12</b> .                                                            | ND: <b>TILT -12.0°</b> in cyan, with GAIN 53% above it. |
| 4 | Select <b>ELEVN</b> , enter <b>12500</b> (QNH set on the CPT side).                                            | ND: <b>ELEVN 12500FT</b> in cyan.                       |
| 5 | Set the CPT baro reference to <b>STD</b> .                                                                     | ND: <b>ELEVN FL125</b> .                                |
| 6 | GAIN and ELEVN/TILT back to <b>AUTO</b> .                                                                      | ND: <b>WX</b> in green, no GAIN line.                   |
| 7 | <b>MODE MAP</b> with GAIN MAN.                                                                                 | ND: <b>MAP</b> in green with the GAIN line above it.    |
| 8 | WXR <b>OFF</b> (confirm).                                                                                      | ND: <b>WXR OFF</b> in white, no GAIN line.              |

## 2. GAIN, TILT and ELEVN take the FCOM defaults at the first selection

**Aircraft:** A380X | **Where:** MFD SURV > CONTROLS, WXR block | **Status:** User-checked in the sim after a flight reload (2026-10-02): GAIN 50 %, TILT +3.0° on the ground, ELEVN 100 FT at CYUL.

## What it is for

A380 FCOM DSC-34-20-30-20-10 (GAIN and ELEVN knobs): "The default GAIN value is 50 %", "The default ELEVN value is the current aircraft altitude", the default TILT value is +3.00° on ground and 0° in flight. The page applies a default only when nothing is entered, but a value nobody had written read 0, a valid entry: after a power-up the first GAIN MAN, TILT or ELEVN selection kept 0. The MFD now starts with the three settings at no entry.

## What you should see

| Situation                           | What you should see                                                  |
|-------------------------------------|----------------------------------------------------------------------|
| First GAIN MAN after the MFD starts | GAIN field 50 %; ND GAIN 50%.                                        |
| First TILT selection on the ground  | TILT +3.0°; ND TILT +3.0°.                                           |
| First TILT selection in flight      | TILT +0.0°.                                                          |
| First ELEVN selection               | The current altitude, rounded to 100 ft (FL with the STD reference). |
| Later selections                    | The value entered or set before is kept.                             |

## How to use

1. Select GAIN **MAN**, **ELEVN** or **TILT** on the SURV CONTROLS page: the default value is entered.
2. Overwrite it in the entry field if needed.

## How to test

| # | Do this                                                                                       | Expected result                                                                     |
|---|-----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| 1 | A380X on the ground, after a flight load or reload. MFD SURV > CONTROLS: GAIN to <b>MAN</b> . | GAIN field <b>50 %</b> ; ND (WX overlay) <b>GAIN 50%</b> .                          |
| 2 | ELEVN/TILT: select <b>TILT</b> .                                                              | TILT field <b>+3.0°</b> ; ND <b>TILT +3.0°</b> .                                    |
| 3 | Select <b>ELEVN</b> .                                                                         | ELEVN field = the airport elevation rounded to 100 ft (for example 100 FT at CYUL). |
| 4 | Enter TILT -5, go to AUTO, then select TILT again.                                            | TILT <b>-5.0°</b> is kept (no default over an entry).                               |
| 5 | Reload the flight, take off, and select TILT for the first time in flight.                    | TILT <b>+0.0°</b> .                                                                 |

## 3. VD white line of the manual ELEVN and TILT

**Aircraft:** A380X | **Where:** VD under the ND | **Status:** Tested in the sim by the user: OK (2026-10-03).

## What it is for

A380 FCOM DSC-34-20-30-20: "The VD displays a white line indicating the elevation or tilt value". In manual ELEVN the VD shows a horizontal white line at the selected altitude; in manual TILT a straight white line from the aircraft symbol at the selected angle (zero tilt = the horizon as seen by the ADIRS), as in the FCOM VD figures.

## What you should see

| Situation                                           | What you should see                                                                                        |
|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| ELEVN selected                                      | Horizontal white line at the selected altitude, from the aircraft to the end of the VD range.              |
| TILT selected                                       | Straight white line from the nose of the aircraft symbol, up for a positive tilt, down for a negative one. |
| Selected altitude off the VD scale                  | No line.                                                                                                   |
| ELEVN/TILT AUTO, MODE MAP, WXR OFF or no WX overlay | No line (it goes with the ELEVN / TILT message of the ND).                                                 |

Limitations and why

| Limitation                                                      | Why                                                                                                                                           | What to do |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|------------|
| The line shows only while that side's ND shows the WX function. | Design choice: the line goes with the ND message.                                                                                             | -          |
| The tilt line is straight.                                      | Design choice, as in the FCOM figure: no earth curvature or beam refraction.                                                                  | -          |
| The weather on the VD does not follow ELEVN or TILT.            | The MSFS radar has no height data; the ground cut of a manual ELEVN / TILT applies to the ND only.<br>The VD weather colours follow the GAIN. | -          |

How to use

1. Select the **WX** overlay on the EFIS panel and ND ARC or ROSE NAV (the pages with the VD).
2. On MFD SURV > CONTROLS select **ELEVN** or **TILT** and enter the value.
3. Read the white line on the VD.

How to test

| # | Do this                                                                                                                                     | Expected result                                                                                 |
|---|---------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| 1 | A380X in flight, for example at 10 000 ft. CPT EFIS WX overlay, ND ARC 40 NM. SURV CONTROLS: ELEVN/TILT <b>ELEVN</b> , enter <b>12000</b> . | VD: a horizontal white line at 12 000 ft, ahead of the aircraft symbol.                         |
| 2 | Select <b>TILT</b> , enter <b>+3</b> .                                                                                                      | VD: a straight white line from the nose of the aircraft symbol, rising to the end of the range. |
| 3 | Enter <b>-3</b> .                                                                                                                           | The line goes down from the aircraft symbol.                                                    |
| 4 | Select <b>ELEVN</b> with a value far above the VD scale (for example 60000).                                                                | No line.                                                                                        |
| 5 | ELEVN/TILT back to <b>AUTO</b> .                                                                                                            | The line goes; ND shows WX.                                                                     |
| 6 | With TILT selected, deselect the WX overlay.                                                                                                | The line goes with the ND message.                                                              |

4. GAIN and ELEVN/TILT change the radar picture

**Aircraft:** A380X | **Where:** ND weather picture; MFD SURV > CONTROLS, WXR block | **Status:** GAIN tested in the sim by the user: OK (2026-10-08, FL150, ARC 40 NM: AUTO calibrated, 0 % sparse green, 100 % red cores, AUTO back to the calibrated picture, the VD following). TILT and ELEVN cutting the picture: not sim-tested. Native test wxr\_controls\_test (ndwxr).

What it is for

The manual GAIN, TILT and ELEVN entries changed the ND messages and the VD line only. They now act on the radar picture, within what the MSFS radar allows: its views take a table of rain rate bands, but have no cell heights and no tilt.

- **GAIN** moves the rain rate each colour starts at, as the receiver gain moves the reflectivity of each colour (A380 FCOM DSC-34-20-30-10/-20; Honeywell RDR-4000 Pilot manual: MIN about -16 dBZ, MAX about +10 dBZ, calibrated in AUTO). 50 %, the FCOM default, is the calibrated gain (the same picture as AUTO); 0 % is the MIN, 100 % the MAX. A lower gain turns red to yellow, yellow to green and removes green (Airbus Safety First #22); a higher gain the opposite. Turbulence (magenta) does not change.



- A manual **TILT** down shows the weather only up to the range where the tilted beam reaches the ground (the radar removes the ground returns with the TAWS terrain, DSC-34-20-30-10). A level or up tilt changes nothing.
- A manual **ELEVN** at or below the ground under the aircraft shows no weather; above it, the full picture.

## What you should see

| Situation                                      | What you should see                                                          |
|------------------------------------------------|------------------------------------------------------------------------------|
| GAIN AUTO, or MAN at 50 %                      | The calibrated picture (as before).                                          |
| GAIN MAN 0 %                                   | Red cells shrink or turn yellow, yellow turns green, light green disappears. |
| GAIN MAN 100 %                                 | More and larger green, yellow and red areas.                                 |
| TILT -10.0 at about 10 000 ft above the ground | Weather only inside about 9 NM.                                              |
| TILT -3.0 at about 10 000 ft above the ground  | Weather out to about 34 NM.                                                  |
| ELEVN at or below the ground elevation         | No weather on the ND.                                                        |
| VD                                             | Its weather colours follow the GAIN; the TILT / ELEVN cut is on the ND only. |

## Limitations and why

| Limitation                                                           | Why                                                                                                                                             | What to do |
|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| ELEVN and TILT cannot show a slice above or below the cells.         | MSFS gives no cell tops: only the part in the ground can be removed.                                                                            | -          |
| The ground ahead is taken level at the elevation under the aircraft. | The gauge cannot read the terrain ahead back (design choice). The beam uses the earth curvature with the 4/3 radius of the standard refraction. | -          |
| The GAIN scale is a design choice.                                   | The FCOM gives the percentage but not its scale: 50 % calibrated, 0 % and 100 % the RDR-4000 MIN and MAX, linear in dB on each side.            | -          |
| A GAIN change may repaint the picture over a few seconds.            | Not measured yet: the engine may repaint it sector by sector with its sweep.                                                                    | -          |

## How to use

1. MFD **SURV** > **CONTROLS**, WXR block (WXR AUTO, MODE WX).
2. GAIN **MAN** and a value: below 50 % to look into heavy cells (less colour), above 50 % to see weak returns. Back to **AUTO** for the calibrated picture.
3. ELEVN/TILT: **TILT** with a down angle (or **ELEVN**) to keep the weather only where the beam is above the ground. Back to **AUTO** for the full picture.

## How to test

| # | Do this                                                                                                                                                                                          | Expected result         |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| 1 | A380X in flight at about FL100 (about 10 000 ft above the ground) with rain cells ahead. CPT EFIS: WX on, ND ARC 40 NM. MFD SURV > CONTROLS: WXR AUTO, MODE WX, TURB AUTO. Screenshot of the ND. | The calibrated picture. |
| 2 | GAIN button to <b>MAN</b> (field 50 %); wait 10 s.                                                                                                                                               | Same picture as before. |

|           |                                                                                                       |                                                                                                 |
|-----------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| <b>3</b>  | Enter <b>0</b> in the GAIN field; wait 10 s.                                                          | Red cells shrink or turn yellow, yellow turns green, light green disappears. Magenta unchanged. |
| <b>4</b>  | Enter <b>100</b> ; wait 10 s.                                                                         | More and larger green, yellow and red areas than at the start.                                  |
| <b>5</b>  | GAIN back to <b>AUTO</b> .                                                                            | The first picture again. The VD weather colours followed each step.                             |
| <b>6</b>  | ELEVN/TILT: select <b>TILT</b> (field +0.0).                                                          | The picture does not change.                                                                    |
| <b>7</b>  | Enter <b>-10</b> ; wait 5 s.                                                                          | Weather only inside about 9 NM; ND message TILT -10.0.                                          |
| <b>8</b>  | Enter <b>-3</b> ; wait 5 s.                                                                           | Weather out to about 34 NM; ND message TILT -3.0.                                               |
| <b>9</b>  | Over land at least 500 ft high: select <b>ELEVN</b> , enter 0 (FL 000 with STD); then 12000 (FL 120). | At 0: no weather on the ND. At 12000: the full picture.                                         |
| <b>10</b> | ELEVN/TILT back to <b>AUTO</b> .                                                                      | The full picture again.                                                                         |

# A380X VD runways as flat ground

The A380X VD terrain profile shows the runways as flat ground at their elevation instead of spikes

|                  |                                                                                                                                                                                                         |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A380X                                                                                                                                                                                                   |
| Where to find it | VD under the ND (terrain profile)                                                                                                                                                                       |
| Branch           | core/a380x-vd-runways , based on core/nd-weather-terrain with core/oans-btv-raas merged in (stacked: needs both merged first; the runway search uses the nearby runway provider of core/oans-btv-raas). |
| Status           | Tested in the sim by the user (2026-10-03): spikes gone at VHHH, one short spike left at CYUL (accepted).                                                                                               |
| Pictures         | No pictures.                                                                                                                                                                                            |

## 1. VD runways drawn as flat ground

|                                                                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A380X   <b>Where:</b> VD terrain profile   <b>Status:</b> Tested in the sim by the user (2026-10-03): OK at VHHH; one short spike left at CYUL, accepted. |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

The MSFS terrain map draws the airport diagram in light grey over the terrain, and no setting hides it. The VD read that grey as terrain far above its plot: spikes wherever the vertical cut crossed an airport, the destination on approach included.

- The systems host searches the airports within 25 NM in the sim's airport database and publishes up to 40 runways, closest first, as rectangles: the runway length and width plus 0.15 NM on each side, at the higher threshold elevation.
- Where the cut crosses such a rectangle, the VD draws flat ground at the runway elevation instead of the terrain map.
- Rectangles around the runways (not a circle around the airport) keep the real terrain next to the runways.

### What you should see

| Situation                   | What you should see                                     |
|-----------------------------|---------------------------------------------------------|
| VD cut across an airport    | Flat brown ground at the runway elevation, no spike.    |
| Approach to the destination | The runway ahead shows as flat ground at its elevation. |
| Terrain next to the runways | Drawn as before (for example the hills near VHHH).      |

### Limitations and why

| Limitation                                        | Why                                                                                             | What to do |
|---------------------------------------------------|-------------------------------------------------------------------------------------------------|------------|
| A short spike can remain over a taxiway or apron. | The flat area covers the runways plus 0.15 NM only (a design choice, kept after the CYUL test). | -          |
| Airports beyond 25 NM are not flattened.          | Design choice of the search radius.                                                             | -          |

### How to use

1. Nothing to set: read the VD terrain profile as usual (TERR SYS of the SURV page not OFF).

## How to test

| # | Do this                                                                                             | Expected result                                                                                              |
|---|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 1 | A380X on approach to CYUL (or any airport), VD terrain profile shown, the cut crossing the airport. | The runways show as flat ground at their elevation; no tall spikes. A short spike over an apron is possible. |
| 2 | A380X near VHHH with the cut over the airport and the hills next to it.                             | The runway is flat, the hills next to it are still drawn.                                                    |
| 3 | Line up on a runway, VD in ARC.                                                                     | Flat ground under and ahead of the aircraft along the runway.                                                |

# FCOM audit fixes

Small upstream bugs found by the FCOM audit of every A32NX and A380X system (2026-10-02): eleven A380X fixes, six A32NX fixes, the fast ADIRS alignment of both aircraft and the A32NX ND chronometer colour, each checked against the FCOM, an A32NX climb thrust regression test, and a fifth batch of FCOM gap fixes for both aircraft (ECAM lines, SD, brakes, GPWS, pressurization), and the A380X FWS engine 4 take-off power fix

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX and A380X                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Where to find it | A380X: GPWS, OANS, SD (CRZ, PRESS, DOOR/OXY, F/CTL, G LOAD), FADEC, FWS (BRAKES HOT, T.O CONFIG, F/CTL ALTN LAW, HYD, CAB PRESS), ELEC panel, EWD EGT, brakes. A32NX: FWS (AIR PACK 2 OFF, ALL ENGINES FAILURE, F/CTL laws, ELAC FAULT, APU BLEED memo), BLEED, TCAS, SD (CRUISE, WHEEL, HYD), brakes, GPWS lights, ND chronometer. Both: ADIRS                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Branch           | core/fcom-audit-fixes , based on master (FlyByWire master 255546cb0); independent of the other core branches. Each fix is small and can be taken upstream on its own. The twelfth A380X fix of the audit (SD FUEL jettison lines white during a normal jettison) needs the jettison of core/fuel1 and is in that branch. Two A32NX fixes of batch 5 (T.O CONFIG NORMAL with the wing tank pump alerts, FUEL L(R) WING TK LO LVL) need the fuel pump alerts and STATUS fields of core/failures-a32nx and are in that branch.                                                                                                                                                                                                                                                          |
| Status           | Batches 1-4: all fixes tested in the sim by the user on develop (2026-10-04); not sim-tested on the master base, unit tests and Rust tests pass there. Batch 5 (2026-10-07): A32NX APU BLEED memo and SD HYD PTU colour, and A380X nose wheel steering with A-SKID OFF, tested in the sim by the user on develop: OK (2026-10-06); A380X SD F/CTL droop circles tested in the sim by the user on develop: OK (2026-10-08; G LOAD line hidden at normal g, its display outside 0.7-1.4 g not sim-tested); the other batch 5 fixes not sim-tested: unit tests and Rust tests. FWS engine 4 take-off power (committed 2026-10-08): a normal four-lever take-off on develop 2026-10-09 kept its phases (2, 3, 4, 6, 7, 8); the lever 3 / lever 4 split itself not sim-tested, unit test. |
| Pictures         | No pictures: every fix changes a stock FBW display, alert or system value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

1. A380X FCOM fixes

2. A32NX FCOM fixes

3. A380X FCOM fixes, batch 5

4. A32NX FCOM fixes, batch 5

5. ADIRS fast alignment in 30 s
6. A32NX ND chronometer in white

7. A32NX climb thrust regression test

8. A380X FWS flight phases: engine 4 take-off power from lever 4

## 1. A380X FCOM fixes

**Aircraft:** A380X | **Where:** GPWS, OANS, SD, FADEC, FWS, ELEC panel, EWD | **Status:** Tested in the sim by the user on develop: OK (2026-10-04). Unit tests: LegacyGpws, OancSelectedRunway, FwsSystemDisplayLogicCrzPage, FadecWingAntilce, BrakesHot, ElecPanelPbs, EgtLimits, CabinAltitudeIndication, FwsAbnormalSensedItems, OxygenIndication specs; Rust test in hydraulic/mod.rs (each fails without its fix).

### What it is for

The FCOM audit of 2026-10-02 compared every A380X system with the A380 FCOM. These eleven findings were one or two wrong lines each (a variable nothing writes, a copy-paste index, an inverted condition). Each is now fixed as the FCOM describes.

| What               | Before                                                                                              | Now                                                                     | FCOM        |
|--------------------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|-------------|
| GPWS TOO LOW FLAPS | The FLAP MODE OFF selection was ignored (the GPWS read L:A32NX_GPWS_FLAP_OFF, which nothing writes) | TAWS FLAP MODE OFF on the MFD SURV CONTROLS page inhibits TOO LOW FLAPS | DSC-34-SURV |

|                                      |                                                                                                                     |                                                                                                                   |                            |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|----------------------------|
| OANS selected runway                 | The FMS landing runway was compared with the FMS origin twice                                                       | The landing runway is green (selected) at the destination airport                                                 | DSC-34-10-70-20            |
| SD automatic CRZ page                | Engine 4 was not checked (engine 3 read twice)                                                                      | Engine 4 alone at takeoff power also delays the CRZ page after takeoff                                            | -                          |
| FADEC thrust limits                  | The wing anti-ice input read an A32NX variable that the A380X never writes                                          | WING ANTI ICE ON (STRUCTURAL DEICE SWITCH) enters the thrust limit computation                                    | DSC-70                     |
| BRAKES HOT and T.O CONFIG            | Never triggered (L:A32NX_BRAKES_HOT is not written on the A380X)                                                    | From the 16 reported brake temperatures: one brake at or above 300 °C                                             | PRO-ABN BRAKES HOT         |
| ELEC panel COMMERCIAL 2 and ELMU pbs | All three pbs toggled COMMERCIAL (ELMU shed the commercial loads)                                                   | Each pb has its own state                                                                                         | DSC-24-20                  |
| EWD EGT amber limit                  | From the thrust lever angle                                                                                         | From the active thrust limit: none at FLEX/TOGA or in reverse, amber above the limit at MCT/CLB                   | DSC-70-90                  |
| SD PRESS CAB ALT needle              | A320 delta P limits applied to feet                                                                                 | Red above 9 550 ft, like the value                                                                                | DSC-21-30-20               |
| F/CTL ALTN LAW procedure             | MAX SPEED 310 KT shown only in ALT 1A (inverted)                                                                    | Shown except in ALT 1A                                                                                            | PRO-ABN F/CTL ALTN LAW     |
| HYD G RSVR LEVEL LO / G SYS OVHT     | The G ELEC PMP A and B OFF line ticked from the yellow pumps; engine 3 and 4 pump disconnection on swapped DC buses | Green pumps; ENG 3 pump disconnection on DC 2, ENG 4 on DC 1                                                      | PRO-ABN HYD, DSC-29-40     |
| SD DOOR/OXY crew supply              | CREW SUPPLY OFF could not show; the CABIN line followed the crew oxygen pb                                          | CKPT legend amber and REGUL PR LO on the ground with CREW SUPPLY OFF; the CABIN line amber on a low pressure only | DSC-35-20-20, DSC-35-30-20 |

## Limitations and why

| Limitation                                              | Why                                                                                                                                              | What to do |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| Only the wrong lines found by the audit were changed.   | Each fix is kept to its finding so it can go upstream on its own; the rest of each system is as before.                                          | -          |
| ELMU and COMMERCIAL 2 have a state but no consumer yet. | Nothing in the electrical model sheds loads by those pbs (a380-simvars: A380X_OVHD_ELEC_COMMERCIAL_2_PB_IS_OFF, A380X_OVHD_ELEC_ELMU_PB_IS_OFF). | -          |
| The EDP disconnection bus change has no cockpit test.   | It only matters with DC 1 or DC 2 lost while disconnecting an engine pump; a Rust test covers it.                                                | -          |

## How to use

1. Nothing to do: the systems behave as in the FCOM.
2. TAWS FLAP MODE: MFD > SURV > CONTROLS, FLAP MODE OFF to inhibit TOO LOW FLAPS (e.g. a landing in a non-standard flap configuration).

## How to test

| #  | Do this                                                                                                                                                        | Expected result                                                                                                                                              |
|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | A380X on approach (FMS approach phase), gear down, flaps not in landing configuration, below 180 kt. MFD SURV CONTROLS: FLAP MODE on. Descend below 245 ft RA. | TOO LOW FLAPS.                                                                                                                                               |
| 2  | Repeat with FLAP MODE OFF on the MFD SURV CONTROLS page.                                                                                                       | No TOO LOW FLAPS.                                                                                                                                            |
| 3  | Flight plan with a destination and a landing runway. At the destination, open the OANS map of the destination airport.                                         | The FMS landing runway is shown green (selected runway).                                                                                                     |
| 4  | After takeoff (climb), flaps and spoilers retracted, SD page not selected: keep thrust lever 4 alone at FLX/MCT or TOGA, levers 1-3 in CL.                     | The SD does not switch to the CRZ page at once: it waits for its 60 s timer, as with any engine at takeoff power. With all levers in CL it switches at once. |
| 5  | In flight, note the thrust limit on the E/WD; set WING ANTI ICE ON.                                                                                            | The thrust limit changes (the FADEC now sees the wing anti-ice).                                                                                             |
| 6  | After a high-energy stop (rejected takeoff or heavy braking), watch the SD WHEEL brake temperatures.                                                           | As soon as one brake reaches 300 °C: amber BRAKES HOT; the T.O CONFIG test then reports the hot brakes.                                                      |
| 7  | Overhead ELEC panel: press ELMU, then COMMERCIAL 2.                                                                                                            | The COMMERCIAL pb stays as it was; each pb changes only itself.                                                                                              |
| 8  | Takeoff at FLX or TOGA, then thrust levers to CL.                                                                                                              | EGT gauge: no amber EGT limit at FLX/TOGA; at CL the amber limit of the CLB thrust applies (EGT amber above it).                                             |
| 9  | SD PRESS page with the cabin altitude above 9 550 ft (e.g. manual cabin altitude).                                                                             | CAB ALT value and needle red.                                                                                                                                |
| 10 | Reach F/CTL ALTN LAW outside ALT 1A (e.g. with flyPad flight control failures).                                                                                | The procedure shows MAX SPEED ..... 310 KT; in ALT 1A it does not.                                                                                           |
| 11 | flyPad > Failures > ATA 29: activate <b>Green reservoir leak</b> ; when HYD G RSVR LEVEL LO shows, set the green electric pumps A and B OFF.                   | The procedure line of the green electric pumps A and B OFF ticks (the yellow pumps no longer tick it).                                                       |
| 12 | On the ground, overhead OXYGEN CREW SUPPLY pb OFF; SD DOOR/OXY page.                                                                                           | CKPT legend amber with REGUL PR LO; the CABIN line unchanged.                                                                                                |

## 2. A32NX FCOM fixes

**Aircraft:** A32NX | **Where:** E/WD, SD BLEED, CRUISE and WHEEL pages, TCAS | **Status:** Tested in the sim by the user on develop: OK (2026-10-04). Unit tests: DeltaPIndication, AutoBrakeIndication, AllEnginesFailure, TcasGpwsInhibit specs; Rust test in pneumatic.rs (each fails without its fix). The OPT RELIGHT SPD clean-up (2026-10-05): AllEnginesFailure spec; the E/WD line shown is unchanged.

### What it is for

The same audit on the A32NX found six one-line bugs. Each now follows the A320 FCOM. The ALL ENGINES FAILURE procedure was also cleaned up on 2026-10-05, with the LEAP-1A relight envelope of core/failures-a32nx.

| What           | Before                     | Now                                                         | FCOM                      |
|----------------|----------------------------|-------------------------------------------------------------|---------------------------|
| AIR PACK 2 OFF | Checked the ENG 1 BLEED pb | Checks the ENG 2 BLEED pb (each pack against its own bleed) | PRO-ABN AIR PACK 1(2) OFF |

|                                          |                                                                                                                                    |                                                                                                                                                              |                                                                       |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| BLEED LO TEMP flag                       | Set only with the bleed valve closed (inverted)                                                                                    | Set when the bleed supplies air (valve open) below 150 °C in flight with WING ANTI ICE on; the bleed temperature turns amber on the SD BLEED page            | DSC-36                                                                |
| TCAS TA ONLY on a GPWS alert             | Read L:A32NX_GPWS_Warning_Active (an A380X variable)                                                                               | A GPWS warning or alert (L:A32NX_GPWS_WARNING_LIGHT_ON / ALERT_LIGHT_ON) inhibits the RAs (TA ONLY)                                                          | DSC-34-SURV-60-10-10                                                  |
| SD CRUISE delta P pulse                  | Pulsed during the whole cruise                                                                                                     | Pulses only in flight phase 7 above 1.5 PSI, resets at 1 PSI                                                                                                 | DSC-21-20-40                                                          |
| SD WHEEL AUTO BRK colour                 | Amber with an engine off (single-engine taxi, engine failure)                                                                      | Green when armed; amber only on an AUTO BRK failure (not modelled)                                                                                           | DSC-32-30-20                                                          |
| ENG ALL ENGINES FAILURE: APU START line  | Only below 2 500 ft radio altitude                                                                                                 | Below FL 250 (pressure altitude), text unchanged                                                                                                             | PRO-ABN ENG ALL ENGINES FAILURE                                       |
| ENG ALL ENGINES FAILURE: OPT RELIGHT SPD | Three unused lines (280/.77, 300/.77, 260/.77) in the message table next to the one shown; the line list written inline in the FWC | One line, OPT RELIGHT SPD.270/.77 (the line already shown, the LEAP-1A value); the line list and its conditions in FWC/Logic/AllEnginesFailure.ts with specs | Air Arabia A320 QRH ABN-19.01A ALL ENG FAIL (LEAP-1A; CFM56: 300/.77) |

## Limitations and why

| Limitation                                        | Why                                                                                                               | What to do |
|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|------------|
| The APU START line does not say "(BELOW FL 250)". | The 24-character ECAM line has no room; the condition gates the line instead, as for the other conditional lines. | -          |
| AUTO BRK never turns amber.                       | The AUTO BRK failure that the FCOM links to the amber colour is not modelled.                                     | -          |

## How to use

1. Nothing to do: the alerts and pages behave as in the FCOM.

## How to test

| # | Do this                                                                               | Expected result                                                                                                              |
|---|---------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX in cruise. ENG 1 BLEED OFF, ENG 2 BLEED ON, X BLEED closed. Set PACK 2 pb OFF.  | After 5 s: AIR PACK 2 OFF.                                                                                                   |
| 2 | In flight with WING ANTI ICE ON, at low engine power (cold bleed air); SD BLEED page. | When a bleed supplies air below 150 °C, its bleed temperature is amber; with that ENG BLEED pb OFF (valve closed) it is not. |
| 3 | In flight with a TCAS RA possible (traffic), trigger a GPWS alert (e.g. SINK RATE).   | The TCAS goes TA ONLY (no RA) while the GPWS alert is on.                                                                    |



|   |                                                                                                   |                                                                                                            |
|---|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 4 | SD CRUISE page in cruise with delta P above 1.5 PSI.                                              | Delta P does not pulse. In the approach (flight phase 7) above 1.5 PSI it pulses, until it is below 1 PSI. |
| 5 | On the ground, one engine running, AUTO BRK MAX armed; SD WHEEL page.                             | AUTO BRK green (it was amber).                                                                             |
| 6 | In flight above 2 500 ft RA and below FL 250, APU off: all engines flame out (e.g. fuel cut-off). | ENG ALL ENGINES FAILURE shows the APU ..... START line, and one OPT RELIGHT SPD line: 270/.77.             |

### 3. A380X FCOM fixes, batch 5

**Aircraft:** A380X | **Where:** SD F/CTL and G LOAD line, FWS (HYD, CAB PRESS), GPWS, pressurization, brakes | **Status:** Nose wheel steering with A-SKID OFF tested in the sim by the user on develop: OK (2026-10-06). SD F/CTL droop circles tested in the sim by the user on develop: OK (2026-10-08: no circles at flaps 0 and 1, circles at flaps 2, no G LOAD line at 0.9-1.1 g; the G LOAD line outside 0.7-1.4 g not sim-tested). The other lines: not sim-tested; unit tests AileronDroop, GLoadIndication, HydOverheatFlags, FwsAbnormalSensedItems and LegacyGpws specs, Rust tests in air\_conditioning/mod.rs, hydraulic/mod.rs and autobrakes.rs.

#### What it is for

The fifth batch of the FCOM gap audit (reports of 2026-10-02) on the A380X: each line below differed from the A380 FCOM and now follows it.

| What                         | Before                                                                                                 | Now                                                                                                                                                                                                                                                                                       | FCOM                                           |
|------------------------------|--------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|
| SD F/CTL aileron droop       | The droop circle on the aileron scales in every configuration                                          | Only in CONF 1+F, 2, 3 and FULL                                                                                                                                                                                                                                                           | DSC-27-10-20                                   |
| SD G LOAD line               | Shown at once whenever the value was outside 0.7-1.4 g, also on the ground; never XX                   | Only in flight, after more than 2 s outside 0.7-1.4 g; kept 5 s after the G load is back to normal; XX when the value is not valid                                                                                                                                                        | DSC-31-40-10                                   |
| HYD G(Y) SYS OVHT            | The two ENG PMP A+B DISC lines always shown                                                            | Shown only when turning the pumps OFF did not depressurise them                                                                                                                                                                                                                           | PRO-ABN<br>HYD G (Y)<br>SYS OVHT,<br>DSC-29-20 |
| HYD G(Y) SYS PRESS LO STATUS | BTW and CAT 3 DUAL missing; AVOID MAX TILLER ANGLE twice (Y); FUEL CONSUMPT INCRSD lines never shown   | INOP SYS BTW and CAT 3 DUAL, INFO CAT 3 SINGLE ONLY; the Y STATUS shows TAXI WITH CARE and NO BRAKED PIVOT TURN; FUEL CONSUMPT INCRSD / FMS PRED UNRELIABLE when the PRIM also failed; Y SYS PRESS LO shows L/G GRVITY EXTN ONLY with the limitation MAX SPEED 220 KT (gravity extension) | PRO-ABN<br>HYD G (Y)<br>SYS PRESS<br>LO        |
| CAB PRESS EXCESS DIFF PRESS  | Could trigger in flight phase 8 only                                                                   | Can trigger on the ground before take-off and below 800 ft before landing (flight phases 1, 8 and 9)                                                                                                                                                                                      | PRO-ABN<br>CAB PRESS<br>EXCESS DIFF<br>PRESS   |
| GPWS mode 4 speeds           | TOO LOW TERRAIN above 190 kt (4A) / 159 kt (4B), the A320 values, with a ceiling rising with the speed | Above 200 kt gear up (4A) and 180 kt flaps not in landing configuration (4B); a flat 500 ft (4A) / 245 ft (4B) ceiling while the terrain function is available, rising to 1 000 ft only with TERR SYS OFF or a TERR failure                                                               | DSC-34-20-20-10                                |
| Cabin descent rate           | Limited to 350 ft/min                                                                                  | Limited to 300 ft/min                                                                                                                                                                                                                                                                     | DSC-21-30-30                                   |
| A-SKID switch OFF            | Also cut the nose wheel steering (A320 logic)                                                          | The nose wheel steering stays: "A-SKID sw OFF does not cut off NWS"                                                                                                                                                                                                                       | DSC-32-30-10                                   |

|                         |                                       |                                                                                      |              |
|-------------------------|---------------------------------------|--------------------------------------------------------------------------------------|--------------|
| AUTO BRK after take-off | Any mode disarmed 10 s after lift-off | Only RTO disarms 10 s after lift-off; a landing mode armed on the ground stays armed | DSC-32-10-30 |
|-------------------------|---------------------------------------|--------------------------------------------------------------------------------------|--------------|

## Limitations and why

| Limitation                                                                                            | Why                                                                                                                                                                                                                                   | What to do |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| "Turning the pumps OFF was not successful" is read from the pump section pressure switch.             | It is the only pump output the FWS has (design choice).                                                                                                                                                                               | -          |
| The GPWS "terrain function available" is the TERR SYS pb and the TERR failure of the selected system. | The FCOM names the aircraft position and the terrain database; the sim has no failure of either (design choice). The 1 000 ft ceiling is reached at 250 kt, as on the A320 (the FCOM figure is not precise enough to read the speed). | -          |
| CAB PRESS EXCESS DIFF PRESS has no practical sim trigger.                                             | It needs a differential pressure above the limit; the phase change is covered by the FwsAbnormalSensedItems spec.                                                                                                                     | -          |

## How to use

1. Nothing to set: the pages, alerts and systems behave as in the FCOM.
2. A landing AUTO BRK mode can now be armed on the ground before take-off: it stays armed for the landing.

## How to test

| # | Do this                                                                                                                                                                                       | Expected result                                                                                                                                                                                                 |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, aircraft powered, flaps lever at 0. ECAM control panel: <b>F/CTL</b> key. FLAPS lever to 1, wait; then to 2, wait.                                                       | Flaps 0 and 1: no white circles on the six ailerons. Flaps 2 (and 1+F on the way): a white circle on each aileron scale. The G LOAD line stays hidden (SD bottom, above the clock).                             |
| 2 | In flight, pull or push for more than 2 s outside 0.7-1.4 g (e.g. a firm pull-up above 1.4 g).                                                                                                | The G LOAD line shows the value; it stays 5 s after the load is back within 0.7-1.4 g. A shorter peak shows nothing.                                                                                            |
| 3 | Engines running, parking brake ON, ground speed 0. A-SKID switch (centre instrument panel, next to the L/G lever) OFF. Release the parking brake, taxi slowly and turn the tiller fully left. | The nose wheel turns and the aircraft turns left (before: no steering). Set A-SKID ON and the parking brake ON afterwards.                                                                                      |
| 4 | On the ground, AUTO BRK selector to a landing mode (e.g. LO). Take off.                                                                                                                       | The mode stays armed after lift-off (more than 10 s); with RTO armed, RTO disarms 10 s after lift-off.                                                                                                          |
| 5 | In flight, flyPad > Failures > ATA 29: <b>Green reservoir leak</b> ; wait for HYD G SYS PRESS LO. Open the STATUS.                                                                            | INFO CAT 3 SINGLE ONLY; INOP SYS (APPR & LDG) includes BTV and CAT 3 DUAL.                                                                                                                                      |
| 6 | Remove it; activate <b>Yellow reservoir leak</b> ; wait for HYD Y SYS PRESS LO.                                                                                                               | Procedure line L/G GRVITY EXTN ONLY; limitation MAX SPEED 220 KT (gravity extension) on the PFD and the ECAM; STATUS INFO TAXI WITH CARE, NO BRAKED PIVOT TURN, AVOID MAX TILLER ANGLE once, CAT 3 SINGLE ONLY. |

|    |                                                                                                                                                                               |                                                                                                                                                                        |
|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7  | A hydraulic system overheat (HYD G or Y SYS OVHT; set by the hydraulic model, this branch adds no failure for it): set the ENG PMP A and B pb-sw of the affected engines OFF. | The ENG PMP A+B DISC lines show only if a pump section keeps its pressure; with the pumps depressurised they do not show. Covered offline by HydOverheatFlags.spec.ts. |
| 8  | Approach over flat ground, gear up, 220 kt, descend through 500 ft RA (MFD SURV CONTROLS: TERR SYS on).                                                                       | TOO LOW TERRAIN from 500 ft RA, not higher. At 190 kt gear up: TOO LOW GEAR instead.                                                                                   |
| 9  | Gear down, flaps not in landing configuration, 190 kt, descend through 245 ft RA.                                                                                             | TOO LOW TERRAIN from 245 ft RA (above 180 kt). Below 180 kt: TOO LOW FLAPS.                                                                                            |
| 10 | Repeat the gear-up pass at 250 kt with TERR SYS OFF.                                                                                                                          | TOO LOW TERRAIN from about 1 000 ft RA.                                                                                                                                |
| 11 | Descent at a high vertical speed; SD CAB PRESS page.                                                                                                                          | The cabin vertical speed goes down at no more than about 300 ft/min (was 350).                                                                                         |

## 4. A32NX FCOM fixes, batch 5

**Aircraft:** A32NX | **Where:** E/WD, SD HYD, brakes, GPWS/PULL UP pbs | **Status:** APU BLEED memo and SD HYD PTU colour tested in the sim by the user on develop: OK (2026-10-06). The other lines: not sim-tested; unit tests FlightControlLawAlerts, ApuMemos and PtuIndication specs, Rust tests in a320\_systems (hydraulic brakes, lib.rs) and in the shared egpws.

### What it is for

The fifth batch of the FCOM gap audit on the A32NX. The T.O CONFIG NORMAL fix (not given with a FUEL L(R) TK PUMP 1+2 LO PR alert) and the FUEL L(R) WING TK LO LVL fix (FUEL MODE SEL MAN only with fuel in the centre tank, and its STATUS) of the same batch are on `core/failures-a32nx`: they need its fuel pump alerts.

| What                                | Before                                                                                                                    | Now                                                                                                                                                              | FCOM                             |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| F/CTL ALTN LAW                      | MAX SPEED and MANEUVER WITH CARE / MAX FL lines not as in the procedure; SPD BRK DO NOT USE not tied to an elevator fault | MAX SPEED 320 KT (320/.77 only with a dual hydraulic low pressure); SPD BRK DO NOT USE only with an L or R elevator fault; no MANEUVER WITH CARE, no MAX FL line | PRO-ABN<br>F/CTL ALTN LAW        |
| F/CTL DIRECT LAW                    | SPD BRK DO NOT USE next to USE SPD BRK WITH CARE                                                                          | Only USE SPD BRK WITH CARE                                                                                                                                       | PRO-ABN<br>F/CTL DIRECT LAW      |
| F/CTL ELAC 1(2) FAULT               | FUEL CONSUMPT INCRSD and FMS PRED UNRELIABLE never shown                                                                  | Shown after the procedure lines (hidden with them in the sidestick transducer case)                                                                              | PRO-ABN<br>F/CTL ELAC 1(2) FAULT |
| APU BLEED memo                      | Followed the APU bleed valve                                                                                              | Follows the APU BLEED pb-sw: APU available and pb-sw ON, at once                                                                                                 | DSC-36-20                        |
| SD HYD PTU symbol                   | Amber also during the automatic PTU inhibitions (e.g. the second engine start with the parking brake set)                 | Amber only with the PTU pb-sw OFF                                                                                                                                | DSC-29-20                        |
| Alternate braking without anti-skid | Limited to 1 160 PSI                                                                                                      | Limited to 1 000 PSI                                                                                                                                             | DSC-32-30-10                     |
| Brake fans                          | Ran on the ground only                                                                                                    | Run when the left main gear is down and locked, also in flight before landing                                                                                    | DSC-32-30-20                     |

|             |                                            |                                                                                                                                                                      |                |
|-------------|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| GPWS lights | The red PULL UP light for every GPWS alert | Red PULL UP only for the mode 1 PULL UP and mode 2 warnings; the other alerts (SINK RATE, DON'T SINK, TOO LOW ...) light the amber GPWS light of the GPWS/PULL UP pb | DSC-34-SURV-40 |
|-------------|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|

### Limitations and why

| Limitation                                                 | Why                                                                    | What to do |
|------------------------------------------------------------|------------------------------------------------------------------------|------------|
| An unused EGPWS test helper was removed in the same batch. | The Rust lint (clippy, all targets) failed on it; no behaviour change. | -          |

### How to use

1. Nothing to set: the alerts, the SD and the systems behave as in the FCOM.

### How to test

| # | Do this                                                                                                                                                                       | Expected result                                                                                                                       |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| 1 | A32NX on the ground, parking brake ON, APU running and AVAIL, APU BLEED pb OFF, engines off, PTU pb AUTO. Press APU BLEED ON, then OFF.                                       | ON: the E/WD memo APU BLEED (green) replaces APU AVAIL at once. OFF: APU AVAIL comes back and APU BLEED goes at once.                 |
| 2 | APU BLEED ON. ECAM control panel: HYD page. Start engine 2 with the parking brake still ON (ENG MODE IGN START, ENG MASTER 2 ON), then press the PTU pb OFF and back to AUTO. | The PTU symbol stays green during the start (automatic inhibition); amber with the pb OFF, green again at AUTO.                       |
| 3 | In flight, flyPad > Failures > ATA 27: <b>ELAC 1</b> .                                                                                                                        | F/CTL ELAC 1 FAULT with its procedure lines and, at the end, FUEL CONSUMPT INCRSD and FMS PRED UNRELIABLE.                            |
| 4 | Remove it. ATA 29: <b>Green reservoir leak</b> and <b>Yellow reservoir leak</b> ; wait for the G and Y pressures to be low.                                                   | F/CTL ALTN LAW (PROT LOST) with MAX SPEED 320/.77; no MANEUVER WITH CARE, no MAX FL 350, no SPD BRK DO NOT USE (no elevator fault).   |
| 5 | When F/CTL DIRECT LAW shows.                                                                                                                                                  | USE SPD BRK WITH CARE, without a SPD BRK DO NOT USE line.                                                                             |
| 6 | On the ground, A/SKID & N/W STRG switch OFF, press both brake pedals fully; triple brake indicator.                                                                           | Brake pressure at most 1 000 PSI (was 1 160).                                                                                         |
| 7 | In flight on approach, BRAKE FAN pb ON, landing gear down and locked.                                                                                                         | The brake fans run before touchdown (before: only on the ground).                                                                     |
| 8 | In flight, trigger a GPWS alert other than PULL UP (e.g. SINK RATE, or TOO LOW GEAR).                                                                                         | The amber GPWS light of the GPWS/PULL UP pb on each pilot's panel; no red PULL UP. A mode 1 PULL UP or a mode 2 warning: red PULL UP. |

## 5. ADIRS fast alignment in 30 s

|                                                                                                                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> Overhead ADIRS panel   <b>Status:</b> Tested in the sim by the user on develop: OK (2026-10-04). Rust tests in adirs.rs (the existing fast alignment test tightened to 30 s). |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

A fast (re)alignment, the IR mode selector set to OFF and back to NAV within 5 s, took 180 s. Both FCOMs give about 30 s (A320 FCOM DSC-22\_20-20-40, IRS alignment page: "a fast alignment takes 30 s"; A380 FCOM DSC-34-10-30-30). The shared systems code now takes 30 s.

## Limitations and why

| Limitation                       | Why                                                   | What to do |
|----------------------------------|-------------------------------------------------------|------------|
| Only the fast alignment changed. | A normal alignment from an unaligned IR is unchanged. | -          |

## How to use

1. With the IRs aligned on the ground, set an IR mode selector to OFF and back to NAV within 5 s.

## How to test

| # | Do this                                                                                                   | Expected result                                     |
|---|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| 1 | Aircraft on the ground, IRs aligned (NAV). Set IR 1 to OFF and back to NAV within 5 s; start a stopwatch. | IR 1 is aligned again after about 30 s (not 3 min). |
| 2 | Repeat on the A380X.                                                                                      | Same: about 30 s.                                   |

## 6. A32NX ND chronometer in white

**Aircraft:** A32NX | **Where:** ND, CHRONO pb on the EFIS control panel | **Status:** Tested in the sim by the user on develop: OK (2026-10-04). Spec ChronoColours.spec.ts (compiled styles of both aircraft).

## What it is for

The ND chronometer was drawn in green digits on a light grey box, hard to read. The A320 FCOM gives "Chronometer Indication (white)" (DSC-31-45, INDICATIONS ON ND, item 9). The A32NX now shows white digits on a box in the display background colour.

## Limitations and why

| Limitation                       | Why                                                                                   | What to do |
|----------------------------------|---------------------------------------------------------------------------------------|------------|
| The dark box is a design choice. | The FCOM shows no box; a dark box keeps the digits readable over the map and terrain. | -          |
| The A380X is unchanged.          | Its FCOM gives no colour for the chronometer.                                         | -          |

## How to use

1. Press CHRONO on the EFIS control panel: the elapsed time appears at the bottom left of the ND. Press again to freeze it, a third time to reset and hide it.

## How to test

| # | Do this                          | Expected result                                                     |
|---|----------------------------------|---------------------------------------------------------------------|
| 1 | A32NX, ND powered: press CHRONO. | White digits on a black box at the bottom left of the ND, counting. |
| 2 | A380X: press CHRONO.             | Unchanged: green digits on the grey box.                            |

## 7. A32NX climb thrust regression test

**Aircraft:** A32NX | **Where:** Unit tests (FMS and FADEC climb thrust tables) | **Status:** Test only, no code change: A320ClimbThrustLimit.spec.ts passes.

What it is for

A check of the A32NX climb against the A320neo FCOM climb tables (IndiGo FCOM PER-CLB-CLT, PDF pages 7248-7250 at ISA+10 and 7258-7260 at ISA+20, PW1127G-JM engines; no LEAP-1A table is available) found that the A32NX already climbs within 1-3 % of them, so no CLB thrust value was changed. The test keeps it so: the FADEC CLB N1 table (ThrustLimits\_A32NX.hpp) and its FMS copy (cn1ClimbLimit) must stay identical row by row, and a climb computed with the FMS engine and flight models from FL 100 to FL 300 at 300 kt / M.78 must stay within 5 % of the FCOM times (8 % for each half) at 52 to 76 t.

Limitations and why

| Limitation                             | Why                                                         | What to do |
|----------------------------------------|-------------------------------------------------------------|------------|
| Nothing changes in the aircraft.       | The finding was that the climb already matches the FCOM.    | -          |
| The reference is the PW1127G-JM table. | FBW models the LEAP-1A26; no LEAP climb table is available. | -          |

How to use

- 1. Nothing to do in the sim. When changing the CLB N1 table, change both copies and run the test.

How to test

| # | Do this                                                                                                                        | Expected result                                                                        |
|---|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| 1 | Run <code>npx vitest run fbw-a32nx/src/systems/fmgc/src/flightplanning/A320ClimbThrustLimit.spec.ts</code> .                   | All tests pass.                                                                        |
| 2 | Optional in the sim: climbs at 52, 60 and 64 t, ISA+10, no wind, managed CLB speed, cruise FL 350; time from FL 100 to FL 300. | Within 5 % of 7.67 min (52 t), 9.08 min (60 t), 9.97 min (64 t); at ISA 2-5 % quicker. |

8. A380X FWS flight phases: engine 4 take-off power from lever 4

**Aircraft:** A380X | **Where:** FWS flight phases (take-off phase 3) | **Status:** No regression in the sim: a normal four-lever take-off on develop 2026-10-09 went through phases 2, 3, 4, 6, 7, 8 in order. The lever 3 / lever 4 split that shows the fix: not sim-tested. Unit test `FwsTakeoffPower.spec.ts` (fails against the previous `FwsFlightPhases.ts`).

What it is for

The FWS flight phases need two engines at take-off power for phase 3. The take-off power of engine 4 was read from thrust lever 3 (`eng4TLAFullPwr = eng3TLA > 43.3`), so lever 3 alone at TOGA counted as two engines, and lever 4 was never read. Each engine now reads its own lever; the rule (TOGA, above FLX/MCT, or FLX/MCT with a FLEX TEMP) sits in `FwsTakeoffPower.ts`.

Limitations and why

| Limitation                                           | Why                                           | What to do |
|------------------------------------------------------|-----------------------------------------------|------------|
| Nothing changes with all four levers moved together. | Only a lever 3 / lever 4 split shows the fix. | -          |

How to use

- 1. Nothing to set: set the thrust levers for take-off as usual.

## How to test

| # | Do this                                                                                                                                | Expected result                                                                                 |
|---|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, PARKING BRK ON, engines running at idle, all levers at IDLE, no FLEX TEMP. Thrust lever 3 only to TOGA, hold 5 s. | The FWS stays in phase 2: no red CONFIG PARK BRK ON (before the fix, phase 3 and that warning). |
| 2 | Lever 3 back to IDLE; levers 3 and 4 to TOGA.                                                                                          | Phase 3: red CONFIG PARK BRK ON.                                                                |
| 3 | All levers to IDLE.                                                                                                                    | The warning goes.                                                                               |

# RAT ground stow

The ram air turbine (RAT) of both aircraft can be stowed again after the landing, on the ground only, as the FCOMs describe; a request in flight or while an extension is still commanded is refused

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aircraft         | A32NX and A380X                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Where to find it | The aircraft systems (A32NX hydraulic RAT, A380X electrical RAT); requested from the flyPad Ground > Services page (row on <code>core/efb-redesign</code> )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Branch           | <code>core/rat-ground-stow</code> , based on <code>master</code> (FlyByWire <code>master 255546cb0</code> ); independent of the other core branches. It holds the systems part (shared Rust, tests, <code>simvar docs</code> , <code>CHANGELOG</code> line). The flyPad row that sends the request is on <code>core/efb-redesign</code> , because it is a row of the Material 3 Services page: the feature works for the user only when both branches are merged. Without the flyPad row the request can be written as <code>L:A32NX_RAT_STOW_REQUEST</code> with any <code>L:var</code> tool; without this branch the flyPad row shows while the RAT is out but pressing it has no effect. |
| Status           | Sim-tested by the user on both aircraft on develop: OK (2026-10-05). Not sim-tested on the master base; Rust tests pass there.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Pictures         | No pictures: the flyPad row is one line of the Services equipment list; the A380X RAT rig and the A32NX HYD page are stock.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## 1. RAT stow on the ground

|                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft:</b> A32NX and A380X   <b>Where:</b> flyPad > Ground > Services, row "RAT stow (maintenance)"   <b>Status:</b> Tested in the sim by the user on develop: OK on both aircraft (2026-10-05). Rust tests in systems ( <code>ram_air_turbine_deployment.rs</code> ), <code>a320_systems</code> (hydraulic) and <code>a380_systems</code> (electrical); <code>vitest ratStow.spec</code> on <code>core/efb-redesign</code> . |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### What it is for

Once the RAT had extended (both AC buses lost, RAT MAN ON, A32NX EMER ELEC PWR MAN ON), nothing stowed it again: it stayed out for the rest of the session, and on the A32NX HYD RAT FAULT stayed on. On the real aircraft the ground crew stows it after the flight.

|                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>NOTE</b><br>A320 FCOM DSC-29-10-20 ( <code>a320_fcom.txt</code> l.43637-43653): "The RAT deploys automatically if AC BUS 1 and AC BUS 2 are both lost. It can be deployed manually from the overhead panel. It can be stowed only when the aircraft is on the ground." |
| <b>NOTE</b><br>A380 FCOM DSC-29-10 ( <code>a380_fcom.txt</code> l.61250): "The green hydraulic system powers RAT retraction, on ground."                                                                                                                                  |

The systems now accept a maintenance stow request (`L:A32NX_RAT_STOW_REQUEST`) on the ground, while no extension is commanded. One shared Rust model (`ram_air_turbine_deployment.rs`) moves the strut of both aircraft, so the A320 and the A380X behave the same.

### What you should see

| Situation                                   | What you should see                                                                                                                                                 |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RAT stowed                                  | No RAT row in the Services list.                                                                                                                                    |
| RAT out, aircraft on the ground and stopped | Row "RAT stow (maintenance)", status "RAT extended", button <b>Stow</b> .                                                                                           |
| Stow pressed and accepted                   | Status "Stowing" for about 3 s; the strut moves in 1 s; the row disappears.<br>A380X: the RAT rig retracts. A32NX: the HYD page RAT indication goes back to stowed. |



|                                                                                                                                           |                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| RAT out in flight, or on the ground but moving                                                                                            | Row greyed, status "RAT extended · stow when stopped on the ground".                                                                 |
| Stow pressed while an extension is still commanded (emergency electrical configuration, RAT MAN ON or A32NX EMER ELEC PWR MAN ON held in) | Refused: the RAT stays out.                                                                                                          |
| RAT MAN ON (or the automatic extension) after a stow                                                                                      | The RAT extends again.                                                                                                               |
| A32NX on the ground with the RAT out                                                                                                      | HYD RAT FAULT, as the FCOM says (PRO-ABN-HYD, a320_fcom.txt l.88843-88851: "The RAT is not fully stowed"); it clears after the stow. |

## Limitations and why

| Limitation                                    | Why                                                                                                                                                                                                                         | What to do                   |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| The stow needs no hydraulic pressure.         | Design choice: the FCOMs say only "on the ground" (A320) and that green hydraulics power the retraction on ground (A380); the stow is a ground crew action, so it is not tied to the aircraft hydraulics being pressurised. | -                            |
| The strut travels in 1 s.                     | Design choice: the same speed as the stock extension; no FCOM value.                                                                                                                                                        | -                            |
| No RAT on the A32NX model.                    | The A32NX exterior model has no RAT yet: only the HYD page, HYD RAT FAULT and the RAT pump show the stow.                                                                                                                   | -                            |
| A request in flight is dropped.               | Each request is evaluated once (written back to 0), so a request in flight does not stow the RAT after the landing.                                                                                                         | Request again on the ground. |
| The flyPad row needs the stationary aircraft. | Design choice of the flyPad (like the other ground services); the systems themselves only need "on the ground".                                                                                                             | Stop the aircraft.           |

## How to use

1. After a flight with the RAT out, stop on the ground.
2. Restore normal electrical power (engines or APU generators, or external power) so that no extension is commanded; on the A32NX the RAT MAN ON and EMER ELEC PWR MAN ON pbs are not pressed.
3. flyPad > Ground > Services: press **Stow** on the row "RAT stow (maintenance)".

## How to test

The flyPad row is on `core/efb-redesign`: test with both branches merged. With this branch alone, replace each "press Stow" step by setting `L:A32NX_RAT_STOW_REQUEST` to 1 with an L:var tool (SimConnect); the "row" lines then do not apply.

| # | Do this                                                                                                                     | Expected result                                                                             |
|---|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| 1 | A380X on the ground, engines running, parking brake set. Overhead EMER ELEC PWR panel: open the guard and press RAT MAN ON. | The RAT extends (rig out); the flyPad Services list shows "RAT stow (maintenance)", active. |

|   |                                                                                        |                                                                                                                                                           |
|---|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | With RAT MAN ON released, press Stow on the flyPad.                                    | "Stowing", the rig retracts in about 1 s and the row disappears. (While RAT MAN ON is held in, the extension is still commanded and the stow is refused.) |
| 3 | A380X in flight: press RAT MAN ON, then look at the flyPad.                            | Row greyed ("stow when stopped on the ground"); a request written in flight is dropped.                                                                   |
| 4 | Land with the RAT out, stop, press Stow.                                               | The RAT stows.                                                                                                                                            |
| 5 | A32NX on the ground, engines running. HYD panel: RAT MAN ON (or EMER ELEC PWR MAN ON). | The RAT extends: HYD page RAT out, HYD RAT FAULT (FCOM: the RAT is not fully stowed); flyPad row "RAT stow (maintenance)".                                |
| 6 | Press Stow on the flyPad.                                                              | The HYD page RAT goes back to stowed, HYD RAT FAULT clears, the row disappears.                                                                           |
| 7 | A32NX: press RAT MAN ON again.                                                         | The RAT extends again.                                                                                                                                    |