A380X OIS: NSS AVNCS and FLT OPS applications

The A380X Onboard Information System (the OIT screens beside the pilots) gets working menu bars, a message toolbar and task bars, COMPANY COM folders and report forms, REFUEL, the technical LOGBOOK, T.O PERF, LOADSHEET, LDG PERF, LOAD BOX, EXPORT BOX and IN-FLT PERF ATMO, and the NSS DATA TO AVNCS switch is read the right way round

Aircraft	A380X
Where to find it	The OITs on the lateral side panels (OIT SIDE switch: NSS AVNCS or FLT OPS), laptop keyboard or ACD; the NSS DATA TO AVNCS pb-sw on the overhead NSS panel
Branch	`core/a380x-ois`, based on `master` (FlyByWire master 76db0aef1), with `core/a380x-ois-datalink` (the IMA/datalink model, OIS exit and AOC print; it merges core/printer, core/a380x-mailbox-du-reconf and core/a380x-elec), `core/a380x-cockpit` (ACD keys) and `core/efb-performance` (shared A380 performance calculators) merged in. It holds the NSS DATA TO AVNCS polarity fix, the derated levels of the shared A380 takeoff calculator (the calculator part of develop 2699137a2, used by T.O PERF; its flyPad and MFD parts stay on develop) and the six OIS application commits (cherry-picked from develop; every OIS file equal to develop fa4329bdf). The landing calculator is the shared one of core/efb-performance, which now keeps calculating above the tailwind limit: LDG PERF calculates above the tailwind limit like develop.
Status	All features sim-tested by the user on 2026-10-18 in one combined install (tests T1 NSS AVNCS, T4 REFUEL ZF entry and COMPANY COM forms, T5 LOADSHEET chain / print title / entries kept, T6 LOGBOOK deferral with the polarity fix; T.O PERF and IN-FLT PERF ATMO typing through T5): OK. The REFUEL ZF entry only writes its variables: the fuel system side that reads them is on a separate branch, not merged.
Pictures	From the OIT browser harness (the built OIT instrument of the tested tree, 1333 x 1000), 2026-10-18.

1. NSS DATA TO AVNCS pb-sw read the right way round
2. Menu bars, message toolbar, switching bar and task bar
3. COMPANY COM folders, report and request forms
4. REFUEL
5. T.O PERF, LOADSHEET and LDG PERF
6. Technical LOGBOOK
7. LOAD BOX, EXPORT BOX and IN-FLT PERF ATMO

1. NSS DATA TO AVNCS pb-sw read the right way round

> **Aircraft:** A380X | **Where:** Overhead NSS panel, NSS DATA TO AVNCS pb-sw | **Status:** On core/a380x-ois and develop. Sim-tested 2026-10-18: OK (logbook ground link works with the pb-sw in its normal position).

What it is for

The pb-sw variable `L:A32NX_OVHD_NSS_DATA_TO_AVNCS_TOGGLE` is 1 in its normal (released) position and 0 when pressed in (OFF light). The OIT read it the other way round, so it treated the data link to the avionics as OFF in normal use: one-way, avionics to NSS only. On the aircraft only OFF does that: the AOC can no longer send and the logbook loses its ground link.

Limitations and why

Limitation	Why	What to do
No visible change on master alone.	On master no OIT function is paused by this switch yet; the effect shows with the logbook ground link of the OIS applications.	None.

How to use

1. Leave the NSS DATA TO AVNCS pb-sw in its normal position; press it (OFF) to cut the data link to the avionics.

How to test

#	Do this	Expected result
1	With the OIS applications: NSS DATA TO AVNCS normal, LOGBOOK > UPDATE.	The synchronisation with the ground completes (no "Synchronization with ground failed").
2	Press NSS DATA TO AVNCS (OFF light), LOGBOOK > UPDATE.	The synchronisation fails: no ground link.

2. Menu bars, message toolbar, switching bar and task bar

> **Aircraft:** A380X | **Where:** Top and bottom bars of both OIS domains | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

The two OIS domains now have the menu bars the FCOM describes:

- **FLT OPS**: MENU, the active application name in cyan, FUNCTIONS (HOME, PREVIOUS, NEXT, PRINT, STORE, UPDATE, UNDO, REDO, HELP, HIDE / SHOW SWITCHING BAR, CLOSE APPLICATION with their shortcuts; an item is enabled only when the application has that function), the MSG counter, its list and CLEAR. At the bottom the **switching bar** shows the open applications in opening order, the active one highlighted, with scroll arrows; HIDE SWITCHING BAR (F11) gives the full screen.
- **NSS AVNCS**: NSS AVNCS MENU, MAXIMIZE / MINIMIZE (full screen without the navigation tree), MSG and CLEAR; line 2 HOME, BACK, FORWARD, PRINT (pedestal printer, on the pages that can print), UPDATE, HELP (greyed) and CLOSE (closes the application). At the bottom the **task bar** shows the open applications (LOGBOOK, COMPANY COM, REFUEL, A380X SYSTEMS) in opening order; a key shows its application where it was left. All applications close at the log-off.
- A company message received posts a notification on both domains; reading the message removes it; selecting it on the NSS AVNCS side opens the message.



Figure 1. NSS AVNCS menu page: LOGBOOK, COMPANY COM and REFUEL



Figure 2. FLT OPS FUNCTIONS list on LOADSHEET: PRINT enabled once a loadsheet is generated, the greyed items have no function there

Limitations and why

Limitation	Why	What to do

UPDATE, UNDO, REDO and HELP of FUNCTIONS are greyed.	They are greyed in the FCOM figures too.	None.
HOME goes to the application home page, not to the FLT OPS MENU.	As the FCOM function list.	Use MENU > FLT OPS MENU or the OIS MENU key.

How to use

1. Open applications from the menu; switch between them with the switching bar (FLT OPS) or the task bar (NSS AVNCS).
2. Use FUNCTIONS (FLT OPS) or the line-2 buttons (NSS AVNCS) for PRINT, CLOSE and full screen.

How to test

#	Do this	Expected result
1	NSS AVNCS: open COMPANY COM, then LOGBOOK, then REFUEL.	The task bar shows COMPANY COM, LOGBOOK, REFUEL in this order, the active one highlighted.
2	CLOSE on LOGBOOK.	LOGBOOK leaves the task bar, the menu page shows.
3	FLT OPS: open T.O PERF and LOADSHEET, open FUNCTIONS.	The switching bar shows both; HIDE SWITCHING BAR hides it, SHOW brings it back.

3. COMPANY COM folders, report and request forms

> **Aircraft:** A380X | **Where:** NSS AVNCS > COMPANY COM | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

COMPANY COM opens on its Inbox and counts the unread Inbox messages and the Outbox messages. The Outbox holds what was sent until the network confirms it, then it moves to Sent. The airline forms (INIT Data, Fuel Figures, Refuelling, Loadsheet Acceptance, Departure / Take Off / Gate Delay, Delay Code, ASR, Ramp Service, Diversion, ETA, Flight Summary) are plain forms pre-filled with the flight data the OIT has and sent as a free text to a station (COMPANY without one) over the Hoppie network.



Figure 3. DEPARTURE DELAY form: amber boxes are mandatory, cyan dashes optional; the entries stay while COMPANY COM is open

Limitations and why

Limitation	Why	What to do
The forms are a design of ours.	The AOC is customised by each airline and the FCOM shows no form.	None.
NOTAM request stays greyed.	The datalink has no NOTAM source.	None.

How to use

1. COMPANY COM > Pre-flight / In-flight / Post-flight > Requests or Reports > the form.
2. Fill the amber boxes, check the pre-filled values, SEND. Follow it in Outbox, then Sent.

How to test

#	Do this	Expected result
1	Hoppie connected: send a Departure Delay with a station and a new ETD.	It shows in the Outbox, then in Sent; the station receives the text.
2	Leave the form, open the Inbox, come back to the form.	The entries are still there.

4. REFUEL

> **Aircraft:** A380X | **Where:** NSS AVNCS > REFUEL | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

Shows the fuel on board, the preselected fuel quantity (PFQ) and the refuel state, and on the ground sets a new PFQ for the automatic refuel. A ZF data box takes a ZFW / ZFCG of its own for the CG targeting (ZFW 270-373 t, ZFCG 23-48 %, both needed), written to `L:A32NX_FUEL_REFUEL_ZFW` (kg) and `L:A32NX_FUEL_REFUEL_ZFCG` (% MAC); FQMS DEFAULT clears it (0).



Figure 4. REFUEL after SET of a ZFW 300 t / ZFCG 36.5 % entry

Limitations and why

Limitation	Why	What to do
The ZF entry does not change the refuel yet.	The fuel system side that reads it (FQMS CG targeting with the REFUEL ZF data, FUEL REFUEL DATA / FMS DISAGREE) is on a separate branch, not merged.	None.
No entry in flight.	Design choice: refuel is a ground function.	None.

How to use

1. On the ground: NEW PFQ, SET. For the ZF data: ZFW and ZFCG, SET; FQMS DEFAULT to remove them.

How to test

#	Do this	Expected result
1	On the ground, NEW PFQ 150000 kg, SET.	PRESELECTED (PFQ) shows 150000 KG.
2	ZFW 300000, ZFCG 36.5, SET; then FQMS DEFAULT.	REFUEL ENTRY shows 300000 KG / 36.5 %, then nothing.

5. T.O PERF, LOADSHEET and LDG PERF

> **Aircraft:** A380X | **Where:** FLT OPS > MENU > T.O PERF / LOADSHEET / LDG PERF | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

- **T.O PERF**: CONDITIONS, a runway of the departure airport, COMPUTE: speeds, flaps, FLEX or derate, MTOW(perf), from the shared A380 takeoff calculator (the flyPad's). XCHECK WITH AVNCS compares them with the FMS T.O page, the SD gross weight and the captain's QNH and lists the discrepancies in amber.

- **LOADSHEET** (REDUCED mode): TOW/CG, LW/CG, underload and T.O THS from the ZFW/CG and the fuel; LTS EDITION, GENERATE, PRINT (titled LOADSHEET) and EXPORT to the EXPORT BOX. Its TOW and LW go to T.O PERF and LDG PERF.
- **LDG PERF**: DISPATCH and IN-FLIGHT landing distance, stop margin, MLW(perf), VAPP and go-around data for a runway of the destination.
- The entries and results stay while the application is open.



Figure 5. T.O PERF computed at LFBO RWY 14

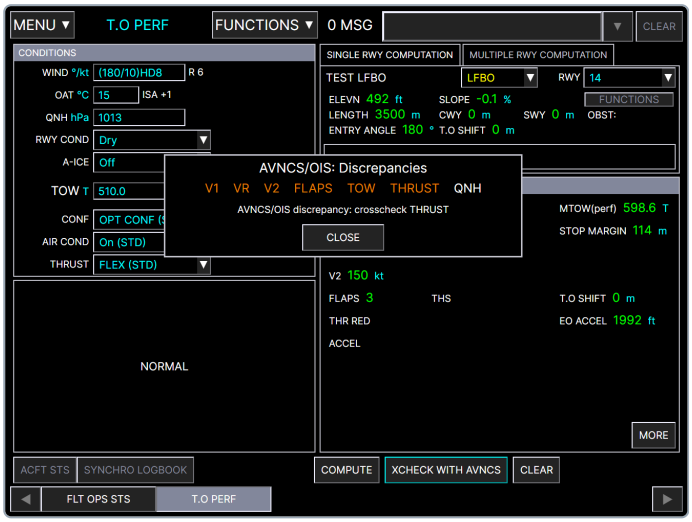


Figure 6. XCHECK WITH AVNCS with nothing in the FMS: every item in amber



Figure 7. LOADSHEET after GENERATE

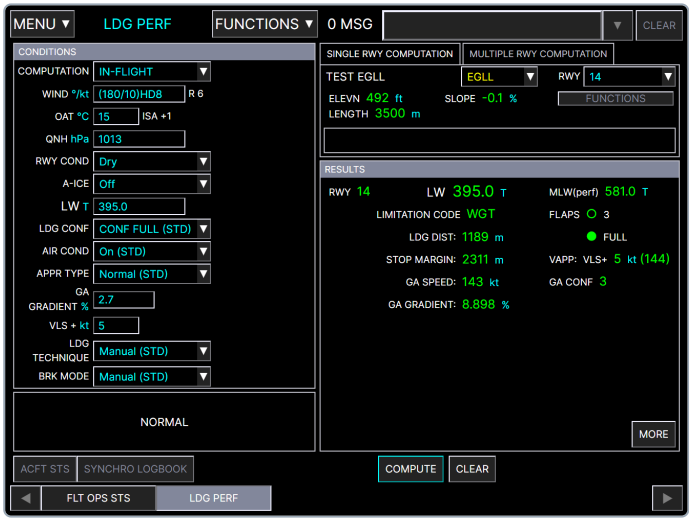


Figure 8. LDG PERF computed

Limitations and why

Limitation	Why	What to do
Only REDUCED loadsheet entry, single runway computation.	The DETAILED mode and MULTIPLE RWY are not built.	Enter the ZFW/CG and fuel as REDUCED.
Nothing goes to the FMS.	As on the aircraft: XCHECK only compares.	Enter the values in the MFD.
Above the 10 kt tailwind limit LDG PERF still computes, without a mark.	The shared calculator continues the tailwind correction of the data and flags the result; the OIT page does not show that flag (as on develop).	Treat a result with more than 10 kt of tailwind as extrapolated.

How to use

1. FLT OPS STS: flight number and airports. LOADSHEET: ZFW/CG and fuel, COMPUTE, LTS EDITION, GENERATE.

2. T.O PERF: conditions and runway (TOW comes from the loadsheet), COMPUTE, then XCHECK WITH AVNCS.
3. LDG PERF: conditions and runway, COMPUTE.

How to test

#	Do this	Expected result
1	LOADSHEET: ZFW 300 t / 36.2 %, fuel, COMPUTE, GENERATE, PRINT.	The loadsheet prints titled LOADSHEET.
2	T.O PERF after the loadsheet.	TOW is the loadsheet TOW (yellow); COMPUTE gives speeds and FLEX.
3	Switch to another application and back.	Entries and results are still there.

6. Technical LOGBOOK

> **Aircraft:** A380X | **Where:** NSS AVNCS > LOGBOOK | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

The electronic technical logbook: STATUS (release, open / deferred / temporary / cabin items), LOGBOOK ENTRY (ECAM alerts, cabin items, system & function, cockpit interface, keyword, free text), HISTORY and FLIGHT DATA; PIC ACCEPT with the acceptance report and CLOSE FLIGHT with the closure report; UPDATE / GIVE BACK TO GROUND synchronise with a simulated ground. Design choice: the ground defers some defects by ATA chapter (MEL B/C/D, CDL, OTHER) with an expiry and rectifies the others. The logbook is kept across flights; STATUS, the acceptance report and FLIGHT DATA print with their titles.

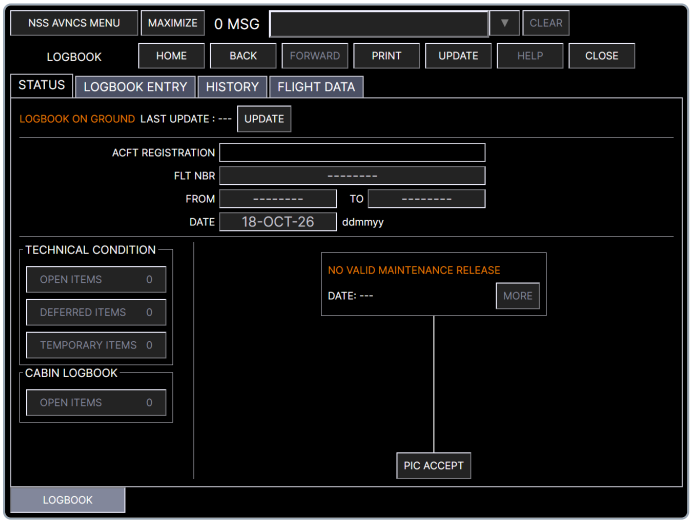


Figure 9. STATUS

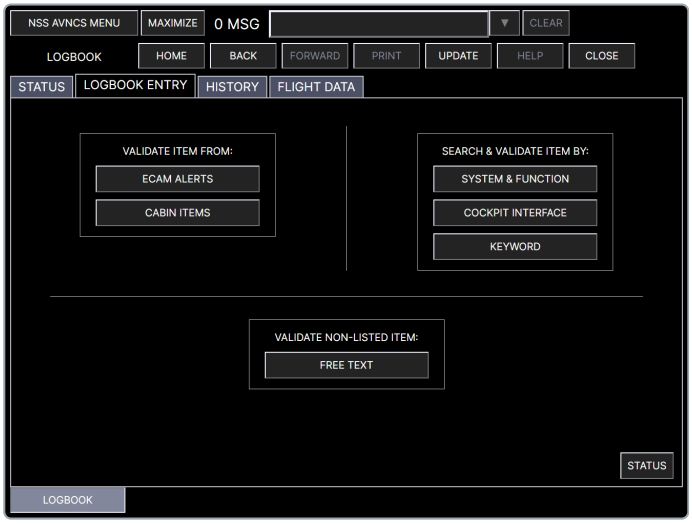


Figure 10. LOGBOOK ENTRY



Figure 11. After UPDATE with the ground



Figure 12. DEFERRED ITEMS: a defect deferred under the MEL with its expiry

Limitations and why

Limitation	Why	What to do
The ground is simulated.	There is no maintenance organisation behind the logbook.	None.
Some UX gaps: the password field may need a second click, NIL is not clickable, PERSONAL ID is not kept between signatures.	Known, not fixed yet.	Click the field again.

How to use

1. Open LOGBOOK, sign in with a personal ID and password.
2. Check STATUS and the items, open the flight, PIC ACCEPT. Record defects in LOGBOOK ENTRY; CLOSE FLIGHT at the end; UPDATE to synchronise with the ground.

How to test

#	Do this	Expected result
1	Record a defect (e.g. COCKPIT INTERFACE), GIVE BACK TO GROUND / UPDATE.	The defect is deferred (DEFERRED ITEMS with an expiry) or rectified (HISTORY).
2	PRINT on STATUS.	The printer prints LOGBOOK STATUS.

7. LOAD BOX, EXPORT BOX and IN-FLT PERF ATMO

> **Aircraft:** A380X | **Where:** FLT OPS > MENU > LOAD BOX / EXPORT BOX / IN-FLT PERF | **Status:** On core/a380x-ois and develop (the six OIS commits, files equal to develop). Sim-tested by the user 2026-10-18 in the combined OIS install: OK.

What it is for

- **LOAD BOX**: the flight folder sent from the ground, here your SimBrief OFP of the flyPad, with its loading status per laptop; LOAD loads the ticked items.
- **EXPORT BOX**: items to send to the ground (a loaded flight folder, an exported loadsheet), GND tick and SEND; on the ground the gatelink sends them, else they wait in the outbox.

- **IN-FLT PERF ATMO**: speed conversions (IAS, Mach, TAS, GS), ISA information, true altitude and low altitude temperature corrections. The FCOM describes only ATMO; CLB, CRZ, DES, HLD and PLAN are greyed.



Figure 13. LOAD BOX (no SimBrief OFP loaded in the flyPad)

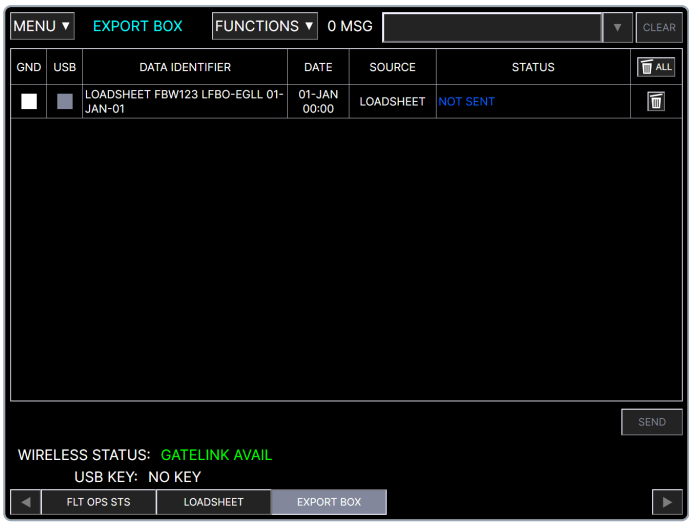


Figure 14. EXPORT BOX with an exported loadsheet



Figure 15. IN-FLT PERF ATMO

Limitations and why

Limitation	Why	What to do
Every airport has a gatelink.	Design choice: no airport database of gatelinks.	None.
GROSS WGHT of ATMO is not used.	No ATMO computation needs it; the field is kept for the FCOM layout.	None.

How to use

1. Load a SimBrief OFP in the flyPad, LOAD BOX > REFRESH LOAD BOX, tick it, LOAD.
2. EXPORT BOX: tick GND, SEND (on the ground).
3. IN-FLT PERF > ATMO: conditions and specific data, COMPUTE.

How to test

#	Do this	Expected result

1	ATMO: SPEED, MACH 0.85, FL350 with the FCOM example conditions, COMPUTE.	The results match the FCOM example.
2	LOADSHEET EXPORT, then EXPORT BOX, tick GND, SEND on the ground.	Status SENT (GND) with date and time.