


REG NO.: 192411079

SCHEMATIC CAPTURE

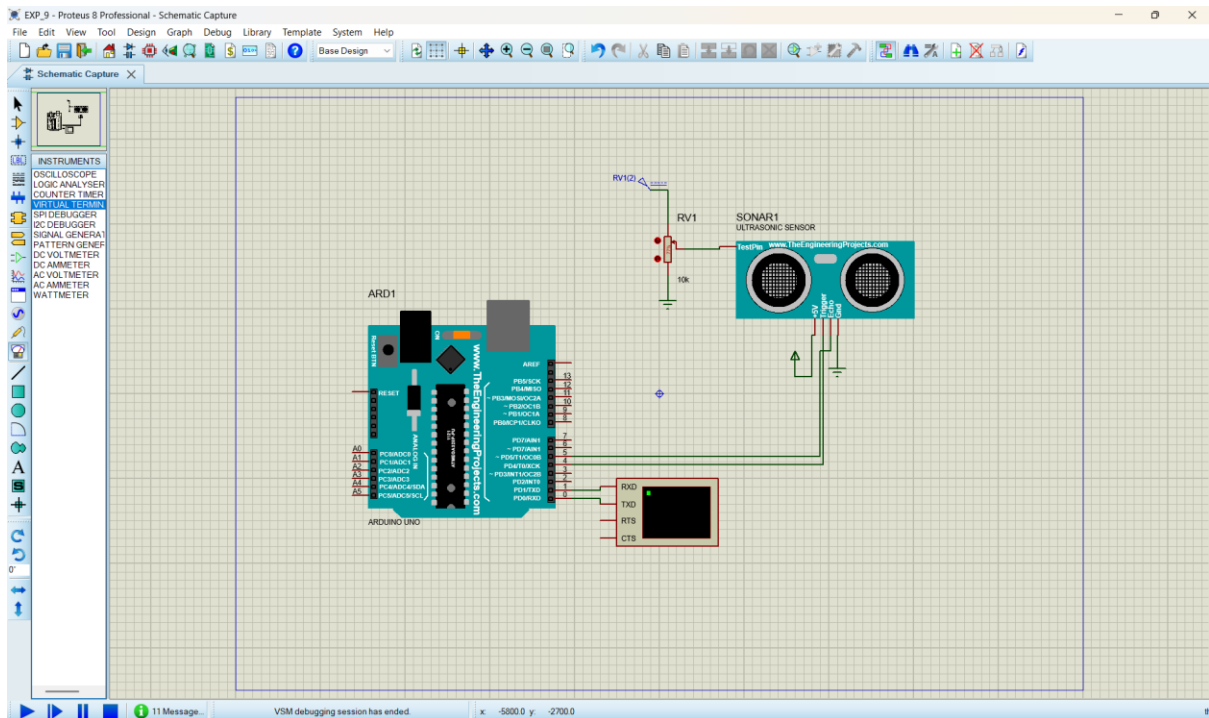

SOURCE CODE

The screenshot shows the Arduino IDE interface. The main editor displays a C++ sketch for an ESP8266. The code is as follows:

```
// Program Sketch
int trig = 4;
int echo = 5;
long duration;
int cm;

void setup() {
  // put your setup code here, to run once:
  pinMode(trig, OUTPUT);
  pinMode(echo, INPUT);
  Serial.begin(9600);
}

void loop() { // Sketch to calculate ultrasonic distance
  digitalWrite(trig, LOW);
  delayMicroseconds(10);
  digitalWrite(trig, HIGH);
  delayMicroseconds(10);
  digitalWrite(trig, LOW);
  delayMicroseconds(10);
  duration = pulseIn(echo, HIGH);
  cm = (duration/2) * 0.034;
  // Print Value on Serial Monitor
  Serial.print(" Distance = ");
  Serial.print(cm);
  Serial.println(" cm");
  delay(500);
}
```

The status bar at the bottom indicates "Done compiling". The terminal window at the bottom shows the compilation command and output:

```
in folder: C:\Program Files (x86)\Arduino\hardware\arduino\avr

hardware\tools\avr\bin\avr-g++ -c -g -Os -w -std=gnu++11 -fpermissive -fno-exceptions -ffunction-sections -fdata-sections -fno-threadsafe-statics -Wno-error=narrowing -fno -w -x c++ -E -OC -mmcu=atmega328p -
hardware\tools\avr\bin\avr-g++ -c -g -Os -w -std=gnu++11 -fpermissive -fno-exceptions -ffunction-sections -fdata-sections -fno-threadsafe-statics -Wno-error=narrowing -fno -w -x c++ -E -OC -mmcu=atmega328p -
tools-builder\stage\5.8-arduino\stage -u -language-force=c++ -f - -c++-kind=avrf -fidefs=ESPTime -line-directives "C:\Users\tej\j\AppData\Local\Temp\arduino_build_306683\preproc\ctags_target_for
hardware\tools\avr\bin\avr-g++ -c -g -Os -w -std=gnu++11 -fpermissive -fno-exceptions -ffunction-sections -fdata-sections -fno-threadsafe-statics -Wno-error=narrowing -MMD -fno -mmcu=atmega328p -DF_CPU=16000
j\AppData\Local\Temp\arduino_cache_631844\core\core_arduino_avr_uno_0c812075ac70eb4e3b385d8fb077e54c.a

hardware\tools\avr\bin\avr-gcc -w -Os -g -fno -fuse-linker-plugin -Wl,--gc-sections -mmcu=atmega328p -o "C:\Users\tej\j\AppData\Local\Temp\arduino_build_306683\EXP9.ino.elf" "C:\Users\tej\j\AppData\Loc
hardware\tools\avr\bin\avr-objcopy" -O ihex -j .eeprom --set-section-flags=.eeprom=alloc,load --no-change-warnings --change-section-lma .eeprom=0 "C:\Users\tej\j\AppData\Local\Temp\arduino_build_306683\EXP
hardware\tools\avr\bin\avr-objcopy" -O ihex -R .eeprom "C:\Users\tej\j\AppData\Local\Temp\arduino_build_306683\EXP9.ino.elf" "C:\Users\tej\j\AppData\Local\Temp\arduino_build_306683\EXP9.ino.hex"
hardware\tools\avr\bin\avr-size" -A "C:\Users\tej\j\AppData\Local\Temp\arduino_build_306683\EXP9.ino.elf"
ran storage space. Maximum is 32256 bytes.
```

OUTPUT

