



(SCT-02-DGAA13 / 2631- 2020)
Subsecretaría de Transporte
Agencia Federal de Aviación Civil
Dirección General Adjunta de Aviación
Dirección de Aviación

4.1.4.1. OPS.-1507/2020

Ciudad de México, a 14 de abril de 2020

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca Calle 2, Hangar 9
C.P. 50200, Toluca, Edo de México.

Edgar Aviles Talamantes
Apoderado legal

En atención a su escrito de referencia **I&M-2020-036** recibido por esta Dirección el día 03 de marzo del año en curso y de acuerdo a lo establecido en el Reglamento de la Ley de Aviación Civil y las Normas Oficiales Mexicanas en vigor, se devuelve debidamente aprobada y sellada la siguiente Enmienda:

MANUAL	REVISION Núm.
LISTA DE EQUIPO MÍNIMO Aplicable a las aeronaves <i>marca</i> BOMBARDIER, modelo LEAR JET 45, números de serie 45-236 y 45-067, con matrículas XA-SAA y XA-PARA, respectivamente. Los cambios significativos de la revisión son: actualización del control de revisiones, lista de páginas efectivas, tabla de contenido, highlights of change y applicability list. Además del ATA 34. La presente revisión ha sido elaborada conforme a la Rev. Núm. 04 de la MMEL, emitida por FAA, de fecha 20 de febrero de 2013).	02 (02-MARZO-2020)

Se devuelven un tanto en papel y un CD, otra copia en electrónico (CD) del manual antes señalado queda en poder del archivo de esta Dirección, debiendo entregar la copia en formato electrónico anexa al presente a la Comandancia de su base de operaciones, para mantener actualizado el Manual correspondiente en poder de dicha Comandancia de Aeropuerto.

Lo anterior con fundamento legal en la Ley de Aviación Civil, Reglamento de la Ley de Aviación Civil y la Norma Oficial Mexicana NOM-012-SC/3-2012, así como en lo establecido en los transitorios Cuarto y Quinto del Decreto por el que se crea el órgano administrativo descentrado de la Secretaría de Comunicaciones y Transportes, denominado Agencia Federal de Aviación Civil.

Atentamente.

Ing. Guillermo A. Magaña Hernández.
El Director de Aviación.

Cc Director General de la Agencia Federal de la Aviación Civil.- Pte.
Cc Director General Adjunto de Seguridad Aérea.- Pte.
Cc Comandante Regional VI.- Apto. Inter. de la Ciudad de Toluca, Ex hacienda Canaleja, C.P. 50200, Toluca Edo. de México. - Pte.
Cc Comandante del Apto. "Lic. Adolfo López Mateos".- Domicilio Conocido, Ex Hacienda Canaleja, C.P. 50200, Toluca, Edo. de México. - Pte.

JAT/AS/JRCZ

\\03057201\01_rdz\01_NAC\A\AEROLINEAS EJECUTIVAS (ALE)\2020\2631-GM-2020 OF APROB REV 02 MEL LJ 45 XA-NAA y XA-PRA.docx

Boulevard Adolfo López Mateos 1990, Colonia Los Alpes, C.P. 01010
Alcaldía Álvaro Obregón, CDMX.

T: (55) 5723 9300
www.gob.mx/sct



2020
LEONORA VICARIO
GOBERNADORA DEL ESTADO DE GUJARAT



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1600
Fax: (01-722) 279-1658

MINIMUM EQUIPMENT LIST “MEL”

BOMBARDIER
LEARJET 45



REVISION 2
02-May-2020

S.C.T. D.C.A.C.
DIRECCIÓN DE AVIACIÓN
SECRETARÍA DE OPERACIÓN

BASED ON FAA-MMEL REVISION 4 (02/20/2013)

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

LOG OF REVISIONS			
Rev. No.	Date	Page Numbers	Initials
ISSUE	25/FEB/2013		
REV.01	22/ENE/2014		
REV.02	02/MAR/2020		
03			
04			
05			
06			
07			
08			
09			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			

AFAC APPROVED DATE _____

DIRECCION DE AVIACION

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

LIST OF EFFECTIVE PAGES

REVISION 2

The following is the List of Effective Pages for the **Issue** of the Minimum Equipment List Manual applicable for **LEARJET 45**. The owners of this Manual will be the responsible to perform every revision to maintain it updated.

In case of any missed pages in the manual, you will have to request them to the General Operations Manager for its reposition.

System	Page No.	Rev. No.	Current date
Cover Page	-	REV 2	02/Mar/2020
Log of Revisions	LR-I	REV 2	02/Mar/2020
List of effective pages	LPE-I	REV 2	02/Mar/2020
	LPE-II	REV 2	02/Mar/2020
	LPE-III	Issue	25/Feb/2013
	LPE-IV	Issue	25/Feb/2013
Table of Contents	CONT-I	Issue	25/Feb/2013
Highlights of Change	HC-I	REV 2	02/Mar/2020
Introduction	INT-I	REV 2	02/Mar/2020
	INT-II	Issue	25/Feb/2013
Applicability List	APL-I	REV 2	02/Mar/2020
Definitions	DEF-I	Issue	25/Feb/2013
	DEF-II	Issue	25/Feb/2013
	DEF-III	Issue	25/Feb/2013
	DEF-IV	REV 2	02/Mar/2020
	DEF-V	Issue	25/Feb/2013
	DEF-VI	Issue	25/Feb/2013
Preamble	PRE-I	Issue	25/Feb/2013
	PRE-II	Issue	25/Feb/2013
21	21-1	Issue	25/Feb/2013
	21-2	Issue	25/Feb/2013
	21-3	Issue	25/Feb/2013
	21-4	Issue	25/Feb/2013
22	22-1	Issue	25/Feb/2013
	22-2	Issue	25/Feb/2013
23	23-1	Issue	25/Feb/2013
	23-2	Issue	25/Feb/2013
	23-3	Issue	25/Feb/2013
	23-4	Issue	25/Feb/2013
24	24-1	Issue	25/Feb/2013
	24-2	Issue	25/Feb/2013
25	25-1	Issue	25/Feb/2013
	25-2	Issue	25/Feb/2013
	25-3	Issue	25/Feb/2013
	25-4	Issue	25/Feb/2013
	25-5	Issue	25/Feb/2013

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

	25-6	Issue	25/Feb/2013
	25-7	REV 1	22/Ene-2014
	25-8	Issue	25/Feb/2013
26	26-1	Issue	25/Feb/2013
	26-2	Issue	25/Feb/2013
27	27-1	Issue	25/Feb/2013
	27-2	Issue	25/Feb/2013
28	28-1	Issue	25/Feb/2013
	28-2	Issue	25/Feb/2013
30	30-1	Issue	25/Feb/2013
	30-2	Issue	25/Feb/2013
	30-3	Issue	25/Feb/2013
	30-4	Issue	25/Feb/2013
	30-5	Issue	25/Feb/2013
	30-6	Issue	25/Feb/2013
31	31-1	Issue	25/Feb/2013
	31-2	REV 1	22/Ene-2014
	31-3	Issue	25/Feb/2013
	31-4	Issue	25/Feb/2013
32	32-1	Issue	25/Feb/2013
	32-2	Issue	25/Feb/2013
33	33-1	Issue	25/Feb/2013
	33-2	Issue	25/Feb/2013
	33-3	Issue	25/Feb/2013
	33-4	Issue	25/Feb/2013
	33-5	Issue	25/Feb/2013
	33-6	Issue	25/Feb/2013
34	34-1	Issue	25/Feb/2013
	34-2	Issue	25/Feb/2013
	34-3	Issue	25/Feb/2013
	34-4	REV 2	02/Mar/2020
	34-5	Issue	25/Feb/2013
	34-6	Issue	25/Feb/2013
	34-7	Issue	25/Feb/2013
	34-8	REV 2	02/Mar/2020
	34-9	Issue	25/Feb/2013
	34-10	REV 2	02/Mar/2020
	34-11	Issue	25/Feb/2013
	34-12	Issue	25/Feb/2013
35	35-1	Issue	25/Feb/2013
	35-2	Issue	25/Feb/2013
36	36-1	Issue	25/Feb/2013
	36-2	Issue	25/Feb/2013

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

38	38-1	Issue	25/Feb/2013
	38-2	Issue	25/Feb/2013
46	46-1	Issue	25/Feb/2013
	46-2	Issue	25/Feb/2013
49	49-1	Issue	25/Feb/2013
	49-2	Issue	25/Feb/2013
52	52-1	Issue	25/Feb/2013
	52-2	Issue	25/Feb/2013
73	73-1	Issue	25/Feb/2013
	73-2	Issue	25/Feb/2013
74	74-1	Issue	25/Feb/2013
	74-2	Issue	25/Feb/2013
76	76-1	Issue	25/Feb/2013
	76-2	Issue	25/Feb/2013
77	77-1	Issue	25/Feb/2013
	77-2	Issue	25/Feb/2013
78	78-1	Issue	25/Feb/2013
	78-2	Issue	25/Feb/2013
Guidelines for (O) & (M) Procedures		Issue	25/Feb/2013
	PAGE-1	Issue	25/Feb/2013
	PAGE-2	Issue	25/Feb/2013
	PAGE-3	Issue	25/Feb/2013
	PAGE-4	Issue	25/Feb/2013
	MOPS-1	Issue	25/Feb/2013
	MOPS-2	Issue	25/Feb/2013
	MOPS-3	Issue	25/Feb/2013
	MOPS-4	Issue	25/Feb/2013
	MOPS-5	Issue	25/Feb/2013
	MOPS-6	Issue	25/Feb/2013
	MOPS-7	Issue	25/Feb/2013
	MOPS-8	Issue	25/Feb/2013
	MOPS-9	Issue	25/Feb/2013
	MOPS-10	Issue	25/Feb/2013
	MOPS-11	Issue	25/Feb/2013
	MOPS-12	Issue	25/Feb/2013
	MOPS-13	Issue	25/Feb/2013
	MOPS-14	Issue	25/Feb/2013
	MOPS-15	Issue	25/Feb/2013
	MOPS-16	Issue	25/Feb/2013
	MOPS-17	Issue	25/Feb/2013
	MOPS-18	Issue	25/Feb/2013
	MOPS-19	Issue	25/Feb/2013
	MOPS-20	Issue	25/Feb/2013



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

INTENTIONALLY LEFT IN BLANK

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

TABLE OF CONTENTS

System No.	System	Page No.
--	Log of Revisions	LR-I
--	List of Effective Pages	LPE-I thru LPE-IV
--	Table of contents	CONT-I
--	Highlights of Change	HC-I
--	Introduction	INT-I thru INT-II
--	Applicability List	APL-I
--	Definitions	DEF-I thru DEF VI
--	Preamble	PRE-I thru PRE-II
21	Air Conditioning	21-01 thru 21-04
22	Auto Flight	22-01 thru 22-02
23	Communications	23-01 thru 23-04
24	Electrical Power	24-01 thru 24-02
25	Equipment/Furnishings	25-01 thru 25-08
26	Fire Protection	26-01 thru 26-02
27	Flight Controls	27-01 thru 27-02
28	Fuel	28-01 thru 28-02
30	Ice and Rain Protection	30-01 thru 30-06
31	Indicating/Recording Systems	31-01 thru 31-04
32	Landing Gear	32-01 thru 32-02
33	Lights	33-01 thru 33-06
34	Navigation	34-01 thru 34-12
35	Oxygen	35-01 thru 35-02
36	Pneumatic	36-01 thru 36-02
38	Water/ Waste	38-01 thru 38-02
46	New Technology	46-01 thru 46-02
49	Airborne Auxiliary Power	49-01 thru 49-02
52	Doors	52-01 thru 52-02
73	Engine Fuel & Control	73-01 thru 73-02
74	Ignition	74-01 thru 74-02
76	Engine Controls	76-01 thru 76-02
77	Engine Indicating	77-01 thru 77-02
78	Engine Exhaust	78-01 thru 78-02
--	Guidelines for (O) & (M) Procedures	O&M-01 thru O&M-20

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: **LEARJET 45**

HIGHLIGHTS OF CHANGE

REVISION 2.

- LR-I
- LPE-I,LPE-II
- HC-I
- INT-I
- APL-I
- DEF-IV
- ATA 34 PAGE: 34-4
34-8
34-10

AFAC APPROVED DATE_____

DIRECCION DE AVIACION

MINIMUM EQUIPMENT LIST

INTRODUCTION

This ***Minimum Equipmment List Manual (MEL)*** has been developed with the purpose to guide to all the personal. It contains a systems and/or components list that could been inoperative or not working at 100% allowing to operate a flight without compromise the security of the airplane or passengers.

Any dispatch under these conditions must be under ***strict content*** to this manual.

This Manual was wrote in English to avoid mistakes in translation, language disturbing or inadequate use of aeronautical concepts. The ground personal involved into dispatch of ***Aerolíneas Ejecutivas S.A. de C.V.*** aircrafts must know this contain, they must verify that the activities are under the rules described in this manual.

This Manual is considered a Manual General de Operations complement.

The content of this manual is considered confidential and couldn't be used other than ***Aerolíneas Ejecutivas S.A. de C.V.*** people. To fall into this fault will constitute disciplinary actions

This manual will be updated thought revisions issued by the ***Operations Engineering Department's office***, the next information will be considered to perform the revisions:

- Regulations and procedures issued by AFAC
- Bulletins and NOTAM
- Airworthiness directives and Service Bulletins issued by the manufacturer

All the departments are invited to participate sending the suggestions to the ***Operations Engineering Department***, who will review and take the final decision referring to the manual revisions

MINIMUM EQUIPMENT LIST

2.- MANUAL ESTRUCTURE.

In order to provide flexibility to the information contained in this Manual has been established with each other independent publications.

The numbering given to the sheets of the Manual is arbitrary and usually consists of two sets of figures; the first chapter concerns the **ATA** and the second **Consecutive Page Number** for each chapter.

When you need to modify some of the information is republished the worksheet or affected by the new revision date and is indicated by vertical lines outside of the paragraphs or sections amended. The change will not take a full sheet that line.

In case of urgent information, a bulletin will be issued temporary or circular indicating changes or developments to proceed. This bulletin is inserted into the body of the Handbook will be recorded on the sheet CB-1 and will remain until you edit the review according.

The cancellation of a bulletin will be edited automatically to the appropriate review or issued another bulletin that affects the former

3.- CONTROL OF REVISIONS AND BULLETINS.

The registration and control of the review sheets and bulletins will be on the Log of revisions and control bulletins sheets, contained in the pages RR-1 and CB-1, where the record: Date of Review or Bulletins, insert date and signature of who made the insertion.

It is noteworthy that the holder of the **Manual of Minimum Equipment List** shall be responsible for keeping it updated according to the List of Effective Pages to be published in each review, must inform to the **Operations Engineering Department** company missing pages or Revisions and / or bulletins.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

APPLICABILITY LIST

This MANUAL contains the **Bombardier Learjet 45** Minimum Equipment List (MEL) under which the **Aerolíneas Ejecutivas S.A. de C.V.'s Learjet 45** Airplane must be operated and was developed from the F.A.A. Airplane Master Minimum Equipment List through revision 4 dated **02/20/2013** approved by the FAA.

The **Learjet 45** Airplane that **Aerolíneas Ejecutivas S.A. de C.V.** Operates are model **LJ45** and the present MANUAL is only for the use in the following airplanes:

MAKE	MODEL	SERIAL NUM.	REGISTRATION
BOMBARDIER	LEARJET 45	45-236	XA-SAA
BOMBARDIER	LEARJET 45	067	XA-PRA

AFAC APPROVED DATE_____

DIRECCION DE AVIACION

MINIMUM EQUIPMENT LIST

AIRCRAFT: **LEARJET 45**

1. System Definitions.

System numbers are based on the Air Transport Association (ATA) Specification and items are numbered sequentially.

a. "Item" (Column 1) This column depicts the equipment, system, component, or function listed in the "Item" column. Repair interval categories (A,B,C, and D) are listed on right side of column 1. Repair intervals are described in definition 22.

b. "Number Installed" (Column 2) This column depicts the number (quantity) of instrument and equipment items normally installed in the aircraft. This number represents the aircraft configuration considered in developing this MEL. Should the number be a variable (e.g., fleet configuration differences, cockpit lighting items, cabin lighting items, cargo restraint components) a number is not required.

c. "Number Required for Dispatch" (Column 3) This column depicts the minimum number (quantity) of instrument and equipment items required for operation provided the conditions specified in the Column 4 are met.

d. "Remarks or Exceptions" (Column 4) This column may include a statement(s) either prohibiting or permitting operation with a specific number of instrument and equipment items inoperative, provisos (conditions and limitations) for such operation, and appropriate notes.

Notes. Notes provide additional information for crewmember or maintenance consideration. Notes are used to identify applicable material, which is intended to assist with compliance, but do not relieve the aircraft operator of the responsibility for compliance with all applicable requirements.

e. A vertical bar (change bar) A vertical bar indicates a change, addition, or deletion in the adjacent text for the current revision of that page only. All change bars applicable to the previous revision of the MEL are removed prior to the release of the next revision.

2. "Airplane Flight Manual" (AFM) The FAA approved AFM/RFM is the document approved by the responsible FAA Aircraft Certification Office (ACO) during type certification. The approved flight manual for the specific aircraft is listed on the applicable Type Certificate Data Sheet (TCDS). The approved flight manual is the source document for operational limitations and performance parameters for an aircraft. The term "approved flight manual" can apply to either an AFM or an RFM. The FAA requires an approved flight manual for aircraft type certification.

3. "As required by Aviation Regulations" means that the listed item is subject to certain provisions (restrictive or permissive) expressed in the Civil Aviation Law, Rules, "Norma Oficial Mexicana" (NOM), "Circular Obligatoria" (CO) and/or "Carta Politica" (CP). The number of items required by the Aviation Regulations must be operative. When the listed item is not required by Aviation Regulations it may be inoperative for the time specified by repair category.

4. Each inoperative item must be placarded to inform and remind the crewmembers and maintenance personnel of the equipment condition.

NOTE: To the extent practical, placards should be located adjacent to the control or indicator for the item affected; however, unless otherwise specified, placard wording and location will be determined by Aerolineas Ejecutivas.

5. "Deleted" in the remarks column after a sequence item indicates that the item was previously listed but is now required to be operative if installed in the aircraft.

6. As used in MELs, "ER" refers to Extended Operations (ETOPS) of an airplane with operational approval to conduct ETOPS in accordance with the applicable regulations.

7. "Aviation Regulations" means the applicable portions of the Civil Aviation Law, Civil Aviation Rules, "Norma Oficial Mexicana" (NOM), "Circular Obligatoria" (CO) and "Carta Politica" (CP).

8. "Flight Day" means a 24 hour period (from midnight to midnight) [local time], during which at least one flight is initiated for the affected aircraft.

9. "Icing Conditions" means an atmospheric environment that may cause ice to form on the aircraft (structural) or in the engine(s) (induction).

10. Alphabetical symbol in Column 4 indicates a proviso (condition or limitation) that must be complied with for operation with the listed item inoperative.

11. "Inoperative" means a system and/or component malfunction to the extent that it does not accomplish its intended purpose and/or is not consistently functioning normally within its approved operating limit(s) and/or tolerance(s).

12. "Notes:" in Column 4 provides additional information for crewmember or maintenance consideration. Notes are used to identify applicable material which is intended to assist with compliance, but do not relieve the operator of the responsibility for compliance with all applicable requirements. Additional notes may be amended, deleted, or added to the MEL by the operator, as appropriate. Notes are not a part of the provisos.

13. Inoperative components of an inoperative system: Inoperative items which are components of a system which is inoperative are usually considered components directly associated with and having no other function than to support that system. (Warning/caution systems associated with the inoperative system must be operative unless relief is specifically authorized per the MEL).

MINIMUM EQUIPMENT LIST

AIRCRAFT: **LEARJET 45**

14. "(M)" symbol indicates a requirement for a specific maintenance procedure which must be accomplished prior to operation with the listed item inoperative. Normally these procedures are accomplished by maintenance personnel; however, other personnel may be qualified and authorized to perform certain functions. Procedures requiring specialized knowledge or skill, or requiring the use of tools or test equipment should be accomplished by maintenance personnel. The satisfactory accomplishment of all maintenance procedures, regardless of who performs them, is the responsibility of Aerolíneas Ejecutivas.

15. "(O)" symbol indicates a requirement for a specific operations procedure which must be accomplished in planning for and/or operating with the listed item inoperative. Normally these procedures are accomplished by the flight crew; however, other personnel may be qualified and authorized to perform certain functions. The satisfactory accomplishment of all procedures, regardless of who performs them, is the responsibility of Aerolíneas Ejecutivas.

16. "Deactivated" and/or "Secured" When the MEL refers to an instrument and/or equipment item as deactivated and/or secured, the specified component must be put into an acceptable condition for safe flight. An acceptable method of deactivating and/or securing will be established by the aircraft operator.

17. "Visual Flight Rules" (VFR) is as defined in Civil Aviation Law, article 35, all aircraft must maintain radio contact with ATC and be subject to ATC control.

18. "Visual Meteorological Conditions" (VMC) means the atmospheric environment is such that would allow a flight to proceed under the visual flight rules applicable to the flight. This does not preclude operating under Instrument Flight Rules.

19. "Visible Moisture" means an atmospheric environment containing water in any form that can be seen in natural or artificial light; for example, clouds, fog, rain, sleet, hail, or snow.

20. "Passenger Convenience Items" means those items related to passenger convenience, comfort or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, overhead reading lamps, etc.

21. "Placarding." Each inoperative instrument or equipment item must be placarded to inform and remind the crewmembers and maintenance personnel of the item condition. To the extent practical, placards should be located adjacent to the control or indicator for the item affected; however, unless otherwise specified (i.e. AFM), placard wording and location will be determined by the aircraft operator.

22. Repair Category: All users of an MEL must effect repairs of inoperative instrument and equipment items, deferred in accordance with the MEL, at or prior to the repair times established by the following letter designators:

Repair Category A. Items in this category must be repaired within the time interval specified in the remarks column. For time intervals specified in "calendar days" or "flight days", the day the malfunction was recorded in the aircraft maintenance record/logbook is excluded. For all other time intervals (flights, flight legs, cycles, hours, etc), repair tracking begins at the point when the malfunction is deferred.

Repair Category B. Items in this category must be repaired within three (3) consecutive calendar days (72 hours), excluding the day the malfunction was recorded in the aircraft maintenance record/logbook. For example, if it were recorded at 10 a.m. on January 26th, the three day interval would begin at midnight the 26th and end at midnight the 29th.

Repair Category C. Items in this category must be repaired within ten (10) consecutive calendar days (240 hours), excluding the day the malfunction was recorded in the aircraft maintenance record/logbook. For example, if it were recorded at 10 a.m. on January 26th, the 10 day interval would begin at midnight the 26th and end at midnight February 5th.

Repair Category D. Items in this category must be repaired within one hundred and twenty (120) consecutive calendar days (2880 hours), excluding the day the malfunction was recorded in the aircraft maintenance log and/or record.

23. "Takeoff" Takeoff is the act of beginning a flight in which an aircraft is accelerated from a state of rest to that of flight. For the purposes of MEL relief, this translates to the point at which the pilot physically begins to apply power to initiate the takeoff from the runway or takeoff surface.

24. Electronic fault alerting system – General

New generation aircraft display system fault indications to the flight crew by use of computerized display systems. Each aircraft manufacturer has incorporated individual design philosophies in determining the data that would be represented. The following are customized definitions (specific to each manufacturer) to help determine the level of messages affecting the aircraft's dispatch status. When preparing the MEL document, operators are to select the proper Definition No. 25 for their aircraft, if appropriate.

NO CUSTOMIZED DEFINITIONS FOR FAULT MESSAGING ARE APPLICABLE TO THE HAWKER MODEL 4000.

25. "Administrative control item" means an item listed by the operator in the MEL for tracking and informational purposes. It may be added to Aerolineas Ejecutivas MEL by approval of AFAC provided no relief is granted, or provided conditions and limitations are contained in an approved document (i.e. Structural Repair Manual, airworthiness directive, etc.). If relief other than that granted by an approved document is sought for an administrative control item, a request must be submitted to AFAC.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: **LEARJET 45**

26. "Excess Items" Excess items are those instrument and equipment items that have been installed that are redundant to the requirements of the of the Aviation Regulations.

27. "Day of Discovery" This is the calendar day an equipment/instrument malfunction was recorded in the aircraft maintenance record/logbook. This day is excluded from the calendar days or flight days specified in the MEL for the repair interval of an inoperative instrument and/or equipment item. This provision is applicable to all MEL items; i.e., categories A, B, C, and D.

28. "Considered Inoperative", The phrase, "Considered Inoperative", as used in the provisos, means that an instrument and equipment item must be treated for dispatch, taxi and flight purposes as though it were inoperative. The item will not be used or operated until the original deferred item is repaired. Additional actions include: documenting the item on the dispatch release (if applicable), placarding, and complying with all remarks, exceptions, and related MEL provisions, including any (M) and (O) procedures and observing the repair category.

29. "Is not used" in the provisos, remarks or exceptions for an MEL item may specify that another item relieved in the MEL "is not used." In such cases, crewmembers must not activate, actuate, or otherwise utilize that component or system under normal operations. It is not necessary for the operators to accomplish the (M) procedures associated with the item. However, operational requirements must be complied with, and an additional placard must be affixed, to the extent practical, adjacent to the control or indicator for the item that is not used to inform crewmembers that a component or system is not to be used under normal operations.

30. "Nonessential equipment and furnishings (NEF)" NEFs are those items installed on the aircraft as part of the original type certification (TC), STC, engineering order, or other form of alteration that have no effect on the safe operation of flight and would not be required by the applicable certification rules or operational rules. They are those items that, if inoperative, damaged, or missing, have no effect on the aircraft's ability to be operated safely under all operational conditions. NEF items are not instrument and equipment items already identified in the MEL or CDL of the applicable aircraft. They do not include instrument and equipment items that are functionally required to meet the certification rule or for compliance with any operational rule.

22. "Operative." An operative system and/or component will accomplish its intended purpose and is consistently functioning normally within its design operating limit(s) and tolerance(s). When an MEL item specifies that an item of equipment must be operative, it does not mean that it's operational status must be verified; it's to be considered operative unless reported or known to be malfunctioning. When an MEL item specifies that an item of equipment must be verified operative, it means that it must be checked and confirmed operative at the interval(s) specified for that MEL item. When an MEL item specifies that an item of equipment must be verified but no interval is specified, verification is required only at the time of deferral.

INTENTIONALLY LEFT BLANK

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de
Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

MANUAL PURPOSE.

This MEL is published to allow operation with inoperative items of equipment for a period of time until repairs can be accomplished. It is important that repairs be accomplished at the earliest opportunity. In order to maintain an acceptable level of safety and reliability this MEL establishes limitations on the duration of and conditions for operation with inoperative equipment. This MEL provides guidance for release the aircraft for flight with inoperative equipment. When an item of equipment is discovered to be inoperative, it must be reported by making an entry in the aircraft logbook. The ITEM is then either repaired or may be deferred per this MEL or other approved acceptable means prior to further operation.

Aerolíneas Ejecutivas is responsible for exercising the necessary operational control to ensure that an acceptable level of safety is maintained. When operating with multiple inoperative items, the interrelationships between those items and the effect on aircraft operation and crew workload must be considered.

When using this MEL, compliance with the stated in the preamble, definitions, and the conditions and limitations specified in this MEL is required.

This MEL is based on the applicable Master Minimum Equipment List (MMEL), developed by BOMBARDIER and approved by the FAA.

THIS MEL CAN BE DIFFERENT IN FORM, BUT CANNOT IN ANY CASE BE LESS RESTRICTIVE THAN THE MMEL.

COMMENTS – QUESTIONS –SUGGESTIONS

All MEL holders and users are encouraged to forward their questions and suggestions directed to:

AEROLINEAS EJECUTIVAS
OPERATIONS ENGINEERING DEPARTMENT



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de
Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01-722) 279-1658

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 21-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				
21 AIR CONDITIONING					
20-01 Flight Deck Air Vent / Gasper (WEMAC)	C	2	0		
20-02 Cabin Air Vent / Gasper (WEMAC)	D	2	0		
21-01 Lavatory Recirculation Fan	C	1	0	(M) May be inoperative provided Auxiliary Heat is DISABLED.	
21-02 Lavatory Recirculation Fan HIGH / LOW Speed Switch	C	1	0	(M) May be inoperative provided Auxiliary Heat is disabled.	
	C	1	0	May be inoperative provided Fan operates at HIGH Speed when Auxiliary Heat is used.	
30-01 Cabin Pressurization Control System Channel (CAB PRESS FAIL)	C	2	1	One may be inoperative.	
30-02 MANUAL PRESS Control System				Deleted, Revision 4	
32-01 CABIN PRESSURE CONTROL Display	C	1	0	May be inoperative provided CABIN RATE, DELTA P, and CABIN ALT displays on EICAS ECS page are operative.	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 21-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

21 AIR CONDITIONING				
33-01 Cabin Air Outflow Valve	C	2	1	One may be inoperative provided: a) Aircraft is operated unpressurized, and b) Aircraft is operated at 9,000 feet MSL or below.
33-02 Emergency Pressurization Valve	C	2	1	(M) One may be inoperative provided: a) Inoperative Valve is secured CLOSED, and b) Aircraft is operated at 41,000 feet MSL or below.
40-01 Baggage Compartment Heater	C	1	0	(M) May be inoperative provided passengers are advised that baggage contents are subject to freezing.
40-02 Auxiliary Heat	D	1	0	(M) May be inoperative provided Vapor Cycle Cooling System is operative.
40-03 Flight Deck Electric Foot Warmer System	C	1	0	(M) May be inoperative provided temperature is acceptable to flight crew.
50-01 PACK	C	1	0	(O) May be inoperative provided: a) Aircraft is operated unpressurized at 9,000 feet MSL or below, and b) PACK Switch is OFF.
50-02 Pack HI FLOW System	C	1	0	(M) May be inoperative provided System is set to NORMAL Flow.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 21-3	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

21 AIR CONDITIONING					
50-03 Vapor Cycle System	D	1	0	(M) May be inoperative provided Vapor Cycle System is deactivated and secured.	
60-01 Automatic Temperature Control System	C	1	0	May be inoperative provided Manual Temperature Control System is operative.	
60-02 Manual Temperature Control System	C	1	0	May be inoperative provided Automatic Temperature Control System is operative.	
62-01 EICAS TEMP CONT Display (CKPT)	C	1	0		
62-02 EICAS TEMP CONT Display (CAB)	C	1	0		
62-03 EICAS CAB TEMP Display	C	1	0		



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 21-4	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 22-1
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

22 AUTO PILOT				
10-01 Autopilot System	B	1	0	(M) Except where enroute operations require its use, may be inoperative.
		1	1	According with NOM-091-SCT3-2004 NOTE: For (RVSM, MNPS, B-RNAV (RNP-10, RNP-05, RNP-4, RNP-2, RNP1, RNP-APPROACH)operations, the Altitude Hold Function must be Operative.
10-02 Control Wheel Master Switch (MSW)	C	2	1	One may be inoperative provided: a) Autopilot is not used below 1,500 feet AGL, and b) Approach minimums do not require the use of the Autopilot. NOTE: RVSM, MNPS, BRNAV(RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP APPROACH) IS NOT AUTHORIZED(Ref. NOM 091-SCT03-2004)
	B	2	0	May be inoperative provided Autopilot is not used. NOTE 1: Control Wheel Master Switch (MSW) is required for functions other than the Autopilot System. NOTE: RVSM, MNPS, BRNAV(RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP APPROACH) IS NOT AUTHORIZED(Ref. NOM 091-SCT03-2004)
10-03 GO-AROUND Switch	C	1	0	(O) May be inoperative provided: a) Autopilot and Flight Director are not used below 500 feet AGL, and b) Alternate procedures are established and used.
10-04 Yaw Damper System				Deleted, Revision 4.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 22-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

22 AUTO PILOT 10-05 Touch Control Steering (TCS) Switch 20-01 Mach Trim System	C	2	0	May be inoperative provided aircraft is operated in accordance with AFM Limitations.	
20-01 Mach Trim System	C	1	0		



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 23-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				
23 COMMUNICATIONS					
00-01 FlightPhone				NOT INSTALLED	
00-02 Press-To-Talk Switch (Control Wheel)	C	2	0	May be inoperative provided: a) Switch has not failed in the Transmit Mode, and b) Hand Held Microphone on associated side is operative.	
00-03 High Frequency (HF) Communication System		1	1	Required by NOM-012-SCT3-2012 NOTE: Must be operative for MNPS, B-RNAV(RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPRACH)	
	D	1	0	NOT Required for day operations (NOM-12-SCT3-2012(4.1.11g))	
00-04 Communications System VHF	D	2	1	Any in excess of those required by NOM-012-SCT3-2012 may be inoperative provided: a) VHF COM 1 is operative, b) System is not powered by any aircraft Emergency Power System Bus, and c) System is not required for emergency procedures. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 23-2
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

23 COMMUNICATIONS				
00-05 Satellite Communications System				NOT INSTALLED
00-06 WIFI Internet System				NOT INSTALLED
20-01 Selective Call System (SELCAL)	C	1	0	(O) May be inoperative provided alternate procedures are established and used.
	D	1	0	May be inoperative provided procedures do not require its use. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)
01 Channel	C	1	0	(O) May be inoperative provided alternate procedures are established and used.
	D	1	0	May be inoperative provided procedures do not require its use.
20-02 ACARS Communication Addressing And Reporting System				NOT INSTALLED
20-03 Airborne Flight Information System (AFIS)				NOT INSTALLED
30-01 Passenger Audio Control Panel				NOT INSTALLED



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 23-3
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

23 COMMUNICATIONS				
40-01 Passenger Address System (PA)				
01 Passenger Configuration	C	1	0	(O) May be inoperative provided: a) PA not required by 14 CFR, and b) Alternate, normal and emergency procedures, and/or operating restrictions are established and used.
40-02 Pre-Recorded Passenger Announcement System				NOT INSTALLED
40-03 Cabin Chimes	C	2	0	(O) May be inoperative provided: a) Passenger Address System operates normally, and b) Alternate procedures are established and used.
40-04 Speaker (Cabin / Lavatory)				NOT INSTALLED
40-05 Maintenance Interphone System				NOT INSTALLED
50-01 Speaker (Flight Deck)	C	2	0	May be inoperative provided an operative Headset is used by each Flight Deck crewmember.
50-02 Headset		2	2	As required by NOM-012-SCT3-2012.
50-03 Hand Held Microphone	C	2	0	May be inoperative provided: a) The associated Flight Deck crewmember uses a Boom Microphone, and b) The associated Control Wheel Press-To-Talk Switch is operative.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 23-4
SYSTEM SEQUENCE & NUMBERS	1. REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

23 COMMUNICATIONS				
50-04 Boom Microphone				
01 Cockpit Voice Recorder With Flight Data Recorder Installed				
01 Cockpit Voice Recorder Equipped To Record Boom Microphone	A	1	0	May be inoperative provided: a) Flight Data Recorder (FDR) operates normally, and b) Repairs are made within three (3) flight days. Ref. NOM-022-SCT3-2011
50-05 Radio Management Unit (RMU)	C	2	1	RMU 1 must be operative.
60-01 StaticWick	C	19	15	Four or less may be missing or broken in any of the following locations: a) Most Inboard Wick on each Winglet, b) Most Inboard Wick on each Delta Fin, c) Most Inboard Wick on each Elevator, and d) On Aft Vertical Stabilizer Fairing.
70-02 Cockpit Voice Recorder (CVR)				
01 With Flight Data Recorder (FDR) Installed	A	1	0	May be inoperative provided: a) Flight Data Recorder (FDR) operates normally, and b) Repairs are made within three (3) flight days. Ref. NOM-022-SCT3-2011



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 24-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

24 ELECTRICAL				
37-01 APU Amperage Display				NOT INSTALLED
37-02 L & R BATT Switch Indicator (Light Function Only)	C	2	0	May be inoperative provided associated Battery is operative.
37-03 L & R GEN Switch Indicator (Light Function Only)	C	2	0	May be inoperative provided associated Generator is operative.
37-04 BUS-TIE Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided BUS-TIE is operative.
37-05 APU GEN Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided APU GEN is operative.
37-06 L & R MAIN Bus Indicator (Light Function Only)	C	2	0	May be inoperative provided the associated Bus is operative.
37-07 L & R NON-ESS BUS Indicator (Light Function Only)	C	2	0	May be inoperative provided the associated Bus is operative.
37-08 L & R AV MSTR Switch Indicator (Light Function Only)	C	2	0	May be inoperative provided the associated Bus is operative.
37-09 EMER BATT Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided Emergency Battery System is operative.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 24-2	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
24 ELECTRICAL					
40-01 External Power System	C	1	0		
50-01 Cabin Power Outlet System	D	1	0	(M) May be inoperative provided the System is deactivated.	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG.25-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

25	EQUIPMENT/ FURNISHINGS				
00-01	Chart Holder	C	2	0	
01	Light	C	2	0	
02	Cabin Air Vents (WEMACS)				Relief moved to 21-20-02, Revision 4.
00-02	"FASTEN SEAT BELT WHILE SEATED" Sign or Placard				Relief moved to 33-20-03, Revision 4.
10-01	Flight Deck Decorative Trim Panels and Moldings				Relief combined with ATA Item 25-20-01, Non-Essential Equipment and Furnishings, Revision 4.
10-02	Flight Deck Sunvisor System	D	2	0	May be missing or inoperative provided pilot's field of vision is not obstructed.
10-03	Flight Crew Seat				
01	Manual Vertical Adjustment	B	2	0	(M) May be inoperative provided: a) Seat is locked in a position that permits normal visibility, b) Full Flight Control movement is available, and c) Position of Seat is acceptable to flight crew.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG.25-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

25 EQUIPMENT/ FURNISHINGS					
10-03 Flight Crew Seat (Continued)					
02 Lumbar Support	C	2	0		
03 Armrest	C	4	0		
04 Recline Function	C	2	0	May be inoperative provided Seat is acceptable to flight crew.	
05 Headrest	C	2	0	May be inoperative provided Seat is acceptable to the flight crew.	
10-04 Observer Seat(s)				Deleted, Revision 4.	
20-01 Non-Essential Equipment & Furnishings (NEF)				NOT INSTALLED	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG.25-3
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

25 EQUIPMENT/ FURNISHINGS				
20-02 Passenger Seat	D	8	0	May be inoperative provided: a) Seat does not block an Emergency Exit, b) Seat does not restrict any passenger from access to the Main Aircraft Aisle, and c) The affected Seat is blocked and placarded "DO NOT OCCUPY". NOTE 1: A Seat with an inoperative Seat Belt is considered inoperative. NOTE 2: Affected Seat may include the Seat behind and / or adjacent outboard Seat.
01 Recline Mechanism	D	8	0	(M) May be inoperative and Seat occupied provided Seat is secured in the FULL UPRIGHT position.
	D	8	0	May be inoperative and Seat occupied provided Seat Back is IMMOVABLE in FULL UPRIGHT position.
02 Underseat Baggage Restraining Bars				Deleted, Revision 4.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 14-FEB-13	PAGE NO: PAG.25-4
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

25 EQUIPMENT/ FURNISHINGS				
20-02 Passenger Seat (Continued)				
03 Armrest	D	16	0	(M) May be inoperative or missing and Seat occupied provided: a) Armrest does not block an Emergency Exit, b) Armrest does not restrict any passenger from access to the Main Aircraft Aisle, and c) For an Armrest with a Recline Mechanism, Seat is secured in the UPRIGHT position.
04 Swivel Mechanism	D	8	0	May be inoperative and Seat occupied provided Seat is immovable in placarded taxi, takeoff and landing position.
20-03 Exterior Lavatory Door Ashtray	A	1	0	May be missing or inoperative for ten (10) calendar days.
20-04 Cabin Power Equipment				
01 Cabin Power Outlet Cover	D	1	0	
02 Cabin Power Outlet System				Moved to 24-50-01, Revision 4.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG.25-5	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

25 EQUIPMENT/ FURNISHINGS				
20-05 Cabin Underseat Storage Door / Drawer	D	2	0	(M) May be missing or inoperative provided: a) If missing, contents must be relocated, b) If inoperative, Door must be closed and SECURED and contents relocated, c) If contents contain Emergency Equipment, the equipment must be relocated and accessible for the passenger or the Seat must be considered inoperative, and a) If Emergency Equipment is relocated, passengers must be briefed as to its location.
20-06 Cabin And Galley Storage Compartment / Closet	C	1	0	(M) May be inoperative provided: a) Procedures are established to secure Compartment CLOSED, b) Any Emergency Equipment located in affected Compartment is relocated or considered inoperative, c) Affected Compartment is not used for storage of any item(s) except for those permanently affixed, and d) Passengers are briefed on any relocated Emergency Equipment.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG.25-6
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY			
	2. NUMBER INSTALLED			
	3. NUMBER REQUIRED FOR DISPATCH			
	4. REMARKS AND EXCEPTIONS			
25 EQUIPMENT/ FURNISHINGS				
20-07 Interior Cabinet Door / Drawer / Latch	D	6	0	(M) May be inoperative or missing provided: a) If inoperative, Door / Drawer is in the CLOSED Position and SECURED, and b) If missing, unsecured contents of the Cabinet are REMOVED.
50-01 Aft Cabin Baggage Compartment Restraint System	C	1	0	May be inoperative or missing provided Baggage Compartment remains EMPTY.
60-01 Emergency Medical Equipment				
01 Automatic External Defibrillator (AED) And / Or Associated Equipment				NOT INSTALLED



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		REVISION 01 DATE: 22 Jan 2014	PAGE NO: PAG. 25-1
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

25	EQUIPMENT/ FURNISHINGS				
60-01	Emergency Medical Equipment (Continued)				
02	Emergency Medical Kit (EMK) And / Or Associated Equipment				NOT INSTALLED
03	First Aid Kit (FAK) And / Or Associated Equipment	1	1		Required By NOM-012-SCT3-2012
60-02	Flotation Device And Equipment	11	11		Required by NOM-012-SCT3-2012.
62-01	Emergency Locator Transmitter (ELT)				
02	Fixed ELTs	1	1		Required by NOM-012-SCT3-2012.



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 25-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 26-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

26 FIRE PROTECTION				
00-01 Cargo Compartment Fire Detection / Suppression Systems				Deleted, Revision 4.
12-01 Auxiliary Power Unit (APU) Fire Detection System	C	1	0	(M) May be inoperative provided Auxiliary Power Unit (APU) is considered inoperative.
13-01 Bleed Air Leak Warning System	C	2	1	One may be inoperative provided: a) Associated Bleed Switch is OFF, b) Aircraft is operated at 25,000 feet MSL or below, and c) Aircraft is not operated in known or forecast icing conditions.
	C	2	0	May be inoperative provided: a) Both Bleed Switches are OFF, b) Aircraft is operated unpressurized at 9,000 feet MSL or below, and c) Aircraft is not operated in known or forecast icing conditions.
21-01 Fire Extinguisher Bottle Thermal And Discharge Indicator Disk	C	2	0	May be missing provided Bottle pressures are in accordance with the AFM.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 26-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

26 FIRE PROTECTION					
21-02 Auxiliary Power Unit (APU) Fire Extinguisher Bottle	C	1	0	(M) May be inoperative provided Auxiliary Power Unit (APU) is considered inoperative.	
22-01 Portable Fire Extinguisher	D	3	1	Any in excess of those required by NOM-012-SCT3-2012 may be inoperative or missing provided: a) The inoperative Fire Extinguisher is tagged INOPERATIVE, removed from the installed location and placed out of sight so it cannot be mistaken for a functional Unit, and b) Required distribution is maintained.	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 27-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				
27 FLIGHT CONTROLS					
00-01 Rudder Pedal FWD / AFT Switch	C	2	0	May be inoperative provided the flight crew can satisfactorily operate the Rudder Pedals and Brakes throughout their complete range of motion on the affected side while in the SEATED position.	
00-02 PFD Low Speed Cues				Relief moved to 34-18-01, Revision 4.	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 27-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 28-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

28 FUEL				
10-01 Fuel Cap Retention Cable (SPPR System)	C	1	0	
20-01 Single Point Pressure Refuel (SPPR) System	C	1	0	
40-01 L STBY Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided L STBY PUMP ON CAS message is displayed when selected.
40-02 R STBY Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided R STBY PUMP ON CAS message is displayed when selected.
40-03 XFLOW Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided FUEL XFLO OPEN CAS message is displayed when selected.
40-04 FUEL USED RESET Button	C	1	0	(O) May be inoperative provided alternate procedures are established and used to determine fuel burn.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 28-2
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY			
	2. NUMBER INSTALLED			
	3. NUMBER REQUIRED FOR DISPATCH			
	4. REMARKS AND EXCEPTIONS			
28 FUEL				
41-01 Refueling Panel Fuel Quantity Indicator	C	1	0	May be inoperative provided fuel quantity is determined using Flight Deck Fuel Quantity Indicators.
42-01 Right Wing Fuel Probe (R FUEL QTY FAULT)	A	7	6	(O) One (1) may be inoperative provided: a) Both Flight Deck Fuel Quantity Indicators are OPERATIVE, b) Both Wing Tanks are filled with fuel and quantity is verified, and c) Amber Dashes do not display on indicator, and d) Repairs are made within three (3) flight days.
42-02 Left Wing Fuel Probe (L FUEL QTY FAULT)	A	7	6	(O) One (1) may be inoperative provided: a) Both Flight Deck Fuel Quantity Indicators are OPERATIVE, b) Both Wing Tanks are filled with fuel and quantity is verified, and c) Amber Dashes do not display on indicator, and d) Repairs are made within three (3) flight days.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 30-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
30 ICE AND RAIN PROTECTION					
00-01 Angle Of Attack Vane Heat (L or R AOA HT FAIL)		C	2	1	One may be inoperative provided: a) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, and b) Aircraft is not operated in known or forecast icing conditions. NOTE: RVSM, MNPS is not authorized (Ref. NOM-091-SCT3-2004)
00-02 SAT Probe Heat (SAT HT FAIL)		C	1	0	One may be inoperative provided: a) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, and b) Aircraft is not operated in known or forecast icing conditions. NOTE: RVSM, MNPS is not authorized (Ref. NOM-091-SCT3-2004)
00-03 L and / or R PROBES Switch Indicator (Light Function Only)		C	2	0	May be inoperative provided the associated Probe Heat is verified to be OPERATIVE.
10-01 Wing / Stabilizer Anti- Ice System		C	1	0	May be inoperative OFF provided: a) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, and b) Aircraft is not operated in known or forecast icing conditions.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 30-2	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
30 ICE AND RAIN PROTECTION					
10-02 WING / STAB Switch Indicator (Light Function Only)		C	1	0	May be inoperative provided Anti-Ice System is verified operative during AFM Normal Procedures - Starting Engines.
10-03 Wing / Stab Leak Warning System		C	1	0	May be inoperative provided: a) WING / STAB Anti-Ice Switch is OFF, b) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, and c) Aircraft is not operated in known or forecast icing conditions.
20-01 Nacelle Anti-Ice System		C	2	1	One may be inoperative OFF provided: a) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, and b) Aircraft is not operated in known or forecast icing conditions.
20-02 L and / or R NAC Switch Indicator (Light Function Only)		C	2	0	May be inoperative provided left and / or right green NAC EI message is displayed when selected.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 30-3	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
30 ICE AND RAIN PROTECTION					
30-01 Pitot-Static Probe Heater		B	3	2	One may be inoperative provided: a) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, b) Aircraft is not operated in known or forecast icing conditions, and c) Aircraft is operated in day VMC ONLY. NOTE 1: RVSM, MNPS is not authorized (Ref. NOM-091-SCT3-2004) NOTE 2: Left Pitot-Static Probe Heat Switch controls forward and aft Drain Mast Heaters.
		B	3	1	Two may be inoperative provided: a) Aircraft is not operated in visible moisture with Static Air Temperature (SAT) below +10 degrees C, b) Aircraft is not operated in known or forecast icing conditions, and c) Aircraft is operated in day VMC ONLY. NOTE 1: RVSM, MNPS is not authorized (Ref. NOM-091-SCT3-2004. NOTE 2: Left Pitot-Static Probe Heat Switch controls forward and aft Drain Mast Heaters.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 30-4
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

30 ICE AND RAIN PROTECTION				
30-02 Pitot Heat Indicating System	B	2	0	May be inoperative provided: a) All other Elements of the Pitot Heat System operate normally, and b) The aircraft is not operated into known or forecast icing conditions. NOTE: RVSM, MNPS is not authorized (Ref. NOM-091-SCT3-2004)
40-01 Windshield Heat (L / R WSHLD OVHT or L / R WSHLD HT FAIL)	C	2	0	May be inoperative OFF provided: a) Aircraft is not operated in known or forecast icing conditions, and b) Meteorological conditions at point of intended landing are acceptable to the flight crew.
40-02 Windshield Heat (L / R WSHLD HT FAULT)	B	2	1	White 'L or R WSHLD HT FAULT' CAS message may be displayed provided operations are not conducted in known or forecast icing conditions.
40-03 L And / Or R WSHLD Switch Indicator (Light Function Only)				Deleted, Revision 4.
70-01 Drain Mast Heater	C	1	0	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 30-5	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
30 ICE AND RAIN PROTECTION					
80-01 Ice Detector System		C	1	0	May be inoperative provided Wing / Stabilizer Anti-Ice System and Nacelle Anti / Ice System are ON prior to operating in visible moisture with Static Air Temperature (SAT) between +10 degrees C and -40 degrees C.
		C	1	0	May be inoperative provided Wing / Stabilizer Anti-Ice System and Nacelle Anti / Ice System are ON prior to operating at night with Static Air Temperature (SAT) between +10 degrees C and -40 degrees C.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 30-6	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG.31-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
31 INDICATING/ RECORDING SYSTEMS					
20-01 Flight Hour Meter					NOT INSTALLED
20-02 Static Air Temperature (SAT)		B	1	0	May be inoperative provided: a) Ice Detector is operative, and b) Nacelle and Wing / Stabilizer Anti- Ice Systems are turned ON when in visible moisture or at night.
20-03 Angle Of Attack (AOA) Indicator (Including Back Lighting)					NOT INSTALLED
20-04 Clock		C	2	1	Required by NOM-012-SCT3-2012.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		REVISION 01 DATE: 22 Jan 2014	PAGE NO: PAG. 31-2
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

31	INDICATING/ RECORDING SYSTEMS				
30-01	Flight Data Recorder (FDR) System		1	1	Required by NOM-022-SCT3-2011

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG.31-3
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

31	INDICATING/ RECORDING SYSTEMS				
50-01	Master WARN / CAUT Switch Indicator (Light Function Only)	C	2	1	
50-02	Crew Warning Panel (CWP) Annunciation Light	B	22	0	May be inoperative provided: a) Both Master WARN / CAUT Switch Indicators are operative, b) Crew Advisory System (CAS) is operative, c) Aural Master Warning is operative, and d) EMER BATT Switch Indicator must be operative if CWP EMER BATT Light is inoperative.
60-01	Display Unit	A	4	3	One Inboard Display Unit may be inoperative for one flight day provided: a) Display Unit Reversion Knobs are operative, and b) Both Radio Management Units are operative.
60-02	Display Unit Reversion Knob	B	2	1	One may be inoperative provided: a) Associated Switch must be inoperative with NORM selected, and b) Magnetic Compass is operative.
60-03	Display Unit Controller				
01	In/HPa Switch	C	2	1	One may be inoperative provided alternate procedures are used if necessary to set barometric pressure.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG.31-4	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

31	INDICATING/ RECORDING SYSTEMS				
02	CUE, FPA, HSI & WX Switch	C	8	0	
03	FMS Switch	C	2	0	(O) May be inoperative provided displayed navigation source is acceptable to the flight crew.
04	NAV Switch	C	2	1	One may be inoperative.
05	Bearing Pointer Knob	C	4	0	May be inoperative unless required for NDB navigation.
06	Push-To-Test / Dim Knob				
	01 Push-To-Test Mode	C	2	0	
	02 Bright / Dim Mode	C	4	0	May be inoperative provided lighting intensity is acceptable to the crew. NOTE: If lighting intensity is unacceptable to the flight crew, the Display Unit shall be considered inoperative.
60-04	MINIMUMS Knob	C	2	0	(O) May be inoperative provided alternate procedures are established and used.
60-05	RA / BARO Switch	C	2	0	(O) May be inoperative provided alternate procedures are established and used.
60-06	Barometric STD Switch	C	2	0	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 32-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				
32 LANDING GEAR					
40-01 Brake System	A	1	0	(O) May be dispatched with White BRAKE FAULT CAS Message provided: a) Procedures referenced in Section V, Performance, of the AFM for increased takeoff and landing distances are complied with, and b) Repairs are made within five flights.	
41-01 Anti-Skid System	C	1	0	May be inoperative provided aircraft is operated in accordance with AFM.	
50-01 Nose Wheel Steering System				Deleted, Revision 4.	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 32-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 33-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

33	LIGHTS				
10-01	Flight Deck Annunciator and / or Instrument Panel Light Dimming Function	C	1	0	May be inoperative for daylight operations ONLY.
10-02	Landing Gear Control Panel Assembly / Position Light				
01	Nose Transit (White & Black Lamp)	C	2	1	One may be inoperative provided the adjacent Lamp illuminating the same Nomenclature / Function is operative.
02	Nose DOWN (Green Lamp)	C	2	1	One may be inoperative provided the adjacent Lamp illuminating the same Nomenclature / Function is operative.
03	Left Transit (White & Black Lamp)	C	2	1	One may be inoperative provided the adjacent Lamp illuminating the same Nomenclature / Function is operative.
04	Left DOWN (Green Lamp)	C	2	1	One may be inoperative provided the adjacent Lamp illuminating the same Nomenclature / Function is operative.
05	Right Transit (White & Black Lamp)	C	2	1	One may be inoperative provided the adjacent Lamp illuminating the same Nomenclature / Function is operative.
06	Right DOWN (Green Lamp)	C	2	1	One may be inoperative provided the adjacent Lamp illuminating the same Nomenclature / Function is operative.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 33-2
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

33 LIGHTS				
10-03 Flight Deck / Flight Compartment and Instrument Lighting System (Including Back Lighting)	C	6	3	Individual Lights may be inoperative provided remaining Lighting System lights are: a) Not required for an emergency procedure, b) Sufficient to clearly illuminate all required instruments, controls, and other devices for which it is provided, c) Positioned so that direct rays are shielded from flight crewmembers eyes, and d) Lighting configuration and intensity is acceptable to the flight crew. NOTE: Individual button/switch lights and/or annunciations/indications are excluded from this relief.
10-04 EFIS Display Controller Backlighting	C	2	0	May be inoperative provided lighting configuration is acceptable to the flight crew.
10-05 Flight Deck Map Light	C	2	0	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 33-3	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
33 LIGHTS					
10-06 Flight Deck Push Button-Switch / Annunciator (PBS / PBA) Light		B	4	0	Each independent module may have one bulb inoperative provided the nomenclature remains legible.
20-01 Entry Light		C	1	0	May be inoperative provided sufficient ambient lighting illuminates the Steps.
20-02 Cabin Interior Lighting System (Excludes Cabin Emergency Lighting System)		C	4	0	May be inoperative provided lighting configuration is acceptable to the flight crew.
20-03 Passenger Lighted Information Sign		C	2	0	(O) May be inoperative and associated Passenger Seat or Lavatory may be occupied provided: a) PA System operates normally, and b) PA System is used to notify passengers and Cabin crew when associated Sign(s) are placed ON or OFF.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 33-4	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
33 LIGHTS					
20-04 Lavatory Reading Light		C	1	0	
20-05 Lavatory Vanity Light		C	2	0	
30-01 Service Light					
01 Baggage		C	1	0	
02 Tailcone		C	1	0	
03 Maintenance		C	1	0	
40-01 Baggage Door / Pylon External Light					NOT INSTALLED
40-02 Position (NAV) Light System		C	1	0	May be inoperative provided aircraft is not operated at night. NOTE: On aircraft equipped with LED Navigation Light System, if any LEDs are inoperative, the entire assembly is considered inoperative.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 33-5	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

33 LIGHTS				
40-03 Recognition Light	C	2	0	
40-04 Pulse Light System	C	1	0	
40-05 Anti-Collision Light System				
01 Beacon Light	C	2	0	May be inoperative provided Navigation Lights are used for night ground operations. Ref. NOM-012-SCT3-2012
02 Strobe Light	C	2	0	May be inoperative provided aircraft is not operated at night. Ref. NOM-012-SCT3-2012
40-06 Taxi Light	C	2	0	
40-07 Landing Light	C	2	1	One may be inoperative.
	C	2	0	May be inoperative provided both Recognition Lights are operative.
	C	2	0	May be inoperative provided both Taxi Lights are operative.
	C	2	0	May be inoperative provided aircraft is not operated at night.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 33-6	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

33	LIGHTS				
40-08	Landing / Recognition Light Lens	C	2	0	(M) May be inoperative provided: a) Affected Landing / Recognition Light is deactivated, and b) Affected Landing / Recognition Light Lens is covered.
40-09	Logo Light System	D	1	0	
40-10	Wing Inspection Light	C	1	0	May be inoperative provided: a) Primary Ice Detection system is operative, and b) Ground deicing procedures do not require use of Wing Inspection Light.
50-01	Flight Deck Flashlight And Holder Assembly				
01	Flashlight	C	2	0	May be inoperative provided crewmember assigned to the associated Seat has a Flashlight with at least two D Cell Batteries, or equivalent, in good working order.
02	Flashlight Holder	D	2	0	
50-02	Exterior Emergency Lighting System	C	1	0	May be inoperative provided aircraft is not operated at night.
50-03	Floor Proximity Emergency Escape Path Marking System				Deleted, Revision 4.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 34-1
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

34 NAVIGATION				
00-01 MFD Joystick	C	1	0	
00-02 Heading Selector Knob	B	1	0	
00-03 Course Selector Knob	B	2	1	One may be inoperative.
00-04 Speed Selector / Vertical Speed Knob	C	1	0	
00-05 Radio Management Unit (RMU)				Relief moved to 23-50-05, Revision 4.
10-01 Reversion Switch (IC / SG, ADC, AHRS, DAU)				Deleted, Revision 4.
10-05 Touch Control Steering (TCS) Switch				Relief moved to 22-10-05, Revision 4.
16-01 Altitude Alerting System	A	1	0	(O) May be inoperative provided: a) Autopilot with altitude hold, and altitude capture operates normally, b) Enroute operations do not require its use, c) Airplane does not depart from a designated airport (as listed in the operator's MEL) where repair or replacement can be made, and d) Repairs are made within three flight days.
		1	1	One system must be operative normally for operations in RVSM, MNPS. Ref. NOM-091-SCT3-2004.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 34-2	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
34 NAVIGATION					
01 Aural Alert	C	1	0	May be inoperative provided: a) Visual Alert operates normally, and b) Autopilot with Altitude Hold and Altitude Capture operates normally.	
02 Visual Alert	C	1	0	May be inoperative provided: a) Aural Alert operates normally, and b) Autopilot with Altitude Hold and Altitude Capture operates normally.	
18-01 PFD Low Speed Awareness (LSA) Cue/Bar	C	2	1		
	C	2	0	May be inoperative provided both Angle- Of-Attack Indicators are installed and OPERATIVE.	
21-01 Standby Attitude Indicator				Deleted Revision 4.	
23-01 Non-Stabilized Magnetic Compass		1	1	Required by NOM-012-SCT3-2012.	
31-01 VHF Omni-Directional Range (VOR)	C	2	0	May be inoperative provided: a) Aircraft is not operated IFR. b) Aircraft is not operated VFR controlled airspace. c) Navigation is NOT based on VOR signals. Ref. CO-AV-07.3-07;3.2.2	
	C	2	1	Required by NOM-012-SCT3-2012 NOTE: ONE Must be operative for MNPS, B- RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 34-3
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY			
	2. NUMBER INSTALLED			
	3. NUMBER REQUIRED FOR DISPATCH			
	4. REMARKS AND EXCEPTIONS			

34 NAVIGATION				
31-02 ILS Localizer (LOC)	C	2	0	May be inoperative provided: d) Aircraft is not operated IFR. e) Aircraft is not operated VFR controlled airspace. f) Navigation is NOT based on VOR signals. Ref. CO-AV-07.3-07;3.2.2
	C	2	1	Required by NOM-012-SCT3-2012 NOTE: ONE Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)
32-01 ILS Glide Slope (GS)	C	2	0	May be inoperative provided: a) Aircraft is not operated IFR. b) Aircraft is not operated VFR controlled airspace. c) Navigation is NOT based on VOR signals. Ref. CO-AV-07.3-07;3.2.2
	C	2	1	Required by NOM-012-SCT3-2012 NOTE: ONE Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)
33-01 Microwave Landing System (MLS)	D	2	0	May be inoperative provided: a) Aircraft is not operated IFR. b) Aircraft is not operated VFR controlled airspace. c) Navigation is NOT based on VOR signals. Ref. CO-AV-07.3-07;3.2.2



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 34-4
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

34 NAVIGATION				
34-01 Marker Beacon System	C	2	0	May be inoperative provided approach procedures do not require its use.
	C	2	1	Required by NOM-012-SCT3-2012 NOTE: ONE Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)
36-01 Wind Shear Detection, Guidance And Avoidance System				Deleted, Revision 4.
41-01 Inertial Navigation System (INS)	D	1	0	Required by CO-AV11/09. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH)
42-01 Weather Radar System	D	1	0	May be inoperative provided operations do not require its use. NOTE: Operate only during daytime and if weather conditions allow safe operation..
44-01 Radio Altimeter	C	2	0	(O) May be inoperative provided approach procedures do not require its use. NOTE: CAS Takeoff and Landing Inhibits, Decision Height (DH) value, Low Altitude Awareness on Altitude Tape, Gear Warning System, TCAS System and GPWS System will be affected.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 34-5
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

34	NAVIGATION				
44-02	Terrain Awareness And Warning System (TAWS)				
	Class A TAWS Equipment Required				
01	Ground Proximity Warning System (GPWS) (Required by NOM- 070-SCT3-2010)	A	1	0	(O) May be inoperative provided: a) Alternate procedures are established and used, and b) Repairs are made within two flight days.
01	Modes 1-4	A	4	0	(O) May be inoperative provided: a) Alternate procedures are established and used, and b) Repairs are made within two flight days.
02	Test Mode	A	1	0	May be inoperative provided: a) GPWS is considered inoperative, and b) Repairs are made within two flight days.
03	Glideslope Deviation (Mode 5)	C	2	1	
		B	2	0	
04	Advisory Callout	B	6	0	(O) May be inoperative provided alternate procedures are established and used.
		C	6	0	(O) May be inoperative provided: a) Advisory Callouts not required by NOM-070-SCT3-2010, and b) Alternate procedures are established and used.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 34-6
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

34 NAVIGATION				
44-02 Ground Proximity 01 Warning System (GPWS) (Continued)				
05 Windshear Mode (Reactive)	B	1	0	(O) May be inoperative provided alternate procedures are established and used. NOTE: Operator's alternate procedures should include reviewing windshear avoidance and windshear recovery procedures.
	C	1	0	(O) May be inoperative provided: a) Alternate procedures are established and used, and b) Windshear Detection and Avoidance System (Predictive) operates normally.
44-02 Terrain System- 02 Forward Looking Terrain Avoidance (FLTA) And Premature Descent Alert (PDA) Function	B	1	0	(O) May be inoperative provided alternate procedures are established and used.
03 Terrain Display	C	2	1	
	B	1	0	
04 Runway Awareness And Advisory System (RAAS)	C	1	0	

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 34-7
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

34	NAVIGATION				
45-02	Traffic Alert And Collision Avoidance System (TCAS II) (Required by NOM-069-SCT3-2010)	B	1	0	(M) May be inoperative provided: a) System is deactivated and secured, and b) Enroute or approach procedures do not require its use.
		C	1	0	(M) May be inoperative provided: a) Not required by NOM-069-SCT3-2010, b) System is deactivated and secured, and c) Enroute or approach procedures do not require its use.
			1	1	Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH) Ref. NOM-091-SCT3-2004.
01	Combined Traffic Alert (TA) And Resolution Advisory (RA) Dual Display System	C	2	1	May be inoperative on the non-flying pilot side provided: a) TA and RA visual display is operative on the flying pilot side, and b) TA and RA audio function is operative on the flying pilot side.
02	Resolution Advisory (RA) Display System	C	2	1	May be inoperative on non-flying pilot side.
		C	2	0	(O) May be inoperative provided: a) Traffic Alert (TA) visual display and audio functions are operative, b) TA ONLY Mode is selected by the crew, and c) Enroute or approach procedures do not require its use.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		REVISION. 2 DATE: 02-Mar-20		PAGE NO: PAG. 34-8	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				
34 NAVIGATION					
45-02 Traffic Alert And Collision Avoidance System (TCAS II) (Continued)					
03 Traffic Alert (TA) Display System	C	1	0	(O) May be inoperative provided: a) RA visual display and audio functions are operative, and b) Enroute or approach procedures do not require its use.	
04 Audio Function	B	1	0	May be inoperative provided enroute or approach procedures do not require use of TCAS.	
05 Airspace Selection Function				NOT INSTALLED	
46-01 Weather Storm Scope	C	1	0		
50-01 Area Navigation (RNAV)				NOT INSTALLED.	
50-02 Automatic Dependent Surveillance Broadcast (ADS-B) System	D	1	0	May be inoperative provided: a) Enroute operations do not b) Require its use, and It is not required by CO AV 91.2/19 and NOM'S.	
				NOTE: Any ADS-B function that operates normally may be used	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 34-9	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
34 NAVIGATION					
-50-02 Automatic Dependent Surveillance Broadcast (ADS-B) System (Continued)					
-01 Cockpit Display And Traffic Information (CDTI)					
-02 CDTI Control Panel					
-03 Data Link Transmitter					
-04 Data Link Receiver					
-05 ADS-B Application					
51-01 Distance Measuring Equipment (DME) System		D	2	1	Any in excess of those required by, CO- AV-07.3-07 may be inoperative.
		D	2	0	May be inoperative provided: a) Aircraft is not operated IFR. b) Aircraft is not operated in VFR controlled airspace. Must be operative for MNPS, B-RNAV (RNP- 10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP- APPROACH)

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		REVISION. 2 DATE: 02 Mar 2020		PAGE NO: PAG. 34-10
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY			
	2. NUMBER INSTALLED			
	3. NUMBER REQUIRED FOR DISPATCH			
	4. REMARKS AND EXCEPTIONS			
34 NAVIGATION 51-02 Tactical Air Navigation (TACAN)				NOT INSTALLED
52-01 ATC Transponder And Automatic Altitude Reporting System	D	2	1	Required by NOM-003-SCT3-2010 and in according with NOM-091-SCT3-2004 by RVSM and MNPS operations. NOTE: One must be operative for IFR operations in accordance with NOM-012-SCT3-2012
	B	2	0	May be inoperative provided: a) Operations do not require its use, and b) Prior to flight, approval is obtained from ATC facilities having jurisdiction over the planned route of flight.
01) Elementary And Enhanced Downlink Aircraft Reportable Parameters Not Required NOM-03- SCT3-2010.				NOT INSTALLED
02) ADS-B Squitter Transmissions	A	1	1	May be inoperative provided operations do not require its use. NOTE: Any ADS-B function that operates normally may be used.
53-01 Long Range Navigation (LORAN)	D	1	0	Any in excess of those required by COAV- 11/09. Must be operative for MNPS, B-RNAV (RNP- 10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNPAPPROACH)



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 34-11	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

34 NAVIGATION				
55-01 Automatic Direction Finder (ADF)	C	1	0	Any in excess of those required by CO-AV-07.3-07, may be inoperative when operated under IFR or VFR controlled Airspace. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH) Ref. CO-AV-11/09.
57-01 Global Positioning System (GPS)	D	2	1	May be inoperative provided routing procedures do not require its use by NOM-051-SCT3-2011. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH) Ref. CO-AV-11/09.
60-01 Flight Management System (FMS)	C	2	0	(O) May be inoperative provided operations do not require FMS use. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH) Ref. CO-AV-11/09.
01 Tune Function	C	1	0	May be inoperative provided both RMUs are operative.
02 Fuel Planning And Indicating Function	C	1	0	May be inoperative provided fuel quantity indicating systems are operative.
60-02 Flight Management System Data Transfer Unit (FMS DTU)	C	1	0	



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 34-12	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
34 NAVIGATION					
60-03 Navigation Management System					Deleted, Revision 4.
61-01 Navigation Database		C	1	0	(O) May be out of currency provided: a) Current Aeronautical Charts are used to verify Navigation Fixes prior to dispatch, b) Procedures are established and used to verify status and suitability of Navigation Facilities used to define route of flight, and c) Approach Navigation Radios are manually tuned and identified. Must be operative for MNPS, B-RNAV (RNP-10, RNP-5, RNP-4, RNP-2, RNP-1 AND RNP-APPROACH) Ref. CO-AV-11/09.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 35-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

35	OXYGEN				
00-01	Oxygen Temperature Display				Deleted, Revision 4.
00-02	Oxygen Bottle Pressure Gauge (Mechanical Pressure Gauge)	C	1	0	May be inoperative provided Remote Oxygen Indicator is installed and operative.
00-03	Remote Oxygen Indicator				NOT INSTALLED
00-04	Oxygen System Discharge Indicator (Oxygen Blowout Disc)	C	2	0	(O) May be missing provided there is an adequate supply of oxygen for passengers and crew for the intended flight.
20-01	Passenger Oxygen System	C	1	0	May be inoperative provided: a) Aircraft is operated without cabin occupants, and b) Crew oxygen system is operative.
01	Mask	C	11	0	Individual oxygen masks or dispensers may be inoperative or missing provided associated seats are placarded "DO NOT OCCUPY".



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 35-2	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
35 OXYGEN					
20-01 Passenger Oxygen System (Continued)					
02 Drop Out Panel		C	9	0	(M) Individual panels may be out of normal position provided: a) Oxygen masks and drop out panel are removed, and b) Associated seat(s) or lavatory is placarded "DO NOT OCCUPY". NOTE: These conditions are not intended to prohibit lavatory use or inspections by crewmembers.
03 Cargo Configuration		D	1	0	N/A
30-01 Protective Breathing Equipment (PBE)		D	1	0	Any in excess of those required by NOM-012-SCT2-2012 may be inoperative or removed provided location placarding is removed or obscured.
30-02 Portable Oxygen Dispensing Unit		D	1	0	Any in excess of those required by NOM-012-SCT3-2012 may be inoperative provided: a) Required distribution of serviceable Bottles is maintained throughout the aircraft, and b) Bottles not properly serviced are replaced, serviced, or removed at the next available maintenance facility.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 36-1
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY			
	2. NUMBER INSTALLED			
	3. NUMBER REQUIRED FOR DISPATCH			
	4. REMARKS AND EXCEPTIONS			
36 PNEUMATIC				
00-01 Bleed Air Control System	C	2	1	(O) One may be inoperative in the OFF Position provided: a) Emergency Pressurization Valve on operative Bleed Air Control System must be operative, b) Aircraft is operated at 25,000 feet MSL or below, and c) Aircraft is not operated in known or forecast icing conditions.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 36-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 38-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

38 WATER/WASTE				
10-01 Potable Water System	C	1	0	(M) Individual components may be inoperative provided: a) Associated Components are deactivated or isolated, and b) Associated System Components are verified not to leak. NOTE: Any portion of the System which operates normally may be used.
	C	1	0	(M) May be inoperative provided: a) System is drained, and b) Procedures are established to ensure that System is not serviced.
30-01 Lavatory Waste System	C	1	0	(M) Individual Components may be inoperative provided: a) Associated Components are deactivated or isolated, and b) Associated System Components are verified not to have leaks. NOTE: Any portion of the System which operates normally may be used.




MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 38-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK

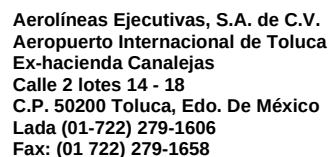

46	NEW TECHNOLOGY				
00-01	Electronic Flight Bag System (EFB)				



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 46-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 49-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
49 AIRBORN AUXILIARY					
00-01 Auxiliary Power Unit (APU)	D	1	0	(M) May be inoperative provided Auxiliary Power Unit (APU) is deactivated.	



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 49-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. 52-1
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

52 DOORS				
00-01 Keyable Door Lock	C	1	0	May be inoperative provided the Door opens and closes normally and can be secured CLOSED.
10-01 Lower Cabin Door Damper (Gas Strut)	C	2	0	May be inoperative provided: a) Cabin Door is verified to operate normally, and b) Crewmember assists in Door opening and closing.
10-02 Upper Cabin Door Assist Strap	C	1	0	
10-03 Lower Cabin Door Retract Cable	C	1	0	
30-01 Baggage Compartment Door Strut Assembly (Locking Arm)	C	1	0	May be inoperative provided the Strut does not interfere with Door operation.
48-01 Tailcone Access Door Cable Assembly	C	1	0	May be inoperative provided the Cable does not interfere with Door operation.
01 "ENTRY DOOR" (CAS Message / CWP Annunciation)	C	1	0	May be displayed, illuminated or inoperative provided: a) Crewmember visually verifies before each departure that the Entry Door is CLOSED and LATCHED, b) All Door Latch Visual Indicators provide a SAFE Condition Indication, and c) "FASTEN SEAT BELT" Sign remains ON for the entire flight.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 52-2	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
52 DOORS					
70-01 Cabin / External Door Indicating System					
02 “ENTRY DOOR PIN” (CAS Message)		C	1	0	May be displayed provided: a) Crewmember visually verifies before each departure that the Entry Door is CLOSED and LATCHED, b) All Door Latch Visual Indicators provide a SAFE Condition Indication, and c) “FASTEN SEAT BELT” Sign remains ON for the entire flight.
03 “EXTERNAL DOORS” (CAS Message)		C	1	0	May be displayed provided: a) Crewmember visually verifies prior to every flight two (2) locking pins extend and retract on both Tailcone and Baggage Door with door latch handle operation while door is in the open position, and b) Both doors are CLOSED and LATCHED prior to engine start.
04 “EMERGENCY EXIT” (CAS Message)		C	1	0	May be displayed provided: a) Crewmember visually verifies before each departure that the Emergency Exit is closed and LATCHED , and b) “FASTEN SEAT BELT” Sign remains ON for the entire flight.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 73-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
73 ENGINE / FUEL CONTROL 31-01 Fuel Flow Indicator	B	2	1	(O) One (1) may be inoperative provided: a) All other Engine parameters are operative and monitored throughout the flight, b) Fuel Quantity Indications are OPERATIVE, and c) Weight and performance calculations based on FMS computations are not used.	



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 73-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 74-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

74 IGNITION					
00-01 Igniter (White 'IGN' EICAS)	B	4	2	One may be inoperative on each engine provided take-off in heavy precipitation is prohibited.	
00-02 Ignition Switch Indicator (Light Function Only)	C	2	0	May be inoperative provided the associated EICAS "IGN" Message is operative.	



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 74-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 76-1	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY	2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			

76	ENGINE CONTROLS				
00-01	Start Switch Indicator (Light Function Only)	C	2	0	May be inoperative provided the associated EICAS "START" indication is displayed.
00-02	APR System	C	1	0	May be inoperative provided operations are conducted in accordance with the AFM (APR OFF) Performance Data.
00-03	APR Switch Indicator (Light Function Only)	C	1	0	May be inoperative provided the associated EICAS "APR" Indication is displayed.
01-01	Engine Synchronizer System	C	1	0	(M) May be inoperative provided: a) System is selected OFF, b) ENG SYNC is deactivated and secured, and c) AFM Limitations are complied with.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 76-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 77-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
77 ENGINE INDICATING					
00-01 Engine Condition Trend Monitoring (ECTM) System		C	2	0	
41-01 Engine Vibration Monitor System		C	1	0	(M) May be inoperative provided Engine Vibration Monitor System is deactivated and secured.



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 77-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 78-1	
SYSTEM SEQUENCE & NUMBERS		1.REPAIR CATEGORY			
		2. NUMBER INSTALLED			
		3. NUMBER REQUIRED FOR DISPATCH			
		4. REMARKS AND EXCEPTIONS			
78 EXHAUST					
30-01 Thrust Reverser System					
01	3 Deactivation Pins Utilized	A	2	0	(M) May be inoperative provided: a) Aircraft has complied with Service Bulletin SB45-78-8 or SB40-78-02, b) Both Thrust Reversers are secured in FORWARD THRUST position utilizing three (3) Deactivation Pins in the specified locations in the note below, c) AFM performance is not predicated on the use of Thrust Reversers, and d) Repairs are made within two (2) flight days. NOTE: Thrust Reverser Deactivation Pin Fairing Locations: Outboard (upper and lower) and Inboard, (upper only).
02	4 Deactivation Pins Utilized	C	2	0	(M) May be inoperative provided: a) Both Thrust Reversers are secured in FORWARD THRUST positions utilizing four (4) deactivation pins, and b) AFM performance is not predicated on the use of Thrust Reversers.



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. 78-2	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

INTENTIONALLY LEFT IN BLANK

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

Table of Contents

21 AIR CONDITIONING

21-01 LAVATORY RECIRCULATION FAN	MOPS-1
21-02 LAVATORY RECIRCULATION FAN HIGH/LOW SPEED SWITCH	MOPS-1
33-02 EMERGENCY PRESSURIZATION VALVE	MOPS-2
40-01 BAGGAGE COMPARTMENT HEATER	MOPS-2
40-02 AUXILIARY HEAT	MOPS-2
40-03 FLIGHT DECK ELECTRIC FOOT WARMER SYSTEM	MOPS-3
50-01 PACK	MOPS-3
50-02 PACK HI FLOW SYSTEM	MOPS-3
50-03 VAPOR CYCLE SYSTEM	MOPS-4

22 AUTO PILOT

10-01 AUTO PILOT SYSTEM	MOPS-4
10-03 GO-AROUND SWITCH	MOPS-5

23 COMMUNICATIONS

20-01 SELECTIVE CALL SYSTEM	MOPS-6
40-01-01 PASSENGER ADDRESS SYSTEM	MOPS-6
40-03 CABIN CHIMES	MOPS-6

25 EQUIPMENT / FURNISHINGS

10-03-01 FLIGHT CRUE SEAT-MANUAL VERTICAL ADJUSTMENT	MOPS-6
20-02-02 PASSENGER SEAT-RECLINE MECHANISM	MOPS-6
20-02-03 PASSENGER SEAT-ARMREST	MOPS-7
20-05 CABIN UNDERSEAT STORAGE DOOR/DRAWER	MOPS-7
20-06 CABIN AND GALLEY STORAGE COMPARTMENT	MOPS-7
20-07 INTERIOR CABINET DOOR/DRAWER/LATCH	MOPS-7

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

26 FIRE PROTECTION

- 12-01 AUXILIARY POWER UNIT (APU) FIRE DETECTION SYSTEM MOPS-7
21-02 AUXILIARY POWER UNIT (APU) FIRE EXTINGUISHER BOTTLE MOPS-8

28 FUEL

- 40-04 FUEL USED RESET BUTTON MOPS-8
42-01 RIGHT WING FUEL PROBE MOPS-8
42-02 LEFT WING FUEL PROBE MOPS-9

31 INDICATING/RECORDING SYSTEMS

- 60-03-03 DISPLAY UNIT CONTROLLER-FMS SWITCH MOPS-9
60-04 MINIMUS KNOB MOPS-9
60-05 RA/BARO SWITCH MOPS-9

32 LANDING GEAR

- 40-01 BRAKE SYSTEM MOPS-10

33 LIGHTS

- 20-03 PASSENGER LIGHTED INFORMATION SIGN MOPS-10
40-08 LANDING/RECOGNITION LIGHT LENS MOPS-10

34 NAVIGATION

- 16-01 ALTITUDE ALERTING SYSTEM MOPS-12
44-01 RADIO ALTIMETER MOPS-12
44-02 TERRAIN AWARENESS AND WARNING SYSTEM MOPS-12
44-02-01 TERRAIN AWARENESS AND WARNING SYSTEM-MODES 1-4 MOPS-13
44-02-04 TERRAIN AWARENESS AND WARNING SYSTEM-ADVISORY CALLOUT MOPS-13
44-02-05 TERRAIN AWARENESS AND WARNING SYSTEM-WINDSHEAR MODE MOPS-13
45-02 TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS II) MOPS-13
45-02-02 TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS II) - RESOLUTION
ADVISORY (RA) DISPLAY SYSTEM MOPS-14
45-02-03 TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS II) –TRAFFIC ALERT
DISPLAY SYSTEM..... MOPS-14

MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

60-01 FLIGHT MANAGEMENT SYSTEM	MOPS-14
35 OXYGEN	
00-04 OXYGEN SYSTEM DISCHARGE INDICATOR	MOPS-15
20-01 PASSENGER OXYGEN SYSTEM-DROP OUT PANEL	MOPS-15
36 PNEUMATIC	
00-01 BLEED AIR CONTROL SYSTEM	MOPS-15
38 WATER/WASTE	
10-01 PORTABLE WATER SYSTEM	MOPS-16
30-01 LAVATORY WASTE SYSTEM	MOPS-17
49 AIRBORNE AUXILIARY POWER	
00-01 AUXILIARY POWER UNIT	MOPS-17
73 ENGINE FUEL&CONTROL	
31-01 FUEL FLOW INDICATOR	MOPS-18
76 ENGINE CONTROLS	
01-01 ENGINE SYNCHRONIZER SYSTEM	MOPS-18
77 ENGINE INDICATING	
44-01 ENGINE VIBRATION MONITOR SYSTEM	MOPS-18
78 EXHAUST	
30-01-01 THRUST REVERSER SYSTEM-3DEACTIVATION PINS UTILIZED	MOPS-18
30-01-02 THRUST REVERSER SYSTEM-4DEACTIVATION PINS UTILIZED	MOPS-20



MINIMUM EQUIPMENT **LIST**

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

INTENTIONALLY LEFT IN BLANK



OPERATIONAL / MAINTENANCE PROCEDURES

**BOMBARDIER
LEARJET 45**

ISSUE

FEB 25TH 2013

INTENTIONALLY LEFT IN BLANK



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-1
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

21 AIR CONDITIONING

21-01 LAVATORY RECIRCULATION FAN

(M)

PLACARD

Attach an "AUXILIARY HEAT INOP" placard on the Environmental Control Panel.

1. Disconnect external electrical power and batteries (main and emergency) from aircraft.
2. Gain access to the AC/HEAT Control Box located in the Tailcone Equipment Bay.
3. Remove cover from the AC/HEAT Control Box.
4. Remove the two 50 Amp (MS28937-50) Fuses from the AC/HEAT Control Box.
5. Replace cover on the AC/HEAT Control Box.
6. Connect electrical power to aircraft.

21-02 LAVATORY RECIRCULATION FAN HIGH/LOW SPEED SWITCH

(M)

PLACARD

Attach a "CABIN FAN SWITCH INOP" placard on the Environmental Control Panel.

NOTE: To perform the following checks, external power must be applied to the aircraft.

1. Select the AIR COND switch to HEAT.
2. Ensure Lavatory Recirculation Fan operates at high speed.
3. Rotate the CABIN FAN switch from OFF to MAX to OFF.
4. Ensure Lavatory Recirculation Fan operates at high speed for all CABIN FAN switch positions.
5. Select the AIR COND switch to OFF.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-2
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

33-02 EMERGENCY PRESSURIZATION VALVE

(M)

PLACARD

Attach a "LEFT EMER PRESS VALVE or RIGHT EMER PRESS VALVE INOP"
Placard to the instrument panel.

A. Remove electrical connector from inoperative Emergency
Pressurization Valve as follows:

1. Disconnect electrical connector from batteries.
2. Open baggage compartment door.
3. Remove baggage compartment liner as necessary.
4. Remove baggage compartment access panels.
5. Disconnect the electrical connector (L35P1, LH, or L36P1, RH) from the inoperative emergency pressurization valve and cap & stow.

40-01 BAGGAGE COMPARTMENT HEATER

(M)

PLACARD

Attach a "BAGGAGE HEATER INOP" placard in close proximity to the Baggage
Compartment Heater Switch.

Inspect the baggage compartment for damage caused by an over- heated element. If
evidence of damage is not obvious, pull and secure the baggage heat circuit breaker on the
aft left power dis- tribution panel and ensure the control switch is in the OFF position.

40-02 AUXILIARY HEAT

(M)

PLACARD

Attach an "AUXILIARY HEAT INOP" placard on the Environmental Control Panel.

1. Disconnect external electrical power and batteries (main and emergency)
from air- craft.
2. Gain access to the AC/HEAT Control Box located in the Tailcone Equipment
Bay.
3. Remove cover from the AC/HEAT Control Box.
4. Remove the two 50 Amp (MS28937-50) Fuses from the AC/HEAT Control Box.
5. Replace cover on the AC/HEAT Control Box.
6. Connect electrical power to aircraft.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-3
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

40-03 FLIGHT DECK ELECTRIC FOOT WARMER SYSTEM

(M)

PLACARD

Attach an "AIR CONDITIONING SYSTEM INOP" placard on the Environmental Control Panel.

1. Pull the FOOT WARM circuit breaker on the copilot's circuit breaker panel.
2. Install a lockout collar on the circuit breaker to secure open.

50-01 PACK

(O)

PLACARD

Attach a "PACK INOP" placard next to the PACK Switch.

A. Provide cabin airflow as follows:

1. Select EMER DEPRESS Switch to ON.

NOTE: When EMER DEPRESS is selected ON, an EMER DEPRESS white CAS illuminates and the outflow valves receive a signal to move toward the full open position. This allows cabin airflow.

B. Operate aircraft unpressurized at or below 9,000 feet MSL.

NOTE: Emergency pressurization may activate at cabin altitudes above 9,500 feet. If this occurs, use the EMER PRESS Switch to deactivate emergency pressurization.

50-02 PACK HI FLOW SYSTEM

(M)

PLACARD

Attach a "PACK HIGH FLOW INOP" placard to the pressurization control panel.

A. Ensure the system is set to normal flow by performing the following:

1. Disconnect, bag and stow electrical connector L19P2 at the Pack Bi-Level Pressure Regulating Shutoff Valve (disables High Flow Solenoid).
2. Verify flow limiting venturi pressure at upstream pressure tap is 18 psig +/- 2 psig with engine @ N1 70%.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-4
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

50-03 VAPOR CYCLE SYSTEM

(M)

PLACARD

Attach an "AIR CONDITIONING SYSTEM INOP" placard on the Environmental Control Panel.

1. Pull the COOL/HEAT circuit breaker on the copilot's circuit breaker panel.
2. Install a lockout collar on the circuit breaker to secure open.

22 AUTO PILOT

10-01 AUTO PILOT SYSTEM

(M)

NOTE: If autopilot failure is due to a yaw servo failure, the rudder boost will be INOP (DO NOT TAKEOFF). Refer to the AFM for rudder boost limitations.

PLACARD

Attach an "AUTOPILOT INOP" placard to the instrument panel.

A. Ensure no electrical or mechanical faults exist that would have an adverse effect on any flight control functions as follows:

1. Remove Flight Guidance Controller then de-pin, cap and stow pin #8 on connector A56P1.
2. Reinstall connector and reinstall Flight Guidance Controller.
3. L and R BATT Switches - On.
4. L and R AV MSTR Switches - On.
5. Connect external electrical power source to aircraft.
6. Verify EXT PWR Switch AVAIL, then EXT PWR Switch - ON.
7. Verify rudder area is clear.
8. Verify rudder boost is off (RUD BOOST Switch OFF indicator is illuminated). Verify RUD BOOST INOP white CAS.
9. Verify autopilot/yaw damper is not engaged (AP and YD indicators are not illuminated).
10. RUD BOOST Switch - On.
11. Verify RUD BOOST INOP white or amber CAS are NOT displayed.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-5
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

NOTE: The RUD BOOST INOP amber CAS means that the rudder boost is inoperative and not selected off (NO TAKEOFF). Refer to AFM for rudder boost limitations.

12. Engage yaw damper by pressing YD switch on Flight Guidance Controller. Verify Yaw damper is on (green YD indicators on Flight Guidance Controller and PFD are illuminated).
13. Slowly depress left rudder pedal and then right rudder Pedal (pilot or copilot side). Observe rudder boost engages at approximately 20 to 35 pounds (green RB is illuminated on the PFD).
14. Using the pilot's control wheel, push control column forward and then pull aft Checking for freedom of operation.
15. Using the pilot's control wheel, turn control wheel full right and full left checking for Freedom of operation.
16. Operationally check rudder control system, with rudder Pedals adjusted to both forward and aft positions, ensure proper travel and Freedom of movement.
17. PITCH TRIM Selector Switch - PRI.
18. Using pilot's Trim/Trim Arming Switch, trim horizontal stabilizer leading edge to NDN And NUP positions.
19. Verify EICAS indicates a position of 0 (± 0.1) units NDN, and 10 (± 0.1) units NUP.
20. PITCH TRIM Selector Switch - SEC.
21. Using SEC trim switches, trim horizontal stabilizer from NUP to NDN. (This action Could take nearly two minutes)
22. Set PITCH TRIM Selector Switch to PRI.
23. EXT PWR Switch - AVAIL.
24. L and R AV MSTR Switches - OFF.
25. L and R BATT Switches - OFF.
26. Remove external electrical power source from aircraft.

10-03 GO-AROUND SWITCH

(O)

PLACARD

Attach a "GO-AROUND BUTTON INOP" placard to the instrument panel.

1. Use an alternate means to disengage the Autopilot (The Control Wheel Trim Switch is recommended).
2. An alternate vertical mode (other than GA mode) must be used.
3. Refer to the Go Around procedure in the AFM (Section 2 Normal Procedures, page 2-21).



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-6
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

23 COMMUNICATIONS

20-01 SELECTIVE CALL SYSTEM

(O)

PLACARD

Attach a "SELCAL INOP" placard near the SELCAL panel.

40-01-01 PASSENGER ADDRESS SYSTEM

(O)

PLACARD

Attach a "PA SYSTEM INOP" placard near Pax Address Control of the audio panels.

Crew must open cockpit doors and brief passengers directly on normal and emergency procedures.

40-03 CABIN CHIMES

(O)

PLACARD

Attach a "CABIN CHIMES INOP" placard to the instrument panel.

Crew must announce to the passengers when the FASTEN SEAT BELTS and NO SMOKING signs are to be observed.

25 EQUIPMENT/FURNISHINGS

10-03-01 FLIGHT CRUE SEAT-MANUAL VERTICAL ADJUSTMENT

PLACARD

Not Required.

Ensure that seat(s) are securely locked in position.

20-02-01 PASSENGER SEAT-RECLINE MECHANISM

(M)

PLACARD

Not Required.

Secure the seat back in the full upright position per acceptable shop practice to ensure that the seat back is immovable.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. MOPS-7	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

20-02-03 PASSENGER SEAT-ARMREST (M)

PLACARD

Not Required.

Secure the seat back in the full upright position per acceptable shop practice to ensure that the seat back is immovable.

20-05 CABIN UNDERSEAT STORAGE DOOR/DRAWER (M)

PLACARD

Attach a "DO NOT STOW BAGGAGE UNDER THIS SEAT" placard to the seat(s) with the inoperative Restraining Bar.

Inform crew and passengers of the inoperative underseat baggage storage equipment and the seats affected.

20-06 CABIN AND GALLEY STORAGE COMPARTMENT (M)

Refer to an Approved Cargo Loading Manual, Cargo Handling Manual, or Weight and Balance Document for acceptable cargo loading and restraint alternatives.

20-07 INTERIOR CABINET DOOR/DRAWER/LATCH (M)

Refer to an Weight and Balance Document for acceptable cargo loading and restraint alternatives.

26 FIRE PROTECTION

12-01 AUXILIARY POWER UNIT (APU) FIRE DETECTION SYSTEM (M)

PLACARD

1. Attach an "APU INOP" placard to the APU control panel.
2. Attach an "APU INOP" placard to the APU maintenance control unit in the tailcone.
3. Attach an "INOP" placard over the APU GEN Switch on the Electrical Control Panel.
4. Attach an "INOP" placard over the APU BLEED Switch on the Pressurization Control Panel.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-8
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

A. Deactivate the APU as follows:

1. Pull the APU GEN, CMPTR and DET [FIRE] circuit breakers located on the copilot's circuit breaker panel in the APU group.
2. Install lockout collars on the circuit breakers to secure open.
3. Disconnect the APU starter/generator cable (P-SBK0001) from the aft RH power distribution panel (A50) at terminal T9. Insulate and secure cable end.

21-02 AUXILIARY POWER UNIT (APU) FIRE EXTINGUISHER BOTTLE (M)

PLACARD

1. Attach an "APU INOP" placard to the APU control panel.
2. Attach an "APU INOP" placard to the APU maintenance control unit in the tailcone.
3. Attach an "INOP" placard over the APU GEN Switch on the Electrical Control Panel.
4. Attach an "INOP" placard over the APU BLEED Switch on the Pressurization Control Panel.

A. Deactivate the APU as follows:

1. Pull the APU GEN, CMPTR and DET [FIRE] circuit breakers located on the copilot's circuit breaker panel in the APU group.
2. Install lockout collars on the circuit breakers to secure open.
3. Disconnect the APU starter/generator cable (P-SBK0001) from the aft RH power distribution panel (A50) at terminal T9. Insulate and secure cable end.

28 FUEL

40-04 FUEL USED RESET BUTTON

(O)

Attach a "FUEL USED RESET BUTTON INOP" to the instrument panel.

42-01 RIGHT WING FUEL PROBE

(O)

Ensure that only one fuel probe is inoperative. If FUEL QTY FAULT message is accompanied by amber dashes in the fuel quantity display, more than one fuel probe is inoperative for the given side and takeoff is prohibited.

Verify both wing tanks are filled with fuel before flight. During flight, monitor fuel quantity burn using information from the FMS display.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-9
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

42-02 LEFT WING FUEL PROBE

(O)

Ensure that only one fuel probe is inoperative. If FUEL QTY FAULT message is accompanied by amber dashes in the fuel quantity display, more than one fuel probe is inoperative for the given side and takeoff is prohibited.

Verify both wing tanks are filled with fuel before flight. During flight, monitor fuel quantity burn using information from the FMS display.

31 INDICATING/RECORDING SYSTEMS

60-03-03 DISPLAY UNIT CONTROLLER-FMS SWITCH

(O)

PLACARD

Attach an "FMS SWITCH INOP" placard in close proximity to the FMS switch(es) on the Display Unit Controller(s) on the instrument panel.

With inoperative FMS Switch(es), FMS data can not be selected to be displayed on the PFD's. However, the MFD Map Mode is the power- up default display on the MFD. Waypoints, airports and nav aids may be selected by the MFD bezel controller buttons. The crew should reference the MFD for FMS data.

60-04 MINIMUS KNOB

(O)

PLACARD

Attach an "INOP" placard above the affected MINUMUMS Knob(s).

With the latest weather report issued by the weather reporting facility of the area of destination, the crew shall comply with applicable instrument approach procedures and weather minimums prescribed by the authority having jurisdiction over the airport. The pilot and copilot shall coordinate with one another on the monitoring and call outs of the altitudes and/or approach mini- mums for the approach procedure being conducted.

60-05 RA/BARO SWITCH

(O)

PLACARD

Attach an "INOP" placard above the RA/BARO Switch(es) to the appropriate Bezel Controller on the instrument panel.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-10
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

The pilot and copilot shall coordinate with one another on the monitoring and call outs of the altitudes (RA, BARO) for phase of flight being conducted (Climb, En Route, descent, Approach).

32 LANDING GEAR

40-01 BRAKE SYSTEM

(O)

Use appropriate AFM procedures and takeoff/landing (Section 5, Page 5-43 to 5-148) distances for planning and flight operations.

33 LIGHTS

20-03 PASSENGER LIGHTED INFORMATION SIGN

(O)

PLACARD

Attach an "INOP" placard to the area of the FASTEN SEAT BELT NO SMOKING Switch on the instrument panel.

A. Ensure passengers are adequately briefed on smoking and seat belt procedures as follows:

1. Brief passengers on proper seat belt operation. This is to include the required phases of flight they must be worn (takeoff, turbulence, landing).
2. Passengers must be informed that smoking on board the aircraft during certain phases (takeoff, turbulence, landings) of flight is prohibited until advised otherwise.

40-08 LANDING/RECOGNITION LIGHT LENS

(M)

Attach a "RECOGNITION LIGHT INOP" placard to the instrument panel.

1. Deactivate the landing/recognition light per one (1) of the following options below. Any one (1) of the three (3) options can be selected at the operators discretion.

OPTION 1: (This option leaves both taxi lights and the off-side landing/recognition light operative.) Remove lamps from the lamps holder. Retain lamps for later use. Attach a "L or R LDG/RECOG LIGHTS INOP" placard to the instrument panel for the inoperative landing/recognition lights.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13		PAGE NO: PAG. MOPS-11	
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY				
	2. NUMBER INSTALLED				
	3. NUMBER REQUIRED FOR DISPATCH				
	4. REMARKS AND EXCEPTIONS				

OPTION 2: (This option leaves both taxi lights and the off-side landing/recognition light operative.) Leave lamps installed. Access the affected rear Power Distribution Panel (PDP) and pull the LLDG or RLDG circuit breaker for the side with the damaged lens. Attach a "L or R LDG/RECOG LIGHTS INOP" placard to the instrument panel for the inoperative landing/ recognition lights.

OPTION 3: (This option leaves the off-side landing/recognition and taxi lights operative. However, the on-side taxi light will be inoperative.) Leave lamps installed. Pull and collar the affected flight deck circuit breaker, L or R TAXI/LDG CTRL. Attach a "L or R LDG/ RECOG LIGHTS INOP" and "L or R TAXI LIGHT INOP" placard to the instrument panel for the inoperative taxi and landing/recognition lights.

2. Ensure that no peripheral damage has been made to the fairing structure.
3. Using the diagram/template provided, fabricate a cover using .032 2024-0 aluminum (or equivalent).
4. Remove the existing five screws corresponding to the lens cover attach points: three (3) forward of the lens and two (2) aft. Retain screws for later use.
5. Slide the temporary cover in place, between the existing fairing and over the cracked/shattered lens (Figure 1).
6. Attach the temporary lens cover with AN525R10-10 screws (or equivalent).
7. Using high-speed tape such as 425 - 2.000, AL FOIL 3M Scotch Brand Tape (or equivalent), seal the gaps between the cover and the fairing.
8. Inspect the temporary cover prior to flight.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-12
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

34 NAVIGATION

16-01 ALTITUDE ALERTING SYSTEM

(O)

PLACARD

Attach an "ALTITUDE ALERT SYSTEM INOP" placard to the instrument panel.

A. With Altitude Alerting System Inoperative:

The pilot and copilot shall coordinate with one another on the monitoring and callouts of the altitude changes/assignments appropriate to the flight.

44-01 RADIO ALTIMETER

(O)

PLACARD

Attach a "RADIO ALTIMETER INOP" placard to the instrument panel.

A. With Radio Altimeter inoperative, the crew should be aware of the affected systems and procedures such as:

1. The radio altitude function of the gear warning system is inoperative.
2. The takeoff and landing CAS inhibit function is disabled.
3. TCAS and GPWS system will be affected.
4. Maintain a cross-check of altitude indications.
5. Set the PFD bezel mounted RA/BARO switch to indicate BARO on the PFD.
6. Use BARO minimums for approach.

44-02 TERRAIN AWARENESS AND WARNING SYSTEM

(O)

PLACARD

Not Required. A GPWS FAIL or GPWS SYS FAIL white CAS is displayed in the CAS window.

1. For low altitude awareness, use a radio altitude or BARO minimums to provide proximity to the ground by monitoring the brown shading on the altitude tape (proximity to the ground is illustrated as brown shading once the RA is within 550 feet). This also provides an aural voice alert.
2. For low altitude alert, use the ASEL function of the flight director to help maintain altitude.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-13
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

44-02-01 TERRAIN AWARENESS AND WARNING SYSTEM-MODES 1-4

(O)

PLACARD

Attach a "GPWS MODE -- INOP" placard to the instrument panel.

1. For low altitude awareness, use a radio altitude or BARO minimums to provide proximity to the ground by monitoring the brown shading on the altitude tape (proximity to the ground is illustrated as brown shading once the RA is within 550 feet). This also provides an aural voice alert.
2. For low altitude alert, use the ASEL function of the flight director to help maintain altitude.

44-02-04 TERRAIN AWARENESS AND WARNING SYSTEM-ADVISORY CALLOUT

(O)

PLACARD

Attach a "GPWS ADVISORY CALLOUTS INOP" placard to the instrument panel.

The crew shall closely monitor altitudes (RA, MDA, BARO) and provide appropriate callouts of altitude changes, height above terrain, and minimums appropriate to the phase of flight. For low altitude awareness, monitor the brown shading on the altitude tape (proximity to the ground is illustrated as brown shading once the RA is within 550 feet).

44-02-05 TERRAIN AWARENESS AND WARNING SYSTEM-WINDSHEAR MODE

(O)

PLACARD

Not Required. A WINDSHEAR FAIL white CAS is displayed in the CAS window.

1. Collect weather data from the appropriate sources for possible windshear conditions and/or reports in area of operation.
2. Closely monitor the weather radar for storm intensity levels.
3. Review windshear avoidance and windshear recovery procedures.

45-02 TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS II)

(M)

PLACARD

Attach a "TCAS INOP" placard to the instrument panel.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-14
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

A. Deactivate the TCAS system as follows:

1. Pull the TCAS circuit breaker located on the copilot's circuit breaker panel in the INSTRUMENTS/INDICATIONS group.
2. Install a lockout collar on the circuit breaker to secure open.

45-02-02 TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS II) - RESOLUTION ADVISORY (RA) DISPLAY SYSTEM (O)

PLACARD

Attach a "TCAS INOP" placard to the instrument panel.

A. Deactivate the TCAS system as follows:

1. Pull the TCAS circuit breaker located on the copilot's circuit breaker panel in the INSTRUMENTS/INDICATIONS group.
2. Install a lockout collar on the circuit breaker to secure open.

45-02-03 TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM (TCAS II) – TRAFFIC ALERT DISPLAY SYSTEM (O)

PLACARD

Attach a "TCAS INOP" placard to the instrument panel.

A. Deactivate the TCAS system as follows:

1. Pull the TCAS circuit breaker located on the copilot's circuit breaker panel in the INSTRUMENTS/INDICATIONS group.
2. Install a lockout collar on the circuit breaker to secure open.

60-01 FLIGHT MANAGEMENT SYSTEM

(O)

PLACARD

Attach a "FMS INOP" placard to the instrument panel.

Alternate flight planning procedures are established and used.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-15
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

Other navigation equipment (ADF, VOR, DME, TACAN) appropriate to the ground facilities along the intended route to be flown along with all pertinent aeronautical charts may be utilized for flight planning.

35 OXYGEN

00-04 OXYGEN SYSTEM DISCHARGE INDICATOR

(O)

A. Determine adequate supply of oxygen prior to flight as follows:

1. From the OXY QTY (EICAS) determine oxygen quantity available.
2. Using the oxygen quantity mission planning table, determine if sufficient oxygen is available for the intended flight.

20-01-02PASSENGER OXYGEN SYSTEM-DROP OUT PANEL

(M)

PLACARD

Attach a "DO NOT OCCUPY" placard to the affected seat.

36 PNEUMATIC

00-01 BLEED AIR CONTROL SYSTEM

(O)

PLACARD

Attach an appropriate "L or R BLEED SWITCH INOP" placard to the instrument panel.

A. Check Emergency Pressurization Valve as follows:

1. With both engines running, turn the operative L or R BLEED switch on the pressurization control panel to ON.

NOTE: Emergency pressurization cannot be activated if the BLEED switch is in the OFF position or electrical power is not available.

2. Depress the EMER PRESS switch.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-16
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

When emergency pressurization is activated:

- The “ON” illuminates (operative side) in the EMER PRESS switch.
- An amber “L or R EMER PRESS ON” message is posted on the CAS.
- The emergency pressurization valve opens allowing low pressure bleed-air to be routed directly into the cabin.

38 WATER/WASTE

10-01 PORTABLE WATER SYSTEM

(M)

A. Disable Vanity Sink Water Tank Heater as follows:

1. Remove armrest pad (attached with hook and loop).
2. Remove the water tank closeout by pulling straight forward.
3. Ensure the water tank and sink plumbing does not leak.
4. Disconnect, bag and stow the electrical connector from the top of the water tank.
5. Ensure the sink water pump and sink drain operate properly.
6. Install the water tank closeout and armrest pad.

PLACARD

Attach a “SINK INOPERATIVE - DO NOT USE” placard near the Lavatory sink.

A. Disable Vanity Sink Water System as follows:

1. Remove armrest pad (attached with hook and loop).
2. Remove the water tank closeout by pulling straight forward.
3. Disconnect, bag and stow the electrical connector from the top of the water tank.
4. Disconnect the straps that secure the tank.
5. Disconnect the water hose quick-disconnect from of the tank.
6. Remove the water tank.
7. Purge the water tank.
8. Purge any water from lines.
9. Remove any water from sink.
10. Install the water tank in the aircraft.
11. Install the water tank closeout and armrest pad.
12. Pull the LAV SINK circuit breaker located on the pilot’s circuit breaker panel CABIN group.
13. Install a lockout collar on circuit breaker to secure open.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-17
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

30-01 LAVATORY WASTE SYSTEM

(M)

PLACARD

Attach a "TOILET SERVICING INOP" placard near the Toilet Servicing Panel.

1. Ensure the Toilet System components do not leak.
2. Ensure the Toilet System is not in immediate need of servicing.
3. Pull the TOILET SRV circuit breaker located on the Aft Circuit Breaker Panel in the tailcone.
4. Install a lockout collar on circuit breaker to secure open.

PLACARD

Attach a "TOILET INOPERATIVE - DO NOT USE" placard in a conspicuous location near the toilet.

1. Ensure the Toilet System components do not leak.
2. Disconnect, bag and stow the connector supplying power to the Toilet Timer Assembly.
3. Secure the toilet lid closed.

49 AIRBORN AUXILIARY

00-01 AUXILIARY POWER UNIT

(M)

PLACARD

A. Attach the following placards:

1. Attach an "APU INOP" placard to the APU control panel.
2. Attach an "APU INOP" placard to the APU maintenance control unit in the tailcone.
3. Attach an "INOP" placard over the APU GEN Switch on the Electrical Control Panel.
4. Attach an "INOP" placard over the APU BLEED Switch on the Pressurization Control Panel.

A. Deactivate the APU as follows:

1. Pull the APU GEN circuit breaker located on the copilot's circuit breaker panel in the APU group.
2. Install a lockout collar on the circuit breaker to secure open.
3. Disconnect the APU starter/generator cable (P-SBK0001) from the aft RH power distribution panel (A50) at terminal T9. Insulate and secure cable end.



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-18
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

73 ENGINE/FUEL CONTROL

31-01 FUEL FLOW INDICATOR

(O)

PLACARD

Attach a "FUEL FLOW INDICATOR INOP" placard to the instrument panel.

Use an appropriate operational planning form to determine the aircraft weight for takeoff, climb, cruise, descent and landing. Use these weights to calculate the associated performance.

76 ENGINE CONTROLS

01-01 ENGINE SYNCHRONIZER SYSTEM

(M)

PLACARD

Attach an "ENGINE SYNC INOP" placard to the instrument panel.

1. Pull the SYNC SW circuit breaker located on the pilot's circuit breaker panel in the ENGINE group.
2. Install a lockout collar on the circuit breaker to secure open.

77 ENGINE INDICATING

41-01 ENGINE VIBRATION MONITOR SYSTEM

(M)

PLACARD

Attach an "ENGINE CONDITION TREND MONITORING SYSTEM INOP" placard to the instrument panel.

78 EXHAUST

30-01-01 THRUST REVERSER SYSTEM-3DEACTIVATION PINS UTILIZED

(M)

PLACARD


Attach a "THRUST REVERSER SYSTEM INOP" placard to the instrument panel or thrust reverser levers.

MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45	ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-19
SYSTEM SEQUENCE & NUMBERS	1. REPAIR CATEGORY	
	2. NUMBER INSTALLED	
	3. NUMBER REQUIRED FOR DISPATCH	
	4. REMARKS AND EXCEPTIONS	

1. Ensure that the left and right Thrust Reversers are locked in their stowed forward thrust positions.
2. Pull STOW and DEPLOY circuit breakers located on the pilot's circuit breaker panel in the ENGINE group [L REVERSER].
3. Pull STOW and DEPLOY circuit breakers located on the copilot's circuit breaker panel in the ENGINE group [R REVERSER].
4. Install a lockout collar on each circuit breaker to secure open.
5. Install three (3) service bulletin deactivation pins into each of the engine thrust reverser assemblies (six (6) pins total) and secure with appropriate screws. Refer to Figure 1 for the location to install the pins and screws.

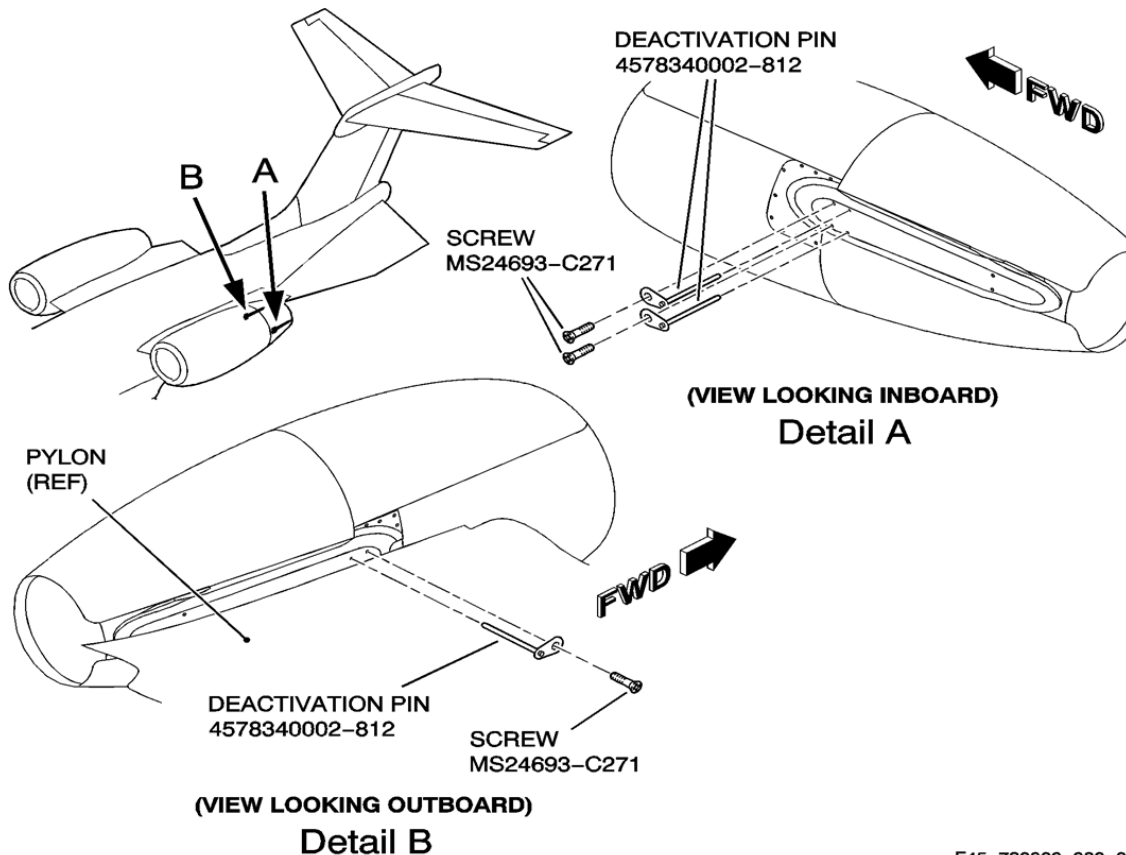



MINIMUM EQUIPMENT LIST

Aerolíneas Ejecutivas, S.A. de C.V.
Aeropuerto Internacional de Toluca
Ex-hacienda Canalejas
Calle 2 lotes 14 - 18
C.P. 50200 Toluca, Edo. De México
Lada (01-722) 279-1606
Fax: (01 722) 279-1658

AIRCRAFT: LEARJET 45		ISSUE DATE: 25-FEB-13	PAGE NO: PAG. MOPS-20
SYSTEM SEQUENCE & NUMBERS	1.REPAIR CATEGORY		
	2. NUMBER INSTALLED		
	3. NUMBER REQUIRED FOR DISPATCH		
	4. REMARKS AND EXCEPTIONS		

30-01-02 THRUST REVERSER SYSTEM-4DEACTIVATION PINS UTILIZED (M)

PLACARD

Attach a "THRUST REVERSERS INOP" placard to the instrument panel.

A. Deactivate the thrust reverser as follows:

1. Pull the thrust reverser "DEPLOY" and "STOW" circuit breakers located in the ENGINE/REVERSER group of the pilot's and copilot's circuit breaker panels.
2. Install lockout collars on the circuit breakers to secure in the open position.
3. With thrust reversers locked in the forward thrust position, install 4 safety pins to secure reverser doors in the stowed position.