

The VPs Studio Windows Printer

Print to your VPs inkjet from any Windows program — Word, BarTender, Stamps.com, FlexMail.

Part of the VP Studio Suite, the VPs Studio printer installs like any other Windows printer. Whatever you print to it opens in a placement popup that shows exactly where the print heads will put ink on the piece — drag the bands, or let it place them — then press Print and the machine takes over. No exports, no file conversions, no learning a new program: the software your shop already runs is the software that drives the printer.

PRINT FROM ANYTHING


- A standard Windows printer — anything that prints, prints to the VPs.
- Your media sizes appear in every program's paper list: envelopes, postcards, seed packets, stakes and labels from a built-in trade catalog of about 55 sizes, plus any size you add.
- Copies come across from the program; change the number in the popup and that is what prints.
- Multi-page documents are placed once — every page and every copy reuses the layout.

PLACE IT, SEE IT, PRINT IT

- Draggable band overlays with true per-pen heights and stitch seams from your printer's own calibration.
- Auto-place per head or all at once; nudge arrows; live mount-edge readouts so the head can be set to the number on screen.
- Coverage and seam warnings before a single piece is fed.
- Placements are remembered — the same piece reopens with the bands where you left them.
- Job and ink profile picked right in the popup; works with the printer off until it is time to print.

PRODUCTION YOU CAN TRUST

- The Windows print queue counts pieces the printer has physically printed, not pages queued.
- Identical copies transfer once and print many; huge jobs stream instead of loading up front.
- Cancel from the popup or the Windows queue and the machine stops promptly and cleanly.
- Live belt speed in the popup, with an honest "(last)" marker when a reading is stale.
- Smart purging and keep-alive jetting protect the pens on every print.

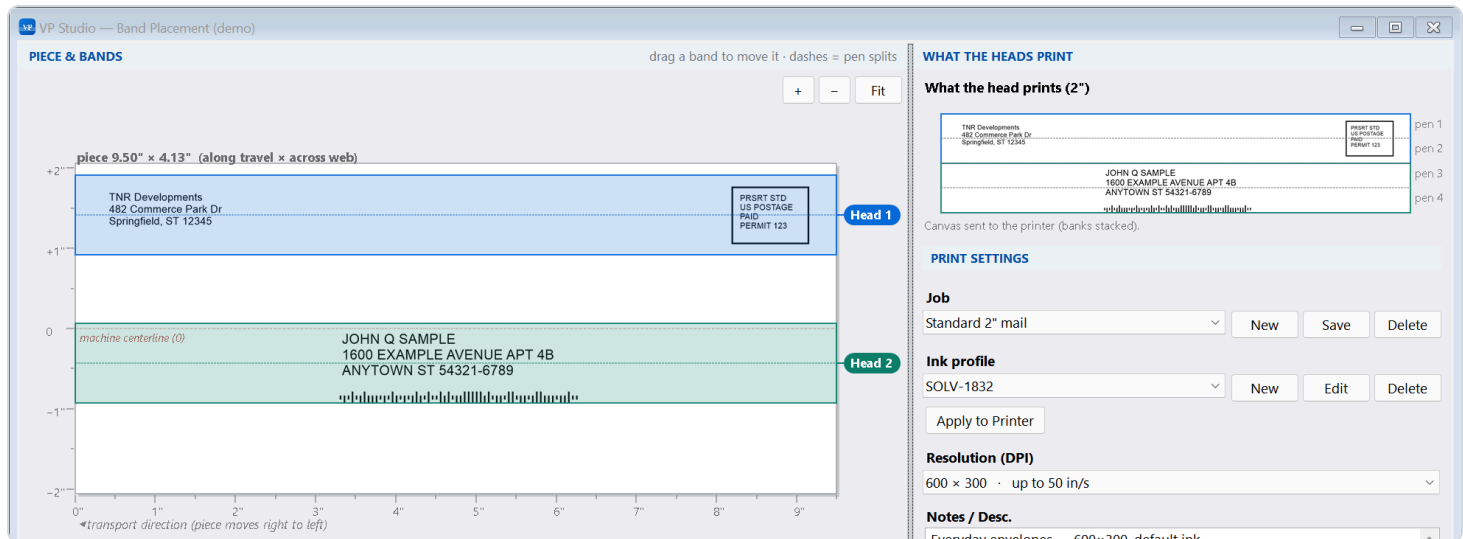

The placement popup: the piece with its head bands on the left, what each head will actually print on the right, and the job, ink profile and resolution beside it. Drag a band, or press Auto-place all.

Try it before a printer is connected — every install includes a free mock mode: print from your own programs and watch the pieces come out on screen, piece by piece, exactly as they would print.

The VPs Studio Windows Printer — how a print goes

FROM FILE > PRINT TO PRINTED PIECES

- 1 Pick the VPs Studio printer** in any program's print dialog and choose the piece size from the paper list — the same list your whole shop shares.
- 2 The placement popup opens.** Drag the head bands onto the print, or press Auto-place all. Seam and coverage warnings appear as amber strips while you work.
- 3 Set the job and ink profile** in the popup if they need changing, check the copies, and press Print. The printer buffers the pieces and waits for the feeder.
- 4 Feed.** The queue counts pieces as the printer confirms them; closing the popup or cancelling the job stops the machine cleanly.

Open in Studio

One button hands the artwork, size and placement to VP Studio — as an editable import or a ghosted reference — when a job outgrows the driver path. (FULL edition.)

The tray companion

Job bundles (resolution + ink profile), the ink profile editor, maintenance purges, relay tests, a bench print trigger and production history — one right-click on the tray icon.

The print service

Starts with Windows and owns the printer for both the driver and Studio, so jobs never fight over the hardware — and it lets go of the port when idle so XiJet's own utilities still work.

BUILT FOR THE SHOP FLOOR

Real geometry, everywhere

Bands, pen stitch seams and mount-edge readouts come from your printer's own configuration — what you see in the popup is what the heads print, to 1/600". Pen stitching is aligned from a scanned target in Studio and lives in the head — every driver print benefits.

Honest production numbers

A piece counts as printed when the printer's completion counter says so. Every run — driver or Studio — is appended to a production history you can open in Excel.

Any pen arrangement — automatically

The suite reads the pen layout from the board's own calibration and adapts: one or two headboards, split zones, any stagger.

Runs on a plain Windows PC

One signed installer carries the USB driver and runtime — a fresh PC needs nothing else. Windows 10/11, 64-bit. Dealer branding and a machine-wide media list are set at install.


Painless updates

Daily update checks with release notes, checksum-verified installs, and one-click reinstall of the previous version.

An edition that fits


DRIVER-ONLY licensing covers everything on this sheet. Upgrade to FULL any time for the VP Studio design, data and production pages — the key goes on the same install.

ALSO IN THE BOX

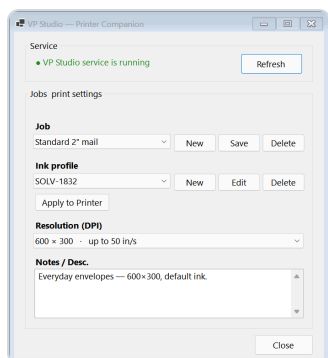

The tray companion

Right-click the tray icon for the job bundle and ink profile the driver will use, the resolution, maintenance purges, relay tests, a bench print trigger and the production history — with a live service and printer status line.

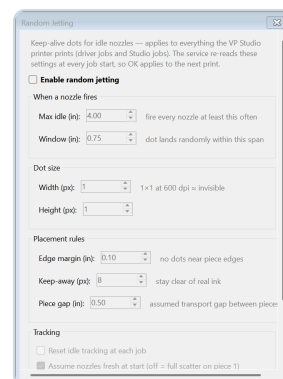

Pens that stay ready

Random keep-alive jetting fires idle nozzles with dots too small to see, on every print, driver and Studio alike; smart purge bars ink only the nozzle rows that have gone stale. Set once, forgotten.

Dealer-purchased system? Your dealer handles licensing and support. Direct: TNR Developments — we build, ship, and support the suite ourselves.