



Receiver PASS/FAIL Counts

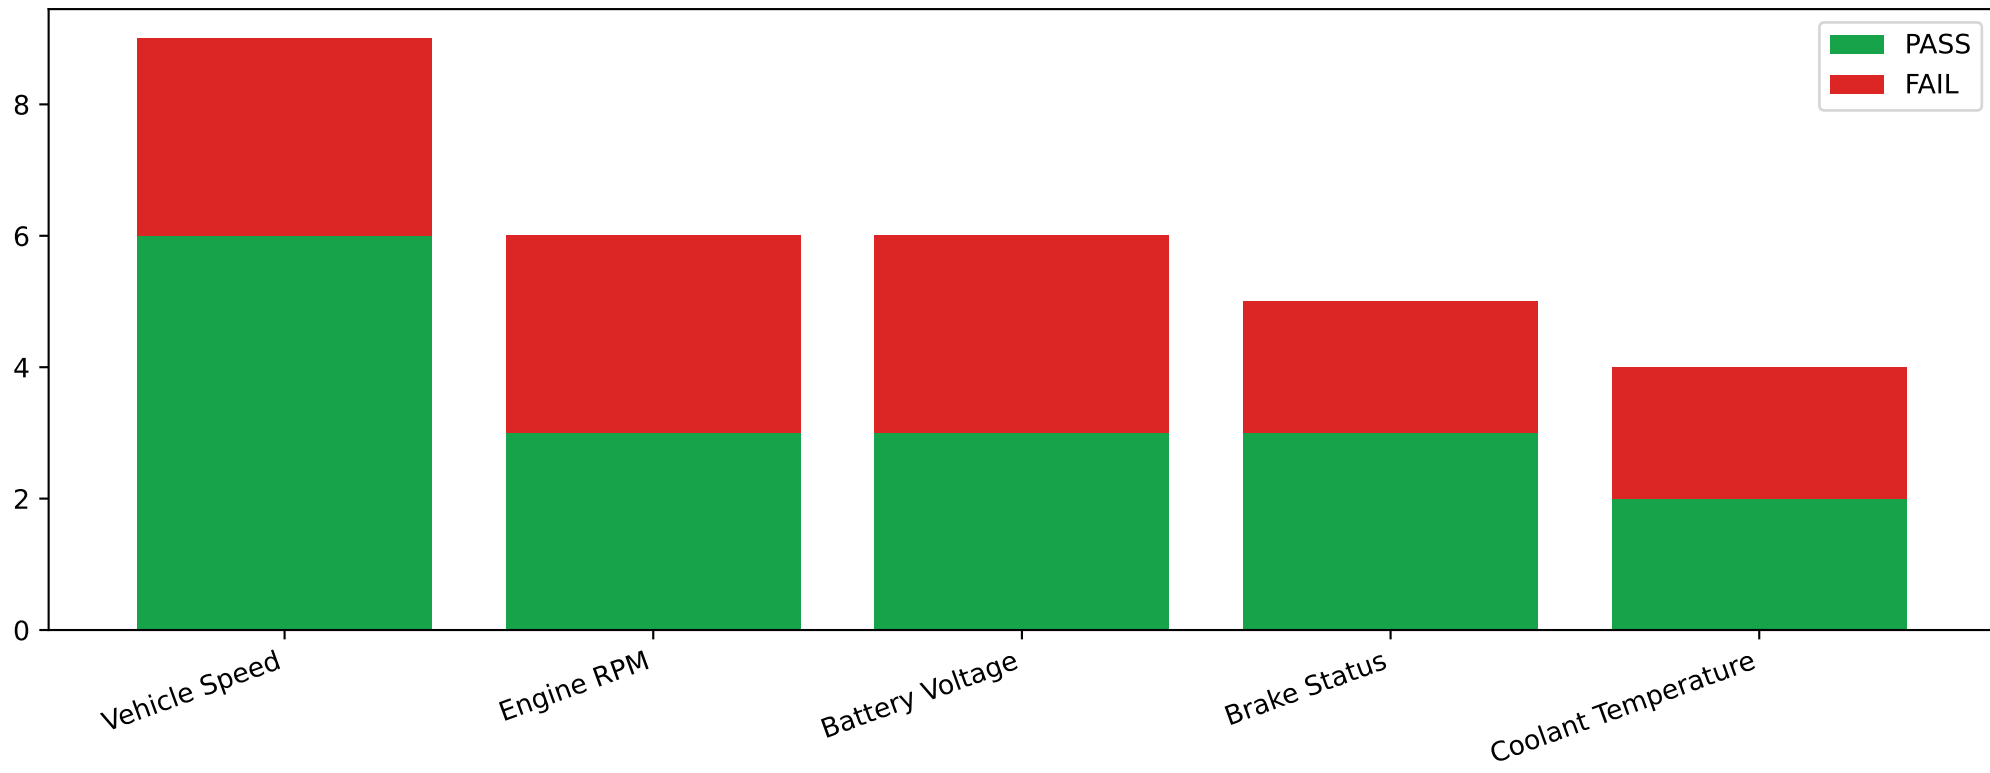

Observed Signal Values

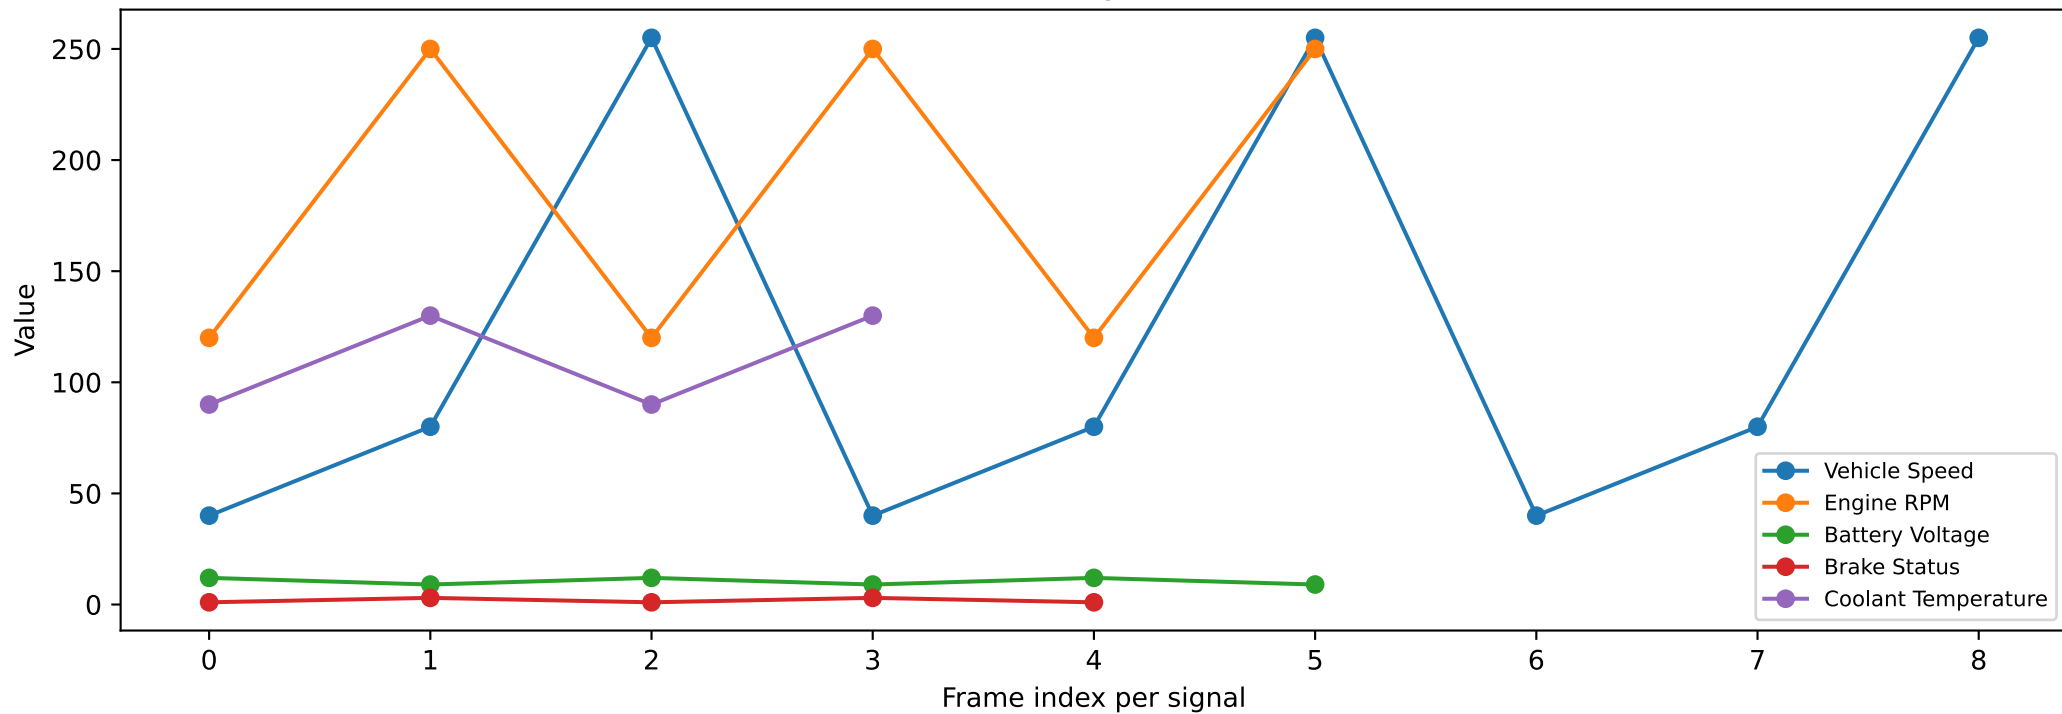

Page 2: Threshold Table

CAN ID	Signal	PASS threshold	Warning threshold	FAIL threshold	Example PASS	Example FAIL
0x100	Vehicle Speed	0 <= speed <= 250	Warning ON if speed < 0	speed < 0 or speed > 250	40, 80	255
0x200	Engine RPM	0 <= rpm <= 200	N/A	rpm > 200	120	250
0x300	Battery Voltage	10 <= voltage <= 14	N/A	voltage < 10 or voltage > 14	12	9
0x400	Brake Status	brake is 0 or 1	N/A	brake is not 0 or 1	1	3
0x500	Coolant Temperature	70 <= temp <= 110	N/A	temp < 70 or temp > 110	90	130