



Receiver PASS/FAIL Counts

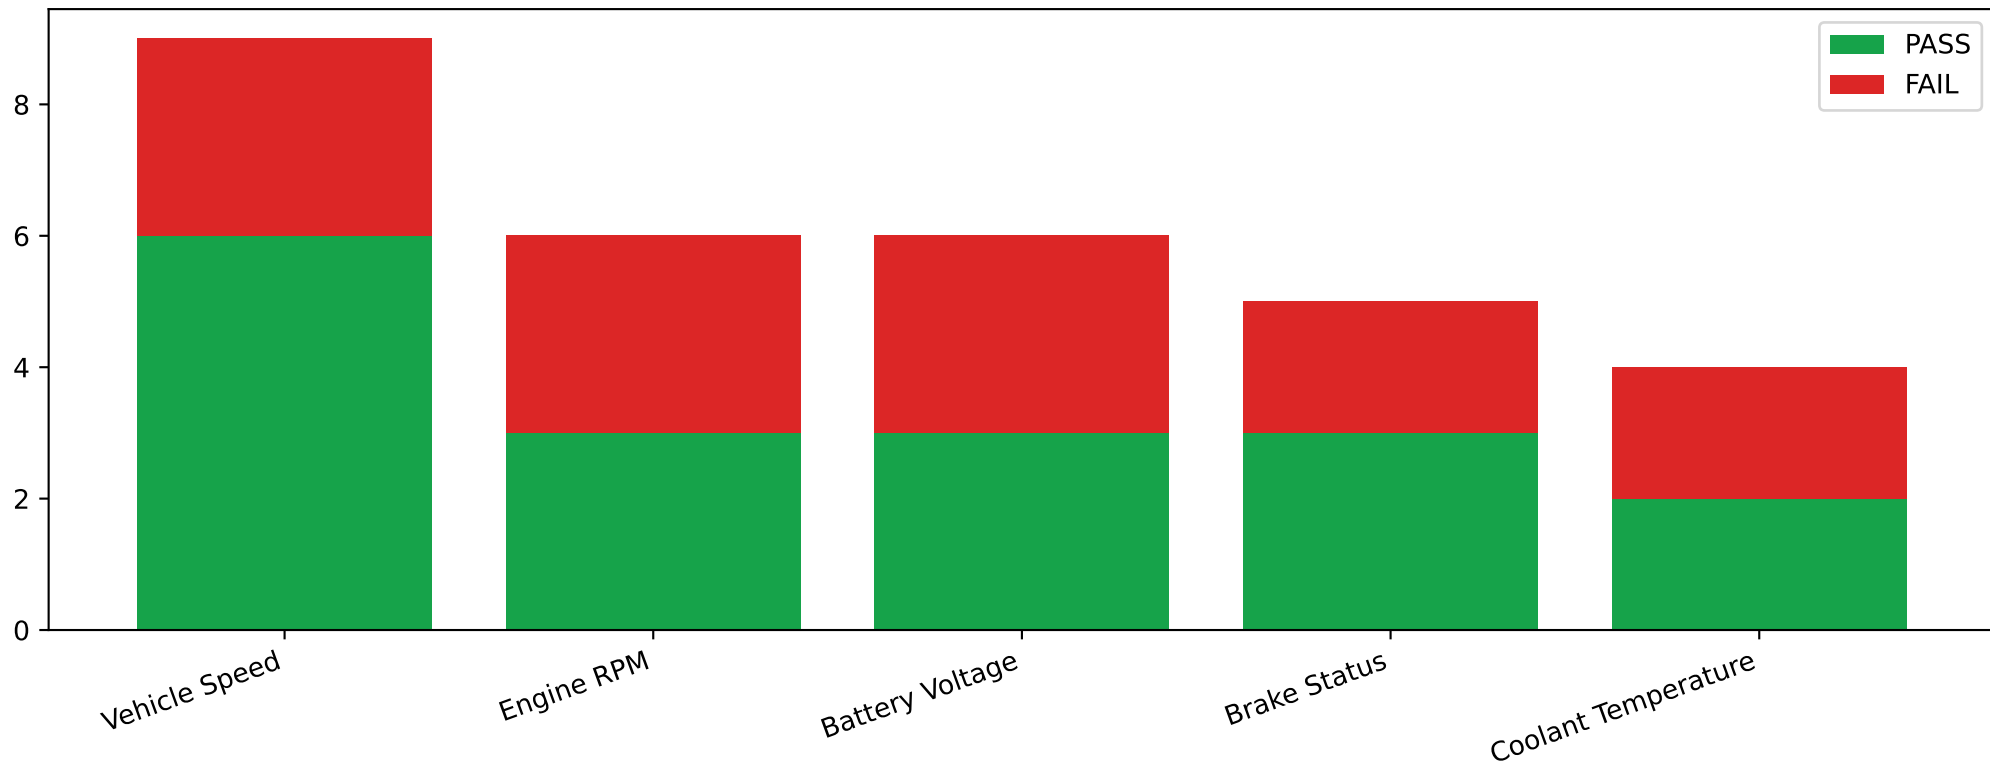

Observed Signal Values

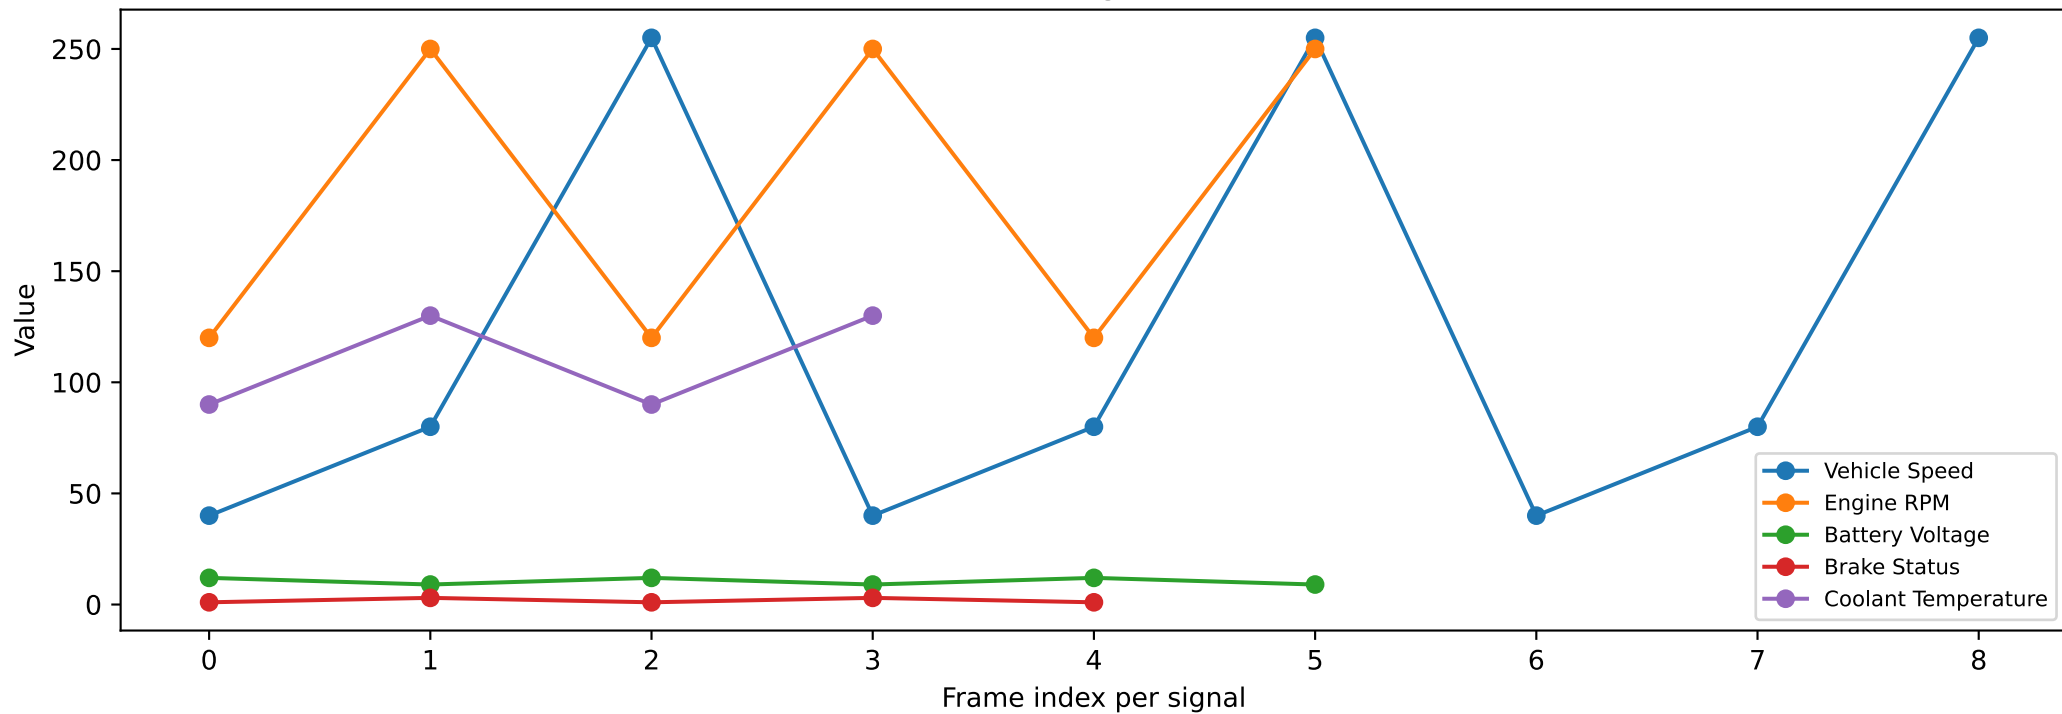

## Page 2: Threshold Table

| CAN ID | Signal              | PASS threshold      | Warning threshold       | FAIL threshold               | Example PASS | Example FAIL |
|--------|---------------------|---------------------|-------------------------|------------------------------|--------------|--------------|
| 0x100  | Vehicle Speed       | 0 <= speed <= 250   | Warning ON if speed < 0 | speed < 0 or speed > 250     | 40, 80       | 255          |
| 0x200  | Engine RPM          | 0 <= rpm <= 200     | N/A                     | rpm > 200                    | 120          | 250          |
| 0x300  | Battery Voltage     | 10 <= voltage <= 14 | N/A                     | voltage < 10 or voltage > 14 | 12           | 9            |
| 0x400  | Brake Status        | brake is 0 or 1     | N/A                     | brake is not 0 or 1          | 1            | 3            |
| 0x500  | Coolant Temperature | 70 <= temp <= 110   | N/A                     | temp < 70 or temp > 110      | 90           | 130          |