




Switch Matrix Test Rig

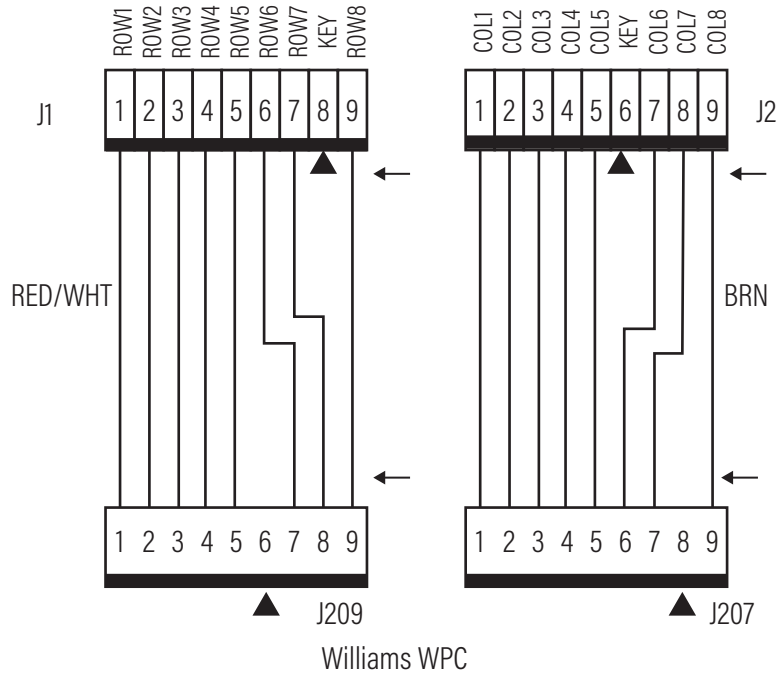


Switch Matrix Test Rig

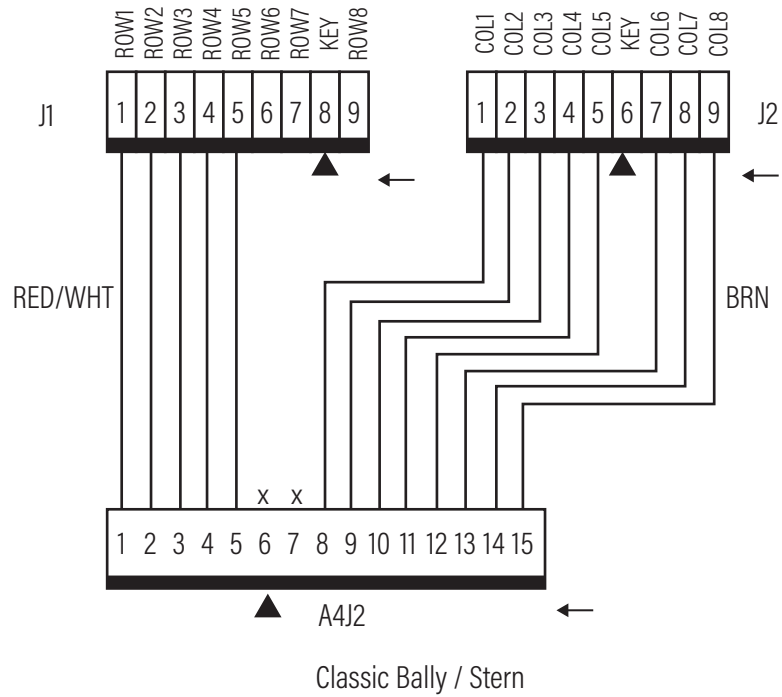

Switch Matrix Test Rig

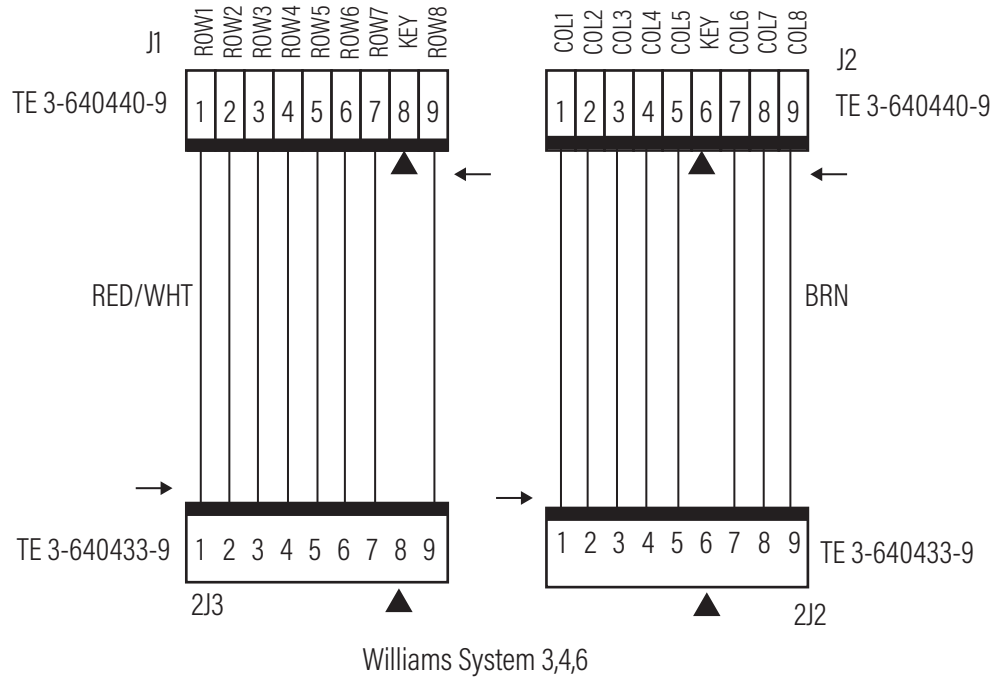


Switch Matrix Test Rig

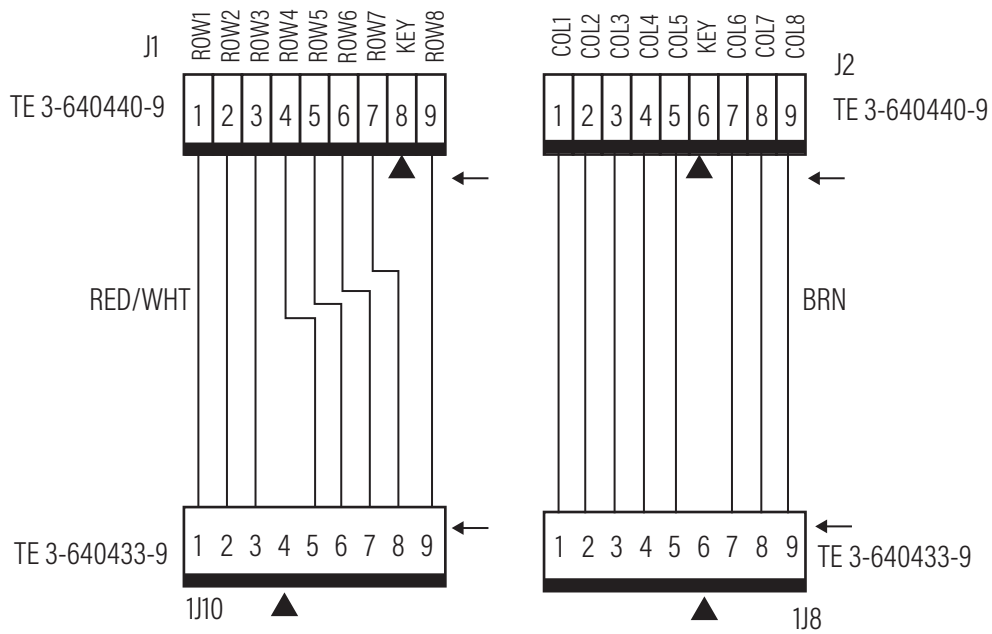

Williams System 11 / Data East

Switch Matrix Test Rig

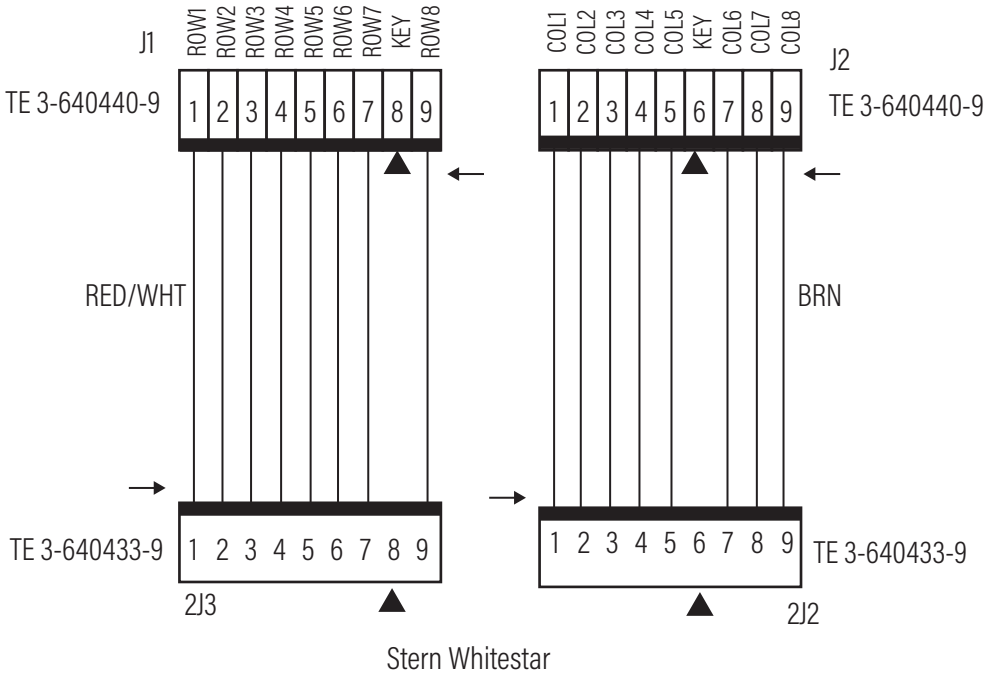

ACDC by Stern

1 SW#: 1 (A)C/DC	9 UNUSED	17 SW#: 33 L. LOOP SPINNER	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 A(C)/DC	10 SW#: 18 TROUGH #4 LEFT	18 SW#: 34 L. RAMP (L) STANDUP	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 AC(/)DC	11 SW#: 19 TROUGH #3	19 SW#: 35 L. RAMP (R) STANDUP	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 AC(D)C	12 SW#: 20 TROUGH #2	20 SW#: 36 BELL STANDUP	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 AC/D(C)	13 SW#: 21 TROUGH #1 RIGHT	21 SW#: 37 TOP EJECT	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 (R)OCK	14 SW#: 22 TROUGH JAM	22 SW#: 38 LEFT TOP LANE	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 R(O)CK	15 SW#: 23 SHOOTER LANE	23 SW#: 39 CENTER TOP LANE	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 RO(C)K	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 RIGHT TOP LANE	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

ACDC by Stern

Bank 2

1 SW#: 9 ROC(K)	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 R. RAMP ENTER	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 (T.)N.T.	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 R. RAMP STANDUP	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 T.(N.)T.	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 R. RAMP EXIT	27 SW#: 59 RIGHT LOOP	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 T.N.(T.)	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 LEFT LOOP	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 L. RAMP EXIT	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 CANNON EJECT	29 SW#: 61 CANNON HOME	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 L. RAMP ENTER	14 SW#: 30 LEFT POP BUMPER	22 UNUSED	30 SW#: 62 CANNON MARK	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 SW#: 48 SKILL SHOT	32 SW#: 64 FIRE BUTTON	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Adventures of Rocky Bullwinkle by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 LAUNCH BUTTON	17 SW#: 17 #1 DROP TAR. TOP	25 SW#: 25 "B" STAND-UP TARGET	33 SW#: 33 LEFT ORBIT BOTTOM	41 SW#: 41 LEFT TOP LANE	49 SW#: 49 RIGHT RAMP ENTR.	57 UNUSED
2 SW#: 2 4TH COIN	10 SW#: 10 OUTHOLE	18 SW#: 18 #2 DROP TAR.	26 SW#: 26 "O" STAND-UP TARGET	34 SW#: 34 LEFT ORBIT TOP	42 SW#: 42 CENTER TOP LANE	50 SW#: 50 RIGHT RAMP EXIT	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 #3 DROP TAR.	27 SW#: 27 "M" STAND-UP TARGET	35 SW#: 35 RIGHT ORBIT TOP	43 SW#: 43 RIGHT TOP LANE	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 #4 DROP TAR.	28 SW#: 28 "B" STAND-UP TARGET	36 SW#: 36 RIGHT ORBIT BOTTOM	44 SW#: 44 LEFT TURBO BUMPER	52 SW#: 52 VUK	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 #5 DROP TAR. BOTTOM	29 SW#: 29 SUPER VUK	37 SW#: 37 UNDER TROUGH	45 SW#: 45 CENTER TURBO BUMPER	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 HAT TARGET BOTTOM	30 SW#: 30 LEFT SLINGSHOT	38 SW#: 38 RIGHT SLINGSHOT	46 SW#: 46 RIGHT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 HAT TARGET MIDDLE	31 SW#: 31 LEFT RETURN	39 SW#: 39 RIGHT RETURN	47 SW#: 47 LEFT RAMP ENTR.	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 HAT TARGET TOP	32 SW#: 32 LEFT OUTLANE	40 SW#: 40 RIGHT OUTLANE	48 SW#: 48 LEFT RAMP EXIT	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Algar by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 LEFT 3-BANK DROP TARGET SERIES	25 SW#: 25 "O" ROLLOVER	33 SW#: 33 RIGHT TARGET CHAMBER	41 SW#: 41 CENTER RIGHT 3-BANK, TARGET	49 SW#: 49 RIGHT JET BUMPER	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT KICKER	18 SW#: 18 LEFT 3-BANK STANDUP	26 SW#: 26 EJECT HOLE	34 SW#: 34 MIDDLE RIGHT STANDUP	42 SW#: 42 CENTER DROP 3-BANK, TARGET SERIES	50 SW#: 50 RIGHT LANE BUMPER CHANGE FEATURE	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT INSIDE ROLLOVER	19 SW#: 19 BALL SHOOTER	27 SW#: 27 "R" ROLLOVER	35 SW#: 35 RIGHT RETURN GATE ROLLOVER	43 SW#: 43 CENTER 3-BANK STANDUP	51 SW#: 51 PLAYFIELD TILT	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT OUTLANE	20 SW#: 20 UPPER LEFT STANDUP, LOWER	28 SW#: 28 "A" ROLLOVER	36 SW#: 36 RIGHT KICKER OUTSIDE	44 SW#: 44 LOOP GATE	52 SW#: 52 UPPER RIGHT CENTER STANDUP	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT LOOP LANE ROLLOVER	21 SW#: 21 UPPER LEFT STANDUP, UPPER	29 SW#: 29 RIGHT SPINNER	37 SW#: 37 RIGHT OUTLANE	45 SW#: 45 CENTER LEFT STANDUP	53 SW#: 53 UPPER RIGHT LOWER STANDUP	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 LEFT 3-BANK, LEFT DROP TARGET	22 SW#: 22 LEFT SPINNER	30 SW#: 30 UPPER RIGHT STANDUP, TOP	38 SW#: 38 RIGHT INSIDE KICKER	46 SW#: 46 CENTER RIGHT STANDUP	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT 3-BANK, CENTER DROP TARGET	23 SW#: 23 TOP LEFT STANDUP	31 SW#: 31 LEFT CHAMBER TARGET	39 SW#: 39 CENTER LEFT 3-BANK, TARGET	47 SW#: 47 LEFT JET BUMPER	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT 3-BANK, RIGHT DROP TARGET	24 SW#: 24 "K" ROLLOVER	32 SW#: 32 CENTER CHAMBER TARGET	40 SW#: 40 CENTER 3-BANK, CENTER TARGET	48 SW#: 48 CENTER JET BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Ali by Stern

1 SW#: 1 CHUTE	9 SW#: 2 CHUTE	17 SW#: 3 CHUTE	25 UNUSED	33 SW#: 5 BOTTOM R.O. BUTTON	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 TOP-LEFT R.O. BUTTON	10 UNUSED	18 SW#: 11 TWO MIDDLE R.O. BUTTONS	26 SW#: 12 RIGHT THUMPER	34 SW#: 13 LEFT THUMPER	42 SW#: 14 MIDDLE THUMPER	50 SW#: 15 RIGHT SLING-SHOT	58 SW#: 16 LEFT SLING-SHOT
3 UNUSED	11 UNUSED	19 SW#: 19 TOP BANK, LEFT TARGET	27 SW#: 20 TOP BANK, MID. TARGET	35 SW#: 21 TOP BANK, RIGHT TARGET	43 SW#: 22 LEFT BANK, BOTTOM TARGET	51 SW#: 23 LEFT BANK, MID. TARGET	59 SW#: 24 LEFT BANK, TOP TARGET
4 SW#: 25 STAND-UP "G" TARGET	12 SW#: 26 STAND-UP "R" TARGET	20 SW#: 27 STAND-UP "E" TARGET	28 SW#: 28 STAND-UP "A" TARGET	36 SW#: 29 STAND-UP "T" TARGET	44 SW#: 30 TOP LEFT SAUCER	52 SW#: 31 TOP MIDDLE SAUCER	60 SW#: 32 TOP RIGHT SAUCER
5 SW#: 33 OUT-HOLE	13 SW#: 34 RIGHT OUT-LANE	21 SW#: 35 LEFT OUT-LANE	29 SW#: 36 RIGHT RETURN LANE	37 SW#: 37 LEFT RETURN LANE	45 SW#: 38 MID. RIGHT SAUCER	53 SW#: 39 MID. LEFT R.O. WIRE	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Alien Poker by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 SPINNER	25 SW#: 25 KING OF DIAMONDS ROLLOVER	33 SW#: 33 LOWER RIGHT STANDUP	41 SW#: 41 5 BANK STANDUP	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 "A" DROP TARGET	18 SW#: 18 "K" DROP TARGET	26 SW#: 26 "Q" DROP TARGET	34 SW#: 34 "J" DROP TARGET	42 SW#: 42 "10" DROP TARGET	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT SPECIAL	19 SW#: 19 LOWER TOP STANDUP	27 SW#: 27 KING OF SPADES ROLLOVER	35 SW#: 35 CENTER JET BUMPER	43 SW#: 43 RIGHT LANE FLIPPER CHANGE SWITCH	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT INSIDE ROLLOVER	20 SW#: 20 TOP JOKER TARGET	28 SW#: 28 TOP RIGHT STANDUP	36 SW#: 36 LEFT JET BUMPER	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT KICKER	21 SW#: 21 TOP STANDUP	29 SW#: 29 HEART ACE EJECT HOLE	37 SW#: 37 RIGHT JET BUMPER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 LOWER LEFT JOKER TARGET	22 SW#: 22 CLUB ACE EJECT HOLE	30 SW#: 30 RIGHT JOKER TARGET	38 SW#: 38 BOTTOM JET BUMPER	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 SPADE ACE EJECT HOLE	23 SW#: 23 KING OF HEARTS ROLLOVER	31 SW#: 31 PLAYFIELD TILT	39 SW#: 39 LEFT CENTER STANDUP	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 MIDDLE LEFT JOKER TARGET	24 SW#: 24 KING OF CLUBS ROLLOVER	32 SW#: 32 RIGHT SPECIAL	40 SW#: 40 RIGHT CENTER STANDUP	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Alien Star by Gottlieb

1 SW#: 1 #1 TOP ROLLOVER	9 SW#: 10 #2 TOP ROLLOVER	17 UNUSED	25 UNUSED	33 SW#: 40 #3 TOP ROLLOVER	41 SW#: 50 #4 TOP ROLLOVER	49 UNUSED	57 UNUSED
2 SW#: 1 #1 SPOT TARGET	10 SW#: 11 #2 SPOT TARGET	18 UNUSED	26 UNUSED	34 SW#: 41 #3 SPOT TARGET	42 SW#: 51 #4 SPOT TARGET	50 UNUSED	58 UNUSED
3 SW#: 2 #5 SPOT TARGET	11 SW#: 12 RIGHT OUTSIDE ROLLOVER	19 UNUSED	27 UNUSED	35 SW#: 42 RIGHT RETURN ROLLOVER	43 SW#: 52 ROLLUNDER	51 UNUSED	59 UNUSED
4 SW#: 3 LEFT SPOT TARGET	12 SW#: 13 LEFT OUTSIDE ROLLOVER	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT RETURN ROLLOVER	44 SW#: 53 SPINNER	52 UNUSED	60 UNUSED
5 SW#: 4 HOLE	13 SW#: 14 1ST POSITION TROUGH	21 UNUSED	29 UNUSED	37 SW#: 44 OUTHOLE	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 POP BUMPERS (3)	46 SW#: 55 10 POINT (4)	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY / TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Amazon Hunt by Gottlieb

	1 SW#: #1 LEFT DROP TARGET	9 SW#: 10 #2 LEFT DROP TARGET	17 SW#: 20 #3 LEFT DROP TARGET	25 SW#: 30 #4 LEFT DROP TARGET	33 SW#: 40 #5 LEFT DROP TARGET	41 SW#: 50 #2 TOP TARGET	49 SW#: 60 #1 TOP TARGET	57 SW#: 70 10 POINT (2)
	2 SW#: 1 #1 RIGHT DROP TARGET	10 SW#: 11 #2 RIGHT DROP TARGET	18 SW#: 21 #3 RIGHT DROP TARGET	26 SW#: 31 #4 RIGHT DROP TARGET	34 SW#: 41 #5 RIGHT DROP TARGET	42 SW#: 51 LEFT POP BUMPER	50 SW#: 61 CENTER POP BUMPER	58 SW#: 71 RIGHT POP BUMPER
	3 SW#: 2 TOP LEFT #1 FREE TURN ROLLOVER, LEFT OUTSIDE ROLLER OVER	11 SW#: 12 #1 RIGHT #2 REVERSE ROLLOVER, LEFT FORWARD ROLLOVER	19 SW#: 22 TOP RIGHT #2 RETURN ROLLOVER	27 SW#: 32 TOP CENTER ROLLOVER	35 SW#: 42 LEFT OUTSIDE ROLLOVER, RIGHT OUTSIDE ROLLOVER	43 SW#: 52 #3 TOP TARGET	51 SW#: 62 #4 TOP TARGET	59 SW#: 72 100 POINT (2)
	4 SW#: 3 LEFT HOLE	12 UNUSED	20 SW#: 23 RIGHT HOLE	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
	5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
	6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
	7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
	8 SW#: 7 PLAY / TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Apollo 13 by Sega

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 ABORT HANDLE BALL LAUNCH	17 SW#: 17 8-BALL LOCK #1 (TOP)	25 SW#: 25 D-O-C-(K) 4-BANK S-U	33 SW#: 33 LEFT TURBO BUMPER	41 SW#: 41 SPINNER	49 SW#: 49 BATTERY S-U 3-BANK (ALL 3)	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 5-BALL #1 TROUGH (LEFT)	18 SW#: 18 8-BALL LOCK #2	26 SW#: 26 D-O-(C)-K 4-BANK S-U	34 SW#: 34 BOTTOM TURBO BUMPER	42 UNUSED	50 SW#: 50 ROCKET HOME POSITION	58 SW#: 58 RIGHT OUTLANE
3 SW#: 3 START BUTTON	11 SW#: 11 5-BALL #2 TROUGH	19 SW#: 19 8-BALL LOCK #3	27 SW#: 27 D-(O)-C-K 4-BANK S-U	35 SW#: 35 RIGHT TURBO BUMPER	43 SW#: 43 ROCKET BALL EJECT	51 SW#: 51 ROCKET UP POSITION	59 SW#: 59 LEFT RETURN LANE
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 5-BALL #3 TROUGH	20 SW#: 20 8-BALL LOCK #4	28 SW#: 28 (D)-O-C-K 4-BANK S-U	36 SW#: 36 MOON HOME POSITION	44 SW#: 44 RIGHT RAMP EXIT LEFT	52 SW#: 52 LEFT TOP LANE	60 SW#: 60 RIGHT RETURN LANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 5-BALL #4 TROUGH	21 SW#: 21 8-BALL LOCK #5	29 SW#: 29 MOON 4-BANK S-U (LEFT)	37 SW#: 37 MOON FORWARD POSITION	45 SW#: 45 LEFT ORBIT	53 SW#: 53 RIGHT TOP LANE	61 SW#: 61 LEFT SLINGSHOT
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 5-BALL #5 TROUGH (RIGHT)	22 SW#: 22 8-BALL LOCK #6	30 SW#: 30 MOON 4-BANK S-U (MID-LT)	38 SW#: 38 FOOD SINGLE STAND-UP	46 SW#: 46 RIGHT ORBIT	54 SW#: 54 CENTER BALL EJECT	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 SLAM TILT	15 SW#: 15 5-BALL VUK TROUGH OPTO	23 SW#: 23 8-BALL LOCK #7	31 SW#: 31 MOON 4-BANK S-U (MID-RT)	39 UNUSED	47 SW#: 47 RIGHT BALL EJECT	55 SW#: 55 RIGHT RAMP ENTER	63 SW#: 63 LT FLIPPER BUTTON VIA Q7 (ON SSFB)
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 8-BALL LOCK #8 (BOTTOM)	32 SW#: 32 MOON 4-BANK S-U (RIGHT)	40 SW#: 40 WATER SINGLE STAND-UP	48 SW#: 48 SUPER VUK (UNDER ARCH)	56 SW#: 56 RIGHT RAMP EXIT RIGHT	64 SW#: 64 RT FLIPPER BUTTON VIA Q5 (ON SSFB)

SW# number is the switch number as known to the game.

Arena by Gottlieb

1 UNUSED	9 UNUSED	17 SW#: 20 #3 TROUGH	25 SW#: 30 "I" CENTER ROLLOVER	33 SW#: 40 "W" DROP TARGET	41 SW#: 50 "A" DROP TARGET	49 SW#: 60 "L" DROP TARGET	57 SW#: 70 "L" DROP TARGET
2 UNUSED	10 UNUSED	18 SW#: 21 LEFT HOLE	26 SW#: 31 RIGHT HOLE	34 SW#: 41 #1 RAMP HOLE ROLLOVER	42 SW#: 51 #2 RAMP HOLE ROLLOVER	50 SW#: 61 #3 RAMP HOLE ROLLOVER	58 SW#: 71 #4 RAMP HOLE ROLLOVER
3 UNUSED	11 UNUSED	19 SW#: 22 #1 TOP ROLLOVER	27 SW#: 32 #2 TOP ROLLOVER	35 SW#: 42 #3 TOP ROLLOVER	43 SW#: 52 LEFT "C" SPOT TARGET	51 SW#: 62 LEFT "Y" SPOT TARGET	59 SW#: 72 LEFT "S" SPOT TARGET
4 UNUSED	12 UNUSED	20 SW#: 23 #1 GUARD SPOT TARGET	28 SW#: 33 #2 GUARD SPOT TARGET	36 SW#: 43 #3 GUARD SPOT TARGET	44 SW#: 53 RIGHT "C" SPOT TARGET	52 SW#: 63 RIGHT "Y" SPOT TARGET	60 SW#: 73 RIGHT "S" SPOT TARGET
5 UNUSED	13 UNUSED	21 SW#: 24 SPINNER	29 SW#: 34 RAMP ROLLUNDER	37 SW#: 44 SHOOTER LANE ROLLOVER	45 SW#: 54 "P" LEFT SIDE ROLLOVER	53 SW#: 64 LEFT RETURN ROLLOVER	61 SW#: 74 LEFT OUTSIDE ROLLOVER
6 UNUSED	14 UNUSED	22 SW#: 25 (2) KICKING RUBBER	30 SW#: 35 INSIDE GATE	38 SW#: 45 RIGHT FLIPPER	46 SW#: 55 "T" RIGHT SIDE ROLLOVER	54 SW#: 65 RIGHT RETURN ROLLOVER	62 SW#: 75 RIGHT OUTSIDE ROLLOVER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 SW#: 66 OUTHOLE	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Asteroid Annie by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 SPIN TARGET	10 SW#: 11 HEART ROLLOVER	18 SW#: 12 CLUB ROLLOVER	26 SW#: 13 DIAMOND ROLLOVER	34 SW#: 14 SPADE ROLLOVER
3 SW#: 20 RED "A" DROP TARGET	11 SW#: 21 BLACK "K" DROP TARGET	19 SW#: 22 RED "Q" DROP TARGET	27 SW#: 23 BLACK "J" DROP TARGET	35 SW#: 24 RED "10" DROP TARGET
4 SW#: 30 BLACK "A" DROP TARGET	12 SW#: 31 RED "K" DROP TARGET	20 SW#: 32 BLACK "Q" DROP TARGET	28 SW#: 33 RED "J" DROP TARGET	36 SW#: 34 BLACK "10" DROP TARGET
5 SW#: 40 POP BUMPER (2)	13 SW#: 41 KICKOUT HOLE	21 SW#: 42 LEFT SIDE ROLLOVER	29 SW#: 43 30 POINT (4) CONTACT	37 SW#: 44 EXTRA BALL TARGET
6 SW#: 50 LEFT RETURN ROLLOVER	14 SW#: 51 OUTSIDE (2) ROLLOVER	22 UNUSED	30 UNUSED	38 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Atlantis by Bally

1 SW#: 1 DROP TARGET #1, LEFT	9 SW#: 2 DROP TARGET #2	17 SW#: 3 DROP TARGET #3	25 SW#: 4 DROP TARGET #4, RIGHT	33 SW#: 5 CABINET LEFT	41 SW#: 6 CREDIT	49 SW#: 7 CABINET RIGHT	57 SW#: 8 OUTHOLE
2 SW#: 9 COINS RIGHT #3	10 SW#: 10 COINS LEFT #1	18 SW#: 11 COINS MIDDLE #2	26 SW#: 12 TOP LANE "A"	34 SW#: 13 TOP LANE "B"	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 SHOOTER LANE
3 SW#: 17 LEFT BOTTOM BUMPER	11 SW#: 18 MIDDLE BUMPER	19 SW#: 19 RIGHT BUMPER	27 SW#: 20 LEFT SLINGSHOT	35 SW#: 21 RIGHT SLINGSHOT	43 SW#: 22 PLUG-POST SENSOR	51 SW#: 23 LEFT OUTLANE	59 SW#: 24 RIGHT OUTLANE
4 SW#: 25 LEFT TARGET, ORANGE	12 SW#: 26 LEFT TARGET, WHITE	20 SW#: 27 LEFT TARGET, YELLOW	28 SW#: 28 RIGHT ORANGE TARGET,	36 SW#: 29 RIGHT WHITE TARGET,	44 SW#: 30 RIGHT YELLOW TARGET,	52 SW#: 31 RE-BOUNDERS	60 SW#: 32 TURN AROUND LOOP
5 SW#: 33 MIDDLE TARGET, ORANGE	13 SW#: 34 MIDDLE WHITE TARGET,	21 SW#: 35 MIDDLE TARGET, YELLOW	29 SW#: 36 SPINNER	37 SW#: 37 RAMP SENSOR	45 SW#: 38 RETURN LANES	53 SW#: 39 SAUCER	61 SW#: 40 POPPER DISH
6 UNUSED	14 SW#: 42 SUB BALL LOWER	22 SW#: 43 SUB BALL UPPER	30 SW#: 44 BALL IN SUBMARINE	38 SW#: 45 HOLD BONUS	46 SW#: 46 LEFT TROUGH #1	54 SW#: 47 MIDDLE #2 TROUGH	62 SW#: 48 RIGHT TROUGH #3
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Attack From Mars by Williams

1 SW#: 11 LAUNCH BUTTON	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 MARTIA(N) TARGET	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 LEFT RAMP ENTER	49 SW#: 71 RIGHT LOOP HIGH	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 MARTIA(N) TARGET	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 CENTER RAMP ENTER	50 SW#: 72 RIGHT LOOP LOW	58 UNUSED
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 MAR(T)IAN TARGET	35 SW#: 53 LEFT JET	43 SW#: 63 RIGHT RAMP ENTER	51 SW#: 73 LEFT LOOP HIGH	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 MART(I)AN TARGET	36 SW#: 54 BOTTOM JET	44 SW#: 64 LEFT RAMP EXIT	52 SW#: 74 LEFT LOOP LOW	60 UNUSED
5 UNUSED	13 UNUSED	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 LEFT MOTOR BANK	37 SW#: 55 RIGHT JET	45 SW#: 65 RIGHT RAMP EXIT	53 SW#: 75 LEFT SAUCER TARGET	61 UNUSED
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN	22 SW#: 36 LEFT POPPER	30 SW#: 46 CENTER MOTOR BANK	38 SW#: 56 (M)ARTIAN TARGET	46 SW#: 66 MOTOR BANK DOWN	54 SW#: 76 RIGHT SAUCER TARGET	62 UNUSED
7 SW#: 17 RIGHT RETURN	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 RIGHT POPPER	31 SW#: 47 RIGHT MOTOR BANK	39 SW#: 57 M(A)RTIAN TARGET	47 SW#: 67 MOTOR BANK UP	55 SW#: 77 DROP TARGET	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 UNUSED	24 SW#: 38 LEFT TOP LANE	32 SW#: 48 RIGHT TOP LANE	40 SW#: 58 MA(R)TIAN TARGET	48 UNUSED	56 SW#: 78 CENTER TROUGH	64 UNUSED

SW# number is the switch number as known to the game.

Austin Powers by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 UNUSED	17 UNUSED	25 SW#: 25 (M)OJO STANDUP	33 SW#: 33 LEFT ORBIT	41 SW#: 41 LEFT RAMP ENTER	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 CENTER RAMP ENTER	26 SW#: 26 M(O)JO STANDUP	34 SW#: 34 SPINNER (OPTO)	42 SW#: 42 LEFT RAMP EXIT	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 UNUSED	27 SW#: 27 MO(J)O STANDUP	35 SW#: 35 CENTER RAMP ENTER (OPTO)	43 SW#: 43 LASER BEAM HOME	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 UNUSED	28 SW#: 28 MOJ(O) STANDUP	36 UNUSED	44 SW#: 44 LASER BEAM ENABLE	52 SW#: 52 DANCING AUSTIN	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 TOILET	29 SW#: 29 AUSTIN STANDUP	37 SW#: 37 RIGHT RAMP ENTER	45 SW#: 45 LASER BEAM LOADED	53 SW#: 53 FIRE BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 DR. EVIL UP	30 SW#: 30 POWERS STANDUP	38 SW#: 38 RIGHT RAMP EXIT	46 SW#: 46 SCOOP	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 DR. EVIL DOWN	31 SW#: 31 DR. EVIL LEFT STANDUP	39 SW#: 39 RIGHT ORBIT	47 SW#: 47 LEFT TOP LANE	55 SW#: 55 SLAM TILT	63 UNUSED
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 DR. EVIL (TARGET)	32 SW#: 32 DR. EVIL RIGHT STANDUP	40 UNUSED	48 SW#: 48 RIGHT TOP LANE	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Avengers by Stern

1 SW#: 1 (T)HOR	9 UNUSED	17 SW#: 33 LEFT INNER LOOP	25 SW#: 49 LOKI LOCK 1 (BOT)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 T(H)OR	10 SW#: 18 TROUGH #4 LEFT	18 SW#: 34 SHIELD TARGET	26 SW#: 50 LOKI LOCK 2	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 TH(O)R	11 SW#: 19 TROUGH #3	19 SW#: 35 RT. 2 BANK TARGET-TOP	27 SW#: 51 LOKI LOCK 3	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 THO(R)	12 SW#: 20 TROUGH #2	20 SW#: 36 RT. 2 BANK TARGET-BOT	28 SW#: 52 (H)ULK	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 RIGHT	21 UNUSED	29 SW#: 53 H(U)LK	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH JAM	22 UNUSED	30 SW#: 54 HU(L)K	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 TESSERACT #1 STANDUP	15 SW#: 23 SHOOTER LANE	23 UNUSED	31 SW#: 55 HUL(K)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 24 LEFT OUTLANE	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Avengers by Stern

Bank 2

1 UNUSED	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 HULK WHEEL OPTO #1	25 SW#: 57 HULK PLATE	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 LEFT TOP LANE	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 HULK WHEEL OPTO #2	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 CENTER TOP LANE	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 LEFT RAMP EXIT	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 RIGHT TOP LANE	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 CENTER SPINNER	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 TESSERACT #3 STANDUP	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 TESSERACT #1 WHEEL	29 SW#: 61 RIGHT ORBIT	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 TESSERACT #2 STANDUP	14 SW#: 30 LEFT POP BUMPER	22 SW#: 46 TESSERACT #2 WHEEL	30 SW#: 62 HULK EJECT	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 SW#: 47 LEFT ORBIT	31 SW#: 63 HULK TARGET	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 SW#: 48 R. RAMP EXIT	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

BMX by Bally

1 SW#: 1 OUTHOLE	9 UNUSED	17 SW#: 3 TOP LEFT SAUCER	25 SW#: 4 CENTER SAUCER	33 SW#: 5 RIGHT BUTTON CABINET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 6 DROP LEFT TARGET (F)	57 SW#: 8 LEFT CABINET BUTTON
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 2X TARGET (WHITE)	34 SW#: 13 3X TARGET (YELLOW) AND	42 SW#: 14 REBOUNDS (2) BEHIND 4 DROP TARGET	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 RIGHT SLINGSHOT	11 SW#: 18 LEFT SLINGSHOT	19 UNUSED	27 SW#: 20 TARGET 6 BEHIND DROP TARGET	35 SW#: 21 4 DROP #1 TARGET (RIGHT)	43 SW#: 22 4 DROP #2 TARGET	51 SW#: 23 4 DROP #3 TARGET	59 SW#: 24 4 DROP #4 TARGET (LEFT)
4 SW#: 25 10K LANE	12 SW#: 26 25K LANE	20 SW#: 27 2 RIGHT ROLLOVER BUTTONS	28 SW#: 28 2 LEFT ROLLOVER BUTTONS	36 UNUSED	44 SW#: 30 LOWER 3 TARGET (RIGHT)	52 SW#: 31 LOWER 3 TARGET (MIDDLE)	60 SW#: 32 LOWER 3 TARGET (LEFT)
5 SW#: 33 6 DROP RIGHT TARGET (A)	13 SW#: 34 6 DROP (B) TARGET	21 SW#: 35 6 DROP (C) TARGET	29 SW#: 36 6 DROP (D) TARGET	37 SW#: 37 6 DROP (3) TARGET	45 SW#: 38 UPPER 3 TARGET (RIGHT)	53 SW#: 39 UPPER 3 TARGET (MIDDLE)	61 SW#: 40 UPPER 3 TARGET (LEFT)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Baby PacMan by Bally

1 SW#: 1 RIGHT E.O.S. FLIPPER	9 UNUSED	17 SW#: 3 START GAME 2 FOR	25 UNUSED	33 SW#: 5 REBOUNDS (2)	41 SW#: 6 START GAME 1 FOR	49 SW#: 7 RIGHT SPINNER	57 SW#: 8 LEFT SPINNER
2 SW#: 9 COIN II (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 UNUSED	26 UNUSED	34 UNUSED	42 UNUSED	50 SW#: 15 TILT (2)	58 SW#: 16 SLAM
3 SW#: 17 TOP LOOP LANE (RIGHT)	11 UNUSED	19 UNUSED	27 SW#: 20 TOP LOOP LANE (LEFT)	35 SW#: 21 TUNNEL OUTLANE	43 SW#: 22 FRUITS OUTLANE	51 SW#: 23 RIGHT INSIDE OUTLANE	59 SW#: 24 LEFT INSIDE OUTLANE
4 SW#: 25 #5 DROP TARGET (RIGHT SIDE)	12 SW#: 26 #4 DROP TARGET	20 SW#: 27 #3 DROP TARGET (CENTER)	28 SW#: 28 #2 DROP TARGET	36 SW#: 29 #1 DROP TARGET (LEFT SIDE)	44 SW#: 30 OUTHOLE SAUCER	52 SW#: 31 RIGHT MAZE SAUCER	60 SW#: 32 LEFT MAZE SAUCER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Back to the Future by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 (D)OC	33 SW#: 33 (M)CFLY	41 SW#: 41 DROP TARGET D	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 D(O)C	34 SW#: 34 M(C)FLY	42 SW#: 42 DROP TARGET M	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 DO(C)	35 SW#: 35 MC(F)LY	43 SW#: 43 DROP TARGET C	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 RIGHT RETURN	28 SW#: 28 SPINNER	36 SW#: 36 MCF(L)Y	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 LOCK VUK	37 SW#: 37 MCFL(Y)	45 SW#: 45 CLOCK EJECT	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 LEFT RAMP	38 SW#: 38 LEFT LOCK BOTTOM	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 UNUSED	31 SW#: 31 RIGHT RAMP	39 SW#: 39 LEFT LOCK CENTER	47 SW#: 47 CENTER TURBO BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 UNUSED	40 SW#: 40 LEFT LOCK TOP	48 SW#: 48 RIGHT TURBO BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Bad Cats by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 UNUSED	25 SW#: 25 BIRD TARGET 1	33 SW#: 33 RUBBER 1	41 SW#: 41 EXIT TIGER RAMP	49 UNUSED	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 UNUSED	26 SW#: 26 BIRD TARGET 2	34 SW#: 34 RUBBER 2	42 UNUSED	50 UNUSED	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 T	19 SW#: 19 IN-LINE FISH TARGET	27 SW#: 27 BIRD TARGET 3	35 SW#: 35 LEFT DRAIN LANE	43 SW#: 43 EXIT CNTR RAMP	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 O	20 UNUSED	28 SW#: 28 BIRD TARGET 4	36 SW#: 36 RIGHT DRAIN LANE	44 SW#: 44 SEAFOOD WHEEL	52 UNUSED	60 SW#: 60 LEFT JET BUMPER
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 Y	21 UNUSED	29 SW#: 29 BIRD TARGET 5	37 SW#: 37 MILK TARGET 1	45 UNUSED	53 UNUSED	61 SW#: 61 RIGHT JET BUMPER
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 BALL SHOOTER	22 SW#: 22 DOGHOUSE KICKBIG	30 SW#: 30 LEFT RETURN LANE	38 SW#: 38 MILK TARGET 2	46 UNUSED	54 UNUSED	62 SW#: 62 LWR JET BUMPER
7 SW#: 7 SLAM TILT	15 UNUSED	23 SW#: 23 ENTER TIGER RAMP	31 SW#: 31 RIGHT RETURN LANE	39 SW#: 39 MILK TARGET 3	47 UNUSED	55 UNUSED	63 SW#: 63 BL KICKER ("SLING")
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 ENTER CNTR RAMP	24 SW#: 24 FISH COLLECT	32 UNUSED	40 SW#: 40 RUBBER 3	48 UNUSED	56 UNUSED	64 SW#: 64 BR KICKER ("SLING")

SW# number is the switch number as known to the game.

Bad Girls by Gottlieb

1 SW#: #1/9 DROP TARGET	9 SW#: 10 #2/10 DROP TARGET	17 SW#: 20 #3/11 DROP TARGET	25 SW#: 30 #4/12 DROP TARGET	33 SW#: 40 #5/13 DROP TARGET	41 SW#: 50 #6/14 DROP TARGET	49 SW#: 60 #7/15 DROP TARGET	57 SW#: 70 #8 ROLLOVER DROP TARGET
2 SW#: 1 "R" SPOT TARGET	10 SW#: 11 "E" SPOT TARGET	18 SW#: 21 "R" SPOT TARGET	26 SW#: 31 "A" SPOT TARGET	34 SW#: 41 "C" SPOT TARGET	42 SW#: 51 "K" SPOT TARGET	50 SW#: 61 LEFT SPINNER	58 SW#: 71 RIGHT SPINNER
3 SW#: 2 VARI-TARGET	11 SW#: 12 VARI-TARGET, POSITIONS 2 AND 3	19 SW#: 22 VARI-TARGET, POSITIONS 4 AND 5	27 SW#: 32 VARI-TARGET, POSITION 6	35 SW#: 42 TOP LEFT POP BUMPER	43 SW#: 52 TOP RIGHT POP BUMPER	51 SW#: 62 BOTTOM POP BUMPER	59 SW#: 72 STAR (2) ROLLOVER
4 SW#: 3 "P" TOP LEFT ROLLOVER	12 SW#: 13 "O" TOP RIGHT ROLLOVER	20 SW#: 23 "O" LEFT RETURN ROLLOVER	28 SW#: 33 "L" RIGHT RETURN ROLLOVER	36 SW#: 43 LEFT OUTSIDE ROLLOVER	44 SW#: 53 RIGHT OUTSIDE ROLLOVER	52 SW#: 63 TOP LANE ROLLOVER	60 SW#: 73 SHOOTER LANE ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 15 TOP RIGHT FLIPPER	22 SW#: 25 LEFT KICKING RUBBER	30 SW#: 35 RIGHT RUBBER KICKING	38 SW#: 45 LEFT UPKICKER	46 SW#: 55 RIGHT UPKICKER	54 SW#: 65 OUTHOLE	62 SW#: 75 TROUGH
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Banzai Run by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 CENTER EJECT HOLE	25 SW#: 25 LEFT FLIPPER LANE CHANGE	33 SW#: 33 RAMP ENTRANCE	41 SW#: 41 RACE LWR RED STANDUP TARGET	49 SW#: 49 FREESTYLE ON (LOWER BLUE) UPPER PF	57 SW#: 57 FREESTYLE ON (UPPER GREEN) UPPER PF
2 SW#: 2 PLAYFIELD TILT	10 SW#: 10 BALL TROUGH #1 (RIGHT)	18 SW#: 18 CENTER RED STANDUP TARGET	26 SW#: 26 RAMP UPPER EXIT	34 SW#: 34 RT FLIPPER STANDUP TARGET	42 SW#: 42 RED MDL RED FREESTYLE (UPPER BLUE) UPPER PF	50 SW#: 50 FLIPPER POST (UPPER RED) UPPER PF	58 SW#: 58 FREESTYLE ON (UPPER GREEN) UPPER PF
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #2 (MID)	19 SW#: 19 BALL SHOOTER LANE	27 SW#: 27 LEFT JET BUMPER	35 SW#: 35 RAMP LOWER STANDUP TARGET	43 SW#: 43 HOT UPR RED FREESTYLE (LOWER YELLOW) UPPER PF	51 SW#: 51 LOWER LIFTER (UPPER RED) UPPER PF	59 SW#: 59 MOUSE HOLE TRAIN ON UPPER PF
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #3 (LEFT)	20 SW#: 20 RIGHT OUTLANE	28 SW#: 28 UPR RT JET BUMPER	36 SW#: 36 BALL CANNON BLUE STANDUP TARGET	44 SW#: 44 RACE LWR ON FREESTYLE (UPPER BLUE) UPPER PF	52 SW#: 52 DEFEAT RED (UPPER RED) UPPER PF	60 SW#: 60 A STANDUP ON TARGET UPPER PF
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 LEFT EJECT HOLE	21 SW#: 21 LEFT SPINNER	29 SW#: 29 LWR RT JET BUMPER	37 SW#: 37 TARGET BALL CAPTIVE	45 SW#: 45 BLUE MDL BLUE STANDUP TARGET	53 SW#: 53 DEFEAT ON PF LOW ROLL-UNDER UPPER PF	61 SW#: 61 B STANDUP ON TARGET UPPER PF
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 TOP LANE LEFT	22 SW#: 22 RIGHT SPINNER	30 SW#: 30 LEFT KICKER	38 SW#: 38 RACE LWR YEL STANDUP TARGET	46 SW#: 46 BEARD UPR BLUE STANDUP TARGET	54 SW#: 54 DEFEAT BLUE ROLL-UNDER ON UPPER PF	62 SW#: 62 C STANDUP ON TARGET UPPER PF
7 SW#: 7 SLAM TILT	15 SW#: 15 TOP LANE CNTR	23 SW#: 23 LEFT FLIPPER LANE	31 SW#: 31 RIGHT KICKER	39 SW#: 39 YELLOW MDL YEL STANDUP TARGET	47 SW#: 47 1 LAP L RED) FREESTYLE (LOWER YELLOW) UPPER PF	55 SW#: 55 TARGET BALL (UPPER RED) UPPER PF	63 SW#: 63 UPPER LIFTER ON UPPER PF
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 TOP LANE RIGHT	24 SW#: 24 RIGHT LANE FLIPPER	32 SW#: 32 LEFT OUTLANE	40 SW#: 40 BELLY UPR YEL STANDUP TARGET	48 SW#: 48 1 LAP R RED) FREESTYLE (UPPER BLUE) UPPER PF	56 SW#: 56 DEFEAT GREEN (UPPER RED) UPPER PF	64 SW#: 64 LEFT LOCK ON FLIPPER UPPER PF

SW# number is the switch number as known to the game.

Barb Wire by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 CREDIT BUTTON	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 UNUSED
2 SW#: 10 POP BUMPER	10 SW#: 11 LEFT KICKING RUBBER (2)	18 SW#: 12 RIGHT RUBBER KICKING (2)	26 SW#: 13 LEFT BOTTOM KICKING TARGET	34 SW#: 14 RIGHT TOP KICKING TARGET	42 SW#: 15 SHOOTER LANE ROLLOVER	50 SW#: 16 OUTHOLE	58 SW#: 17 BIG FATSO BOTTOM
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 UNUSED	43 SW#: 25 RIGHT BOTTOM UPKICKER	51 SW#: 26 TROUGH	59 SW#: 27 BIG FATSO TOP
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 40 RIGHT RAMP	13 SW#: 41 TOP LEFT LANE	21 SW#: 42 LEFT FLIPPER	29 SW#: 43 RIGHT FLIPPER	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 50 OPTO UPKICKER	14 UNUSED	22 SW#: 52 LEFT OUTSIDE ROLLOVER	30 SW#: 53 RIGHT OUTSIDE ROLLOVER	38 SW#: 54 RIGHT #1 TARGET	46 SW#: 55 RIGHT #3 TARGET	54 SW#: 56 RIGHT BOTTOM TARGET	62 SW#: 57 LEFT RAMP LEFT TARGET
7 SW#: 60 RIGHT SIDE TROUGH	15 UNUSED	23 SW#: 62 LEFT RETURN ROLLOVER	31 SW#: 63 RIGHT RETURN ROLLOVER	39 SW#: 64 RIGHT #2 TARGET	47 SW#: 65 RIGHT #4 TARGET	55 SW#: 66 CAPTIVE BALL TARGET	63 SW#: 67 LEFT RAMP RIGHT TARGET
8 SW#: 70 BIG FATSO	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Barracora by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 "BARRACORA" LANE ROLLOVER	17 SW#: 17 1/4 LANE ROLLOVER	25 SW#: 25 SPINNER TARGET	33 SW#: 33 UPPER RIGHT BULL'S-EYE TARGET	41 SW#: 41 B DROP TARGET	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 UPPER EJECT HOLE	18 SW#: 18 2/5 LANE ROLLOVER	26 SW#: 26 RIGHT TURNAROUND	34 SW#: 34 LEFT FLIPPER LANE CHANGE SWITCH	42 SW#: 42 A DROP TARGET	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LOWER EJECT HOLE	19 SW#: 19 3/6 LANE ROLLOVER	27 SW#: 27 LEFT TARGET BULL'S-EYE	35 SW#: 35 RIGHT LANE FLIPPER CHANGE SWITCH	43 SW#: 43 RR DROP TARGET	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 OUTHOLE	20 SW#: 20 LEFT JET BUMPER	28 SW#: 28 RIGHT TARGET BULL'S-EYE	36 SW#: 36 PLAYFIELD TILT	44 SW#: 44 A DROP TARGET	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT BALL RAMP SWITCH	21 SW#: 21 RIGHT JET BUMPER	29 SW#: 29 LEFT KICKER	37 SW#: 37 UPPER RIGHT STANDUP	45 SW#: 45 C DROP TARGET	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 CENTER BALL RAMP SWITCH	22 SW#: 22 BOTTOM JET BUMPER	30 SW#: 30 RIGHT KICKER	38 SW#: 38 LOWER STANDUP	46 SW#: 46 O DROP TARGET	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT BALL RAMP SWITCH	23 SW#: 23 LEFT OUTSIDE ROLLOVER	31 SW#: 31 LEFT INSIDE ROLLOVER	39 SW#: 39 5-BANK STANDUP	47 SW#: 47 R DROP TARGET	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 BALL SHOOTER TROUGH ROLLOVER	24 SW#: 24 RIGHT OUTSIDE ROLLOVER	32 SW#: 32 RIGHT INSIDE ROLLOVER	40 SW#: 40 LOWER LEFT STANDUP	48 SW#: 48 A DROP TARGET	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Batman by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT TOP LANE	25 UNUSED	33 SW#: 33 LEFT 3 BANK TOP	41 SW#: 41 RIGHT 3 BANK TOP	49 SW#: 49 BAT BAR STANDUP	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 CENTER TOP LANE	26 UNUSED	34 SW#: 34 LEFT 3 BANK MIDDLE	42 SW#: 42 RIGHT 3 BANK MIDDLE	50 SW#: 50 MUSEUM MOTOR UP	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 RIGHT TOP LANE	27 UNUSED	35 SW#: 35 LEFT 3 BANK BOTTOM	43 SW#: 43 RIGHT 3 BANK BOTTOM	51 SW#: 51 MUSEUM MOTOR DOWN	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 UNUSED	28 SW#: 28 RAMP ENTRANCE	36 SW#: 36 JOKER LEFT EYE	44 UNUSED	52 SW#: 52 RIGHT VUK TOP	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT RETURN	29 SW#: 29 RAMP EXIT	37 SW#: 37 JOKER RIGHT EYE	45 UNUSED	53 SW#: 53 RIGHT VUK BOTTOM	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT RETURN	30 UNUSED	38 SW#: 38 JOKER MOUTH	46 UNUSED	54 SW#: 54 LEFT TURBO BUMPER	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 LEFT OUTLANE	31 UNUSED	39 SW#: 39 LEFT VUK	47 SW#: 47 LEFT SLINGSHOT	55 SW#: 55 CENTER TURBO BUMPER	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 RIGHT OUTLANE	32 UNUSED	40 UNUSED	48 SW#: 48 RIGHT SLINGSHOT	56 SW#: 56 RIGHT TURBO BUMPER	64 UNUSED

SW# number is the switch number as known to the game.

Batman by Stern

1 SW#: 1 (B)ATMAN	9 UNUSED	17 SW#: 33 SKILL SHOT	25 SW#: 49 LEFT STANDUP TARGET	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 B(A)TMAN	10 SW#: 18 TROUGH #4 (L)	18 SW#: 34 LEFT LOOP SPINNER	26 SW#: 50 JOKER POS. #1 (HOME)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 BA(T)MAN	11 SW#: 19 TROUGH #3	19 SW#: 35 LEFT LOOP	27 SW#: 51 JOKER POS. #2	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 BAT(M)AN	12 SW#: 20 TROUGH #2	20 SW#: 36 LEFT JOKER TARGET	28 SW#: 52 JOKER POS. #3 (AWAY)	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 BATM(A)N	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 CENTER JOKER TARGET	29 SW#: 53 MINI-PLFD (TOP L.)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 BATMA(N)	14 SW#: 22 TROUGH JAM	22 SW#: 38 POP BUMPER TARGET	30 SW#: 54 MINI-PLFD (TOP R.)	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 LEFT TOP LANE	15 SW#: 23 SHOOTER LANE	23 SW#: 39 POP BUMPER SPINNER	31 SW#: 55 MINI-PLFD (BOT L.)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 MIDDLE TOP LANE	16 SW#: 24 LEFT OUTLANE	24 UNUSED	32 SW#: 56 CRANE POS. #6 (AWAY)	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Batman by Stern

Bank 2

1 SW#: 9 RIGHT TOP LANE	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 RIGHT LOOP	25 SW#: 57 CRANE POS #5	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 SCARECROW VUK EXIT	26 SW#: 58 CRANE POS. #4	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 ALFRED TARGET	11 SW#: 27 RIGHT SLINGSHOT	19 UNUSED	27 SW#: 59 CRANE POS. #3	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 SCARECROW VUK	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 TOP RIGHT EJECT	28 SW#: 60 CRANE POS. #2	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 CENTER RAMP ENTRANCE	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 JOKER DROP TARGET	29 SW#: 61 CRANE POS. #1 (HOME)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 RIGHT TARGET STANDUP	14 SW#: 30 LEFT BUMPER	22 SW#: 46 JOKER LOCKUP #1	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 BATMOBILE CRASH TARGET	31 SW#: 63 MINI-PLFD (BOT. R.)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 RIGHT JOKER TARGET	32 SW#: 64 BATMOBILE RAMP EJECT	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Batman Forever by Data_East

1 SW#: 1 PLUMB BOB TILT	9 UNUSED	17 UNUSED	25 SW#: 25 LEFT RAMP - LEFT "?"	33 SW#: 33 LASER KICK LEFT OUTLANE	41 SW#: 41 TOP EJECT	49 SW#: 49 GUN TRIGGER (AUTO LAUNCH)	57 SW#: 57 TURBO BUMPER LEFT
2 SW#: 2 4TH COIN	10 UNUSED	18 SW#: 18 LEFT 4-BANK DROP TARGET BOTTOM	26 SW#: 26 LEFT RAMP - RIGHT "?"	34 SW#: 34 LEFT RETURN LANE	42 SW#: 42 TOP GOOD HEADS STAND-UP	50 SW#: 50 RIGHT GOOD HEADS STAND-UP	58 SW#: 58 TURBO BUMPER BOTTOM
3 SW#: 3 START BUTTON	11 SW#: 11 #1 BALL TROUGH (LEFT)	19 SW#: 19 LEFT 4-BANK DROP TARGET MID. BOT.	27 SW#: 27 VUK "?"	35 SW#: 35 LEFT SLINGSHOT	43 SW#: 43 TOP BAD HEADS STAND-UP	51 SW#: 51 RIGHT BAD HEADS STAND-UP	59 SW#: 59 TURBO BUMPER RIGHT
4 SW#: 4 RIGHT COIN	12 SW#: 12 #2 BALL TROUGH	20 SW#: 20 LEFT 4-BANK DROP TARGET MID. TOP	28 SW#: 28 RIGHT RAMP - LEFT STAND-UP	36 SW#: 36 RIGHT SLINGSHOT	44 SW#: 44 BATWING LOADED	52 SW#: 52 LEFT RAMP ENTER	60 SW#: 60 LOCK 3 TOP
5 SW#: 5 CENTER COIN	13 SW#: 13 #3 BALL TROUGH	21 SW#: 21 LEFT 4-BANK DROP TARGET TOP	29 SW#: 29 RIGHT RAMP - RIGHT "?"	37 SW#: 37 RIGHT RETURN LANE INSIDE	45 SW#: 45 BATWING LOCATION	53 SW#: 53 LEFT RAMP EXIT	61 SW#: 61 LOCK 2 MIDDLE
6 SW#: 6 LEFT COIN	14 SW#: 14 #4 BALL TROUGH (RIGHT)	22 SW#: 22 TOP LANE LEFT	30 SW#: 30 BAT CAVE EXIT KICKER	38 SW#: 38 RIGHT RETURN LANE OUTSIDE	46 SW#: 46 BATWING HOME	54 SW#: 54 MIDDLE RAMP EXIT	62 SW#: 62 LOCK 1 BOTTOM
7 SW#: 7 SLAM TILT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 SW#: 23 TOP LANE MIDDLE	31 UNUSED	39 SW#: 39 RIGHT OUTLANE	47 SW#: 47 LEFT ORBIT	55 SW#: 55 RIGHT RAMP ENTER	63 SW#: 63 LT FLIPPER BUTTON
8 SW#: 8 EXTRA BALL / BUY-IN LEAGUE BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 TOP LANE RIGHT	32 SW#: 32 VUK	40 SW#: 40 U-TURN RAMP	48 SW#: 48 RIGHT ORBIT	56 SW#: 56 RIGHT RAMP EXIT	64 SW#: 64 RT FLIPPER BUTTON

SW# number is the switch number as known to the game.

Baywatch by Data_East

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 2-BANK (TOP) STAND-UP	17 SW#: 17 5-BANK STAND-UP (S)HARK (BOTTOM)	25 SW#: 25 LEFT RAMP ENTER	33 SW#: 33 LEFT RETURN LANE	41 SW#: 41 LEFT TURBO BUMPER	49 SW#: 49 CENTER RAMP EXIT	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN	10 SW#: 10 #1 BALL TROUGH	18 SW#: 18 5-BANK STAND-UP S(H)ARK (MIDDLE)	26 SW#: 26 LEFT RAMP EXIT	34 UNUSED	42 SW#: 42 BOTTOM TURBO BUMPER	50 SW#: 50 BALL LAUNCH BUTTON	58 SW#: 58 RIGHT OUTLANE
3 SW#: 3 START BUTTON	11 SW#: 11 #2 BALL TROUGH	19 SW#: 19 5-BANK STAND-UP SH(A)RK (MIDDLE)	27 UNUSED	35 UNUSED	43 SW#: 43 RIGHT TURBO BUMPER	51 UNUSED	59 SW#: 59 RIGHT OUTER RETURN LANE
4 SW#: 4 RIGHT COIN	12 SW#: 12 #3 BALL TROUGH	20 SW#: 20 5-BANK (TOP) STAND-UP SH(A)RK (MIDDLE)	28 SW#: 28 RIGHT RAMP ENTER	36 SW#: 36 LEFT RAMP STAND-UP (LEFT)	44 SW#: 44 UPPER VUK	52 SW#: 52 SPINNER	60 SW#: 60 RIGHT INNER RETURN LANE
5 SW#: 5 CENTER COIN	13 SW#: 13 #4 BALL TROUGH	21 SW#: 21 5-BANK (TOP) STAND-UP SHAR(K)	29 UNUSED	37 SW#: 37 LEFT RAMP STAND-UP (RIGHT)	45 SW#: 45 LEFT ORBIT ROLLOVER	53 SW#: 53 2-BANK STAND-UP (BOTTOM)	61 SW#: 61 LEFT SLINGSHOT
6 SW#: 6 LEFT COIN	14 SW#: 14 #5 BALL TROUGH (RIGHT)	22 SW#: 22 3-BANK DROPS (TOP)	30 SW#: 30 RIGHT RAMP EXIT	38 SW#: 38 TOP LANE ROLLOVER (LEFT)	46 SW#: 46 LOWER SUPER VUK (UNDER ARCH)	54 SW#: 54 UPPER RIGHT SHARK FIN FLIPPER	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 SLAM TILT	15 SW#: 15 5-BALL VUK TROUGH OPTO	23 SW#: 23 3-BANK DROPS (MIDDLE)	31 SW#: 31 RIGHT RAMP STAND-UP (LEFT)	39 SW#: 39 TOP LANE ROLLOVER (MIDDLE)	47 SW#: 47 UPPER BALL LAUNCH	55 SW#: 55 UNDER RAMP PLAYFIELD ENTER	63 SW#: 63 LEFT FLIPPER BUTTON
8 SW#: 8 EXTRA BALL / BUY-IN LEAGUE BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 3-BANK DROPS (BOTTOM)	32 SW#: 32 RIGHT RAMP STAND-UP (RIGHT)	40 SW#: 40 TOP LANE ROLLOVER (RIGHT)	48 SW#: 48 CENTER RAMP STAND-UP	56 SW#: 56 SHARK SUPER SCOOP	64 SW#: 64 RIGHT BUTTON FLIPPER

SW# number is the switch number as known to the game.

Beat The Clock by Bally

1 SW#: 1 DROP TARGET 1	9 SW#: 2 DROP TARGET 2	17 SW#: 3 DROP TARGET 3	25 SW#: 4 DROP TARGET 4	33 SW#: 5 DROP TARGET 5	41 SW#: 6 CREDIT	49 SW#: 7 DROP TARGET 6	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LANE CHANGE	34 SW#: 13 LEFT RETURN LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 RIGHT RETURN LANE
3 SW#: 17 TIMER "T"	11 SW#: 18 TIMER "I"	19 SW#: 19 TIMER "M"	27 SW#: 20 TIMER "E"	35 SW#: 21 TIMER "R"	43 UNUSED	51 SW#: 23 LEFT OUTLANE	59 SW#: 24 RIGHT OUTLANE
4 SW#: 25 RIGHT BUMPER	12 SW#: 26 MIDDLE BUMPER	20 SW#: 27 LEFT BUMPER	28 SW#: 28 RIGHT SLINGSHOT	36 SW#: 29 LEFT SLINGSHOT	44 SW#: 30 RIGHT START	52 SW#: 31 LEFT START	60 SW#: 32 RIGHT BUTTON ROLLOVER
5 SW#: 33 STOP "S"	13 SW#: 34 STOP "T"	21 SW#: 35 STOP "O"	29 SW#: 36 STOP "P"	37 SW#: 37 LANE "A"	45 SW#: 38 LANE "B"	53 SW#: 39 LANE "C"	61 SW#: 40 LANE "D"
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 SINGLE DROP TARGET	46 SW#: 46 LEFT SAUCER	54 SW#: 47 MIDDLE SAUCER	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Big Game by Stern

1 SW#: 1 CHUTE	9 SW#: 2 CHUTE	17 SW#: 3 CHUTE	25 SW#: 4 SPIN-TARGET (LEFT)	33 SW#: 5 SPIN-TARGET (RIGHT)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 TOP THUMPER	10 SW#: 10 LOWER LEFT THUMPER	18 SW#: 11 LOWER RIGHT THUMPER	26 SW#: 12 LEFT SLING-SHOT	34 SW#: 13 RIGHT SLING-SHOT	42 SW#: 14 TOP LEFT (3) DROP TARGET	50 SW#: 15 TOP LEFT (2) DROP TARGET	58 SW#: 16 TOP LEFT (1) DROP TARGET
3 SW#: 17 TOP LEFT ROLL-OVER WIRE	11 SW#: 18 TOP MID. ROLL-OVER WIRE	19 SW#: 19 TOP RIGHT ROLL-OVER WIRE	27 SW#: 20 STAND-UP "G" TARGET	35 SW#: 21 STAND-UP "A" TARGET	43 SW#: 22 TOP RIGHT DROP TARGET (6)	51 SW#: 23 TOP RIGHT DROP TARGET (5)	59 SW#: 24 TOP RIGHT DROP TARGET (4)
4 SW#: 25 MIDDLE ROLL-OVER BUTTON	12 SW#: 26 TOP LEFT ROLL-OVER BUTTON	20 SW#: 27 MIDDLE LEFT ROLL-OVER BUTTON	28 SW#: 28 RIGHT RETURN LANE	36 SW#: 29 LEFT RETURN LANE	44 SW#: 30 LOWER RIGHT DROP TARGET (9)	52 SW#: 31 LOWER RIGHT DROP TARGET (8)	60 SW#: 32 LOWER RIGHT DROP TARGET (7)
5 SW#: 33 OUT-HOLE	13 SW#: 34 SAUCER, EJECT.	21 SW#: 35 RIGHT OUT-LANE	29 SW#: 36 LEFT OUT-LANE	37 SW#: 37 TOP TWO 10-PTS.	45 SW#: 38 TOP RIGHT R.O. BUTTON	53 SW#: 39 TOP RIGHT MID. R.O. BUTTON	61 SW#: 40 TOP RIGHT LOWER R.O. BUTTON
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Big Guns by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 LEFT DROP TARGET TOP	25 SW#: 25 LEFT GUARD 1 BOTTOM	33 SW#: 33 RIGHT GUARD BOTTOM 2	41 SW#: 41 BACKBOX LEFT PLAYFIELD 1	49 UNUSED	57 SW#: 57 BALL POPPER
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT DROP TARGET MIDDLE	26 SW#: 26 LEFT GUARD 2 BOTTOM	34 SW#: 34 RIGHT GUARD BOTTOM 1	42 SW#: 42 BACKBOX LEFT PLAYFIELD 2	50 UNUSED	58 SW#: 58 FORCE FIELD
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 RIGHT BALL TROUGH (1ST BALL)	19 SW#: 19 LEFT DROP TARGET BOTTOM	27 SW#: 27 LEFT GUARD MIDDLE	35 SW#: 35 LEFT EJECT	43 SW#: 43 BACKBOX PLAYFIELD CENTER	51 UNUSED	59 SW#: 59 TOWER
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 CENTER BALL TROUGH (2ND BALL)	20 SW#: 20 RIGHT DROP TARGET TOP	28 SW#: 28 LEFT GUARD 2 TOP	36 SW#: 36 RIGHT EJECT	44 SW#: 44 BACKBOX 2 PLAYFIELD RIGHT	52 SW#: 52 LEFT FLIPPER LANE CHANGE	60 SW#: 60 LEFT OUTLANE
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 LEFT BALL TROUGH (3RD BALL)	21 SW#: 21 RIGHT DROP TARGET MIDDLE	29 SW#: 29 LEFT GUARD 1 TOP	37 SW#: 37 LEFT CANNON	45 SW#: 45 BACKBOX 1 PLAYFIELD RIGHT	53 SW#: 53 RIGHT LANE FLIPPER CHANGE	61 SW#: 61 RIGHT OUTLANE
6 SW#: 6 LEFT COIN CHUTE	14 UNUSED	22 SW#: 22 RIGHT DROP TARGET BOTTOM	30 SW#: 30 RIGHT GUARD TOP 1	38 SW#: 38 RIGHT CANNON	46 UNUSED	54 SW#: 54 BALL SHOOTER LANE	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 FLIPPER POST DOWN	23 SW#: 23 LEFT RETURN	31 SW#: 31 RIGHT GUARD TOP 2	39 SW#: 39 LEFT TROLL	47 UNUSED	55 SW#: 55 LEFT ADVANCE 'X'	63 SW#: 63 LEFT KICKER
8 SW#: 8 HIGH-SCORE RESET	16 UNUSED	24 SW#: 24 RIGHT RETURN	32 SW#: 32 RIGHT GUARD MIDDLE	40 SW#: 40 RIGHT TROLL	48 UNUSED	56 SW#: 56 RIGHT 'X' ADVANCE	64 SW#: 64 RIGHT KICKER

SW# number is the switch number as known to the game.

Big House by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 LEFT SIDE ROLLOVER	33 SW#: 40 #1 DROP TARGET	41 SW#: 50 #2 DROP TARGET	49 SW#: 60 #3 DROP TARGET	57 SW#: 70 #4 DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 SW#: 31 #1 TOP LEFT SPOT TARGET	34 SW#: 41 #2 TOP LEFT SPOT TARGET	42 SW#: 51 #3 TOP LEFT SPOT TARGET	50 SW#: 61 #4 TOP LEFT SPOT TARGET	58 SW#: 71 #5 TOP LEFT SPOT TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 SW#: 32 KICKING (2) RUBBERS	35 SW#: 42 #1 CENTER SPOT TARGET	43 SW#: 52 #2 CENTER SPOT TARGET	51 SW#: 62 #3 CENTER SPOT TARGET	59 SW#: 72 #4 CENTER SPOT TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 33 TOP POP BUMPER	36 SW#: 43 RIGHT POP BUMPER	44 SW#: 53 BOTTOM POP BUMPER	52 SW#: 63 #1 BOTTOM RIGHT SPOT TARGET	60 SW#: 73 #2 BOTTOM RIGHT SPOT TARGET
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 34 BOTTOM LEFT SPOT TARGET	37 SW#: 44 TOP RIGHT SPOT TARGET	45 SW#: 54 #1 TOP ROLLOVER	53 SW#: 64 #2 TOP ROLLOVER	61 SW#: 74 #3 TOP ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 SW#: 35 LEFT AND RIGHT FLIPPERS	38 SW#: 45 LEFT OUTSIDE ROLLOVER	46 SW#: 55 LEFT RETURN ROLLOVER	54 SW#: 65 RIGHT RETURN ROLLOVER	62 SW#: 75 RIGHT OUTSIDE ROLLOVER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 SW#: 26 BALL ON CHAIN	31 SW#: 36 #3 TROUGH	39 SW#: 46 LEFT SHOOTER	47 SW#: 56 RIGHT SHOOTER	55 SW#: 66 OUTHOLE	63 SW#: 76 HOLE
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Big Hurt by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 SW#: 7 DROP TARGET #1 (LEFT)
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 LEFT KICKING RUBBER	26 SW#: 13 RIGHT RUBBER KICKING	34 SW#: 14 TROUGH	42 UNUSED	50 UNUSED	58 SW#: 17 DROP TARGET #2 (CENTER)
3 SW#: 20 SHOOTER LANE ROLLOVER	11 SW#: 21 RIGHT UPKICKER	19 SW#: 22 HOLE KICKER	27 SW#: 23 GLOVE	35 SW#: 24 OUTHOLE	43 UNUSED	51 UNUSED	59 SW#: 27 DROP TARGET #3 (RIGHT)
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Black Belt Karate Fight by Bally

1 UNUSED	9 SW#: 2 SAUCER MIDDLE	17 SW#: 3 RIGHT KICKBACK	25 SW#: 4 SAUCER LEFT	33 SW#: 5 FLIPPER LEFT	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 FLIPPER RIGHT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 OPEN GATE RIGHT	34 SW#: 13 OPEN GATE LEFT	42 SW#: 14 SLAM (2)	50 SW#: 15 TILT (3)	58 SW#: 16 SPINNER
3 SW#: 17 OUTLANE RIGHT	11 SW#: 18 OUTLANE LEFT	19 SW#: 19 CALF RIGHT	27 SW#: 20 KNEE RIGHT	35 SW#: 21 THIGH RIGHT	43 SW#: 22 THIGH LEFT	51 SW#: 23 KNEE LEFT	59 SW#: 24 CALF LEFT
4 SW#: 25 BUMPER LEFT	12 SW#: 26 BUMPER RIGHT	20 SW#: 27 SLING LEFT	28 SW#: 28 SLING RIGHT	36 SW#: 29 CHOP SIDE	44 SW#: 30 RIGHT SIDE	52 SW#: 31 LEFT SIDE	60 SW#: 32 SHOOTER READY
5 SW#: 33 TARGET "K"	13 SW#: 34 TARGET "A"	21 SW#: 35 TARGET "R"	29 SW#: 36 TARGET "A"	37 SW#: 37 TARGET "T"	45 SW#: 38 TARGET "E"	53 SW#: 39 TOP ARC	61 SW#: 40 MUSHROOM
6 SW#: 41 DT "K"	14 SW#: 42 DT "A"	22 SW#: 43 DT "R"	30 SW#: 44 DT "A"	38 SW#: 45 DT "T"	46 SW#: 46 DT "E"	54 SW#: 47 RETURN RIGHT	62 SW#: 48 RETURN LEFT
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Black Hole by Gottlieb

1 SW#: TOP #1 ROLLOVER	9 SW#: 10 TOP #2 ROLLOVER	17 SW#: 20 TOP #3 ROLLOVER	25 SW#: 30 RIGHT SIDE ROLLOVER	33 SW#: 40 LEFT #1 DROP TARGET	41 SW#: 50 LEFT #2 DROP TARGET	49 SW#: 60 LEFT #3 DROP TARGET	57 SW#: 70 LEFT #4 DROP TARGET
2 SW#: 1 #1 SPOT TARGET	10 SW#: 11 #2 SPOT TARGET	18 SW#: 21 #3 SPOT TARGET	26 SW#: 31 #4 SPOT TARGET	34 SW#: 41 RIGHT #1 DROP TARGET	42 SW#: 51 RIGHT #2 DROP TARGET	50 SW#: 61 RIGHT #3 DROP TARGET	58 SW#: 71 LOWER LEVEL POP BUMPERS (2)
3 SW#: 2 RIGHT #1 "H" DROP TARGET	11 SW#: 12 RIGHT #2 "O" DROP TARGET	19 SW#: 22 RIGHT #3 "L" DROP TARGET	27 SW#: 32 RIGHT #4 "E" DROP TARGET	35 SW#: 42 HOLE KICKER SWITCH	43 SW#: 52 ROLLUNDER GATE	51 SW#: 62 RETURN ROLLOVER SWITCHES KICKING TARGET	59 SW#: 72 10 POINT AND
4 SW#: 3 LEFT #1 DROP TARGET "B"	12 SW#: 13 LEFT #2 DROP TARGET "L"	20 SW#: 23 LEFT #3 DROP TARGET "A"	28 SW#: 33 BLACK HOLE ROLLOVER	36 SW#: 43 BALL TUBE KICKER SWITCH	44 SW#: 53 TRACK SWITCH	52 UNUSED	60 UNUSED
5 SW#: 4 LEFT #4 DROP TARGET "C"	13 SW#: 14 LEFT #5 DROP TARGET "K"	21 SW#: 24 TOP LANE ROLLUNDER SWITCH	29 SW#: 34 10 POINT SWITCHES (10)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 5 BALL KICKER HOLE SWITCH	14 SW#: 15 OUTHOLE	22 SW#: 25 3RD POSITION BALL RETURN (TROUGH)	30 SW#: 35 RIGHT RETURN ROLLOVER	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 POP BUMPERS (4)	15 SW#: 16 LEFT TARGET SPINNING	23 SW#: 26 TILT SWITCH PLAYBOARD	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Black Jack by Bally

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 4 RIGHT LANE	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II IF (MIDDLE, USED)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 25 CHANGE (2) DEALER TARGET	12 SW#: 26 CHANGE (2) PLAYER TARGET	20 SW#: 27 HEART LANE	28 SW#: 28 SPADE LANE	36 SW#: 29 DIAMOND LANE	44 SW#: 30 CLUB LANE	52 SW#: 31 L & R FEEDER FLIPPER LANES	60 SW#: 32 BEAT DEALER SAUCER
5 SW#: 33 RIGHT OUTLANE	13 SW#: 34 LEFT OUTLANE	21 SW#: 35 10 POINT (2) REBOUND	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 CENTER THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Black Knight by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 RIGHT MAGNET BUTTON	17 SW#: 17 RIGHT BALL RAMP	25 SW#: 25 LOWER LEFT 3-BANK, LOWER TARGET	33 SW#: 33 TOP LEFT 3-BANK, LOWER TARGET	41 SW#: 41 LOCKUP TROUGH, BOTTOM	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT MAGNET BUTTON	18 SW#: 18 CENTER BALL RAMP	26 SW#: 26 LOWER LEFT 3-BANK, CENTER TARGET	34 SW#: 34 TOP LEFT 3-BANK, CENTER TARGET	42 SW#: 42 LOCKUP TROUGH, CENTER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT OUTLANE	19 SW#: 19 LEFT BALL RAMP	27 SW#: 27 LOWER LEFT 3-BANK, UPPER TARGET	35 SW#: 35 TOP LEFT 3-BANK, UPPER TARGET	43 SW#: 43 LOCKUP TOP TROUGH,	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 RIGHT OUTLANE	20 SW#: 20 OUTHOLE	28 UNUSED	36 SW#: 36 JET BUMPER	44 SW#: 44 LEFT RAMP ROLLOVER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 SPINNER	21 SW#: 21 LEFT KICKER	29 SW#: 29 LOWER RIGHT 3-BANK, RIGHT TARGET	37 SW#: 37 TOP RIGHT 3-BANK, LOWER TARGET	45 SW#: 45 BALLSHOOTER TROUGH	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 RIGHT RAMP ROLLUNDER	22 SW#: 22 RIGHT KICKER	30 SW#: 30 LOWER RIGHT 3-BANK, CENTER TARGET	38 SW#: 38 TOP RIGHT 3-BANK, CENTER TARGET	46 SW#: 46 PLAYFIELD TILT	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT INSIDE ROLLOVER	23 SW#: 23 TURNAROUND	31 SW#: 31 LOWER RIGHT 3-BANK, LEFT TARGET	39 SW#: 39 TOP RIGHT 3-BANK, UPPER TARGET	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT INSIDE ROLLOVER	24 SW#: 24 LOWER EJECT PLAYFIELD HOLE	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Black Knight 2000 by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 LEFT JET BUMPER	25 SW#: 25 W LANE	33 SW#: 33 MOTOR (UPPER TARGETS TGT)	41 SW#: 41 R 3-BANK DR TARGET (LEFT)	49 SW#: 49 U-TURN 1 (LOWER LEFT)	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 SW#: 18 BL KICKER ("SLING")	26 SW#: 26 I LANE	34 SW#: 34 MOTOR TGT) TARGETS (MIDDLE	42 SW#: 42 R 3-BANK DR TARGET (MID)	50 SW#: 50 U-TURN 2 (UPPER LEFT)	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1 (RIGHT)	19 SW#: 19 RIGHT JET BUMPER	27 SW#: 27 N LANE	35 SW#: 35 MOTOR (LOWER TARGETS TGT)	43 SW#: 43 R 3-BANK DR TARGET (RIGHT)	51 SW#: 51 U-TURN 3 (UPPER RIGHT)	59 SW#: 59 MAGNA SAVE
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 BR KICKER ("SLING")	28 SW#: 28 W LANE	36 SW#: 36 UPF LOCK LOWER SWITCH	44 SW#: 44 L 3-BANK DR TARGET (LWR)	52 SW#: 52 U-TURN (LOWER RIGHT)	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #3 (LEFT)	21 SW#: 21 LWR JET BUMPER	29 SW#: 29 A LANE	37 SW#: 37 UPF LOCK MIDDLE SWITCH	45 SW#: 45 L 3-BANK DR TARGET (MID)	53 SW#: 53 BALL SHOOTER	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 UNUSED	22 SW#: 22 LEFT UPF END LOOP	30 SW#: 30 R LANE	38 SW#: 38 UPF LOCK UPPER SWITCH	46 SW#: 46 L 3-BANK DR TARGET (UPR)	54 SW#: 54 RIGHT RETURN LANE	62 UNUSED
7 SW#: 7 SLAM TILT	15 UNUSED	23 SW#: 23 RIGHT UPF LOOP END	31 SW#: 31 UPPER RAMP ENTRY	39 SW#: 39 LEFT OUTLANE	47 SW#: 47 BALL POPPER	55 SW#: 55 LEFT RETURN LANE	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 UP MOTOR TARGETS	24 SW#: 24 DOWN MOTOR TARGETS	32 SW#: 32 LOWER RAMP EXIT	40 SW#: 40 RIGHT EJECT	48 SW#: 48 RIGHT OUTLANE	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Black Pyramid by Bally

1 SW#: 1 LEFT SLINGSHOT	9 SW#: 2 RIGHT SLINGSHOT	17 SW#: 3 LEFT THUMPER BUMPER	25 SW#: 4 RIGHT BUMPER THUMPER	33 SW#: 5 SWINGER TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 SAUCER	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 30 POINT (2) REBOUND	34 SW#: 13 TOP LEFT R.O. BUTTON	42 SW#: 14 TOP RIGHT R.O. BUTTON	50 SW#: 15 TILT	58 SW#: 16 SLAM
3 SW#: 17 TOP LEFT BUMPER LANE	11 SW#: 18 "P" TARGET	19 SW#: 19 "Y" TARGET	27 SW#: 20 "R" TARGET	35 SW#: 21 "A" TARGET	43 SW#: 22 "M" RETURN LANE	51 SW#: 23 "I" RETURN LANE	59 SW#: 24 TOP RIGHT BUMPER LANE
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 28 GATE OUT LANE	36 SW#: 29 LEFT OUT LANE	44 SW#: 30 2X IN LINE DROP TARGET	52 SW#: 31 3X IN LINE DROP TARGET	60 SW#: 32 5X IN LINE DROP TARGET
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Black Rose by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 BOTTOM STANDUP BOTTOM	25 SW#: 41 MIDDLE TOP STANDUP	33 SW#: 51 TOP STANDUP BOTTOM	41 SW#: 61 SUBWAY TOP	49 SW#: 71 LOCKUP ENTER	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 BOTOM MIDDLE STANDUP	26 SW#: 42 MIDDLE STANDUP MIDDLE	34 SW#: 52 TOP STANDUP MIDDLE	42 SW#: 62 BACKBOARD RAMP	50 SW#: 72 MIDDLE RAMP	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO	19 SW#: 33 BOTTOM TOP STANDUP	27 SW#: 43 MIDDLE STANDUP BOTTOM	35 SW#: 53 TOP STANDUP TOP	43 SW#: 63 LOCKUP 1	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 FIRE BUTTON	28 SW#: 44 LEFT RAMP ENTER	36 SW#: 54 RAMP DOWN	44 SW#: 64 LOCKUP 2	52 UNUSED	60 UNUSED
5 SW#: 15 OUTHOLE	13 SW#: 25 SHOOTER	21 SW#: 35 CANNON KICKER	29 SW#: 45 TOP LEFT LOOP	37 SW#: 55 BALL POPPER	45 SW#: 65 RIGHT SINGLE STANDUP	53 UNUSED	61 UNUSED
6 SW#: 16 RIGHT TROUGH	14 SW#: 26 LEFT OUTLANE	22 SW#: 36 RIGHT OUTLANE	30 SW#: 46 LEFT JET	38 SW#: 56 RIGHT RAMP MADE	46 SW#: 66 SUBWAY BOTTOM	54 SW#: 76 RIGHT RAMP ENTER	62 UNUSED
7 SW#: 17 CENTER TROUGH	15 SW#: 27 LEFT RETURN LANE	23 SW#: 37 RIGHT RETURN LANE	31 SW#: 47 RIGHT JET	39 SW#: 57 JET BUMPERS EXIT	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 18 LEFT TROUGH	16 SW#: 28 LEFT SLING	24 SW#: 38 RIGHT SLINGSHOT	32 SW#: 48 BOTTOM JET	40 SW#: 58 JET BUMPER ENTER	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Blackbelt by Zaccaria

1 SW#: 1 ADVANCEMENT TEST	9 UNUSED	17 SW#: 16 OUT HOLE	25 SW#: 24 FIXED CONTACTS	33 SW#: 32 LEFT RED SPECIAL	41 SW#: 40 RIGHT POP	49 SW#: 48 KATA SPECIAL	57 UNUSED
2 SW#: 1 RETURN TEST	10 SW#: 9 CREDIT	18 SW#: 17 LEFT OUTER EXIT CANAL	26 SW#: 25 TARGETS WHEEL RIGHT TARGET	34 SW#: 33 RIGHT RED SPECIAL	42 SW#: 41 TOP FIXED TARGETS	50 SW#: 49 1ST TOP CANAL	58 UNUSED
3 SW#: 2 TILT 2	11 SW#: 10 TILT	19 SW#: 18 LEFT INNEX CANAL	27 SW#: 26 TARGETS WHEEL CENTRAL TARGET	35 SW#: 34 1ST MOVING TARGET RIGHT BANK	43 SW#: 42 LEFT POP	51 SW#: 50 2ND TOP CANAL	59 UNUSED
4 SW#: 3 CREDIT SERVICE	12 SW#: 11 FACTORY BURN TEST	20 SW#: 19 RIGHT INNEX CANAL	28 SW#: 27 TARGETS LEFT WHEEL TARGET	36 SW#: 35 2ND MOVING TARGET RIGHT BANK	44 SW#: 43 1ST MOVING TARGET LEFT BANK	52 SW#: 51 3RD TOP CANAL	60 UNUSED
5 SW#: 4 COIN SWITCH 1	13 UNUSED	21 SW#: 20 LEFT FLAP	29 SW#: 28 TARGETS 1ST WHEEL POSITION CONTROL	37 SW#: 36 3RD MOVING TARGET RIGHT BANK	45 SW#: 44 2ND MOVING TARGET LEFT BANK	53 SW#: 52 4TH TOP CANAL	61 UNUSED
6 SW#: 5 COIN SWITCH 2	14 UNUSED	22 SW#: 21 RIGHT FLAP	30 SW#: 29 TARGETS 2ND WHEEL POSITION CONTROL	38 SW#: 37 4TH MOVING TARGET RIGHT BANK	46 SW#: 45 3RD MOVING TARGET LEFT BANK	54 SW#: 53 YOKU GERI	62 UNUSED
7 SW#: 6 COIN SWITCH 3	15 UNUSED	23 SW#: 22 RIGHT CANAL CENTRAL WHEEL	31 SW#: 30 TARGETS 3RD WHEEL POSITION CONTROL	39 SW#: 38 TOP RIGHT FLAP	47 SW#: 46 4TH MOVING TARGET LEFT BANK	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 SW#: 23 RIGHT OUTER EXIT CANAL WHEEL	32 SW#: 31 TARGETS 4TH WHEEL POSITION CONTROL	40 SW#: 39 TOP LEFT FLAP	48 SW#: 47 5TH MOVING TARGET LEFT BANK	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Blackout by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 UNUSED	25 SW#: 25 CENTER 3 BANK LEFT	33 SW#: 33 TOP 3 BANK LEFT	41 SW#: 41 RIGHT OUTSIDE ROLLOVER	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT OUTSIDE ROLLOVER	18 SW#: 18 LEFT SPINNER	26 SW#: 26 CENTER 3 BANK CENTER	34 SW#: 34 TOP 3 BANK CENTER	42 SW#: 42 RIGHT INSIDE ROLLOVER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 GREEN TARGET #1 BOTTOM	19 SW#: 19 LEFT SPINNER STANDUP	27 SW#: 27 CENTER 3 BANK RIGHT	35 SW#: 35 TOP 3 BANK RIGHT	43 SW#: 43 RIGHT KICKER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 GREEN TARGET #2	20 SW#: 20 UPPER LEFT TARGET	28 SW#: 28 CENTER 3 BANK SERIES	36 SW#: 36 TOP 3 BANK SERIES	44 SW#: 44 LEFT KICKER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 GREEN TARGET #3	21 SW#: 21 RIGHT JET BUMPER	29 SW#: 29 1 ROLLOVER	37 SW#: 37 UPPER RIGHT SPINNER	45 SW#: 45 LEFT INSIDE ROLLOVER	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 GREEN TARGET #4	22 SW#: 22 LEFT JET BUMPER	30 SW#: 30 2 ROLLOVER	38 SW#: 38 MIDDLE RIGHT STANDUP	46 SW#: 46 RIGHT LANE FLIPPER CHANGE SWITCH	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 GREEN TARGET #5 TOP	23 SW#: 23 BOTTOM JET BUMPER	31 SW#: 31 3 ROLLOVER	39 SW#: 39 MIDDLE RIGHT SPINNER	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 UNUSED	24 UNUSED	32 SW#: 32 PLAYFIELD TILT	40 SW#: 40 EJECT HOLE	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Bone Busters Inc by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 SW#: 30 #4 DROP TARGET	33 SW#: 40 #5 DROP TARGET	41 SW#: 50 BANK SCORING (2)	49 UNUSED	57 UNUSED
2 SW#: 1 LEFT SPOT TARGET	10 SW#: 11 CENTER LEFT TOP SPOT TARGET	18 SW#: 21 CENTER LEFT BOTTOM SPOT TARGET	26 SW#: 31 CENTER RIGHT BOTTOM SPOT TARGET	34 SW#: 41 CENTER RIGHT TOP SPOT TARGET	42 SW#: 51 RIGHT SPOT TARGET	50 UNUSED	58 UNUSED
3 SW#: 2 LEFT OUTSIDE ROLLOVER	11 SW#: 12 LEFT RETURN ROLLOVER	19 SW#: 22 LEFT KICKING TARGET	27 SW#: 32 LEFT SIDE ROLLOVER BUTTON	35 SW#: 42 LEFT SHOOTER ROLLOVER	43 SW#: 52 POP BUMPER	51 UNUSED	59 UNUSED
4 SW#: 3 RIGHT OUTSIDE ROLLOVER	12 SW#: 13 RIGHT RETURN ROLLOVER	20 SW#: 23 RIGHT TARGET KICKING	28 SW#: 33 CENTER ROLLOVER BUTTON	36 SW#: 43 SHOOTER LANE ROLLOVER	44 SW#: 53 BOTTOM LEFT FLIPPER	52 UNUSED	60 UNUSED
5 SW#: 4 TOP RAMP	13 SW#: 14 LEFT SPINNER	21 SW#: 24 RIGHT SPINNER	29 SW#: 34 TOP CENTER ROLLOVER	37 SW#: 44 TOP RIGHT ROLLUNDER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 5 CENTER RAMP	14 SW#: 15 RIGHT SIDE ROLLOVER	22 SW#: 25 RIGHT RAMP ROLLOVER	30 SW#: 35 TOP RIGHT FLIPPER	38 SW#: 45 BOTTOM RIGHT FLIPPER	46 SW#: 55 3RD POSITION TROUGH	54 UNUSED	62 UNUSED
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 SW#: 26 TOP HOLE	31 SW#: 36 BOTTOM HOLE	39 SW#: 46 UP KICKER	47 SW#: 56 OUTHOLE	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Bounty Hunter by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 LEFT SIDE ROLLOVER	41 SW#: 50 #1 SPOT TARGET	49 SW#: 60 #2 SPOT TARGET	57 SW#: 70 #3 SPOT TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 LEFT TOP ROLLUNDER	42 SW#: 51 #4 SPOT TARGET	50 SW#: 61 #5 SPOT TARGET	58 SW#: 71 #6 SPOT TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 RIGHT TOP ROLLUNDER	43 SW#: 52 #1 TOP ROLLOVER	51 SW#: 62 #2 TOP ROLLOVER	59 SW#: 72 #3 TOP ROLLOVER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 POP BUMPER (2)	44 SW#: 53 RIGHT RETURN ROLLOVER	52 SW#: 63 RIGHT OUTSIDE ROLLOVER	60 SW#: 73 HOLE KICKER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 10 POINT (4)	45 SW#: 54 LEFT RETURN ROLLOVER	53 SW#: 64 LEFT OUTSIDE ROLLOVER	61 SW#: 74 ROLLOVER TARGET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Bram Stokers Dracula by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 UPPER RAMP SHOOTER	25 SW#: 41 TROUGH 1 BALL	33 SW#: 51 OPTO T.R. LANE	41 SW#: 61 LEFT JET	49 SW#: 71 OPTO CASTLE POPPER	57 SW#: 81 MAGNET LEFT
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 UNUSED	26 SW#: 42 TROUGH 2 BALLS	34 SW#: 52 OPTO MAGNET L. POCKET	42 SW#: 62 RIGHT JET	50 SW#: 72 OPTO COFFIN POPPER	58 SW#: 82 BALL ON MAGNET
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO.	19 UNUSED	27 SW#: 43 TROUGH 3 BALLS	35 SW#: 53 OPTO CASTLE 1	43 SW#: 63 BOTTOM JET	51 SW#: 73 OPTO L. RAMP ENTRY	59 SW#: 83 MAGNET RIGHT
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 LAUNCH BALL	28 SW#: 44 TROUGH 4 BALLS	36 SW#: 54 OPTO CASTLE 2	44 SW#: 64 LEFT SLING	52 UNUSED	60 SW#: 84 L. RAMP SCORE
5 SW#: 15 L. DROP TARGET	13 SW#: 25 TOP 3-LANE LEFT	21 SW#: 35 LEFT DRAIN	29 UNUSED	37 SW#: 55 OPTO WIRE RAMP POPPER	45 SW#: 65 RIGHT SLING	53 UNUSED	61 SW#: 85 L. RAMP DIVERTED
6 SW#: 16 L. DROP SCORE	14 SW#: 26 TOP 3-LANE MIDDLE	22 SW#: 36 LEFT RETURN	30 UNUSED	38 SW#: 56 OPTO CRYPT POPPER	46 SW#: 66 LEFT 3-BANK TOP	54 UNUSED	62 SW#: 86 MIDDLE LEFT 3-BANK
7 SW#: 17 SHOOTER LANE	15 SW#: 27 TOP 3-LANE RIGHT	23 SW#: 37 RIGHT RETURN	31 UNUSED	39 SW#: 57 OPTO CASTLE 3	47 SW#: 67 LEFT 3-BANK MIDDLE	55 SW#: 77 R. RAMP UP	63 SW#: 87 MIDDLE 3-BANK MIDDLE
8 UNUSED	16 SW#: 28 R. RAMP SCORE	24 SW#: 38 RIGHT DRAIN	32 SW#: 48 OUTHOLE	40 SW#: 58 MYSTER HOLE	48 SW#: 68 LEFT 3-BANK BOTTOM	56 UNUSED	64 SW#: 88 MIDDLE RIGHT 3-BANK

SW# number is the switch number as known to the game.

Buck Rogers by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 #1 VARI-TARGET	10 SW#: 11 BULLS-EYE TARGET	18 UNUSED	26 SW#: 13 #1 YELLOW DROP TARGET	34 SW#: 14 #2 YELLOW DROP TARGET
3 SW#: 20 #2 VARI-TARGET	11 SW#: 21 10 POINT (4) SWITCHES	19 UNUSED	27 SW#: 23 #3 YELLOW DROP TARGET	35 SW#: 24 #4 YELLOW DROP TARGET
4 SW#: 30 #3 VARI-TARGET	12 SW#: 31 POP BUMPERS (2) AND ROLLOVER BUTTONS (2)	20 UNUSED	28 SW#: 33 #1 RED DROP TARGET	36 SW#: 34 #2 RED DROP TARGET
5 SW#: 40 #4 VARI-TARGET	13 SW#: 41 KICKOUT HOLE	21 UNUSED	29 SW#: 43 #3 RED DROP TARGET	37 SW#: 44 #4 RED DROP TARGET
6 SW#: 50 #5 VARI-TARGET	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 54 50 POINT (4) SWITCHES
7 SW#: 60 #6 VARI-TARGET	15 SW#: 61 OUTSIDE (2) ROLLOVERS	23 UNUSED	31 SW#: 63 RIGHT SIDE ROLLOVER	39 UNUSED
8 SW#: 70 "B" ROLLOVER (2)	16 SW#: 71 "U" ROLLOVER	24 UNUSED	32 SW#: 73 "C" ROLLOVER	40 SW#: 74 "K" ROLLOVER (2)

SW# number is the switch number as known to the game.

Bugs Bunnys Birthday Ball by Williams

1 SW#: 1 PLUMB BOB TILT	9 UNUSED	17 SW#: 17 STANDUP (SKILL)	25 SW#: 25 L (IN LOONEY)	33 SW#: 33 N (IN TUNES)	41 SW#: 41 TAZZ RAMP ENTRY	49 SW#: 49 TOP SLING	57 SW#: 57 LANE CHANGE (R FLIPPER)
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 TOP LAUNCH	26 SW#: 26 O (IN LOONEY)	34 SW#: 34 E (IN TUNES)	42 SW#: 42 TAZZ RAMP SCORE	50 SW#: 50 TOP RIGHT 10 PT	58 SW#: 58 LANE CHANGE (L FLIPPER)
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1 (RIGHT)	19 SW#: 19 STANDUP (BY DR TGT)	27 SW#: 27 O (IN LOONEY)	35 SW#: 35 S (IN TUNES)	43 UNUSED	51 SW#: 51 LEFT OUTLANE	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (LEFT)	20 SW#: 20 RIGHT (R DR 3-BK TGT)	28 SW#: 28 N (IN LOONEY)	36 SW#: 36 TOP LANE LEFT	44 SW#: 44 TOP (MINI LEFT)	52 SW#: 52 LEFT JET BUMPER	60 SW#: 60 RIGHT (L DR 3-BK TGT)
5 SW#: 5 CENTER COIN CHUTE	13 UNUSED	21 SW#: 21 MIDDLE (R DR 3-BK TGT)	29 SW#: 29 E (IN LOONEY)	37 SW#: 37 TOP LANE MIDDLE	45 SW#: 45 BOTTOM (MINI LEFT)	53 SW#: 53 RIGHT JET BUMPER	61 SW#: 61 MIDDLE (L DR 3-BK TGT)
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 SHOOTER LANE	22 SW#: 22 LEFT (R 3-BK DR TGT)	30 SW#: 30 Y (IN LOONEY)	38 SW#: 38 TOP LANE RIGHT	46 SW#: 46 RIGHT OUTLANE	54 SW#: 54 LOWER JET BUMPER	62 SW#: 62 LEFT (L 3-BK DR TGT)
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT RAMP	23 SW#: 23 SPINNER	31 SW#: 31 T (IN TUNES)	39 SW#: 39 CAPTIVE BALL TOP	47 SW#: 47 L RETURN LANE	55 SW#: 55 BL KICKER ("SLING")	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 EJECT HOLE	24 SW#: 24 STANDUP (BY "L")	32 SW#: 32 U (IN TUNES)	40 SW#: 40 CAPTIVE BALL BOTTOM	48 SW#: 48 R RETURN LANE	56 SW#: 56 BR KICKER ("SLING")	64 UNUSED

SW# number is the switch number as known to the game.

Cactus Canyon by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 MINE POPPER	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 DROP #1 LEFT	49 SW#: 71 TRAIN ENCODER	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 SALOON POPPER	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 DROP #2 LEFT CENTER	50 SW#: 72 TRAIN HOME	58 SW#: 82 CENTER RAMP ENTER
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 TROUGH BALL 2	27 UNUSED	35 SW#: 53 LEFT JET BUMPER	43 SW#: 63 DROP #3 RIGHT CENTER	51 SW#: 73 SALOON GATE	59 SW#: 83 LEFT RAMP MAKE
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 TOP RIGHT STANDUP	36 SW#: 54 RIGHT JET BUMPER	44 SW#: 64 DROP #4 RIGHT	52 UNUSED	60 SW#: 84 CENTER RAMP MAKE
5 SW#: 15 MINE ENTRANCE	13 UNUSED	21 SW#: 35 TROUGH BALL 4	29 UNUSED	37 SW#: 55 BOTTOM JET BUMPER	45 SW#: 65 RIGHT RAMP MAKE	53 SW#: 75 SALOON BART TOY	61 SW#: 85 LEFT RAMP ENTER
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 LEFT LOOP BOTTOM	30 SW#: 46 BEER MUG SWITCH	38 SW#: 56 RIGHT LOOP TOP	46 SW#: 66 RIGHT RAMP ENTER	54 UNUSED	62 SW#: 86 TOP LEFT STANDUP
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 RIGHT LOOP BOTTOM	31 SW#: 47 LEFT BONUS "X" LANE	39 SW#: 57 RIGHT BONUS "X" LANE	47 SW#: 67 SKILL BOWL	55 SW#: 77 MINE HOME	63 SW#: 87 BOTTOM LEFT STANDUP
8 SW#: 18 SHOOTER LANE	16 SW#: 28 BOTTOM RIGHT STANDUP	24 UNUSED	32 SW#: 48 JET EXIT	40 SW#: 58 LEFT LOOP TOP	48 SW#: 68 BOTTOM RIGHT RAMP	56 SW#: 78 MINE ENCODER	64 UNUSED

SW# number is the switch number as known to the game.

Cactus Jacks by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT ADVANCE BUTTON	41 SW#: 5 RIGHT BUTTON ADVANCE	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 #1 TOP ROLLOVER	50 SW#: 16 #1 BOTTOM DROP TARGET	58 SW#: 17 #1 TOP DROP TARGET
3 SW#: 20 LEFT "BANJO" SPOT TARGET	11 SW#: 21 TOP UPKICKER	19 SW#: 22 BOTTOM UPKICKER	27 SW#: 23 LEFT OUTSIDE ROLLOVER	35 SW#: 24 RIGHT OUTSIDE ROLLOVER	43 SW#: 25 #2 TOP ROLLOVER	51 SW#: 26 #2 BOTTOM DROP TARGET	59 SW#: 27 #2 TOP DROP TARGET
4 SW#: 30 CENTER SPOT "BANJO" TARGET	12 SW#: 31 "BANJO BONUS" ROLLOVER	20 SW#: 32 SUBWAY ROLLOVER	28 SW#: 33 LEFT RETURN ROLLOVER	36 SW#: 34 RIGHT RETURN ROLLOVER	44 SW#: 35 #3 TOP ROLLOVER	52 SW#: 36 #3 BOTTOM DROP TARGET	60 SW#: 37 #3 TOP DROP TARGET
5 SW#: 40 RIGHT SPOT "BANJO" TARGET	13 SW#: 41 TOP RIGHT SPOT TARGET	21 SW#: 42 SHOOTER LANE ROLLOVER	29 SW#: 43 OUTHOLE	37 SW#: 44 TROUGH	45 SW#: 45 #4 TOP ROLLOVER	53 SW#: 46 #4 BOTTOM DROP TARGET	61 SW#: 47 #4 TOP DROP TARGET
6 SW#: 50 LEFT RAMP SWITCH	14 SW#: 51 RIGHT RAMP SWITCH	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Car Hop by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT BLACK BUTTON	41 SW#: 5 RIGHT BLACK BUTTON	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 LEFT KICKING RUBBER	10 SW#: 11 RIGHT RUBBER KICKING	18 SW#: 12 #1 SPOT TARGET	26 SW#: 13 SPINNER	34 SW#: 14 TOP ROLLOVER	42 SW#: 15 10PT DT	50 SW#: 16 L.DROP #1 TARGET	58 SW#: 17 R.DROP #1 TARGET
3 SW#: 20 BOTTOM LEFT ROLLOVER BUTTON	11 SW#: 21 BOTTOM RIGHT ROLLOVER BUTTON	19 SW#: 22 #2 SPOT TARGET	27 SW#: 23 TOP LEFT ROLLOVER BUTTON	35 SW#: 24 TOP RIGHT ROLLOVER BUTTON	43 SW#: 25 OUTHOLE	51 SW#: 26 L.DROP #2 TARGET	59 SW#: 27 R.DROP #2 TARGET
4 SW#: 30 LEFT OUTSIDE ROLLOVER	12 SW#: 31 RIGHT OUTSIDE ROLLOVER	20 SW#: 32 #3 SPOT TARGET	28 SW#: 33 INNER TARGET BULLSEYE	36 SW#: 34 TOP SHOOTER LANE ROLLOVER	44 UNUSED	52 SW#: 36 L. DROP #3 TARGET	60 SW#: 37 R. DROP #3 TARGET
5 SW#: 40 LEFT HOLE	13 SW#: 41 RIGHT HOLE	21 SW#: 42 LEFT SIDE ROLLOVER	29 SW#: 43 OUTER TARGET BULLSEYE	37 SW#: 44 BOTTOM LANE SHOOTER ROLLOVER	45 SW#: 45 ROLLOVER DROP TARGET	53 SW#: 46 L.DROP #4 TARGET	61 SW#: 47 R.DROP #4 TARGET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 SW#: 55 RIGHT SIDE ROLLOVER	54 SW#: 56 L.DROP #5 TARGET	62 SW#: 57 R.DROP #5 TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Catacomb by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 SW#: 4 SPINNER	33 SW#: 5 SPINNER LANE GATE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 L. FLIPPER BUTTON
2 SW#: 9 TOP THUMPER BUMPER	10 SW#: 10 BOTTOM THUMPER BUMPER	18 SW#: 11 TOP SLINGSHOT	26 SW#: 12 LEFT SLINGSHOT	34 SW#: 13 RIGHT SLINGSHOT	42 SW#: 14 DROP TARGET SET "A" (RT.)	50 SW#: 15 DROP TARGET SET "A" (MID.)	58 SW#: 16 DROP TARGET SET "A" (L.)
3 SW#: 17 OUTHOLE REFLEX	11 SW#: 18 LEFT OUT LANE	19 SW#: 19 RIGHT OUT LANE	27 SW#: 20 LEFT RETURN LANE	35 SW#: 21 RIGHT RETURN LANE	43 SW#: 22 DROP TARGET SET "B" (RT.)	51 SW#: 23 DROP TARGET SET "B" (MID.)	59 SW#: 24 DROP TARGET SET "B" (L.)
4 SW#: 25 SPOT 6 ROLL OVER WIRE	12 SW#: 26 SPOT 1 ROLL OVER WIRE	20 SW#: 27 SPOT 2 STAND-UP TARGET	28 SW#: 28 TOP SWITCH ROLL OVER	36 SW#: 29 TOP RIGHT ROLL OVER WIRE	44 SW#: 30 DROP TARGET SET "C" (RT.)	52 SW#: 31 DROP TARGET SET "C" (MID.)	60 SW#: 32 DROP TARGET SET "C" (L.)
5 SW#: 33 RIGHT OUTHOLE	13 SW#: 34 MIDDLE OUTHOLE	21 SW#: 35 LEFT OUTHOLE	29 SW#: 36 LEFT KICKOUT HOLE	37 SW#: 37 RIGHT HOLE KICKOUT	45 SW#: 38 DROP TARGET SET "D" (RT.)	53 SW#: 39 DROP TARGET SET "D" (MID.)	61 SW#: 40 DROP TARGET SET "D" (L.)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Caveman by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 LEFT DROP TARGET	41 SW#: 50 #2 LEFT DROP TARGET	49 SW#: 60 #3 LEFT DROP TARGET	57 SW#: 70 #4 LEFT DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #1 RIGHT DROP TARGET	42 SW#: 51 #2 RIGHT DROP TARGET	50 SW#: 61 #3 RIGHT DROP TARGET	58 SW#: 71 #4 RIGHT DROP TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 LEFT AND #1 RIGHT VARI-TARGET POS.	43 SW#: 52 LEFT AND #2 RIGHT VARI-TARGET POS.	51 SW#: 62 LEFT AND #4 RIGHT VARI-TARGET POS.	59 SW#: 72 LEFT AND #6 RIGHT VARI-TARGET POS.
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT SHOOTER	44 SW#: 53 RIGHT SHOOTER	52 SW#: 63 POP BUMPERS (3)	60 SW#: 73 TEN POINT SWITCHES (4)
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 LEFT SIDE ROLLOVER	45 SW#: 54 LEFT KICKING TARGET	53 SW#: 64 RIGHT TARGET KICKING	61 SW#: 74 RIGHT SIDE ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT OUTSIDE ROLLOVER	46 SW#: 55 LEFT RETURN ROLLOVER	54 SW#: 65 RIGHT RETURN ROLLOVER	62 SW#: 75 RIGHT OUTSIDE ROLLOVER
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 SW#: 56 TILT SWITCH PLAYBOARD	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Centaur by Bally

1 SW#: 1 4TH BALL TROUGH	9 SW#: 2 5TH BALL TROUGH	17 SW#: 3 TOP RIGHT LANE	25 SW#: 4 TOP MIDDLE LANE	33 SW#: 5 TOP LEFT LANE	41 SW#: 6 CREDIT BUTTON	49 UNUSED	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 TOP LEFT 2 TARGETS, TARGET BEHIND	34 SW#: 13 RIGHT THUMPER BUMPER	42 SW#: 14 TILT (3)	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 1ST BALL TROUGH	11 SW#: 18 LEFT SIDE R.O. BUTTON (2)	19 SW#: 19 ORBS RIGHT LANE TARGET	27 SW#: 20 INLINE BACK TARGET	35 SW#: 21 LEFT & RIGHT FLIPPER BUTTON	43 SW#: 22 RESET 1-4 TARGETS, TARGET	51 UNUSED	59 SW#: 24 TOP SPOT 1-4 TARGET
4 SW#: 25 RIGHT 4 DROP TARGET "4" (BOTTOM)	12 SW#: 26 RIGHT 4 DROP TARGET "3"	20 SW#: 27 RIGHT 4 DROP TARGET "2"	28 SW#: 28 RIGHT 4 DROP TARGET "1" (TOP)	36 SW#: 29 "S" DROP TARGET	44 SW#: 30 "B" DROP TARGET	52 SW#: 31 "R" DROP TARGET	60 SW#: 32 "O" DROP TARGET
5 SW#: 33 END OF TROUGH	13 SW#: 34 10 POINT (5) REBOUND	21 UNUSED	29 UNUSED	37 SW#: 37 RIGHT SLINGSHOT	45 SW#: 38 LEFT SLINGSHOT	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 SW#: 41 1ST INLINE DROP TARGET	14 SW#: 42 2ND INLINE DROP TARGET	22 SW#: 43 3RD INLINE DROP TARGET	30 SW#: 44 4TH INLINE DROP TARGET	38 SW#: 45 RIGHT OUTLANE	46 SW#: 46 RIGHT RETURN LANE	54 SW#: 47 LEFT RETURN LANE	62 SW#: 48 LEFT OUTLANE
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

A FEW BALLY GAMES HAVE A 5TH STROBE (STROBE5) COMING FROM A DIFFERENT MPU HEADER THAT ALLOWS FOR AN ADDITIONAL 8 SWITCHES (SWITCHES 41-48). THIS IS NOT PART OF THE NORMAL WIRE HARNESS USED WITH THE 64 SWITCH MATRIX TESTER SINCE THIS IS ONLY A VERY LIMITED NUMBER OF GAMES. SWITCHES 41-48 WOULD NEED TO BE MANUALLY TESTED ON THE GAME. SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Centaur II by Bally

1 SW#: 1 4TH BALL TROUGH	9 SW#: 2 5TH BALL TROUGH	17 SW#: 3 TOP RIGHT LANE	25 SW#: 4 TOP MIDDLE LANE	33 SW#: 5 TOP LEFT LANE	41 SW#: 6 CREDIT BUTTON	49 UNUSED	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 TOP LEFT 2 TARGETS, TARGET BEHIND	34 SW#: 13 RIGHT THUMPER BUMPER	42 SW#: 14 TILT (3)	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 1ST BALL TROUGH	11 SW#: 18 LEFT SIDE R.O. BUTTON (2)	19 SW#: 19 ORBS RIGHT LANE TARGET	27 SW#: 20 INLINE BACK TARGET	35 SW#: 21 LEFT & RIGHT FLIPPER BUTTON	43 SW#: 22 RESET 1-4 TARGETS, TARGET	51 UNUSED	59 SW#: 24 TOP SPOT 1-4 TARGET
4 SW#: 25 RIGHT 4 DROP TARGET "4" (BOTTOM)	12 SW#: 26 RIGHT 4 DROP TARGET "3"	20 SW#: 27 RIGHT 4 DROP TARGET "2"	28 SW#: 28 RIGHT 4 DROP TARGET "1" (TOP)	36 SW#: 29 "S" DROP TARGET	44 SW#: 30 "B" DROP TARGET	52 SW#: 31 "R" DROP TARGET	60 SW#: 32 "O" DROP TARGET
5 SW#: 33 END OF TROUGH	13 SW#: 34 10 POINT (5) REBOUND	21 UNUSED	29 UNUSED	37 SW#: 37 RIGHT SLINGSHOT	45 SW#: 38 LEFT SLINGSHOT	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 SW#: 41 1ST INLINE DROP TARGET	14 SW#: 42 2ND INLINE DROP TARGET	22 SW#: 43 3RD INLINE DROP TARGET	30 SW#: 44 4TH INLINE DROP TARGET	38 SW#: 45 RIGHT OUTLANE	46 SW#: 46 RIGHT RETURN LANE	54 SW#: 47 LEFT RETURN LANE	62 SW#: 48 LEFT OUTLANE
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

A FEW BALLY GAMES HAVE A 5TH STROBE (STROBE5) COMING FROM A DIFFERENT MPU HEADER THAT ALLOWS FOR AN ADDITIONAL 8 SWITCHES (SWITCHES 41-48). THIS IS NOT PART OF THE NORMAL WIRE HARNESS USED WITH THE 64 SWITCH MATRIX TESTER SINCE THIS IS ONLY A VERY LIMITED NUMBER OF GAMES. SWITCHES 41-48 WOULD NEED TO BE MANUALLY TESTED ON THE GAME. SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Charlies Angels by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 #1 WHITE DROP TARGET	10 SW#: 11 #2 WHITE DROP TARGET	18 SW#: 12 #3 WHITE DROP TARGET	26 SW#: 13 LEFT RETURN ROLLOVER	34 SW#: 14 LEFT & RIGHT OUTSIDE ROLLOVERS (2)
3 SW#: 20 #1 ROLLOVER BUTTON	11 SW#: 21 #2 ROLLOVER BUTTON	19 SW#: 22 #3 ROLLOVER BUTTON	27 SW#: 23 #4 ROLLOVER BUTTON	35 SW#: 24 #5 ROLLOVER BUTTON
4 SW#: 30 #1 RED DROP TARGET	12 SW#: 31 #2 RED DROP TARGET	20 SW#: 32 #3 RED DROP TARGET	28 SW#: 33 #4 RED DROP TARGET	36 SW#: 34 #5 RED DROP TARGET
5 SW#: 40 "C" ROLLOVER (2)	13 SW#: 41 "H" ROLLOVER	21 SW#: 42 "I" ROLLOVER	29 SW#: 43 RIGHT RETURN ROLLOVER	37 SW#: 44 BULLSEYE TARGET
6 SW#: 50 POP BUMPER (2)	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 54 10 POINT (6) SWITCHES
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Checkpoint by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 TOP LANE L	33 SW#: 33 DROP TARGET "C"	41 SW#: 41 DROP TARGET "E"	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 TOP LANE A	34 SW#: 34 DROP TARGET "A"	42 SW#: 42 DROP TARGET "R"	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 TOP LANE P	35 SW#: 35 DROP TARGET "R"	43 SW#: 43 DROP TARGET "A"	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 RIGHT RETURN	28 SW#: 28 RAMP ENTRANCE	36 SW#: 36 DROP TARGET "R"	44 SW#: 44 CHECKER DROP TARGET	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 RAMP EXIT	37 SW#: 37 PITSTOP EJECT	45 SW#: 45 NITRO TARGET	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 VUK EJECT	38 SW#: 38 SPINNER	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 FLAT TIRE	31 UNUSED	39 UNUSED	47 SW#: 47 CENTER TURBO BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 VUK ENTRANCE	32 UNUSED	40 UNUSED	48 SW#: 48 RIGHT TURBO BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Cheetah by Stern

1 SW#: 1 COIN CHUTE	9 SW#: 2 COIN CHUTE	17 SW#: 3 COIN CHUTE	25 SW#: 4 LEFT SPIN-TARGET	33 SW#: 5 RIGHT SPIN-TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 EXTRA BALL SPIN-TARGET	10 SW#: 10 STAND-UP TARGET	18 SW#: 11 SLING-SHOT (LOW. RT.)	26 SW#: 12 THUMPER BUMPER (TOP)	34 SW#: 13 THUMPER BUMPER (LOW.)	42 SW#: 14 THUMPER BUMPER (MIDDLE)	50 SW#: 15 SLING-SHOT (UPPER RT.)	58 SW#: 16 SLING-SHOT (LEFT)
3 SW#: 17 3-BANK DROP-TARGETS (ARCH)	11 SW#: 18 3-BANK DROP-TARGETS (ARCH)	19 SW#: 19 3-BANK DROP-TARGETS (ARCH)	27 SW#: 20 5-BANK (LT.) DROP-TARGETS	35 SW#: 21 5-BANK (LT.) DROP-TARGETS	43 SW#: 22 5-BANK (LT.) DROP-TARGETS	51 SW#: 23 5-BANK (LT.) DROP-TARGETS	59 SW#: 24 5-BANK (LT.) DROP-TARGETS
4 SW#: 25 3-BANK DROP TARGETS (TOP)	12 SW#: 26 3-BANK DROP TARGETS (TOP)	20 SW#: 27 3-BANK DROP TARGETS (TOP)	28 SW#: 28 3-BANK DROP TARGETS (RIGHT)	36 SW#: 29 3-BANK DROP TARGETS (RIGHT)	44 SW#: 30 3-BANK DROP TARGETS (RIGHT)	52 SW#: 31 ROLL-OVER WIRE (UPPER LT.)	60 SW#: 32 BALL KICKER
5 SW#: 33 OUT-HOLE	13 SW#: 34 RIGHT OUT-LANE	21 SW#: 35 LEFT OUT-LANE	29 SW#: 36 RIGHT RETURN LANE	37 SW#: 37 LEFT RETURN LANE	45 SW#: 38 RIGHT EXTRA BALL LANE	53 SW#: 39 LEFT EXTRA BALL LANE	61 SW#: 40 10-POINTS
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Chicago Cubs Triple Play by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 10 POINT (4)	41 SW#: 50 #1 DROP TARGET	49 SW#: 60 #2 DROP TARGET	57 SW#: 70 #3 DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 POP BUMPER (3)	42 SW#: 51 #4 DROP TARGET	50 SW#: 61 #5 DROP TARGET	58 SW#: 71 #6 DROP TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 SPOT TARGET	43 SW#: 52 #1 TOP ROLLOVER	51 SW#: 62 #2 TOP ROLLOVER	59 SW#: 72 #3 TOP ROLLOVER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 HOLE	44 SW#: 53 SPINNER	52 SW#: 63 LEFT RETURN ROLLOVER	60 SW#: 73 LEFT SIDE ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 SW#: 54 OUTSIDE (2) ROLLOVERS	53 SW#: 64 RIGHT RETURN ROLLOVER	61 SW#: 74 RIGHT SIDE ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Circus by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 UNUSED	33 SW#: 40 #4 DROP TARGET	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 1 #1 ROLLOVER	10 SW#: 11 #2 ROLLOVER	18 SW#: 21 #3 ROLLOVER	26 UNUSED	34 SW#: 41 #4 ROLLOVER	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 2 "A" TARGET	11 SW#: 12 "B" TARGET	19 SW#: 22 "C" TARGET	27 UNUSED	35 SW#: 42 LEFT ROTO - TARGET 1	43 SW#: 52 CENTER ROTO TARGET - 1	51 SW#: 62 RIGHT ROTO - TARGET 1	59 UNUSED
4 SW#: 3 LEFT SIDE ROLLOVER	12 SW#: 13 LEFT RETURN ROLLOVER	20 SW#: 23 HOLE	28 UNUSED	36 SW#: 43 LEFT ROTO - TARGET 2	44 SW#: 53 CENTER ROTO TARGET - 2	52 SW#: 63 RIGHT ROTO - TARGET 2	60 UNUSED
5 SW#: 4 RIGHT SIDE ROLLOVER	13 SW#: 14 RIGHT RETURN ROLLOVER	21 SW#: 24 BALL BACK ROLLOVER	29 UNUSED	37 SW#: 44 LEFT ROTO - TARGET 3	45 SW#: 54 CENTER ROTO TARGET - 3	53 SW#: 64 RIGHT ROTO - TARGET 3	61 UNUSED
6 SW#: 5 CENTER ROLLOVER RIGHT	14 SW#: 15 LEFT AND OUTSIDE ROLLOVERS	22 SW#: 25 SPIN TARGET	30 UNUSED	38 SW#: 45 LEFT ROTO - TARGET 4	46 SW#: 55 CENTER ROTO TARGET - 4	54 SW#: 65 RIGHT ROTO - TARGET 4	62 UNUSED
7 SW#: 6 10 POINT CONTACTS	15 SW#: 16 50 POINT CONTACTS	23 SW#: 26 POP BUMPERS (2)	31 UNUSED	39 SW#: 46 LEFT ROTO - TARGET STAR	47 SW#: 56 CENTER ROTO TARGET - STAR	55 SW#: 66 RIGHT ROTO - TARGET STAR	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Cirque Voltaire by Williams

1 SW#: 11 BACKBOX LUCK	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 LEFT LANE	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 LIGHT TARGET STANDUP	49 SW#: 71 LEFT SAUCER	57 UNUSED
2 SW#: 12 WIRE RAMP ENTER	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 RING-MASTER UP	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 LOCK STANDUP TARGET	50 SW#: 72 RIGHT SAUCER	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 RIGHT LOOP UPPER	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 RING-MASTER MIDDLE	35 SW#: 53 UPPER JET BUMPER	43 SW#: 63 RAMP ENTER	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 RING-MASTER DOWN	36 SW#: 54 MIDDLE JET BUMPER	44 SW#: 64 RAMP MAGNET	52 SW#: 74 BIG BALL REBOUND	60 UNUSED
5 SW#: 15 LEFT LOOP UPPER	13 SW#: 25 INNER LOOP LEFT	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 LEFT RAMP MADE	37 SW#: 55 LOWER JET BUMPER	45 SW#: 65 RAMP MADE	53 SW#: 75 VOLT RIGHT	61 UNUSED
6 SW#: 16 TOP EDDY	14 SW#: 26 LEFT IN-LANE	22 SW#: 36 POPPER OPTO	30 SW#: 46 TROUGH UPPER	38 SW#: 56 SKILL SHOT	46 SW#: 66 RAMP LOCK LOW	54 SW#: 76 VOLT LEFT	62 UNUSED
7 SW#: 17 RIGHT IN-LANE	15 SW#: 27 LEFT OUTLANE	23 SW#: 37 "WOW" TARGETS	31 SW#: 47 TROUGH MIDDLE	39 SW#: 57 RIGHT OUTLANE	47 SW#: 67 RAMP LOCK MIDDLE	55 UNUSED	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 SW#: 28 INNER LOOP RIGHT	24 SW#: 38 TOP TARGETS	32 SW#: 48 LEFT LOOP ENTER	40 SW#: 58 RING 'N', 'G'	48 SW#: 68 RAMP LOCK HIGH	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

City Slicker by Bally

1 SW#: 1 ROLLOVER #1 BUTTON	9 SW#: 2 ROLLOVER #2 BUTTON	17 SW#: 3 ROLLOVER #3 BUTTON	25 SW#: 4 ROLLOVER #4 BUTTON	33 SW#: 5 LEFT FLIPPER	41 SW#: 6 CREDIT	49 SW#: 7 RIGHT FLIPPER	57 SW#: 8 OUTHOLE
2 SW#: 9 RIGHT COINS	10 SW#: 10 LEFT COINS	18 SW#: 11 MIDDLE COINS	26 SW#: 12 LEFT RETURN LANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT (CABINET)	58 SW#: 16 TOP SAUCER
3 SW#: 17 TOP LEFT TARGET	11 SW#: 18 TOP MIDDLE TARGET	19 SW#: 19 TOP RIGHT TARGET	27 SW#: 20 LEFT GATE LANE	35 SW#: 21 RIGHT GATE LANE	43 SW#: 22 RIGHT UPTOWN TARGET	51 SW#: 23 MIDDLE UPTOWN TARGET	59 SW#: 24 LEFT UPTOWN TARGET
4 SW#: 25 LEFT THUMPER BUMPER	12 SW#: 26 RIGHT BUMPER THUMPER	20 SW#: 27 MIDDLE THUMPER BUMPER	28 SW#: 28 LEFT SLINGSHOT	36 SW#: 29 RIGHT SLINGSHOT	44 SW#: 30 TOP THUMPER BUMPER	52 SW#: 31 BALL TROUGH #2	60 SW#: 32 MIDDLE SAUCER
5 SW#: 33 LEFT BOTTOM TARGET	13 SW#: 34 LEFT MIDDLE TARGET	21 SW#: 35 LEFT TOP TARGET	29 SW#: 36 RIGHT BOTTOM TARGET	37 SW#: 37 RIGHT MIDDLE TARGET	45 SW#: 38 RIGHT TOP TARGET	53 SW#: 39 BALL TROUGH #1	61 SW#: 40 OUTLANES
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Class of 1812 by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT ADVANCE BUTTON	41 SW#: 5 RIGHT BUTTON ADVANCE	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 SPINNER	50 SW#: 16 LEFT DROP #1 TARGET	58 SW#: 17 RIGHT DROP TARGET #1
3 SW#: 20 LEFT SPOT #1 TARGET	11 SW#: 21 CENTER SPOT TARGET #1	19 SW#: 22 RIGHT SPOT TARGET #1	27 SW#: 23 LEFT RETURN ROLLOVER	35 SW#: 24 RIGHT RETURN ROLLOVER	43 SW#: 25 TOP ROLLOVER #1	51 SW#: 26 LEFT DROP #2 TARGET	59 SW#: 27 RIGHT DROP TARGET #2
4 SW#: 30 LEFT SPOT #2 TARGET	12 SW#: 31 CENTER SPOT TARGET #2	20 SW#: 32 RIGHT SPOT TARGET #2	28 SW#: 33 LEFT OUTSIDE ROLLOVER	36 SW#: 34 RIGHT OUTSIDE ROLLOVER	44 SW#: 35 TOP ROLLOVER #2	52 SW#: 36 LEFT DROP #3 TARGET	60 SW#: 37 RIGHT DROP TARGET #3
5 SW#: 40 LEFT SPOT #3 TARGET	13 SW#: 41 CENTER SPOT TARGET #3	21 SW#: 42 RIGHT SPOT TARGET #3	29 SW#: 43 SHOOTER LANE ROLLOVER	37 SW#: 44 TROUGH	45 SW#: 45 TOP ROLLOVER #3	53 SW#: 46 LEFT DROP #4 TARGET	61 SW#: 47 RIGHT DROP TARGET #4
6 SW#: 50 RIGHT RAMP	14 SW#: 51 LEFT RAMP	22 SW#: 52 BOTTOM UPKICKER	30 SW#: 53 TOP KICKER	38 SW#: 54 OUTHOLE	46 SW#: 55 TOP KICKER ROLLOVER	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Cleopatra by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 10 POINT SWITCHES (10)	10 SW#: 11 CENTER POP BUMPER	18 SW#: 12 RIGHT SIDE TARGET	26 SW#: 13 CENTER TARGET	34 SW#: 14 LEFT SIDE TARGET
3 SW#: 20 BLUE (2) ROLLOVERS	11 SW#: 21 GREEN (2) ROLLOVERS	19 SW#: 22 RIGHT & LEFT STAR ROLLOVERS (2)	27 SW#: 23 WHITE DROP TARGET	35 SW#: 24 YELLOW DROP TARGET
4 SW#: 30 GREEN DROP TARGET	12 SW#: 31 RED ROLLOVER	20 SW#: 32 RED DROP TARGET	28 SW#: 33 YELLOW (2) ROLLOVERS	36 SW#: 34 WHITE (2) ROLLOVERS
5 SW#: 40 RIGHT & LEFT POP BUMPERS (2)	13 SW#: 41 RIGHT HOLE	21 SW#: 42 LEFT HOLE	29 SW#: 43 BLUE DROP TARGET	37 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Close Encounters by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 SPINNING TARGET	10 SW#: 11 LEFT TARGET	18 SW#: 12 "A" ROLLOVER	26 SW#: 13 "B" ROLLOVER	34 SW#: 14 "C" ROLLOVER
3 SW#: 20 #1 DROP TARGET	11 SW#: 21 POP BUMPER (2)	19 UNUSED	27 UNUSED	35 UNUSED
4 SW#: 30 #3 DROP TARGET	12 SW#: 31 10 POINT (8) TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	20 SW#: 32 LEFT ROTO TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	28 SW#: 33 CENTER ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.	36 SW#: 34 RIGHT ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.
5 SW#: 40 #5 DROP TARGET	13 SW#: 41 RIGHT AND/OR RIGHT ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.	21 SW#: 42 LEFT ROTO TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	29 SW#: 43 CENTER ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.	37 SW#: 44 RIGHT ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.
6 SW#: 50 #2 DROP TARGET	14 SW#: 51 LOWER TARGET TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	22 SW#: 52 LEFT ROTO TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	30 SW#: 53 CENTER ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.	38 SW#: 54 RIGHT ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.
7 SW#: 60 #4 DROP TARGET	15 SW#: 61 UPPER TARGET TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	23 SW#: 62 LEFT ROTO TARGET SW. AND/OR LEFT OUTSIDE ROLLOVER SW.	31 SW#: 63 CENTER ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.	39 SW#: 64 RIGHT ROTO TARGET SW. AND/OR RIGHT OUTSIDE ROLLOVER SW.
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Comet by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 CORKSCREW ROLLOVER	17 SW#: 17 #4 RABBIT TARGET	25 SW#: 25 CYCLE JUMP LWR RING EJECT	33 SW#: 33 LOWER LEFT STANDUP SWITCH	41 SW#: 41 LEFT JET BUMPER	49 SW#: 49 PLAYFIELD TILT	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 #1 DUCK TARGET	18 SW#: 18 ADVANCE X BONUS (EYE)	26 SW#: 26 CYCLE JUMP CENTER RING	34 SW#: 34 UPPER LEFT STANDUP SWITCH	42 SW#: 42 LOWER JET BUMPER	50 SW#: 50 COMET RAMP EXIT SWITCH	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 #2 DUCK TARGET	19 SW#: 19 CORKSCREW EXIT SWITCH	27 SW#: 27 CYCLE JUMP UPPER RING	35 SW#: 35 UPPER RIGHT STANDUP SWITCH	43 SW#: 43 LEFT OUTSIDE LANE	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 #3 DUCK TARGET	20 SW#: 20 TOP LANE "1"	28 SW#: 28 COMET RAMP ENTRY SWITCH	36 SW#: 36 LOWER CENTER STANDUP SWITCH	44 SW#: 44 LEFT INSIDE LANE	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 #4 DUCK TARGET	21 SW#: 21 TOP LANE "9"	29 SW#: 29 "DUMMY DUNK" TARGET	37 SW#: 37 LOWER RIGHT STANDUP SWITCH	45 SW#: 45 OUTHOLE	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 #1 RABBIT TARGET	22 SW#: 22 TOP LANE "8"	30 SW#: 30 LANE CHANGE	38 SW#: 38 CENTER STANDUP SWITCH	46 SW#: 46 PLUNGER SWITCH	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 #2 RABBIT TARGET	23 SW#: 23 TOP LANE "6"	31 SW#: 31 RIGHT DRAIN SPECIAL	39 SW#: 39 CENTER RIGHT STANDUP SWITCH	47 SW#: 47 LEFT KICKER	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 #3 RABBIT TARGET	24 SW#: 24 FUN HOUSE EJECT	32 SW#: 32 LEFT DRAIN SPECIAL	40 SW#: 40 UPPER JET BUMPER	48 SW#: 48 RIGHT KICKER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Congo by Williams

1 SW#: 11 INNER LEFT LOOP	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 LOCK BALL 1	33 SW#: 51 "TRAVI"	41 SW#: 61 LEFT SLINGSHOT	49 SW#: 71 (A)MY	57 UNUSED
2 SW#: 12 UPPER LOOP	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 LOCK BALL 2	34 SW#: 52 "COM"	42 SW#: 62 RIGHT SLINGSHOT	50 SW#: 72 A(M)Y	58 UNUSED
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 LOCK BALL 3	35 SW#: 53 2-WAY POPPER	43 SW#: 63 LEFT JET BUMPER	51 SW#: 73 AM(Y)	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 "MINE SHAFT"	36 SW#: 54 "WE ARE" STANDUP TARGET	44 SW#: 64 RIGHT JET BUMPER	52 SW#: 74 (C)ONGO	60 UNUSED
5 SW#: 15 JET EXIT	13 SW#: 25 RIGHT EJECT RUBBER	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 LEFT LOOP	37 SW#: 55 "WATCHING" STANDUP TARGET	45 SW#: 65 BOTTOM JET BUMPER	53 SW#: 75 C(O)NGO	61 UNUSED
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 VOLCANO STACK	30 SW#: 46 LEFT BANK TOP	38 SW#: 56 "PERIMETER DEFENSE"	46 UNUSED	54 SW#: 76 CO(N)GO	62 UNUSED
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 "MYSTERY" EJECT	31 SW#: 47 LEFT BANK CENTER	39 SW#: 57 LEFT RAMP ENTER	47 SW#: 67 RIGHT RAMP ENTER	55 SW#: 77 CON(G)O	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 SW#: 28 "YOU" TARGET TSANDUP	24 SW#: 38 RIGHT EJECT	32 SW#: 48 LEFT BANK BOTTOM	40 SW#: 58 LEFT RAMP EXIT	48 SW#: 68 RIGHT RAMP EXIT	56 SW#: 78 CONG(O)	64 UNUSED

SW# number is the switch number as known to the game.

Contact by Williams

1 UNUSED	9 SW#: 9 "C" ROLLOVER	17 SW#: 17 RIGHT SPECIAL	25 SW#: 25 LEFT CENTER STANDUP	33 SW#: 33 TOP JET BUMPER	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 10 "O" EJECT	18 SW#: 18 BOTTOM RIGHT STANDUP	26 SW#: 26 LEFT EJECT	34 SW#: 34 LEFT JET BUMPER	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 11 "N" ROLLOVER	19 SW#: 19 RIGHT "T"	27 SW#: 27 LEFT TARGET DROP	35 SW#: 35 RIGHT JET BUMPER	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 12 SCORE GREEN VALUE	20 SW#: 20 OUTHOLE	28 SW#: 28 LEFT CENTER TARGET DROP	36 SW#: 36 "A" TARGET	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 13 TOP RIGHT TARGET	21 SW#: 21 LEFT "T"	29 SW#: 29 RIGHT CENTER TARGET DROP	37 SW#: 37 MOVING TARGET	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 14 TOP RIGHT STANDUP	22 SW#: 22 BOTTOM LEFT STANDUP	30 SW#: 30 RIGHT TARGET DROP	38 SW#: 38 "C" TARGET	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 SW#: 15 BOTTOM RIGHT TARGET	23 SW#: 23 LEFT SPECIAL	31 SW#: 31 FOUR DROP TARGETS (SERIES)	39 SW#: 39 INNER FLIPPER	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT CENTER STANDUP	24 SW#: 24 PLAYFIELD TILT	32 SW#: 32 LITE EXTRA BALL ROLLOVER	40 SW#: 40 OUTER FLIPPER	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Corvette by Williams

1 SW#: 11 LEFT OUTLANE	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH BALL 1	25 SW#: 41 ZR-1 BOTTOM ENTRY	33 SW#: 51 LEFT RACE START	41 SW#: 61 LEFT SLINGSHOT	49 SW#: 71 ZR-1 FULL LEFT	57 SW#: 81 MILLION STANDUP
2 SW#: 12 RIGHT OUTLANE	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 2	26 SW#: 42 ZR-1 TOP ENTRY	34 SW#: 52 RIGHT RACE START	42 SW#: 62 RIGHT SLINGSHOT	50 SW#: 72 ZR-1 FULL RIGHT	58 SW#: 82 SKID PAD STANDUP
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 TROUGH BALL 3	27 SW#: 43 SKID PAD ENTRY	35 UNUSED	43 SW#: 63 LEFT JET	51 UNUSED	59 SW#: 83 RIGHT STANDUP
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 4	28 SW#: 44 SKID PAD EXIT	36 UNUSED	44 SW#: 64 BOTTOM JET	52 UNUSED	60 SW#: 84 RIGHT RUBBER
5 SW#: 15 PLUNGER	13 SW#: 25 FIRST GEAR (OPTIONAL)	21 SW#: 35 ROUTE 66 ENTRY	29 SW#: 45 ROUTE 66 EXIT	37 SW#: 55 LEFT RACE ENCODER	45 SW#: 65 RIGHT JET	53 SW#: 75 ZR-1 EXIT	61 UNUSED
6 SW#: 16 LEFT RETURN LANE	14 SW#: 26 SECOND GEAR (OPTIONAL)	22 SW#: 36 PIT STOP POPPER	30 SW#: 46 LEFT STANDUP 3	38 SW#: 56 RIGHT RACE ENCODER	46 SW#: 66 LEFT ROLLOVER	54 SW#: 76 ZR-1 LOCK 1 BALL	62 SW#: 86 JET RUBBER
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 THIRD GEAR (OPTIONAL)	23 SW#: 37 TROUGH EJECT	31 SW#: 47 LEFT STANDUP 2	39 SW#: 57 ROUTE 66 KICKOUT	47 SW#: 67 MIDDLE ROLLOVER	55 SW#: 77 ZR-1 LOCK 2 BALL	63 SW#: 87 LEFT OUTER LOOP
8 SW#: 18 SPINNER	16 SW#: 28 FOURTH GEAR (OPTIONAL)	24 SW#: 38 INNER LOOP ENTRY	32 SW#: 48 LEFT STANDUP 1	40 SW#: 58 SKID ROUTE 66 EXIT	48 SW#: 68 RIGHT ROLLOVER	56 SW#: 78 ZR-1 LOCK 3 BALL	64 SW#: 88 RIGHT OUTER LOOP

SW# number is the switch number as known to the game.

Cosmic Gunfight by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 X ROLLOVER	17 UNUSED	25 SW#: 25 TOP EJECT HOLE	33 SW#: 33 A-B-C LEFT STANDUP TARGET	41 SW#: 41 LEFT 3-BANK CENTER DROP TARGET	49 SW#: 49 RIGHT LANE FLIPPER CHANGE SWITCH	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 Y ROLLOVER	18 SW#: 18 RIGHT 3-BANK STANDUP	26 SW#: 26 LOWER EJECT HOLE	34 SW#: 34 A-B-C CENTER STANDUP TARGET	42 SW#: 42 LEFT 3-BANK TOP DROP TARGET	50 SW#: 50 TOP CENTER STANDUP	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LANE 1 ROLLOVER	19 SW#: 19 LOWER RIGHT STANDUP	27 SW#: 27 RIGHT BALL RAMP SWITCH	35 SW#: 35 A-B-C RIGHT STANDUP TARGET	43 SW#: 43 CENTER LEFT 3-BANK DROP TARGET	51 SW#: 51 BALL SHOOTER ROLLOVER	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 LANE 2 ROLLOVER	20 SW#: 20 LOWER LEFT STANDUP	28 SW#: 28 LEFT BALL RAMP SWITCH	36 SW#: 36 LEFT KICKER	44 SW#: 44 CENTER DROP 3-BANK CENTER TARGET	52 SW#: 52 LEFT FLIPPER FLIPPER CHANGE SWITCH	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 LANE 3 ROLLOVER	21 SW#: 21 LEFT JET BUMPER	29 SW#: 29 OUTHOLE	37 SW#: 37 RIGHT KICKER	45 SW#: 45 CENTER RIGHT 3-BANK DROP TARGET	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 TOP RIGHT SIDE LANE ROLLOVER	22 SW#: 22 CENTER JET BUMPER	30 SW#: 30 PLAYFIELD TILT	38 SW#: 38 LEFT FLIPPER LANE ROLLOVER	46 SW#: 46 RIGHT 3-BANK BOTTOM DROP TARGET	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 TOP LEFT STANDUP	23 SW#: 23 RIGHT JET BUMPER	31 SW#: 31 OUTER LEFT DRAIN LANE ROLLOVER	39 SW#: 39 RIGHT LANE FLIPPER ROLLOVER	47 SW#: 47 RIGHT 3-BANK CENTER DROP TARGET	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 TOP RIGHT STANDUP	24 SW#: 24 BOTTOM JET BUMPER	32 SW#: 32 OUTER RIGHT DRAIN LANE ROLLOVER	40 SW#: 40 LEFT 3-BANK BOTTOM DROP TARGET	48 SW#: 48 RIGHT 3-BANK TOP DROP TARGET	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Cosmic Princess by Stern

1 SW#: 1 COIN CHUTE	9 SW#: 2 COIN CHUTE	17 SW#: 3 COIN CHUTE	25 SW#: 4 SPIN TARGET (RIGHT)	33 SW#: 5 SPIN TARGET (LEFT)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 UNUSED	10 SW#: 10 (2) BUTTON ROLL-OVER	18 UNUSED	26 SW#: 12 TOP THUMPER	34 SW#: 13 RIGHT SLING-SHOT	42 SW#: 14 LEFT SLING-SHOT	50 SW#: 15 RIGHT THUMPER	58 SW#: 16 LEFT THUMPER
3 SW#: 17 RIGHT INNER LANE (5,000)	11 SW#: 18 LEFT INNER LANE (3,000)	19 SW#: 19 RETURN LANES (RIGHT & LEFT)	27 SW#: 20 UPPER #3 ROLL-OVER	35 SW#: 21 UPPER #2 & ROLL-OVER LEFT ST. UP TARGET	43 SW#: 22 UPPER #1 & ROLL-OVER RIGHT ST. UP TARGET	51 SW#: 23 UPPER #4 & ROLL-OVER RIGHT ST. UP TARGET	59 SW#: 24 UPPER #5 ROLL-OVER
4 UNUSED	12 SW#: 26 EJECT POCKET (SAUCER)	20 SW#: 27 UPPER RIGHT ROLL-OVER BUTTON	28 SW#: 28 DROP TARGET #5	36 SW#: 29 DROP TARGET #4	44 SW#: 30 DROP TARGET #3	52 SW#: 31 DROP TARGET #2	60 SW#: 32 DROP TARGET #1
5 SW#: 33 OUT-HOLE	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 SW#: 39 LEFT & RIGHT OUT-LANE (ROLL-O-BUTTON)	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

CountDown by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 RED ROLLOVER	10 SW#: 11 GREEN ROLLOVER	18 UNUSED	26 SW#: 13 YELLOW ROLLOVER	34 SW#: 14 BLUE ROLLOVER
3 SW#: 20 #1 RED DROP TARGET	11 SW#: 21 #2 RED DROP TARGET	19 UNUSED	27 SW#: 23 #3 RED DROP TARGET	35 SW#: 24 #4 RED DROP TARGET
4 SW#: 30 #1 GREEN DROP TARGET	12 SW#: 31 #2 GREEN DROP TARGET	20 UNUSED	28 SW#: 33 #3 GREEN DROP TARGET	36 SW#: 34 #4 GREEN DROP TARGET
5 SW#: 40 LEFT BUTTON ROLLOVER	13 SW#: 41 HOLE SWITCH	21 UNUSED	29 SW#: 43 EXTRA BALL ROLLOVER	37 SW#: 44 SPECIAL ROLLOVER
6 SW#: 50 RIGHT BUTTON ROLLOVER	14 SW#: 51 POP BUMPER	22 UNUSED	30 SW#: 53 10 POINT SWITCHES (10)	38 UNUSED
7 SW#: 60 #1 YELLOW DROP TARGET	15 SW#: 61 #2 YELLOW DROP TARGET	23 UNUSED	31 SW#: 63 #3 YELLOW DROP TARGET	39 SW#: 64 #4 YELLOW DROP TARGET
8 SW#: 70 #1 BLUE DROP TARGET	16 SW#: 71 #2 BLUE DROP TARGET	24 UNUSED	32 SW#: 73 #3 BLUE DROP TARGET	40 SW#: 74 #4 BLUE DROP TARGET

SW# number is the switch number as known to the game.

Counterforce by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 SW#: 30 #4 DROP TARGET	33 SW#: 40 #5 DROP TARGET	41 SW#: 50 #6 DROP TARGET	49 SW#: 60 #7 DROP TARGET	57 SW#: 70 POP BUMPER (2)
2 SW#: 1 #1 TARGET	10 SW#: 11 #2 TARGET, #2 TOP ROLLOVER	18 SW#: 21 #3 TOP ROLLOVER	26 SW#: 31 #4 TOP ROLLOVER	34 SW#: 41 #5 TOP ROLLOVER	42 SW#: 51 #6 TARGET, #6 TOP ROLLOVER	50 SW#: 61 #7 TOP ROLLOVER	58 SW#: 71 RIGHT SIDE ROLLOVER
3 UNUSED	11 UNUSED	19 UNUSED	27 SW#: 32 #4 TARGET	35 UNUSED	43 UNUSED	51 UNUSED	59 SW#: 72 10 POINT (5)
4 SW#: 3 LEFT SIDE ROLLOVER	12 SW#: 13 LEFT OUTSIDE ROLLOVER	20 SW#: 23 LEFT RETURN ROLLOVER	28 SW#: 33 CENTER RETURN ROLLOVER	36 SW#: 43 RIGHT RETURN ROLLOVER	44 SW#: 53 RIGHT OUTSIDE ROLLOVER	52 UNUSED	60 SW#: 73 HOLE
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Creature From The Black Lagoon by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 UNUSED	25 SW#: 41 COLA	33 SW#: 51 LEFT OUTLANE	41 SW#: 61 RIGHT RAMP EXIT	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 UNUSED	26 SW#: 42 HOT DOG	34 SW#: 52 LEFT RETURN LANE	42 SW#: 62 LEFT RAMP EXIT	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 BOTTOM JET	27 SW#: 43 POPCORN	35 SW#: 53 START COMBO	43 SW#: 63 CENTER LANE EXIT	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 UNUSED	20 SW#: 34 RIGHT POPPER	28 SW#: 44 ICE CREAM	36 SW#: 54 RIGHT OUTLANE	44 SW#: 64 UPPER RAMP	52 UNUSED	60 UNUSED
5 SW#: 15 TOP LEFT ROLLOVER	13 SW#: 25 P OF P-A-I-D	21 SW#: 35 RIGHT RAMP ENTER	29 SW#: 45 LEFT JET	37 SW#: 55 OUTHOLE	45 SW#: 65 BOWL	53 UNUSED	61 UNUSED
6 SW#: 16 LEFT SUBWAY	14 SW#: 26 A OF P-A-I-D	22 SW#: 36 LEFT RAMP ENTER	30 SW#: 46 RIGHT JET	38 SW#: 56 RIGHT TROUGH	46 SW#: 66 SHOOTER	54 UNUSED	62 UNUSED
7 SW#: 17 CENTER SUBWAY	15 SW#: 27 I OF P-A-I-D	23 SW#: 37 LOWER RIGHT POPPER	31 SW#: 47 LEFT SLINGSHOT	39 SW#: 57 CENTER TROUGH	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 18 CENTER SHOT	16 SW#: 28 D OF P-A-I-D	24 SW#: 38 RAMP UP/DOWN	32 SW#: 48 RIGHT SLINGSHOT	40 SW#: 58 LEFT TROUGH	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Cue Ball Wizard by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR	57 SW#: 7 SHOOTER LANE ROLLOVER
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 TOP LEFT KICKING RUBBER	26 SW#: 13 TOP RIGHT KICKING RUBBER	34 SW#: 14 BOTTOM LEFT KICKING RUBBER	42 SW#: 15 BOTTOM RIGHT KICKING RUBBER	50 SW#: 16 KICKING TARGET	58 SW#: 17 BOTTOM LEFT UPKICKER
3 SW#: 20 LEFT DROP #1 TARGET	11 SW#: 21 LEFT DROP #3 TARGET	19 SW#: 22 LEFT DROP #5 TARGET	27 SW#: 23 RIGHT DROP TARGET #1	35 SW#: 24 RIGHT DROP TARGET #3	43 SW#: 25 RIGHT DROP TARGET #5	51 SW#: 26 LEFT DROP #7 TARGET	59 SW#: 27 TOP LEFT UPKICKER
4 SW#: 30 LEFT DROP #2 TARGET	12 SW#: 31 LEFT DROP #4 TARGET	20 SW#: 32 LEFT DROP #6 TARGET	28 SW#: 33 RIGHT DROP TARGET #2	36 SW#: 34 RIGHT DROP TARGET #4	44 SW#: 35 RIGHT DROP TARGET #6	52 SW#: 36 RIGHT DROP TARGET #7	60 SW#: 37 TOP RIGHT UPKICKER
5 SW#: 40 OUTHOLE	13 SW#: 41 TROUGH	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Cybernaut by Bally

1 SW#: 1 THUMPER BUMPER	9 SW#: 2 LEFT SLINGSHOT	17 SW#: 3 RIGHT SLINGSHOT	25 SW#: 4 RIGHT OUTLANE	33 SW#: 5 SAUCER	41 SW#: 6 CREDIT	49 SW#: 7 REBOUND	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 TUBE SWITCH	34 SW#: 13 LEFT OUTLANE	42 SW#: 14 SHOOTER LANE	50 SW#: 15 TILT	58 SW#: 16 SLAM
3 SW#: 17 ROLLOVER BUTTON	11 SW#: 18 TOP RIGHT TARGET	19 SW#: 19 TOP MIDDLE TARGET	27 SW#: 20 TOP LEFT TARGET	35 SW#: 21 DROP TARGET #1 (RIGHT)	43 SW#: 22 DROP TARGET #2	51 SW#: 23 DROP TARGET #3	59 SW#: 24 DROP TARGET #4
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 28 REBOUND SPECIAL	36 SW#: 29 ROLLOVER #1 BUTTON (RIGHT)	44 SW#: 30 ROLLOVER #2 BUTTON	52 SW#: 31 ROLLOVER #3 BUTTON	60 SW#: 32 ROLLOVER #4 BUTTON
5 SW#: 33 "B" RETURN LANE	13 SW#: 34 "L" TARGET	21 SW#: 35 "A" TARGET	29 SW#: 36 "S" TARGET	37 SW#: 37 "T" RETURN LANE	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Cyclone by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 FERRIS WHEEL ENTRANCE	25 SW#: 25 BALL SHOOTER LANE	33 UNUSED	41 SW#: 41 MYSTERY OPTO WHEEL "HOME" (INSERT BD)	49 UNUSED	57 SW#: 57 LEFT FLIPPER LANE CHANGE
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 DROP TARGET (CENTER)	26 SW#: 26 SHUTTLE 10K (KICKBIG)	34 SW#: 34 SCORE CYCLONE	42 UNUSED	50 UNUSED	58 SW#: 58 RIGHT LANE FLIPPER CHANGE
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 SCORE SPOOK HOUSE	19 SW#: 19 DUCKS (TOP)	27 SW#: 27 SHUTTLE 25K (BOTTOM)	35 SW#: 35 10 PT (R. BOTTOM)	43 UNUSED	51 UNUSED	59 SW#: 59 SPOT BALL TOSS
4 SW#: 4 RIGHT COIN CHUTE	12 UNUSED	20 SW#: 20 DUCKS (MIDDLE)	28 SW#: 28 SHUTTLE 100K	36 SW#: 36 10 PT (R. MIDDLE)	44 UNUSED	52 UNUSED	60 SW#: 60 LEFT JET BUMPER
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BOOMERANG KICKBIG	21 SW#: 21 DUCKS (BOTTOM)	29 SW#: 29 SHUTTLE 25K	37 SW#: 37 10 PT (R. TOP)	45 UNUSED	53 SW#: 53 LEFT OUTLANE EX. BALL	61 SW#: 61 RIGHT JET BUMPER
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 1 LANE	22 SW#: 22 BALL TOSS (TOP)	30 SW#: 30 SHUTTLE 5K (TOP)	38 UNUSED	46 UNUSED	54 SW#: 54 RIGHT EX. OUTLANE BALL	62 SW#: 62 BOTTOM JET BUMPER
7 SW#: 7 SLAM TILT	15 SW#: 15 2 LANE	23 SW#: 23 BALL TOSS (MIDDLE)	31 SW#: 31 ENTER COMET RAMP	39 UNUSED	47 UNUSED	55 SW#: 55 LEFT RETURN LANE	63 SW#: 63 LEFT SLINGSHOT
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 3 LANE	24 SW#: 24 BALL TOSS (BOTTOM)	32 SW#: 32 SCORE COMET RAMP	40 UNUSED	48 UNUSED	56 SW#: 56 RIGHT RETURN LANE	64 SW#: 64 RIGHT SLINGSHOT

SW# number is the switch number as known to the game.

Deadly Weapon by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT ADVANCE BUTTON	41 SW#: 5 RIGHT BUTTON ADVANCE	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 TOP LEFT POP BUMPER	10 SW#: 11 TOP RIGHT POP BUMPER	18 SW#: 12 CENTER POP BUMPER	26 SW#: 13 BOTTOM POP BUMPER	34 SW#: 14 KICKING TARGET	42 SW#: 15 KICKING (2) RUBBER	50 SW#: 16 OUTHOLE	58 SW#: 17 #1 SPOT TARGET
3 SW#: 20 LEFT HOLE	11 SW#: 21 RIGHT HOLE	19 SW#: 22 #1 CENTER ROLLOVER	27 SW#: 23 KICK SAVE ROLLOVER	35 SW#: 24 #1 DROP TARGET	43 SW#: 25 RIGHT RETURN ROLLOVER	51 SW#: 26 BALL TROUGH	59 SW#: 27 #2 SPOT TARGET
4 SW#: 30 LEFT SPINNER	12 SW#: 31 RIGHT SPINNER	20 SW#: 32 #2 CENTER ROLLOVER	28 SW#: 33 LEFT OUTSIDE ROLLOVER	36 SW#: 34 #2 DROP TARGET	44 SW#: 35 SHOOTER LANE ROLLOVER	52 UNUSED	60 SW#: 37 #3 SPOT TARGET
5 SW#: 40 TOP LEFT ROLLOVER	13 SW#: 41 TOP RIGHT ROLLOVER	21 SW#: 42 #3 CENTER ROLLOVER	29 SW#: 43 STAR ROLLOVER	37 SW#: 44 #3 DROP TARGET	45 SW#: 45 RIGHT SIDE ROLLOVER	53 UNUSED	61 SW#: 47 #4 SPOT TARGET
6 SW#: 50 #1 DROP TARGET	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 SW#: 57 #5 SPOT TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Defender by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 BOMBER LANE 1 ROLLOVER	17 SW#: 17 LEFT LANDER DROP TARGET 5 (TOP)	25 SW#: 25 RIGHT LANDER DROP TARGET 5 (TOP)	33 SW#: 33 DISAPPEARING POD BULL'S EYE TARGET (BOTTOM)	41 SW#: 41 POD BULL'S EYE TARGET	49 SW#: 49 BALL RAMP (LEFT)	57 SW#: 57 LEFT KICKER
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 BOMBER LANE 2 ROLLOVER	18 SW#: 18 LEFT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	26 SW#: 26 RIGHT LANDER DROP TARGET 5 (TOP)	34 SW#: 34 DISAPPEARING POD BULL'S EYE TARGET (CENTER)	42 SW#: 42 LOCKUP TROUGH (BOTTOM)	50 SW#: 50 BALL SHOOTER TROUGH	58 SW#: 58 RIGHT KICKER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BOMBER LANE 3 ROLLOVER	19 SW#: 19 LEFT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	27 SW#: 27 RIGHT LANDER DROP TARGET 5 (TOP)	35 SW#: 35 DISAPPEARING POD BULL'S EYE TARGET (TOP)	43 SW#: 43 LOCKUP TROUGH (CENTER)	51 SW#: 51 LEFT OUTLANE	59 SW#: 59 FLIPPER LANE CHANGE SWITCH
4 SW#: 4 RIGHT COIN	12 SW#: 12 BOMBER LANE 4 ROLLOVER	20 SW#: 20 LEFT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	28 SW#: 28 RIGHT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	36 SW#: 36 SWARMER EYE BULL'S TARGET (TOP)	44 SW#: 44 LOCKUP (TOP) TROUGH	52 SW#: 52 RIGHT OUTLANE	60 SW#: 60 SMART BOMB
5 SW#: 5 CENTER COIN	13 SW#: 13 LEFT LANDER DROP TARGET 1 (BOTTOM)	21 SW#: 21 LEFT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	29 SW#: 29 RIGHT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	37 SW#: 37 SWARMER EYE BULL'S TARGET (BOTTOM)	45 SW#: 45 LOCKUP TROUGH ROLLOVER	53 SW#: 53 LEFT FLIPPER RETURN LANE	61 SW#: 61 REVERSE
6 SW#: 6 LEFT COIN	14 SW#: 14 LEFT LANDER DROP TARGET 5 (TOP)	22 SW#: 22 LEFT MUTANT BULL'S EYE TARGET 5 (TOP)	30 SW#: 30 RIGHT MUTANT BULL'S EYE TARGET 5 (TOP)	38 SW#: 38 SWARMER STANDUP	46 SW#: 46 OUTHOLE	54 SW#: 54 RIGHT RETURN FLIPPER LANE	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT LANDER DROP TARGET 1 (BOTTOM)	23 SW#: 23 RIGHT LANDER DROP TARGET 1 (BOTTOM)	31 SW#: 31 RIGHT MUTANT BULL'S EYE TARGET 1 (BOTTOM)	39 SW#: 39 DISAPPEARING POD TARGET (BOTTOM)	47 SW#: 47 BALL RAMP (RIGHT)	55 SW#: 55 LEFT JET BUMPER	63 SW#: 63 PLAYFIELD TILT
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT LANDER DROP TARGET 4	24 SW#: 24 RIGHT LANDER DROP TARGET 5 (TOP)	32 SW#: 32 RIGHT MUTANT BULL'S EYE TARGET 5 (TOP)	40 SW#: 40 DISAPPEARING POD TARGET (TOP)	48 SW#: 48 BALL RAMP (CENTER)	56 SW#: 56 RIGHT JET BUMPER	64 UNUSED

SW# number is the switch number as known to the game.

Demolition Man by Williams

1 SW#: 11 BALL LAUNCH	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH 1	25 SW#: 41 LEFT SLINGSHOT	33 SW#: 51 LEFT RAMP ENTER	41 SW#: 61 SIDE RAMP ENTER	49 SW#: 71 CHASE CAR 1	57 SW#: 81 CLAW SIMON "CAPTURE"
2 SW#: 12 LEFT HANDLE BUTTON	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 2	26 SW#: 42 RIGHT SLINGSHOT	34 SW#: 52 LEFT RAMP EXIT	42 SW#: 62 SIDE RAMP EXIT	50 SW#: 72 CHASE CAR 2	58 SW#: 82 CLAW "SUP. JETS"
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 TROUGH 3	27 SW#: 43 LEFT JET BUMPER	35 SW#: 53 CENTER RAMP	43 SW#: 63 LEFT ROLLOVER	51 SW#: 73 TOP POPPER	59 SW#: 83 CLAW "PRISON BREAK"
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 4	28 SW#: 44 TOP SLINGSHOT	36 SW#: 54 UPPER REBOUND	44 SW#: 64 CENTER ROLLOVER	52 SW#: 74 ELEVATOR HOLD	60 SW#: 84 CLAW "FREEZE"
5 SW#: 15 LEFT OUTLANE	13 SW#: 25 CLAW 1 POSITION	21 SW#: 35 TROUGH 5	29 SW#: 45 RIGHT JET BUMPER	37 SW#: 55 LEFT LOOP	45 SW#: 65 RIGHT ROLLOVER	53 UNUSED	61 SW#: 85 CLAW "ACMAG"
6 SW#: 16 LEFT INLANE	14 SW#: 26 CLAW 2 POSITION	22 SW#: 36 TROUGH JAM	30 SW#: 46 RIGHT RAMP ENTER	38 SW#: 56 STANDUP 2	46 SW#: 66 EJECT	54 SW#: 76 BOTTOM POPPER	62 SW#: 86 UPPER LEFT FLIPPER GATE
7 SW#: 17 RIGHT INLANE	15 SW#: 27 SHOOTER LANE	23 UNUSED	31 SW#: 47 RIGHT RAMP EXIT	39 SW#: 57 STANDUP 3	47 SW#: 67 ELEVATOR INDEX	55 SW#: 77 EYEBALL STANDUP	63 SW#: 87 CAR CHASE STANDUP
8 SW#: 18 RIGHT OUTLANE	16 UNUSED	24 SW#: 38 STANDUP 5	32 SW#: 48 RIGHT FREEWAY	40 SW#: 58 STANDUP 4	48 UNUSED	56 SW#: 78 STANDUP 1	64 SW#: 88 LOWER REBOUND

SW# number is the switch number as known to the game.

Devils Dare by Gottlieb

1 SW#: #1 LEFT DROP TARGET	9 SW#: 10 #2 LEFT DROP TARGET	17 SW#: 20 #3 LEFT DROP TARGET	25 SW#: 30 #4 LEFT DROP TARGET	33 SW#: 40 #5 LEFT DROP TARGET	41 SW#: 50 FIRST TROUGH POSITION	49 UNUSED	57 UNUSED
2 SW#: 1 #1 RIGHT DROP TARGET	10 SW#: 11 #2 RIGHT DROP TARGET	18 SW#: 21 #3 RIGHT DROP TARGET	26 SW#: 31 #4 RIGHT DROP TARGET	34 SW#: 41 #5 RIGHT DROP TARGET	42 SW#: 51 THIRD TROUGH POSITION	50 UNUSED	58 UNUSED
3 SW#: 2 #1 LEFT TOP TARGET	11 SW#: 12 #2 LEFT TOP TARGET	19 SW#: 22 #3 LEFT TOP TARGET	27 SW#: 32 #4 LEFT TOP TARGET	35 SW#: 42 LEFT OUTSIDE ROLLOVER	43 SW#: 52 KICKING (5) RUBBERS	51 UNUSED	59 UNUSED
4 SW#: 3 #1 RIGHT BOTTOM TARGET	12 SW#: 13 #2 RIGHT BOTTOM TARGET	20 SW#: 23 #3 RIGHT BOTTOM TARGET	28 SW#: 33 #4 RIGHT BOTTOM TARGET	36 SW#: 43 LEFT OUTSIDE RETURN ROLLOVER	44 SW#: 53 RIGHT RETURN OUTSIDE ROLLOVER	52 UNUSED	60 UNUSED
5 SW#: 4 #1 TOP DROP TARGET	13 SW#: 14 #2 TOP DROP TARGET	21 SW#: 24 #3 TOP DROP TARGET	29 SW#: 34 POP BUMPERS (3)	37 SW#: 44 LEFT INSIDE RETURN ROLLOVER	45 SW#: 54 RIGHT INSIDE RETURN ROLLOVER	53 UNUSED	61 UNUSED
6 SW#: 5 TOP BALL KICKER	14 SW#: 15 LEFT SPIN TARGET	22 SW#: 25 RIGHT TOP TARGET (2)	30 SW#: 35 DROP TARGET TEN POINT SWITCH	38 SW#: 45 #2 LEFT BOTTOM TARGET	46 SW#: 55 OUTHOLE	54 UNUSED	62 UNUSED
7 SW#: 6 HOLE	15 SW#: 16 ROLLUNDER	23 SW#: 26 RIGHT SPIN TARGET	31 SW#: 36 RIGHT OUTSIDE ROLLOVER	39 SW#: 46 #1 LEFT BOTTOM TARGET	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Diamond Lady by Gottlieb

1 UNUSED	9 UNUSED	17 SW#: 20 LEFT #1 DROP TARGET	25 SW#: 30 LEFT #2 DROP TARGET	33 SW#: 40 LEFT #3 DROP TARGET	41 SW#: 50 LEFT #4 DROP TARGET	49 SW#: 60 LEFT #5 DROP TARGET	57 SW#: 70 LEFT SIDE ROLLOVER
2 UNUSED	10 UNUSED	18 SW#: 21 TOP #1 DROP TARGET	26 SW#: 31 TOP #2 DROP TARGET	34 SW#: 41 TOP #3 DROP TARGET	42 SW#: 51 TOP #4 DROP TARGET	50 SW#: 61 TOP AND LEFT BOTTOM POP BUMPERS	58 SW#: 71 BOTTOM RIGHT POP BUMPER
3 UNUSED	11 UNUSED	19 SW#: 22 RIGHT #1 DROP TARGET	27 SW#: 32 RIGHT #2 DROP TARGET	35 SW#: 42 RIGHT #3 DROP TARGET	43 SW#: 52 RIGHT #4 DROP TARGET	51 SW#: 62 RIGHT #5 DROP TARGET	59 SW#: 72 RIGHT FLIPPER
4 UNUSED	12 UNUSED	20 SW#: 23 BOTTOM #1 DROP TARGET	28 SW#: 33 RUBBER (2) SWITCHES	36 SW#: 43 LEFT OUTSIDE ROLLOVER	44 SW#: 53 LEFT RETURN ROLLOVER	52 SW#: 63 RIGHT RETURN ROLLOVER	60 SW#: 73 RIGHT OUTSIDE ROLLOVER
5 UNUSED	13 UNUSED	21 SW#: 24 "10" SPOT TARGET	29 SW#: 34 "JACK" SPOT TARGET	37 SW#: 44 LEFT RAMP ROLLUNDER	45 SW#: 54 LEFT SPINNER	53 SW#: 64 RIGHT SPINNER	61 SW#: 74 TOP RIGHT KICKER ROLLOVER
6 UNUSED	14 UNUSED	22 SW#: 25 "ACE" SPOT TARGET	30 SW#: 35 "JOKER" SPOT TARGET	38 SW#: 45 TOP LEFT ROLLOVER	46 SW#: 55 TOP RIGHT ROLLOVER	54 SW#: 65 TOP RIGHT SHOOTER ROLLOVER	62 UNUSED
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 SW#: 26 "KING" SPOT TARGET	31 SW#: 36 "QUEEN" SPOT TARGET	39 SW#: 46 #2 TROUGH	47 UNUSED	55 SW#: 66 OUTHOLE	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Diner by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 CUP	25 UNUSED	33 UNUSED	41 UNUSED	49 SW#: 49 UPPER LEFT EJECT	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 UP/DOWN (L RAMP)	18 SW#: 18 GRILL BONUS	26 UNUSED	34 UNUSED	42 UNUSED	50 SW#: 50 LOWER LEFT EJECT	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 GAME START	11 SW#: 11 BALL TROUGH #1 (RIGHT)	19 SW#: 19 E (TOP LANE)	27 SW#: 27 R RAMP ENTRY	35 UNUSED	43 UNUSED	51 SW#: 51 LEFT JET BUMPER	59 SW#: 59 CLOCK WHEEL
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 A (TOP LANE)	28 SW#: 28 R RAMP EXIT	36 SW#: 36 L RAMP EXIT	44 UNUSED	52 SW#: 52 RIGHT JET BUMPER	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #3 (LEFT)	21 SW#: 21 T (TOP LANE)	29 SW#: 29 CUP ENTRY R RAMP	37 SW#: 37 LEFT OUTLANE	45 UNUSED	53 SW#: 53 LOWER JET BUMPER	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 SHOOTER LANE	22 SW#: 22 HOT DOG (C DR 3-BK DR TGT)	30 SW#: 30 ROOT BEER (L 3-BK DR TGT)	38 SW#: 38 LEFT RETURN LANE	46 UNUSED	54 SW#: 54 BR KICKER ("SLING")	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 SUB-P'FLD 1 SHOOTER	23 SW#: 23 BURGER (C DR 3-BK TGT)	31 SW#: 31 FRIES (L DR 3-BK TGT)	39 SW#: 39 RIGHT RETURN LANE	47 UNUSED	55 SW#: 55 BL KICKER ("SLING")	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 SUB-P'FLD 2 SHOOTER	24 SW#: 24 CHILI (C DR 3-BK TGT)	32 SW#: 32 ICED TEA (L 3-BK DR TGT)	40 SW#: 40 RIGHT OUTLANE	48 UNUSED	56 SW#: 56 SPINNER	64 UNUSED

SW# number is the switch number as known to the game.

Dirty Harry by Williams

1 SW#: 11 GUN HANDLE TRIGGER	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH JAM	25 SW#: 41 LEFT RAMP ENTER	33 SW#: 51 RIGHT RAMP ENTER	41 SW#: 61 LEFT SLING	49 SW#: 71 LEFT LOOP	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 1	26 SW#: 42 RIGHT LOOP	34 UNUSED	42 SW#: 62 RIGHT SLING	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 TROUGH 2	27 SW#: 43 LEFT RAMP MAKE	35 UNUSED	43 SW#: 63 LEFT JET	51 SW#: 73 SAFEHOUSE	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 3	28 SW#: 44 GUN CHAMBER	36 SW#: 54 STANDUP 6	44 SW#: 64 MIDDLE JET	52 UNUSED	60 UNUSED
5 SW#: 15 SHOOTER LANE	13 SW#: 25 LEFT INLANE	21 SW#: 35 TROUGH 4	29 SW#: 45 GUN POPPER	37 SW#: 55 STANDUP 7	45 SW#: 65 RIGHT JET	53 UNUSED	61 UNUSED
6 SW#: 16 RIGHT OUTLANE	14 SW#: 26 LEFT OUTLANE	22 UNUSED	30 SW#: 46 WAREHOUSE POPPER	38 SW#: 56 STANDUP 5	46 SW#: 66 LEFT ROLLOVER	54 SW#: 76 GUN POSITION	62 UNUSED
7 SW#: 17 RIGHT INLANE	15 SW#: 27 STANDUP 1	23 UNUSED	31 SW#: 47 LEFT POPPER	39 SW#: 57 STANDUP 4	47 SW#: 67 MIDDLE ROLLOVER	55 SW#: 77 GUN LOCKUP	63 UNUSED
8 SW#: 18 STANDUP 8	16 SW#: 28 STANDUP 2	24 SW#: 38 RIGHT RAMP MAKE	32 UNUSED	40 SW#: 58 STANDUP 3	48 SW#: 68 RIGHT ROLLOVER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Disco Fever by Williams

1 SW#: 1 PLUMB TILT	9 SW#: 9 TOP LEFT UP STAND	17 SW#: 17 RIGHT JET BUMPER	25 SW#: 25 LEFT OUTSIDE ROLLOVER	33 SW#: 33 LEFT JET BUMPER	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 TOP "A" ROLLOVER	18 SW#: 18 RIGHT SIDE STAND UP	26 SW#: 26 SPOT "A" OR "B" ROLLOVER	34 SW#: 34 TOP LEFT SPOT "DISCO"	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 "F" DROP TARGET	19 SW#: 19 RIGHT OUTSIDE ROLLOVER	27 SW#: 27 TOP "B" ROLLOVER	35 SW#: 35 TURN AROUND SWITCH	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 LEFT COIN SWITCH	12 SW#: 12 TOP RIGHT UP STAND	20 SW#: 20 "E" DROP TARGET	28 SW#: 28 RIGHT INSIDE ROLLOVER	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 TOP RIGHT ADVANCE BONUS	21 SW#: 21 RIGHT KICKER	29 SW#: 29 "V" DROP TARGET	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 RIGHT COIN SWITCH	14 SW#: 14 TOP RIGHT SPOT "DISCO"	22 SW#: 22 OUTHOLE	30 SW#: 30 PLAYFIELD TILT	38 SW#: 38 "E" DROP TARGET	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 BULL'S-EYE TARGET	23 SW#: 23 LEFT KICKER	31 UNUSED	39 SW#: 39 "R" DROP TARGET	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 CENTER STAND UP	24 SW#: 24 LEFT INSIDE ROLLOVER	32 UNUSED	40 SW#: 40 "ER" STAND UP	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Doctor Who by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 OPTO POPPER	25 SW#: 41 (E)-S-C-A-P-E	33 SW#: 51 (R)-E-P-A-I-R	41 SW#: 61 LEFT JET	49 SW#: 71 MINI OPTO 5 BANK RIGHT 1	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 MINI-PLY HOME OPTO	26 SW#: 42 E-(S)-C-A-P-E	34 SW#: 52 R-(E)-P-A-I-R	42 SW#: 62 RIGHT JET	50 SW#: 72 MINI OPTO 5 BANK RIGHT 2	58 SW#: 82 PLAYFIELD GLASS
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO.	19 SW#: 33 ENTER TOP RAMP OPTO	27 SW#: 43 E-S-(C)-A-P-E	35 SW#: 53 R-E-(P)-A-I-R	43 SW#: 63 BOTTOM JET	51 SW#: 73 MINI OPTO 5 BANK MIDDLE	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 LAUNCH BALL	28 SW#: 44 E-S-C-(A)-P-E	36 SW#: 54 R-E-P-(A)-I-R	44 SW#: 64 LEFT DRAIN	52 SW#: 74 MINI OPTO 5 BANK LEFT 2	60 UNUSED
5 SW#: 15 LEFT SLING	13 SW#: 25 TROUGH 1 BALL	21 SW#: 35 SCORE TOP RAMP	29 SW#: 45 E-S-C-A-(P)-E	37 SW#: 55 R-E-P-A-(I)-R	45 SW#: 65 LEFT RETURN	53 SW#: 75 MINI OPTO 5 BANK LEFT 1	61 UNUSED
6 SW#: 16 RIGHT SLING	14 SW#: 26 TROUGH 2 BALLS	22 SW#: 36 ENTER BOTTOM RAMP	30 SW#: 46 E-S-C-A-P-(E)	38 SW#: 56 R-E-P-A-I-(R)	46 SW#: 66 RIGHT RETURN	54 SW#: 76 MINI-PLY LEFT OPTO EJECT	62 UNUSED
7 SW#: 17 SHOOTER LANE	15 SW#: 27 TROUGH 3 BALLS	23 SW#: 37 SCORE BOTTOM RAMP	31 SW#: 47 HANG ON SCORE	39 SW#: 57 TRAP DOOR DOWN	47 SW#: 67 RIGHT DRAIN	55 SW#: 77 MINI-PLY RIGHT OPTO EJECT	63 UNUSED
8 SW#: 18 EXIT JETS	16 SW#: 28 OUTHOLE	24 SW#: 38 MINI-PLY DOOR, MIDDLE	32 SW#: 48 SELECT DOCTOR	40 SW#: 58 TRANSMAT AWARD	48 SW#: 68 MINI-PLY DOOR, LEFT	56 SW#: 78 MINI-PLY LITES LOCK	64 SW#: 88 MINI-PLY DOOR, RIGHT

SW# number is the switch number as known to the game.

Dolly Parton by Bally

1 SW#: 1 DROP TARGET 5X	9 SW#: 2 DROP TARGET 3X	17 SW#: 3 DROP TARGET 2X	25 SW#: 4 FIRST DROP TARGET	33 SW#: 5 SUPERSTAR TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 SPINNER	11 UNUSED	19 SW#: 19 WHITE 500 POINT TARGET	27 SW#: 20 RIGHT OUTLANE	35 SW#: 21 FLIP/FEED LANE (RT)	43 SW#: 22 FLIP/FEED LANE (LF)	51 SW#: 23 LEFT OUTLANE	59 SW#: 24 PARTON SAUCER
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 28 "Y" TARGET	36 SW#: 29 2ND "L"	44 SW#: 30 1ST "L"	52 SW#: 31 "O" TARGET	60 SW#: 32 "D" TARGET
5 UNUSED	13 SW#: 34 30 PT (5) REBOUND	21 SW#: 35 5,000 SIDE ROLLOVER	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 TOP THUMPER BUMPER	53 SW#: 39 BOTTOM THUMPER BUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Dr Dude And His Excellent Ray by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 SHOOTER LANE	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 REFLE(X)	33 SW#: 33 MIXER GAB TOP	41 SW#: 41 MIXER MAGNET TOP	49 SW#: 49 I TEST TARGET	57 SW#: 57 RIGHT FLIPPER
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 RIGHT OUTLANE	26 SW#: 26 REFL(E)X	34 SW#: 34 MIXER GAB MIDDLE	42 SW#: 42 MIXER MAGNET MIDDLE	50 SW#: 50 MAGNET TARGET	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH 1 BALL	19 SW#: 19 RIGHT RETURN	27 SW#: 27 REF(L)EX	35 SW#: 35 MIXER GAB BOTTOM	43 SW#: 43 MIXER MAGNET BOTTOM	51 SW#: 51 TOP LEFT POPPER	59 SW#: 59 RIGHT LOOP
4 SW#: 4 RIGHT COIN SW	12 SW#: 12 TROUGH 2 BALLS	20 SW#: 20 LEFT RETURN	28 SW#: 28 RE(F)LEX	36 SW#: 36 MIXER HEART LEFT	44 UNUSED	52 SW#: 52 LEFT JET BUMPER	60 UNUSED
5 SW#: 5 CENTER COIN SW	13 SW#: 13 TROUGH 3 BALLS	21 SW#: 21 RIGHT DROP 1 (TOP)	29 SW#: 29 R(E)FLEX	37 SW#: 37 MIXER HEART MIDDLE	45 UNUSED	53 SW#: 53 RIGHT JET BUMPER	61 UNUSED
6 SW#: 6 LEFT COIN SW	14 SW#: 14 HEART TARGET	22 SW#: 22 RIGHT DROP 2	30 SW#: 30 (R)EFLEX	38 SW#: 38 MIXER HEART RIGHT	46 SW#: 46 MIDDLE MIDDLE 10PTS.	54 SW#: 54 BOTTOM JUMPER BUMPER	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 ENTER LEFT RAMP	23 SW#: 23 RIGHT DROP 3	31 SW#: 31 BIG SHOT TARGET	39 SW#: 39 TOP LEFT 10PTS.	47 SW#: 47 MIDDLE BOTTOM 10PTS.	55 SW#: 55 LEFT SLINGSHOT	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 SCORE LEFT RAMP	24 SW#: 24 RIGHT DROP 4 (BOTTOM)	32 SW#: 32 MIDDLE RIGHT POPPER	40 UNUSED	48 SW#: 48 MIDDLE TOP 10PTS.	56 SW#: 56 RIGHT SLINGSHOT	64 UNUSED

SW# number is the switch number as known to the game.

Dracula by Stern

1 SW#: 1 RIGHT OUTLANE	9 SW#: 2 RIGHT RETURN LANE	17 SW#: 3 LEFT OUTLANE	25 SW#: 4 LEFT RETURN LANE	33 SW#: 5 1,000 & STAR ADVANCE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUT-HOLE
2 SW#: 9 COIN #3 (RIGHT)	10 SW#: 10 COIN #1 (CENTER)	18 SW#: 11 COIN #2 (LEFT)	26 SW#: 12 UPPER TARGET (4-BANK)	34 UNUSED	42 UNUSED	50 SW#: 15 SPIN-TARGET	58 SW#: 16 SLAM-TILT (3)
3 SW#: 17 (4) BUTTON ROLL-OVER (10-PTS)	11 SW#: 18 (2) 1,000 & ADVANCE BONUS	19 SW#: 19 (2) 10 POINTS	27 SW#: 20 UPPER MIDDLE TARGET (4-BANK)	35 SW#: 21 MIDDLE TARGET (3-BANK)	43 SW#: 22 "Z" TARGET	51 SW#: 23 "X" TARGET	59 SW#: 24 "Y" TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 28 LOWER MIDDLE TARGET (4-BANK)	36 SW#: 29 LOWER TARGET (3-BANK)	44 UNUSED	52 UNUSED	60 SW#: 32 ROLL-OVER (STAR)
5 SW#: 33 LOWER THUMPER	13 SW#: 34 RIGHT THUMPER	21 SW#: 35 LEFT THUMPER	29 SW#: 36 LOWER TARGET (4-BANK)	37 SW#: 37 UPPER TARGET (3-BANK)	45 SW#: 38 RIGHT SLING-SHOT	53 SW#: 39 LEFT SLING-SHOT	61 SW#: 40 EJECT POCKET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Dragon by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 SPINNING TARGET	10 UNUSED	18 SW#: 12 LEFT EXTRA BALL	26 UNUSED	34 SW#: 14 SPECIAL ROLLOVER
3 SW#: 20 "A" ROLLOVER (2)	11 SW#: 21 "B" ROLLOVER (2)	19 SW#: 22 "C" ROLLOVER (2)	27 UNUSED	35 SW#: 24 "D" ROLLOVER (2)
4 SW#: 30 #1 ROLLOVER BUTTON	12 SW#: 31 #2 ROLLOVER BUTTON	20 SW#: 32 #3 ROLLOVER BUTTON	28 UNUSED	36 SW#: 34 #4 ROLLOVER BUTTON
5 SW#: 40 RIGHT EXTRA BALL TARGET	13 SW#: 41 LEFT "1" VARI-TARGET	21 SW#: 42 LEFT "2" VARI-TARGET	29 SW#: 43 LEFT "3" VARI-TARGET	37 SW#: 44 10 POINT (5) SWITCHES
6 SW#: 50 POP BUMPERS (2)	14 SW#: 51 RIGHT "1" VARI-TARGET	22 SW#: 52 RIGHT "2" VARI-TARGET	30 SW#: 53 RIGHT "3" VARI-TARGET	38 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Dragonfist by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 UNUSED	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 SLAM
2 SW#: 9 LEFT THUMPER BUMPER	10 SW#: 10 RIGHT BUMPER THUMPER	18 SW#: 11 LEFT SLINGSHOT	26 SW#: 12 RIGHT SLINGSHOT	34 SW#: 13 LEFT DROP TARGET (LEFT)	42 SW#: 14 LEFT DROP TARGET (MIDDLE)	50 SW#: 15 LEFT DROP TARGET (RIGHT)	58 SW#: 16 LEFT BUTTON ROLLOVER
3 SW#: 17 STAND UP #2 TARGET	11 SW#: 18 STAND UP #1 TARGET	19 SW#: 19 RIGHT DROP TARGET (LEFT)	27 SW#: 20 RIGHT DROP TARGET (MIDDLE)	35 SW#: 21 RIGHT DROP TARGET (RIGHT)	43 SW#: 22 MIDDLE DROP TARGET (LEFT)	51 SW#: 23 MIDDLE DROP TARGET (MIDDLE)	59 SW#: 24 MIDDLE DROP TARGET (RIGHT)
4 SW#: 25 LEFT 10 POINT BUMPER	12 SW#: 26 STAND UP #9 TARGET	20 SW#: 27 STAND UP #8 TARGET	28 SW#: 28 STAND UP #7 TARGET	36 SW#: 29 STAND UP #6 TARGET	44 SW#: 30 STAND UP #5 TARGET	52 SW#: 31 STAND UP #4 TARGET	60 SW#: 32 STAND UP #3 TARGET
5 SW#: 33 OUTHOLE	13 UNUSED	21 SW#: 35 RIGHT OUTLANE	29 SW#: 36 LEFT OUTLANE	37 SW#: 37 RIGHT RETURN FLIPPER LANE	45 SW#: 38 LEFT FLIPPER RETURN LANE	53 SW#: 39 LOWER RIGHT 10 POINT BUMPER	61 SW#: 40 UPPER RIGHT 10 POINT BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Dungeons Dragons by Bally

1 SW#: 1 DUST 1 LEFT (TARGET)	9 SW#: 2 DUST 2 (TARGET)	17 SW#: 3 DUST 3 (TARGET)	25 SW#: 4 DUST 4 RIGHT (TARGET)	33 SW#: 5 CABINET LEFT	41 SW#: 6 CREDIT	49 SW#: 7 CABINET RIGHT	57 SW#: 8 OUTHOLE
2 SW#: 9 COINS RIGHT	10 SW#: 10 COINS LEFT	18 SW#: 11 COINS MIDDLE	26 SW#: 12 LEFT RETURN LANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 REBOUND
3 SW#: 17 TOP BUMPER	11 SW#: 18 LEFT BUMPER	19 SW#: 19 RIGHT BUMPER	27 SW#: 20 BOTTOM BUMPER	35 SW#: 21 LEFT (X2) SLINGSHOT	43 SW#: 22 RIGHT (X2) SLINGSHOT	51 SW#: 23 DRAGON LAIR LEFT	59 SW#: 24 DRAGON LAIR RIGHT
4 SW#: 25 SHIELD 1 LEFT (TARGET)	12 SW#: 26 SHIELD 2 MIDDLE (TARGET)	20 SW#: 27 SHIELD 3 RIGHT (TARGET)	28 SW#: 28 SWORD 1 LEFT (TARGET)	36 SW#: 29 SWORD 2 MIDDLE (TARGET)	44 SW#: 30 SWORD 3 RIGHT (TARGET)	52 SW#: 31 TELEPORT LEFT EMPTY	60 SW#: 32 TELEPORT LEFT LOADED
5 SW#: 33 DROP TARGET BOTTOM	13 SW#: 34 DROP TARGET MIDDLE	21 SW#: 35 DROP TARGET TOP	29 SW#: 36 SKILL 1 BOTTOM	37 SW#: 37 SKILL 2 MIDDLE	45 SW#: 38 SKILL 3 TOP	53 SW#: 39 TELEPORT RIGHT EMPTY	61 SW#: 40 TELEPORT RIGHT LOADED
6 SW#: 41 LEFT RETURN LANE	14 SW#: 42 LEVEL SWITCH	22 SW#: 43 MILLION SWITCH	30 SW#: 44 RESTORE WEAPONS	38 UNUSED	46 SW#: 46 OUTHOLE 1 LEFT	54 SW#: 47 OUTHOLE 2 MIDDLE	62 SW#: 48 OUTHOLE 3 RIGHT
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Earth Wind Fire by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 1ST. MOVING TARGET	33 SW#: 32 10TH. FIXED TARGET	41 SW#: 40 4TH. TOP ROLLOVER
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 SW#: 9 1ST. BUTTON	18 SW#: 17 LOWER KICKER LEFT-HAND	26 SW#: 25 2ND. MOVING TARGET	34 SW#: 33 9TH. FIXED TARGET	42 SW#: 41 5TH. TOP ROLLOVER
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 SW#: 10 2ND. BUTTON	19 SW#: 18 LOWER KICKER RIGHT-HAND	27 SW#: 26 3RD. MOVING TARGET	35 SW#: 34 8TH. FIXED TARGET	43 SW#: 42 6TH. TOP ROLLOVER
4 SW#: 3 CREDIT BUTTON	12 SW#: 11 3RD. BUTTON	20 SW#: 19 BOTTOM CANAL OUTSIDE RIGHT-HAND	28 SW#: 27 4TH. MOVING TARGET	36 SW#: 35 7TH. FIXED TARGET	44 SW#: 43 1ST. FIXED TARGET
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 SW#: 12 TOP BUMPER LEFT-HAND	21 SW#: 20 BALL SHOOT CONDUCTM LEFT-HAND RIGHT-HAND CANAL	29 SW#: 28 INSIDE AND FIXED TARGET	37 SW#: 36 6TH. FIXED TARGET	45 SW#: 44 2ND. FIXED TARGET
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 SW#: 13 BOTTOM LEFT-HAND BUMPER	22 SW#: 21 BOTTOM CANAL OUTSIDE LEFT-HAND	30 SW#: 29 FIXED TARGET RIGHT-HAND CANAL	38 SW#: 37 1ST. TOP ROLLOVER	46 SW#: 45 3RD. FIXED TARGET
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 CONTACTS	31 SW#: 30 TOP BUMPER RIGHT-HAND	39 SW#: 38 2ND. TOP ROLLOVER	47 SW#: 46 4TH. FIXED TARGET
8 UNUSED	16 UNUSED	24 SW#: 23 SPECIAL HOLE	32 SW#: 31 BOTTOM RIGHT-HAND BUMPER	40 SW#: 39 3RD. TOP ROLLOVER	48 SW#: 47 5TH. FIXED TARGET

SW# number is the switch number as known to the game.

Earthshaker by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 LEFT OUTLANE	25 UNUSED	33 SW#: 33 ON RAMP 50K	41 SW#: 41 SPINNER	49 UNUSED	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN LANE	26 UNUSED	34 SW#: 34 ON RAMP 25K	42 SW#: 42 FAULT OPEN	50 SW#: 50 BALL SHOOTER	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1 (R)	19 SW#: 19 LEFT STANDUP	27 SW#: 27 3-BANK DT (LEFT)	35 SW#: 35 ON RAMP 100K	43 SW#: 43 RIGHT RAMP ENTRY	51 UNUSED	59 UNUSED
4 SW#: 4 LEFT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 EJECT HOLE	28 SW#: 28 3-BANK DT (MID)	36 SW#: 36 ON RAMP BYPASS	44 SW#: 44 CENTER RAMP ENTRY	52 SW#: 52 LEFT JET BUMPER	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #3 (L)	21 SW#: 21 RIGHT (HIGH) STANDUP	29 SW#: 29 3-BANK DT (RIGHT)	37 SW#: 37 BALL POPPER (TOP)	45 SW#: 45 CENTER RAMP MIDDLE	53 SW#: 53 RIGHT JET BUMPER	61 UNUSED
6 SW#: 6 RIGHT COIN CHUTE	14 SW#: 14 RIGHT INSIDE RETURN LANE	22 SW#: 22 RIGHT (LOW) STANDUP	30 SW#: 30 CENTER STANDUP	38 SW#: 38 UPPER DROP 1 PLAYFIELD HOLE	46 SW#: 46 CENTER RAMP END	54 SW#: 54 TOP JET BUMPER	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT RETURN OUTSIDE LANE	23 SW#: 23 CAPTIVE BALL	31 SW#: 31 RIGHT LOOP	39 SW#: 39 UPPER DROP 2 PLAYFIELD HOLE	47 UNUSED	55 SW#: 55 BL KICKER ("SLING")	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT OUTLANE	24 SW#: 24 RIGHT (50K) STANDUP	32 SW#: 32 LEFT LOOP	40 SW#: 40 BALL POPPER (BOTTOM)	48 UNUSED	56 SW#: 56 BR KICKER ("SLING")	64 UNUSED

SW# number is the switch number as known to the game.

Eclipse by Gottlieb

1 SW#: TOP #1 ROLLOVER	9 SW#: 10 TOP #2 ROLLOVER	17 SW#: 20 TOP #3 ROLLOVER	25 SW#: 30 BALL SHOOTER	33 UNUSED	41 SW#: 50 TOP LANE ROLLUNDER	49 UNUSED	57 UNUSED
2 SW#: 1 RIGHT #1 SPOT TARGET	10 SW#: 11 RIGHT #2 SPOT TARGET	18 SW#: 21 RIGHT #3 SPOT TARGET	26 SW#: 31 RIGHT #4 SPOT TARGET	34 UNUSED	42 SW#: 51 POP BUMPERS (4)	50 UNUSED	58 UNUSED
3 SW#: 2 RIGHT #4 DROP TARGET	11 SW#: 12 RIGHT #2 DROP TARGET	19 SW#: 22 RIGHT #3 DROP TARGET	27 SW#: 32 RIGHT #4 DROP TARGET	35 UNUSED	43 SW#: 52 RIGHT SIDE ROLLOVER	51 UNUSED	59 UNUSED
4 SW#: 3 LEFT #1 DROP TARGET	12 SW#: 13 LEFT #2 DROP TARGET	20 SW#: 23 LEFT #3 DROP TARGET	28 SW#: 33 LEFT #4 DROP TARGET	36 UNUSED	44 SW#: 53 LEFT #5 DROP TARGET	52 UNUSED	60 UNUSED
5 SW#: 4 CENTER #1 DROP TARGET	13 SW#: 14 CENTER #2 DROP TARGET	21 SW#: 24 CENTER #3 DROP TARGET	29 SW#: 34 KICKING TARGET	37 UNUSED	45 SW#: 54 BOTTOM RIGHT OUTSIDE ROLLOVER	53 UNUSED	61 UNUSED
6 SW#: 5 BALL KICKER HOLE	14 SW#: 15 SCORES BONUS OUTHOLE	22 SW#: 25 BALL RETURN (TROUGH)	30 SW#: 35 LEFT TARGET SPINNING	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 CENTER #1 SPOT TARGET	15 SW#: 16 CENTER #2 SPOT TARGET	23 SW#: 26 CENTER #3 SPOT TARGET	31 SW#: 36 CENTER #4 SPOT TARGET	39 UNUSED	47 SW#: 56 10 POINTS (3) AND KICKING RUBBER (2)	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Eight Ball by Bally

1 SW#: 1 10 POINT (3) REBOUNDS	9 SW#: 2 TOP LEFT TARGET	17 SW#: 3 BANK SHOT ROLLOVER BUTTON	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (IF (MIDDLE) USED)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM
3 SW#: 17 SPINNER	11 UNUSED	19 UNUSED	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 25 8-BALL TARGET	12 SW#: 26 7/15 RIGHT RETURN LANE	20 SW#: 27 6/14 TARGET (RIGHT)	28 SW#: 28 5/13 TARGET (LEFT)	36 SW#: 29 4/12 TOP LANE	44 SW#: 30 3/11 TOP LANE	52 SW#: 31 2/10 TOP LANE	60 SW#: 32 1/9 TOP LANE
5 SW#: 33 RIGHT OUTLANE	13 SW#: 34 BANK SHOT OUTLANE	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Eight Ball Champ by Bally

1 SW#: 1 RIGHT BUMPER THUMPER	9 SW#: 2 LEFT THUMPER BUMPER	17 SW#: 3 RIGHT SLINGSHOT	25 SW#: 4 LEFT SLINGSHOT	33 SW#: 5 SAUCER	41 SW#: 6 CREDIT	49 SW#: 7 REBOUND	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LEFT BUTTON ROLLOVER	34 SW#: 13 RIGHT BUTTON ROLLOVER	42 UNUSED	50 SW#: 15 TILT	58 SW#: 16 SLAM
3 SW#: 17 "C" RETURN LANE	11 SW#: 18 "H" TOP LANE	19 SW#: 19 "A" TOP LANE	27 SW#: 20 "M" TOP LANE	35 SW#: 21 "P" RETURN LANE	43 UNUSED	51 SW#: 23 LEFT OUTLANE	59 SW#: 24 RIGHT OUTLANE
4 SW#: 25 DROP TARGET 1,2,9,10	12 SW#: 26 SPINNER	20 SW#: 27 DROP TARGET 3,11	28 SW#: 28 DROP TARGET 4,5,12,13	36 SW#: 29 CENTER ROLLOVER BUTTON	44 SW#: 30 DROP TARGET 6,14	52 SW#: 31 DROP TARGET 7,15	60 SW#: 32 LANE CHANGE (CABINET)
5 SW#: 33 DROP TARGET "E"	13 SW#: 34 DROP TARGET "I"	21 SW#: 35 DROP TARGET "G"	29 SW#: 36 DROP TARGET "H"	37 SW#: 37 DROP TARGET "T"	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Eight Ball Deluxe by Bally

1 SW#: 1 2X INLINE DROP TARGET	9 SW#: 2 3X INLINE DROP TARGET	17 SW#: 3 4X INLINE DROP TARGET	25 SW#: 4 5X INLINE DROP TARGET	33 SW#: 5 INLINE BACK TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 "A" ROLLOVER	34 SW#: 13 "B" ROLLOVER	42 SW#: 14 "C" ROLLOVER	50 SW#: 15 "D" ROLLOVER	58 SW#: 16 SLAM (2)
3 SW#: 17 1, 9 DROP TARGET	11 SW#: 18 2, 10 DROP TARGET	19 SW#: 19 3, 11 DROP TARGET	27 SW#: 20 4, 12 DROP TARGET	35 SW#: 21 5, 13 DROP TARGET	43 SW#: 22 6, 14 DROP TARGET	51 SW#: 23 7, 15 DROP TARGET	59 SW#: 24 30 POINT (2) REBOUND
4 SW#: 25 "D" TARGET	12 SW#: 26 "E" FIRST TARGET	20 SW#: 27 "L" TARGET	28 SW#: 28 "U" TARGET	36 SW#: 29 "X" TARGET	44 SW#: 30 "E" 2ND TARGET	52 SW#: 31 RIGHT OUTLANE	60 SW#: 32 LEFT OUTLANE
5 SW#: 33 SINGLE DROP TARGET	13 SW#: 34 SAUCER	21 SW#: 35 ROLLOVER BUTTON	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 LEFT THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 BOTTOM THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

El Dorado City of Gold by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 SW#: 30 #4 DROP TARGET	33 SW#: 40 #5 DROP TARGET	41 SW#: 50 #1 ROLLOVER	49 SW#: 60 #2 ROLLOVER	57 UNUSED
2 SW#: 1 #6 DROP TARGET	10 SW#: 11 #7 DROP TARGET	18 SW#: 21 #8 DROP TARGET	26 SW#: 31 #9 DROP TARGET	34 SW#: 41 #10 DROP TARGET	42 SW#: 51 #3 ROLLOVER	50 SW#: 61 #4 ROLLOVER	58 UNUSED
3 SW#: 2 #11 DROP TARGET	11 SW#: 12 #12 DROP TARGET	19 SW#: 22 #13 DROP TARGET	27 SW#: 32 #14 DROP TARGET	35 SW#: 42 #15 DROP TARGET	43 SW#: 52 #5 ROLLOVER	51 SW#: 62 #6 ROLLOVER	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 SW#: 53 #7 ROLLOVER	52 SW#: 63 #8 ROLLOVER	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 SW#: 54 #9 ROLLOVER	53 SW#: 64 #10 ROLLOVER	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 SW#: 55 POP BUMPER (2)	54 SW#: 65 SPOT TARGET (2)	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 SW#: 66 30 POINT (9)	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Elektra by Bally

1 SW#: 1 OUTHOLE	9 SW#: 2 LEFT AND OF RIGHT OUTHOLE	17 SW#: 3 RIGHT SAUCER	25 SW#: 4 TOP SAUCER	33 SW#: 5 LEFT FLIPPER BUTTON	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 2X BONUS TARGET (LOWER LEVEL)	57 SW#: 8 SAUCER (LOWER LEVEL)
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 SHOOTER LANE ROLLOVER	34 SW#: 13 RIGHT OUTLANE	42 SW#: 14 LEFT OUTLANE	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 FLIPPERS E.O.S. (LOWER LEVEL)	11 SW#: 18 1ST INLINE DROP TARGET	19 SW#: 19 2ND INLINE DROP TARGET	27 SW#: 20 INLINE BACK TARGET	35 SW#: 21 #1 TOP & #1 TARGET LOWER LEVEL	43 SW#: 22 #2 TOP & #2 TARGET LOWER LEVEL	51 SW#: 23 #3 TOP & #3 TARGET LOWER LEVEL	59 SW#: 24 SPECIAL RECOVER BUTTON
4 SW#: 25 RIGHT & R.O. SPINNER LOWER LEVEL & ROLLER	12 SW#: 26 LEFT SPINNER E.O.S. LOWER LEVEL	20 SW#: 27 TOP RIGHT 3 BUTTONS	28 SW#: 28 TOP LEFT 3 R.O. BUTTONS	36 SW#: 29 MIDDLE #1 & (L) LOWER LEVEL	44 SW#: 30 MIDDLE #2 & TARGET LOWER LEVEL	52 SW#: 31 MIDDLE #3 & TARGET LOWER LEVEL	60 SW#: 32 10 POINT (2) TARGET
5 SW#: 33 LEFT SIDE #1 TARGET (BOTTOM)	13 SW#: 34 LEFT SIDE #2 TARGET	21 SW#: 35 LEFT SIDE #3 TARGET	29 SW#: 36 LEFT SIDE #4 TARGET	37 SW#: 37 LEFT SIDE #5 TARGET (TOP)	45 SW#: 38 TOP SHOOTER LANE R.O. BUTTON (2)	53 SW#: 39 RIGHT SLINGSHOT	61 SW#: 40 LEFT SLINGSHOT
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Elvira and the Party Monsters by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 LEFT STANDUP #1	33 SW#: 33 LEFT SLINGSHOT	41 SW#: 41 LEFT DROP TARGET "J"	49 SW#: 49 LOCK 1	57 SW#: 57 RIGHT FLIPPER
2 SW#: 2 A/C RELAY SELECT	10 UNUSED	18 SW#: 18 LEFT RETURN	26 SW#: 26 LEFT STANDUP #2	34 SW#: 34 RIGHT SLINGSHOT	42 SW#: 42 CENTER DROP TARGET "A"	50 SW#: 50 LOCK 2	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH 1, RIGHT	19 SW#: 19 RIGHT RETURN	27 SW#: 27 LEFT STANDUP #3	35 SW#: 35 LEFT BUMPER	43 SW#: 43 RIGHT DROP TARGET "M"	51 SW#: 51 LOCK 3	59 UNUSED
4 SW#: 4 RIGHT COIN SW	12 SW#: 12 TROUGH 2, MIDDLE	20 SW#: 20 RIGHT OUTLANE	28 SW#: 28 LEFT STANDUP #4	36 SW#: 36 RIGHT BUMPER	44 SW#: 44 RIGHT RAMP ENTRY	52 SW#: 52 LOCK SAFETY	60 UNUSED
5 SW#: 5 CENTER COIN SW	13 SW#: 13 TROUGH 3, LEFT	21 SW#: 21 SHOOTER LANE	29 SW#: 29 LOCK ENTRY	37 SW#: 37 BOTTOM BUMPER	45 SW#: 45 "B" LANE	53 SW#: 53 FLIP UP #1 TARGET	61 UNUSED
6 SW#: 6 LEFT COIN SW	14 UNUSED	22 SW#: 22 TOP RIGHT ROLLOVER	30 SW#: 30 LEFT RAMP ENTRY	38 UNUSED	46 SW#: 46 "A" LANE	54 SW#: 54 FLIP UP #2 TARGET	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT #1 STANDUP	23 SW#: 23 RIGHT SIDE ROLLUNDER	31 SW#: 31 LEFT RAMP END	39 UNUSED	47 SW#: 47 "T" LANE	55 SW#: 55 FLIP UP #1 OPEN	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT #2 STANDUP	24 UNUSED	32 SW#: 32 BALL POPPER	40 UNUSED	48 SW#: 48 EJECT HOLE	56 SW#: 56 FLIP UP #2 OPEN	64 UNUSED

SW# number is the switch number as known to the game.

Elvis by Stern

1 SW#: 1 LT BUTTON (UK ONLY)	9 SW#: 9 SPOT NOTE STANDUP	17 SW#: 17 (E)LVIS	25 SW#: 25 SPINNER	33 SW#: 33 ELVIS HOME	41 SW#: 41 LEFT TOP LANE	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 SHOOTER LANE EXIT	18 SW#: 18 E(L)VIS	26 SW#: 26 LEFT ORBIT HI	34 SW#: 34 CENTER EJECT SAUCER	42 SW#: 42 MIDDLE TOP LANE	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 EL(V)IS	27 SW#: 27 INNER LOOP	35 UNUSED	43 SW#: 43 RIGHT TOP LANE	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 ELV(I)S	28 SW#: 28 RIGHT RAMP EXIT	36 SW#: 36 (K)ING	44 UNUSED	52 SW#: 52 TOP HOTEL STANDUP	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 ELVI(S)	29 UNUSED	37 SW#: 37 K(I)NG	45 SW#: 45 RIGHT RAMP MADE	53 SW#: 53 BOTTOM HOTEL STANDUP	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 (T)CB	30 SW#: 30 LEFT RAMP MADE	38 SW#: 38 KI(N)G	46 SW#: 46 RIGHT ORBIT LOW	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 T(C)B	31 SW#: 31 LEFT RAMP EXIT	39 SW#: 39 KIN(G)	47 SW#: 47 RIGHT ORBIT HI	55 SW#: 55 TOURNAMENT START	63 SW#: 63 HOTEL DOOR
8 SW#: 8 RT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 TC(B)	32 SW#: 32 TOP SAUCER EJECT	40 SW#: 40 SCARF STANDUP	48 SW#: 48 HOTEL POST	56 SW#: 56 PLUMB BOB TILT	64 SW#: 64 HOUND DOG

SW# number is the switch number as known to the game.

Embryon by Bally

1 SW#: 1 10 POINT (4) REBOUND	9 SW#: 2 ROLLOVER (3) BUTTON	17 SW#: 3 RIGHT BUTTON FLIPPER	25 SW#: 4 SAUCER	33 SW#: 5 #1 LEFT AND RIGHT OF OUTHOLE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 "A" ROLLOVER	34 SW#: 13 "B" ROLLOVER	42 SW#: 14 RIGHT OUTLANE	50 SW#: 15 LEFT OUTLANE	58 SW#: 16 SLAM (2)
3 SW#: 17 SINGLE DROP TARGET*	11 SW#: 18 SPINNER	19 SW#: 19 TOP CENTER ROLLOVER	27 SW#: 20 3 TOP DROP TARGETS (UPPER)	35 SW#: 21 3 TOP DROP TARGETS (CENTER)	43 SW#: 22 3 TOP DROP TARGETS (LOWER)	51 SW#: 23 #1 ROLLOVER	59 SW#: 24 #2 ROLLOVER
4 SW#: 25 3 LEFT DROP TARGETS (UPPER)	12 SW#: 26 3 LEFT DROP TARGETS (CENTER)	20 SW#: 27 3 LEFT DROP TARGETS (LOWER)	28 SW#: 28 LEFT SIDE CAPTIVE BALL TARGET	36 SW#: 29 CENTER RIGHT UPPER TARGET	44 SW#: 30 CENTER RIGHT LOWER TARGET	52 SW#: 31 CENTER LEFT LOWER TARGET	60 SW#: 32 CENTER LEFT UPPER TARGET
5 SW#: 33 RIGHT CENTER INSIDE TARGET	13 SW#: 34 LEFT CENTER INSIDE TARGET	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 RIGHT BOTTOM THUMPER BUMPER	45 SW#: 38 RIGHT TOP THUMPER BUMPER	53 SW#: 39 LEFT BOTTOM THUMPER BUMPER	61 SW#: 40 LEFT TOP THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Escape From The Lost World by Bally

1 SW#: 1 SHOOTER LANE	9 SW#: 2 MOUNTAIN 50K	17 SW#: 3 MULTIBALL #2	25 SW#: 4 MULTIBALL #1	33 SW#: 5 BOTTOM FRONT CABINET INITIAL BUTTON	41 SW#: 6 CREDIT	49 SW#: 7 TOP FRONT CABINET INITIAL BUTTON	57 SW#: 8 OUTHOLE
2 SW#: 9 RIGHT COINS	10 SW#: 10 LEFT COINS	18 SW#: 11 MIDDLE COINS	26 UNUSED	34 SW#: 13 STAR ROLLOVER	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 UNUSED
3 SW#: 17 TREASURE 50K #5	11 SW#: 18 TREASURE 50K #4	19 SW#: 19 TREASURE 50K #3	27 SW#: 20 TREASURE 50K #2	35 SW#: 21 TREASURE 50K #1	43 SW#: 22 TREASURE 30K #3	51 SW#: 23 TREASURE 30K #2	59 SW#: 24 TREASURE 30K #1
4 SW#: 25 BOTTOM BUMPER	12 SW#: 26 TOP BUMPER	20 SW#: 27 TOP SLINGSHOT	28 SW#: 28 RIGHT SLINGSHOT	36 SW#: 29 LEFT SLINGSHOT	44 SW#: 30 DROP TARGET #3	52 SW#: 31 DROP TARGET #2	60 SW#: 32 DROP TARGET #1
5 SW#: 33 RIGHT RETURN LANE	13 SW#: 34 LEFT RETURN LANE	21 SW#: 35 ARCH RETURN	29 SW#: 36 ESCAPE	37 SW#: 37 SAUCER	45 SW#: 38 RIGHT OUTLANE	53 SW#: 39 RIGHT ELEVATOR	61 SW#: 40 TOP ELEVATOR
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Evel Knievel by Bally

1 SW#: 1 DROP TARGET A	9 SW#: 2 DROP TARGET B	17 SW#: 3 DROP TARGET C	25 SW#: 4 DROP TARGET D	33 SW#: 5 DROP TARGET E	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (IF (MIDDLE) USED)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM
3 SW#: 17 'E' TARGET	11 SW#: 18 'L' TARGET	19 SW#: 19 'C' TARGET	27 SW#: 20 'Y' LANE (TOP)	35 SW#: 21 'C' LANE (TOP)	43 SW#: 22 CENTER TARGET	51 SW#: 23 RIGHT OUT LANE	59 SW#: 24 LEFT OUT LANE
4 SW#: 25 L & R 'E.K' SCORING BUMPER	12 SW#: 26 TOP RED & TARGETS GP* 100	20 UNUSED	28 UNUSED	36 SW#: 29 TOP HOLE SAUCER	44 SW#: 30 RIGHT SPINNER	52 SW#: 31 LEFT SPINNER	60 SW#: 32 L & R FEEDER FLIPPER LANES
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM BUMPER	53 SW#: 39 MIDDLE BUMPER	61 SW#: 40 TOP BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Excaltbur by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 LOWER LEFT 4 RUBBER, LEFT BANK RUBBER	33 SW#: 40 #1 LEFT DROP TARGET (4 BANK)	41 SW#: 50 #2 LEFT DROP TARGET (4 BANK)	49 SW#: 60 #3 LEFT DROP TARGET (4 BANK)	57 SW#: 70 #4 LEFT DROP TARGET (4 BANK)
2 UNUSED	10 UNUSED	18 UNUSED	26 SW#: 31 TOP LEFT TOP RUBBER, RIGHT RUBBER, TOP 4 BANK	34 SW#: 41 #1 TOP DROP TARGET (4 BANK)	42 SW#: 51 #2 TOP DROP TARGET (4 BANK)	50 SW#: 61 #3 TOP DROP TARGET (4 BANK)	58 SW#: 71 #4 TOP DROP TARGET (4 BANK)
3 UNUSED	11 UNUSED	19 UNUSED	27 SW#: 32 LOWER RIGHT RUBBER, RIGHT 4 BANK RUBBER	35 SW#: 42 #1 RIGHT (4 TARGET BANK)	43 SW#: 52 #2 RIGHT (4 DROP TARGET BANK)	51 SW#: 62 #3 RIGHT (4 DROP TARGET BANK)	59 SW#: 72 #4 RIGHT (4 DROP TARGET BANK)
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 33 POP BUMPER	36 SW#: 43 #1 LEFT DROP TARGET (2 BANK)	44 SW#: 53 #2 LEFT DROP TARGET (2 BANK)	52 SW#: 63 #1 RIGHT (2 DROP TARGET BANK)	60 SW#: 73 #2 RIGHT (2 DROP TARGET BANK)
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 34 LEFT KICKING TARGET, RIGHT KICKING TARGET	37 SW#: 44 LEFT OUTSIDE ROLLOVER	45 SW#: 54 LEFT RETURN ROLLOVER	53 SW#: 64 LEFT SIDE ROLLOVER	61 SW#: 74 TOP RAMP ROLLUNDER
6 UNUSED	14 UNUSED	22 UNUSED	30 SW#: 35 SHOOTER LANE ROLLOVER	38 SW#: 45 RIGHT OUTSIDE ROLLOVER	46 SW#: 55 RIGHT RETURN ROLLOVER	54 SW#: 65 RIGHT SIDE ROLLOVER	62 SW#: 75 BOTTOM LEFT FLIPPER SWITCH
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 SW#: 36 CENTER LANE ROLLUNDER	39 SW#: 46 LEFT HOLE	47 SW#: 56 RIGHT HOLE	55 SW#: 66 OUTHOLE	63 SW#: 76 BOTTOM RIGHT FLIPPER SWITCH
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 SW#: 77 TROUGH

SW# number is the switch number as known to the game.

F14 Tomcat by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 UNUSED	25 SW#: 25 LEFT CENTER TARGET	33 SW#: 33 LOWER LEFT T TARGET	41 SW#: 41 3 TARGET	49 SW#: 49 UPPER LEFT T TARGET	57 SW#: 57 LEFT KICKER ("SLING")
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 OUTHOLE	18 UNUSED	26 SW#: 26 RIGHT CENTER TARGET	34 SW#: 34 LOWER LEFT O TARGET	42 SW#: 42 2 TARGET	50 SW#: 50 UPPER LEFT O TARGET	58 SW#: 58 RIGHT KICKER ("SLING")
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 RIGHT BALL TROUGH	19 UNUSED	27 UNUSED	35 SW#: 35 LOWER LEFT M TARGET	43 SW#: 43 1 TARGET	51 SW#: 51 UPPER LEFT M TARGET	59 SW#: 59 LEFT FLIPPER RETURN
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 RIGHT CENTER BALL TROUGH	20 SW#: 20 RAMP ENTRY	28 SW#: 28 JET ("POP") BUMPER	36 SW#: 36 LOWER RIGHT T TARGET	44 SW#: 44 4 TARGET	52 SW#: 52 UPPER RIGHT T TARGET	60 SW#: 60 RIGHT RETURN FLIPPER
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 LEFT CENTER BALL TROUGH	21 SW#: 21 RIGHT EJECT	29 UNUSED	37 SW#: 37 LOWER RIGHT A TARGET	45 SW#: 45 5 TARGET	53 SW#: 53 UPPER RIGHT A TARGET	61 SW#: 61 LEFT DRAIN "RESCUE" KICKBACK
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 LEFT BALL TROUGH	22 SW#: 22 LEFT CENTER EJECT	30 SW#: 30 LOWER RAMP	38 SW#: 38 LOWER RIGHT C TARGET	46 SW#: 46 6 TARGET	54 SW#: 54 UPPER RIGHT C TARGET	62 SW#: 62 RIGHT DRAIN
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT E.O.S. FLIPPER	23 SW#: 23 RIGHT CENTER EJECT	31 SW#: 31 MIDDLE RAMP	39 UNUSED	47 SW#: 47 TOP RIGHT LOOP	55 SW#: 55 LINE OF GEN. DEATH "KILL YAGOV"	63 SW#: 63 LEFT FLIPPER E.O.S.
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 BALL SHOOTER LANE	24 SW#: 24 BALL POPPER	32 SW#: 32 UPPER RAMP	40 UNUSED	48 SW#: 48 SPINNER	56 SW#: 56 TOP LEFT LOOP	64 UNUSED

SW# number is the switch number as known to the game.

Family Guy by Stern

1 SW#: 1 BALL SAVER UP	9 UNUSED	17 SW#: 33 LEFT RAMP MADE	25 SW#: 49 BEER CAN (BRIAN)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL SAVER DOWN	10 SW#: 18 TROUGH #4 (L)	18 UNUSED	26 SW#: 50 MINI MEG TARGET [STAND-UP]	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 LEFT ORBIT STAND-UP	11 SW#: 19 TROUGH #3	19 SW#: 35 EVIL MONKEY	27 SW#: 51 MINI PETER TARGET [STAND-UP]	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT 2-BANK BOTTOM	12 SW#: 20 TROUGH #2	20 UNUSED	28 SW#: 52 MINI RIGHT ORBIT	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 RIGHT 2-BANK TOP	13 SW#: 21 TROUGH #1 (R)	21 UNUSED	29 SW#: 53 MINI LEFT ORBIT	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT NEWTON ROLLOVER	14 SW#: 22 TROUGH JAM	22 UNUSED	30 SW#: 54 MINI RAMP	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 RIGHT NEWTON ROLLOVER	15 SW#: 23 SHOOTER LANE	23 SW#: 39 RIGHT ORBIT SPINNER	31 SW#: 55 MINI TROUGH	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 PIRATE [STAND-UP] TARGET	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 DEATH RETURN [INNER LT.]	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Family Guy by Stern

Bank 2

1 SW#: 9 1-BANK DROP TARGET	9 SW#: 25 LEFT RETURN [LANE]	17 SW#: 41 3 BANK STAND-UP] BOTTOM	25 SW#: 57 RIGHT ORBIT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 MEG TARGET [STAND-UP]	10 SW#: 26 LEFT SLING	18 SW#: 42 3 BANK [STAND-UP] MIDDLE	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 27 RIGHT SLING	19 SW#: 43 3 BANK TOP [STAND-UP]	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 28 RIGHT RETURN [LANE]	20 SW#: 44 (F)ART	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 TV EJECT	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 F(A)RT	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 30 TOP BUMPER	22 SW#: 46 FA(R)T	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 FAR(T)	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 SNEAK RAMP	32 SW#: 64 CLAM EJECT	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Fathom by Bally

1 SW#: 1 OUTHOLE	9 SW#: 2 #1 LEFT OF OUTHOLE	17 SW#: 3 #2 LEFT AND #1 RIGHT OF OUTHOLE	25 SW#: 4 TOP SAUCER	33 SW#: 5 RIGHT SAUCER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 RIGHT BUTTON FLIPPER	57 UNUSED
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 "C" LANE	34 SW#: 13 "B" LANE	42 SW#: 14 "A" LANE	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 RIGHT CENTER TARGET	11 SW#: 18 SPINNER	19 SW#: 19 10 POINT AND 6 DROP TARGET REBOUND	27 SW#: 20 3 LEFT ROLLOVER BUTTONS	35 SW#: 21 RIGHT RETURN LANE	43 SW#: 22 RIGHT OUTLANE	51 SW#: 23 LEFT OUTLANE	59 SW#: 24 LEFT RETURN LANE
4 SW#: 25 TOP SAUCER ROLLOVER BUTTON	12 SW#: 26 RIGHT SAUCER ROLLOVER BUTTON	20 SW#: 27 LEFT SIDE F DROP TARGET (BOTTOM)	28 SW#: 28 LEFT SIDE E DROP TARGET	36 SW#: 29 LEFT SIDE D DROP TARGET	44 SW#: 30 LEFT SIDE C DROP TARGET	52 SW#: 31 LEFT SIDE B DROP TARGET	60 SW#: 32 LEFT SIDE A DROP TARGET (TOP)
5 SW#: 33 #3 MIDDLE DROP TARGET	13 SW#: 34 #2 MIDDLE DROP TARGET	21 SW#: 35 #1 MIDDLE DROP TARGET	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 RIGHT BUMPER THUMPER	53 SW#: 39 BOTTOM THUMPER BUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 SW#: 42 3RD BLUE INLINE DROP TARGET	22 SW#: 43 2ND BLUE INLINE DROP TARGET	30 SW#: 44 1ST BLUE INLINE DROP TARGET	38 UNUSED	46 SW#: 46 3RD GREEN INLINE DROP TARGET	54 SW#: 47 2ND GREEN INLINE DROP TARGET	62 SW#: 48 1ST GREEN INLINE DROP TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

A FEW BALLY GAMES HAVE A 5TH STROBE (STROBE5) COMING FROM A DIFFERENT MPU HEADER THAT ALLOWS FOR AN ADDITIONAL 8 SWITCHES (SWITCHES 41-48). THIS IS NOT PART OF THE NORMAL WIRE HARNESS USED WITH THE 64 SWITCH MATRIX TESTER SINCE THIS IS ONLY A VERY LIMITED NUMBER OF GAMES. SWITCHES 41-48 WOULD NEED TO BE MANUALLY TESTED ON THE GAME. SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Fire by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 TOP, UPR L 3-BANK	25 SW#: 25 BALL SHOOTER LANE	33 SW#: 33 L DRAIN LANE	41 SW#: 41 LEFT RAMP DOWN	49 SW#: 49 LEFT KICKBIG (TOP)	57 SW#: 57 LEFT SLING (SCORING)
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 MID, UPR L 3-BANK	26 SW#: 26 FIREPLUG	34 SW#: 34 R DRAIN LANE	42 SW#: 42 RIGHT RAMP DOWN	50 SW#: 50 LEFT KICKBIG (BOTTOM)	58 SW#: 58 RIGHT SLING (SCORING)
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TOP, LWR L 3-BANK	19 SW#: 19 BOTTOM, UPR L 3-BANK	27 SW#: 27 HORSESHOE (LEFT ENTRY)	35 SW#: 35 LEFT FLIPPER RETURN	43 SW#: 43 RIGHT 20K ROLLOVER	51 UNUSED	59 SW#: 59 CENTER RAMP DOWN
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 MID, LWR L 3-BANK	20 SW#: 20 TOP, UPR R 3-BANK	28 SW#: 28 HORSESHOE (RIGHT ENTRY)	36 SW#: 36 RIGHT RETURN FLIPPER	44 SW#: 44 RIGHT 10K ROLLOVER	52 SW#: 52 RIGHT LOCKUP (MIDDLE)	60 SW#: 60 L & R WINDOWS
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BOTTOM, LWR L 3-BANK	21 SW#: 21 MID, UPR R 3-BANK	29 UNUSED	37 SW#: 37 ON RAMP (LEFT)	45 SW#: 45 RIGHT 30K ROLLOVER	53 SW#: 53 RIGHT LOCKUP (BOTTOM)	61 SW#: 61 UPPER LEFT SLING (SCORING)
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 TOP, LWR R 3-BANK	22 SW#: 22 BOTTOM, UPR R 3-BANK	30 UNUSED	38 SW#: 38 ON RAMP (RIGHT)	46 SW#: 46 RIGHT 100K ROLLOVER	54 SW#: 54 BALL TROUGH #3 (LEFT)	62 SW#: 62 UPPER RIGHT SLING (SCORING)
7 SW#: 7 SLAM TILT	15 SW#: 15 MID, LWR R 3-BANK	23 SW#: 23 L FLIPPER LANE CHANGE	31 SW#: 31 SAVE TARGET (LEFT)	39 SW#: 39 UNDER RAMP (LEFT)	47 SW#: 47 RIGHT 5K ROLLOVER	55 SW#: 55 BALL TROUGH #2 (MID)	63 SW#: 63 CENTER RAMP UP
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 BOTTOM, LWR R 3-BANK	24 SW#: 24 R FLIPPER LANE CHANGE	32 SW#: 32 SAVE TARGET (RIGHT)	40 SW#: 40 UNDER RAMP (RIGHT)	48 SW#: 48 RIGHT 1 K BUTTON	56 SW#: 56 BALL TROUGH #1 (RIGHT)	64 UNUSED

SW# number is the switch number as known to the game.

Fire Mountain by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 BOTTOM HOLE	25 SW#: 24 RIGHT HAND BUMPER	33 SW#: 32 CENTRE BUMPER	41 SW#: 40 1ST. LEFT BANK MOVING TARGET
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LEFT HAND KICKER	26 SW#: 25 TOP LEFT HAND ROLLOVER	34 SW#: 33 TOP LEFT HAND CONTACT	42 SW#: 41 2ND. LEFT BANK MOVING TARGET
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 RIGHT HAND KICKER	27 SW#: 26 TOP CENTRE ROLLOVER	35 SW#: 34 TOP RIGHT HAND CONTACT	43 SW#: 42 3RD. LEFT BANK MOVING TARGET
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 BOTTOM RIGHT INSIDE ROLLOVER	28 SW#: 27 TOP RIGHT HAND ROLLOVER	36 SW#: 35 LEFT HAND SPINNING TARGET	44 SW#: 43 4TH. LEFT BANK MOVING TARGET
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 BOTTOM RIGHT OUTSIDE ROLLOVER	29 SW#: 28 TOP LEFT HAND FIXED TARGET	37 SW#: 36 OUTSIDE LATERAL CONTACT	45 SW#: 44 5TH. RIGHT BANK MOVING TARGET
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 BOTTOM LEFT OUTSIDE ROLLOVER	30 SW#: 29 TOP RIGHT HAND FIXED TARGET	38 SW#: 37 RIGHT HAND SPINNING TARGET	46 SW#: 45 6TH. RIGHT BANK MOVING TARGET
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 BOTTOM LEFT INSIDE ROLLOVER	31 SW#: 30 LEFT HAND BUMPER	39 SW#: 38 BACK TARGET BACK CONTACTS	47 SW#: 46 7TH. RIGHT BANK MOVING TARGET
8 UNUSED	16 UNUSED	24 SW#: 23 TOP LEFT HAND HOLE	32 SW#: 31 TOP RIGHT HAND HOLE	40 SW#: 39 SINGLE MOVING TARGET	48 SW#: 47 8TH. RIGHT BANK MOVING TARGET

SW# number is the switch number as known to the game.

Fireball Classic by Bally

1 SW#: 1 SLINGSHOT (RIGHT)	9 SW#: 2 SLINGSHOT (LEFT)	17 SW#: 3 BOTTOM BUMPER	25 SW#: 4 MID BUMPER	33 SW#: 5 TOP BUMPER	41 SW#: 6 CREDIT	49 SW#: 7 REBOUNDERS	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 MUSHROOM BUMPER (RIGHT)	34 SW#: 13 MUSHROOM BUMPER (MIDDLE)	42 SW#: 14 MUSHROOM BUMPER (LEFT)	50 SW#: 15 TILT	58 SW#: 16 SLAM
3 SW#: 17 TOP LANE	11 SW#: 18 BUTTON 1K	19 SW#: 19 BUTTON OFF KICKER	27 SW#: 20 BUTTON ON KICKER	35 SW#: 21 OUTLANE (RIGHT)	43 SW#: 22 OUTLANE (LEFT)	51 SW#: 23 SAUCER (RIGHT)	59 SW#: 24 SAUCER (LEFT)
4 SW#: 25 RELEASE BALLS	12 UNUSED	20 UNUSED	28 SW#: 28 OUTHOLE #3	36 SW#: 29 OUTHOLE #2	44 SW#: 30 OUTHOLE #1	52 SW#: 31 GATE LANE	60 SW#: 32 TOP LANE 50K
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Fireball II by Bally

1 SW#: 1 OUTHOLE	9 SW#: 2 #1 LEFT OF OUTHOLE	17 SW#: 3 #2 LEFT OF OUTHOLE	25 SW#: 4 WOTAN SAUCER	33 SW#: 5 ODIN SAUCER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 FIREBALL RELAY SWITCH
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 "D" LANE	34 SW#: 13 "C" LANE	42 SW#: 14 "B" LANE	50 SW#: 15 "A" LANE	58 SW#: 16 SLAM (2)
3 SW#: 17 POST KICKER BUTTON (CAB.)	11 SW#: 18 #1 RIGHT OF OUTHOLE	19 SW#: 19 RIGHT OUTLANE	27 SW#: 20 LEFT OUTLANE	35 SW#: 21 RIGHT 4 DROP TARGET "D" (BOTTOM)	43 SW#: 22 RIGHT 4 DROP TARGET "C"	51 SW#: 23 RIGHT 4 DROP TARGET "B"	59 SW#: 24 RIGHT 4 DROP TARGET "A" (TOP)
4 SW#: 25 10 POINT (3) REBOUND	12 SW#: 26 ODIN & WOTAN TARGET (RIGHT)	20 SW#: 27 ODIN & WOTAN TARGET (MIDDLE)	28 SW#: 28 ODIN & WOTAN TARGET (LEFT)	36 SW#: 29 LEFT 4 DROP TARGET "D" (TOP)	44 SW#: 30 LEFT 4 DROP TARGET "C"	52 SW#: 31 LEFT 4 DROP TARGET "B"	60 SW#: 32 LEFT 4 DROP TARGET "A" (BOTTOM)
5 SW#: 33 3 DROP TARGET (RIGHT)	13 SW#: 34 3 DROP TARGET (MIDDLE)	21 SW#: 35 3 DROP TARGET (LEFT)	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Firepower by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 "1" TARGET	25 SW#: 25 BOTTOM LEFT JET BUMPER	33 SW#: 33 "I" ROLLOVER	41 SW#: 41 BOTTOM "POWER" TARGETS	49 SW#: 49 CENTER LEFT MIDDLE STANDUP	57 SW#: 57 RIGHT BALL RAMP
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT OUTSIDE ROLLOVER	18 SW#: 18 "2" TARGET	26 SW#: 26 TOP LEFT JET BUMPER	34 SW#: 34 "R" ROLLOVER	42 SW#: 42 RIGHT KICKER	50 SW#: 50 LOWER MIDDLE LEFT STANDUP	58 SW#: 58 CENTER BALL RAMP
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT INSIDE ROLLOVER	19 SW#: 19 "3" TARGET	27 SW#: 27 TOP RIGHT JET BUMPER	35 SW#: 35 "E" ROLLOVER	43 SW#: 43 RIGHT INSIDE ROLLOVER	51 SW#: 51 LEFT BALL RAMP	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT KICKER	20 UNUSED	28 SW#: 28 BOTTOM RIGHT JET BUMPER	36 SW#: 36 UPPER RIGHT EJECT HOLE	44 SW#: 44 RIGHT OUTSIDE ROLLOVER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT EJECT HOLE	21 SW#: 21 "4" TARGET	29 SW#: 29 TOP CENTER TARGET	37 SW#: 37 LOWER TOP RIGHT STANDUP	45 SW#: 45 RIGHT LANE UPPER CHANGE SWITCH	53 SW#: 53 LEFT EJECT ROLLOVER	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 UPPER MIDDLE LEFT STANDUP	22 SW#: 22 "5" TARGET	30 SW#: 30 RIGHT EJECT HOLE	38 SW#: 38 MIDDLE RIGHT STANDUP	46 SW#: 46 BALL SHOOTER	54 SW#: 54 RIGHT EJECT ROLLOVER	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 SPINNER	23 SW#: 23 "6" TARGET	31 SW#: 31 UPPER TOP RIGHT STANDUP	39 SW#: 39 TOP "POWER" TARGET	47 SW#: 47 PLAYFIELD TILT	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 TOP LEFT STANDUP	24 UNUSED	32 SW#: 32 "F" ROLLOVER	40 SW#: 40 MIDDLE "POWER" TARGET	48 SW#: 48 LOWER RIGHT STANDUP	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Firepower II by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 STANDUP	25 SW#: 25 "F" TARGET	33 SW#: 33 "R" TARGET	41 SW#: 41 LOWER LEFT JET BUMPER	49 SW#: 49 PLAYFIELD TILT	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 RIGHT BALL RAMP	18 SW#: 18 SPINNER	26 SW#: 26 "I" TARGET	34 SW#: 34 "A" ROLLOVER	42 SW#: 42 UPPER RIGHT JET BUMPER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT BALL RAMP	19 SW#: 19 ORBIT IN ROLL UNDER	27 SW#: 27 "R" TARGET	35 SW#: 35 "B" ROLLOVER	43 SW#: 43 UPPER LEFT JET BUMPER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 BALL SHOOTER TROUGH	20 SW#: 20 UPPER LEFT STANDUP	28 SW#: 28 "E" TARGET	36 SW#: 36 "C" ROLLOVER	44 SW#: 44 LOWER RIGHT JET BUMPER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 LANE CHANGE	21 UNUSED	29 SW#: 29 "P" TARGET	37 SW#: 37 "D" ROLLOVER	45 SW#: 45 LEFT FLIPPER RETURN LANE	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 RAMP IN ROLL UNDER	22 SW#: 22 UPPER RIGHT STANDUP	30 SW#: 30 "O" TARGET	38 SW#: 38 LEFT OUTLANE	46 SW#: 46 RIGHT RETURN FLIPPER LANE	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RAMP OUT ROLL UNDER	23 SW#: 23 EJECT HOLE	31 SW#: 31 "W" TARGET	39 SW#: 39 RIGHT OUTLANE	47 SW#: 47 LEFT KICKER	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 CENTER LEFT STANDUP	24 SW#: 24 RELEASE TARGET	32 SW#: 32 "E" TARGET	40 SW#: 40 ORBIT OUT GATE	48 SW#: 48 RIGHT KICKER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Fish Tales by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 CAST	25 SW#: 41 CAPTIVE BALL	33 SW#: 51 LEFT JET	41 SW#: 61 EXTRA BALL	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 LEFT BOAT EXIT	26 SW#: 42 RIGHT BOAT ENTRY	34 SW#: 52 CENTER JET	42 SW#: 62 TOP RIGHT LOOP	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO	19 SW#: 33 RIGHT BOAT EXIT	27 SW#: 43 LEFT BOAT ENTRY	35 SW#: 53 RIGHT JET	43 SW#: 63 TOP EJECT HOLE	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 SPINNER	28 SW#: 44 LIE (E)	36 SW#: 54 RT. STAND-UP TGT 1	44 SW#: 64 TOP LEFT LOOP	52 UNUSED	60 UNUSED
5 SW#: 15 OUTHOLE	13 SW#: 25 LEFT OUTLANE	21 SW#: 35 REEL ENTRY	29 SW#: 45 LIE (I)	37 SW#: 55 RT. STAND-UP TGT 2	45 SW#: 65 RIGHT RETURN	53 UNUSED	61 UNUSED
6 SW#: 16 TROUGH 1	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 CATAPULT	30 SW#: 46 LIE (L)	38 SW#: 56 BALL SHOOTER	46 SW#: 66 RIGHT OUTLANE	54 UNUSED	62 UNUSED
7 SW#: 17 TROUGH 2	15 SW#: 27 LT. STAND-UP TGT 1	23 SW#: 37 REEL 1	31 SW#: 47 BALL POPPER	39 SW#: 57 LEFT SLING	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 18 TROUGH 3	16 SW#: 28 LT. STAND-UP TGT 2	24 SW#: 38 REEL 2	32 SW#: 48 DROP TARGET	40 SW#: 58 RIGHT SLING	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Flash by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTSIDE LEFT UPPER STAR ROLLOVER	17 SW#: 17 SPINNER	25 SW#: 25 RIGHT SIDE STANDUP, CENTER	33 SW#: 33 5-BANK, 2 DROP TARGET	41 SW#: 41 LEFT KICKER	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 INSIDE UPPER LEFT STAR ROLLOVER	18 SW#: 18 LEFT JET BUMPER	26 SW#: 26 RIGHT SIDE STANDUP, LOWER	34 SW#: 34 5-BANK, 3 DROP TARGET	42 SW#: 42 RIGHT KICKER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 UPPER LEFT STANDUP	19 SW#: 19 RIGHT JET BUMPER	27 SW#: 27 EJECT HOLE	35 SW#: 35 5-BANK, 4 DROP TARGET	43 SW#: 43 LEFT SPECIAL ROLLOVER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 "1" ROLLOVER	20 SW#: 20 LOWER JET BUMPER	28 SW#: 28 3-BANK, RI GHT DROP TARGET	36 SW#: 36 5-BANK, 5 DROP TARGET (BOTTOM)	44 SW#: 44 LEFT FLIPPER RETURN ROLLOVER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 "2" ROLLOVER	21 SW#: 21 UPPER RIGHT STAR ROLLOVER	29 SW#: 29 3-BANK, DROP CENTER TARGET	37 SW#: 37 5-BANK, SERIES	45 SW#: 45 RIGHT RETURN FLIPPER ROLLOVER	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 "3" ROLLOVER	22 SW#: 22 CENTER RIGHT STAR ROLLOVER	30 SW#: 30 3-BANK, LEFT DROP TARGET	38 SW#: 38 5-BANK STANDUP	46 SW#: 46 RIGHT SPECIAL ROLLOVER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 "4" ROLLOVER	23 SW#: 23 LOWER RIGHT STAR ROLLOVER	31 SW#: 31 3-BANK, SERIES	39 SW#: 39 LEFT TARGET	47 SW#: 47 PLAYFIELD TILT	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE TO DATE RESET	16 SW#: 16 TOP RIGHT STANDUP	24 SW#: 24 RIGHT SIDE STANDUP, UPPER	32 SW#: 32 5-BANK, 1 DROP TARGET (TOP)	40 SW#: 40 RIGHT TARGET	48 SW#: 48 OUTHOLE	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Flash Gordon by Bally

1 SW#: 1 2 LEFT & RIGHT R.O. BUTTONS	9 SW#: 2 3 SHOOTER LANE R.O. BUTTONS	17 SW#: 3 TOP SINGLE DROP TARGET	25 SW#: 4 SHOOTER LANE ROLLOVER	33 SW#: 5 DROP TARGET 50 POINT REB. (2)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LOWER RIGHT SIDE TARGET	34 SW#: 13 FLIP FEED LANE (RIGHT)	42 SW#: 14 FLIP FEED LANE (LEFT)	50 SW#: 15 UPPER RIGHT SIDE TARGET	58 SW#: 16 SLAM (2)
3 SW#: 17 4 DROP "A" TARGET (BOTTOM)	11 SW#: 18 4 DROP "B" TARGET	19 SW#: 19 4 DROP "C" TARGET	27 SW#: 20 4 DROP "D" TARGET (TOP)	35 SW#: 21 1 DROP (TOP) TARGET	43 SW#: 22 2 DROP TARGET (MIDDLE)	51 SW#: 23 3 DROP TARGET (BOTTOM)	59 SW#: 24 TOP TARGET
4 SW#: 25 1ST INLINE DROP TARGET	12 SW#: 26 2ND INLINE DROP TARGET	20 SW#: 27 3RD INLINE DROP TARGET	28 SW#: 28 INLINE BACK TARGET	36 SW#: 29 10 POINT (2) REBOUND	44 SW#: 30 SAUCER	52 SW#: 31 RIGHT OUTLANE	60 SW#: 32 LEFT OUTLANE
5 SW#: 33 RIGHT SPINNER	13 SW#: 34 LEFT SPINNER	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 TOP THUMPER BUMPER	45 UNUSED	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Flight 2000 by Stern

1 SW#: 1 CHUTE (LEFT)	9 SW#: 2 CHUTE (CENTER)	17 SW#: 3 CHUTE (RIGHT)	25 SW#: 4 SPIN TARGET (L)	33 SW#: 5 SPIN TARGET (F)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 LEFT TOP SLINGSHOT	10 SW#: 10 RIGHT TOP SLINGSHOT	18 SW#: 11 LEFT BOTTOM SLINGSHOT	26 SW#: 12 RIGHT BOTTOM SLINGSHOT	34 SW#: 13 THUMPER (TOP)	42 SW#: 14 THUMPER (BOTTOM)	50 SW#: 15 LEFT KICKOUT	58 SW#: 16 RIGHT KICKOUT
3 SW#: 17 "B" TOP ROLLOVER, STAND-UP TARGETS	11 SW#: 18 "L" ROLLOVER	19 SW#: 19 "A" ROLLOVER	27 SW#: 20 "S" ROLLOVER	35 SW#: 21 "T" ROLLOVER	43 SW#: 22 "O" ROLLOVER	51 SW#: 23 "F" ROLLOVER	59 SW#: 24 "F" ROLLOVER
4 SW#: 25 TOP RIGHT DROP TARGET	12 SW#: 26 MID. RIGHT DROP TARGET	20 SW#: 27 BOT. RIGHT DROP TARGET	28 SW#: 28 #1 DROP TARGET	36 SW#: 29 #2 DROP TARGET	44 SW#: 30 #3 DROP TARGET	52 SW#: 31 #4 DROP TARGET	60 SW#: 32 #5 DROP TARGET
5 SW#: 33 OUT HOLE (RIGHT)	13 SW#: 34 OUT HOLE (CENTER)	21 SW#: 35 OUT HOLE (LEFT)	29 SW#: 36 LEFT OUT LANE	37 SW#: 37 RIGHT OUT LANE	45 SW#: 38 SPOT "BLAST"	53 SW#: 39 BALL LAUNCHER	61 SW#: 40 RELEASE NEXT ROCKET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Force II by Gottlieb

1 SW#: #1 TOP DROP TARGET	9 SW#: 10 #2 TOP DROP TARGET	17 SW#: 20 #3 TOP DROP TARGET	25 SW#: 30 #4 TOP DROP TARGET	33 SW#: 40 RED ROLLOVER	41 SW#: 50 WHITE ROLLOVER	49 SW#: 60 BLUE ROLLOVER	57 SW#: 70 SPIN TARGET
2 SW#: 1 TOP UPPLER LEFT ROLLOVER	10 SW#: 11 TOP LOWER LEFT ROLLOVER	18 SW#: 21 #1 LEFT DROP TARGET	26 SW#: 31 #2 LEFT DROP TARGET	34 SW#: 41 #3 LEFT DROP TARGET	42 SW#: 51 #4 LEFT DROP TARGET	50 SW#: 61 #5 LEFT DROP TARGET	58 SW#: 71 WHITE SPOT TARGET
3 SW#: 2 BLUE SPOT TARGET	11 SW#: 12 LEFT OUT ROLLOVER	19 SW#: 22 RETURN ROLLOVER	27 SW#: 32 BALL KICKER ROLLOVER	35 SW#: 42 RIGHT OUT ROLLOVER	43 SW#: 52 UPPER POP BUMPER (2)	51 SW#: 62 LOWER POP BUMPER	59 SW#: 72 HOLE KICKER
4 SW#: 3 #1 RIGHT DROP TARGET	12 SW#: 13 #2 RIGHT DROP TARGET	20 SW#: 23 #3 RIGHT DROP TARGET	28 SW#: 33 #4 RIGHT DROP TARGET	36 SW#: 43 #5 RIGHT DROP TARGET	44 SW#: 53 RED SPOT TARGET	52 SW#: 63 OUTHOLE ROLLOVER	60 SW#: 73 TROUGH ROLLOVER
5 SW#: 4 30 POINT (8)	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Freddy A Nightmare on Elm Street by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 SW#: 7 BOTTOM RIGHT SIDE CABINET BUTTON
2 SW#: 10 TOP POP BUMPER	10 SW#: 11 BOTTOM POP BUMPER	18 SW#: 12 LEFT KICKING RUBBER (2)	26 SW#: 13 RIGHT RUBBER KICKING (2)	34 SW#: 14 LEFT KICKING TARGET	42 SW#: 15 RIGHT TARGET KICKING	50 SW#: 16 BULLSEYE TARGET (INNER)	58 SW#: 17 DROP TARGET #1
3 SW#: 20 BOTTOM LEFT UPKICKER	11 SW#: 21 TOP LEFT UPKICKER	19 SW#: 22 TROUGH	27 SW#: 23 OUTHOLE	35 SW#: 24 TOP MOTOR STOP	43 SW#: 25 BOTTOM LANE SHOOTER ROLLOVER	51 SW#: 26 BULLSEYE TARGET (OUTER)	59 SW#: 27 DROP TARGET #2
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 34 BOTTOM MOTOR STOP	44 UNUSED	52 UNUSED	60 SW#: 37 DROP TARGET #3
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Freedom by Bally

1 SW#: 1 #1 DROP TARGET	9 SW#: 2 #2 DROP TARGET	17 SW#: 3 #3 DROP TARGET	25 SW#: 4 #4 DROP TARGET	33 SW#: 5 #5 DROP TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 UNUSED	11 SW#: 18 OUT CHANNEL (RIGHT & LEFT)	19 SW#: 19 100 PT	27 SW#: 20 10 PT	35 SW#: 21 WHEEL ROLLOVER	43 SW#: 22 ADVANCE & BONUS FLIPPER LANES	51 SW#: 23 SPINNER	59 SW#: 24 COLLECT WHEEL VALUE SAUCER
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 28 RIGHT SLINGSHOT	36 SW#: 29 #3 THUMPER BUMPER	44 SW#: 30 #2 THUMPER BUMPER	52 SW#: 31 #1 THUMPER BUMPER	60 SW#: 32 LEFT SLINGSHOT
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Freefall by Stern

1 SW#: 1 CHUTE (LEFT)	9 SW#: 2 CHUTE (CENTER)	17 SW#: 3 CHUTE (RIGHT)	25 SW#: 4 RT. SKY RAIDER KICKER	33 SW#: 5 SKYWAY KICKER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE REFLEX
2 SW#: 9 RT RETURN & LT. RETURN - "2ND 'S"	10 UNUSED	18 SW#: 11 UPPER RT. S.U. SWITCHES	26 SW#: 12 LOWER RT. SLINGSHOT	34 SW#: 13 LEFT SLINGSHOT	42 SW#: 14 RT. POP BUMPER	50 SW#: 15 LT. POP BUMPER	58 SW#: 16 TOP POP BUMPER
3 SW#: 17 LT. BANK #5	11 SW#: 18 LT. BANK #4	19 SW#: 19 LT. BANK #3	27 SW#: 20 LT BANK #2	35 SW#: 21 LT. BANK #1	43 SW#: 22 CTR BANK RT. DROP TARGET	51 SW#: 23 CTR. BANK MIDDLE DROP TARGET	59 SW#: 24 CTR. BANK TLT. DROP TARGET
4 SW#: 25 LT. LANE S.U. TARGET	12 SW#: 26 TOP "E" & R.O.W. S.U. TARGET	20 SW#: 27 TOP "V" R.O.W.	28 SW#: 28 TOP R.O.W. "I"	36 SW#: 29 TOP R.O.W. & "D" S.U. TARGET	44 SW#: 30 RIGHT TARGET "Y" & S.U. TARGET	52 SW#: 31 TOP TARGET & RIGHT TARGET "K"	60 SW#: 32 RIGHT TARGET "S"
5 SW#: 33 OUTHOLE-KICKOUT	13 SW#: 34 MIDDLE OUTHOLE	21 SW#: 35 LEFT OUTHOLE	29 SW#: 36 TOP RT. & TARGET SPINNER	37 SW#: 37 LT. & RT. OUTLANES SPECIALS	45 SW#: 38 SHOOTER LANE RUNWAY	53 SW#: 39 WALKER	61 SW#: 40 RT. & LT. RETURN LANE "R"
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Frontier by Bally

1 SW#: 1 30 POINT (4) REBOUND	9 SW#: 2 RIGHT OUT	17 SW#: 3 RIGHT FEED FLIPPER	25 SW#: 4 LEFT FLIPPER FEED	33 SW#: 5 LEFT OUT	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 SAUCER	34 SW#: 13 "A" ROLLOVER	42 SW#: 14 "B" ROLLOVER	50 SW#: 15 "C" ROLLOVER	58 SW#: 16 SLAM (2)
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 21 3RD INLINE DROP TARGET	43 SW#: 22 2ND INLINE DROP TARGET	51 SW#: 23 1ST INLINE DROP TARGET	59 SW#: 24 GRIZZLY TARGET
4 SW#: 25 SAUCER ROLLOVER BUTTON	12 UNUSED	20 SW#: 27 SPINNER	28 UNUSED	36 SW#: 29 LEFT TARGET	44 SW#: 30 CENTER TARGET	52 SW#: 31 RIGHT TARGET	60 UNUSED
5 SW#: 33 BOTTOM SIDE D.T.	13 SW#: 34 MIDDLE SIDE D.T.	21 SW#: 35 TOP SIDE DROP TARGET	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Funhouse by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 S-T-E-P "P" (LOWER RIGHT)	25 SW#: 41 LEFT SLINGSHOT (KICKER)	33 SW#: 51 DUMMY JAW (OPTO)	41 SW#: 61 RT INSIDE FLIPPER RETURN LANE	49 SW#: 71 RT OUTSIDE FLIPPER RETURN LANE	57 UNUSED
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 FRONT DOOR	18 SW#: 32 TOP SUPERDOG STANDUP TARGET	26 SW#: 42 LEFT FLIPPER RETURN LANE	34 SW#: 52 RIGHT OUTLANE	42 SW#: 62 RIGHT BALL SHOOTER	50 SW#: 72 LEFT TROUGH	58 UNUSED
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 UPPER LEFT GANGWAY ROLLUNDER	27 SW#: 43 LEFT OUTLANE	35 SW#: 53 RIGHT SLINGSHOT (KICKER)	43 SW#: 63 RIGHT TROUGH	51 SW#: 73 OUTHOLE	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED SUPERDOG	20 SW#: 34 BOTTOM STANDUP TARGET	28 SW#: 44 WIND TUNNEL HOLE	36 SW#: 54 S-T-E-P "T" (UPPER LEFT)	44 SW#: 64 S-T-E-P "E" (UPPER CENTER)	52 SW#: 74 CENTER TROUGH	60 UNUSED
5 SW#: 15 STEPS LIGHTS FRENZY	13 SW#: 25 LOCK MECH RIGHT	21 SW#: 35 STEPS TRACK LOWER	29 SW#: 45 TRAP DOOR	37 SW#: 55 STEPS (OPTO) SUPERDOG	45 SW#: 65 DUMMY EJECT HOLE	53 SW#: 75 UPPER RIGHT LOOP SWITCH	61 UNUSED
6 SW#: 16 UPPER RAMP SWITCH	14 SW#: 26 STEPS LIGHTS EXTRA BALL	22 SW#: 36 STEPS 500,000	30 SW#: 46 RUDYS HIDEOUT KICKBIG	38 SW#: 56 RAMP ENTRANCE	46 SW#: 66 UPPER RIGHT GANGWAY LANE	54 SW#: 76 TRAP DOOR CLOSED	62 UNUSED
7 SW#: 17 S-T-E-P "S" (LOWER LEFT)	15 SW#: 27 LOCK MECH CENTER SUPERDOG	23 SW#: 37 CENTER STANDUP TARGET	31 SW#: 47 LEFT BALL SHOOTER	39 SW#: 57 JET BUMPER LANE	47 SW#: 67 LOWER RIGHT DROP HOLE	55 SW#: 77 UPPER RIGHT JET BUMPER	63 UNUSED
8 SW#: 18 UPPER LEFT JET BUMPER	16 SW#: 28 LOCK MECH LEFT	24 SW#: 38 STEPS TRACK UPPER	32 SW#: 48 RAMP EXIT TRACK	40 SW#: 58 TUNNEL KICKOUT	48 SW#: 68 LOWER JET BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Future Spa by Bally

1 SW#: 1 FIRST DROP TARGET	9 SW#: 2 DROP TARGET 2X	17 SW#: 3 DROP TARGET 4X	25 SW#: 4 DROP TARGET 6X	33 SW#: 5 FUTURITY TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 RIGHT BUTTON ROLLOVER	34 SW#: 13 30-POINT (4) REBOUND	42 SW#: 14 RIGHT SPINNER	50 SW#: 15 LEFT SPINNER	58 SW#: 16 SLAM (2)
3 SW#: 17 "E" ROLLOVER LANE	11 SW#: 18 "R" ROLLOVER LANE	19 SW#: 19 2ND "U" LANE ROLLOVER	27 SW#: 20 "T" ROLLOVER LANE	35 SW#: 21 1ST "U" LANE ROLLOVER	43 SW#: 22 "F" ROLLOVER LANE	51 SW#: 23 SPA TARGET	59 SW#: 24 SAUCER
4 SW#: 25 FLIPPER FEED LANE	12 SW#: 26 GATE OPEN ARROW LANE	20 SW#: 27 LEFT OUTLANE	28 SW#: 28 LEFT KICKBACK	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 SW#: 35 LEFT SLINGSHOT	29 SW#: 36 BOTTOM RIGHT THUMPER BUMPER	37 SW#: 37 BOTTOM LEFT THUMPER BUMPER	45 SW#: 38 TOP CENTER THUMPER BUMPER	53 SW#: 39 TOP RIGHT THUMPER BUMPER	61 SW#: 40 TOP LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Future World by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 LEFT CHANNEL BUTTON	33 SW#: 32 MOVING TARGET	41 SW#: 40 TOP LEFT HAND BUMPER
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LEFT KICKER SWITCH	26 SW#: 25 LEFT CHANNEL BUTTON	34 SW#: 33 MOVING TARGET	42 SW#: 41 TOP RIGHT HAND BUMPER
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 RIGHT KICKER SWITCH	27 SW#: 26 LEFT CHANNEL BUTTON	35 SW#: 34 MOVING TARGET	43 SW#: 42 TOP RIGHT HAND TARGET
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 BOTTOM RIGHT INSIDE HAND ROLLOVER	28 SW#: 27 LEFT CHANNEL BUTTON	36 SW#: 35 CENTER LEFT HAND CONTACT	44 SW#: 43 TOP RIGHT HAND TARGET
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 BOTTOM RIGHT OUTSIDE HAND ROLLOVER	29 SW#: 28 LEFT CHANNEL BUTTON	37 SW#: 36 SIDE HOLE	45 SW#: 44 TOP RIGHT HAND TARGET
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 BOTTOM LEFT INSIDE HAND ROLLOVER	30 SW#: 29 MOVING TARGET	38 SW#: 37 RIGHT HAND CANAL	46 SW#: 45 TOP HOLE
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 UNUSED	23 SW#: 22 BOTTOM LEFT OUTSIDE HAND ROLLOVER	31 SW#: 30 MOVING TARGET	39 SW#: 38 CENTER RIGHT HAND CONTACT	47 SW#: 46 TOP LEFT HAND CONTACT
8 UNUSED	16 UNUSED	24 SW#: 23 LEFT CHANNEL BUTTON	32 SW#: 31 MOVING TARGET	40 SW#: 39 CENTER BUMPER	48 UNUSED

SW# number is the switch number as known to the game.

Galaxy by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 SW#: 4 DROP TARGET (RED)	33 SW#: 5 SPIN TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 DROP TARGET (BLACK)	10 SW#: 10 DROP TARGET (YELLOW)	18 SW#: 11 DROP TARGET (BLUE)	26 SW#: 12 TOP THUMPER	34 SW#: 13 LOWER RIGHT THUMPER	42 SW#: 14 LOWER LEFT THUMPER	50 SW#: 15 RIGHT SLING-SHOT	58 SW#: 16 LEFT SLING-SHOT
3 UNUSED	11 SW#: 18 CENTER (2) ROLL-OVER BUTTONS	19 SW#: 19 RIGHT RETURN LANE	27 SW#: 20 RIGHT MIDDLE LANE	35 SW#: 21 LEFT RETURN LANE	43 SW#: 22 LEFT MIDDLE LANE	51 SW#: 23 RIGHT OUT-LANE (R.O.B.)	59 SW#: 24 LEFT OUT-LANE (R.O.B.)
4 UNUSED	12 SW#: 26 STAND-UP TARGET (BLUE STAR)	20 UNUSED	28 UNUSED	36 SW#: 29 STAND-UP TARGET (YELLOW STAR)	44 SW#: 30 STAND-UP TARGET (GREEN STAR)	52 UNUSED	60 UNUSED
5 SW#: 33 OUT-HOLE	13 UNUSED	21 SW#: 35 BALL KICKER	29 SW#: 36 TOP LEFT ROLL-OVER WIRE	37 SW#: 37 TOP MIDDLE ROLL-OVER WIRE	45 SW#: 38 TOP RIGHT ROLL-OVER WIRE	53 SW#: 39 TOP RIGHT ROLL-OVER BUTTON	61 SW#: 40 SAUCER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Genesis by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 VARI-TARGET #1	41 SW#: 50 VARI-TARGET #2	49 SW#: 60 VARI-TARGET #3	57 SW#: 70 VARI-TARGET #4
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #1 DROP TARGET	42 SW#: 51 #2 DROP TARGET	50 SW#: 61 #3 DROP TARGET	58 SW#: 71 POP BUMPER (4)
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 #1 TOP ROLLOVER	43 SW#: 52 #2 TOP ROLLOVER	51 SW#: 62 #3 TOP ROLLOVER	59 SW#: 72 KICKING (2) RUBBER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 TOP LEFT HOLE	44 SW#: 53 LEFT SIDE ROLLOVER	52 SW#: 63 RIGHT SIDE ROLLUNDER	60 SW#: 73 TOP RIGHT KICKER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 L. AND R. RET. ROLLOVER (2)	45 SW#: 54 LEFT OUTSIDE ROLLOVER	53 SW#: 64 RIGHT OUTSIDE ROLLOVER	61 SW#: 74 2ND POSITION TROUGH
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT KICKING TARGET	46 SW#: 55 OUTHOLE	54 SW#: 65 RIGHT TARGET KICKING	62 SW#: 75 RIGHT FLIPPER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Genie by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 "A" ROLLOVER (2)	10 SW#: 11 "B" ROLLOVER (2)	18 UNUSED	26 SW#: 13 "C" ROLLOVER (2)	34 SW#: 14 "D" ROLLOVER (2)
3 SW#: 20 #1 YELLOW DROP TARGET	11 SW#: 21 #2 YELLOW DROP TARGET	19 UNUSED	27 SW#: 23 #3 YELLOW DROP TARGET	35 SW#: 24 #4 YELLOW DROP TARGET
4 SW#: 30 #1 RED DROP TARGET	12 SW#: 31 #3 RED DROP TARGET	20 UNUSED	28 SW#: 33 SPINNING TARGET	36 UNUSED
5 SW#: 40 SPECIAL TARGET	13 SW#: 41 HOLE SWITCH	21 UNUSED	29 SW#: 43 BOTTOM POP BUMPER	37 SW#: 44 LEFT EXTRA BALL TARGET
6 SW#: 50 10 POINT SWITCHES (10)	14 SW#: 51 RIGHT EXTRA BALL TARGET	22 UNUSED	30 SW#: 53 TOP ROLLOVER BUTTONS & POP BUMPER	38 SW#: 54 3000 POINTS PER ROLLOVER (2)
7 SW#: 60 #5 RED DROP TARGET	15 SW#: 61 #7 RED DROP TARGET	23 UNUSED	31 SW#: 63 500 AND ADD BONUS TARGET (1), AND ROLLOVERS (3)	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Gilligans Island by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 PAYOFF LEFT MIDDLE	25 SW#: 41 LEFT JET	33 SW#: 51 LAGOON N	41 SW#: 61 ISLAND ENTRANCE	49 SW#: 71 PAYOFF TOP LEFT	57 UNUSED
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 RIGHT 10 POINTS	26 SW#: 42 RIGHT JET	34 SW#: 52 LAGOON O	42 SW#: 62 RAMP STATUS	50 SW#: 72 PAYOFF TOP RIGHT	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO	19 SW#: 33 LEFT LOCK	27 SW#: 43 BOTTOM JET	35 SW#: 53 LAGOON O	43 SW#: 63 LEFT LOOP	51 SW#: 73 PAYOFF RIGHT BOTTOM	59 SW#: 83 TOP LEFT LOOP
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 UNUSED	28 SW#: 44 LEFT SLING	36 SW#: 54 LAGOON G	44 SW#: 64 RIGHT LOOP	52 SW#: 74 PAYOFF LEFT BOTTOM	60 SW#: 84 TOP RIGHT LOOP
5 UNUSED	13 SW#: 25 LEFT OUTLANE	21 SW#: 35 LEFT STAND UP	29 SW#: 45 RIGHT SLING	37 SW#: 55 LAGOON A	45 SW#: 65 S TURN	53 SW#: 75 LOCK LANE	61 UNUSED
6 SW#: 16 TROUGH LEFT	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 LEFT BANK LEFT	30 SW#: 46 RIGHT BANK LEFT	38 SW#: 56 LAGOON L	46 SW#: 66 BALL POPPER	54 SW#: 76 WHEEL LOCK	62 UNUSED
7 SW#: 17 TROUGH RIGHT	15 SW#: 27 RIGHT RETURN LANE	23 SW#: 37 LEFT BANK MIDDLE	31 SW#: 47 RIGHT BANK MIDDLE	39 SW#: 57 RAMP STAND UP	47 SW#: 67 TOP EJECT	55 SW#: 77 WHEEL OPTO	63 UNUSED
8 SW#: 18 OUTHOLE	16 SW#: 28 RIGHT OUTLANE	24 SW#: 38 LEFT BANK RIGHT	32 SW#: 48 RIGHT BANK RIGHT	40 SW#: 58 JET 10 POINTS	48 SW#: 68 TOP RIGHT	56 SW#: 78 SHOOTER	64 UNUSED

SW# number is the switch number as known to the game.

Gladiators by Gottlieb

1 SW#: (LEFT) #1 COIN CHUTE	9 SW#: 1 (RIGHT) #2 COIN CHUTE	17 SW#: 2 (CENTER) #3 COIN CHUTE	25 SW#: 3 #4 COIN CHUTE	33 SW#: 4 CREDIT BUTTON	41 SW#: 5 TOURNAMENT	49 SW#: 6 (SERVICE) FRONT DOOR	57 UNUSED
2 SW#: 10 TOP LEFT POP BUMPER	10 SW#: 11 TOP RIGHT POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING TARGET	34 SW#: 14 RIGHT TARGET KICKING	42 SW#: 15 DROP TARGET #1	50 UNUSED	58 UNUSED
3 SW#: 20 SPINNER	11 SW#: 21 TOP HOLE	19 SW#: 22 CENTER UPKICKER	27 SW#: 23 OUTHOLE	35 SW#: 24 SHOOTER LANE ROLLOVER	43 SW#: 25 DROP TARGET #2	51 UNUSED	59 UNUSED
4 SW#: 30 RAMP MOTOR	12 SW#: 31 LEFT HOLE	20 SW#: 32 RIGHT UPKICKER	28 SW#: 33 TROUGH	36 UNUSED	44 SW#: 35 DROP TARGET #3	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Godzilla by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 LEFT 4-BANK BOTTOM	25 UNUSED	33 UNUSED	41 SW#: 41 LT CAPTIVE BALL BOT	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 LEFT 4-BANK #2	26 SW#: 26 GODZILLA RAMP (LT)	34 UNUSED	42 SW#: 42 LT CAPTIVE BALL TOP	50 SW#: 50 RIGHT TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 LEFT 4-BANK #3	27 UNUSED	35 UNUSED	43 SW#: 43 RT CAPTIVE BALL BOT	51 SW#: 51 BOTOTM TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 LEFT 4-BANK TOP	28 SW#: 28 ORBIT RAMP (RT)	36 UNUSED	44 SW#: 44 RT CAPTIVE BALL TOP	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 RIGHT 4-BANK BOTTOM	29 SW#: 29 (T)AXI S-U	37 UNUSED	45 SW#: 45 INNER LEFT ORBIT	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 RIGHT 4-BANK #2	30 SW#: 30 T(A)XI S-U	38 UNUSED	46 SW#: 46 SPINNER	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 RIGHT 4-BANK #3	31 SW#: 31 TA(X)I S-U	39 UNUSED	47 SW#: 47 LEFT ORBIT	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT 4-BANK TOP	32 SW#: 32 TAX(I) S-U)	40 UNUSED	48 SW#: 48 RIGHT ORBIT	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Gold Ball by Bally

1 SW#: 1 LEFT THUMPER BUMPER	9 SW#: 2 LOWER BUMPER THUMPER	17 SW#: 3 RIGHT BUMPER THUMPER	25 SW#: 4 RIGHT SLINGSHOT	33 SW#: 5 RIGHT BUTTON FLIPPER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 SPINNER	57 SW#: 8 OUTHOLE REGULAR
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 #1 TARGET	34 SW#: 13 #2 TARGET	42 SW#: 14 #3 TARGET	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 LEFT OUTLANE	11 SW#: 18 LEFT RETURN LANE	19 SW#: 19 RIGHT SIDE ROLLOVER BUTTON	27 SW#: 20 TOP ROLLOVER BUTTON	35 SW#: 21 "P" LANE	43 SW#: 22 "L" LANE	51 SW#: 23 "A" LANE	59 SW#: 24 "Y" LANE
4 SW#: 25 SINGLE TARGET	12 SW#: 26 RIGHT OUTLANE	20 SW#: 27 REBOUNDS (4)	28 SW#: 28 BULLS EYE SIDE SW. (2)	36 SW#: 29 BULLS EYE	44 SW#: 30 OUTHOLE GOLD BALL	52 SW#: 31 LEFT LOWER REBOUND	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Gold Mine by Williams

1 SW#: 1 GAME SELECT	9 SW#: 9 PLAYFIELD E & F SERIES	17 SW#: 17 PLAYFIELD L	25 SW#: 25 PLAYFIELD P	33 SW#: 33 PLAYFIELD Z	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 10 PLAYFIELD E	18 SW#: 18 PLAYFIELD K	26 SW#: 26 PLAYFIELD O	34 SW#: 34 PLAYFIELD Y	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 PLAYFIELD B	19 SW#: 19 PLAYFIELD H	27 SW#: 27 PLAYFIELD N	35 SW#: 35 PLAYFIELD X	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 PLAYFIELD A	20 SW#: 20 PLAYFIELD AA	28 SW#: 28 PLAYFIELD M	36 SW#: 36 PLAYFIELD BACK ROW	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 PLAYFIELD D	21 SW#: 21 PLAYFIELD G	29 SW#: 29 PLAYFIELD W	37 SW#: 37 TICKET DISPENSER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 PLAYFIELD C & D SERIES	22 SW#: 22 PLAYFIELD S	30 SW#: 30 PLAYFIELD V & W SERIES	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 PLAYFIELD J	23 SW#: 23 PLAYFIELD R	31 SW#: 31 PLAYFIELD T & U SERIES	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 PLAYFIELD I	24 SW#: 24 PLAYFIELD Q	32 SW#: 32 PLAYFIELD T	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gold Wings by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 KICKING RUBBER SCORING SWITCH	33 SW#: 40 LEFT LOOP ROLLUNDER	41 SW#: 50 LEFT RETURN ROLLOVER	49 SW#: 60 #1 SPOT TARGET	57 SW#: 70 #2 SPOT TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 RIGHT LOOP ROLLUNDER	42 SW#: 51 #3 SPOT TARGET	50 SW#: 61 #4 SPOT TARGET	58 SW#: 71 #5 SPOT TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 SHOOTER LANE ROLLOVER	43 SW#: 52 #6 SPOT TARGET	51 SW#: 62 #7 SPOT TARGET	59 SW#: 72 #8 SPOT TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 SPINNER	44 SW#: 53 #1 TOP ROLLOVER	52 SW#: 63 #2 TOP ROLLOVER	60 SW#: 73 #3 TOP ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 VERTICAL LOOP ENTRANCE ROLLUNDER	45 SW#: 54 VERTICAL ROLLUNDER, ROLLOVER	53 SW#: 64 TOP RIGHT ROLLUNDER	61 SW#: 74 HOLE
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 RAMP ROLLUNDER	46 SW#: 55 POP BUMPER (4); KICKING TARGET	54 SW#: 65 BOTTOM RETURN ROLLUNDER	62 SW#: 75 RUBBER (2) SWITCHES
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 #1 TROUGH	47 SW#: 56 #2 TROUGH	55 SW#: 66 OUTHOLE	63 SW#: 76 BOTTOM RIGHT FLIPPER
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Goldeneye by Sega

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 FIRE BUTTON	17 SW#: 17 RIGHT RAMP EXIT	25 SW#: 25 LEFT 5-BANK BOTTOM	33 SW#: 33 2-BANK BOTTOM	41 SW#: 41 LEFT TURBO BUMPER	49 UNUSED	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 5-BALL #1 TROUGH (LEFT)	18 SW#: 18 CENTER RAMP EXIT	26 SW#: 26 LEFT 5-BANK MID-BOT	34 SW#: 34 2-BANK TOP	42 SW#: 42 BOTTOM TURBO BUMPER	50 SW#: 50 SCOOP	58 SW#: 58 RIGHT OUTLANE
3 SW#: 3 START BUTTON	11 SW#: 11 5-BALL #2 TROUGH	19 SW#: 19 RIGHT RAMP ENTER	27 SW#: 27 LEFT 5-BANK MIDDLE	35 UNUSED	43 SW#: 43 RIGHT TURBO BUMPER	51 SW#: 51 RIGHT TOP LANE	59 SW#: 59 LEFT RETURN LANE
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 5-BALL #3 TROUGH	20 SW#: 20 SATELLITE HOME	28 SW#: 28 LEFT 5-BANK MID-TOP	36 UNUSED	44 SW#: 44 RIGHT 5-BANK TOP	52 SW#: 52 MIDDLE TOP LANE	60 SW#: 60 RIGHT RETURN LANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 5-BALL #4 TROUGH	21 UNUSED	29 UNUSED	37 UNUSED	45 SW#: 45 RIGHT 5-BANK MID-TOP	53 SW#: 53 LEFT TOP LANE	61 SW#: 61 LEFT SLINGSHOT
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 5-BALL #5 TROUGH (RIGHT)	22 UNUSED	30 SW#: 30 LEFT STAND-UP	38 UNUSED	46 SW#: 46 RIGHT 5-BANK MIDDLE	54 SW#: 54 CENTER RAMP ENTER	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 SLAM TILT	15 SW#: 15 5-BALL VUK TROUGH OPTO	23 SW#: 23 SATELLITE MAGNET BOARD	31 SW#: 31 RIGHT STAND-UP	39 SW#: 39 EJECT STAND-UP	47 SW#: 47 RIGHT 5-BANK MID-BOT	55 SW#: 55 TOP LANE ENTER	63 SW#: 63 LT FLIPPER BUTTON VIA Q7 (ON SSFB)
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 FLIPPER MAGNET BOARD	32 SW#: 32 LEFT RAMP MADE	40 SW#: 40 LEFT RAMP ENTER	48 SW#: 48 RIGHT 5-BANK BOTTOM	56 SW#: 56 TANK TRAP DOOR	64 SW#: 64 RT FLIPPER BUTTON VIA Q5 (ON SSFB)

SW# number is the switch number as known to the game.

Gorgar by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 UPPER LEFT STANDUP	25 SW#: 25 MIDDLE UPPER STANDUP	33 SW#: 33 "4" TARGET	41 SW#: 41 "G" DROP TARGET	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT OUTSIDE ROLLOVER	18 SW#: 18 "G" DROP TARGET	26 SW#: 26 "A" ROLLOVER	34 SW#: 34 RIGHT OUTSIDE ROLLOVER	42 SW#: 42 "A" DROP TARGET	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 "D" ROLLOVER	19 SW#: 19 "O" DROP TARGET	27 SW#: 27 "B" ROLLOVER	35 SW#: 35 "E" ROLLOVER	43 SW#: 43 "R" DROP TARGET	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT KICKER	20 SW#: 20 "R" DROP TARGET	28 SW#: 28 "C" ROLLOVER	36 SW#: 36 RIGHT KICKER	44 SW#: 44 "G-A-R" DROP TARGETS SERIES	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LOWER LEFT STANDUP	21 SW#: 21 "G-O-R" DROP TARGETS SERIES	29 SW#: 29 PLAYFIELD TILT	37 SW#: 37 LEFT JET BUMPER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 "1" TARGET	22 SW#: 22 "G-O-R" DROP TARGETS STANDUP	30 SW#: 30 SPINNER	38 SW#: 38 TOP JET BU MPER	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 EJECT HOLE	23 SW#: 23 MAGNET SWITCH	31 SW#: 31 "2" TARGET	39 SW#: 39 BOTTOM JET BUMPER	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 MIDDLE LEFT STANDUP	24 SW#: 24 MIDDLE LOWER STANDUP	32 SW#: 32 "3" TARGET	40 SW#: 40 "G-A-R" DROP TARGETS STANDUP	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Grand Lizard by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 RIGHT RETURN LANE	25 SW#: 25 3-BANK	33 SW#: 33 MULTI-BALL 2	41 SW#: 41 RIGHT ARROW SPECIAL	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT OUTLANE	26 SW#: 26 3-BANK	34 SW#: 34 MULTI-BALL 3	42 SW#: 42 RAMP TONGUE	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 SHOOTER LANE	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 3-BANK	35 SW#: 35 L	43 SW#: 43 LEFT KICKER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #3 (UPPER LEFT)	20 SW#: 20 4-BANK	28 SW#: 28 SPINNER	36 SW#: 36 I	44 SW#: 44 RIGHT KICKER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #2 (CENTER)	21 SW#: 21 4-BANK	29 SW#: 29 RIGHT RAMP	37 SW#: 37 Z	45 SW#: 45 LEFT MAGNET	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 BALL TROUGH #1 (LOWER RIGHT)	22 SW#: 22 4-BANK	30 SW#: 30 RIGHT CHUTE TO TOP	38 SW#: 38 A	46 SW#: 46 RIGHT MAGNET	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 TURNAROUND	23 SW#: 23 4-BANK	31 SW#: 31 LEFT RAMP	39 SW#: 39 R	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 LEFT RETURN LANE	24 SW#: 24 TOP RIGHT STANDUP	32 SW#: 32 MULTI-BALL 1	40 SW#: 40 D	48 SW#: 48 RIGHT (E O FLIPPER S)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Grand Prix by Stern

1 SW#: 1 LT BUTTON (UK ONLY)	9 UNUSED	17 SW#: 17 TOP DROP TARGET	25 SW#: 25 RIGHT ORBIT	33 SW#: 33 LEFT SPINNER	41 UNUSED	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 MIDDLE DROP TARGET	26 SW#: 26 LEFT ORBIT	34 SW#: 34 LOWER RIGHT ACCELERATOR (OPTO)	42 SW#: 42 RIGHT SPINNER	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 BOTTOM DROP TARGET	27 SW#: 27 PIT LOCK MIDDLE	35 SW#: 35 LOWER MID. ACCELERATOR (OPTO)	43 SW#: 43 RIGHT STANDUP	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 WINDMILL MOTOR OPTO	28 SW#: 28 PIT LOCK TOP	36 SW#: 36 TEST CAR X2 STANDUP	44 SW#: 44 CENTER STANDUP	52 SW#: 52 GARAGE VUK	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 LEFT RAMP MAKE OPTO	29 SW#: 29 MIDWAY EJECT	37 SW#: 37 LOWER LEFT ACCELERATOR (OPTO)	45 SW#: 45 LEFT STANDUP	53 SW#: 53 SLAM TILT (OPT)	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 UNUSED	30 SW#: 30 TRACK EXIT POPPER	38 SW#: 38 CAPTIVE BALL STANDUP	46 UNUSED	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 TRUCK RAMP KICKER	31 UNUSED	39 SW#: 39 CAR MECH DOWN	47 SW#: 47 UPPER TOP ACCELERATOR (OPTO)	55 SW#: 55 TOURNAMENT START	63 UNUSED
8 SW#: 8 RT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT RAMP (TO) DIVERTER	32 SW#: 32 PIT LOCK BOTTOM (OPTO)	40 SW#: 40 TEST CAR	48 SW#: 48 UPPER BOT. ACCELERATOR (OPTO)	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Grand Slam by Bally

1 SW#: 1 "H" FLYAWAY	9 SW#: 2 "O" FLYAWAY	17 SW#: 3 "M" FLYAWAY	25 SW#: 4 "E" FLYAWAY	33 SW#: 5 "R" FLYAWAY	41 SW#: 6 CREDIT	49 SW#: 7 RIGHT BUTTON FLIPPER	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 DOUBLE UPPER LEFT LANE	34 SW#: 13 RIGHT BUMPER THUMPER	42 SW#: 14 LEFT THUMPER BUMPER	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 "S" RETURN LANE	11 SW#: 18 "T" STEAL TARGET	19 SW#: 19 "E" STEAL TARGET	27 SW#: 20 "A" TARGET	35 SW#: 21 "L" RETURN LANE	43 SW#: 22 TOP RIGHT GRAND LANE	51 SW#: 23 TOP RIGHT SLAM LANE	59 SW#: 24 TOP RIGHT HOMER LANE
4 SW#: 25 "T" TRIPLE TARGET	12 SW#: 26 "R" TARGET	20 SW#: 27 "I" TARGET	28 SW#: 28 "P" TARGET	36 SW#: 29 "L" TRIPLE TARGET	44 SW#: 30 "E" TRIPLE TARGET	52 SW#: 31 LEFT AND RIGHT OUTLANE	60 SW#: 32 SAUCER
5 UNUSED	13 SW#: 34 REBOUNDS (3)	21 SW#: 35 RIGHT SPINNER	29 SW#: 36 LEFT SIDE GATE	37 SW#: 37 HOME BASE ROLLOVER BUTTON	45 SW#: 38 #1 BASE ROLLOVER BUTTON	53 SW#: 39 #2 BASE ROLLOVER BUTTON	61 SW#: 40 #3 BASE ROLLOVER BUTTON
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Granny And The Gators by Bally

1 SW#: 1 #1 CANOE ROLLOVER BUTTON	9 SW#: 2 #2 CANOE ROLLOVER BUTTON	17 SW#: 3 #3 CANOE ROLLOVER BUTTON	25 SW#: 4 #4 CANOE ROLLOVER BUTTON	33 SW#: 5 #5 CANOE ROLLOVER BUTTON	41 SW#: 6 #6 CANOE ROLLOVER BUTTON	49 SW#: 7 #7 CANOE ROLLOVER BUTTON	57 SW#: 8 #8 CANOE ROLLOVER BUTTON
2 SW#: 9 COIN II (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 UNUSED	26 UNUSED	34 UNUSED	42 UNUSED	50 SW#: 15 TILT (2)	58 SW#: 16 SLAM
3 UNUSED	11 SW#: 18 OUTHOLE SAUCER	19 SW#: 19 TOP RIGHT GATE	27 UNUSED	35 SW#: 21 LEFT BUTTONS ROLLOVER (2)	43 SW#: 22 RIGHT RETURN LANE	51 SW#: 23 LEFT RETURN LANE	59 SW#: 24 "R" DROP TARGET
4 SW#: 25 TOP SAUCER	12 SW#: 26 RIGHT LANE KICKBACK	20 UNUSED	28 UNUSED	36 SW#: 29 "O" AMMO TARGET	44 SW#: 30 2ND "M" TARGET	52 SW#: 31 1ST "M" TARGET	60 SW#: 32 "A" TARGET
5 SW#: 33 "T" BACK TARGET	13 SW#: 34 "I" BACK TARGET	21 SW#: 35 "X" BACK TARGET	29 SW#: 36 "E" BACK TARGET	37 SW#: 37 "P" DROP TARGET	45 SW#: 38 "O" DROP TARGET	53 SW#: 39 "W" DROP TARGET	61 SW#: 40 "E" DROP TARGET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Guns N Roses by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 #1 (LEFT) BALL TROUGH	17 SW#: 17 CAPTIVE "D" STAND-UP OF DUFF	25 SW#: 25 LEFT TURBO BUMPER	33 SW#: 33 LEFT DROP TARGET BOTTOM	41 UNUSED	49 SW#: 49 "R" RAMP ENTER	57 SW#: 57 RIGHT DROP TARGET TOP
2 SW#: 2 4TH COIN	10 SW#: 10 #2 BALL TROUGH	18 SW#: 18 CAPTIVE "U" STAND-UP OF DUFF	26 SW#: 26 BOTTOM TURBO BUMPER	34 SW#: 34 LEFT DROP TARGET MIDDLE	42 UNUSED	50 SW#: 50 "R" RAMP EXIT	58 SW#: 58 RIGHT ORBIT TOP
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 #3 BALL TROUGH	19 SW#: 19 CAPTIVE "F" STAND-UP OF DUFF	27 SW#: 27 RIGHT TURBO BUMPER	35 SW#: 35 RIGHT DROP TARGET MIDDLE	43 UNUSED	51 SW#: 51 "G" RAMP ENTER	59 SW#: 59 LEFT DROP TARGET TOP
4 SW#: 4 RIGHT COIN	12 SW#: 12 #4 BALL TROUGH	20 SW#: 20 CAPTIVE "F" STAND-UP OF DUFF	28 SW#: 28 RIGHT SLINGSHOT	36 SW#: 36 RIGHT DROP TARGET BOTTOM	44 UNUSED	52 SW#: 52 "G" RAMP EXIT	60 SW#: 60 LEFT ORBIT TOP
5 SW#: 5 CENTER COIN	13 SW#: 13 #5 BALL TROUGH	21 SW#: 21 "J" OF JAM TOP LANE LEFT	29 SW#: 29 LEFT SLINGSHOT	37 SW#: 37 EJECT	45 UNUSED	53 SW#: 53 LEFT RETURN LANE	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 #6 BALL TROUGH	22 SW#: 22 "A" OF JAM TOP LANE MIDDLE	30 SW#: 30 TOP SLINGSHOT	38 SW#: 38 CENTER SCOOP	46 UNUSED	54 SW#: 54 LEFT OUTLANE	62 SW#: 62 GUN TRIGGER
7 SW#: 7 SLAM TILT	15 SW#: 15 #7 (RIGHT) BALL TROUGH	23 SW#: 23 "M" OF JAM TOP LANE RIGHT	31 UNUSED	39 SW#: 39 VUK	47 UNUSED	55 SW#: 55 RIGHT OUTLANE	63 SW#: 63 LEFT FLIPPER UPR. / LWR.
8 SW#: 8 EXTRA BALL BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 LEFT SHOOTER LANE	32 UNUSED	40 SW#: 40 FUNNEL SNAKE PIT	48 SW#: 48 INNER ORBIT BOTTOM	56 SW#: 56 RIGHT RETURN LANE	64 SW#: 64 RIGHT LOWER FLIPPER

SW# number is the switch number as known to the game.

Hardbody by Bally

1 SW#: 1 LEFT SLINGSHOT	9 SW#: 2 RIGHT SLINGSHOT	17 SW#: 3 LEFT RAMP R.O.	25 SW#: 4 RIGHT RAMP R.O.	33 SW#: 5 LEFT CABINET (FLIPPER)	41 SW#: 6 NEW GAME (CABINET)	49 SW#: 7 RIGHT CABINET (FLIPPER)	57 SW#: 8 OUTHOLE
2 SW#: 9 RIGHT COIN (DOOR)	10 SW#: 10 LEFT COIN (DOOR)	18 SW#: 11 MIDDLE COIN (DOOR)	26 SW#: 12 LEFT RETURN LANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT (CABINET)	58 SW#: 16 REBOUND
3 SW#: 17 IN-LINE DROP TARGET RIGHT	11 SW#: 18 IN-LINE DROP TARGET MIDDLE	19 SW#: 19 IN-LINE DROP TARGET LEFT	27 SW#: 20 SWITCH DROP BEHIND IN-LINE TARGET	35 SW#: 21 BLUE TARGET QUADS	43 SW#: 22 BLUE TARGET HAMS	51 SW#: 23 BLUE TARGET GLUTES	59 SW#: 24 BLUE TARGET CALVES
4 SW#: 25 ORANGE TARGET BICEPS	12 SW#: 26 ORANGE TARGET TRICEPS	20 SW#: 27 ORANGE TARGET DELTOIDS	28 UNUSED	36 SW#: 29 TOP 50K LANE	44 SW#: 30 TOP SPECIAL LANE	52 SW#: 31 HOOP TOP LEFT	60 SW#: 32 HOOP TOP RIGHT
5 SW#: 33 ORANGE DROP TARGET BICEPS	13 SW#: 34 ORANGE DROP TARGET TRICEPS	21 SW#: 35 ORANGE DROP TARGET DELTOIDS	29 SW#: 36 DOUBLE POWER	37 SW#: 37 NORMAL POWER	45 UNUSED	53 SW#: 39 RAMP SENSE LEFT	61 SW#: 40 RAMP SENSE RIGHT
6 SW#: 41 YELLOW TRANS TARGET ABS	14 SW#: 42 YELLOW RECT TARGET ABS	22 SW#: 43 YELLOW ABS TARGET OBLIQUE	30 SW#: 44 HOOP MIDDLE LEFT	38 SW#: 45 HOOP MIDDLE RIGHT	46 SW#: 46 GREEN TARGET PECS	54 SW#: 47 GREEN TARGET LATS	62 SW#: 48 GREEN TARGET TRAPS
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Harlem Globetrotters by Bally

1 SW#: 1 DROP TARGET (D) TOP	9 SW#: 2 DROP TARGET (C)	17 SW#: 3 DROP TARGET (B)	25 SW#: 4 DROP TARGET (A) BOTTOM	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 LEFT SIDE SPINNER	11 UNUSED	19 UNUSED	27 UNUSED	35 UNUSED	43 SW#: 22 FLIP/FEED LANE (RT)	51 SW#: 23 RIGHT OUTLANE	59 SW#: 24 GLOBE SAUCER
4 SW#: 25 CENTER RIGHT SPINNER	12 SW#: 26 TARGET "1" (BOTTOM)	20 SW#: 27 TARGET "2"	28 SW#: 28 TARGET "3"	36 SW#: 29 TARGET "4"	44 SW#: 30 TARGET "5" (TOP)	52 SW#: 31 LEFT OUTLANE	60 SW#: 32 TARGET SAUCER
5 SW#: 33 CENTER LEFT SPINNER	13 SW#: 34 300 PT. (2) REBOUND	21 SW#: 35 DUNK SHOT TARGET	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Harley Davidson by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 UNUSED	17 SW#: 17 LT 4-BANK D/T (L)IVE	25 SW#: 25 RIGHT RAMP ENTER	33 SW#: 33 LEFT ORBIT	41 SW#: 41 M-CYCLE #4 TROUGH (TOP)	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 LT 4-BANK D/T L(I)VE	26 SW#: 26 RIGHT RAMP EXIT	34 SW#: 34 RIGHT ORBIT	42 SW#: 42 M-CYCLE #3 TROUGH	50 SW#: 50 RIGHT TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 LT 4-BANK D/T LI(V)E	27 SW#: 27 RIGHT RAMP MID	35 SW#: 35 MOTOR UP	43 SW#: 43 M-CYCLE #2 TROUGH	51 SW#: 51 BOTTOM TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 LT 4-BANK D/T LIV(E)	28 SW#: 28 SPINNER	36 SW#: 36 MOTOR DOWN	44 SW#: 44 M-CYCLE #1 TROUGH (BOT)	52 SW#: 52 TOP TURBO BUMPER	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 RT 4-BANK D/T (R)IDE	29 SW#: 29 S-U TRGT LT (M-CYCLE)	37 SW#: 37 OPTO	45 SW#: 45 SUPER VUK	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 RT 4-BANK D/T R(I)DE	30 SW#: 30 S-U TRGT RT (M-CYCLE)	38 UNUSED	46 SW#: 46 BALL EJECT (SCOOP)	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 RT 4-BANK D/T RI(D)E	31 SW#: 31 S-U TRGT LT (RT RAMP)	39 UNUSED	47 UNUSED	55 SW#: 55 SLAM TILT	63 UNUSED
8 SW#: 8 RIGHT BUTTON (SKILL)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RT 4-BANK D/T RID(E)	32 SW#: 32 S-U TRGT RT (RT RAMP)	40 UNUSED	48 SW#: 48 BEHIND TOP VUK	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Harley Davidson by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 B IN BIKE	25 SW#: 41 U TOP LANE	33 SW#: 51 H IN HARLEY	41 SW#: 61 V IN DAVIDSON	49 SW#: 71 LEFT LOOP	57 UNUSED
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 FRONT DOOR	18 SW#: 32 I IN BIKE	26 SW#: 42 S TOP LANE	34 SW#: 52 A IN HARLEY	42 SW#: 62 I IN DAVIDSON	50 SW#: 72 RIGHT LOOP	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TOKEN DISPENSER	19 SW#: 33 K IN BIKE	27 SW#: 43 A TOP LANE	35 SW#: 53 R IN HARLEY	43 SW#: 63 2ND D IN DAVIDSON	51 SW#: 73 LEFT DRAIN	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 UNUSED	20 SW#: 34 E IN BIKE	28 UNUSED	36 SW#: 54 L IN HARLEY	44 SW#: 64 S IN DAVIDSON	52 SW#: 74 RIGHT DRAIN	60 UNUSED
5 SW#: 15 OUTHOLE	13 SW#: 25 LEFT JET BUMPER	21 SW#: 35 TOP RIGHT EJECT	29 UNUSED	37 SW#: 55 E IN HARLEY	45 SW#: 65 O IN DAVIDSON	53 SW#: 75 SHOOTER LANE	61 UNUSED
6 SW#: 16 TROUGH 1	14 SW#: 26 RIGHT JET BUMPER	22 SW#: 36 TOP LEFT EJECT	30 UNUSED	38 SW#: 56 Y IN HARLEY	46 SW#: 66 N IN DAVIDSON	54 UNUSED	62 UNUSED
7 SW#: 17 TROUGH 2	15 SW#: 27 LOWER JET BUMPER	23 SW#: 37 LEFT SLING	31 UNUSED	39 SW#: 57 1ST D IN DAVIDSON	47 SW#: 67 RIGHT SPINNER	55 UNUSED	63 UNUSED
8 SW#: 18 TROUGH 3	16 SW#: 28 LOWER RIGHT EJECT	24 SW#: 38 RIGHT SLING	32 UNUSED	40 SW#: 58 A IN DAVIDSON	48 SW#: 68 LEFT SPINNER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Haunted House by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 SW#: 30 #4 DROP TARGET	33 SW#: 40 #5 DROP TARGET	41 SW#: 50 RIGHT TARGET	49 SW#: 60 LEFT TARGET	57 UNUSED
2 SW#: 1 POP BUMPER	10 SW#: 11 KICKING TARGET	18 SW#: 21 OUTSIDE ROLLOVER	26 SW#: 31 UP KICKER	34 SW#: 41 HOLE	42 SW#: 51 10 POINT AND KICKING RUBBERS	50 UNUSED	58 UNUSED
3 SW#: 2 #1 DROP TARGET	11 SW#: 12 #2 DROP TARGET	19 SW#: 22 #3 DROP TARGET	27 SW#: 32 #4 DROP TARGET	35 SW#: 42 10 POINT	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 3 #1 TARGET	12 SW#: 13 #2 TARGET	20 SW#: 23 #3 TARGET	28 SW#: 33 #4 TARGET	36 SW#: 43 POP BUMPERS	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 4 LEFT RETURN ROLLOVER	13 SW#: 14 #1 KICKING TARGET	21 SW#: 24 #2 KICKING TARGET	29 SW#: 34 LEFT OUTSIDE ROLLOVER	37 SW#: 44 POP BUMPERS (2)	45 SW#: 54 RIGHT OUTSIDE ROLLOVER	53 SW#: 64 ROUNDAABOUT	61 UNUSED
6 SW#: 5 #3 TARGET	14 SW#: 15 #4 TARGET	22 SW#: 25 #5 TOP KICKING TARGET	30 SW#: 35 ROLLUNDER	38 SW#: 45 UP KICKER	46 SW#: 55 RIGHT BOTTOM TARGET	54 SW#: 65 RIGHT SIDE KICKER	62 UNUSED
7 SW#: 6 #1 TROUGH	15 SW#: 16 #2 TROUGH	23 SW#: 26 ROLL DOWN TARGET TROUGH	31 SW#: 36 TRAP DOOR TROUGH	39 SW#: 46 TOP CENTER HOLE	47 UNUSED	55 SW#: 66 10 POINT AND KICKING RUBBER	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Heavy Metal Meltdown by Bally

1 SW#: 1 LEFT SAUCER	9 SW#: 2 RIGHT SAUCER	17 SW#: 3 LOAD CHAMBER	25 SW#: 4 EJECT CHAMBER	33 SW#: 5 CABINET LEFT	41 SW#: 6 CREDIT	49 SW#: 7 CABINET RIGHT	57 SW#: 8 OUTHOLE
2 SW#: 9 COINS RIGHT	10 SW#: 10 COINS LEFT	18 SW#: 11 COINS MIDDLE	26 SW#: 12 LEFT RETURN LANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 UNUSED
3 SW#: 17 LEFT BUMPER	11 SW#: 18 MIDDLE BUMPER	19 SW#: 19 RIGHT BUMPER	27 SW#: 20 LEFT SLINGSHOT	35 SW#: 21 RIGHT SLINGSHOT	43 SW#: 22 TOP LANE "J"	51 SW#: 23 TOP LANE "A"	59 SW#: 24 TOP LANE "M"
4 SW#: 25 LEFT OUTLANE	12 SW#: 26 RIGHT OUTLANE	20 SW#: 27 TOP 25K LANE	28 SW#: 28 TOP 50K LANE	36 SW#: 29 LEFT ROLLOVER	44 SW#: 30 RIGHT ROLLOVER	52 SW#: 31 LEFT 25K TARGET	60 SW#: 32 RIGHT 25K TARGET
5 SW#: 33 CENTER TARGET	13 SW#: 34 "METAL" TARGET	21 SW#: 35 "HEAVY" TARGET	29 SW#: 36 LEFT OUTHOLE - 1	37 SW#: 37 OUTHOLE - 2	45 SW#: 38 OUTHOLE - 3	53 SW#: 39 OUTHOLE - 4	61 SW#: 40 RIGHT - 5 OUTHOLE
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

High Roller Casino by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 SW#: 9 LEFT CHIP (S.U. TRGT)	17 SW#: 17 2/HEARTS DROP [TARGET]	25 SW#: 25 3-BALL LOCK LOW [WIRE RAMP]	33 SW#: 33 TOP SLOT - OPTO TOP ENTRY	41 SW#: 41 ROULETTE 1 WHEEL OPTO	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 ROLL DICE (S.U. TRGT)	18 SW#: 18 2/DIAMONDS DROP [TARGET]	26 SW#: 26 3-BALL LOCK MIDDLE [WIRE RAMP]	34 SW#: 34 MIDDLE SLOT OPTO - BASH	42 SW#: 42 ROULETTE 2 WHEEL OPTO	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 4/DIAMONDS DROP [TARGET]	27 SW#: 27 3-BALL LOCK HIGH [WIRE RAMP]	35 SW#: 35 BOT. SLOT - OPTO R. ENTRY	43 SW#: 43 ROULETTE 3 WHEEL OPTO	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT [BOTTOM]
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 A/SPADES DROP [TARGET]	28 SW#: 28 LEFT 21 HIT STANDUP [TARGET]	36 SW#: 36 MIDDLE RAMP LEFT ENTRY	44 SW#: 44 ROULETTE 4 WHEEL OPTO	52 SW#: 52 2ND UP/DOWN RAMP [SLOT MACH.]	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 A/DIAMONDS DROP [TARGET]	29 SW#: 29 RIGHT 21 HIT STANDUP [TARGET]	37 SW#: 37 MIDDLE RAMP RIGHT ENTRY	45 SW#: 45 LEFT ORBIT	53 SW#: 53 ROULETTE SPIN	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 JOKER STANDUP [TARGET]	30 SW#: 30 UPPER RIGHT STANDUP [TARGET]	38 SW#: 38 1ST UP/DOWN RAMP [SLOT MACH.]	46 SW#: 46 RIGHT ORBIT	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT [BOTTOM]
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 3/DIAMONDS STANDUP [TARGET]	31 SW#: 31 RIGHT CHIP [TARGET]	39 SW#: 39 LEFT ORBIT GATE	47 SW#: 47 TOP LEFT SLINGSHOT	55 SW#: 55 SLAM TILT	63 UNUSED
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 SPINNER	32 SW#: 32 POP ENTRY OPTO [BALL LOCK]	40 SW#: 40 LEFT RAMP EXIT	48 SW#: 48 TOP RIGHT SLINGSHOT	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

High Speed by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE STOPLIGHT	17 SW#: 17 UPPER LEFT - STOPLIGHT BANK RED TARGET	25 SW#: 25 STANDUP #1 TARGET ARROW	33 SW#: 33 UPPER LEFT JET BUMPER	41 SW#: 41 PLAYFIELD TILT	49 SW#: 49 LEFT KICKER	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 BALL TROUGH #3 (UPPER LEFT - STOPLIGHT)	18 SW#: 18 UPPER LEFT - STOPLIGHT BANK YEL TARGET	26 SW#: 26 STANDUP #2 TARGET ARROW	34 SW#: 34 LOWER LEFT JET BUMPER	42 SW#: 42 LEFT RAMP	50 SW#: 50 RIGHT KICKER	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #2 (CENTER - STOPLIGHT)	19 SW#: 19 UPPER LEFT - STOPLIGHT BANK GRN TARGET	27 SW#: 27 STANDUP #3 TARGET ARROW	35 SW#: 35 RIGHT JET BUMPER	43 SW#: 43 RIGHT RAMP	51 SW#: 51 LEFT STAR ROLLOVER	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #1 (LOWER RIGHT)	20 SW#: 20 LEFT FLIPPER RETURN LANE	28 SW#: 28 STANDUP #4 TARGET ARROW	36 SW#: 36 BALL SHOOTER	44 SW#: 44 LEFT SPINNER	52 SW#: 52 RIGHT STAR ROLLOVER	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 LOWER LEFT - STOPLIGHT RED TARGET	21 SW#: 21 RIGHT RETURN FLIPPER LANE	29 SW#: 29 STANDUP #5 TARGET ARROW	37 SW#: 37 LEFT FLIPPER ENGINE REVING (E O S)	45 SW#: 45 CENTER SPINNER	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 LOWER LEFT - STOPLIGHT BANK YEL TARGET	22 SW#: 22 RIGHT BANK - STOPLIGHT RED TARGET	30 SW#: 30 STANDUP #6 TARGET ARROW	38 SW#: 38 RIGHT ENGINE PPER REVING (E O S)	46 SW#: 46 RIGHT SPINNER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT STOPLIGHT	15 SW#: 15 LOWER LEFT - STOPLIGHT BANK GRN TARGET	23 SW#: 23 RIGHT BANK - STOPLIGHT YEL TARGET	31 SW#: 31 LEFT OUTLANE	39 SW#: 39 UPPER LEFT HIDEOUT	47 SW#: 47 UPPER RIGHT HIDEOUT	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 EJECT HOLE	24 SW#: 24 RIGHT BANK - STOPLIGHT GRN TARGET	32 SW#: 32 RIGHT OUTLANE	40 SW#: 40 LOWER LEFT HIDEOUT	48 SW#: 48 LOWER RIGHT HIDEOUT	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Hollywood Heat by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 POP BUMPER	33 SW#: 40 #1 LEFT DROP TARGET	41 SW#: 50 #2 LEFT DROP TARGET	49 SW#: 60 #3 LEFT DROP TARGET	57 SW#: 70 RAMP EXIT ROLLOVER
2 UNUSED	10 UNUSED	18 UNUSED	26 SW#: 31 SHOOTER ROLLOVER	34 SW#: 41 #1 RIGHT DROP TARGET	42 SW#: 51 #2 RIGHT DROP TARGET	50 SW#: 61 #3 RIGHT DROP TARGET	58 SW#: 71 RIGHT FLIPPER
3 UNUSED	11 UNUSED	19 UNUSED	27 SW#: 32 RUBBER (5) SWITCHES	35 SW#: 42 #1 TOP ROLLOVER	43 SW#: 52 #2 TOP ROLLOVER	51 SW#: 62 #3 TOP ROLLOVER	59 SW#: 72 TOP ROLLUNDER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 #1 SPOT TARGET	44 SW#: 53 #2 SPOT TARGET	52 SW#: 63 #3 SPOT TARGET	60 SW#: 73 LEFT SIDE #4 ROLLOVER AND SPOT TARGET
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 #5 SPOT TARGET	45 SW#: 54 #6 SPOT TARGET	53 SW#: 64 #7 SPOT TARGET	61 SW#: 74 BOTTOM ROLLUNDER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT OUTSIDE ROLLOVER	46 SW#: 55 LEFT CENTER ROLLOVER	54 SW#: 65 RIGHT CENTER ROLLOVER	62 SW#: 75 RIGHT OUTSIDE ROLLOVER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 LEFT HOLE	47 SW#: 56 RIGHT HOLE	55 SW#: 66 OUTHOLE	63 SW#: 76 TROUGH
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Hook by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT TOP LANE	25 SW#: 25 LEFT DROP 1 TAR. TOP	33 SW#: 33 RIGHT 3 BANK TOP	41 SW#: 41 LEFT 3 BANK TOP	49 SW#: 49 RIGHT 10 POINT	57 UNUSED
2 SW#: 2 4TH COIN	10 SW#: 10 OUTHOLE	18 SW#: 18 CENTER TOP LANE	26 SW#: 26 LEFT DROP 2 TAR.	34 SW#: 34 RIGHT 3 BANK MID.	42 SW#: 42 LEFT 3 BANK MID.	50 SW#: 50 UPPER RIGHT R.O.	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 RIGHT TOP LANE	27 SW#: 27 LEFT DROP 3 TAR.	35 SW#: 35 RIGHT 3 BANK BOT.	43 SW#: 43 LEFT 3 BANK BOT.	51 SW#: 51 UPPER LEFT VUK	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 RIGHT SINGLE TARGET	28 SW#: 28 LEFT DROP 4 TAR. BOT.	36 SW#: 36 LEFT RAMP ENTR.	44 SW#: 44 UPPER 3 BANK TOP	52 SW#: 52 LEFT SLINGSHOT	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT RETURN	29 SW#: 29 SKILL SHOT 3	37 SW#: 37 LEFT RAMP #2	45 SW#: 45 UPPER 3 BANK MID.	53 SW#: 53 RIGHT SLINGSHOT	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT RETURN	30 SW#: 30 SKILL SHOT 2	38 UNUSED	46 SW#: 46 UPPER 3 BANK BOT.	54 SW#: 54 LEFT TURBO BUMPER	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 LEFT OUTLANE	31 SW#: 31 SKILL SHOT 1 UPPER	39 SW#: 39 RIGHT RAMP ENTR.	47 SW#: 47 UNDER PFLD. TROUGH	55 SW#: 55 CENTER TURBO BUMPER	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 RIGHT OUTLANE	32 SW#: 32 SKILL SHOT 1 LOWER	40 SW#: 40 RIGHT RAMP #2	48 SW#: 48 POWER SCOOP	56 SW#: 56 RIGHT TURBO BUMPER	64 UNUSED

SW# number is the switch number as known to the game.

Hoops by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT ADVANCE BUTTON	41 SW#: 5 RIGHT BUTTON ADVANCE	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 TOP POP BUMPER	10 SW#: 11 BOTTOM POP BUMPER	18 SW#: 12 LEFT KICKING RUBBER (2)	26 SW#: 13 RIGHT RUBBER KICKING	34 SW#: 14 LOWER LEFT HOLE	42 SW#: 15 TOP CENTER HOLE	50 SW#: 16 TOP RIGHT HOLE	58 SW#: 17 LEFT "TIP IN" SPOT TARGET
3 SW#: 20 LEFT TOP ROLLOVER	11 SW#: 21 SHOOTER LANE ROLLOVER	19 SW#: 22 LEFT OUTSIDE ROLLOVER	27 SW#: 23 RIGHT OUTSIDE ROLLOVER	35 SW#: 24 SPINNER	43 SW#: 25 CAPTIVE LEFT SPOT TARGET	51 SW#: 26 LEFT SPOT "FREEZE" TARGET	59 SW#: 27 RIGHT "TIP IN" SPOT TARGET
4 SW#: 30 RIGHT TOP ROLLOVER	12 SW#: 31 "L" SPOT TARGET	20 SW#: 32 LEFT RETURN ROLLOVER	28 SW#: 33 RIGHT RETURN ROLLOVER	36 SW#: 34 LEFT SIDE ROLLOVER	44 SW#: 35 CAPTIVE SPOT CENTER TARGET	52 SW#: 36 RIGHT SPOT "FREEZE" TARGET	60 SW#: 37 3RD POSITION TROUGH
5 UNUSED	13 SW#: 41 "A" SPOT TARGET	21 SW#: 42 "S" SPOT TARGET	29 SW#: 43 "M" SPOT TARGET	37 UNUSED	45 SW#: 45 CAPTIVE SPOT RIGHT TARGET	53 SW#: 46 TOP CENTER SPOT TARGET	61 SW#: 47 OUTHOLE
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Hot Hand by Stern

1 SW#: 1 CHUTE #3	9 SW#: 2 CHUTE #2	17 SW#: 3 CHUTE #1	25 UNUSED	33 SW#: 5 ROLL-OVER BUTTON	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT SWITCHES	57 SW#: 8 SLAM SWITCHES
2 SW#: 9 (2) RIGHT & RETURN LANE TOP L. TARG.	10 SW#: 10 LEFT RETURN LANE	18 SW#: 11 SPIN TARGET	26 SW#: 12 RIGHT THUMPER	34 SW#: 13 CENTER THUMPER	42 SW#: 14 LEFT SLING-SHOT	50 SW#: 15 RIGHT SLING-SHOT	58 SW#: 16 LEFT THUMPER
3 SW#: 17 RIGHT OUT-LANE	11 SW#: 18 LEFT OUT-LANE	19 SW#: 19 (2) REBOUND SWITCHES	27 SW#: 20 STAND-UP "K" TARGET	35 SW#: 21 STAND-UP "J" TARGET	43 UNUSED	51 SW#: 23 STAND-UP TARGET "10"	59 SW#: 24 STAND-UP "Q" TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 28 5-BANK DROP TARGET "K"	36 SW#: 29 5-BANK DROP TARGET "J"	44 SW#: 30 5-BANK DROP TARGET "A"	52 SW#: 31 5-BANK DROP TARGET "10"	60 SW#: 32 5-BANK DROP TARGET "Q"
5 SW#: 33 OUT-HOLE	13 SW#: 34 EJECT-POCKET	21 UNUSED	29 SW#: 36 (2) BALL "K" POCKETS	37 SW#: 37 (2) BALL "J" POCKETS	45 UNUSED	53 SW#: 39 (4) BALL POCKETS "10"	61 SW#: 40 (2) BALL "Q" POCKETS
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Hot Shot by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 BASKET	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 BASKET MOTOR TOP	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO	19 SW#: 33 BASKET MOTOR BOTTOM	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 24 ALWAYS CLOSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 15 SERVE BALL LEFT	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 16 SERVE BALL RIGHT	14 SW#: 26 BALL IN SHOOTER	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 17 SELECT GAME	15 SW#: 27 DISPENSER LOW	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 28 DISPENSER UNJAM	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Hot Shots by Gottlieb

1 SW#: #1 BLUE DROP TARGET	9 SW#: 10 #2 BLUE DROP TARGET	17 SW#: 20 #3 BLUE DROP TARGET	25 SW#: 30 #4 BLUE DROP TARGET	33 SW#: 40 #1 RED DROP TARGET	41 SW#: 50 #2 RED DROP TARGET	49 SW#: 60 #3 RED DROP TARGET	57 SW#: 70 #4 RED DROP TARGET
2 SW#: 1 #1 YELLOW DROP TARGET	10 SW#: 11 #2 YELLOW DROP TARGET	18 SW#: 21 #3 YELLOW DROP TARGET	26 SW#: 31 #4 YELLOW DROP TARGET	34 SW#: 41 #1 GREEN DROP TARGET	42 SW#: 51 #2 GREEN DROP TARGET	50 SW#: 61 #3 GREEN DROP TARGET	58 SW#: 71 #4 GREEN DROP TARGET
3 SW#: 2 TOP ROLLOVER DROP TARGET	11 SW#: 12 #1 LEFT SPOT BOTTOM TARGET	19 SW#: 22 #2 LEFT SPOT BOTTOM TARGET	27 SW#: 32 #3 LEFT SPOT BOTTOM TARGET	35 SW#: 42 LEFT OUTSIDE ROLLOVER	43 SW#: 52 LEFT RETURN ROLLOVER	51 SW#: 62 LEFT SIDE ROLLOVER	59 SW#: 72 LEFT FLIPPER
4 SW#: 3 BOTTOM DROP ROLLOVER TARGET	12 SW#: 13 #1 RIGHT BOTTOM SPOT TARGET	20 SW#: 23 #2 RIGHT BOTTOM SPOT TARGET	28 SW#: 33 #3 RIGHT BOTTOM SPOT TARGET	36 SW#: 43 RIGHT OUTSIDE ROLLOVER	44 SW#: 53 RIGHT RETURN ROLLOVER	52 SW#: 63 RIGHT SIDE ROLLOVER	60 SW#: 73 RIGHT FLIPPER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 5 RIGHT RAMP ENTRANCE ROLLUNDER	14 SW#: 15 RIGHT RAMP EXIT ROLLOVER	22 SW#: 25 LEFT RAMP ROLLUNDER	30 SW#: 35 CENTER SPOT TARGET	38 SW#: 45 #1 LEFT TOP SPOT TARGET	46 SW#: 55 #2 RIGHT TOP SPOT TARGET	54 SW#: 65 POP BUMPER	62 SW#: 75 KICKING (2) RUBBERS
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 SHOOTER LANE ROLLOVER	47 SW#: 56 UPKICKER	55 SW#: 66 OUTHOLE	63 SW#: 76 TROUGH
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Hot Tip by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 RIGHT "TIP" TARGET	25 SW#: 25 RIGHT "HOT" TARGET	33 SW#: 33 BOTTOM LEFT OUTSIDE ROLLOVER	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 PLAYFIELD TILT	18 SW#: 18 CENTER "TIP" TARGET	26 SW#: 26 CENTER "HOT" TARGET	34 SW#: 34 BOTTOM LEFT INSIDE ROLLOVER	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BOTTOM RIGHT OUTSIDE ROLLOVER	19 SW#: 19 LEFT "TIP" TARGET	27 SW#: 27 LEFT "HOT" TARGET	35 SW#: 35 LEFT KICKER SCORE	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 BOTTOM RIGHT INSIDE ROLLOVER	20 SW#: 20 ADVANCE BONUS TARGET	28 SW#: 28 MIDDLE LEFT STAND-UP	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 RIGHT KICKER SCORE	21 SW#: 21 TOP RIGHT STAND-UP	29 SW#: 29 LEFT EJECT	37 SW#: 37 "HOT-TIP" TARGET SERIES	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 LOWER RIGHT STAND-UP	22 SW#: 22 TOP EJECT	30 SW#: 30 SPINNING TARGET	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 CAPTIVE BALL ROLLOVER	23 SW#: 23 TOP LEFT STAND-UP	31 SW#: 31 JET BUMPER SCORE	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 CAPTIVE BALL TARGET	24 SW#: 24 TOP LEFT ROLLOVER	32 SW#: 32 LOWER LEFT STAND-UP	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Hot Wheels by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 MOVING TARGET	33 SW#: 32 CENTRE POP BUMPER	41 SW#: 40 STANDUP 5 TARGET
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 SLINGSHOT REBOUND RUBBER (BOTTOM)	26 SW#: 25 REBOUND IN CENTRE TRIANGLE	34 SW#: 33 RIGHT POP BUMPER	42 SW#: 41 STANDUP 4 TARGET
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 SW#: 10 LOOP BUTTON ROLLOVER - CENTRE	19 SW#: 18 RIGHT OUTLANE	27 SW#: 26 1ST DROP TARGET (LEFT)	35 SW#: 34 STANDUP 10 TARGET (RIGHT)	43 SW#: 42 STANDUP 3 TARGET
4 SW#: 3 CREDIT BUTTON	12 SW#: 11 LOOP BUTTON ROLLOVER - RIGHT 1	20 SW#: 19 LEFT OUTLANE	28 SW#: 27 2ND DROP TARGET	36 SW#: 35 STANDUP 9 TARGET	44 SW#: 43 STANDUP 2 TARGET
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 SW#: 12 LOOP BUTTON ROLLOVER - RIGHT 2	21 SW#: 20 LEFT KICKOUT SLINGSHOT	29 SW#: 28 3RD DROP TARGET	37 SW#: 36 STANDUP 8 TARGET	45 SW#: 44 STANDUP 1 TARGET (LEFT)
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 SW#: 13 LOOP BUTTON ROLLOVER - RIGHT 3	22 SW#: 21 RIGHT SLINGSHOT KICKOUT	30 SW#: 29 4TH DROP TARGET (RIGHT)	38 SW#: 37 STANDUP 7 TARGET	46 SW#: 45 LOOP BUTTON ROLLOVER - LEFT 3
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 BALL SAUCER BANK REBOUND RUBBER	31 SW#: 30 DROP TARGET	39 SW#: 38 STANDUP 6 TARGET	47 SW#: 46 LOOP BUTTON ROLLOVER - LEFT 2
8 UNUSED	16 UNUSED	24 SW#: 23 SPINNER	32 SW#: 31 LEFT POP BUMPER	40 UNUSED	48 SW#: 47 LOOP BUTTON ROLLOVER - LEFT 1

SW# number is the switch number as known to the game.

Hotdoggin by Bally

1 SW#: 1 WHEN LIT SPOTS LETTER RIGHT LANE	9 SW#: 2 WHEN LIT SPOTS LETTER LEFT LANE	17 SW#: 3 LEFT AND SPOTS LETTER LANE	25 SW#: 4 RIGHT OUT SPECIAL	33 SW#: 5 LEFT OUT SPECIAL	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 SAUCER	34 SW#: 13 F DROP TARGET	42 SW#: 14 U DROP TARGET	50 SW#: 15 N DROP TARGET	58 SW#: 16 SLAM (2)
3 SW#: 17 5000 LEFT RETURN LANE	11 SW#: 18 3RD IN LINE DROP TARGET	19 SW#: 19 2ND IN LINE DROP TARGET	27 SW#: 20 1ST IN LINE DROP TARGET	35 SW#: 21 D DROP TARGET	43 SW#: 22 O DROP TARGET	51 SW#: 23 1ST G DROP TARGET	59 SW#: 24 2ND G DROP TARGET
4 SW#: 25 T RED TARGET	12 SW#: 26 O RED TARGET	20 SW#: 27 H RED TARGET	28 SW#: 28 N WHITE TARGET	36 SW#: 29 I WHITE TARGET	44 SW#: 30 I ROLLOVER	52 SW#: 31 K ROLLOVER	60 SW#: 32 S ROLLOVER
5 SW#: 33 RIGHT KICKER LANE	13 SW#: 34 SPINNER	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 LT. SIDE THUMPER BUMPER	45 SW#: 38 MIDDLE THUMPER BUMPER	53 SW#: 39 TOP RT. THUMPER BUMPER	61 SW#: 40 TOP LT. THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

House of Diamonds by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 LEFT STANDUP TARGETS (LEFT)	33 SW#: 32 RIGHT STANDUP TARGETS (RIGHT)	41 SW#: 40 TOP REBOUND RUBBER (RIGHT)
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LEFT SLINGSHOT	26 SW#: 25 LEFT STANDUP TARGETS	34 SW#: 33 RIGHT STANDUP TARGETS	42 SW#: 41 BALL SAUCER
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 RIGHT SLINGSHOT	27 SW#: 26 LEFT STANDUP TARGETS	35 SW#: 34 RIGHT STANDUP TARGETS	43 SW#: 42 TOP REBOUND RUBBER (LEFT)
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 RIGHT INLANE	28 SW#: 27 LEFT STANDUP TARGET	36 SW#: 35 RIGHT STANDUP TARGETS	44 UNUSED
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 RIGHT OUTLANE	29 SW#: 28 LEFT STANDUP TARGETS (RIGHT)	37 SW#: 36 RIGHT (LEFT) STANDUP TARGETS	45 UNUSED
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 LEFT INLANE	30 SW#: 29 LEFT POP BUMPER	38 SW#: 37 RIGHT POP BUMPER	46 UNUSED
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 LEFT OUTLANE	31 SW#: 30 TOP LEFT STANDUP TARGET	39 SW#: 38 TOP RIGHT STANDUP TARGET	47 UNUSED
8 UNUSED	16 UNUSED	24 SW#: 23 SPINNER	32 SW#: 31 LEFT LANE ROLLOVER BUTTON	40 SW#: 39 RIGHT LANE ROLLOVER BUTTON	48 UNUSED

SW# number is the switch number as known to the game.

Hurricane by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 FERRIS WHEEL	25 UNUSED	33 SW#: 51 LEFT JET BUMPER	41 SW#: 61 HURRICANE ENTRY	49 UNUSED	57 UNUSED
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 COIN DOOR CLOSED	18 UNUSED	26 SW#: 42 RIGHT 1 STAND-UP	34 SW#: 52 RIGHT JET BUMPER	42 SW#: 62 HURRICANE EXIT	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET DISPENSER	19 SW#: 33 LEFT DROP 1 TARGET	27 SW#: 43 RIGHT 2 STAND-UP	35 SW#: 53 BOTTOM JET BUMPER	43 SW#: 63 COMET ENTRY	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 LEFT DROP 2 TARGET	28 SW#: 44 RIGHT 3 STAND-UP	36 UNUSED	44 SW#: 64 COMET EXIT	52 UNUSED	60 UNUSED
5 SW#: 15 OUTHOLE	13 SW#: 25 RIGHT SLINGSHOT	21 SW#: 35 LEFT DROP 3 TARGET	29 SW#: 45 RIGHT 4 STAND-UP	37 SW#: 55 DUNK THE DUMMY	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 16 TROUGH 1	14 SW#: 26 RIGHT RETURN	22 SW#: 36 LEFT SLINGSHOT	30 UNUSED	38 SW#: 56 LEFT JUGGLER	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 17 TROUGH 2	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 LEFT RETURN	31 UNUSED	39 SW#: 57 RIGHT JUGGLER	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 18 TROUGH 3	16 SW#: 28 BALL SHOOTER	24 SW#: 38 LEFT OUTLANE	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Hyperball by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 A HOLE	17 SW#: 17 E HOLE	25 SW#: 25 M LIFT-UP TARGET	33 SW#: 33 LEFT SHOOTER	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 2 PLAYER START	10 SW#: 10 B HOLE	18 SW#: 18 F HOLE	26 SW#: 26 N LIFT-UP TARGET	34 SW#: 34 RIGHT SHOOTER	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 1 PLAYER START	11 SW#: 11 C HOLE	19 SW#: 19 G HOLE	27 SW#: 27 O LIFT-UP TARGET	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT CHUTE	12 SW#: 12 D HOLE	20 SW#: 20 H LIFT-UP TARGET	28 SW#: 28 P LIFT-UP TARGET	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER CHUTE	13 SW#: 13 Y HOLE	21 SW#: 21 I LIFT-UP TARGET	29 SW#: 29 R HOLE	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT CHUTE	14 SW#: 14 W HOLE	22 SW#: 22 J LIFT-UP TARGET	30 SW#: 30 S HOLE	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 V HOLE	23 SW#: 23 K LIFT-UP TARGET	31 SW#: 31 T HOLE	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 U HOLE	24 SW#: 24 L LIFT-UP TARGET	32 SW#: 32 Z-BOMB SWITCH	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Ice Fever by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 DROP TARGET	41 SW#: 50 #2 DROP TARGET	49 SW#: 60 #3 DROP TARGET	57 SW#: 70 CAPTIVE BALL SPOT TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #1 TOP ROLLOVER	42 SW#: 51 #2 TOP ROLLOVER	50 SW#: 61 #3 TOP ROLLOVER	58 SW#: 71 ROLLUNDER
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 LOWER LEFT SPOT TARGET	43 SW#: 52 UPPER LEFT SPOT TARGET	51 SW#: 62 TOP SPOT TARGET	59 SW#: 72 RIGHT SPOT TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT RETURN ROLLOVER	44 SW#: 53 RIGHT RETURN ROLLOVER	52 SW#: 63 OUTSIDE (2) ROLLOVERS	60 SW#: 73 30 POINT (2)
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 POP BUMPER (4)	45 UNUSED	53 UNUSED	61 SW#: 74 SPINNER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Independence Day by Sega

1 UNUSED	9 SW#: 9 MINI-LOOP	17 UNUSED	25 SW#: 25 MINI-LOOP S-U	33 SW#: 33 AREA 51 TOP 3-BANK	41 SW#: 41 SUPER VUK ENTER SIDE	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 LEFT RAMP ENTER	26 UNUSED	34 SW#: 34 AREA 51 MID 3-BANK	42 SW#: 42 ALIEN HEAD OPTO	50 SW#: 50 BOTTOM TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 LEFT RAMP EXIT	27 SW#: 27 CENTER RAMP S-U	35 SW#: 35 HURRY-UP TOP 3-BANK	43 SW#: 43 HEAD REAR UNDER-TROUGH	51 SW#: 51 TOP TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 CENTER RAMP ENTER	28 SW#: 28 RIGHT RAMP S-U LEFT	36 SW#: 36 HURRY-UP MID 3-BANK	44 SW#: 44 SUPER VUK	52 SW#: 52 SERVO OPEN / CLOSE	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 CENTER RAMP EXIT	29 SW#: 29 RIGHT RAMP S-U RIGHT	37 SW#: 37 LEFT ORBIT BOTTOM	45 SW#: 45 SUPER VUK ENTER FRONT	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL #4 TROUGH (RIGHT)	22 SW#: 22 RIGHT RAMP ENTER	30 SW#: 30 LEFT TOP LANE	38 SW#: 38 LEFT ORBIT TOP	46 SW#: 46 HEAD FRONT UNDER-TROUGH	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 SW#: 23 RIGHT RAMP EXIT	31 SW#: 31 MIDDLE TOP LANE	39 SW#: 39 RIGHT ORBIT TOP	47 SW#: 47 AREA 51 BOT 3-BANK	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 SUPER S-U JACKPOT	32 SW#: 32 RIGHT TOP LANE	40 SW#: 40 RIGHT ORBIT BOTTOM	48 SW#: 48 HURRY-UP BOT 3-BANK	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Indiana Jones by Williams

1 SW#: 11 SINGLE DROP TOP	9 SW#: 21 SLAM TILT	17 SW#: 31 LEFT EJECT	25 SW#: 41 LEFT RAMP ENTER	33 SW#: 51 ADVENT(U)RE TGT.	41 SW#: 61 (A)DVENTURE TGT.	49 SW#: 71 CAPTIVE BALL FRT.	57 SW#: 81 TROUGH 6
2 SW#: 12 BUY-IN BUTTON	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 EXIT IDOL	26 SW#: 42 RIGHT RAMP ENTER	34 SW#: 52 ADVENTU(R)E TGT.	42 SW#: 62 A(D)VENTURE TGT.	50 SW#: 72 MINI TOP HOLE	58 SW#: 82 TROUGH 5
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO	19 SW#: 33 LEFT SLINGSHOT	27 SW#: 43 TOP IDOL ENTER	35 SW#: 53 ADVENTUR(E) TGT.	43 SW#: 63 AD(V)ENTURE TGT.	51 SW#: 73 MINI BOTTOM HOLE	59 SW#: 83 TROUGH 4
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 GUN TRIGGER	28 SW#: 44 RIGHT POPPER	36 SW#: 54 LEFT LOOP TOP	44 SW#: 64 CAPTIVE BALL BACK	52 SW#: 74 RIGHT RAMP MADE	60 SW#: 84 TROUGH 3
5 SW#: 15 LEFT OUTLANE	13 SW#: 25 (I)NDY LANE	21 SW#: 35 LEFT JET	29 SW#: 45 CENTER ENTER	37 SW#: 55 LEFT LOOP BOTTOM	45 SW#: 65 MINI TOP LEFT	53 SW#: 75 MINI TOP RIGHT	61 SW#: 85 TROUGH 2
6 SW#: 16 LEFT RETURN LANE	14 SW#: 26 I(N)DY LANE	22 SW#: 36 RIGHT JET	30 SW#: 46 TOP POST	38 SW#: 56 RIGHT LOOP TOP	46 SW#: 66 MINI MIDDLE TOP LEFT	54 SW#: 76 MINI MIDDLE TOP RIGHT	62 SW#: 86 TROUGH 1
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 IN(D)Y LANE	23 SW#: 37 BOTTOM JET	31 SW#: 47 SUBWAY LOCKUP	39 SW#: 57 RIGHT LOOP BOTTOM	47 SW#: 67 MINI MIDDLE BOTTOM LEFT	55 SW#: 77 MINI MIDDLE BOTTOM RIGHT	63 SW#: 87 TOP TROUGH
8 SW#: 18 RIGHT TOP OUTLANE	16 SW#: 28 IND(Y) LANE	24 SW#: 38 CENTER STANDUP	32 SW#: 48 RIGHT SLINGSHOT	40 SW#: 58 RIGHT BOTTOM OUTLANE	48 SW#: 68 MINI BOTTOM LEFT	56 SW#: 78 MINI BOTTOM RIGHT	64 SW#: 88 SHOOTER

SW# number is the switch number as known to the game.

COL 9 IS NOT ACCESSIBLE USING THE STANDARD WPC HARNESS FOR THE 64 SWITCH MATRIX TESTER. COL 9 MUST BE TESTED SEPARATELY OR WIRED TO A 2ND 64 SWITCH MATRIX TESTER.

Indiana Jones 4 by Stern

1 SW#: 1 JONE(S)	9 SW#: 17 ARK AUTO LOAD	17 SW#: 33 RIGHT BUMPER	25 SW#: 49 SKILL SHOT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 JON(E)S	10 SW#: 18 TROUGH #4 (L)	18 UNUSED	26 SW#: 50 ARK MOTOR (UP)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 JO(N)ES	11 SW#: 19 TROUGH #3	19 SW#: 35 (M)AP	27 SW#: 51 ARK MOTOR (DN)	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 J(O)NES	12 SW#: 20 TROUGH #2	20 SW#: 36 M(A)P	28 SW#: 52 TEMPLE MOTOR (UP)	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 (J)ONES	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 MA(P)	29 SW#: 53 TEMPLE MOTOR (DN)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 RIGHT ORBIT SPINNER	14 SW#: 22 TROUGH JAM	22 SW#: 38 RIGHT ORBIT (TOP)	30 SW#: 54 R. ORBIT (BOTTOM)	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 IND(Y)	15 SW#: 23 SHOOTER LANE	23 SW#: 39 ARK ENTER (OPTO)	31 SW#: 55 GERMAN 5 (BOT)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 IN(D)Y	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 HIT ARK (OPTO)	32 SW#: 56 GERMAN 6	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Indiana Jones 4 by Stern

Bank 2

1 SW#: 9 I(N)DY	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 GERMAN 1 (BOT)	25 SW#: 57 GERMAN 7 (TOP)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 (I)NDY	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 GERMAN 2	26 SW#: 58 LEFT ORBIT (TOP)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 GRAIL EJECT	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 GERMAN 3	27 SW#: 59 TEMPLE STANDUP	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 TRANSFER TROUGH	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 GERMAN 4 (TOP)	28 SW#: 60 R. RAMP EXIT	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 LEFT ORBIT (BOTTOM)	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 MAP EJECT	29 SW#: 61 CAPTIVE BALL (TOP)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 LEFT ORBIT SPINNER	14 SW#: 30 LEFT BUMPER	22 SW#: 46 L. SLINGSHOT (TOP)	30 SW#: 62 CAPTIVE BALL (BOT)	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 TOP BUMPER	23 SW#: 47 R. SLINGSHOT (TOP)	31 SW#: 63 SWORDSMAN BACK	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 R. RAMP ENTRANCE	32 SW#: 64 SWORDSMAN FORWARD	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Indy 500 by Williams

1 SW#: 11 BALL LAUNCH	9 SW#: 21 SLAM TILT	17 SW#: 31 THREE BANK CENTER	25 SW#: 41 TOP TROUGH	33 SW#: 51 LEFT LANE	41 SW#: 61 UPPER POPPER	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 THREE BANK LOWER	26 SW#: 42 TROUGH 1 (RIGHT)	34 SW#: 52 CENTER LANE	42 SW#: 62 TURBO POPPER	50 SW#: 72 LEFT JET	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 UNUSED	27 SW#: 43 TROUGH 2	35 SW#: 53 RIGHT LANE	43 SW#: 63 TURBO BALL SENSE	51 SW#: 73 RIGHT JET	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 RIGHT WRENCH FLIPPER	28 SW#: 44 TROUGH 3	36 SW#: 54 TEN POINT	44 SW#: 64 UPPER EJECT	52 SW#: 74 CENTER JET	60 UNUSED
5 SW#: 15 LEFT OUTLANE	13 SW#: 25 SHOOTER LANE	21 SW#: 35 LEFT RAMP ENTER	29 SW#: 45 TROUGH 4 (LEFT)	37 SW#: 55 LEFT RAMP WRENCH	45 SW#: 65 LOWER KICKER	53 SW#: 75 RIGHT RAMP ENTER	61 UNUSED
6 SW#: 16 LEFT FLIPPER LANE	14 SW#: 26 LEFT SLINGSHOT	22 SW#: 36 LEFT RAMP MADE	30 SW#: 46 LEFT RAMP STANDUP	38 SW#: 56 LEFT LIGHTUP	46 SW#: 66 TURBO INDEX	54 SW#: 76 RIGHT RAMP MADE	62 UNUSED
7 SW#: 17 RIGHT LANE FLIPPER	15 SW#: 27 RIGHT SLINGSHOT	23 SW#: 37 LEFT LOOP	31 SW#: 47 TURBO WRENCH	39 SW#: 57 CENTER LIGHTUP	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 18 RIGHT OUTLANE	16 SW#: 28 THREE BANK UPPER	24 SW#: 38 RIGHT LOOP	32 SW#: 48 JET BUMPER WRENCH	40 SW#: 58 RIGHT LIGHTUP	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

JackBot by Williams

1 SW#: 11 LOWER LEFT 10 POINT	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH JAM	25 SW#: 41 VISOR 1 (LEFT)	33 SW#: 51 5-BANK 1 TARGET (UPPER)	41 SW#: 61 UPPER JET BUMPER	49 UNUSED	57 UNUSED
2 SW#: 12 UPPER LEFT 10 POINT	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 1 (RIGHT)	26 SW#: 42 VISOR 2	34 SW#: 52 5-BANK 2 TARGET	42 SW#: 62 LEFT JET BUMPER	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY EXTRA BALL	19 SW#: 33 TROUGH 2	27 SW#: 43 VISOR 3	35 SW#: 53 5-BANK 3 TARGET	43 SW#: 63 LOWER JET BUMPER	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 3	28 SW#: 44 VISOR 4	36 SW#: 54 5-BANK 4 TARGET	44 SW#: 64 RIGHT SLINGSHOT	52 UNUSED	60 UNUSED
5 SW#: 15 RAMP IS DOWN	13 SW#: 25 LEFT OUTLANE	21 SW#: 35 TROUGH 4 (LEFT)	29 SW#: 45 VISOR 5 (RIGHT)	37 SW#: 55 5-BANK 5 TARGET (LOWER)	45 SW#: 65 LEFT SLINGSHOT	53 UNUSED	61 UNUSED
6 SW#: 16 HIGH DROP TARGET	14 SW#: 26 LEFT FLIPPER LANE	22 SW#: 36 RAMP EXIT	30 SW#: 46 FAR LEFT EJECT	38 SW#: 56 VORTEX UPPER	46 SW#: 66 RIGHT 10 POINT	54 UNUSED	62 UNUSED
7 SW#: 17 CENTER DROP TARGET	15 SW#: 27 RIGHT LANE FLIPPER	23 SW#: 37 RAMP ENTRANCE	31 SW#: 47 LEFT EJECT HOLE (VISOR)	39 SW#: 57 VOTEX CENTER	47 SW#: 67 HIT ME TARGET	55 UNUSED	63 UNUSED
8 SW#: 18 LOW DROP TARGET	16 SW#: 28 RIGHT OUTLANE	24 SW#: 38 TARGET UNDER RAMP	32 SW#: 48 RIGHT EJECT HOLE (VISOR)	40 SW#: 58 VORTEX LOWER	48 SW#: 68 BALL SHOOTER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Jacks To Open by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 SW#: 30 LEFT TOP ROLLOVER	33 SW#: 40 LEFT CENTER TOP ROLLOVER	41 SW#: 50 RIGHT CENTER TOP ROLLOVER	49 SW#: 60 RIGHT TOP ROLLOVER	57 SW#: 70 10 POINT (10)
2 SW#: 1 #4 DROP TARGET	10 SW#: 11 #5 DROP TARGET	18 SW#: 21 #6 DROP TARGET	26 SW#: 31 LEFT POP BUMPER	34 SW#: 41 CENTER POP BUMPER	42 SW#: 51 RIGHT POP BUMPER	50 SW#: 61 LEFT SIDE ROLLOVER	58 SW#: 71 RIGHT SIDE ROLLOVER
3 SW#: 2 #7 DROP TARGET	11 SW#: 12 #8 DROP TARGET	19 SW#: 22 #9 DROP TARGET	27 SW#: 32 LEFT OUTSIDE ROLLOVER	35 SW#: 42 LEFT RETURN ROLLOVER	43 SW#: 52 RETURN ROLLOVER	51 SW#: 62 RIGHT OUTSIDE ROLLOVER	59 SW#: 72 100 POINT (2)
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

James Bond by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 2 #1 YELLOW DROP TARGET	11 SW#: 12 #2 YELLOW DROP TARGET	19 SW#: 22 #3 YELLOW DROP TARGET	27 SW#: 32 #4 YELLOW DROP TARGET	35 SW#: 42 PURPLE DROP TARGET	43 SW#: 52 PURPLE SPOT TARGET	51 SW#: 62 GREEN SPOT TARGET	59 SW#: 72 LEFT RETURN ROLLOVER
4 SW#: 3 #1 GREEN DROP TARGET	12 SW#: 13 #2 GREEN DROP TARGET	20 SW#: 23 #3 GREEN DROP TARGET	28 SW#: 33 #4 GREEN DROP TARGET	36 SW#: 43 TOP CENTER TARGET	44 SW#: 53 TOP LEFT, RIGHT AND LEFT (2)	52 SW#: 63 10 POINT ROLLOVERS (3)	60 SW#: 73 LEFT TOP ROLLOVER LANE
5 SW#: 4 #1 RED DROP TARGET	13 SW#: 14 #2 RED DROP TARGET	21 SW#: 24 #3 RED DROP TARGET	29 SW#: 34 #4 RED DROP TARGET	37 SW#: 44 POP BUMPER (3)	45 UNUSED	53 SW#: 64 SPECIAL TARGET	61 SW#: 74 RIGHT RETURN ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Johnny Mnemonic by Williams

1 SW#: 11 BALL LAUNCH	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH JAM	25 SW#: 41 LEFT RAMP ENTER	33 SW#: 51 CYBER MATRIX 11	41 SW#: 61 CYBER MATRIX 12	49 SW#: 71 CYBER MATRIX 13	57 UNUSED
2 SW#: 12 X HAND HOME	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 LEFT RAMP MADE	34 SW#: 52 CYBER MATRIX 21	42 SW#: 62 CYBER MATRIX 22	50 SW#: 72 CYBER MATRIX 23	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 DROP TARGET	35 SW#: 53 CYBER MATRIX 31	43 SW#: 63 CYBER MATRIX 32	51 SW#: 73 CYBER MATRIX 33	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 LEFT JET BUMPER	36 SW#: 54 RIGHT RAMP ENTER	44 SW#: 64 LEFT JET LANE	52 SW#: 74 X HAND A ENCODER	60 UNUSED
5 SW#: 15 LEFT OUTLANE	13 SW#: 25 LEFT SLINGSHOT	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 BOTTOM JET BUMPER	37 SW#: 55 RIGHT RAMP MADE	45 SW#: 65 MIDDLE JET LANE	53 SW#: 75 X HAND B ENCODER	61 UNUSED
6 SW#: 16 LEFT RETURN LANE	14 SW#: 26 RIGHT SLINGSHOT	22 SW#: 36 BALL POPPER 1	30 SW#: 46 RIGHT JET BUMPER	38 SW#: 56 LEFT LOOP	46 SW#: 66 RIGHT JET LANE	54 SW#: 76 Y HAND B ENCODER	62 UNUSED
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 LEFT STANDUP TARGET	23 SW#: 37 Y HAND HOME	31 SW#: 47 CRAZY BOB'S	39 SW#: 57 RIGHT LOOP	47 SW#: 67 RIGHT HAND CONTROL	55 SW#: 77 Y HAND A ENCODER	63 UNUSED
8 SW#: 18 RIGHT OUTLANE	16 SW#: 28 RIGHT TARGET STANDUP	24 SW#: 38 RIGHT RUBBER	32 SW#: 48 SPINNER	40 SW#: 58 INNER LOOP ENTRY	48 SW#: 68 LEFT HAND CONTROL	56 SW#: 78 SHOOTER LANE	64 UNUSED

SW# number is the switch number as known to the game.

Joker Poker by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 POP BUMPERS (2)	10 SW#: 11 "A" ROLLOVER (2)	18 SW#: 12 "B" ROLLOVER (2)	26 SW#: 13 "C" ROLLOVER (2)	34 UNUSED
3 SW#: 20 EXTRA BALL TARGET	11 SW#: 21 "10" DROP TARGET	19 SW#: 22 "J" DROP TARGET	27 SW#: 23 "J" DROP TARGET	35 UNUSED
4 SW#: 30 SPECIAL ROLLOVER	12 SW#: 31 "Q" DROP TARGET	20 SW#: 32 "Q" DROP TARGET	28 SW#: 33 "Q" DROP TARGET	36 UNUSED
5 SW#: 40 10 POINT SWITCHES (11)	13 SW#: 41 "K" DROP TARGET	21 SW#: 42 "K" DROP TARGET	29 SW#: 43 "K" DROP TARGET	37 SW#: 44 "K" DROP TARGET
6 SW#: 50 "A" DROP TARGET	14 SW#: 51 "A" DROP TARGET	22 SW#: 52 JOKER DROP TARGET	30 SW#: 53 "A" DROP TARGET	38 SW#: 54 "A" DROP TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Jokerz by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 B OF BET	25 SW#: 25 BL 3-BANK DT (TOP)	33 UNUSED	41 SW#: 41 TL 3-BANK DT (TOP)	49 SW#: 49 LEFT RAMP SCORE	57 SW#: 57 LANE CHANGE RIGHT
2 SW#: 2 CSIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 SW#: 18 E OF BET	26 SW#: 26 BL 3-BANK DT (MID)	34 UNUSED	42 SW#: 42 TL 3-BANK DT (MID)	50 SW#: 50 RIGHT RAMP SCORE	58 SW#: 58 LANE CHANGE LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1	19 SW#: 19 T OF BET	27 SW#: 27 BL 3-BANK DT (BOTTOM)	35 UNUSED	43 SW#: 43 TL 3-BANK DT (BOTTOM)	51 UNUSED	59 SW#: 59 DRAW POKER HOME (BACKGLASS)
4 SW#: 4 LEFT COIN CHUTE	12 SW#: 12 BALL TROUGH #2	20 SW#: 20 LEFT OUTLANE	28 SW#: 28 ACE UPF	36 SW#: 36 BR 3-BANK DT (TOP)	44 SW#: 44 TL KICKER	52 SW#: 52 RAMP RAISE	60 SW#: 60 LEFT JET BUMPER
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #3	21 SW#: 21 LEFT RETURN LANE	29 SW#: 29 KING UPF	37 SW#: 37 BR 3-BANK DT (MID)	45 SW#: 45 LEFT LOCK 1 BALL	53 SW#: 53 10 PT (TR)	61 SW#: 61 RIGHT JET BUMPER
6 SW#: 6 RIGHT COIN CHUTE	14 SW#: 14 BALL SHOOTER	22 SW#: 22 RIGHT RETURN LANE	30 SW#: 30 QUEEN UPF	38 SW#: 38 BR 3-BANK DT (BOTTOM)	46 SW#: 46 LEFT LOCK 2 BALLS	54 UNUSED	62 SW#: 62 LOWER JET BUMPER
7 SW#: 7 SLAM TILT	15 SW#: 15 RAMP UP	23 SW#: 23 RIGHT OUTLANE	31 SW#: 31 JACK UPF	39 UNUSED	47 SW#: 47 TR EJECT	55 UNUSED	63 SW#: 63 BL KICKER ("SLING")
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RAMP DOWN	24 SW#: 24 DOUBLE SCORE TARGET	32 SW#: 32 10 UPF	40 UNUSED	48 SW#: 48 SPINNER	56 SW#: 56 10 PT (BR)	64 SW#: 64 BR KICKER ("SLING")

SW# number is the switch number as known to the game.

Joust by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 DISAPPEARING TARGET (FRONT)	25 SW#: 25 LEFT 3-BANK, DROP TARGET (RIGHT)	33 SW#: 33 OUTHOLE	41 SW#: 41 DISAPPEARING TARGET (FRONT)	49 SW#: 49 LEFT 3 BANK, DROP TARGET (RIGHT)	57 SW#: 57 2-PLAYER START
2 UNUSED	10 SW#: 10 BALL RAMP 1 (RIGHT)	18 SW#: 18 DISAPPEARING TARGET (REAR)	26 SW#: 26 RIGHT 3 DROP BANK, TARGET (LEFT)	34 SW#: 34 BALL RAMP 1 (RIGHT)	42 SW#: 42 DISAPPEARING TARGET (REAR)	50 SW#: 50 RIGHT 3 DROP BANK, TARGET (LEFT)	58 SW#: 58 P1 LEFT FLAP
3 SW#: 3 1-PLAYER START	11 SW#: 11 BALL RAMP 2	19 SW#: 19 DISAPPEARING TARGET ROLLOVER	27 SW#: 27 RIGHT 3 DROP BANK, TARGET (CENTER)	35 SW#: 35 BALL RAMP 2	43 SW#: 43 DISAPPEARING TARGET ROLLOVER	51 SW#: 51 RIGHT 3 DROP BANK, TARGET (CENTER)	59 SW#: 59 P1 RIGHT FLAP
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL RAMP 3	20 SW#: 20 HUNTER 1 ROLLOVER	28 SW#: 28 RIGHT 3 DROP BANK, TARGET (RIGHT)	36 SW#: 36 BALL RAMP 3	44 SW#: 44 HUNTER 1 ROLLOVER	52 SW#: 52 RIGHT 3 DROP BANK, TARGET (RIGHT)	60 SW#: 60 P2 LEFT FLAP
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL RAMP 4 (LEFT)	21 SW#: 21 HUNTER 2 BULLSEYE	29 SW#: 29 LEFT KICKER	37 SW#: 37 BALL RAMP 4 (LEFT)	45 SW#: 45 HUNTER 2 BULLSEYE	53 SW#: 53 LEFT KICKER	61 SW#: 61 P2 RIGHT FLAP
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 SHOOTER LANE	22 SW#: 22 HUNTER 3 BULLSEYE	30 SW#: 30 RIGHT KICKER	38 SW#: 38 SHOOTER LANE	46 SW#: 46 HUNTER 3 BULLSEYE	54 SW#: 54 RIGHT KICKER	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 EJECT HOLE	23 SW#: 23 LEFT 3 BANK, DROP TARGET (LEFT)	31 SW#: 31 RIGHT DRAIN ROLLOVER	39 SW#: 39 EJECT HOLE	47 SW#: 47 LEFT 3 BANK, DROP TARGET (LEFT)	55 SW#: 55 RIGHT DRAIN ROLLOVER	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 SPINNER	24 SW#: 24 LEFT 3 BANK, DROP TARGET (CENTER)	32 UNUSED	40 SW#: 40 SPINNER	48 SW#: 48 LEFT 3 BANK, DROP TARGET (CENTER)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Judge Dredd by Williams

1 SW#: 11 LEFT FIRE BUTTON	9 SW#: 21 SLAM TILT	17 SW#: 31 BUY-IN BALL) (EXTRA	25 SW#: 41 RIGHT BALL SHOOTER	33 SW#: 51 LEFT SLING (2)	41 SW#: 61 GLOBE #1 POSITION	49 SW#: 71 MAGNET OVER RING	57 SW#: 81 TROUGH 1
2 SW#: 12 RIGHT FIRE BUTTON	10 SW#: 22 FRONT DOOR CLOSED	18 UNUSED	26 SW#: 42 RIGHT OUTLANE	34 SW#: 52 RIGHT SLING (2)	42 SW#: 62 CRANE EXIT	50 SW#: 72 TOP RIGHT OPTO	58 SW#: 82 TROUGH 2
3 SW#: 13 CREDIT (START)	11 SW#: 23 TICKET DISPENSER	19 SW#: 33 LEFT ROLLOVER	27 SW#: 43 OUTSIDE RIGHT RETURN	35 SW#: 53 CAPTIVE BALL 2	43 SW#: 63 LEFT RAMP TO LOCK	51 SW#: 73 LEFT POPPER	59 SW#: 83 TROUGH 3
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 INSIDE RIGHT RETURN	28 SW#: 44 SUPER GAME	36 SW#: 54 DROP TARGET "J"	44 SW#: 64 LEFT RAMP EXIT	52 SW#: 74 RIGHT POPPER	60 SW#: 84 TROUGH 4
5 SW#: 15 LEFT SHOOTER LANE	13 SW#: 25 TOP RIGHT POST	21 SW#: 35 TOP CENTER ROLLOVER	29 UNUSED	37 SW#: 55 DROP TARGET "U"	45 UNUSED	53 SW#: 75 TOP RAMP EXIT	61 SW#: 85 TROUGH 5
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 CAPTIVE BALL 1	22 SW#: 36 LEFT SCORE POST	30 UNUSED	38 SW#: 56 DROP TARGET "D"	46 SW#: 66 CENTER RAMP EXIT	54 SW#: 76 RIGHT RAMP EXIT	62 SW#: 86 TROUGH 6
7 SW#: 17 LEFT RETURN LANE	15 SW#: 27 MYSTERY	23 SW#: 37 SUBWAY ENTER 1	31 UNUSED	39 SW#: 57 DROP TARGET "G"	47 SW#: 67 LEFT RAMP ENTER	55 SW#: 77 GLOBE #2 POSITION	63 SW#: 87 TOP TROUGH
8 SW#: 18 3-BANK TARGETS	16 UNUSED	24 SW#: 38 SUBWAY ENTER 2	32 UNUSED	40 SW#: 58 DROP TARGET "E"	48 SW#: 68 CAPTIVE BALL 3	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Jungle Lord by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 RIGHT BALL RAMP	17 SW#: 17 1 TARGET	25 SW#: 25 RIGHT LOWER 3-BANK, DROP TARGET	33 SW#: 33 5-BANK, #1 DROP TARGET (LEFT)	41 SW#: 41 PLAYFIELD TILT	49 SW#: 49 RIGHT MAGNET BUTTON	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT BALL RAMP	18 SW#: 18 2 TARGET	26 SW#: 26 RIGHT CENTER 3-BANK, DROP TARGET	34 SW#: 34 5-BANK, #2 DROP TARGET	42 SW#: 42 OUTHOLE	50 SW#: 50 LEFT MAGNET BUTTON	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 UNUSED	19 SW#: 19 3 TARGET	27 SW#: 27 RIGHT UPPER 3-BANK, DROP TARGET	35 SW#: 35 5-BANK, #3 DROP TARGET	43 SW#: 43 BALLSHOOTER TROUGH	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT KICKER	20 SW#: 20 4 ROLLOVER	28 SW#: 28 RIGHT KICKER	36 SW#: 36 5-BANK, #4 DROP TARGET	44 SW#: 44 PLAYFIELD ENTRY	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 "L" ROLLOVER	21 SW#: 21 5 ROLLOVER	29 SW#: 29 LEFT 3-BANK, LOWER DROP TARGET	37 SW#: 37 5-BANK, #5 DROP TARGET	45 SW#: 45 UPPER LEFT STANDUP	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 "O" ROLLOVER	22 SW#: 22 LEFT DRAIN LANE	30 SW#: 30 LEFT 3-BANK, CENTER DROP TARGET	38 SW#: 38 UPPER EJECT HOLE	46 SW#: 46 LEFT STANDUP	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 "R" ROLLOVER	23 SW#: 23 RIGHT DRAIN LANE	31 SW#: 31 LEFT 3-BANK, UPPER DROP TARGET	39 SW#: 39 LOWER EJECT HOLE	47 SW#: 47 RIGHT STANDUP	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 "D" ROLLOVER	24 SW#: 24 TURNAROUND, LOWER ROLLOVER	32 SW#: 32 TURNAROUND, UPPER ROLLOVER	40 SW#: 40 UPPER KICKER	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Junk Yard by Williams

1 SW#: 11 TOASTER GUN	9 SW#: 21 SLAM TILT	17 SW#: 31 TORUGH EJECT	25 SW#: 41 PAST SPINNER	33 SW#: 51 LEFT SLING	41 SW#: 61 UPPER RIGHT 3-BANK BOTTOM	49 SW#: 71 RAMP ENTRY	57 UNUSED
2 SW#: 12 REBOUND SWITCH	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 IN THE SEWER	34 SW#: 52 RIGHT SLING	42 SW#: 62 UPPER RIGHT 3-BANK MIDDLE	50 SW#: 72 SCOOP DOWN	58 UNUSED
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 LOCK JAM	35 SW#: 53 CAR TARGET 4	43 SW#: 63 UPPER RIGHT 3-BANK TOP	51 SW#: 73 SCOOP MADE	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 PAST CRANE	36 SW#: 54 CAR TARGET 5 (RIGHT)	44 SW#: 64 UPPER LEFT 3-BANK BOTTOM	52 SW#: 74 DOG ENTRY	60 UNUSED
5 SW#: 15 TOP LEFT CRANE	13 UNUSED	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 RAMP EXIT	37 UNUSED	45 SW#: 65 UPPER LEFT 3-BANK MIDDLE	53 UNUSED	61 UNUSED
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 RIGHT RETURN LANE	22 SW#: 36 LOCK UP 2	30 SW#: 46 CAR TARGET 1 (LEFT)	38 SW#: 56 LOWER LEFT 3-BANK BOTTOM	46 SW#: 66 UPPER LEFT 3-BANK TOP	54 SW#: 76 RIGHT 3-BANK BOTTOM	62 UNUSED
7 SW#: 17 LEFT RETURN LANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 LOCK UP 1	31 SW#: 47 CAR TARGET 2	39 SW#: 57 LOWER LEFT 3-BANK MIDDLE	47 SW#: 67 BOWL ENTRY	55 SW#: 77 RIGHT 3-BANK MIDDLE	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 SW#: 28 CRANE DOWN	24 SW#: 38 TOP RIGHT CRANE	32 SW#: 48 CAR TARGET 3	40 SW#: 58 LOWER LEFT 3-BANK TOP	48 SW#: 68 BOWL EXIT	56 SW#: 78 RIGHT 3-BANK TOP	64 UNUSED

SW# number is the switch number as known to the game.

Jurassic Park by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 TROUGH #1 LEFT	17 SW#: 17 OUTER LOOP LOW	25 SW#: 25 SPITTER #1 TARGET BOTTOM	33 SW#: 33 RIGHT RAMP ENTER	41 SW#: 41 LAUNCHER TRIGGER	49 SW#: 49 BARYONYX TARGET	57 SW#: 57 T.REX TOP (UP)
2 SW#: 2 4TH COIN	10 SW#: 10 TROUGH #2	18 SW#: 18 OUTER LOOP TOP	26 SW#: 26 SPITTER #2 TARGET MIDDLE	34 SW#: 34 RIGHT RAMP EXIT	42 SW#: 42 SMART BOMB BUTTON	50 SW#: 50 GALLIMIMUS TARGET	58 SW#: 58 T.REX BOTTOM (DOWN)
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #3	19 SW#: 19 INNER LOOP LOW	27 SW#: 27 SPITTER #3 TARGET TOP	35 SW#: 35 LEFT SCOOP	43 SW#: 43 LEFT SLINGSHOT	51 UNUSED	59 SW#: 59 T.REX TROUGH
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #4	20 SW#: 20 INNER LOOP TOP	28 UNUSED	36 SW#: 36 T.REX CENTER	44 SW#: 44 RIGHT SLINGSHOT	52 SW#: 52 TRICERITOPS TARGET	60 SW#: 60 RIGHT SCOOP TROUGH
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #5	21 SW#: 21 RIGHT OUTLANE	29 SW#: 29 RAPTOR PIT	37 SW#: 37 CENTER SCOOP	45 SW#: 45 TOP TURBO BUMPER	53 SW#: 53 BRACHIASAURUS TOP	61 SW#: 61 RIGHT VUK
6 SW#: 6 LEFT COIN	14 SW#: 14 TROUGH #6	22 SW#: 22 RIGHT RETURN	30 UNUSED	38 SW#: 38 HERRERASAURUS LOW	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 TROUGH #7 RIGHT	23 SW#: 23 LEFT RETURN	31 SW#: 31 T.REX RIGHT	39 SW#: 39 HERRERASAURUS TOP	47 SW#: 47 RIGHT TURBO BUMPER	55 SW#: 55 T.REX SAUCER EJECT	63 SW#: 63 LEFT FLIP. CAB
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 LEFT OUTLANE	32 SW#: 32 T.REX LEFT	40 SW#: 40 BRACHIASAURUS LOW	48 SW#: 48 MOSQUITO CAPTIVE BALL	56 SW#: 56 RIGHT SAUCER EJECT	64 SW#: 64 RIGHT FLIP. CAB

SW# number is the switch number as known to the game.

Kings of Steel by Bally

1 SW#: 1 SAUCER	9 SW#: 2 RIGHT OUTLANE	17 SW#: 3 RIGHT RETURN LANE	25 SW#: 4 LEFT OUTLANE	33 SW#: 5 LEFT RETURN LANE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 RIGHT SLINGSHOT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LOWER LEFT REBOUND	34 SW#: 13 3'S TARGET	42 SW#: 14 TOP RIGHT REBOUNDS (2)	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 WHEEL TARGET	11 SW#: 18 #2 TARGET (RIGHT)	19 SW#: 19 #2 TARGET (MIDDLE)	27 SW#: 20 #2 TARGET (LEFT)	35 SW#: 21 #4 BUTTON	43 SW#: 22 #5 BUTTON	51 SW#: 23 #6 BUTTON	59 SW#: 24 #7 BUTTON
4 SW#: 25 10 POINT (3) REBOUND	12 SW#: 26 TOP LEFT (2) REBOUNDS	20 SW#: 27 BOTTOM THUMPER BUMPER	28 SW#: 28 "K" TARGET (BOTTOM)	36 SW#: 29 "K" TARGET (2ND FROM BOTTOM)	44 SW#: 30 "A" TARGET	52 SW#: 31 "K" TARGET (2ND FROM TOP)	60 SW#: 32 "K" TARGET (TOP)
5 SW#: 33 RIGHT BUMPER THUMPER	13 SW#: 34 LEFT THUMPER BUMPER	21 SW#: 35 "Q" DROP TARGET (BOTTOM)	29 SW#: 36 "J" DROP TARGET (2ND BOTTOM)	37 SW#: 37 "10" DROP TARGET	45 SW#: 38 "Q" DROP TARGET (3RD FROM TOP)	53 SW#: 39 "J" DROP TARGET (2ND FROM TOP)	61 SW#: 40 "Q" DROP TARGET (TOP)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Kiss by Bally

1 SW#: 1 DROP TARGET D (BOTTOM)	9 SW#: 2 DROP TARGET C	17 SW#: 3 DROP TARGET B	25 SW#: 4 DROP TARGET A (TOP)	33 SW#: 5 LITE-A-LINE 5,000 ROLLOVER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 'D' TARGET	34 SW#: 13 'C' TARGET	42 SW#: 14 'B' TARGET	50 SW#: 15 'A' TARGET	58 SW#: 16 SLAM (2)
3 SW#: 17 LOWER 'S' TARGET	11 SW#: 18 UPPER 'S' TARGET	19 SW#: 19 'I' TARGET	27 SW#: 20 'K' TARGET	35 SW#: 21 OUTER 'S' ROLLOVER	43 SW#: 22 INNER 'S' ROLLOVER	51 SW#: 23 'I' ROLLOVER	59 SW#: 24 'K' ROLLOVER
4 SW#: 25 DROP TARGET AND 2 REBS.	12 SW#: 26 RIGHT LANE FLIP/FEED	20 SW#: 27 LEFT LANE FLIP/FEED	28 UNUSED	36 UNUSED	44 SW#: 30 RIGHT SPINNER	52 SW#: 31 LEFT SPINNER	60 UNUSED
5 SW#: 33 RIGHT OUTLANE	13 SW#: 34 LEFT OUTLANE	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 BOTTOM THUMPER BUMPER	45 SW#: 38 TOP THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Krull by Gottlieb

1 SW#: #1 DROP TARGET	9 SW#: 10 #2 DROP TARGET	17 SW#: 20 #3 DROP TARGET	25 SW#: 30 #4 DROP TARGET	33 SW#: 40 #1 SPOT TARGET	41 SW#: 50 #2 SPOT TARGET	49 SW#: 60 #3 SPOT TARGET	57 UNUSED
2 SW#: 1 R.O. DROP TARGET	10 SW#: 11 LEFT ROLLOVER	18 SW#: 21 RIGHT ROLLOVER	26 SW#: 31 ROLLUNDER	34 SW#: 41 #4 SPOT TARGET	42 SW#: 51 #5 SPOT TARGET	50 UNUSED	58 UNUSED
3 SW#: 2 HOLE	11 UNUSED	19 UNUSED	27 SW#: 32 ROUNDAABOUT	35 SW#: 42 POP BUMPERS	43 SW#: 52 10 POINT SWITCHES	51 SW#: 62 LEFT SIDE ROLLOVER	59 UNUSED
4 SW#: 3 #1 SPOT TARGET	12 SW#: 13 #2 SPOT TARGET	20 SW#: 23 #3 SPOT TARGET	28 SW#: 33 ROLLUNDER	36 SW#: 43 RIGHT RETURN ROLLOVER	44 SW#: 53 RIGHT OUTSIDE ROLLVER	52 SW#: 63 RIGHT DROP ROLLOVER TARGET	60 UNUSED
5 UNUSED	13 SW#: 14 RIGHT HOLE	21 SW#: 24 LEFT SHOOTER	29 SW#: 34 RIGHT SHOOTER	37 SW#: 44 LEFT SHOOTER	45 SW#: 54 LEFT HOLE	53 SW#: 64 RIGHT HOLE	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT RETURN ROLLOVER	46 SW#: 55 LEFT OUTSIDE ROLLOVER	54 SW#: 65 LEFT DROP ROLLOVER TARGET	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Lady Luck by Bally

1 SW#: 1 DROP TARGET "T"	9 SW#: 2 DROP TARGET "J"	17 SW#: 3 DROP TARGET "Q"	25 SW#: 4 DROP TARGET "K"	33 SW#: 5 DROP TARGET "A"	41 SW#: 6 CREDIT	49 SW#: 7 CAPTIVE BALL	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN RIGHT	10 SW#: 10 COIN LEFT	18 SW#: 11 COIN MIDDLE	26 SW#: 12 LANE CHANGE (CABINET)	34 SW#: 13 SPINNER	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 REBOUND
3 SW#: 17 THUMPER LEFT BUMPER	11 SW#: 18 THUMPER BUMPER MIDDLE	19 SW#: 19 THUMPER BUMPER RIGHT	27 SW#: 20 SLINGSHOT LEFT	35 SW#: 21 SLINGSHOT RIGHT	43 SW#: 22 OUTLANE RIGHT	51 SW#: 23 OUTLANE LEFT	59 SW#: 24 ROLLOVER LEFT
4 SW#: 25 POKER "P"	12 SW#: 26 POKER "O"	20 SW#: 27 POKER "K"	28 SW#: 28 POKER "E"	36 SW#: 29 POKER "R"	44 SW#: 30 CARD "DEUCE" LEFT	52 SW#: 31 CARD "DEUCE" MIDDLE	60 SW#: 32 CARD "DEUCE" RIGHT
5 SW#: 33 JOKER 1	13 SW#: 34 JOKER 2	21 SW#: 35 JOKER 3	29 SW#: 36 JOKER 4	37 SW#: 37 STAR RIGHT	45 SW#: 38 STAR LEFT	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Laser Cue by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 UPPER LEFT JET	25 SW#: 25 C	33 SW#: 33 1	41 SW#: 41 LEFT KICKER	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 FLIPPER RETURN	18 SW#: 18 UPPER RIGHT JET	26 SW#: 26 U	34 SW#: 34 2	42 SW#: 42 LOWER RIGHT 10PT	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT SPECIAL	19 SW#: 19 LOWER JET	27 SW#: 27 E	35 SW#: 35 3	43 SW#: 43 LANE CHANGE	51 UNUSED	59 UNUSED
4 SW#: 4 LEFT COIN	12 SW#: 12 RIGHT SPECIAL	20 SW#: 20 B	28 SW#: 28 P	36 SW#: 36 4	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 UNUSED	21 SW#: 21 A	29 SW#: 29 O	37 SW#: 37 5	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 RIGHT COIN	14 UNUSED	22 SW#: 22 L	30 SW#: 30 O	38 SW#: 38 6	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT 50-PT	23 SW#: 23 L	31 SW#: 31 L	39 SW#: 39 7	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 UPPER RIGHT 50-PT	24 SW#: 24 SPINNER	32 SW#: 32 PLAYFIELD TILT	40 SW#: 40 8	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Laser War by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 LASER KICK	25 SW#: 25 RED EJECT	33 SW#: 33 YELLOW EJECT	41 SW#: 41 "A"	49 SW#: 49 STAR YELLOW (UPPER RIGHT)	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 BALL TROUGH 3	18 SW#: 18 LEFT FLIPPER RETURN LANE	26 SW#: 26 STAR RED	34 SW#: 34 YELLOW STAR	42 SW#: 42 "R"	50 SW#: 50 STAR BLUE (UPPER RIGHT)	58 UNUSED
3 SW#: 3 START BUTTON	11 SW#: 11 BALL TROUGH 2	19 SW#: 19 RIGHT RETURN FLIPPER LANE	27 SW#: 27 RED SPINNER	35 SW#: 35 BLUE TARGET (LEFT)	43 SW#: 43 POP BUMPER RED	51 SW#: 51 YELLOW SPINNER	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 BALL TROUGH 1	20 SW#: 20 RIGHT OUTLANE	28 UNUSED	36 SW#: 36 BLUE TARGET (CENTER)	44 SW#: 44 POP BUMPER YELLOW	52 SW#: 52 SHOOTER LANE	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 OUTHOLE	21 SW#: 21 10 POINT (2 RUBBER RIGHT SWITCHES)	29 SW#: 29 RAMP	37 SW#: 37 BLUE TARGET (RIGHT)	45 SW#: 45 POP BUMPER BLUE	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SLING SHOT RIGHT	22 SW#: 22 RED TARGET (LEFT)	30 SW#: 30 YELLOW TARGET (LEFT)	38 SW#: 38 BLUE EJECT	46 SW#: 46 RIGHT E.O.S.	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 SLING SHOT LEFT	23 SW#: 23 RED TARGET (CENTER)	31 SW#: 31 YELLOW SPOT TARGET (CENTER)	39 SW#: 39 STAR BLUE	47 SW#: 47 LEFT E.O.S.	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 SW#: 24 RED TARGET (RIGHT)	32 SW#: 32 YELLOW TARGET (RIGHT)	40 SW#: 40 "W"	48 SW#: 48 STAR RED (UPPER RIGHT)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Last Action Hero by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 TROUGH #1 LEFT	17 SW#: 17 DROP TARGET C	25 SW#: 25 RIGHT STAND UP TOP	33 SW#: 33 LEFT TURBO BUMPER	41 SW#: 41 LEFT RETURN	49 UNUSED	57 SW#: 57 MIDDLE SCOOP LEFT
2 SW#: 2 4TH COIN	10 SW#: 10 TROUGH #2	18 SW#: 18 DROP TARGET R	26 SW#: 26 RIGHT STAND UP MIDDLE	34 SW#: 34 BOTTOM TURBO BUMPER	42 SW#: 42 RIGHT RETURN	50 UNUSED	58 SW#: 58 MIDDLE SCOOP RIGHT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #3	19 SW#: 19 DROP TARGET A	27 SW#: 27 RIGHT STAND UP BOTTOM	35 SW#: 35 RIGHT TURBO BUMPER	43 SW#: 43 LEFT OUTLANE	51 UNUSED	59 SW#: 59 SCOOP SPINNER
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #4	20 SW#: 20 DROP TARGET N	28 SW#: 28 TOP ROLLOVER LEFT	36 SW#: 36 LEFT SLINGSHOT	44 SW#: 44 RIGHT OUTLANE	52 UNUSED	60 SW#: 60 CRANE LEFT LIMIT
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #5	21 SW#: 21 DROP TARGET E	29 SW#: 29 TOP ROLLOVER MIDDLE	37 SW#: 37 RIGHT SLINGSHOT	45 SW#: 45 LEFT RAMP EXIT	53 UNUSED	61 SW#: 61 CRANE RIGHT LIMIT
6 SW#: 6 LEFT COIN	14 SW#: 14 TROUGH #6	22 SW#: 22 LEFT LOCK TOP	30 SW#: 30 TOP ROLLOVER RIGHT	38 SW#: 38 RIGHT SCOOP R.O.	46 SW#: 46 LEFT RAMP ENTER	54 SW#: 54 DROP TARGET BAR (2)	62 SW#: 62 SMART MISSILE
7 SW#: 7 SLAM TILT	15 SW#: 15 TROUGH #7 RIGHT	23 SW#: 23 LEFT LOCK BOTTOM	31 SW#: 31 RIGHT SCOOP ASSEM.	39 SW#: 39 LEFT CAPTIVE ROLLOVER	47 SW#: 47 VUK	55 SW#: 55 RIGHT CAPTIVE ROLLOVER	63 SW#: 63 LEFT FLIPPER
8 SW#: 8 LAUNCH TRIGGER	16 SW#: 16 SHOOTER LANE	24 SW#: 24 SINGLE LEFT ROLLOVER	32 SW#: 32 ANIMATED CAT TARGET	40 SW#: 40 LEFT CAPTIVE BALL TARGET	48 SW#: 48 RIPPER KICKBACK	56 SW#: 56 RIGHT TARGET CAPTIVE	64 SW#: 64 RIGHT FLIPPER

SW# number is the switch number as known to the game.

Lazer Ball by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 LEFT SPINNER	25 SW#: 25 LOWER TOP LEFT STANDUP	33 SW#: 33 UPPER RIGHT STANDUP	41 SW#: 41 RIGHT SHOOTER	49 SW#: 49 PLAYFIELD TILT	57 SW#: 57 STAR 8 ROLLOVER
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT SHOOTER	18 SW#: 18 BULL'S-EYE TARGET	26 SW#: 26 UPPER TOP LEFT STANDUP	34 SW#: 34 "B" DROP TARGET	42 SW#: 42 RIGHT SPECIAL	50 SW#: 50 STAR 1 ROLLOVER	58 SW#: 58 STAR 9 ROLLOVER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT SPECIAL	19 SW#: 19 "L" DROP TARGET	27 SW#: 27 "1" AND "2" ROLLOVER	35 SW#: 35 "A" DROP TARGET	43 SW#: 43 RIGHT INSIDE ROLLOVER	51 SW#: 51 STAR 2 ROLLOVER	59 SW#: 59 STAR 10 ROLLOVER
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT INSIDE ROLLOVER	20 SW#: 20 "A" DROP TARGET	28 SW#: 28 "3" AND "4" ROLLOVER	36 SW#: 36 "L" DROP TARGET	44 SW#: 44 RIGHT KICKER	52 SW#: 52 STAR 3 ROLLOVER	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT KICKER	21 SW#: 21 "S" DROP TARGET	29 SW#: 29 "5" AND "6" ROLLOVER	37 SW#: 37 "L" DROP TARGET (BOTTOM)	45 SW#: 45 LEFT JET BUMPER	53 SW#: 53 STAR 4 ROLLOVER	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 MIDDLE LEFT SIDE STANDUP	22 SW#: 22 "E" DROP TARGET	30 SW#: 30 "7" AND "8" ROLLOVER	38 SW#: 38 B-A-L-L DROP TARGET SERIES	46 SW#: 46 RIGHT JET BUMPER	54 SW#: 54 STAR 5 ROLLOVER	62 UNUSED
7 SW#: 7 SLAM TILT	15 UNUSED	23 SW#: 23 "R" DROP TARGET	31 SW#: 31 "9" AND "10" ROLLOVER	39 SW#: 39 B-A-L-L DROP TARGET STANDUP	47 SW#: 47 CENTER JET BUMPER	55 SW#: 55 STAR 6 ROLLOVER	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT SIDE TARGET	24 SW#: 24 L-A-S-E-R DROP TARGET SERIES	32 SW#: 32 EJECT HOLE	40 SW#: 40 RIGHT SPINNER	48 SW#: 48 "S-E-R" DROP TARGET STANDUP	56 SW#: 56 STAR 7 ROLLOVER	64 UNUSED

SW# number is the switch number as known to the game.

Lectronamo by Stern

1 SW#: 1 RIGHT OUTLANE	9 SW#: 2 RIGHT RETURN LANE	17 SW#: 3 LEFT OUTLANE	25 SW#: 4 LEFT RETURN LANE	33 SW#: 5 #1 TARGET (5-BANK)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUT-HOLE
2 SW#: 9 COIN #3 (RIGHT)	10 SW#: 10 COIN #1 (CENTER)	18 SW#: 11 COIN #2 (LEFT)	26 SW#: 12 TARGET (STAND-UP)	34 SW#: 13 #2 TARGET (5-BANK)	42 SW#: 14 #3 TARGET (3-BANK)	50 SW#: 15 SPIN-TARGET	58 SW#: 16 SLAM-TILT (3)
3 SW#: 17 ROLL-OVER BUTTON	11 SW#: 18 300 ADVANCE BONUS (3)	19 SW#: 19 10 POINTS (3)	27 UNUSED	35 SW#: 21 #3 TARGET (5-BANK)	43 SW#: 22 #2 TARGET (3-BANK)	51 UNUSED	59 SW#: 24 KICKER
4 SW#: 25 1000 ADVANCE BONUS	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 29 #4 TARGET (5-BANK)	44 SW#: 30 #3 TARGET (3-BANK)	52 UNUSED	60 UNUSED
5 SW#: 33 CENTER THUMPER	13 SW#: 34 RIGHT THUMPER	21 SW#: 35 LEFT THUMPER	29 UNUSED	37 SW#: 37 #5 TARGET (5-BANK)	45 SW#: 38 RIGHT SLING-SHOT	53 SW#: 39 LEFT SLING-SHOT	61 SW#: 40 SAUCER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Lethal Weapon 3 by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 LAUNCH TRIGGER	17 SW#: 17 LEFT 4 BANK TOP 4	25 SW#: 25 CENTER DROP TAR. LEFT	33 SW#: 33 RIGHT DROP TAR. TOP	41 SW#: 41 LEFT TOP LANE	49 SW#: 49 RAMP ENTRANCE	57 UNUSED
2 SW#: 2 4TH COIN	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT 4 BANK MID. 3	26 SW#: 26 CENTER DROP TAR. MID.	34 SW#: 34 RIGHT DROP TAR. MID.	42 SW#: 42 CENTER TOP LANE	50 SW#: 50 RAMP EXIT	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 LEFT 4 BANK MID. 2	27 SW#: 27 CENTER DROP TAR. RIGHT	35 SW#: 35 RIGHT DROP TAR. BOT.	43 SW#: 43 RIGHT TOP LANE	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 LEFT 4 BANK BOT. 1	28 SW#: 28 LEFT OUTLANE	36 SW#: 36 RIGHT OUTLANE	44 SW#: 44 LEFT TURBO BUMPER	52 SW#: 52 RIGHT 10 POINT	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT ORBIT ROLLOVER	29 SW#: 29 LEFT RETURN	37 SW#: 37 RIGHT RETURN	45 SW#: 45 CENTER TURBO BUMPER	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT ORBIT ROLLOVER	30 SW#: 30 LEFT SLINGSHOT	38 SW#: 38 RIGHT SLINGSHOT	46 SW#: 46 RIGHT TURBO BUMPER	54 SW#: 54 LEFT ORBIT R.O. BACK UP	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 UNUSED	31 SW#: 31 VUK	39 SW#: 39 LEFT TARGET STAND-UP	47 SW#: 47 LEFT SPINNER	55 SW#: 55 RIGHT ORBIT R.O. BACK UP	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 SW#: 32 RIGHT SAUCER	40 SW#: 40 LEFT SAUCER	48 SW#: 48 RIGHT SPINNER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Lightning by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 SW#: 4 OUTHOLE REFLEX	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 TARGET 9
2 SW#: 9 RT. RETURN LANE BOTTOM	10 SW#: 10 LT. RETURN LANE BOTTOM	18 SW#: 11 LOOP	26 SW#: 12 OUT LANES BOTTOM (2)	34 SW#: 13 LT. BOTTOM SLINGSHOT	42 SW#: 14 LT. TOP SLINGSHOT	50 SW#: 15 RT. BOTTOM SLINGSHOT	58 SW#: 16 RT. TOP SLINGSHOT
3 SW#: 17 RT. RETURN LANE TOP	11 SW#: 18 LT. RETURN LANE TOP	19 SW#: 19 MIDDLE DROP BANK (RIGHT)	27 SW#: 20 MIDDLE DROP BANK (MID.)	35 SW#: 21 MIDDLE DROP BANK (LEFT)	43 SW#: 22 TOP DROP BANK (RIGHT)	51 SW#: 23 TOP DROP BANK (MID.)	59 SW#: 24 TOP DROP BANK (LEFT)
4 SW#: 25 TARGET 8	12 SW#: 26 TARGET 7	20 SW#: 27 TARGET 6	28 SW#: 28 TARGET 5	36 SW#: 29 TARGET 4	44 SW#: 30 TARGET 3	52 SW#: 31 TARGET 2	60 SW#: 32 TARGET 1
5 SW#: 33 OUT 3 TO CLOSEST LANE	13 SW#: 34 OUT 2 MIDDLE OUTHOLE	21 SW#: 35 OUT 1 LEFT OUTHOLE	29 SW#: 36 TRAP 2 (RIGHT)	37 SW#: 37 TRAP 1 (LEFT)	45 SW#: 38 LEFT DROP BANK (RIGHT)	53 SW#: 39 LEFT DROP BANK (MID.)	61 SW#: 40 LEFT DROP BANK (LEFT)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

LightsCameraAction by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT ADVANCE BUTTON	41 SW#: 5 RIGHT BUTTON ADVANCE	49 SW#: 6 CENTER DROP TARGET #1	57 SW#: 7 RIGHT DROP TARGET #1
2 SW#: 10 TOP LEFT POP BUMPER	10 SW#: 11 TOP RIGHT POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 LEFT OUTSIDE ROLLOVER	50 SW#: 16 CENTER DROP TARGET #2	58 SW#: 17 RIGHT DROP TARGET #2
3 SW#: 20 LEFT SPOT #1 TARGET "T"	11 SW#: 21 TOP LEFT HOLE	19 SW#: 22 TOP LEFT SPOT TARGET	27 SW#: 23 LEFT RETURN ROLLOVER	35 SW#: 24 RIGHT RETURN ROLLOVER	43 SW#: 25 RIGHT OUTSIDE ROLLOVER	51 SW#: 26 CENTER DROP TARGET #3	59 SW#: 27 RIGHT DROP TARGET #3
4 SW#: 30 LEFT SPOT #2 TARGET "O"	12 SW#: 31 TOP RIGHT HOLE	20 SW#: 32 TOP RIGHT SPOT TARGET	28 SW#: 33 OUTHOLE	36 SW#: 34 3RD POSITION TROUGH	44 SW#: 35 RIGHT SHOOTER ROLLOVER	52 SW#: 36 RIGHT SPOT TARGET #1	60 SW#: 37 RIGHT DROP TARGET #4
5 SW#: 40 LEFT SPOT #3 TARGET "W"	13 SW#: 41 BOTTOM LEFT HOLE	21 SW#: 42 SPINNER	29 UNUSED	37 UNUSED	45 SW#: 45 LOOP	53 SW#: 46 RIGHT SPOT TARGET #2	61 SW#: 47 RIGHT SPOT TARGET #5
6 SW#: 50 LEFT SPOT #4 TARGET "N"	14 SW#: 51 BOTTOM RIGHT HOLE	22 SW#: 52 STAR ROLLOVER	30 UNUSED	38 UNUSED	46 UNUSED	54 SW#: 56 RIGHT SPOT TARGET #3	62 SW#: 57 RIGHT DROP TARGET #6
7 SW#: 60 LOWER LEFT FLIPPER	15 SW#: 61 LOWER RIGHT FLIPPER	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Locomotion by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 CONTACTS	33 SW#: 32 INNER LEFT C CANAL AND FIXED TARGET	41 SW#: 40 TOP CENTRAL ROLLOVER
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LEFT FLAP CONTACTS	26 SW#: 25 SPECIAL SPINNING CONTACT	34 SW#: 33 3RD. STATION BUTTON	42 SW#: 41 TOP YELLOW LEFT BUTTON
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 RIGHT FLAP CONTACTS	27 SW#: 26 1ST. MOVING TARGET	35 SW#: 34 FIXED B TARGET	43 SW#: 42 3RD. MOVING TARGET TOP RIGHT BANK
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 RIGHT INNER CANAL TARGET	28 SW#: 27 2ND. MOVING TARGET BOTTOM LEFT BANK	36 SW#: 35 2ND. STATION BUTTON	44 SW#: 43 2ND. MOVING TARGET TOP RIGHT BANK
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 RIGHT CANAL CENTRAL TARGET	29 SW#: 28 3RD. MOVING TARGET BOTTOM LEFT BANK	37 SW#: 36 FIXED A TARGET	45 SW#: 44 1ST. MOVING TARGET TOP RIGHT BANK
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 RIGHT OUTER EXIT CANAL	30 SW#: 29 4TH. MOVING TARGET BOTTOM LEFT BANK	38 SW#: 37 1ST. STATION BUTTON	46 SW#: 45 3RD. MOVING TARGET TOP LEFT BANK
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 LEFT OUTER EXIT CANAL	31 SW#: 30 BOTTOM LEFT POP CONTACT	39 SW#: 38 BOTTOM RIGHT POP CONTACT	47 SW#: 46 2ND. MOVING TARGET TOP LEFT BANK
8 UNUSED	16 UNUSED	24 SW#: 23 CONTROL SWITCH BACKGROUND SOUND	32 SW#: 31 TOP CENTRAL POP CONTACT	40 SW#: 39 TOP YELLOW RIGHT BUTTON	48 SW#: 47 1ST. MOVING TARGET TOP LEFT BANK

SW# number is the switch number as known to the game.

Lost In Space by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 GREEN 3-BANK TOP	25 SW#: 25 RED 3-BANK LT	33 SW#: 33 YELLOW TOP 3-BANK	41 SW#: 41 U'TROUGH: POP EXIT HOLE	49 SW#: 49 LEFT SPINNER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 GREEN 3-BANK MID	26 SW#: 26 RED 3-BANK MID	34 SW#: 34 YELLOW MID 3-BANK	42 UNUSED	50 SW#: 50 RIGHT SPINNER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 GREEN 3-BANK BOT	27 SW#: 27 RED 3-BANK RT	35 SW#: 35 YELLOW BOT 3-BANK	43 UNUSED	51 SW#: 51 LEFT ORBIT	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 LEFT RAMP ENTER	28 UNUSED	36 SW#: 36 TOP LT TURBO BUMPER	44 UNUSED	52 SW#: 52 RIGHT ORBIT	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 LEFT RAMP EXIT	29 UNUSED	37 SW#: 37 TOP RT TURBO BUMPER	45 SW#: 45 U-TROUGH: ROBOT	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 UNUSED	30 SW#: 30 LEFT TOP LANE	38 SW#: 38 BOT LT TURBO BUMPER	46 SW#: 46 CENTER SUPER VUK	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 UNUSED	31 SW#: 31 MIDDLE TOP LANE	39 SW#: 39 BOT CTR TURBO BUMPER	47 SW#: 47 TOP RT VUK	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 UNUSED	32 SW#: 32 RIGHT TOP LANE	40 SW#: 40 BOT RT TURBO BUMPER	48 SW#: 48 BOT RT SUPER VUK	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Lost World by Bally

1 SW#: 1 10 PT. RIGHT REBOUND (2)	9 SW#: 2 10 PT. LEFT REBOUND (2)	17 SW#: 3 RIGHT OUTLANE	25 SW#: 4 LEFT OUTLANE	33 SW#: 5 TOP R.O. & BUTTON RT. TOP TAP	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 SPINNER	11 UNUSED	19 UNUSED	27 UNUSED	35 UNUSED	43 SW#: 22 DRAGON'S DEN TARGET	51 SW#: 23 LEFT SAUCER	59 SW#: 24 RIGHT SAUCER
4 SW#: 25 RIGHT FEEDER FLIPPER LANE	12 SW#: 26 LEFT FLIPPER FEEDER LANE	20 SW#: 27 "F" TARGET	28 SW#: 28 "E" TARGET	36 SW#: 29 "D" TARGET	44 SW#: 30 "C" TARGET	52 SW#: 31 "B" TARGET	60 SW#: 32 "A" TARGET
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER-BUMPER	53 SW#: 39 RIGHT THUMPER-BUMPER	61 SW#: 40 LEFT THUMPER-BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Lucky Seven by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 TOP ADVANCE BONUS TARGET	17 SW#: 17 BOTH DROP TARGETS DOWN	25 UNUSED	33 SW#: 33 RIGHT JET BUMPER	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 ADVANCE BONUS ROLLOVER	18 SW#: 18 BOTTOM BONUS ADVANCE TARGET	26 UNUSED	34 SW#: 34 LEFT JET BUMPER	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT REEL ROLLOVER	19 SW#: 19 LEFT OUTSIDE ROLLOVER	27 SW#: 27 LEFT CLOVER	35 SW#: 35 LEFT REEL TARGET	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 CENTER REEL ROLLOVER	20 SW#: 20 LEFT INSIDE ROLLOVER	28 SW#: 28 THREE SEVENS	36 SW#: 36 RIGHT KICKER	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 RIGHT REEL ROLLOVER	21 SW#: 21 RIGHT INSIDE ROLLOVER	29 SW#: 29 THREE HORSESHOES	37 SW#: 37 TOP LEFT UP STAND	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 SPINNER	22 SW#: 22 RIGHT OUTSIDE ROLLOVER	30 SW#: 30 THREE DIAMONDS	38 SW#: 38 BOTTOM RIGHT STAND UP	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT DROP TARGET	23 SW#: 23 OUTHOLE	31 SW#: 31 PLAYFIELD TILT	39 SW#: 39 CENTER REEL TARGET	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT DROP TARGET	24 SW#: 24 LEFT KICKER	32 UNUSED	40 SW#: 40 RIGHT REEL TARGET	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Magic by Stern

1 SW#: 1 COIN CHUTE	9 SW#: 2 COIN CHUTE	17 SW#: 3 COIN CHUTE	25 SW#: 4 SPIN TARGET (RIGHT)	33 SW#: 5 SPIN TARGET (LEFT)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 UNUSED	10 SW#: 10 ROLL-OVER BUTTON (LOWER)	18 UNUSED	26 SW#: 12 CENTER THUMPER	34 SW#: 13 RIGHT SLING-SHOT	42 SW#: 14 LEFT SLING-SHOT	50 SW#: 15 RIGHT THUMPER	58 SW#: 16 LEFT THUMPER
3 SW#: 17 RIGHT OUT-LANE	11 SW#: 18 ROLL-OVER BUTTON (LEFT)	19 SW#: 19 RETURN LANES (RIGHT & LEFT)	27 SW#: 20 UPPER ROLL-OVER (CENTER)	35 SW#: 21 #1 STAND-UP TARGET (RIGHT)	43 SW#: 22 #2 STAND-UP TARGET (CENTER)	51 SW#: 23 UPPER & #1 STAND-UP TARGET (RIGHT)	59 SW#: 24 #2 STAND-UP TARGET (LEFT)
4 UNUSED	12 SW#: 26 KICKER (SAUCER)	20 SW#: 27 (2) 10-PTS & CHANGE	28 SW#: 28 #3 DROP TARGET	36 SW#: 29 #3 DROP TARGET	44 SW#: 30 #2 DROP TARGET	52 SW#: 31 #1 DROP TARGET	60 SW#: 32 #1 DROP TARGET
5 SW#: 33 OUT-HOLE	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 SW#: 39 LEFT OUTER LANE	61 SW#: 40 ROLL-OVER BUTTON (CENTER)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Mario Andretti by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 UNUSED
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 TOP POP BUMPER	18 SW#: 12 RIGHT POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 TROUGH	50 UNUSED	58 UNUSED
3 SW#: 20 SPINNING CAR UNIT #1	11 SW#: 21 SPINNING CAR UNIT #2	19 SW#: 22 SPINNING CAR UNIT #3	27 SW#: 23 SHOOTER LANE ROLLOVER	35 SW#: 24 TOP UPKICKER	43 SW#: 25 OUTHOLE	51 UNUSED	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Mars God of War by Gottlieb

1 UNUSED	9 UNUSED	17 SW#: 20 "M" ROLLOVER	25 SW#: 30 "A" (2) ROLLOVERS	33 SW#: 40 "R" ROLLOVER	41 SW#: 50 "S" ROLLOVER	49 SW#: 60 LEFT OUTLANE ROLLOVER	57 SW#: 70 RIGHT OUTLANE ROLLOVER
2 UNUSED	10 UNUSED	18 SW#: 21 #1 RIGHT DROP TARGET	26 SW#: 31 #2 RIGHT DROP TARGET	34 SW#: 41 #3 RIGHT DROP TARGET	42 SW#: 51 #4 RIGHT DROP TARGET	50 SW#: 61 RIGHT HOLE WARBASE	58 SW#: 71 RIGHT EXTRA BALL TARGET
3 UNUSED	11 UNUSED	19 SW#: 22 #1 CENTER DROP TARGET	27 SW#: 32 #2 CENTER DROP TARGET	35 SW#: 42 #3 CENTER DROP TARGET	43 SW#: 52 #4 CENTER DROP TARGET	51 SW#: 62 LEFT WARBASE HOLE	59 SW#: 72 EXTRA BALL ROLLOVER
4 UNUSED	12 UNUSED	20 SW#: 23 LEFT TOP POP BUMPER	28 SW#: 33 RIGHT TOP POP BUMPER	36 SW#: 43 LEFT BOTTOM POP BUMPER	44 SW#: 53 RIGHT BOTTOM POP BUMPER	52 SW#: 63 RIGHT LAUNCH LANE	60 SW#: 73 10 POINT SWITCHES (11)
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 34 RIGHT FLIPPER	37 SW#: 44 TROUGH	45 SW#: 54 SPIN TARGET	53 SW#: 64 OUTHOLE	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 SW#: 55 BOTTOM "R" ROLLOVER	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Mary Shelleys Frankenstein by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 #1 (LEFT) BALL TROUGH	17 SW#: 17 BOTTOM LEFT 2-BANK STAND-UP	25 SW#: 25 MID 1-BANK STAND-UP "MOVE JACKPOT"	33 SW#: 33 LEFT ORBIT ROLLOVER BOTTOM	41 SW#: 41 TOP TURBO BUMPER	49 UNUSED	57 UNUSED
2 SW#: 2 4TH COIN	10 SW#: 10 #2 BALL TROUGH	18 SW#: 18 BOTTOM RIGHT 2-BANK STAND-UP "R"	26 SW#: 26 RAMP 1-BANK STAND-UP LEFT "T"	34 SW#: 34 LEFT ORBIT ROLLOVER TOP	42 SW#: 42 MID. LEFT TURBO BUMPER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 #3 BALL TROUGH	19 SW#: 19 MIDDLE BOT. 3-BANK STAND-UP "A"	27 SW#: 27 RAMP 1-BANK STAND-UP RIGHT "E"	35 SW#: 35 RIGHT ORBIT ROLLOVER TOP	43 SW#: 43 MID. RIGHT TURBO BUMPER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 #4 BALL TROUGH	20 SW#: 20 MIDDLE MID. 3-BANK STAND-UP "N"	28 SW#: 28 RIGHT 2-BANK STAND-UP TOP "I"	36 SW#: 36 RIGHT ORBIT ROLLOVER BOTTOM	44 SW#: 44 BOTTOM TURBO BUMPER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 #5 BALL TROUGH	21 SW#: 21 MIDDLE TOP 3-BANK STAND-UP "K"	29 SW#: 29 RIGHT 2-BANK STAND-UP BOT. "N"	37 SW#: 37 LEFT OUTLANE ROLLOVER	45 SW#: 45 RAMP GATE ENTRANCE	53 SW#: 53 "NORTH POLE" VUK	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 #6 BALL TROUGH	22 SW#: 22 TOP 3-BANK STAND-UP LEFT "E"	30 UNUSED	38 SW#: 38 LEFT RETURN LANE ROLLOVER	46 SW#: 46 RAMP EXIT GATE	54 SW#: 54 "INGOLSTADT" RT. ORBIT SPINNER	62 SW#: 62 "THE SWITCH" LEVER
7 SW#: 7 SLAM TILT	15 SW#: 15 #7 (RIGHT) BALL TROUGH	23 SW#: 23 TOP 3-BANK STAND-UP MID. "N"	31 SW#: 31 SARCOPHAGUS UPPER SCOOP	39 SW#: 39 RT. RETURN LANE ROLLOVER	47 SW#: 47 LEFT SLINGSHOT	55 SW#: 55 "ICE CAVE" ABOVE BALL EJECT	63 SW#: 63 LEFT FLIPPER LOWER
8 SW#: 8 EXTRA BALL BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 TOP 3-BANK STAND-UP RIGHT "S"	32 SW#: 32 GENEVA LOWER SCOOP	40 SW#: 40 RIGHT OUTLANE ROLLOVER	48 SW#: 48 RIGHT SLINGSHOT	56 SW#: 56 MINI-ORBIT ROLLOVER BY EJECT	64 SW#: 64 RIGHT FLIPPER UPR./LWR.

SW# number is the switch number as known to the game.

Mata Hari by Bally

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II IF (MIDDLE, USED)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 RT. DROP D TARGET (BOTTOM)	11 SW#: 18 RT. DROP C TARGET	19 SW#: 19 RT. DROP B TARGET	27 SW#: 20 RT. DROP A TARGET (TOP)	35 SW#: 21 LEFT DROP D TARGET (BOTTOM)	43 SW#: 22 LEFT DROP C TARGET	51 SW#: 23 LEFT DROP B TARGET	59 SW#: 24 LEFT DROP A TARGET (TOP)
4 SW#: 25 RIGHT FEEDER FLIPPER LANE	12 SW#: 26 LEFT FLIPPER FEEDER LANE	20 SW#: 27 10 PT. DROP TARGET REBOUND (2)	28 SW#: 28 RIGHT 'B' LANE	36 SW#: 29 LEFT 'A' LANE	44 SW#: 30 TOP 'B' LANE	52 SW#: 31 TOP 'A' LANE	60 SW#: 32 TOP SAUCER
5 SW#: 33 RIGHT OUTLANE	13 SW#: 34 LEFT OUTLANE	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 BOTTOM RIGHT THUMPER BUMPER	45 SW#: 38 BOTTOM LEFT THUMPER BUMPER	53 SW#: 39 TOP RIGHT THUMPER BUMPER	61 SW#: 40 TOP LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Maverick by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LOWER LEFT 5-BANK D.T. BOTTOM	25 SW#: 25 UPPER LEFT 3 5-BANK POKES BOTTOM OF SPADES	33 SW#: 33 RIGHT 4-BANK SPADES 9 OF SPADES	41 SW#: 41 LEFT TURBO BUMPER	49 SW#: 49 RIGHT OUTLANE	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN	10 UNUSED	18 SW#: 18 LOWER LEFT J 5-BANK D.T. LWR. MID. OF SPADES	26 SW#: 26 UPPER LEFT 4 5-BANK SWR. MID. OF SPADES	34 SW#: 34 RIGHT 4-BANK SPADES 9 OF DIAMONDS	42 SW#: 42 CENTER TURBO BUMPER	50 SW#: 50 RIGHT RAMP LEFT STAND-UP TARGET	58 SW#: 58 RIGHT RAMP RIGHT STAND-UP TARGET
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 #1 (LEFT) BALL TROUGH	19 SW#: 19 LOWER LEFT Q 5-BANK D.T. MIDDLE OF SPADES	27 SW#: 27 UPPER LEFT 5 5-BANK SWR. MIDDLE OF DIAMONDS	35 SW#: 35 RIGHT 4-BANK SPADES 9 OF CLUBS	43 SW#: 43 RIGHT TURBO BUMPER	51 SW#: 51 RIGHT SLINGSHOT	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN	12 SW#: 12 #2 BALL TROUGH	20 SW#: 20 LOWER LEFT K 5-BANK D.T. UPR. MID. OF SPADES	28 SW#: 28 UPPER LEFT 6 5-BANK SWR. MID. OF SPADES	36 SW#: 36 RIGHT 4-BANK SPADES 9 OF HEARTS	44 SW#: 44 RIGHT RAMP ENTER GATE	52 SW#: 52 RT RAMP KICK BIG BOTTOM	60 SW#: 60 RIGHT ORBIT ROLLOVER SW.
5 SW#: 5 CENTER COIN	13 SW#: 13 #3 BALL TROUGH	21 SW#: 21 LOWER LEFT A 5-BANK D.T. TOP OF SPADES	29 SW#: 29 UPPER LEFT 7 5-BANK SWR. D.T. TOP OF SPADES	37 SW#: 37 TOP LANE LEFT	45 SW#: 45 PADDLE WHEEL FRONT LOCK OPTO	53 SW#: 53 RT RAMP SHOT SKILL 1	61 SW#: 61 LEFT ORBIT ROLLUNDER
6 SW#: 6 LEFT COIN	14 SW#: 14 #4 BALL TROUGH	22 SW#: 22 CENTER D.T. 3-BANK LEFT 8 OF CLUBS	30 SW#: 30 CAPTIVE BALL STAND-UP TARGET	38 SW#: 38 TOP LANE MID LT	46 SW#: 46 PADDLE WHEEL BACK LOCK OPTO	54 SW#: 54 RT RAMP SHOT SKILL 2	62 SW#: 62 LEFT RETURN LANE
7 SW#: 7 SLAM TILT	15 SW#: 15 #5 (RIGHT) BALL TROUGH	23 SW#: 23 CENTER D.T. 5-BANK MIDDLE 8 OF DIAMONDS	31 SW#: 31 VUK	39 SW#: 39 TOP LANE MID RT	47 SW#: 47 RIGHT RETURN LANE	55 SW#: 55 RT RAMP SHOT SKILL 3	63 SW#: 63 LEFT FLIPPER LOWER
8 SW#: 8 EXTRA BALL BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 CENTER D.T. 3-BANK RIGHT 8 OF HEARTS	32 SW#: 32 UPPER RT RAMP EXIT GATE	40 SW#: 40 TOP LANE RIGHT	48 UNUSED	56 SW#: 56 PADDLE WHEEL ENTRANCE (ON P/F) OPTO	64 SW#: 64 RIGHT FLIPPER UPR./LWR.

SW# number is the switch number as known to the game.

Medieval Madness by Williams

1 SW#: 11 LAUNCH BALL	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 MOAT ENTER	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 LEFT RAMP ENTER	49 SW#: 71 RIGHT BANK TOP	57 UNUSED
2 SW#: 12 CATAPULT TARGET	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL	26 UNUSED	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 LEFT RAMP EXIT	50 SW#: 72 RIGHT BANK MIDDLE	58 UNUSED
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 TROUGH BALL 2	27 UNUSED	35 SW#: 53 LEFT JET BUMPER	43 SW#: 63 RIGHT RAMP ENTER	51 SW#: 73 RIGHT BANK BOTTOM	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 CASTLE LOCK	36 SW#: 54 BOTTOM JET BUMPER	44 SW#: 64 RIGHT RAMP EXIT	52 SW#: 74 LEFT TROLL UP	60 UNUSED
5 SW#: 15 LEFT TROLL TARGET	13 SW#: 25 RIGHT TROLL TARGET	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 LEFT TROLL (UNDER PLAYFIELD)	37 SW#: 55 RIGHT JET BUMPER	45 SW#: 65 LEFT LOOP LOW	53 SW#: 75 RIGHT TROLL UP	61 UNUSED
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 LEFT POPPER	30 SW#: 46 RIGHT TROLL (UNDER PLAYFIELD)	38 SW#: 56 DRAW-BRIDGE UP	46 SW#: 66 LEFT LOOP HIGH	54 UNUSED	62 UNUSED
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 CASTLE GATE	31 SW#: 47 LEFT TOP LANE	39 SW#: 57 DRAW-BRIDGE DOWN	47 SW#: 67 RIGHT LOOP LOW	55 UNUSED	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 SW#: 28 RIGHT EJECT	24 SW#: 38 CATAPULT	32 SW#: 48 RIGHT TOP LANE	40 SW#: 58 TOWER EXIT	48 SW#: 68 RIGHT LOOP HIGH	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Medusa by Bally

1 SW#: 1 4 DROP D TARGET (BOTTOM)	9 SW#: 2 4 DROP C TARGET	17 SW#: 3 4 DROP B TARGET	25 SW#: 4 4 DROP A TARGET (TOP)	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 UNUSED	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LEFT SIDE TOP KICKER	34 SW#: 13 LEFT SIDE MIDDLE TARGET	42 SW#: 14 LEFT SIDE BOTTOM TARGET	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 CABINET POST BUTTON	11 SW#: 18 2, 10 POINT TARGET REBOUND	19 SW#: 19 SAUCER SAUCER	27 SW#: 20 #1 SHOOTER LANE ROLLOVER BUTTON	35 SW#: 21 #2 SHOOTER LANE ROLLOVER BUTTON	43 SW#: 22 #3 SHOOTER LANE ROLLOVER BUTTON	51 SW#: 23 #4 SHOOTER LANE ROLLOVER BUTTON	59 SW#: 24 #5 SHOOTER LANE ROLLOVER BUTTON
4 SW#: 25 RIGHT AND LEFT LOWER GATE	12 SW#: 26 RIGHT TOP GATE	20 SW#: 27 TOP RIGHT BACK TARGET	28 SW#: 28 LEFT TOP GATE	36 SW#: 29 TOP LEFT BACK TARGET	44 SW#: 30 TOP MIDDLE BACK TARGET	52 SW#: 31 LEFT & RIGHT OUTLANE R.O. BUTTON	60 SW#: 32 LEFT & RIGHT OUTLANE
5 SW#: 33 SPINNER	13 SW#: 34 TOP RIGHT SLINGSHOT	21 SW#: 35 BOTTOM RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 RIGHT TOP THUMPER BUMPER	45 SW#: 38 LEFT TOP THUMPER BUMPER	53 SW#: 39 RIGHT SIDE THUMPER BUMPER	61 SW#: 40 LEFT BOTTOM THUMPER BUMPER
6 SW#: 41 MOVABLE END FLIPPER OF STROKE	14 SW#: 42 #7 TOP DROP TARGET (RIGHT)	22 SW#: 43 #6 TOP DROP TARGET	30 SW#: 44 #5 TOP DROP TARGET	38 SW#: 45 #4 TOP DROP TARGET	46 SW#: 46 #3 TOP DROP TARGET	54 SW#: 47 #2 TOP DROP TARGET	62 SW#: 48 #1 TOP DROP TARGET (LEFT)
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

A FEW BALLY GAMES HAVE A 5TH STROBE (STROBE5) COMING FROM A DIFFERENT MPU HEADER THAT ALLOWS FOR AN ADDITIONAL 8 SWITCHES (SWITCHES 41-48). THIS IS NOT PART OF THE NORMAL WIRE HARNESS USED WITH THE 64 SWITCH MATRIX TESTER SINCE THIS IS ONLY A VERY LIMITED NUMBER OF GAMES. SWITCHES 41-48 WOULD NEED TO BE MANUALLY TESTED ON THE GAME. SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Memory Lane by Stern

1 SW#: 1 TARGET #3	9 SW#: 2 TARGET #2	17 SW#: 3 TARGET #1	25 SW#: 4 LEFT OUT LANE	33 SW#: 5 LEFT RETURN LANE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN #3 (RIGHT)	10 SW#: 10 COIN #1 (CENTER)	18 SW#: 11 COIN #2 (LEFT)	26 SW#: 12 RIGHT OUT LANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 LEFT SPINNER	50 SW#: 15 RIGHT SPINNER	58 SW#: 16 SLAM (3)
3 UNUSED	11 SW#: 18 50 POINTS & CHANGE	19 SW#: 19 10 POINTS & CHANGE	27 SW#: 20 PIN #9	35 SW#: 21 PIN #7	43 SW#: 22 PIN #5	51 SW#: 23 PIN #3	59 SW#: 24 PIN #1
4 SW#: 25 SPECIAL #3	12 SW#: 26 SPECIAL #2	20 SW#: 27 SPECIAL #1	28 SW#: 28 PIN #10	36 SW#: 29 PIN #8	44 SW#: 30 PIN #6	52 SW#: 31 PIN #4	60 SW#: 32 PIN #2
5 UNUSED	13 SW#: 34 RIGHT THUMPER	21 SW#: 35 LEFT THUMPER	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 10 - POINTS	53 SW#: 39 LEFT SAUCER	61 SW#: 40 CENTER SAUCER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Metallica by Stern

1 SW#: 1 L. RETURN LANE (R)	9 UNUSED	17 SW#: 33 GRAVE MARKER DN	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 18 TROUGH #4 (L)	18 SW#: 34 GRAVE MARKER UP	26 SW#: 50 L. RAMP EXIT	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 FUEL LANE ROLLOVER	11 SW#: 19 TROUGH #3	19 SW#: 35 ELECTRIC CHAIR S.U.	27 SW#: 51 RIGHT EJECT	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 FUEL LANE STANDUP	12 SW#: 20 TROUGH #2	20 SW#: 36 GRAVE LANE S.U. (L)	28 SW#: 52 GRAVE MARKER OPTO	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 GRAVE LANE S.U. (R)	29 SW#: 53 ELECTRIC CHAIR OPTO	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH JAM	22 SW#: 38 L. LOOP SPINNER	30 SW#: 54 SNAKE EJECT	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 FUEL STANDUP (BOT)	15 SW#: 23 SHOOTER LANE	23 SW#: 39 R. LOOP SPINNER	31 SW#: 55 SNAKE JAW OPEN	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 R. RAMP (L) STANDUP	32 SW#: 56 SNAKE LATCH	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Metallica by Stern

Bank 2

1 SW#: 9 FUEL STANDUP (TOP)	9 SW#: 25 LEFT RETURN LANE (L)	17 SW#: 41 R. RAMP (R) STANDUP	25 SW#: 57 COFFIN OPTO 1 BOT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 CAPTIVE BALL	26 SW#: 58 COFFIN OPTO 2 MID	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 LEFT LOOP	27 SW#: 59 COFFIN OPTO 3 TOP	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 LEFT TOP LANE	28 SW#: 60 DROP TARGET (BOT)	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 RIGHT TOP LANE	29 SW#: 61 DROP TARGET (MID)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 30 LEFT POP BUMPER	22 SW#: 46 RIGHT LOOP	30 SW#: 62 DROP TARGET (TOP)	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 SW#: 47 R. RAMP EXIT	31 SW#: 63 COFFIN MAGNET	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 UNUSED	32 SW#: 64 COFFIN DN MAGNET	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Meteor by Stern

1 SW#: 1 COIN CHUTE	9 SW#: 2 COIN CHUTE	17 SW#: 3 COIN CHUTE	25 SW#: 4 STAND-UP TARGET	33 SW#: 5 SPIN-TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 RT. 3-BANK (TOP TARGET)	10 SW#: 10 RT. 3-BANK (LOWER TARGET)	18 SW#: 11 RT. 3-BANK (MID. TARGET)	26 SW#: 12 BUMPER (UPPER RIGHT)	34 SW#: 13 BUMPER LEFT) (UPPER	42 SW#: 14 THUMPER-BUMPER	50 SW#: 15 RIGHT SLING-SHOT	58 SW#: 16 LEFT SLING-SHOT
3 UNUSED	11 UNUSED	19 SW#: 19 TOP LEFT 3-BANK (LOWER TARGET)	27 SW#: 20 TOP LEFT 3-BANK (MID. TARGET)	35 SW#: 21 TOP LEFT 3-BANK (TOP TARGET)	43 SW#: 22 LOWER LFT. 3-BANK (TOP TARGET)	51 SW#: 23 LOWER LFT. 3-BANK (LOWER TARGET)	59 SW#: 24 LOWER LFT. 3-BANK (MID. TARGET)
4 UNUSED	12 UNUSED	20 SW#: 27 6-BANK "R" TARGET	28 SW#: 28 6-BANK "O" TARGET	36 SW#: 29 6-BANK "E" TARGET	44 SW#: 30 6-BANK "T" TARGET	52 SW#: 31 6-BANK "E" TARGET	60 SW#: 32 6-BANK "M" TARGET
5 SW#: 33 OUT-HOLE	13 SW#: 34 RIGHT OUT-LANE	21 SW#: 35 LEFT OUT-LANE	29 SW#: 36 RIGHT RETURN LANE	37 SW#: 37 LEFT RETURN LANE	45 SW#: 38 ROLL-OVER BUTTON (UPPER)	53 SW#: 39 ROLL-OVER BUTTON (CENTER)	61 SW#: 40 ROLL-OVER BUTTON (LOWER)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Millionaire by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 B (GREEN)	25 SW#: 25 M (GREEN)	33 SW#: 33 BALL TROUGH #1 (LWR RIGHT)	41 SW#: 41 ENTER, TOP KICKBIG	49 SW#: 49 RIGHT LOCK	57 SW#: 57 LEFT SLING (SCORING)
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LIGHTS CASH HELD	18 SW#: 18 A (GREEN)	26 SW#: 26 O (GREEN)	34 SW#: 34 BALL TROUGH #2	42 SW#: 42 IN, TOP KICKBIG	50 SW#: 50 LEFT JET BUMPER	58 SW#: 58 RIGHT SLING (SCORING)
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT OUTLANE	19 SW#: 19 N (GREEN)	27 SW#: 27 N (GREEN)	35 UNUSED	43 SW#: 43 IN, CENTER KICKBIG	51 SW#: 51 RIGHT JET BUMPER	59 SW#: 59 10 POINTS
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 RIGHT OUTLANE	20 SW#: 20 K (GREEN)	28 SW#: 28 E (GREEN)	36 SW#: 36 OUTHOLE	44 SW#: 44 ENTER, CENTER KICKBIG	52 SW#: 52 BOTTOM JET BUMPER	60 SW#: 60 RIGHT KICKBIG
5 SW#: 5 CENTER COIN CHUTE	13 UNUSED	21 UNUSED	29 SW#: 29 Y (GREEN)	37 SW#: 37 LEFT LANE CHANGE	45 SW#: 45 \$40,000, C/B SPIN	53 SW#: 53 \$100,000, C/B SPIN	61 SW#: 61 RT. EXTRA BALL, C/B SPIN
6 SW#: 6 LEFT COIN CHUTE	14 UNUSED	22 SW#: 22 SILVER/GOLD	30 SW#: 30 ADVANCE TARGET	38 SW#: 38 RIGHT LANE CHANGE	46 SW#: 46 LEFT C/B MULTI-BALL, SPIN	54 SW#: 54 TOP SPECIAL, C/B SPIN	62 SW#: 62 \$20,000, C/B SPIN
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT RETURN LANE	23 UNUSED	31 SW#: 31 LEFT EJECT HOLE	39 SW#: 39 TOP DROP TARGET OPTO	47 SW#: 47 LEFT EXTRA BALL, C/B SPIN	55 SW#: 55 \$10,000, C/B SPIN	63 SW#: 63 \$30,000, C/B SPIN
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT RETURN LANE	24 SW#: 24 BALL SHOOTER LANE	32 SW#: 32 RIGHT EJECT HOLE	40 SW#: 40 BOTTOM DROP TARGET OPTO	48 SW#: 48 \$50,000, C/B SPIN	56 SW#: 56 RT. C/B SPIN MULTI-BALL,	64 SW#: 64 BOTTOM C/B SPECIAL, SPIN

SW# number is the switch number as known to the game.

Monday Night Football by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 A LANE	33 SW#: 33 LEFT BANK 1	41 SW#: 41 RIGHT BANK 1	49 SW#: 49 U TARGET	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 B LANE	34 SW#: 34 LEFT BANK 2	42 SW#: 42 RIGHT BANK 2	50 SW#: 50 P TARGET	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 C LANE	35 SW#: 35 LEFT BANK 3	43 SW#: 43 RIGHT BANK 3	51 SW#: 51 LEFT RAMP BOTTOM	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2	20 SW#: 20 RIGHT RETURN	28 UNUSED	36 SW#: 36 LEFT SPINNER	44 SW#: 44 LEFT RAMP TOP	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 KICK-OFF 10 YARDS	37 SW#: 37 LEFT VUK	45 SW#: 45 RIGHT RAMP	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 KICK-OFF 20 YARDS	38 SW#: 38 RIGHT SPINNER	46 SW#: 46 LEFT POP BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 RAMP UP	31 SW#: 31 KICK-OFF 30 YARDS	39 SW#: 39 RIGHT EJECT	47 SW#: 47 CENTER POP BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 RAMP DOWN	32 SW#: 32 KICK-OFF 40 YARDS	40 UNUSED	48 SW#: 48 RIGHT POP BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Monopoly by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 SW#: 9 CHANCE SCOOP	17 SW#: 17 LEFT TOP (A) LANE	25 SW#: 25 RIGHT ORBIT	33 UNUSED	41 SW#: 41 LOWER BOTTOM POP	49 SW#: 49 UPPER LEFT POP	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 RAILROAD RAMP	18 SW#: 18 MIDDLE TOP LANE (B)	26 SW#: 26 ELECTRIC COMPANY	34 SW#: 34 BANK OPTO 1 (L)	42 SW#: 42 LOWER RIGHT POP	50 SW#: 50 UPPER RIGHT POP	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH	19 SW#: 19 RIGHT TOP LANE (C)	27 SW#: 27 DICE EJECT LANE	35 SW#: 35 BANK OPTO 2	43 SW#: 43 LOWER LEFT POP	51 SW#: 51 UPPER BOTTOM POP	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 LOCKUP 1 (TOP)	28 SW#: 28 LEFT ORBIT	36 SW#: 36 BANK OPTO 3	44 SW#: 44 100K STANDUP	52 SW#: 52 DICE EJECT	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 LOCKUP 2	29 SW#: 29 WATERWORKS EJECT	37 SW#: 37 BANK OPTO 4 (R)	45 SW#: 45 SPINNER	53 UNUSED	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 LOCKUP 3 (BOTTOM)	30 SW#: 30 WWORKS MINI FLIPPER	38 SW#: 38 COP DROP TARGET	46 SW#: 46 COP STANDUP X2	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 UNUSED	31 SW#: 31 CENTER RAMP	39 SW#: 39 LEFT RAMP MID	47 SW#: 47 FREE PARKING	55 SW#: 55 SLAM TILT	63 UNUSED
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 UNUSED	32 UNUSED	40 UNUSED	48 SW#: 48 RIGHT RAMP	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Monster Bash by Williams

1 SW#: 11 LAUNCH BUTTON	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 UNUSED	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 LEFT LOOP LOW	49 SW#: 71 RIGHT RAMP ENTER	57 SW#: 81 UP/DOWN BANK UP
2 SW#: 12 DRACULA TOP STANDUP	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 LEFT FLIPPER OPTO	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 LEFT LOOP HIGH	50 SW#: 72 RIGHT RAMP EXIT	58 SW#: 82 UP/DOWN BANK DOWN
3 SW#: 13 START BUTTON	11 SW#: 23 TOMB TREASURE	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 RIGHT OPTO FLIPPER	35 SW#: 53 LEFT JET BUMPER	43 SW#: 63 RIGHT LOOP LOW	51 SW#: 73 RIGHT RAMP LOCK	59 SW#: 83 FRANK TABLE DOWN
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 LEFT BLUE TARGET	36 SW#: 54 RIGHT JET BUMPER	44 SW#: 64 RIGHT LOOP HIGH	52 SW#: 74 DRACULA 5 POSITION	60 SW#: 84 FRANK TABLE UP
5 SW#: 15 DRACULA STANDUP BOTTOM	13 SW#: 25 DRACULA TARGET	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 CENTER BLUE TARGET	37 SW#: 55 BOTTOM JET BUMPER	45 SW#: 65 CENTER LOOP	53 SW#: 75 DRACULA 4 POSITION	61 SW#: 85 LEFT UP/DOWN BANK TARGET
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 RIGHT POPPER	30 SW#: 46 RIGHT BLUE TARGET	38 SW#: 56 LEFT TOP LANE	46 SW#: 66 LEFT RAMP ENTER	54 SW#: 76 DRACULA 3 POSITION	62 SW#: 86 RIGHT BANK UP/DOWN TARGET
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 RIGHT OUTLANE	23 UNUSED	31 SW#: 47 LEFT FLIPPER PROXIMITY SENSOR	39 SW#: 57 CENTER TOP LANE	47 SW#: 67 LEFT RAMP EXIT	55 SW#: 77 DRACULA 2 POSITION	63 SW#: 87 FRANK HIT
8 SW#: 18 SHOOTER LANE	16 SW#: 28 LET EJECT	24 UNUSED	32 SW#: 48 RIGHT SENSOR FLIPPER PROXIMITY	40 SW#: 58 RIGHT TOP LANE	48 SW#: 68 CENTER RAMP ENTER	56 SW#: 78 DRACULA 1 POSITION	64 UNUSED

SW# number is the switch number as known to the game.

Monte Carlo by Gottlieb

1 SW#: 1 "0" WHEEL POSITION	9 SW#: 10 "00" WHEEL POSITION	17 SW#: 20 TOP LEFT POP BUMPER	25 SW#: 30 TOP RIGHT POP BUMPER	33 SW#: 40 BOTTOM POP BUMPER	41 SW#: 50 #1 DROP TARGET	49 SW#: 60 #2 DROP TARGET	57 SW#: 70 #3 DROP TARGET
2 SW#: 1 "1" WHEEL POSITION	10 SW#: 11 "6" WHEEL POSITION	18 SW#: 21 #1 TOP ROLLOVER	26 SW#: 31 #2 TOP ROLLOVER	34 SW#: 41 #3 TOP ROLLOVER	42 SW#: 51 #4 TOP ROLLOVER	50 SW#: 61 #4 DROP TARGET	58 SW#: 71 #5 DROP TARGET
3 SW#: 2 "2" WHEEL POSITION	11 SW#: 12 "7" WHEEL POSITION	19 UNUSED	27 UNUSED	35 SW#: 42 TROUGH	43 SW#: 52 #6 DROP TARGET	51 SW#: 62 #7 DROP TARGET	59 SW#: 72 #8 DROP TARGET
4 SW#: 3 "3" WHEEL POSITION	12 SW#: 13 "8" WHEEL POSITION	20 SW#: 23 LEFT SPOT TARGET	28 SW#: 33 RIGHT SPOT TARGET	36 SW#: 43 LEFT AND RIGHT OUTSIDE ROLLOVER	44 SW#: 53 RUBBER (3) SWITCHES	52 SW#: 63 #9 DROP TARGET	60 SW#: 73 #10 DROP TARGET
5 SW#: 4 "4" WHEEL POSITION	13 SW#: 14 "9" WHEEL POSITION	21 SW#: 24 TOP LEFT ROLLUNDER	29 SW#: 34 STARGATE RAMP ROLLUNDER	37 SW#: 44 RIGHT RAMP ENTRANCE ROLLUNDER	45 SW#: 54 RIGHT RAMP EXIT ROLLUNDER	53 SW#: 64 LEFT RETURN ROLLUNDER	61 SW#: 74 RIGHT RETURN ROLLUNDER
6 SW#: 5 "5" WHEEL POSITION	14 SW#: 15 "10" WHEEL POSITION	22 SW#: 25 TOP HOLE	30 SW#: 35 LEFT HOLE	38 SW#: 45 RIGHT HOLE	46 UNUSED	54 SW#: 65 OUTHOLE	62 SW#: 75 RIGHT FLIPPER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Motordome by Bally

1 SW#: 1 SHOOTER LANE	9 SW#: 2 SINGLE DROP TARGET	17 SW#: 3 SAUCER LEFT	25 SW#: 4 SAUCER RIGHT	33 SW#: 5 FLIPPER LEFT	41 SW#: 6 CREDIT	49 SW#: 7 FLIPPER RIGHT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN RIGHT	10 SW#: 10 COIN LEFT	18 SW#: 11 COIN MIDDLE	26 SW#: 12 OUTLANE LEFT	34 SW#: 13 OUTLANE RIGHT	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 LEFT ALLEY
3 SW#: 17 SPINNER LEFT	11 SW#: 18 RAMP SWITCH	19 UNUSED	27 SW#: 20 RETURN LANE LEFT	35 SW#: 21 RETURN LANE RIGHT	43 SW#: 22 TOP LANE "R"	51 SW#: 23 TOP LANE "P"	59 SW#: 24 TOP LANE "M"
4 SW#: 25 THUMPER LEFT BUMPER	12 SW#: 26 THUMPER BUMPER MIDDLE	20 SW#: 27 THUMPER BUMPER RIGHT	28 SW#: 28 SLINGSHOT LEFT	36 SW#: 29 SLINGSHOT RIGHT	44 SW#: 30 CENTER TARGET	52 SW#: 31 LEFT ARROW TARGET	60 SW#: 32 RIGHT ARROW TARGET
5 SW#: 33 TARGET #1 (BOTTOM)	13 SW#: 34 TARGET #2	21 SW#: 35 TARGET #3	29 SW#: 36 TARGET #4 (TOP)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Mousin Around by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 M (IN MOUSE)	25 SW#: 25 T (IN TRAP)	33 SW#: 33 TRAP 1 UP/DOWN	41 SW#: 41 TRAP 1 BALL	49 SW#: 49 BALL DIVERTER	57 SW#: 57 RIGHT FLIPPER
2 UNUSED	10 UNUSED	18 SW#: 18 O (IN MOUSE)	26 SW#: 26 R (IN TRAP)	34 SW#: 34 TRAP 2 UP/DOWN	42 SW#: 42 TRAP 2 BALL	50 SW#: 50 MOTOR DOWN	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TORUGH 1, RIGHT	19 SW#: 19 U (IN MOUSE)	27 SW#: 27 A (IN TRAP)	35 SW#: 35 CENTER RAMP	43 SW#: 43 MOTOR UP	51 SW#: 51 LEFT OUTLANE	59 SW#: 59 MOUSE HOLE 1 LOCK
4 SW#: 4 RIGHT COIN SW	12 SW#: 12 TROUGH 2, MIDDLE	20 SW#: 20 S (IN MOUSE)	28 SW#: 28 P (IN TRAP)	36 SW#: 36 PLAYFIELD MULTIPLY	44 SW#: 44 RIGHT RAMP ENTER	52 SW#: 52 LEFT JET	60 SW#: 60 MOUSE HOLE 2 LOCK
5 SW#: 5 CENTER COIN SW	13 SW#: 13 TROUGH 3, LEFT	21 SW#: 21 E (IN MOUSE)	29 SW#: 29 LEFT CENTER TGT.	37 SW#: 37 LEFT RAMP EXIT	45 UNUSED	53 SW#: 53 RIGHT JET	61 SW#: 61 MOUSE HOLE 3 LOCK
6 SW#: 6 LEFT COIN SW	14 SW#: 14 SHOOTER LANE	22 SW#: 22 TOP LANES LEFT	30 SW#: 30 MID. CENTER TGT.	38 SW#: 38 LEFT RETURN LANE	46 SW#: 46 RIGHT RAMP EXIT	54 SW#: 54 BOTTOM JET	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RT. RET. LANE LOOP	23 SW#: 23 TOP LANES MID.	31 SW#: 31 RT. CENTER TGT.	39 SW#: 39 RIGHT RETURN LANE	47 SW#: 47 LEFT RAMP ENTER	55 SW#: 55 LEFT SLING (KICKER, SCORE)	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LT. RET. LANE LOOP	24 SW#: 24 TOP LANES RT.	32 SW#: 32 MOUSE HOLE ENTER	40 SW#: 40 RIGHT OUTLANE	48 UNUSED	56 SW#: 56 RIGHT SLING (KICKER, SCORE)	64 UNUSED

SW# number is the switch number as known to the game.

Mr Mrs PacMan by Bally

1 SW#: 1 LEFT 4 DROP TARGET 1 (BOTTOM)	9 SW#: 2 LEFT 4 DROP TARGET 2	17 SW#: 3 LEFT 4 DROP TARGET 3	25 SW#: 4 LEFT 4 DROP TARGET 4 (TOP)	33 SW#: 5 OUTHOLE KICKER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TOP LEFT SAUCER	57 SW#: 8 RIGHT SAUCER
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LEFT RETURN & RIGHT OUTLANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 LEFT OUTLANE	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 LEFT THUMPER BUMPER	11 SW#: 18 CENTER THUMPER BUMPER	19 SW#: 19 LEFT SLINGSHOT	27 SW#: 20 RIGHT SLINGSHOT	35 SW#: 21 RIGHT SAUCER ROLLOVER BUTTON	43 SW#: 22 TOP DROP 1 TARGET (BOTTOM)	51 SW#: 23 TOP 3 DROP 2 TARGET	59 SW#: 24 TOP 3 DROP 3 TARGET (TOP)
4 SW#: 25 RIGHT 4 DROP TARGET 1 (TOP)	12 SW#: 26 RIGHT 4 DROP TARGET 2	20 SW#: 27 RIGHT 4 DROP TARGET 3	28 SW#: 28 RIGHT 4 DROP TARGET 4 (BOTTOM)	36 SW#: 29 30 POINT (2) REBOUND	44 SW#: 30 LEFT & RIGHT WIRE SPINNER	52 UNUSED	60 UNUSED
5 SW#: 33 LEFT FLIPPER CABINET BUTTON	13 SW#: 34 "M" BACK TARGET	21 SW#: 35 "A" BACK TARGET	29 SW#: 36 "N" BACK TARGET	37 SW#: 37 RIGHT BUTTON FLIPPER CABINET	45 SW#: 38 "P" BACK TARGET	53 SW#: 39 "A" BACK TARGET	61 SW#: 40 "C" BACK TARGET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Mustang by Stern

1 SW#: 1 RT 3 BANK TARGET (BOT)	9 SW#: 17 TROUGH #6 (L)	17 SW#: 33 TOP POP BUMPER	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 RT 3 BANK TARGET (CEN)	10 SW#: 18 TROUGH #5	18 SW#: 34 (G)EARS	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 RT 3 BANK TARGET (TOP)	11 SW#: 19 TROUGH #4	19 SW#: 35 G(E)ARS	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 N20 TARGET (RT)	12 SW#: 20 TROUGH #3	20 SW#: 36 GE(A)RS	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 N20 TARGET (CEN)	13 SW#: 21 TROUGH #2	21 SW#: 37 GEA(R)S	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH #1	22 SW#: 38 GEAR(S)	30 SW#: 54 LEFT LANE TARGET	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 SW#: 23 TROUGH JAM	23 SW#: 39 MID RAMP EXIT	31 SW#: 55 N20 TARGET (LT)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 CAPTIVE BALL (BACK)	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 UPPER RAMP EXIT	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Mustang by Stern

Bank 2

1 SW#: 9 CAPTIVE BALL (FRONT)	9 SW#: 25 L. RETURN LANE (L)	17 SW#: 41 SHIFT TARGET (LT)	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 SKILL SHOT	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 SHIFT TARGET (RT)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 OUTER RT. TOP LN.	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 RIGHT SCOOP	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 INNER RT. TOP LN.	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 RIGHT ORBIT	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 INNER LT. TOP LN.	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 LEFT ORBIT	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 OUTER LT. TOP LN.	14 SW#: 30 LEFT POP BUMPER	22 SW#: 46 BOWL SWITCH	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 SW#: 47 SHOOTER LANE	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 SW#: 48 SPINNER	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Mystic by Bally

1 UNUSED	9 SW#: 2 TOP RIGHT ROLLOVER	17 SW#: 3 TOP LEFT ROLLOVER	25 SW#: 4 RIGHT SPINNER	33 SW#: 5 LEFT SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 30 POINT (2) REBOUND	34 SW#: 13 #3 CENTER DROP TARGET (RT.)	42 SW#: 14 #2 CENTER DROP TARGET	50 SW#: 15 #1 CENTER DROP TARGET (LEFT)	58 SW#: 16 SLAM (2)
3 SW#: 17 RIGHT OUTLANE	11 SW#: 18 LEFT OUTLANE	19 SW#: 19 FLIP/FEED LANE (RT.)	27 SW#: 20 FLIP/FEED LANE (LT.)	35 SW#: 21 #3 RT. DROP TARGET (BOT.)	43 SW#: 22 #2 RT. DROP TARGET	51 SW#: 23 #1 RT. DROP TARGET (TOP)	59 SW#: 24 PYRAMID SAUCER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 29 #3 LT. DROP TARGET (TOP)	44 SW#: 30 #2 LT. DROP TARGET	52 SW#: 31 #1 LT. DROP TARGET (BOT.)	60 SW#: 32 MYSTICAL LANE TARGET
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

NASCAR by Stern

1 SW#: 1 LT BUTTON (UK ONLY)	9 UNUSED	17 SW#: 17 TOP DROP TARGET	25 SW#: 25 RIGHT ORBIT	33 SW#: 33 LEFT SPINNER	41 UNUSED	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 MIDDLE DROP TARGET	26 SW#: 26 LEFT ORBIT	34 SW#: 34 LOWER RIGHT ACCELERATOR (OPTO)	42 SW#: 42 RIGHT SPINNER	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 BOTTOM DROP TARGET	27 SW#: 27 PIT LOCK MIDDLE	35 SW#: 35 LOWER MID. ACCELERATOR (OPTO)	43 SW#: 43 RIGHT STANDUP	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 WINDMILL MOTOR OPTO	28 SW#: 28 PIT LOCK TOP	36 SW#: 36 TEST CAR X2 STANDUP	44 SW#: 44 CENTER STANDUP	52 SW#: 52 GARAGE VUK	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 LEFT RAMP MAKE OPTO	29 SW#: 29 MIDWAY/EJECT	37 SW#: 37 LOWER LEFT ACCELERATOR (OPTO)	45 SW#: 45 LEFT STANDUP	53 SW#: 53 SLAM TILT (OPT)	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 UNUSED	30 SW#: 30 TRACK EXIT POPPER	38 SW#: 38 CAPTIVE BALL STANDUP	46 UNUSED	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 TRUCK RAMP KICKER	31 UNUSED	39 SW#: 39 CAR MECH DOWN	47 SW#: 47 UPPER TOP ACCELERATOR (OPTO)	55 SW#: 55 TOURNAMENT START	63 UNUSED
8 SW#: 8 RT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT RAMP (TO) DIVERTER	32 SW#: 32 PIT LOCK BOTTOM (OPTO)	40 SW#: 40 TEST CAR	48 SW#: 48 UPPER BOT. ACCELERATOR (OPTO)	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

NBA Fastbreak by Williams

1 SW#: 11 BALL LAUNCH	9 SW#: 21 SLAM TILT	17 SW#: 31 TORUGH EJECT	25 SW#: 41 STANDUP '3' TARGET	33 SW#: 51 DEFENDER 4 POSITION	41 SW#: 61 LEFT JET BUMPER	49 UNUSED	57 UNUSED
2 SW#: 12 BACKBOX BASKET	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 STANDUP 'P' TARGET	34 SW#: 52 DEFENDER 3 POSITION	42 SW#: 62 MIDDLE JET BUMPER	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 RIGHT JET BUMPER	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 STANDUP 'T' TARGET	35 SW#: 53 DEFENDER LOCK POSITION	43 SW#: 63 LEFT LOOP RAMP EXIT	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 RIGHT RAMP ENTER	36 SW#: 54 DEFENDER 2 POSITION	44 SW#: 64 RIGHT RAMP MADE	52 UNUSED	60 UNUSED
5 SW#: 15 SHOOTER LANE	13 SW#: 25 EJECT HOLE	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 LEFT RAMP ENTER	37 SW#: 55 DEFENDER 1 POSITION	45 SW#: 65 IN THE PAINT 4	53 UNUSED	61 UNUSED
6 SW#: 16 LEFT RETURN LANE	14 SW#: 26 LEFT OUTLANE	22 SW#: 36 CENTER RAMP OPTO	30 SW#: 46 LEFT RAMP MADE	38 SW#: 56 JETS BALL DRAIN	46 SW#: 66 IN THE PAINT 3	54 UNUSED	62 UNUSED
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 RIGHT LOOP ENTER OPTO	31 SW#: 47 LEFT LOOP ENTER	39 SW#: 57 LEFT SLINGSHOT	47 SW#: 67 IN THE PAINT 2	55 UNUSED	63 UNUSED
8 SW#: 18 LOWER RIGHT STANDUP	16 SW#: 28 UPPER RIGHT STANDUP	24 SW#: 38 RIGHT LOOP EXIT	32 SW#: 48 LEFT LOOP MADE	40 SW#: 58 RIGHT SLINGSHOT	48 SW#: 68 IN THE PAINT 1	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Night Moves by Gottlieb

1 SW#: "C" SPOT TARGET	9 SW#: 10 "L" SPOT TARGET	17 SW#: 20 "U" SPOT TARGET	25 SW#: 30 "B" SPOT TARGET	33 SW#: 40 LEFT TOP ROLLOVER	41 SW#: 50 LEFT POP BUMPER	49 UNUSED	57 UNUSED
2 SW#: 1 "R" SPOT TARGET	10 SW#: 11 "I" SPOT TARGET	18 SW#: 21 "O" SPOT TARGET	26 SW#: 31 SPECIAL SPOT TARGET	34 SW#: 41 RIGHT TOP ROLLOVER	42 SW#: 51 RIGHT POP BUMPER	50 UNUSED	58 UNUSED
3 SW#: 2 LEFT "R" ROLLOVER	11 SW#: 12 LEFT "O" ROLLOVER	19 SW#: 22 LEFT RETURN ROLLOVER	27 SW#: 32 LEFT OUTSIDE ROLLOVER	35 SW#: 42 LEFT KICKING RUBBER	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 3 RIGHT "C" ROLLOVER	12 SW#: 13 RIGHT "K" ROLLOVER	20 SW#: 23 RIGHT RETURN ROLLOVER	28 SW#: 33 RIGHT OUTSIDE ROLLOVER	36 SW#: 43 RIGHT RUBBER KICKING	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 5 #1 TOP ROLLOVER	14 SW#: 15 #2 TOP ROLLOVER	22 SW#: 25 SPINNER	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 SW#: 26 TOP LEFT HOLE	31 SW#: 36 TOP RIGHT HOLE	39 SW#: 46 TROUGH	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Night Rider by Bally

1 SW#: 1 L. DROP A TARGET (TOP)	9 SW#: 2 L. DROP B TARGET	17 SW#: 3 L. DROP C TARGET	25 SW#: 4 L. DROP D TARGET	33 SW#: 5 L. DROP E TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (IF (MIDDLE) USED)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM
3 SW#: 17 LEFT-RIGHT TOP TARGETS	11 SW#: 18 SCORE 100 (GP)*	19 SW#: 19 SCORE 10 (GP)*	27 SW#: 20 RIGHT SPINNER	35 SW#: 21 LEFT SPINNER	43 SW#: 22 TOP SAUCER	51 SW#: 23 RIGHT FEEDER FLIPPER LANE	59 SW#: 24 LEFT FLIPPER FEEDER LANE
4 SW#: 25 R. DROP A TARGET (TOP)	12 SW#: 26 R. DROP B TARGET	20 SW#: 27 R. DROP C TARGET	28 SW#: 28 R. DROP D TARGET	36 SW#: 29 R. DROP E TARGET	44 SW#: 30 CENTER TARGET	52 SW#: 31 RIGHT OUTLANE	60 SW#: 32 LEFT OUTLANE
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM BUMPER	53 SW#: 39 RIGHT BUMPER	61 SW#: 40 LEFT BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Nine Ball by Stern

1 SW#: 1 CHUTE (LEFT)	9 SW#: 2 CHUTE (CENTER)	17 SW#: 3 CHUTE (RIGHT)	25 SW#: 4 LOOP ROLL UNDER	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 SLAM
2 SW#: 9 DROP TARGET #1	10 SW#: 10 DROP TARGET #2	18 SW#: 11 DROP TARGET #3	26 SW#: 12 DROP TARGET #4	34 SW#: 13 DROP TARGET #5	42 SW#: 14 DROP TARGET #6	50 SW#: 15 DROP TARGET #7	58 SW#: 16 DROP TARGET #8
3 SW#: 17 TOP DEAD BUMPER	11 SW#: 18 TOP 3-BANK LFT. TARGET	19 SW#: 19 TOP 3-BANK MID. TARGET	27 SW#: 20 TOP 3 BANK RT. TARGET	35 SW#: 21 LOOP DROP TARGET	43 SW#: 22 RT. 3 BANK TOP TARGET	51 SW#: 23 RT. 3 BANK MID. TARGET	59 SW#: 24 RT. 3 BANK BOTTOM TARGET
4 SW#: 25 RIGHT OUTLANE	12 SW#: 26 LEFT OUTLANE	20 SW#: 27 RT. RETURN LANE	28 SW#: 28 LFT. RETURN LANE	36 SW#: 29 RIGHT SLINGSHOT	44 SW#: 30 LEFT SLINGSHOT	52 SW#: 31 POP BUMPER	60 SW#: 32 LFT. LANE LOWER SWITCH
5 SW#: 33 OUTHOLE	13 SW#: 34 LFT. LANE KICK-OUT HOLE	21 SW#: 35 ADVANCE SPINNER	29 SW#: 36 MID. OUTHOLE SWITCH	37 SW#: 37 LFT. OUTHOLE SWITCH	45 SW#: 38 LFT. LANE MID. SWITCH	53 SW#: 39 LFT. LANE TOP SWITCH	61 SW#: 40 BALL SHOOTER LANE SWITCH
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Nitro Groundshaker by Bally

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 5 30 POINT REBOUND	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 DROP TARGET "A" (TOP)	34 SW#: 13 DROP TARGET "B"	42 SW#: 14 DROP TARGET "C"	50 SW#: 15 DROP TARGET "D"	58 SW#: 16 SLAM (2)
3 UNUSED	11 SW#: 18 F ROLLOVER LANE	19 SW#: 19 E ROLLOVER LANE	27 SW#: 20 D TARGET	35 SW#: 21 C TARGET	43 SW#: 22 B ROLLOVER LANE	51 SW#: 23 A ROLLOVER LANE	59 SW#: 24 TOP CENTER SAUCER
4 SW#: 25 SPINNER	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 SW#: 32 SAUCER LEFT SIDE
5 SW#: 33 RIGHT OUTLANE	13 SW#: 34 LEFT OUTLANE	21 SW#: 35 ADV L & R BONUS TARGET	29 SW#: 36 BOTTOM THUMPER BUMPER	37 SW#: 37 RIGHT SLINGSHOT	45 SW#: 38 LEFT SLINGSHOT	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

No Fear Dangerous Sports by Williams

1 SW#: 11 BALL LAUNCH	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH STACK	25 SW#: 41 RIGHT POPPER 1	33 SW#: 51 DROP TARGET	41 SW#: 61 EJECT HOLE	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 1 (RIGHT)	26 SW#: 42 RIGHT POPPER 2	34 UNUSED	42 SW#: 62 LEFT LOOP	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY EXTRA BALL	19 SW#: 33 TROUGH 2	27 UNUSED	35 UNUSED	43 SW#: 63 LEFT RAMP ENTER	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 3	28 UNUSED	36 SW#: 54 LEFT WIREFORM	44 SW#: 64 LEFT RAMP MIDDLE	52 UNUSED	60 UNUSED
5 SW#: 15 SHOOTER LANE	13 SW#: 25 KICKBACK	21 SW#: 35 TROUGH 4	29 UNUSED	37 SW#: 55 INNER LOOP	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 16 SPINNER	14 SW#: 26 LEFT RETURN	22 UNUSED	30 SW#: 46 LEFT MAGNET	38 SW#: 56 LIGHT BOTTOM KICKBACK	46 SW#: 66 RIGHT RAMP ENTER	54 UNUSED	62 UNUSED
7 SW#: 17 RIGHT OUTLANE	15 SW#: 27 LEFT SLINGSHOT	23 SW#: 37 CENTER ENTER TROUGH	31 SW#: 47 CENTER MAGNET	39 SW#: 57 LIGHT TOP KICKBACK	47 SW#: 67 RIGHT RAMP EXIT	55 UNUSED	63 UNUSED
8 SW#: 18 RIGHT RETURN	16 SW#: 28 RIGHT SLINGSHOT	24 SW#: 38 LEFT TROUGH ENTER	32 SW#: 48 RIGHT MAGNET	40 SW#: 58 RIGHT LOOP	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

No Good Gofers by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 LEFT GOFER DOWN	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 LEFT SPINNER	49 SW#: 71 LEFT CART PATH	57 SW#: 81 K-I-C-K ADVANCE
2 SW#: 12 LEFT RAMP MAKE	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 RIGHT GOFER DOWN	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 RIGHT SPINNER	50 SW#: 72 RIGHT CART PATH	58 SW#: 82 (K)ICK
3 SW#: 13 START BUTTON	11 SW#: 23 JET ADVANCE STANDUP	19 SW#: 33 TROUGH BALL 2	27 UNUSED	35 SW#: 53 TOP JET BUMPER	43 SW#: 63 INNER WHEEL OPTO	51 SW#: 73 RIGHT RAMP MAKE	59 SW#: 83 K(I)CK
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 PUTT OUT POPPER	36 SW#: 54 MIDDLE JET BUMPER	44 SW#: 64 OUTER WHEEL OPTO	52 SW#: 74 GOLF CART	60 SW#: 84 KI(C)K
5 SW#: 15 CENTER RAMP MAKE	13 SW#: 25 UNDERGROUND PASS	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 RIGHT POPPER JAM	37 SW#: 55 BOTTOM JET BUMPER	45 SW#: 65 LEFT GOFER 1	53 SW#: 75 RIGHT GOFER 1	61 SW#: 85 KIC(K)
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT IN-LANE	22 SW#: 36 TROUGH BALL 5	30 SW#: 46 RIGHT POPPER	38 SW#: 56 TOP SKILL SHOT	46 SW#: 66 LEFT GOFER 2	54 SW#: 76 RIGHT GOFER 2	62 SW#: 86 CAPTIVE BALL
7 SW#: 17 RIGHT IN-LANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 TROUGH BALL 6	31 SW#: 47 LEFT RAMP DOWN	39 SW#: 57 MIDDLE SKILL SHOT	47 SW#: 67 BEHIND LEFT GOFER	55 SW#: 77 ADVANCE TRAP VALUE	63 UNUSED
8 SW#: 18 SHOOTER GROOVE	16 SW#: 28 KICKBACK	24 SW#: 38 JET POPPER	32 SW#: 48 RIGHT RAMP DOWN	40 SW#: 58 LOWER SKILL SHOT	48 SW#: 68 HOLE-IN-ONE MADE	56 SW#: 78 SAND TRAP EJECT	64 UNUSED

SW# number is the switch number as known to the game.

Nugent by Stern

1 SW#: 1 ROLL-OVER BUTTON (RIGHT), RIGHT OUT-LANE	9 SW#: 2 UPPER ROLL-OVER (CENTER)	17 SW#: 3 UPPER ROLLOVER (CENTER)	25 SW#: 4 UPPER (R & ROLLOVERS L)	33 SW#: 5 TARGET #1, LEFT BANK (SW-1)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUT-HOLE
2 SW#: 9 COIN #3 (RIGHT)	10 SW#: 10 COIN #1 (CENTER)	18 SW#: 11 COIN #2 (LEFT)	26 SW#: 12 TARGET (STAND-UP)	34 SW#: 13 TARGET #1, LEFT BANK (SW-2)	42 SW#: 14 #3 TARGET (RIGHT BANK)	50 SW#: 15 SPIN-TARGET	58 SW#: 16 SLAM-TILT (3)
3 SW#: 17 (2) BUTTON ROLL-OVER (CENTER)	11 SW#: 18 300 ADVANCE BONUS	19 SW#: 19 10 POINTS	27 UNUSED	35 SW#: 21 #2 TARGET (LEFT BANK)	43 SW#: 22 #2 TARGET (RIGHT BANK)	51 UNUSED	59 SW#: 24 KICKER (SAUCER)
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 29 TARGET #3, LEFT BANK (SW-1)	44 SW#: 30 #1 TARGET (RIGHT BANK)	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 37 TARGET #3, LEFT BANK (SW-2)	45 SW#: 38 RIGHT SLING-SHOT	53 SW#: 39 LEFT SLING-SHOT	61 SW#: 40 RIGHT & LEFT RETURN LANES
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Operation Thunder by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 #4 COIN CHUTE	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 RIGHT DROP TARGET #1	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 LEFT KICKING RUBBER (2)	26 SW#: 13 RIGHT RUBBER KICKING (2)	34 SW#: 14 OUTHOLE	42 SW#: 15 RIGHT DROP TARGET #2	50 SW#: 16 #1 SPIN DISK SPOT TARGET	58 SW#: 17 #4 SPIN DISK SPOT TARGET
3 SW#: 20 LEFT UPKICKER	11 SW#: 21 LEFT SPOT TARGET	19 SW#: 22 LEFT #1 DROP TARGET	27 UNUSED	35 SW#: 24 3RD POSITION TROUGH	43 SW#: 25 RIGHT #3 DROP TARGET	51 SW#: 26 #2 SPIN DISK SPOT TARGET	59 SW#: 27 #5 SPIN DISK SPOT TARGET
4 SW#: 30 CENTER UPKICKER	12 SW#: 31 CENTER SPOT TARGET	20 SW#: 32 LEFT #2 DROP TARGET	28 SW#: 33 VARI-TARGET, POSITIONS 1,2,3	36 SW#: 34 BALL HOLE KICKER	44 SW#: 35 RIGHT #4 DROP TARGET	52 SW#: 36 #3 SPIN DISK SPOT TARGET	60 SW#: 37 #6 SPIN DISK SPOT TARGET
5 SW#: 40 RIGHT UPKICKER	13 SW#: 41 RIGHT SPOT TARGET	21 SW#: 42 LEFT #3 DROP TARGET	29 SW#: 43 VARI-TARGET, POSITIONS 4,5,6	37 SW#: 44 SPINNER	45 SW#: 45 RIGHT #5 DROP TARGET	53 SW#: 46 BOTTOM LANE SHOOTER ROLLOVER	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 60 LEFT OUTSIDE ROLLOVER	15 SW#: 61 RIGHT OUTSIDE ROLLOVER	23 SW#: 62 LEFT RETURN ROLLOVER	31 SW#: 63 RIGHT RETURN ROLLOVER	39 UNUSED	47 SW#: 65 TOP SHOOTER LANE ROLLOVER	55 SW#: 66 UNDERGROUND ENTRANCE	63 SW#: 67 TOP LEFT ROLLOVER
8 SW#: 70 TOP LEFT RAMP	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Orbitor 1 by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 SW#: 4 INCR. VALUE SPINNER	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 LEFT & RIGHT BOTTOM GATE
2 SW#: 9 FLIPPER TIME CHECK	10 SW#: 10 STAND UP TARGET "R2"	18 SW#: 11 STAND UP TARGET "O1"	26 SW#: 12 STAND UP "T" TARGET	34 SW#: 13 STAND UP "I" TARGET	42 SW#: 14 STAND UP "B" TARGET	50 SW#: 15 STAND UP TARGET "R2"	58 SW#: 16 STAND UP TARGET "O1"
3 SW#: 17 LOWER ROTOR	11 SW#: 18 BALL LANE	19 SW#: 19 L. BANK LEFT	27 SW#: 20 L. BANK MID.	35 SW#: 21 L. BANK RIGHT	43 SW#: 22 R. BANK LEFT	51 SW#: 23 R. BANK MID.	59 SW#: 24 R. BANK RIGHT
4 SW#: 25 UPPER ROTOR	12 SW#: 26 DROP TARGET "R2"	20 SW#: 27 DROP TARGET "O1"	28 SW#: 28 DROP TARGET "T"	36 SW#: 29 DROP TARGET "I"	44 SW#: 30 DROP TARGET "B"	52 SW#: 31 DROP TARGET "R2"	60 SW#: 32 DROP TARGET "O1"
5 SW#: 33 OUT HOLE RIGHT	13 SW#: 34 OUT HOLE LEFT	21 SW#: 35 BALL HOLDER	29 UNUSED	37 SW#: 37 TOP LEFT BUMPER	45 SW#: 38 TOP RIGHT BUMPER	53 SW#: 39 BOTTOM LEFT BUMPER	61 SW#: 40 BOTTOM RIGHT BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Panthera by Gottlieb

1 SW#: #1 YELLOW DROP TARGET	9 SW#: 10 #1 BLUE DROP TARGET	17 SW#: 20 #1 WHITE DROP TARGET	25 SW#: 30 #1 GREEN DROP TARGET	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 1 #2 YELLOW DROP TARGET	10 SW#: 11 #2 BLUE DROP TARGET	18 SW#: 21 #2 WHITE DROP TARGET	26 SW#: 31 #2 GREEN DROP TARGET	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 2 #3 YELLOW DROP TARGET	11 SW#: 12 #3 BLUE DROP TARGET	19 SW#: 22 #3 WHITE DROP TARGET	27 SW#: 32 #3 GREEN DROP TARGET	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 3 YELLOW (2) ROLLOVERS	12 SW#: 13 BLUE (2) ROLLOVERS	20 SW#: 23 WHITE (2) ROLLOVERS	28 SW#: 33 GREEN (2) ROLLOVERS	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 4 BULL'S EYE TARGET	13 SW#: 14 ROLLOVER (2) BUTTONS	21 SW#: 24 POP BUMPERS (2)	29 SW#: 34 10 POINT CONTACTS (10)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 5 #1 ROLLOVER	14 SW#: 15 #2 ROLLOVERS (2)	22 SW#: 25 #3 ROLLOVER AND SPIN TARGET	30 SW#: 35 HOLE	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Paragon by Bally

1 SW#: 1 DROP TARGET (IN LINE) "D" (TOP)	9 SW#: 2 DROP TARGET (IN LINE) "C"	17 SW#: 3 DROP TARGET (IN LINE) "B"	25 SW#: 4 DROP TARGET (IN LINE) "A" (BOTTOM)	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 DROP TARGET "C" (BOTTOM)	11 SW#: 18 DROP TARGET "B"	19 SW#: 19 DROP TARGET "A" (TOP)	27 UNUSED	35 UNUSED	43 SW#: 22 RIGHT OUTLANE	51 SW#: 23 RIGHT FLIP FEEDER LANE	59 SW#: 24 PARAGON SAUCER
4 UNUSED	12 SW#: 26 TOP CENTER ROLLOVER BUTTON	20 SW#: 27 500 POINT REBOUND (2)	28 SW#: 28 WATERFALL ROLLOVER BUTTON	36 SW#: 29 CENTER TARGET	44 SW#: 30 TOP CENTER TARGET	52 SW#: 31 TREASURE CHAMBER SAUCER	60 SW#: 32 GOLDEN CLIFFS SAUCER
5 SW#: 33 SPINNER GOLDEN CLIFFS ROLLOVER BUTTON AND DROP TARGET	13 SW#: 34 TOP RIGHT, ROLLOVER BUTTON AND DROP TARGET	21 SW#: 35 RIGHT TARGET REBOUND	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 BOTTOM THUMPER BUMPER	45 SW#: 38 CENTER THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Party Animal by Bally

1 SW#: 1 BEHIND IN LINES	9 SW#: 2 RELEASE ALL BALLS	17 SW#: 3 DOOR SWITCH	25 SW#: 4 RAMP SWITCH	33 SW#: 5 LEFT CABINET	41 SW#: 6 CREDIT	49 SW#: 7 RIGHT CABINET	57 SW#: 8 OUTHOLE
2 SW#: 9 COINS RIGHT	10 SW#: 10 COINS LEFT	18 SW#: 11 COINS MIDDLE	26 SW#: 12 LEFT RETURN LANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 REBOUNDS
3 SW#: 17 TOP BUMPER	11 SW#: 18 MIDDLE BUMPER	19 SW#: 19 BOTTOM BUMPER	27 SW#: 20 LEFT SLINGSHOT	35 SW#: 21 RIGHT SLINGSHOT	43 SW#: 22 RIGHT SAUCER	51 SW#: 23 LEFT BOTTOM SAUCER	59 SW#: 24 LEFT TOP SAUCER
4 SW#: 25 TARGET "G"	12 SW#: 26 TARGET "I"	20 SW#: 27 TARGET "P"	28 SW#: 28 TARGET "T"	36 SW#: 29 TARGET "U"	44 SW#: 30 TARGET "O"	52 SW#: 31 LEFT OUTLANE	60 SW#: 32 RIGHT OUTLANE
5 SW#: 33 BOTTOM IN-LINE	13 SW#: 34 MIDDLE IN-LINE	21 SW#: 35 TOP IN-LINE	29 SW#: 36 TUNE (LEFT) TARGET-1	37 SW#: 37 TUNE TARGET-2 (MIDDLE)	45 SW#: 38 TUNE (RIGHT) TARGET-3	53 SW#: 39 MUSHROOM	61 SW#: 40 TOAD
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 SW#: 46 LEFT OUTHOLE-1	54 SW#: 47 MIDDLE OUTHOLE-2	62 SW#: 48 RIGHT OUTHOLE-3
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Party Zone by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 BACK RAMP SWITCH	25 SW#: 41 BACK BALL POPPER	33 SW#: 51 HEAD OPTO 1	41 SW#: 61 SHOOTER LANE	49 SW#: 71 COTTAGE ENTRANCE	57 SW#: 81 WAY
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 COIN DOOR CLOSED	18 UNUSED	26 SW#: 42 RIGHT BALL POPPER	34 SW#: 52 HEAD OPTO 2	42 SW#: 62 LANE TO TOP	50 SW#: 72 ENTER LEFT RAMP	58 SW#: 82 OUT
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO	19 UNUSED	27 SW#: 43 LEFT JET BUMPER	35 SW#: 53 HEAD OPTO 3	43 SW#: 63 OUT OF CONTROL	51 SW#: 73 LEFT OZONE	59 SW#: 83 OF
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 EDM QUAL. 1	28 SW#: 44 RIGHT JET BUMPER	36 SW#: 54 LEFT RETURN LANE	44 SW#: 64 TOP REBOUND	52 SW#: 74 RIGHT OZONE	60 SW#: 84 CONTROL
5 UNUSED	13 UNUSED	21 SW#: 35 EDM QUAL. 2	29 SW#: 45 BOTTOM JET BUMPER	37 SW#: 55 LEFT DRAIN	45 SW#: 65 SKILL SHOT	53 SW#: 75 OUTHOLE	61 SW#: 85 2ND COTTAGE SWITCH
6 SW#: 16 HA 1	14 SW#: 26 BOP B	22 SW#: 36 EDM QUAL. 3	30 UNUSED	38 SW#: 56 END ZONE TARGET	46 SW#: 66 REQUEST	54 SW#: 76 TROUGH 1	62 UNUSED
7 SW#: 17 HA 2	15 SW#: 27 BOP O	23 SW#: 37 EDM QUAL. 4	31 UNUSED	39 SW#: 57 RIGHT RETURN LANE	47 SW#: 67 D.J. EJECT	55 SW#: 77 TROUGH 2	63 UNUSED
8 SW#: 18 HA 3	16 SW#: 28 BOP P	24 SW#: 38 EDM QUAL. 5	32 UNUSED	40 SW#: 58 RIGHT DRAIN	48 SW#: 68 TIME	56 SW#: 78 TROUGH 3	64 UNUSED

SW# number is the switch number as known to the game.

Phantom of the Opera by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 LEFT TOP LANE	33 SW#: 33 LEFT TARGET 1	41 SW#: 41 CENTER 1 TARGET	49 SW#: 49 RIGHT TARGET 1	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 CENTER TOP LANE	34 SW#: 34 LEFT TARGET 2	42 SW#: 42 CENTER 2 TARGET	50 SW#: 50 RIGHT TARGET 2	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 RIGHT TOP LANE	35 SW#: 35 LEFT TARGET 3	43 SW#: 43 CENTER 3 TARGET	51 SW#: 51 RIGHT TARGET 3	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2	20 SW#: 20 RIGHT RETURN	28 SW#: 28 LEFT VUK #1	36 SW#: 36 TOP SUPER VUK	44 SW#: 44 RIGHT SUPER VUK	52 SW#: 52 ORGAN OPEN	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 LEFT VUK #2	37 SW#: 37 ORGAN CAVE	45 SW#: 45 MIRROR RAMP	53 SW#: 53 ORGAN CLOSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 LEFT RAMP TOP	38 UNUSED	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 RIGHT SPINNER	31 SW#: 31 LEFT RAMP BOTTOM	39 UNUSED	47 SW#: 47 CENTER TURBO BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 UNUSED	40 UNUSED	48 SW#: 48 RIGHT TURBO BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Pharaoh by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 LEFT MAGNET BUTTON	17 SW#: 17 UPPER LEFT 3-BANK, BOTTOM TARGET	25 SW#: 25 LOWER CENTER 3-BANK, BOTTOM TARGET	33 SW#: 33 SLAVES TOMB SHOOTER	41 SW#: 41 CAPTIVE BALL	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 RIGHT MAGNET BUTTON	18 SW#: 18 UPPER LEFT 3-BANK, CENTER TARGET	26 SW#: 26 LOWER CENTER 3-BANK, CENTER TARGET	34 SW#: 34 UPPER EJECT HOLE	42 SW#: 42 PLAYFIELD TILT	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 UNUSED	19 SW#: 19 UPPER LEFT 3-BANK, TOP TARGET	27 SW#: 27 LOWER CENTER 3-BANK, TOP TARGET	35 SW#: 35 LOWER EJECT HOLE	43 SW#: 43 HIDDEN TOMB SHOOTER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 UNUSED	20 SW#: 20 UPPER KICKER	28 SW#: 28 UPPER TARGET BULL'S-EYE	36 SW#: 36 OUTHOLE	44 SW#: 44 RIGHT KICKER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT INSIDE ROLLOVER	21 SW#: 21 UPPER CENTER 3-BANK, LEFT TARGET	29 SW#: 29 LOWER RIGHT 3-BANK, TOP TARGET	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 RIGHT INSIDE ROLLOVER	22 SW#: 22 UPPER CENTER 3-BANK, CENTER TARGET	30 SW#: 30 LOWER RIGHT 3-BANK, CENTER TARGET	38 SW#: 38 BALL RAMP LEFT SWITCH	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT ? LANE ROLLOVER	23 SW#: 23 UPPER CENTER 3-BANK, RIGHT TARGET	31 SW#: 31 LOWER RIGHT 3-BANK, BOTTOM TARGET	39 SW#: 39 BALL RAMP RIGHT SWITCH	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT ? LANE ROLLOVER	24 SW#: 24 LEFT KICKER	32 SW#: 32 LOWER TARGET BULL'S-EYE	40 SW#: 40 BALLSHOOTER TROUGH	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Phoenix by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 "1" ROLLOVER	17 SW#: 17 CENTER JET BUMPER	25 SW#: 25 LEFT DROP TARGET BANK, TOP	33 SW#: 33 LEFT CENTER DROP TARGET	41 SW#: 41 RIGHT DROP TARGET BANK, TOP	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 "2" ROLLOVER	18 SW#: 18 LEFT JET BUMPER	26 SW#: 26 LEFT DROP TARGET BANK, TOP CENTER	34 UNUSED	42 SW#: 42 RIGHT DROP TARGET BANK, TOP CENTER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 "3" ROLLOVER	19 SW#: 19 LEFT TARGET	27 SW#: 27 LEFT DROP TARGET BANK, BOTTOM CENTER	35 SW#: 35 RIGHT CENTER DROP TARGET	43 SW#: 43 RIGHT DROP TARGET BANK, BOTTOM CENTER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 "4" ROLLOVER	20 SW#: 20 LEFT STANDUP	28 SW#: 28 LEFT DROP TARGET BANK, BOTTOM	36 UNUSED	44 SW#: 44 RIGHT DROP TARGET BANK, BOTTOM	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 "5" ROLLOVER	21 SW#: 21 BULL'S EYE TARGET	29 SW#: 29 LEFT DROP TARGET BANK SERIES	37 SW#: 37 OUTHOLE	45 SW#: 45 RIGHT DROP TARGET BANK SERIES	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 RIGHT TARGET	22 SW#: 22 LEFT DROP TARGET BANK STANDUP	30 SW#: 30 LEFT KICKER	38 SW#: 38 TOP RIGHT STANDUP	46 SW#: 46 RIGHT KICKER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 SPINNER	23 SW#: 23 PLAYFIELD TILT	31 SW#: 31 LEFT INSIDE ROLLOVER	39 SW#: 39 BOTTOM LEFT STANDUP	47 SW#: 47 RIGHT INSIDE ROLLOVER	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE TO DATE RESET	16 SW#: 16 RIGHT JET BUMPER	24 SW#: 24 RIGHT DROP TARGET BANK STANDUP	32 SW#: 32 LEFT OUTSIDE ROLLOVER	40 SW#: 40 BOTTOM RIGHT STANDUP	48 SW#: 48 RIGHT OUTSIDE ROLLOVER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

PinBot by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 BALL TROUGH #1 (LOWER RIGHT)	25 SW#: 25 LEFT EYE EJECT	33 SW#: 33 RIGHT 5-BANK (TOP, YELLOW)	41 UNUSED	49 SW#: 49 LEFT DROP TARGET (UPPER)	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT LANE CHANGE	18 SW#: 18 BALL TROUGH #2 (CENTER)	26 SW#: 26 RIGHT EYE EJECT	34 SW#: 34 RIGHT 5-BANK (BLUE)	42 UNUSED	50 SW#: 50 LEFT DROP TARGET (MID)	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 RIGHT LANE CHANGE	19 SW#: 19 ADVANCE PLANET	27 UNUSED	35 SW#: 35 RIGHT 5-BANK (AMBER)	43 UNUSED	51 SW#: 51 LEFT DROP TARGET (LOWER)	59 SW#: 59 10 POINT
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 LEFT OUTLANE	20 SW#: 20 BALL SHOOTER LANE	28 SW#: 28 VISOR TARGET 1 (LEFT, YELLOW)	36 SW#: 36 RIGHT 5-BANK (GREEN)	44 SW#: 44 RAMP DOWN	52 SW#: 52 TOP JET BUMPER	60 SW#: 60 10 POINT
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 LEFT RETURN LANE	21 UNUSED	29 SW#: 29 VISOR TARGET 2 (BLUE)	37 SW#: 37 RIGHT 5-BANK (BOTTOM, RED)	45 SW#: 45 SCORE ENERGY (YELLOW)	53 SW#: 53 BOTTOM JET BUMPER	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 RIGHT RETURN LANE	22 SW#: 22 VORTEX 20K	30 SW#: 30 VISOR TARGET 3 (AMBER)	38 SW#: 38 SINGLE EJECT	46 SW#: 46 VISOR CLOSED	54 SW#: 54 LEFT SLING	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT OUTLANE	23 SW#: 23 VORTEX 100K	31 SW#: 31 VISOR TARGET 4 (GREEN)	39 SW#: 39 RAMP EXIT	47 SW#: 47 VISOR OPEN	55 SW#: 55 RIGHT SLING	63 UNUSED
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 OUTHOLE	24 SW#: 24 VORTEX 5K (EXIT)	32 SW#: 32 VISOR TARGET 5 (RIGHT, RED)	40 SW#: 40 RAMP ENTRANCE	48 SW#: 48 LEFT JET BUMPER	56 SW#: 56 10 POINT	64 UNUSED

SW# number is the switch number as known to the game.

Pinball by Stern

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN #3 (RT)	10 SW#: 10 COIN #2 (CTR)	18 SW#: 11 COIN #1 (LT)	26 SW#: 12 RT SAUCER	34 SW#: 13 TOP SAUCER	42 SW#: 14 (4) ADVANCE BONUS ROLL-OVERS	50 UNUSED	58 SW#: 16 SLAM
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 21 (4) 10 POINT SWS	43 SW#: 22 R & L 50 POINT	51 SW#: 23 RT INNER OUTLANE	59 SW#: 24 LT INNER OUTLANE
4 SW#: 25 LT CTR DROP TAR.	12 SW#: 26 LT TOP OUT DROP TAR.	20 SW#: 27 LT TOP IN DROP TAR.	28 SW#: 28 RT TOP IN DROP TAR.	36 SW#: 29 RT TOP OUT DROP TAR.	44 SW#: 30 SPINNER	52 SW#: 31 RT OUT OUTLANE	60 SW#: 32 LT OUT OUTLANE
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RT SLINGSHOT	37 SW#: 37 LT SLINGSHOT	45 SW#: 38 BOTTOM BUMPER	53 SW#: 39 RIGHT BUMPER	61 SW#: 40 LEFT BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Pinball Pool by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 #1 DROP TARGET	10 SW#: 11 #2 DROP TARGET	18 UNUSED	26 SW#: 13 #3 DROP TARGET	34 SW#: 14 #4 DROP TARGET
3 SW#: 20 #5 DROP TARGET	11 SW#: 21 #6 DROP TARGET	19 UNUSED	27 SW#: 23 10 POINT (6) SWITCHES	35 SW#: 24 #7 DROP TARGET
4 SW#: 30 "B" ROLLOVER (2)	12 UNUSED	20 SW#: 32 "C" ROLLOVER (2)	28 UNUSED	36 SW#: 34 "A" ROLLOVER (2)
5 SW#: 40 #8 ROLLOVER	13 SW#: 41 RIGHT HOLE	21 SW#: 42 LEFT HOLE	29 UNUSED	37 UNUSED
6 SW#: 50 RIGHT & LEFT POP BUMPER	14 UNUSED	22 UNUSED	30 SW#: 53 OUTSIDE (2) ROLLOVER	38 SW#: 54 ROLLOVER (2) BUTTON
7 SW#: 60 #9 DROP TARGET	15 SW#: 61 #10 DROP TARGET	23 UNUSED	31 SW#: 63 #11 DROP TARGET	39 SW#: 64 #12 DROP TARGET
8 SW#: 70 #13 DROP TARGET	16 SW#: 71 #14 DROP TARGET	24 UNUSED	32 SW#: 73 50 POINT (4) SWITCHES	40 SW#: 74 #15 DROP TARGET

SW# number is the switch number as known to the game.

Pink Panther by Gottlieb

1 SW#: #1 WHITE TARGET	9 SW#: 10 #2 WHITE TARGET	17 SW#: 20 #3 WHITE TARGET	25 SW#: 30 #4 WHITE TARGET	33 SW#: 40 #1 BLACK DROP TARGET	41 SW#: 50 #2 BLACK DROP TARGET	49 SW#: 60 #3 BLACK DROP TARGET	57 SW#: 70 #4 BLACK DROP TARGET
2 SW#: 1 #5 WHITE TARGET	10 SW#: 11 #6 WHITE TARGET	18 SW#: 21 #7 WHITE TARGET	26 SW#: 31 #8 WHITE TARGET	34 SW#: 41 #9 WHITE TARGET	42 SW#: 51 #1 WHITE DROP TARGET	50 SW#: 61 #2 WHITE DROP TARGET	58 SW#: 71 #3 WHITE DROP TARGET
3 SW#: 2 #1 TOP ROLLOVER	11 SW#: 12 #2 TOP ROLLOVER	19 SW#: 22 #3 TOP ROLLOVER	27 SW#: 32 #4 TOP ROLLOVER	35 SW#: 42 LEFT RETURN ROLLOVER	43 UNUSED	51 SW#: 62 LEFT OUTSIDE ROLLOVER	59 SW#: 72 RIGHT OUTSIDE ROLLOVER
4 SW#: 3 RIGHT RETURN ROLLOVER	12 SW#: 13 EXTRA BALL HOLE SW.	20 SW#: 23 TOP POP (3) BUMPER BUMPER	28 SW#: 33 BOTTOM POP BUMPER, 10 POINT SWITCHES	36 SW#: 43 LEFT CAPTIVE HOLE	44 SW#: 53 RIGHT HOLE CAPTIVE	52 SW#: 63 OUTHOLE	60 SW#: 73 TROUGH
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Pirates of the Caribbean by Stern

1 SW#: 1 LEFT LANE	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 RIGHT LANE	10 SW#: 18 TROUGH #4 (LEFT)	18 UNUSED	26 SW#: 50 PIRATE 1 (LEFT)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 HIT CHEST	11 SW#: 19 TROUGH #3	19 UNUSED	27 SW#: 51 PIRATE 2	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 PLUNDER EXIT	12 SW#: 20 TROUGH #2	20 UNUSED	28 SW#: 52 PIRATE 3	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 (RIGHT)	21 SW#: 37 LEFT BONUS TREASURE	29 SW#: 53 PIRATE 4	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 CHEST LOCK	14 SW#: 22 TROUGH JAM	22 UNUSED	30 SW#: 54 PIRATE 5	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 SW#: 23 SHOOTER LANE	23 SW#: 39 RIGHT BONUS TREASURE	31 SW#: 55 PIRATE 6 (RIGHT)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 LEFT ORBIT	16 SW#: 24 LEFT OUTLANE	24 UNUSED	32 SW#: 56 POP EJECT	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Pirates of the Caribbean by Stern

Bank 2

1 SW#: 9 TOP CENTER VUK	9 SW#: 25 LEFT INLANE	17 UNUSED	25 SW#: 57 JACK SCOOP EXIT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 LEFT RAMP ENTER	10 SW#: 26 LEFT SLING	18 SW#: 42 PLUNDER 1	26 SW#: 58 RIGHT ORBIT	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 PLUNDER ENTER	11 SW#: 27 RIGHT SLING	19 SW#: 43 PLUNDER 2	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 LEFT TOP LANE	12 SW#: 28 RIGHT INLANE	20 SW#: 44 PLUNDER 3	28 SW#: 60 SKILL HOLE MADE	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 MIDDLE TOP LANE	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 PLUNDER 4	29 SW#: 61 SHIP MADE	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 RIGHT TOP LANE	14 SW#: 30 LEFT BUMPER	22 SW#: 46 PLUNDER 5	30 SW#: 62 SHIP FULLY SUNK	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 PLUNDER 6	31 SW#: 63 SHIP HOME	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Playboy by Bally

1 SW#: 1 DROP TARGET A (TOP)	9 SW#: 2 DROP TARGET B	17 SW#: 3 DROP TARGET C	25 SW#: 4 DROP TARGET D	33 SW#: 5 DROP TARGET E (BOTTOM)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 #5 KEY - RED TARGET	11 SW#: 18 #4 TOP KEY R.O.	19 SW#: 19 #3 TOP KEY R.O.	27 SW#: 20 #2 TOP KEY R.O.	35 SW#: 21 #1 TOP KEY R.O.	43 SW#: 22 RIGHT OUTLANE	51 SW#: 23 LEFT OUTLANE	59 SW#: 24 L & R FEEDER FLIPPER LANE
4 SW#: 25 SEPTEMBER TARGET	12 SW#: 26 JULY TARGET	20 SW#: 27 JANUARY TARGET	28 SW#: 28 MAY TARGET	36 SW#: 29 MARCH TARGET	44 SW#: 30 ARROW R.O. BUTTON	52 SW#: 31 RIGHT LANE R.O.	60 SW#: 32 PLAYBOY R.O. GROTTO
5 SW#: 33 DROP TARGET REBOUND	13 UNUSED	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Playboy by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 SW#: 9 SKILL SHOT	17 SW#: 17 RIGHT RAMP ENTER	25 SW#: 25 POP BUMPER EXIT	33 SW#: 33 SURPRISE PACKAGE TARGET	41 SW#: 41 LEFT RAMP ENTER	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 RIGHT ORBIT	18 SW#: 18 RIGHT RAMP EXIT	26 SW#: 26 DROP TARGET	34 SW#: 34 GROTTO EJECT	42 SW#: 42 LEFT RAMP EXIT	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 CENTER LANE	27 SW#: 27 LEFT ORBIT	35 SW#: 35 VUK	43 SW#: 43 CENTERFOLD 1 (CLOSED)	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 UNUSED	28 UNUSED	36 UNUSED	44 SW#: 44 CENTERFOLD 2 (OPEN)	52 SW#: 52 TEASE SCREW LIMIT	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 CENTER RAMP EXIT	29 SW#: 29 TRIANGLE 1 MECH (RIGHT)	37 UNUSED	45 UNUSED	53 SW#: 53 TOURNAMENT BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 LEFT TOP LANE	30 SW#: 30 TRIANGLE 2 MECH (LEFT)	38 SW#: 38 RAMP BALL 3 LOCK	46 UNUSED	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 MIDDLE TOP LANE	31 UNUSED	39 SW#: 39 RAMP BALL 1 LOCK	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT TOP LANE	32 SW#: 32 PEEK-A-BOO TARGET	40 SW#: 40 RAMP BALL 2 LOCK	48 UNUSED	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Playboy 35th Anniversary by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 LEFT TOP LANE	33 SW#: 33 P TARGET	41 SW#: 41 CENTER 3 - BANK LFT	49 SW#: 49 DROP 1 TOP	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 CENTER TOP LANE	34 SW#: 34 L TARGET	42 SW#: 42 CENTER 3 - BANK MID	50 SW#: 50 DROP 2 CENTER	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 RIGHT TOP LANE	35 SW#: 35 A TARGET	43 SW#: 43 CENTER - RT 3-BANK	51 SW#: 51 DROP 3 BOTTOM	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2	20 SW#: 20 RIGHT RETURN	28 SW#: 28 RAMP CENTER	36 SW#: 36 1ST Y TARGET	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 RAMP RIGHT	37 SW#: 37 B TARGET	45 SW#: 45 VUK	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 LEFT SPINNER	38 SW#: 38 O TARGET	46 SW#: 46 LEFT POP	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 CHAMP KICKER	31 SW#: 31 GROTTO 2	39 SW#: 39 2ND Y TARGET	47 SW#: 47 CENTER POP	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 GROTTO 1	32 SW#: 32 RAMP LEFT	40 UNUSED	48 SW#: 48 RIGHT POP	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Pokerino by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 TOP LEFT LANE STAR ROLLOVER	17 SW#: 17 DIAMOND DROP QUEEN TARGET	25 SW#: 25 HEART JACK DROP TARGET	33 SW#: 33 DIAMOND JACK DROP TARGET	41 SW#: 41 TEN STAR ROLLOVER	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 CAPTIVE BALL STAR ROLLOVER	18 SW#: 18 CLUB QUEEN DROP TARGET	26 SW#: 26 SPADE JACK DROP TARGET	34 SW#: 34 CLUB JACK DROP TARGET	42 SW#: 42 JOKER DROP TARGET	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TOP LEFT STANDUP	19 SW#: 19 HEART QUEEN DROP TARGET	27 SW#: 27 RIGHT SPECIAL ROLLOVER	35 SW#: 35 JACK DROP TARGET SERIES	43 SW#: 43 INNER FLIPPER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 SPADE ACE STAR ROLLOVER	20 SW#: 20 SPADE QUEEN DROP TARGET	28 SW#: 28 RIGHT KICKER	36 SW#: 36 SPINNER	44 SW#: 44 OUTER FLIPPER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 HEART ACE STAR ROLLOVER	21 SW#: 21 QUEEN DROP TARGETS, SERIES	29 SW#: 29 OUTHOLE	37 SW#: 37 UPPER LEFT STANDUP	45 SW#: 45 LEFT JACK DROP TARGET STANDUP	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 CLUB ACE STAR ROLLOVER	22 SW#: 22 QUEEN DROP TARGET STANDUP	30 SW#: 30 LEFT KICKER	38 SW#: 38 TOP JET BUMPER	46 SW#: 46 RIGHT JACK DROP TARGET STANDUP	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 DIAMOND ACE STAR ROLLOVER	23 SW#: 23 RIGHT CENTER STANDUP	31 SW#: 31 LEFT SPECIAL ROLLOVER	39 SW#: 39 LEFT JET BU MPER	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 TOP RIGHT LANE STAR ROLLOVER	24 SW#: 24 PLAYFIELD TILT	32 SW#: 32 BOTTOM LEFT STANDUP	40 SW#: 40 BOTTOM JET BUMPER	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Police Force by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 L 3-BANK STANDUP TARGET (UPR)	25 SW#: 25 MID 3-BANK DROP TARGET (UPR)	33 UNUSED	41 SW#: 41 SKILL SWITCH (SPINNER)	49 SW#: 49 RIGHT OUTLANE	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 SW#: 18 L 3-BANK STANDUP TARGET (MID)	26 SW#: 26 MID 3-BANK DROP TARGET (MID)	34 SW#: 34 ENTER RIGHT RAMP	42 UNUSED	50 SW#: 50 LEFT OUTLANE	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1 (R)	19 SW#: 19 L 3-BANK STANDUP TARGET (LWR)	27 SW#: 27 MID 3-BANK DROP TARGET (LWR)	35 SW#: 35 TOP LEFT TARGET (TOP COP)	43 UNUSED	51 SW#: 51 LEFT RETURN LANE	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 R 3-BANK DROP TARGET (UPR)	28 UNUSED	36 SW#: 36 DIVERTER IN	44 UNUSED	52 SW#: 52 RIGHT RETURN LANE	60 SW#: 60 LEFT JET BUMPER
5 SW#: 5 CENTER COIN CHUTE	13 UNUSED	21 SW#: 21 R 3-BANK DROP TARGET (MID)	29 UNUSED	37 SW#: 37 R RAMP TO CAR	45 SW#: 45 ENTER MDL RAMP	53 UNUSED	61 SW#: 61 RIGHT JET BUMPER
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 BALL SHOOTER	22 SW#: 22 R 3-BANK DROP TARGET (LWR)	30 UNUSED	38 SW#: 38 R RAMP TO WIRE	46 SW#: 46 MDL RAMP SCORE	54 SW#: 54 G	62 SW#: 62 LWR JET BUMPER
7 SW#: 7 SLAM TILT	15 SW#: 15 TOP RIGHT EJECT	23 SW#: 23 BR EJECT	31 SW#: 31 CAR UP	39 UNUSED	47 UNUSED	55 SW#: 55 U	63 SW#: 63 BL KICKER ("SLING")
8 SW#: 8 HIGH SCORE RESET	16 UNUSED	24 SW#: 24 TOP LEFT EJECT	32 SW#: 32 CAR DOWN	40 UNUSED	48 UNUSED	56 SW#: 56 N	64 SW#: 64 BR KICKER ("SLING")

SW# number is the switch number as known to the game.

Pool Sharks by Williams

1 SW#: 1 PLUMB BOB TILT	9 UNUSED	17 SW#: 17 DROP TARGET H	25 SW#: 25 TOP STAND-UP TARGET	33 SW#: 33 DIVERTER	41 SW#: 41 BALL SHOOTER	49 UNUSED	57 SW#: 57 RIGHT FLIPPER
2 SW#: 2 A/C RELAY POSITION	10 SW#: 10 OUTHOLE	18 SW#: 18 DROP TARGET O	26 SW#: 26 MIDDLE STAND-UP TARGET	34 SW#: 34 TOP EJECT HOLE	42 SW#: 42 RIGHT RETURN RAMP	50 UNUSED	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH 1 RIGHT	19 SW#: 19 DROP TARGET T	27 SW#: 27 BOTTOM STAND-UP TARGET	35 SW#: 35 RIGHT BUMPER	43 SW#: 43 LEFT RETURN RAMP	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH 2 LEFT	20 SW#: 20 DROP TARGET S	28 SW#: 28 LEFT SHOOT LANE	36 SW#: 36 LEFT BUMPER	44 SW#: 44 LOCK IN GAME	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 LEFT DRAIN	21 SW#: 21 DROP TARGET H	29 SW#: 29 MIDDLE SHOOT LANE	37 SW#: 37 CENTER BUMPER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 LEFT RETURN	22 SW#: 22 DROP TARGET O	30 SW#: 30 RIGHT SHOOT LANE	38 SW#: 38 CAPTIVE STAND-UP TARGET	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT RETURN	23 SW#: 23 DROP TARGET T	31 SW#: 31 SHARK EJECT HOLE	39 SW#: 39 LEFT SLING	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT DRAIN	24 SW#: 24 ENTER RIGHT RAMP	32 SW#: 32 ENTER LEFT RAMP	40 SW#: 40 RIGHT SLING	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Popeye Saves The Earth by Williams

1 SW#: 11 LEFT LANE	9 SW#: 21 SLAM TILT	17 SW#: 31 LEFT POPPER	25 SW#: 41 TWO BANK	33 SW#: 51 RIGHT TROUGH	41 SW#: 61 LEFT CHEEK	49 SW#: 71 POPEYE "P1"	57 SW#: 81 UPPER EXIT TO WHEEL
2 SW#: 12 BUY-IN	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 RIGHT POPPER	26 SW#: 42 CENTER LANE	34 SW#: 52 TROUGH 2ND	42 SW#: 62 RIGHT CHEEK	50 SW#: 72 POPEYE "O"	58 SW#: 82 UPPER RAMP LEFT
3 SW#: 13 START BUTTON	11 SW#: 23 BALL LAUNCH	19 SW#: 33 RIGHT LOOP OPTO	27 SW#: 43 LOCKUP UPPER	35 SW#: 53 TROUGH 3RD	43 SW#: 63 ESCALATOR EXIT	51 SW#: 73 POPEYE "P2"	59 SW#: 83 UPPER RAMP RIGHT
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 RAMP ENTRANCE	28 SW#: 44 LOCKUP CENTER	36 SW#: 54 TROUGH 4TH	44 SW#: 64 ANIMAL DOLPHIN	52 SW#: 74 LEFT OUTLANE	60 SW#: 84 ANIMAL JACKPOT
5 SW#: 15 RIGHT LANE	13 SW#: 25 LEFT LOOP	21 SW#: 35 RAMP COMPLETION	29 SW#: 45 LOCKUP LOWER	37 SW#: 55 TROUGH 5TH	45 SW#: 65 ANIMAL EAGLE	53 SW#: 75 LEFT FLIPPER LANE	61 SW#: 85 RIGHT OUTLANE
6 SW#: 16 LEFT JET	14 SW#: 26 POPEYE "E1"	22 SW#: 36 ESCALATOR POPPER	30 SW#: 46 WHEEL OPTO 1	38 SW#: 56 LEFT TROUGH	46 SW#: 66 ANIMAL TIGER	54 SW#: 76 LEFT SLINGSHOT (KICKER)	62 SW#: 86 SHOOTER LANE
7 SW#: 17 RIGHT JET	15 SW#: 27 POPEYE "Y"	23 SW#: 37 WHEEL EXIT	31 SW#: 47 WHEEL OPTO 2	39 SW#: 57 TROUGH JAM	47 SW#: 67 ANIMAL PANDA	55 SW#: 77 RIGHT SLINGSHOT (KICKER)	63 SW#: 87 LOCKUP KICKER
8 SW#: 18 CENTER JET	16 SW#: 28 POPEYE "E2"	24 SW#: 38 'HAG' STANDUP	32 SW#: 48 WHEEL OPTO 3	40 SW#: 58 'SEA' STANDUP	48 SW#: 68 ANIMAL RHINO	56 SW#: 78 RIGHT LANE FLIPPER	64 SW#: 88 UPPER SHOT EXIT

SW# number is the switch number as known to the game.

Power Play by Bally

1 SW#: 1 L & R FEEDER FLIPPER LANES	9 SW#: 2 50 POINT REBOUND	17 SW#: 3 10 PT. DROP TAR. REB. (2)	25 SW#: 4 RT R.O. LANE BUTTON (BOT)	33 SW#: 5 LFT. R.O. BUTTON LANE (BOT)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II IF (MIDDLE, USED)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 RT. DROP D TAR. (BOTTOM)	11 SW#: 18 RT. DROP C TAR.	19 SW#: 19 RT. DROP B TAR.	27 SW#: 20 RT. DROP A TAR. (TOP)	35 SW#: 21 LEFT DROP D TAR. (BOTTOM)	43 SW#: 22 LEFT DROP C TAR.	51 SW#: 23 LEFT DROP B TAR.	59 SW#: 24 LEFT DROP A TAR. (TOP)
4 SW#: 25 DOWN POST R.O. BUTTON (2)	12 SW#: 26 CENTER ROLLOVER BUTTON	20 SW#: 27 RIGHT OUTLANE	28 SW#: 28 LEFT OUTLANE	36 SW#: 29 RIGHT R.O. BUTTON LANE (TOP)	44 SW#: 30 LEFT R.O. BUTTON LANE (TOP)	52 UNUSED	60 SW#: 32 TOP HOLE SAUCER
5 SW#: 33 TOP R.O. & BUTTON CENTER T	13 SW#: 34 RIGHT R.O. BUTTON LANE (CENT	21 SW#: 35 LEFT R.O. BUTTON LANE (CENTER)	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Punk by Gottlieb

1 SW#: #1 TOP DROP TARGET	9 SW#: 10 #2 TOP DROP TARGET	17 SW#: 20 #3 TOP RIGHT DROP TARGET	25 SW#: 30 LEFT RETURN ROLLOVER	33 UNUSED	41 SW#: 50 LEFT OUTSIDE ROLLOVER	49 UNUSED	57 UNUSED
2 SW#: 1 #1 LEFT DROP TARGET	10 SW#: 11 #2 LEFT DROP TARGET	18 SW#: 21 #3 LEFT DROP TARGET	26 SW#: 31 RIGHT RETURN ROLLOVER	34 UNUSED	42 SW#: 51 RIGHT OUTSIDE ROLLOVER	50 UNUSED	58 UNUSED
3 SW#: 2 #1 CENTER LEFT DROP TARGET	11 SW#: 12 #2 CENTER LEFT DROP TARGET	19 SW#: 22 #3 CENTER LEFT DROP TARGET	27 SW#: 32 CENTER LEFT SPOT TARGET	35 UNUSED	43 SW#: 52 CENTER RIGHT SPOT TARGET	51 UNUSED	59 UNUSED
4 SW#: 3 #1 CENTER RIGHT DROP TARGET	12 SW#: 13 #2 CENTER RIGHT DROP TARGET	20 SW#: 23 #3 CENTER RIGHT DROP TARGET	28 SW#: 33 10 POINT (2)	36 UNUSED	44 SW#: 53 BOTTOM POP BUMPER (2)	52 UNUSED	60 UNUSED
5 SW#: 4 #1 TOP ROLLOVER	13 SW#: 14 #2 TOP ROLLOVER	21 SW#: 24 #3 TOP ROLLOVER	29 SW#: 34 TOP POP (3) BUMPER	37 UNUSED	45 SW#: 54 3RD POSITION CARD HOLDER	53 UNUSED	61 UNUSED
6 SW#: 5 TOP LEFT HOLE	14 SW#: 15 LEFT SIDE ROLLOVER	22 SW#: 25 KICKING (5) TARGET	30 SW#: 35 ON BOTTOM RIGHT FLIPPER	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 TOP RIGHT HOLE	15 SW#: 16 RIGHT SIDE ROLLOVER	23 SW#: 26 KICKING (3) RUBBER	31 SW#: 36 OUTHOLE	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

QBerts Quest by Gottlieb

1 SW#: #1 LEFT DROP TARGET	9 SW#: 10 #2 LEFT DROP TARGET	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 50 #1 RIGHT DROP TARGET	49 SW#: 60 #2 RIGHT DROP TARGET	57 UNUSED
2 SW#: 1 #1 LEFT SPOT TARGET	10 SW#: 11 #2 LEFT SPOT TARGET	18 UNUSED	26 UNUSED	34 UNUSED	42 SW#: 51 #3 LEFT SPOT TARGET	50 SW#: 61 BOTTOM LEFT ROLLUNDER	58 UNUSED
3 SW#: 2 #1 RIGHT SPOT TARGET	11 SW#: 12 #2 RIGHT SPOT TARGET	19 UNUSED	27 UNUSED	35 UNUSED	43 SW#: 52 #3 RIGHT SPOT TARGET	51 SW#: 62 BOTTOM RIGHT ROLLUNDER	59 UNUSED
4 SW#: 3 LEFT RETURN ROLLOVER	12 SW#: 13 RIGHT RETURN ROLLOVER	20 UNUSED	28 UNUSED	36 UNUSED	44 SW#: 53 BOTTOM CENTER ROLLOVER	52 SW#: 63 TOP LEFT ROLLUNDER	60 UNUSED
5 SW#: 4 RIGHT SHOOTER	13 SW#: 14 LEFT CAPTIVE LOOP ROLLOVER	21 UNUSED	29 UNUSED	37 UNUSED	45 SW#: 54 LEFT SHOOTER	53 SW#: 64 TOP RIGHT ROLLUNDER	61 UNUSED
6 SW#: 5 TOP CENTER SPOT TARGET	14 SW#: 15 TOP ROLLOVER	22 UNUSED	30 UNUSED	38 UNUSED	46 SW#: 55 TOP RIGHT ROLLOVER	54 SW#: 65 TOP LEFT ROLLOVER	62 UNUSED
7 SW#: 6 POP BUMPER (2)	15 SW#: 16 10 POINT (3)	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Quicksilver by Stern

1 SW#: 1 COIN CHUTE	9 SW#: 2 COIN CHUTE	17 SW#: 3 COIN CHUTE	25 SW#: 4 RIGHT SPINNER	33 SW#: 5 LEFT SPINNER	41 SW#: 6 CREDIT	49 SW#: 7 TILT	57 SW#: 8 SLAM
2 SW#: 9 RIGHT POP BUMPER	10 SW#: 10 LEFT POP BUMPER	18 SW#: 11 BOTTOM POP BUMPER	26 SW#: 12 LEFT SLINGSHOT	34 SW#: 13 RIGHT SLINGSHOT	42 SW#: 14 BOTTOM LEFT STAND-UP TARGET	50 SW#: 15 CENTER LEFT STAND-UP TARGET	58 SW#: 16 TOP LEFT STAND-UP TARGET
3 SW#: 17 LEFT TOP (Q) ROLL-OVER LANE	11 SW#: 18 TOP LANE (U) ROLL-OVER	19 SW#: 19 TOP LANE (I) ROLL-OVER	27 SW#: 20 TOP RIGHT ROLL-OVER LANE (C)	35 SW#: 21 CENTER DROP TARGET (1) (HIGHEST)	43 SW#: 22 CENTER DROP TARGET (2)	51 SW#: 23 CENTER DROP TARGET (3)	59 SW#: 24 CENTER DROP TARGET (4) (LOWEST)
4 SW#: 25 RIGHT TARGET STAND-UP (TOP)	12 SW#: 26 CENTER (TOP) STAND-UP TARGET	20 SW#: 27 BOTTOM (TOP) STAND-UP TARGET	28 SW#: 28 SPECIAL ROLL-OVER SWITCH	36 SW#: 29 KICKOUT HOLE	44 SW#: 30 RIGHT DROP TARGET (1) (HIGHEST)	52 SW#: 31 RIGHT DROP TARGET (2)	60 SW#: 32 RIGHT DROP TARGET (3) (LOWEST)
5 SW#: 33 OUTHOLE	13 SW#: 34 LEFT OUTSIDE LANE	21 SW#: 35 RIGHT LANE OUTSIDE	29 SW#: 36 LEFT RETURN LANE	37 SW#: 37 RIGHT RETURN LANE	45 SW#: 38 ALL 10 POINT BOUNCE SWITCH	53 SW#: 39 10 POINT ROLL-OVER SWITCH (NO SHF)	61 SW#: 40 LANE TARGET STAND-UP
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Rack Em Up by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 LEFT DROP TARGET	41 SW#: 50 #2 LEFT DROP TARGET	49 SW#: 60 #3 LEFT DROP TARGET	57 SW#: 70 #4 LEFT DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #1 RIGHT DROP TARGET	42 SW#: 51 #2 RIGHT DROP TARGET	50 SW#: 61 #3 RIGHT DROP TARGET	58 SW#: 71 ON RIGHT FLIPPER
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 #1 TOP ROLLOVER	43 SW#: 52 #2 TOP ROLLOVER	51 SW#: 62 #3 TOP ROLLOVER	59 SW#: 72 #4 TOP ROLLOVER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT SIDE ROLLOVER	44 SW#: 53 RIGHT SIDE ROLLOVER	52 SW#: 63 POP BUMPERS (3)	60 SW#: 73 10 POINT (4)
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 RIGHT RETURN ROLLOVER	45 SW#: 54 RIGHT OUTSIDE ROLLOVER	53 SW#: 64 SPINNER	61 SW#: 74 LEFT OUTSIDE ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT OUTSIDE RETURN ROLLOVER	46 SW#: 55 SPOT TARGET	54 SW#: 65 SHOOTER	62 SW#: 75 LEFT INSIDE RETURN ROLLOVER
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Radical by Williams

1 SW#: 1 PLUMB BOB TILT	9 UNUSED	17 SW#: 17 TOP SPINNER	25 UNUSED	33 UNUSED	41 UNUSED	49 SW#: 49 TOP SLING	57 SW#: 57 RIGHT FLIPPER
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 X RAMP LEFT	26 UNUSED	34 UNUSED	42 UNUSED	50 SW#: 50 TOP JET	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH 1 RIGHT	19 SW#: 19 X RAMP RIGHT	27 SW#: 27 MIDDLE MAN	35 UNUSED	43 SW#: 43 ADVANCE BONUS	51 SW#: 51 LEFT OUTLANE	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH 2 LEFT	20 SW#: 20 BALL DIVERTER	28 SW#: 28 ADVANCE X BONUS	36 UNUSED	44 SW#: 44 BONUS INCREASES	52 SW#: 52 LEFT JET	60 UNUSED
5 SW#: 5 CENTER COIN	13 UNUSED	21 UNUSED	29 SW#: 29 RIGHT SPIN	37 SW#: 37 LEFT LOOP	45 UNUSED	53 SW#: 53 RIGHT JET	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 BOTTOM DROP TGT RIGHT	30 SW#: 30 TOP DROP TGT RIGHT	38 SW#: 38 LOCK LANE	46 SW#: 46 LEFT RETURN	54 SW#: 54 BOTTOM JET	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT RAMP	23 SW#: 23 BOTTOM DROP TGT MIDDLE	31 SW#: 31 TOP DROP TGT MIDDLE	39 SW#: 39 LEFT LOCKUP TOP	47 SW#: 47 RIGHT RETURN	55 SW#: 55 LEFT SLING	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 BALL POPPER	24 SW#: 24 BOTTOM DROP TGT LEFT	32 SW#: 32 TOP DROP TGT LEFT	40 SW#: 40 LEFT LOCKUP	48 SW#: 48 RIGHT OUTLANE	56 SW#: 56 RIGHT SLING	64 UNUSED

SW# number is the switch number as known to the game.

Rapid Fire by Bally

1 SW#: 1 FIRE LEFT GUN	9 SW#: 2 FIRE RIGHT GUN	17 SW#: 3 GUN LEFT MOVE BUTTON	25 SW#: 4 GUN RIGHT MOVE BUTTON	33 SW#: 5 LASER BUTTON (RIGHT)	41 SW#: 6 CREDIT (ON BUTTON DOOR)	49 SW#: 7 PANIC BUTTON (LEFT)	57 SW#: 8 SPECIAL (ON CREDIT BUTTON CABINET)
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (3)
3 SW#: 17 RIGHT #1 TANK (TOP)	11 SW#: 18 RIGHT #2 TANK	19 SW#: 19 RIGHT #3 TANK	27 SW#: 20 RIGHT #4 TANK (BOTTOM)	35 SW#: 21 LEFT #1 TANK (TOP)	43 SW#: 22 LEFT #2 TANK	51 SW#: 23 LEFT #3 TANK	59 SW#: 24 LEFT #4 TANK (BOTTOM)
4 SW#: 25 TOP #1 FLAP (RIGHT SIDE)	12 SW#: 26 TOP #2 FLAP	20 SW#: 27 TOP #3 FLAP	28 SW#: 28 TOP #4 FLAP	36 SW#: 29 TOP #5 FLAP	44 SW#: 30 TOP #6 FLAP	52 SW#: 31 TOP #7 FLAP	60 SW#: 32 TOP #8 FLAP
5 SW#: 33 TOP #9 FLAP	13 SW#: 34 TOP #10 FLAP	21 SW#: 35 TOP #11 FLAP	29 SW#: 36 TOP #12 FLAP	37 SW#: 37 TOP #13 FLAP	45 SW#: 38 TOP #14 FLAP	53 SW#: 39 TOP #15 FLAP (LEFT SIDE)	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Raven by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 TOP SPOT TARGET	41 SW#: 50 #2 TOP SPOT TARGET	49 SW#: 60 #3 TOP SPOT TARGET	57 SW#: 70 #4 TOP SPOT TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #1 LEFT SPOT TARGET	42 SW#: 51 #2 LEFT SPOT TARGET	50 SW#: 61 #3 LEFT SPOT TARGET	58 SW#: 71 LEFT SIDE ROLLOVER
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 #1 RIGHT SPOT TARGET	43 SW#: 52 #2 RIGHT SPOT TARGET	51 SW#: 62 #3 RIGHT SPOT TARGET	59 SW#: 72 RIGHT SIDE ROLLOVER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 #1 TOP ROLLOVER	44 SW#: 53 #2 TOP ROLLOVER	52 SW#: 63 #3 TOP ROLLOVER	60 SW#: 73 TOP STAR ROLLOUNDER, ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 TOP LEFT ROLLOVER TARGET	45 SW#: 54 TOP RIGHT ROLLOVER DROP TARGET	53 SW#: 64 BOTTOM LEFT ROLLOVER DROP TARGET	61 SW#: 74 BOTTOM RIGHT ROLLOVER DROP TARGET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 RUBBER (4) SWITCHES	46 SW#: 55 RETURN (2) ROLLOVERS	54 SW#: 65 OUTSIDE (2) ROLLOVERS	62 SW#: 75 RIGHT FLIPPER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 POP BUMPERS (4)	47 UNUSED	55 UNUSED	63 SW#: 76 SPINNER
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Ready Aim Fire by Gottlieb

1 SW#: TOP ROLLOVER	9 SW#: 10 #1 SPOT TARGET	17 SW#: 20 #2 SPOT TARGET	25 SW#: 30 #3 SPOT TARGET	33 SW#: 40 RIGHT RETURN ROLLOVER, LEFT RETURN ROLLOVER	41 SW#: 50 TOP LEFT POP BUMPER	49 SW#: 60 BOTTOM LEFT POP BUMPER	57 UNUSED
2 SW#: 1 #7 SPOT TARGET	10 SW#: 11 #8 SPOT TARGET	18 SW#: 21 #9 SPOT TARGET	26 SW#: 31 #10 SPOT TARGET	34 SW#: 41 LEFT OUTSIDE ROLLOVER	42 SW#: 51 BOTTOM RIGHT POP BUMPER	50 SW#: 61 CENTER TOP POP BUMPER	58 UNUSED
3 SW#: 2 #4 SPOT TARGET	11 SW#: 12 #5 SPOT TARGET	19 SW#: 22 #6 SPOT TARGET	27 SW#: 32 10 POINT (4) 7), KICKING RUBBER	35 SW#: 42 RIGHT OUTSIDE ROLLOVER	43 UNUSED	51 SW#: 62 TOP RIGHT POP BUMPER	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Red Teds Roadshow by Williams

1 SW#: 11 TED'S MOUTH	9 SW#: 21 SLAM TILT	17 SW#: 31 SKILL SHOT LOWER	25 SW#: 41 TROUGH JAM	33 SW#: 51 SPINNER	41 SW#: 61 LEFT SLING	49 SW#: 71 RIGHT RAMP ENTER	57 SW#: 81 WHITE STANDUP
2 SW#: 12 DOZER DOWN	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 SKILL SHOT UPPER	26 SW#: 42 TROUGH 1	34 SW#: 52 LOCKUP 1	42 SW#: 62 RIGHT SLING	50 SW#: 72 RIGHT RAMP EXIT CENTER	58 SW#: 82 RED STANDUP
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 RIGHT SHOOTER	27 SW#: 43 TROUGH 2	35 SW#: 53 LOCKUP 2	43 SW#: 63 LEFT JET	51 SW#: 73 FLYING ROCKS 5X BLAST	59 SW#: 83 YELLOW STANDUP
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 RADIO 3-BANK	28 SW#: 44 TROUGH 3	36 SW#: 54 LOCK KICKOUT	44 SW#: 64 TOP JET	52 SW#: 74 FLYING ROCKS RADIO RIOT	60 SW#: 84 ORANGE STANDUP
5 SW#: 15 DOZER UP	13 SW#: 25 RED'S MOUTH	21 SW#: 35 RED STANDUP UPPER	29 SW#: 45 TROUGH 4	37 SW#: 55 RIGHT RAMP EXIT LEFT	45 SW#: 65 RIGHT JET	53 SW#: 75 FLYING ROCKS EXTRA BALL	61 SW#: 85 MIDDLE LEFT FLIPPER TOP
6 SW#: 16 RIGHT OUTLANE	14 SW#: 26 LEFT OUTLANE	22 SW#: 36 RED STANDUP LOWER	30 SW#: 46 RIGHT LOOP ENTER	38 SW#: 56 LEFT RAMP EXIT	46 UNUSED	54 SW#: 76 FLYING ROCKS TOP	62 SW#: 86 MIDDLE LEFT FLIPPER BOTTOM
7 SW#: 17 RIGHT INLANE 2	15 SW#: 27 LEFT INLANE	23 SW#: 37 HIT RED	31 SW#: 47 HIT BULLDOZER	39 SW#: 57 LEFT RAMP ENTER	47 UNUSED	55 SW#: 77 UNDER BLAST ZONE	63 UNUSED
8 SW#: 18 RIGHT INLANE 1	16 SW#: 28 BLAST ZONE 3-BANK	24 SW#: 38 RIGHT LOOP EXIT	32 SW#: 48 HIT TED	40 SW#: 58 LEFT SHOOTER	48 UNUSED	56 SW#: 78 START CITY	64 UNUSED

SW# number is the switch number as known to the game.

Rescue 911 by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 UNUSED
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 TOP POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 LEFT KICKING TARGET	50 SW#: 16 RIGHT TARGET KICKING	58 UNUSED
3 SW#: 20 DROP TARGET #1	11 SW#: 21 SHOOTER LANE ROLLOVER	19 SW#: 22 CENTER ISLAND RUBBER	27 SW#: 23 OUTHOLE	35 SW#: 24 BALL LIFT (UP)	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 30 DROP TARGET #2	12 SW#: 31 TOP RIGHT TARGET	20 SW#: 32 POP BUMPER RUBBER	28 SW#: 33 TROUGH	36 SW#: 34 BALL LIFT (DOWN)	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Ripleys Believe It Or Not by Stern

1 SW#: 1 LT (UK ONLY)	9 SW#: 9 HEAD STAND-UP	17 SW#: 17 TOMBSTONE 1	25 SW#: 25 LOWER LEFT POP	33 SW#: 33 BONUS X - INLANE LFT	41 SW#: 41 VARI-TARGET OPTO 1	49 SW#: 49 UPPER LEFT POP	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 SUPER OPTO JACKPOT	26 SW#: 26 LOWER RIGHT POP	34 SW#: 34 BONUS X - INLANE MID	42 SW#: 42 VARI-TARGET OPTO 2	50 SW#: 50 UPPER RIGHT POP	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 TOMBSTONE 5	27 SW#: 27 LOWER BOTTOM POP	35 SW#: 35 BONUS X - RT INLANE	43 SW#: 43 VARI-TARGET OPTO 3	51 SW#: 51 UPPER BOTTOM POP	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 LEFT SPINNER	28 SW#: 28 SIDE SCOOP ENTRY	36 SW#: 36 RIGHT ORBIT	44 SW#: 44 LOCK 1 - TOP	52 SW#: 52 VARI-TARGET VUK	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 RIGHT SPINNER	29 SW#: 29 SCOOP VUK	37 UNUSED	45 SW#: 45 LOCK 1 - MIDDLE	53 SW#: 53 RIGHT RAMP	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 TOMBSTONE 4	30 SW#: 30 BEHIND HEAD	38 SW#: 38 MINI LEFT PLAYFIELD	46 SW#: 46 LOCK 1 - BOTTOM	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 SHRUNKEN HEAD OPTO	31 SW#: 31 LEFT RAMP MAKE	39 SW#: 39 MINI CENTER PLAYFIELD	47 SW#: 47 LEFT JACKPOT LOOP	55 SW#: 55 TOURNAMENT START	63 UNUSED
8 SW#: 8 RT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 IDOL EYE OPTO	32 SW#: 32 TOMBSTONE 2+3	40 SW#: 40 MINI RIGHT PLAYFIELD	48 SW#: 48 LEFT ORBIT	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Riverboat Gambler by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 SHOOTER LANE	17 SW#: 17 LEFT RAMP RETURN	25 SW#: 25 1/4 SKILL SHOT	33 SW#: 33 C STAND-UP TARGET	41 UNUSED	49 SW#: 49 F LEFT DROP TARGET	57 SW#: 57 RIGHT FLIPPER
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT OUTLANE	26 SW#: 26 1/2 SKILL SHOT	34 SW#: 34 H STAND-UP TARGET	42 SW#: 42 PASTSKILL SHOT	50 SW#: 50 I LEFT DROP TARGET	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT TROUGH	19 SW#: 19 LEFT RETURN LANE	27 SW#: 27 3/4 SKILL SHOT	35 SW#: 35 I STAND-UP TARGET	43 SW#: 43 21 STAND-UP TARGET	51 SW#: 51 V LEFT DROP TARGET	59 SW#: 59 ROULETTE WHEEL
4 SW#: 4 RIGHT COIN	12 SW#: 12 CENTER TROUGH	20 SW#: 20 SKILL SHOT MADE	28 SW#: 28 LEFT SLING	36 SW#: 36 P STAND-UP TARGET	44 SW#: 44 LOCKER / EJECT	52 SW#: 52 E LEFT DROP TARGET	60 SW#: 60 RED BUTTON
5 SW#: 5 CENTER COIN	13 SW#: 13 RIGHT TROUGH	21 UNUSED	29 SW#: 29 TOP JET	37 SW#: 37 S STAND-UP TARGET	45 SW#: 45 RAMP DOWN NOW	53 SW#: 53 C RIGHT DROP TARGET	61 SW#: 61 PASS BUTTON
6 SW#: 6 LEFT COIN	14 SW#: 14 RIGHT RAMP ENTRY	22 SW#: 22 RIGHT RETURN LANE	30 SW#: 30 BOTTOM JET	38 UNUSED	46 UNUSED	54 SW#: 54 A RIGHT DROP TARGET	62 SW#: 62 GREEN BUTTON
7 SW#: 7 SLAM TILT	15 SW#: 15 TOP RAMP ENTRY	23 SW#: 23 RIGHT OUTLANE	31 SW#: 31 RIGHT JET	39 SW#: 39 TOP RAMP EXIT	47 UNUSED	55 SW#: 55 R RIGHT DROP TARGET	63 SW#: 63 BLACK BUTTON
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT RAMP ENTRY	24 SW#: 24 RIGHT RAMP RETURN	32 SW#: 32 RIGHT SLING	40 SW#: 40 BUST CARD	48 SW#: 48 BALL AT DIVERTER	56 SW#: 56 D RIGHT DROP TARGET	64 SW#: 64 REBOUND SWITCH

SW# number is the switch number as known to the game.

Road Kings by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 R TARGET	17 SW#: 17 S TARGET	25 SW#: 25 LEFT JET BUMPER	33 SW#: 33 RIGHT TEN POINT	41 SW#: 41 RIGHT ROUGH	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 OTARGET	18 SW#: 18 LANE 1	26 SW#: 26 RIGHT JET BUMPER	34 SW#: 34 UPPER LEFT KICKER	42 SW#: 42 LEFT TROUGH	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 A TARGET	19 SW#: 19 LANE 2	27 SW#: 27 BOTTOM JET BUMPER	35 SW#: 35 RIGHT ROLLUNDER	43 SW#: 43 LEFT KICKER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 D TARGET	20 SW#: 20 LANE 4	28 SW#: 28 LEFT OUTLANE	36 SW#: 36 LEFT ROLLUNDER	44 SW#: 44 RIGHT KICKER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 K TARGET	21 SW#: 21 LANE 3	29 SW#: 29 RIGHT OUTLANE	37 SW#: 37 LEFT EJECT	45 SW#: 45 LEFT TEN POINT	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 I TARGET	22 SW#: 22 RIGHT RAMP - ENTER	30 SW#: 30 DROP TARGET	38 SW#: 38 CENTER EJECT	46 SW#: 46 PLAYFIELD TILT	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 N TARGET	23 SW#: 23 RAMP RAISE O (E S)	31 SW#: 31 CENTER RAMP - ENTER	39 SW#: 39 BALL SHOOTER	47 SW#: 47 LEFT FLIPPER (E O S)	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 G TARGET	24 SW#: 24 TOP JET BUMPER	32 SW#: 32 CENTER RAMP - RIGHT EXIT	40 SW#: 40 OUTHOLE	48 SW#: 48 RIGHT (E O FLIPPER S)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

RoboWar by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 SPINNER	33 SW#: 40 #1 TOP DROP TARGET	41 SW#: 50 #2 TOP DROP TARGET	49 SW#: 60 #3 TOP DROP TARGET	57 SW#: 70 #4 TOP DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 SW#: 31 TOP RIGHT ROLLUNDER	34 SW#: 41 #1 RIGHT DROP TARGET	42 SW#: 51 #2 RIGHT DROP TARGET	50 SW#: 61 #3 RIGHT DROP TARGET	58 SW#: 71 STARGATE ROLLUNDER
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 #1 CENTER DROP TARGET	43 SW#: 52 #2 CENTER DROP TARGET	51 SW#: 62 LEFT SPOT TARGET	59 SW#: 72 STARGATE SPOT TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 33 KICKING (2) RUBBERS	36 SW#: 43 #1 LEFT DROP TARGET	44 SW#: 53 TOP LEFT POP BUMPER	52 SW#: 63 TOP RIGHT POP BUMPER	60 SW#: 73 BOTTOM POP BUMPER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 "R" #1 TOP ROLLOVER	45 SW#: 54 "O" #2 TOP ROLLOVER	53 SW#: 64 "B" #3 TOP ROLLOVER	61 SW#: 74 "O" #4 TOP ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 SW#: 35 RIGHT SIDE ROLLOVER	38 SW#: 45 LEFT OUT ROLLOVER	46 SW#: 55 LEFT RETURN ROLLOVER	54 SW#: 65 RIGHT OUT ROLLOVER	62 SW#: 75 RIGHT RETURN ROLLOVER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 SW#: 36 SHOOTER LANE ROLLOVER	39 SW#: 46 RIGHT FLIPPER	47 SW#: 56 #2 TROUGH	55 SW#: 66 OUTHOLE	63 SW#: 76 HOLE
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Robocop by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LASER KICK	25 SW#: 25 2 LANE	33 SW#: 33 GREEN TARGET 1 (LEFT)	41 SW#: 41 YELLOW 1 TARGET (LEFT)	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 0 LANE	34 SW#: 34 GREEN TARGET 2	42 SW#: 42 YELLOW 2 TARGET	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 9 LANE	35 SW#: 35 GREEN TARGET 3	43 SW#: 43 YELLOW 3 TARGET (RIGHT)	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2	20 SW#: 20 RIGHT RETURN	28 SW#: 28 LEFT EJECT	36 SW#: 36 GREEN TARGET 4 (RIGHT)	44 SW#: 44 SPINNER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 CENTER EJECT	37 SW#: 37 10 POINT TOP	45 SW#: 45 VUK	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 RIGHT EJECT	38 SW#: 38 10 POINT BOTTOM	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 RIGHT TRAP BALL	31 SW#: 31 LEFT RAMP	39 UNUSED	47 SW#: 47 CENTER TURBO BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 SW#: 32 RIGHT RAMP	40 UNUSED	48 SW#: 48 RIGHT TURBO BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Rock by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 (UPPER) #1 DROP TARGET	41 SW#: 50 (UPPER) #2 DROP TARGET	49 SW#: 60 (UPPER) #3 DROP TARGET	57 SW#: 70 (UPPER) #4 DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 10 POINT (8)	42 SW#: 51 (LOWER) #1 DROP TARGET	50 SW#: 61 (LOWER) #2 DROP TARGET	58 SW#: 71 (LOWER) #3 DROP TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 RIGHT FLIPPER	43 SW#: 52 SPOT TARGET	51 SW#: 62 (LOWER) #4 DROP TARGET	59 SW#: 72 (LOWER) #5 DROP TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 ROLLUNDER	44 SW#: 53 #1 TOP ("A") ROLLOVER	52 SW#: 63 #2 TOP ("B") ROLLOVER	60 SW#: 73 #3 TOP ("C") ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 RIGHT OUTSIDE ROLLOVER	45 SW#: 54 RIGHT RETURN ROLLOVER	53 SW#: 64 LEFT RETURN ROLLOVER	61 SW#: 74 LEFT OUTSIDE ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 RIGHT SPINNER	46 SW#: 55 RIGHT SIDE ROLLOVER	54 SW#: 65 LEFT SIDE ROLLOVER	62 SW#: 75 LEFT SPINNER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 RIGHT TOP ROLLOVER	47 UNUSED	55 UNUSED	63 SW#: 76 LEFT TOP ROLLOVER
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Rock Encore by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 DROP TARGET (UPPER)	41 SW#: 50 #2 DROP TARGET (UPPER)	49 SW#: 60 #3 DROP TARGET (UPPER)	57 SW#: 70 #4 DROP TARGET (UPPER)
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 10 POINT (8)	42 SW#: 51 #1 DROP TARGET (LOWER)	50 SW#: 61 #2 DROP TARGET (LOWER)	58 SW#: 71 #3 DROP TARGET (LOWER)
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 RIGHT FLIPPER (LOWER)	43 SW#: 52 SPOT TARGET	51 SW#: 62 #4 DROP TARGET (LOWER)	59 SW#: 72 #5 DROP TARGET (LOWER)
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 ROLLUNDER	44 SW#: 53 #1 TOP ROLLOVER	52 SW#: 63 #2 TOP ROLLOVER	60 SW#: 73 #3 TOP ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 RIGHT OUTSIDE ROLLOVER	45 SW#: 54 RIGHT RETURN ROLLOVER	53 SW#: 64 LEFT RETURN ROLLOVER	61 SW#: 74 LEFT OUTSIDE ROLLOVER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 RIGHT SPINNER	46 SW#: 55 RIGHT SIDE ROLLOVER	54 SW#: 65 LEFT SIDE ROLLOVER	62 SW#: 75 LEFT SPINNER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 RIGHT TOP ROLLOVER	47 UNUSED	55 UNUSED	63 SW#: 76 LEFT TOP ROLLOVER
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Rocky by Gottlieb

1 SW#: #1 TOP DROP TARGET	9 SW#: 10 #2 TOP DROP TARGET	17 SW#: 20 #3 TOP DROP TARGET	25 UNUSED	33 UNUSED	41 SW#: 50 #4 TOP DROP TARGET	49 SW#: 60 #5 TOP DROP TARGET	57 UNUSED
2 SW#: 1 #1 RIGHT DROP TARGET	10 SW#: 11 #2 RIGHT DROP TARGET	18 SW#: 21 #3 RIGHT DROP TARGET	26 UNUSED	34 UNUSED	42 SW#: 51 RIGHT RETURN ROLLOVER	50 SW#: 61 RIGHT FLIPPER	58 UNUSED
3 SW#: 2 #1 LEFT DROP TARGET	11 SW#: 12 #2 LEFT DROP TARGET	19 SW#: 22 #3 LEFT DROP TARGET	27 UNUSED	35 UNUSED	43 SW#: 52 LEFT RETURN ROLLOVER	51 UNUSED	59 UNUSED
4 SW#: 3 UPPER TOP POP BUMPER	12 SW#: 13 UPPER LEFT POP BUMPER	20 SW#: 23 UPPER RIGHT POP BUMPER	28 UNUSED	36 UNUSED	44 UNUSED	52 SW#: 63 BOTTOM RIGHT POP BUMPER	60 UNUSED
5 SW#: 4 HOLE	13 SW#: 14 TOP RIGHT ROLLOVER	21 SW#: 24 SHOOTER	29 UNUSED	37 UNUSED	45 SW#: 54 LEFT OUT ROLLOVER	53 SW#: 64 RIGHT OUT ROLLOVER	61 UNUSED
6 SW#: 5 #1 CENTER ROLLOVER	14 SW#: 15 #2 CENTER ROLLOVER	22 SW#: 25 #3 CENTER ROLLOVER	30 UNUSED	38 UNUSED	46 SW#: 55 SPINNER	54 SW#: 65 SPOT TARGET	62 UNUSED
7 SW#: 6 ROLLUNDER	15 SW#: 16 10 POINT (3) & KICKING RUBBERS (5)	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Roller Coaster Tycoon by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 UNUSED	17 SW#: 17 (R)&D STANDUP	25 SW#: 25 LEFT TOP (A) LANE	33 SW#: 33 LEFT RAMP RETURN	41 UNUSED	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 R(&)D STANDUP	26 SW#: 26 MIDDLE TOP LANE (B)	34 SW#: 34 CENTER RAMP MADE	42 SW#: 42 LOCKUP 1 (TOP)	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 R&(D) STANDUP	27 SW#: 27 RIGHT TOP LANE (C)	35 SW#: 35 RIGHT RAMP MADE	43 SW#: 43 LOCKUP 2 (BOTTOM)	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 WHEEL OPTO	28 SW#: 28 DUMMY LEFT	36 SW#: 36 GHOST DOWN	44 SW#: 44 (E)AT STANDUP	52 SW#: 52 ROCKET	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 MINI FLIPPER FEED	29 SW#: 29 DUMMY RIGHT	37 SW#: 37 RIGHT ORBIT	45 SW#: 45 E(A)T STANDUP	53 SW#: 53 TOURNAMENT BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 MINI FLIPPER STANDUP	30 SW#: 30 DROP BANK LEFT	38 SW#: 38 SWEEPER OPTO	46 SW#: 46 EA(T) STANDUP	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 CHICAGO LOOP	31 SW#: 31 DROP BANK MIDDLE	39 SW#: 39 SWEEPER DROP	47 SW#: 47 KIOSK SCOOP	55 UNUSED	63 UNUSED
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 LEFT ORBIT	32 SW#: 32 DROP BANK RIGHT	40 SW#: 40 GHOST STANDUP	48 SW#: 48 KIOSK TUNNEL	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Roller Disco by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 #1 DROP TARGET	10 SW#: 11 #2 DROP TARGET	18 SW#: 12 #3 DROP TARGET	26 SW#: 13 #4 DROP TARGET	34 SW#: 14 #5 DROP TARGET
3 SW#: 20 #6 DROP TARGET	11 SW#: 21 #7 DROP TARGET	19 SW#: 22 #8 DROP TARGET	27 SW#: 23 #9 DROP TARGET	35 SW#: 24 #10 DROP TARGET
4 SW#: 30 1X ROLLOVER BUTTON	12 SW#: 31 2X ROLLOVER BUTTON	20 SW#: 32 3X ROLLOVER BUTTON	28 SW#: 33 4X ROLLOVER BUTTON	36 SW#: 34 5X ROLLOVER BUTTON
5 SW#: 40 "A" ROLLOVER	13 SW#: 41 HOLE	21 SW#: 42 BOTTOM ROLLOVER	29 SW#: 43 "B" ROLLOVER	37 SW#: 44 TOP ROLLOVER BUTTON
6 SW#: 50 "C" ROLLOVER	14 SW#: 51 KICKING (2) RUBBER	22 SW#: 52 10 POINT (5)	30 SW#: 53 "D" ROLLOVER	38 SW#: 54 POP BUMPER (3)
7 SW#: 60 RIGHT EXTRA BALL TARGET	15 SW#: 61 RIGHT BOTTOM ROLLOVER BUTTON	23 SW#: 62 RIGHT RETURN ROLLOVER	31 SW#: 63 RIGHT SIDE ROLLOVER	39 SW#: 64 SPECIAL TARGET
8 SW#: 70 LEFT EXTRA BALL TARGET	16 SW#: 71 LEFT BOTTOM ROLLOVER BUTTON	24 SW#: 72 LEFT RETURN ROLLOVER	32 SW#: 73 LEFT SIDE ROLLOVER	40 UNUSED

SW# number is the switch number as known to the game.

Rollergames by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 UNUSED	25 SW#: 25 5-BANK DR S TGT	33 SW#: 33 BL KICKER ("SLING")	41 SW#: 41 1 (TOP STANDUP)	49 SW#: 49 W TOP DR TGT	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 UNUSED	18 SW#: 18 RIGHT RETURN LANE	26 SW#: 26 5-BANK DR K TGT	34 SW#: 34 BR KICKER ("SLING")	42 SW#: 42 2 (TOP STANDUP)	50 SW#: 50 A TOP DR TGT	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #3 (LEFT)	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 5-BANK DR A TGT	35 SW#: 35 LEFT JET BUMPER	43 SW#: 43 3 (TOP STANDUP)	51 SW#: 51 R TOP DR TGT	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 SHOOTER LANE	28 SW#: 28 5-BANK DR T TGT	36 SW#: 36 RIGHT JET BUMPER	44 SW#: 44 EXTRA BALL	52 SW#: 52 RAMP LOCK ENTRY	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 BALL TROUGH #3 (RIGHT)	21 SW#: 21 L JETWAY TOP	29 SW#: 29 5-BANK DR E TGT	37 SW#: 37 LOWER JET BUMPER	45 UNUSED	53 SW#: 53 BALL LOCK 1	61 UNUSED
6 SW#: 6 LEFT COIN	14 UNUSED	22 SW#: 22 R JETWAY TOP	30 SW#: 30 A (BR STANDUP)	38 SW#: 38 RAMP 1 DIVERTER	46 SW#: 46 J (TOP LANE)	54 SW#: 54 BALL LOCK 2	62 UNUSED
7 SW#: 7 SLAM TILT	15 UNUSED	23 SW#: 23 LEFT SPINNER	31 SW#: 31 B (BR STANDUP)	39 SW#: 39 RAMP 2 DIVERTER	47 SW#: 47 E (TOP LANE)	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 BALL POPPER	24 SW#: 24 RIGHT SPINNER	32 SW#: 32 C (BR STANDUP)	40 SW#: 40 LEFT OUTLANE (LOWER L KICKBACK)	48 SW#: 48 T (TOP LANE)	56 SW#: 56 LEFT RETURN LANE	64 UNUSED

SW# number is the switch number as known to the game.

Rolling Stones by Bally

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 #1 TARGET	34 SW#: 13 SAUCER DROP TARGET	42 SW#: 14 RIGHT OUTLANE	50 SW#: 15 LEFT OUTLANE	58 SW#: 16 SLAM (2)
3 SW#: 17 "K" ROLLOVER	11 SW#: 18 "C" ROLLOVER	19 SW#: 19 "O" ROLLOVER	27 SW#: 20 "R" ROLLOVER	35 SW#: 21 DROP TARGET #4 (BOTTOM)	43 SW#: 22 DROP TARGET #3	51 SW#: 23 DROP TARGET #2	59 SW#: 24 DROP TARGET #1 (TOP)
4 UNUSED	12 SW#: 26 RIGHT SIDE R.O. BUTTON	20 SW#: 27 LEFT SIDE R.O. BUTTON	28 SW#: 28 #5 TARGET	36 SW#: 29 #4 TARGET	44 SW#: 30 #3 TARGET	52 SW#: 31 #2 TARGET	60 SW#: 32 SAUCER
5 SW#: 33 50 POINT AND REBOUND SCORING MINI POST (2)	13 SW#: 34 FLIP/FEED LANE (RT.)	21 SW#: 35 FLIP/FEED LANE (LT.)	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Royal Flush Deluxe by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 DROP TARGET	41 SW#: 50 #2 DROP TARGET	49 SW#: 60 #3 DROP TARGET	57 UNUSED
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #4 DROP TARGET	42 SW#: 51 #5 DROP TARGET	50 SW#: 61 #6 DROP TARGET	58 UNUSED
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 #7 DROP TARGET	43 SW#: 52 #8 DROP TARGET	51 SW#: 62 #9 DROP TARGET	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT TARGET, TOP LEFT ROLLOVER	44 SW#: 53 TOP TARGET, TOP CENTER ROLLOVER	52 SW#: 63 RIGHT TOP TARGET, RIGHT ROLLOVER	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 LT. OUTSIDE ROLLOVER, RT. RETURN ROLLOVER	45 SW#: 54 LEFT SIDE ROLLOVER, RT. RETURN ROLLOVER	53 SW#: 64 LT. RETURN ROLLOVER, RT. OUTSIDE ROLLOVER	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT DIP, RIGHT DIP TARGETS	46 SW#: 55 RIGHT SIDE ROLLOVER	54 SW#: 65 CENTER DIP TARGET, POP BUMPER	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 SW#: 46 HOLE	47 SW#: 56 10 POINT	55 SW#: 66 RUNWAY	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Safe Cracker by Williams

1 SW#: 11 TP TROUGH (ROOF)	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 KICKBACK	33 SW#: 51 STANDUP 1	41 SW#: 61 TOP LEFT 3-BANK (TOP)	49 SW#: 71 BOTTOM LEFT 3-BANK (TOP)	57 SW#: 81 TOKEN LEVEL 1
2 SW#: 12 TP TROUGH (VARI)	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 LEFT BIT KICK	34 SW#: 52 STANDUP 2	42 SW#: 62 TOP LEFT 3-BANK (MIDDLE)	50 SW#: 72 BOTTOM LEFT 3-BANK (MIDDLE)	58 SW#: 82 TOKEN LEVEL 2
3 SW#: 13 START BUTTON	11 UNUSED	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 COIN CHUTE	35 SW#: 53 STANDUP 3	43 SW#: 63 TOP LEFT 3-BANK (BOTTOM)	51 SW#: 73 BOTTOM LEFT 3-BANK (BOTTOM)	59 SW#: 83 RAMP ENTRANCE
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 LEFT JET	36 SW#: 54 STANDUP 4	44 SW#: 64 TOP RIGHT 3-BANK (BOTTOM)	52 SW#: 74 BOTTOM RIGHT 3-BANK (BOTTOM)	60 SW#: 84 RAMP MADE
5 SW#: 15 RIGHT ORBIT	13 SW#: 25 UPPER RIGHT FLIP ROLLOVER	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 RIGHT JET	37 SW#: 55 STANDUP 5	45 SW#: 65 TOP RIGHT 3-BANK (MIDDLE)	53 SW#: 75 BOTTOM RIGHT 3-BANK (MIDDLE)	61 SW#: 85 WHEEL A CHANNEL
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN	22 SW#: 36 LOCKUP 1	30 SW#: 46 TOP JET	38 SW#: 56 VARI TARGET A	46 SW#: 66 TOP RIGHT 3-BANK (TOP)	54 SW#: 76 BOTTOM RIGHT 3-BANK (TOP)	62 SW#: 86 WHEEL B CHANNEL
7 SW#: 17 RIGHT OUTLANE	15 SW#: 27 RIGHT RETURN	23 SW#: 37 LOCKUP 2	31 SW#: 47 LEFT SLINGSHOT	39 SW#: 57 VARI TARGET B	47 SW#: 67 LEFT LANE	55 SW#: 77 SCOOP KICK	63 UNUSED
8 SW#: 18 BALL SHOOTER	16 SW#: 28 LEFT ORBIT	24 UNUSED	32 SW#: 48 RIGHT SLINGSHOT	40 SW#: 58 VARI TARGET C	48 SW#: 68 TOP POPPER	56 SW#: 78 RIGHT LANE	64 UNUSED

SW# number is the switch number as known to the game.

Scared Stiff by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 COFFIN LEFT	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 THREE BANK UPPER	49 SW#: 71 LEFT SKULL LANE	57 UNUSED
2 SW#: 12 WHEEL INDEX	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 COFFIN CENTER	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 THREE BANK MIDDLE	50 SW#: 72 CENTER SKULL LANE	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY IN BUTTON	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 COFFIN RIGHT	35 SW#: 53 UPPER JET	43 SW#: 63 THREE BANK LOWER	51 SW#: 73 RIGHT SKULL LANE	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 LEFT RAMP ENTER	36 SW#: 54 CENTER JET	44 SW#: 64 LEFT LEAPER	52 SW#: 74 SECRET PASSAGE	60 UNUSED
5 UNUSED	13 SW#: 25 EXTRA BALL LANE	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 RIGHT RAMP ENTER	37 SW#: 55 LOWER JET	45 SW#: 65 CENTER LEAPER	53 UNUSED	61 UNUSED
6 SW#: 16 KICKBACK	14 SW#: 26 LEFT FLIPPER LANE	22 SW#: 36 RIGHT POPPER	30 SW#: 46 LEFT RAMP MADE	38 SW#: 56 UPPER SLINGSHOT	46 SW#: 66 RIGHT LEAPER	54 UNUSED	62 UNUSED
7 SW#: 17 RIGHT LANE FLIPPER	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 LEFT KICKOUT	31 SW#: 47 RIGHT RAMP MADE	39 SW#: 57 CRATE SENSOR	47 SW#: 67 LEFT RAMP 10 POINT	55 UNUSED	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 SW#: 28 SINGLE STANDUP	24 SW#: 38 CRATE ENTRANCE	32 SW#: 48 COFFIN ENTRANCE	40 SW#: 58 LEFT LOOP	48 SW#: 68 RIGHT LOOP	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Scorpion by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 BALL RAMP THROWER	17 SW#: 17 RIGHT LANE FLIPPER CHANGE SWITCH	25 SW#: 25 TOP LEFT 5-BANK, LEFT DROP TARGET	33 SW#: 33 5-BANK, #1 TOP TARGET (LEFT)	41 SW#: 41 ADVANCE "LEFT" BULL'S-EYE TARGET	49 SW#: 49 UPPER RIGHT REBURN LANE ROLLOVER	57 SW#: 57 LOWER RIGHT STANDUP
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 BALL RAMP	18 SW#: 18 LEFT CENTER ROLLOVER	26 SW#: 26 TOP LEFT 5-BANK, CENTER DROP TARGET	34 SW#: 34 5-BANK, #2 TOP TARGET (RIGHT)	42 SW#: 42 ADVANCE "RIGHT" BULL'S-EYE TARGET	50 SW#: 50 UPPER LEFT FLIPPER STANDUP	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT EJECT HOLE	19 SW#: 19 LEFT INSIDE ROLLOVER	27 SW#: 27 TOP LEFT 3-BANK, RIGHT DROP TARGET	35 SW#: 35 5-BANK, #3 DROP TARGET	43 SW#: 43 "1" TARGET	51 SW#: 51 TOP LEFT 3-BANK STANDUP	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 RIGHT EJECT HOLE	20 SW#: 20 RIGHT INSIDE ROLLOVER	28 SW#: 28 TOP RIGHT 3-BANK, LEFT DROP TARGET	36 SW#: 36 5-BANK, #4 DROP TARGET	44 SW#: 44 "2" TARGET	52 SW#: 52 TOP RIGHT 3-BANK STANDUP	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 PLAYFIELD TILT	21 SW#: 21 RIGHT CENTER ROLLOVER	29 SW#: 29 TOP RIGHT 5-BANK, CENTER DROP TARGET	37 SW#: 37 5-BANK, #5 TARGET (RIGHT)	45 SW#: 45 "3" TARGET	53 SW#: 53 LOWER TOP CENTER STANDUP	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 LEFT OUTSIDE ROLLOVER	22 SW#: 22 RIGHT JET BUMPER	30 SW#: 30 TOP RIGHT 3-BANK, RIGHT DROP TARGET	38 SW#: 38 5-BANK, DROP TARGETS SERIES	46 SW#: 46 "4" ROLLOVER	54 SW#: 54 5-BANK STANDUP	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT OUTSIDE ROLLOVER	23 SW#: 23 BOTTOM JET BUMPER	31 SW#: 31 TOP 3-BANKS DROP TARGETS SERIES	39 SW#: 39 LEFT KICKER	47 SW#: 47 "5" ROLLOVER	55 SW#: 55 UPPER TOP CENTER STANDUP	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 OUTHOLE	24 SW#: 24 TOP JET BUMPER	32 SW#: 32 SPINNER	40 SW#: 40 RIGHT KICKER	48 SW#: 48 "6" ROLLOVER	56 SW#: 56 TOP RIGHT STANDUP	64 UNUSED

SW# number is the switch number as known to the game.

Seawitch by Stern

1 SW#: 1 COIN CHUTE	9 SW#: 2 COIN CHUTE	17 SW#: 3 COIN CHUTE	25 SW#: 4 TOP BUTTON ROLL-OVER	33 SW#: 5 SPINNING TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 TOP THUMPER	10 SW#: 10 LEFT THUMPER	18 UNUSED	26 SW#: 12 LEFT SLING-SHOT	34 SW#: 13 RIGHT SLING-SHOT	42 SW#: 14 RIGHT THUMPER	50 UNUSED	58 UNUSED
3 SW#: 17 STAND-UP TARGET (TOP RIGHT)	11 SW#: 18 STAND-UP TARGET (TOP LEFT)	19 SW#: 19 STAND-UP TARGET (TOP LEFT)	27 SW#: 20 STAND-UP TARGET (TOP LEFT LOW)	35 SW#: 21 CENTER BANK TARGET (NO. 1)	43 SW#: 22 CENTER BANK TARGET (NO. 2)	51 SW#: 23 CENTER BANK TARGET (NO. 3)	59 SW#: 24 CENTER BANK TARGET (NO. 4)
4 SW#: 25 RUNWAY ROLL-OVER BUTTON	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 29 TOP RIGHT 1) BANK TARGET (NO.	44 SW#: 30 TOP RIGHT 2) BANK TARGET (NO.	52 SW#: 31 TOP RIGHT 3) BANK TARGET (NO.	60 SW#: 32 TOP RIGHT 4) BANK TARGET (NO.
5 SW#: 33 OUT-HOLE	13 SW#: 34 LEFT OUT-LANE	21 SW#: 35 RIGHT OUT-LANE	29 SW#: 36 LEFT RETURN LANE	37 SW#: 37 RIGHT RETURN LANE	45 SW#: 38 LEFT BANK 1) TARGET (NO.	53 SW#: 39 LEFT BANK 2) TARGET (NO.	61 SW#: 40 LEFT BANK 3) TARGET (NO.
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Secret Service by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 SHOOTER LANE	17 SW#: 17 RIGHT SPINNER	25 SW#: 25 Y LANE	33 SW#: 33 LEFT RETURN	41 SW#: 41 KICKBIG 1 (WHITEHOUSE)	49 SW#: 49 TROUGH 3	57 UNUSED
2 UNUSED	10 SW#: 10 BULLET TARGET	18 SW#: 18 TOP 310 POINT	26 SW#: 26 LEFT SPINNER	34 SW#: 34 RIGHT RETURN	42 SW#: 42 KICKBIG 2 (WHITEHOUSE)	50 SW#: 50 STAR ROLLOVER	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 EATER 1 (KGB HIDEOUT)	19 SW#: 19 TOP RIGHT EJECT	27 SW#: 27 LEFT 310 POINT	35 SW#: 35 RIGHT OUTLANE	43 SW#: 43 TOP LEFT SWITCH (RAMP)	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 EATER 2 (KGB HIDEOUT)	20 SW#: 20 RED POP BUMPER	28 SW#: 28 LEFT SLINGSHOT	36 SW#: 36 DROP 1	44 SW#: 44 TOP RIGHT SWITCH (RAMP)	52 SW#: 52 UP POST	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 EATER TARGET (KGB HIDEOUT)	21 SW#: 21 CLEAR POP BUMPER	29 SW#: 29 RIGHT SLINGSHOT	37 SW#: 37 DROP 2	45 SW#: 45 310 POINT BEHIND DROPS	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 TARGET 1	22 SW#: 22 BLUE POP BUMPER	30 SW#: 30 LEFT FLIPPER EOS	38 SW#: 38 DROP 3	46 SW#: 46 OUTHOLE	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 TARGET 2	23 SW#: 23 S LANE	31 SW#: 31 RIGHT EOS FLIPPER	39 SW#: 39 DROP 4	47 SW#: 47 TROUGH 1	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 TARGET 3	24 SW#: 24 P LANE	32 SW#: 32 LASER KICKBACK	40 SW#: 40 DROP 5	48 SW#: 48 TROUGH 2	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Shaq Attaq by Gottlieb

1 SW#: LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 SW#: 7 VARI TARGET #1, #2
2 SW#: 10 LEFT KICKING RUBBER (2)	10 SW#: 11 RIGHT RUBBER KICKING (2)	18 SW#: 12 LEFT UPKICKER	26 SW#: 13 RIGHT UPKICKER	34 SW#: 14 SHOOTER LANE ROLLOVER	42 SW#: 15 DROP TARGET #1	50 SW#: 16 SPINNER	58 SW#: 17 VARI TARGET #3, #4
3 UNUSED	11 UNUSED	19 SW#: 22 HOLE KICKER	27 SW#: 23 TROUGH	35 SW#: 24 OUTHOLE	43 SW#: 25 DROP TARGET #2	51 SW#: 26 DROP TARGET #4	59 SW#: 27 VARI TARGET #5
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 SW#: 35 DROP TARGET #3	52 SW#: 36 DROP TARGET #5	60 SW#: 37 VARI TARGET #6
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00¿77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Shooting The Rapids by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 ROLLOVER LANE (LEFT)	33 SW#: 32 REBOUND RUBBER (RIGHT)	41 SW#: 40 DROP TARGET 1 (LEFT)
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LEFT SLINGSHOT	26 SW#: 25 ROLLOVER LANE	34 SW#: 33 SPINNER	42 SW#: 41 DROP TARGET 2
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 RIGHT SLINGSHOT	27 SW#: 26 ROLLOVER LANE	35 SW#: 34 CENTRE POP BUMPER	43 SW#: 42 DROP TARGET 3
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 LEFT OUTLANE	28 SW#: 27 ROLLOVER LANE	36 SW#: 35 RIGHT POP BUMPER	44 SW#: 43 DROP TARGET 4
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 RIGHT OUTLANE	29 SW#: 28 ROLLOVER LANE (RIGHT)	37 SW#: 36 LEFT POP BUMPER	45 SW#: 44 DROP TARGET 5
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 LEFT INLANE	30 SW#: 29 STANDUP (TOP TARGET LEFT)	38 SW#: 37 BALL KICKOUT	46 SW#: 45 DROP TARGET 6
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 RIGHT INLANE	31 SW#: 30 STANDUP (TOP TARGET RIGHT)	39 SW#: 38 DROP TARGET BANK REBOUND RUBBER	47 SW#: 46 DROP TARGET 7
8 UNUSED	16 UNUSED	24 SW#: 23 RIGHT RUBBER KICKING	32 SW#: 31 STANDUP TARGET (CENTRE)	40 SW#: 39 DROP TARGET BANK STANDUP TARGET	48 SW#: 47 DROP TARGET 8 (RIGHT)

SW# number is the switch number as known to the game.

Shrek by Stern

1 SW#: 1 BALL SAVER UP	9 UNUSED	17 SW#: 33 LEFT RAMP MADE	25 SW#: 49 MAGIC MIRROR	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL SAVER DOWN	10 SW#: 18 (L) 4-BALL TROUGH #4	18 UNUSED	26 SW#: 50 MINI G-MAN STAND-UP	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 LEFT ORBIT STAND-UP	11 SW#: 19 4-BALL #3 TROUGH	19 SW#: 35 CASTLE GUARD	27 SW#: 51 MINI SHREK STAND-UP	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT 2-BANK BOT.	12 SW#: 20 4-BALL #2 TROUGH	20 UNUSED	28 SW#: 52 MINI RIGHT ORBIT	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 RIGHT 2-BANK TOP	13 SW#: 21 VUK OPTO #1 TROUGH	21 UNUSED	29 SW#: 53 MINI LEFT ORBIT	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT NEWTON ROLLOVER	14 SW#: 22 4-BALL OPTO STACKING	22 UNUSED	30 SW#: 54 MINI RAMP	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 RIGHT NEWTON ROLLOVER	15 SW#: 23 SHOOTER LANE	23 SW#: 39 RT. ORBIT SPINNER	31 SW#: 55 MINI TROUGH	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 GODMOTHER STAND-UP	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 PINOCCHIO RETURN	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Shrek by Stern

Bank 2

1 SW#: 9 1-BANK DROP TARGET	9 SW#: 25 LEFT RETURN	17 SW#: 41 3-BANK BOTTOM	25 SW#: 57 RIGHT ORBIT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 FIONA STAND-UP	10 SW#: 26 LEFT SLING	18 SW#: 42 3-BANK MIDDLE	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 27 RIGHT SLING	19 SW#: 43 3-BANK TOP	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 28 RIGHT RETURN	20 SW#: 44 BABY 4 (BOT) 4-BANK	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 SWAMP EJECT	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 BABY 3 4-BANK	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 30 TOP BUMPER	22 SW#: 46 BABY 2 4-BANK	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 BABY 1 (TOP) 4-BANK	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 SNEAK RAMP	32 SW#: 64 MERLIN EJECT	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Silver Slugger by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 REPLAY (CREDIT) BUTTON	33 SW#: 4 LEFT ADVANCE BUTTON	41 SW#: 5 RIGHT BUTTON ADVANCE	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 #1 TOP ROLLOVER	50 SW#: 16 VARI-TARGET, POSITION 1	58 SW#: 17 #1 DROP TARGET
3 SW#: 20 #1 LEFT SPOT TARGET	11 SW#: 21 #1 RIGHT SPOT TARGET	19 SW#: 22 LEFT SPINNER	27 SW#: 23 LEFT OUTSIDE ROLLOVER	35 SW#: 24 RIGHT OUTSIDE ROLLOVER	43 SW#: 25 #2 TOP ROLLOVER	51 SW#: 26 VARI-TARGET, POSITION 2	59 SW#: 27 #2 DROP TARGET
4 SW#: 30 #2 LEFT SPOT TARGET	12 SW#: 31 #2 RIGHT SPOT TARGET	20 SW#: 32 CENTER SPINNER	28 SW#: 33 LEFT RETURN ROLLOVER	36 SW#: 34 RIGHT RETURN ROLLOVER	44 SW#: 35 #3 TOP ROLLOVER	52 SW#: 36 VARI-TARGET, POSITION 3	60 SW#: 37 #3 DROP TARGET
5 SW#: 40 #3 LEFT SPOT TARGET	13 SW#: 41 #3 RIGHT SPOT TARGET	21 SW#: 42 RIGHT SPINNER	29 SW#: 43 OUTHOLE	37 SW#: 44 3RD POSITION TROUGH	45 SW#: 45 #4 TOP ROLLOVER	53 SW#: 46 VARI-TARGET, POSITION 4	61 SW#: 47 #4 DROP TARGET
6 SW#: 50 LEFT HOLE	14 SW#: 51 TOP HOLE	22 SW#: 52 SHOOTER ROLLOVER	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Silverball Mania by Bally

1 SW#: 1 BOTTOM LANE CENTER	9 SW#: 2 HOPP R.O. BUTTON (2)	17 SW#: 3 TOP RIGHT ROLLOVER	25 SW#: 4 TOP CENTER ROLLOVER	33 SW#: 5 TOP LEFT ROLLOVER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE KICKER
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 RIGHT "A" TARGET	11 SW#: 18 LEFT "B" TARGET	19 SW#: 19 LEFT "R" TARGET	27 SW#: 20 LEFT "E" TARGET	35 SW#: 21 TOP "V" TARGET	43 SW#: 22 TOP "L" TARGET	51 SW#: 23 TOP "I" TARGET	59 SW#: 24 TOP "S" TARGET
4 SW#: 25 RIGHT SPINNER	12 SW#: 26 "A" RIGHT OUT ROLLOVER	20 SW#: 27 RIGHT "I" RETURN R.O.	28 SW#: 28 CENTER TARGET	36 SW#: 29 "A" LEFT RETURN R.O.	44 SW#: 30 "M" LEFT OUT R.O.	52 SW#: 31 LOWER "L" SIDE TARGET	60 SW#: 32 UPPER "L" SIDE TARGET
5 SW#: 33 LEFT SPINNER	13 SW#: 34 50 PT. (4) REBOUND AND TOP BUMPERS	21 SW#: 35 SERVICE SW. (4) PANEL	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 CENTER THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Sinbad by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 SWINGING TARGET	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 14 POP BUMPERS (2)
3 SW#: 20 WHITE DROP TARGET	11 SW#: 21 YELLOW DROP TARGET	19 UNUSED	27 UNUSED	35 SW#: 24 YELLOW DROP TARGET
4 SW#: 30 PURPLE DROP TARGET	12 SW#: 31 PURPLE DROP TARGET	20 UNUSED	28 UNUSED	36 SW#: 34 PURPLE DROP TARGET
5 SW#: 40 TOP AND LEFT YELLOW ROLLOVER (2)	13 SW#: 41 WHITE AND YELLOW ROLLOVER TARGET	21 UNUSED	29 UNUSED	37 SW#: 44 RIGHT YELLOW ROLLOVERS (2)
6 SW#: 50 RED DROP TARGET	14 SW#: 51 RED DROP TARGET	22 UNUSED	30 UNUSED	38 SW#: 54 10 POINT (8) SWITCHES
7 SW#: 60 RED DROP TARGET	15 SW#: 61 RED DROP TARGET	23 UNUSED	31 UNUSED	39 UNUSED
8 SW#: 70 RED ROLLOVER	16 SW#: 71 PURPLE ROLLOVER	24 UNUSED	32 UNUSED	40 SW#: 74 ROLLOVER (4) BUTTONS

SW# number is the switch number as known to the game.

Skateball by Bally

1 UNUSED	9 SW#: 2 MIDDLE RIGHT DROP TARGET	17 SW#: 3 MIDDLE DROP CENTER TARGET	25 SW#: 4 MIDDLE LEFT DROP TARGET	33 SW#: 5 SAUCER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 SW#: 13 #3 LANE	42 SW#: 14 #2 LANE	50 SW#: 15 #1 LANE	58 SW#: 16 SLAM (2)
3 SW#: 17 3 DROP & 4 TARGET 30 POINT REBOUNDS	11 SW#: 18 "B" LANE	19 SW#: 19 "A" LANE	27 SW#: 20 E DROP TARGET	35 SW#: 21 T DROP TARGET	43 SW#: 22 A DROP TARGET	51 SW#: 23 K DROP TARGET	59 SW#: 24 S DROP TARGET
4 UNUSED	12 SW#: 26 TOP RIGHT DROP TARGET	20 SW#: 27 TOP CENTER DROP TARGET	28 SW#: 28 TOP LEFT DROP TARGET	36 UNUSED	44 SW#: 30 LOWER BUTTON ROLLOVER	52 SW#: 31 UPPER BUTTON ROLLOVER	60 SW#: 32 RIGHT BUTTON FLIPPER
5 SW#: 33 SPINNER	13 SW#: 34 RIGHT OUT SPECIAL	21 SW#: 35 LEFT OUT SPECIAL	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 RIGHT BUMPER THUMPER	53 SW#: 39 BOTTOM THUMPER BUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Slugfest by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 PINCH HIT	25 SW#: 41 TARGET PANEL - L.	33 SW#: 51 BACK-ROW TROUGH	41 SW#: 61 LEFT BLEACHER	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 FAST BALL PITCH	26 SW#: 42 TARGET PANEL - 2L.	34 SW#: 52 STRIKE TROUGH	42 SW#: 62 MIDDLE BLEACHER	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 23 DISPENSER PRIZE	19 SW#: 33 CHANGEUP PITCH	27 SW#: 43 TARGET PANEL - 3L.	35 UNUSED	43 SW#: 63 RIGHT BLEACHER	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 CURVE PITCH	28 SW#: 44 TARGET PANEL - M.	36 SW#: 54 PITCH HOME	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 25 STEAL BASE/RUN	21 SW#: 35 SCREW BALL PITCH	29 SW#: 45 TARGET PANEL - 3R.	37 SW#: 55 RAMP SWITCH	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 26 BAT SWITCH	22 SW#: 36 THROW OUT RUNNER	30 SW#: 46 TARGET PANEL - 2R.	38 SW#: 56 PLAYFIELD 1 TILT	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 SW#: 27 DISPENSER LOW	23 SW#: 37 START PLAYER 1	31 SW#: 47 TARGET PANEL - R.	39 SW#: 57 PLAYFIELD 2 TILT	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 28 DISPENSER UNJAMMED	24 SW#: 38 START PLAYER 2	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Solar Fire by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 LEFT MAGNET BUTTON	17 SW#: 17 TOP EJECT HOLE	25 SW#: 25 RIGHT TARGET BULL'S-EYE	33 SW#: 33 TOP 3-BANK, BOTTOM TARGET	41 SW#: 41 SOLAR RAMP TARGET	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 RIGHT MAGNET BUTTON	18 SW#: 18 BOTTOM RIGHT EJECT HOLE	26 SW#: 26 RIGHT RAMP ROLLUNDER	34 SW#: 34 TOP 3-BANK, MIDDLE TARGET	42 SW#: 42 SOLAR GUN	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT KICKER	19 SW#: 19 BOTTOM LEFT EJECT HOLE	27 SW#: 27 BOTTOM LEFT EJECT HOLE	35 SW#: 35 TOP 3-BANK, TOP TARGET	43 SW#: 43 PLAYFIELD TILT	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 RIGHT KICKER	20 SW#: 20 OUTHOLE	28 SW#: 28 BOTTOM LEFT 3-BANK, MIDDLE TARGET	36 SW#: 36 4-BANK "1" 3-BANK, MIDDLE TARGET (LEFT) TARGET	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT OUTLANE	21 SW#: 21 BALL RAMP RIGHT SWITCH	29 SW#: 29 BOTTOM LEFT 3-BANK, TOP TARGET	37 SW#: 37 4-BANK "2" TARGET	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 RIGHT OUTLANE	22 SW#: 22 BALL RAMP CENTER SWITCH	30 SW#: 30 BOTTOM RIGHT 3-BANK, TOP TARGET	38 SW#: 38 4-BANK "3" TARGET	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT INSIDE ROLLOVER	23 SW#: 23 BALL RAMP LEFT SWITCH	31 SW#: 31 BOTTOM RIGHT 3-BANK, MIDDLE TARGET	39 SW#: 39 4-BANK "4" 3-BANK, MIDDLE TARGET (RIGHT) TARGET	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT INSIDE ROLLOVER	24 SW#: 24 BALLSHOOTER TROUGH	32 SW#: 32 BOTTOM RIGHT 3-BANK, BOTTOM TARGET	40 SW#: 40 HORSESHOE ROLLOVER	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Solar Ride by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 LEFT & RIGHT ROLLOVER (2)	10 SW#: 11 RETURN ROLLOVER	18 SW#: 12 ROLLOVER (3) BUTTON	26 SW#: 13 10 POINT (7) SWITCHES	34 UNUSED
3 SW#: 20 #1 ROLLOVER	11 SW#: 21 #2 ROLLOVER	19 SW#: 22 #3 ROLLOVER	27 SW#: 23 #4 ROLLOVER	35 UNUSED
4 SW#: 30 #1 DROP TARGET	12 SW#: 31 #2 DROP TARGET	20 SW#: 32 #3 DROP TARGET	28 SW#: 33 #4 DROP TARGET	36 SW#: 34 #5 DROP TARGET
5 SW#: 40 CENTER POP BUMPER	13 SW#: 41 RIGHT HOLE	21 SW#: 42 LEFT HOLE	29 SW#: 43 RIGHT & LEFT POP BUMPER (2)	37 UNUSED
6 UNUSED	14 UNUSED	22 SW#: 52 ROLLUNDER GATE	30 UNUSED	38 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED

SW# number is the switch number as known to the game.

Sorcerer by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 LEFT "S" SPINNER,	17 SW#: 17 "A"	25 SW#: 25 RIGHT DRAIN	33 SW#: 33 RIGHT KICKER	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 "O" TARGET	18 SW#: 18 "B"	26 SW#: 26 LEFT FLIPPER RETURN	34 SW#: 34 LEFT DROP TARGET	42 SW#: 42 UPPER LEFT SWITCH	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 "R" TARGET	19 SW#: 19 "C"	27 SW#: 27 RIGHT RETURN FLIPPER	35 SW#: 35 CENTER DROP TARGET	43 SW#: 43 LAMP SHIFT	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 "C" TARGET	20 SW#: 20 "D"	28 SW#: 28 OUTHOLE	36 SW#: 36 RIGHT DROP TARGET	44 SW#: 44 LANE CHANGE	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 "E" TARGET	21 SW#: 21 LEFT JET BUMPER	29 SW#: 29 RAMP 1	37 SW#: 37 RAMP EJECT FOR MULTIBALL	45 SW#: 45 PLAYFIELD TILT	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 "R" TARGET	22 SW#: 22 LOWER JET BUMPER	30 SW#: 30 RAMP 2	38 SW#: 38 RAMP SWITCH FOR MULTIBALL	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 "E" TARGET	23 SW#: 23 RIGHT JET BUMPER	31 SW#: 31 SHOOTER LANE	39 SW#: 39 LOWER RIGHT SWITCH	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT "R" SPINNER,	24 SW#: 24 LEFT DRAIN	32 SW#: 32 LEFT KICKER	40 SW#: 40 LOWER LEFT SWITCH	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

South Park by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 LEFT 5-BANK BOTTOM	25 SW#: 25 RIGHT RAMP ENTER	33 UNUSED	41 UNUSED	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 5-BALL #1 TROUGH (LEFT)	18 SW#: 18 LEFT 5-BANK #2	26 SW#: 26 RIGHT RAMP EXIT	34 SW#: 34 RIGHT 3-BANK BOTTOM	42 SW#: 42 KENNY OPTO	50 SW#: 50 RIGHT TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 5TH COIN SLOT	11 SW#: 11 5-BALL #2 TROUGH	19 SW#: 19 LEFT 5-BANK #3	27 UNUSED	35 SW#: 35 RIGHT 3-BANK MIDDLE	43 SW#: 43 UNDER TROUGH (TOILET)	51 SW#: 51 BOTTOM TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 5-BALL #3 TROUGH	20 SW#: 20 LEFT 5-BANK #4	28 UNUSED	36 SW#: 36 RIGHT 3-BANK TOP	44 SW#: 44 UNDER TROUGH (KENNY)	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 5-BALL #4 TROUGH	21 SW#: 21 LEFT 5-BANK TOP	29 UNUSED	37 SW#: 37 POP BUMPER TARGET LT	45 SW#: 45 SVUK	53 UNUSED	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 5-BALL VUK TROUGH OPTO	22 SW#: 22 CENTER LEFT 3-BANK	30 UNUSED	38 SW#: 38 POP BUMPER TARGET RT	46 SW#: 46 VUK	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 5-BALL OPTO STACKING	23 SW#: 23 CENTER 3-BANK MIDDLE	31 UNUSED	39 UNUSED	47 SW#: 47 LEFT ORBIT (TO VUK)	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 CENTER RIGHT 3-BANK	32 UNUSED	40 UNUSED	48 SW#: 48 UNDER-TROUGH SVUK	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Space Invaders by Bally

1 SW#: 1 DROP TARGET #3 (BOT.)	9 SW#: 2 DROP TARGET #2	17 SW#: 3 DROP TARGET #1 (TOP)	25 SW#: 4 SPINNER REB. (4),	33 SW#: 5 50 POINT & 4 DROP TARGET TOP BUMPER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 SW#: 15 CLONE TARGET CHAMBER	58 SW#: 16 SLAM (2)
3 SW#: 17 #5 HOOP TARGET	11 SW#: 18 #4 TARGET (FROM RIGHT)	19 SW#: 19 #3 TARGET	27 SW#: 20 #2 TARGET	35 SW#: 21 #1 TARGET (FROM LEFT)	43 SW#: 22 TOP RIGHT ROLLOVER	51 SW#: 23 TOP CENTER ROLLOVER	59 SW#: 24 TOP LEFT ROLLOVER
4 SW#: 25 RIGHT OUT ROLLOVER	12 SW#: 26 RIGHT EXTRA BALL LANE	20 SW#: 27 RIGHT SMALL FLIP/FEED LANE	28 SW#: 28 LEFT SMALL FLIP FEED LANE	36 SW#: 29 LEFT EXTRA BALL LANE	44 SW#: 30 LEFT OUTLANE	52 SW#: 31 COLLECT BONUS ROLLOVER	60 SW#: 32 HOOP R.O. BUTTON (2)
5 SW#: 33 UPPER RIGHT FLIPPER	13 SW#: 34 SINGLE DROP TARGET	21 SW#: 35 UPPER LEFT FLIPPER	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Space Jam by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 3-BANK DROP BOTTOM	25 SW#: 25 TOP BASKET ENTER	33 SW#: 33 (S)PACE JAM S-U	41 SW#: 41 SUPER DUPER JACKPOT S-U	49 SW#: 49 TOP TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 3-BANK DROP MID	26 UNUSED	34 SW#: 34 S(P)ACE JAM S-U	42 SW#: 42 EXTRA BALL S-U	50 SW#: 50 LEFT TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 5-BALL #1 TROUGH (LEFT)	19 SW#: 19 3-BANK DROP TOP	27 SW#: 27 TOP BASKET MADE	35 SW#: 35 SP(A)CE JAM S-U	43 SW#: 43 RIGHT ORBIT TOP	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 5-BALL #2 TROUGH	20 UNUSED	28 SW#: 28 RIGHT RAMP S-U LEFT	36 SW#: 36 SPA(C)E JAM S-U	44 SW#: 44 RIGHT ORBIT BOTTOM	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 5-BALL #3 TROUGH	21 UNUSED	29 SW#: 29 RIGHT RAMP S-U RIGHT	37 SW#: 37 SPAC(E) JAM S-U	45 SW#: 45 JUMP BALL VUK	53 UNUSED	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 5-BALL #4 TROUGH	22 SW#: 22 RIGHT RAMP ENTER	30 SW#: 30 SKILL SHOT BASKET	38 SW#: 38 SPACE (J)AM S-U	46 SW#: 46 WABBIT HOLE VUK	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 5-BALL VUK TROUGH OPTO	23 SW#: 23 RIGHT RAMP EXIT	31 UNUSED	39 SW#: 39 SPACE J(A)M S-U	47 SW#: 47 LEFT ORBIT BOTTOM	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 CAPTIVE BALL	32 UNUSED	40 SW#: 40 SPACE JA(M) S-U	48 SW#: 48 LEFT ORBIT TOP	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Space Shuttle by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 EXTERNAL LATERAL CONTACTS	33 SW#: 32 ROTATING TARGET HAND BANK 1ST. MOVING TARGET	41 SW#: 40 TOP LEFT HAND BANK 1ST. MOVING TARGET
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LOWER LEFT HAND KICKER	26 SW#: 25 LEFT HAND CANAL BUTTON	34 SW#: 33 TOP EXTERNAL CONTACT HAND BANK 2ND. MOVING TARGET	42 SW#: 41 TOP LEFT HAND BANK 2ND. MOVING TARGET
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 LOWER RIGHT HAND KICKER	27 SW#: 26 CENTRE LEFT HAND BANK 1ST. MOVING TARGET	35 SW#: 34 BOTTOM RIGHT HAND BANK 2ND. MOVING TARGET	43 SW#: 42 TOP LEFT HAND BANK 3RD. MOVING TARGET
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 BOTTOM RIGHT INSIDE HAND CANAL BANK 2ND. MOVING TARGET	28 SW#: 27 CENTRE LEFT HAND BANK 2ND. MOVING TARGET	36 SW#: 35 TOP RIGHT HAND BANK 2ND. MOVING TARGET	44 SW#: 43 LEFT HAND CANAL HOLE
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 BOTTOM RIGHT OUTSIDE HAND CANAL BANK 3RD. MOVING TARGET	29 SW#: 28 CENTRE LEFT HAND BANK 3RD. MOVING TARGET	37 SW#: 36 TOP LEFT HAND BANK 3RD. MOVING TARGET	45 SW#: 44 TOP CENTRE SPECIAL BALL
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 BOTTOM LEFT OUTSIDE HAND CANAL BANK 1ST. MOVING TARGET	30 SW#: 29 CENTRE RIGHT HAND BANK 1ST. MOVING TARGET	38 SW#: 37 BOTTOM LEFT HAND BANK 1ST. MOVING TARGET	46 SW#: 45 TOP LEFT HAND ROLLOVER
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 BOTTOM LEFT INSIDE HAND CANAL BANK 2ND. MOVING TARGET	31 SW#: 30 CENTRE RIGHT HAND BANK 2ND. MOVING TARGET	39 SW#: 38 1ST. TARGET DROPPING	47 SW#: 46 TOP CENTRE ROLLOVER
8 UNUSED	16 UNUSED	24 SW#: 23 BALL SHOT CONTACT HAND BANK 3RD. MOVING TARGET	32 SW#: 31 CENTRE RIGHT HAND BANK 3RD. MOVING TARGET	40 SW#: 39 2ND. TARGET DROPPING	48 SW#: 47 TOP RIGHT HAND ROLLOVER

SW# number is the switch number as known to the game.

Space Shuttle by Williams

1 SW#: 1 PLUMB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 "S" TARGET	25 SW#: 25 LEFT JET BUMPER	33 SW#: 33 LEFT DROP TARGET	41 SW#: 41 RIGHT LANE FLIPPER CHANGE	49 SW#: 49 PLAYFIELD TILT	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 UPPER LEFT BALL RAMP	18 SW#: 18 "H" TARGET	26 SW#: 26 RIGHT JET BUMPER	34 SW#: 34 CENTER DROP TARGET	42 SW#: 42 BOTTOM LEFT STANDUP SWITCH	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 CENTER BALL RAMP	19 SW#: 19 "U" TARGET	27 SW#: 27 BOTTOM JET BUMPER	35 SW#: 35 RIGHT DROP TARGET	43 SW#: 43 LEFT LOWER STANDUP SWITCH	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LOWER RIGHT BALL RAMP	20 SW#: 20 "T" TARGET	28 SW#: 28 LEFT OUTLANE	36 SW#: 36 BALL SHOOTER SWITCH	44 SW#: 44 LEFT UPPER STANDUP SWITCH	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 RIGHT OUTLANE	21 SW#: 21 "T" TARGET	29 SW#: 29 "U" LANE	37 SW#: 37 SPINNER	45 SW#: 45 LONG RAMP LOWER SWITCH	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 LEFT FLIPPER RETURN LANE	22 SW#: 22 "L" TARGET	30 SW#: 30 "S" LANE	38 SW#: 38 RAMP BULLS EYE	46 SW#: 46 CENTER STANDUP SWITCH	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT RETURN FLIPPER LANE	23 SW#: 23 "E" TARGET	31 SW#: 31 "A" LANE	39 SW#: 39 LEFT KICKER	47 SW#: 47 UPPER RIGHT STANDUP SWITCH	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT EJECT HOLE	24 SW#: 24 RIGHT EJECT HOLE	32 SW#: 32 LONG RAMP UPPER SWITCH	40 SW#: 40 RIGHT KICKER	48 SW#: 48 LOWER RIGHT STANDUP SWITCH	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Space Station by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 DRAIN LANE (LEFT)	25 SW#: 25 S	33 SW#: 33 SINGLE DROP TARGET (RIGHT RAMP)	41 SW#: 41 LEFT BALL POPPER	49 UNUSED	57 SW#: 57 3-BANK DR TGT (UPR)
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 S	26 SW#: 26 T	34 UNUSED	42 SW#: 42 RIGHT BALL POPPER	50 SW#: 50 10-POINT (TOP RIGHT)	58 SW#: 58 3-BANK DR TGT (CNTR)
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1 (RIGHT)	19 SW#: 19 H	27 SW#: 27 A	35 SW#: 35 CHANGE / SHUTTLE STATION SCORE	43 SW#: 43 BALL SHOOTER	51 UNUSED	59 SW#: 59 3-BANK DR TGT (LWR)
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 U	28 SW#: 28 T	36 UNUSED	44 UNUSED	52 SW#: 52 SPACE #1 STATION	60 SW#: 60 JET BUMPER (LEFT)
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #3 (LEFT)	21 SW#: 21 T	29 SW#: 29 I	37 SW#: 37 TOP LEFT ROLL-UNDER	45 SW#: 45 RIGHT LOCK	53 SW#: 53 SPACE #2 STATION	61 SW#: 61 JET BUMPER (RIGHT)
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 1	22 SW#: 22 T	30 SW#: 30 O	38 SW#: 38 U	46 SW#: 46 RIGHT LOCK ENTRY	54 SW#: 54 10-POINT (LWR RIGHT)	62 SW#: 62 JET BUMPER (LOWER)
7 SW#: 7 SLAM TILT	15 SW#: 15 2	23 SW#: 23 L	31 SW#: 31 N	39 SW#: 39 S	47 SW#: 47 LEFT LOCK	55 SW#: 55 LANE CHANGE (LEFT FLIPPER)	63 SW#: 63 LEFT SLINGSHOT
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 3	24 SW#: 24 E	32 SW#: 32 DRAIN LANE (RIGHT)	40 SW#: 40 A	48 SW#: 48 LEFT LOCK ENTRY	56 SW#: 56 LANE CHANGE (RIGHT FLIPPER)	64 SW#: 64 RIGHT SLINGSHOT

SW# number is the switch number as known to the game.

Speakeasy by Bally

1 SW#: 1 LEFT CABINET BUTTON	9 SW#: 2 SPIN WHEEL SUBTRACT-A-BALL	17 SW#: 3 SPIN WHEEL ADD-A-BALL	25 SW#: 4 SPIN WHEEL 15K (4)	33 SW#: 5 SPIN WHEEL 3K (6)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 RIGHT SAUCER	57 SW#: 8 LEFT SAUCER
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 SPINNER	34 SW#: 13 RIGHT OUT SPECIAL	42 SW#: 14 JOKERS LANE RETURN	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 LEFT TARGET	11 SW#: 18 LEFT OUT SPECIAL	19 SW#: 19 LEFT RETURN LANE	27 SW#: 20 RIGHT SLINGSHOT	35 SW#: 21 LEFT SLINGSHOT	43 SW#: 22 RIGHT BUMPER THUMPER	51 SW#: 23 MIDDLE THUMPER BUMPER	59 SW#: 24 LEFT THUMPER BUMPER
4 SW#: 25 OUTHOLE	12 SW#: 26 RIGHT LANE R.O. BUTTON	20 SW#: 27 REBOUNDS (3)	28 SW#: 28 5 CARD	36 SW#: 29 6 CARD	44 SW#: 30 7 CARD	52 SW#: 31 8 CARD	60 SW#: 32 9 CARD
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 ACE CARD	37 SW#: 37 10 CARD	45 SW#: 38 JACK CARD	53 SW#: 39 QUEEN CARD	61 SW#: 40 KING CARD
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Special Force by Bally

1 SW#: 1 COLLECT WEAPON	9 SW#: 2 CHOPPER TOP	17 SW#: 3 CHOPPER BOTTOM	25 SW#: 4 REBOUND	33 SW#: 5 LEFT LAUNCH	41 SW#: 6 CREDIT	49 SW#: 7 RIGHT LAUNCH	57 SW#: 8 OUTHOLE REGULAR
2 SW#: 9 RIGHT COIN DOOR	10 SW#: 10 LEFT COIN DOOR	18 SW#: 11 MIDDLE COIN DOOR	26 SW#: 12 LEFT OUTLANE	34 SW#: 13 RIGHT OUTLANE	42 SW#: 14 SLAM	50 SW#: 15 TILT (CABINET)	58 SW#: 16 RELEASE LEFT
3 SW#: 17 ROCKET 'R'	11 SW#: 18 ROCKET 'O'	19 SW#: 19 ROCKET 'C'	27 SW#: 20 ROCKET 'K'	35 SW#: 21 ROCKET 'E'	43 SW#: 22 ROCKET 'T'	51 SW#: 23 SAUCER 1 CAPTURE	59 SW#: 24 SAUCER 2 CAPTURE
4 SW#: 25 LEFT BUMPER	12 SW#: 26 RIGHT BUMPER	20 SW#: 27 MIDDLE BUMPER	28 SW#: 28 LEFT SLINGSHOT	36 SW#: 29 RIGHT SLINGSHOT	44 SW#: 30 RIGHT OUTHOLE	52 SW#: 31 MIDDLE OUTHOLE	60 SW#: 32 LEFT OUTHOLE
5 SW#: 33 BOMB 'B'	13 SW#: 34 BOMB 'O'	21 SW#: 35 BOMB 'M'	29 SW#: 36 BOMB 'B'	37 UNUSED	45 SW#: 38 COLLECT BONUS	53 UNUSED	61 SW#: 40 WEAPON DROP TARGET
6 SW#: 41 AUXILIARY CAPTIVE (NEAR SAUCER)	14 SW#: 42 RETURN LANES	22 SW#: 43 BONUS MULTIPLIER	30 SW#: 44 LOAD BOMBS	38 SW#: 45 IN-LINE DROP TARGET (BOTTOM)	46 SW#: 46 IN-LINE DROP TARGET (MIDDLE)	54 SW#: 47 IN-LINE DROP TARGET (TOP)	62 SW#: 48 ROAD SWITCH
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Spectrum by Bally

1 SW#: 1 RIGHT BUTTON FLIPPER	9 SW#: 2 LEFT FLIPPER BUTTON	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TOP SAUCER	57 SW#: 8 OUTHOLE KICKER
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 LEFT SLAM BOTTOM SAUCER	11 SW#: 18 LEFT SIDE BEFORE BOTTOM SAUCER	19 SW#: 19 TOP LEFT (3) SUPER.O. BUTTON	27 SW#: 20 LEFT OUTLANE SIDE ROLLOVER BUTTON	35 SW#: 21 TOP RIGHT SIDE ROLLOVER BUTTON (3)	43 SW#: 22 RIGHT OUTLANE	51 SW#: 23 RIGHT SIDE BEFORE BOTTOM SAUCER	59 SW#: 24 RIGHT SIDE BOTTOM SAUCER
4 SW#: 25 LEFT SIDE LANE UPPER (3)	12 SW#: 26 LEFT SPINNER	20 SW#: 27 #1 LEFT GREEN ROLLOVER BUTTON	28 SW#: 28 #2 GREEN ROLLOVER BUTTON	36 SW#: 29 #3 GREEN ROLLOVER BUTTON	44 SW#: 30 #4 RIGHT GREEN ROLLOVER BUTTON	52 SW#: 31 RIGHT SPINNER	60 SW#: 32 RIGHT SIDE LANE UPPER (3)
5 SW#: 33 LEFT SPINNER LANE ROLLOVER BUTTONS (2)	13 SW#: 34 GREEN DROP TARGET (LEFT)	21 SW#: 35 GREEN DROP TARGET (CENTER)	29 SW#: 36 GREEN DROP TARGET (RIGHT)	37 SW#: 37 YELLOW DROP TARGET (LEFT)	45 SW#: 38 YELLOW DROP TARGET (CENTER)	53 SW#: 39 YELLOW DROP TARGET (RIGHT)	61 SW#: 40 RIGHT LANE SPINNER ROLLOVER BUTTON (2)
6 SW#: 41 LEFT SIDE MIDDLE SAUCER	14 SW#: 42 BLUE DROP TARGET (LEFT)	22 SW#: 43 BLUE DROP TARGET (CENTER)	30 SW#: 44 BLUE DROP TARGET (RIGHT)	38 SW#: 45 RED DROP TARGET (LEFT)	46 SW#: 46 RED DROP TARGET (CENTER)	54 SW#: 47 RED DROP TARGET (RIGHT)	62 SW#: 48 RIGHT SIDE MIDDLE SAUCER
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

A FEW BALLY GAMES HAVE A 5TH STROBE (STROBE5) COMING FROM A DIFFERENT MPU HEADER THAT ALLOWS FOR AN ADDITIONAL 8 SWITCHES (SWITCHES 41-48). THIS IS NOT PART OF THE NORMAL WIRE HARNESS USED WITH THE 64 SWITCH MATRIX TESTER SINCE THIS IS ONLY A VERY LIMITED NUMBER OF GAMES. SWITCHES 41-48 WOULD NEED TO BE MANUALLY TESTED ON THE GAME. SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Spider Man by Stern

1 SW#: 1 GOBLIN #1 (BOT)	9 UNUSED	17 SW#: 33 LEFT TOP LANE	25 SW#: 49 3-BANK MOTOR (DN)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 GOBLIN #2	10 SW#: 18 TROUGH #4 (L)	18 SW#: 34 MIDDLE TOP LANE	26 SW#: 50 3-BANK MOTOR (UP)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 GOBLIN #3	11 SW#: 19 TROUGH #3	19 SW#: 35 RIGHT TOP LANE	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 GOBLIN #4	12 SW#: 20 TROUGH #2	20 SW#: 36 DOC OCK VUK	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 GOBLIN #5 (TOP)	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 RIGHT LOOP HIGH	29 SW#: 53 SANDMAN (DN) MOTOR	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT STAND-UP	14 SW#: 22 TROUGH JAM	22 SW#: 38 RIGHT LOOP LOW	30 SW#: 54 SANDMAN (UP) MOTOR	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 LEFT LOOP SPINNER	15 SW#: 23 SHOOTER LANE	23 SW#: 39 RIGHT 3-BANK (TOP)	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 LEFT LOOP	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 RIGHT 3-BANK (MID)	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Spider Man by Stern

Bank 2

1 SW#: 9 STANDMAN 3-BANK (LEFT)	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 RIGHT 3-BANK (BOT)	25 SW#: 57 DOC OCK (DN) MOTOR	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 SANDMAN 3-BANK (CENTER)	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 SANDMAN OPTO	26 SW#: 58 DOC OCK (UP) MOTOR	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 SANDMAN 3-BANK (RIGHT)	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 LEFT RAMP OPTO	27 SW#: 59 SANDMAN VUK	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 SANDMAN STAND-UP (LEFT)	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 RIGHT RAMP ENTRANCE	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 SANDMAN STAND-UP (RIGHT)	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 RIGHT RAMP EXIT	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 LOWER LEFT 10-POINT	14 SW#: 30 LEFT BUMPER	22 SW#: 46 UPPER LANE FLIPPER	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 CENTER RAMP ENTRANCE	31 SW#: 63 DOC OCK OPTO	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 CENTER RAMP EXIT	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Spirit by Gottlieb

1 SW#: #1 ROLLOVER	9 SW#: 10 #2 ROLLOVER	17 SW#: 20 #3 ROLLOVER	25 SW#: 30 LEFT HOLE	33 SW#: 40 LEFT OUTSIDE ROLLOVER	41 SW#: 50 LEFT RETURN ROLLOVER	49 SW#: 60 LEFT BALL SAVE TARGET	57 UNUSED
2 SW#: 1 #1 DROP TARGET	10 SW#: 11 #2 DROP TARGET	18 SW#: 21 #3 DROP TARGET	26 SW#: 31 RIGHT HOLE	34 SW#: 41 RIGHT OUTSIDE ROLLOVER	42 SW#: 51 RIGHT RETURN ROLLOVER	50 SW#: 61 RIGHT BALL SAVE TARGET	58 UNUSED
3 SW#: 2 LEFT TOP HOLE	11 SW#: 12 CENTER TOP HOLE	19 SW#: 22 LEFT TOP ROLLOVER	27 SW#: 32 CENTER SPOT TARGET	35 SW#: 42 POP BUMPER	43 UNUSED	51 SW#: 62 ROUNDAABOUT	59 UNUSED
4 SW#: 3 #1 SPOT TARGET	12 SW#: 13 #2 SPOT TARGET	20 SW#: 23 #3 SPOT TARGET	28 SW#: 33 #4 SPOT TARGET	36 SW#: 43 10 PT. (5)	44 UNUSED	52 SW#: 63 RIGHT ROLLUNDER	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 34 OUTHOLE	37 SW#: 44 TROUGH	45 UNUSED	53 SW#: 64 ON RIGHT FLIPPER	61 UNUSED
6 SW#: 5 #1 DROP TARGET (UPPER PLAYFIELD)	14 SW#: 15 #2 DROP TARGET (UPPER PLAYFIELD)	22 SW#: 25 #3 DROP TARGET (UPPER PLAYFIELD)	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 SPOT TARGET (UPPER PLAYFIELD)	15 SW#: 16 ROLLUNDER (UPPER PLAYFIELD)	23 SW#: 26 100 PT. (UPPER PLAYFIELD)	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Split Second by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 SW#: 4 OUTHOLE REFLEX	33 SW#: 5 SPINNER / SEE/SAW	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 ROLLOVER BUTTON
2 SW#: 9 ROLLOVER 1 / S.U. TARGET 1	10 SW#: 10 ROLLOVER 2 / S.U. TARGET 2	18 SW#: 11 ROLLOVER 3 / S.U. TARGET 3	26 SW#: 12 ROLLOVER 4 / S.U. TARGET 4	34 SW#: 13 RT. SINGSHOT	42 SW#: 14 L. SLINGSHOT	50 SW#: 15 RT. THUMPER	58 SW#: 16 L. THUMPER
3 SW#: 17 RIGHT DROP BANK (LEFT)	11 SW#: 18 RIGHT DROP BANK (MID.)	19 SW#: 19 RIGHT DROP BANK (RIGHT)	27 SW#: 20 LOOP (LEFT)	35 SW#: 21 LOOP (RIGHT)	43 SW#: 22 RT. RETURN LANE	51 SW#: 23 L. RETURN LANE	59 SW#: 24 ROLLOVER 5 / S.U. TARGET 5
4 SW#: 25 MIDDLE DROP BANK (LEFT)	12 SW#: 26 MIDDLE DROP BANK (MID.)	20 SW#: 27 MIDDLE DROP BANK (RIGHT)	28 SW#: 28 TOP DROP BANK (LEFT)	36 SW#: 29 TOP DROP 2) BANK (LEFT)	44 SW#: 30 TOP DROP BANK (MID.)	52 SW#: 31 TOP DROP 2) BANK (RIGHT)	60 SW#: 32 TOP DROP BANK (RIGHT)
5 SW#: 33 RIGHT OUTHOLE	13 SW#: 34 MIDDLE OUTHOLE	21 SW#: 35 LEFT OUTHOLE	29 SW#: 36 CAPTIVE HOLE KICKOUT	37 SW#: 37 CENTER LANE CAPTIVE	45 SW#: 38 TOP CAPTIVE LANE	53 SW#: 39 LEFT OUTLANE	61 SW#: 40 RIGHT OUTLANE
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Spring Break by Gottlieb

1 UNUSED	9 UNUSED	17 SW#: 20 LEFT RETURN ROLLOVER	25 SW#: 30 LEFT OUTSIDE ROLLOVER	33 SW#: 40 RIGHT OUTSIDE ROLLOVER	41 SW#: 50 (LEFT) #1 DROP TARGET	49 SW#: 60 (LEFT) #2 DROP TARGET	57 SW#: 70 (LEFT) #3 DROP TARGET
2 UNUSED	10 UNUSED	18 SW#: 21 RIGHT RETURN ROLLOVER	26 SW#: 31 LOOP ROLLUNDER	34 SW#: 41 SHOOTER ROLLUNDER	42 SW#: 51 (RIGHT) #1 DROP TARGET	50 SW#: 61 (RIGHT) #2 DROP TARGET	58 SW#: 71 (RIGHT) #3 DROP TARGET
3 UNUSED	11 UNUSED	19 SW#: 22 RIGHT KICKER	27 SW#: 32 TOP RIGHT ROLLUNDER POP BUMPER	35 SW#: 42 TOP RIGHT BUMPER ROLLUNDER	43 SW#: 52 (TOP) #1 DROP TARGET	51 SW#: 62 (TOP) #2 DROP TARGET	59 SW#: 72 (TOP) #3 DROP TARGET
4 UNUSED	12 UNUSED	20 SW#: 23 RAMP ROLLUNDER	28 SW#: 33 TOP LEFT ROLLUNDER	36 SW#: 43 BOTTOM LEFT ROLLUNDER	44 SW#: 53 #1 TOP ROLLOVER	52 SW#: 63 #2 TOP ROLLOVER	60 SW#: 73 #3 TOP ROLLOVER
5 UNUSED	13 UNUSED	21 SW#: 24 TOP LEFT POP BUMPER	29 SW#: 34 TOP RIGHT POP BUMPER	37 SW#: 44 BOTTOM POP BUMPER	45 SW#: 54 #1 SPOT TARGET	53 SW#: 64 #2 SPOT TARGET	61 SW#: 74 #3 SPOT TARGET
6 UNUSED	14 UNUSED	22 SW#: 25 RUBBER SWITCH	30 SW#: 35 TOP RIGHT FLIPPER	38 SW#: 45 SHOOTER LANE KICKER	46 SW#: 55 #1 BALL TROUGH	54 SW#: 65 #2 BALL TROUGH	62 SW#: 75 #3 BALL TROUGH
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 SW#: 66 OUTHOLE	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Spy Hunter by Bally

1 SW#: 1 REBOUND	9 SW#: 2 LEFT R.O.B. "MISSILE"	17 SW#: 3 CENTER "MISSILE" R.O.B.	25 SW#: 4 RIGHT R.O.B. "MISSILE"	33 SW#: 5 SAUCER	41 SW#: 6 CREDIT	49 SW#: 7 SPINNER	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LANE CHANGE (CABINET)	34 SW#: 13 LEFT SLING	42 SW#: 14 THUMPER BUMPER	50 SW#: 15 TILT	58 SW#: 16 SLAM
3 SW#: 17 DROP TARGET #1 (LEFT)	11 SW#: 18 DROP TARGET #2	19 SW#: 19 DROP TARGET #3	27 SW#: 20 DROP TARGET #4	35 SW#: 21 "SHOT" - "S"	43 SW#: 22 "SHOT" - "H"	51 SW#: 23 "SHOT" - "O"	59 SW#: 24 "SHOT" - "T"
4 SW#: 25 LANES & (OUTLANE RETURN LANE)	12 SW#: 26 TOP TARGET - "A"	20 SW#: 27 TOP TARGET - "G"	28 SW#: 28 TOP TARGET - "E"	36 SW#: 29 TOP TARGET - "N"	44 SW#: 30 TOP TARGET - "T"	52 SW#: 31 TOP TARGET - "G"	60 SW#: 32 TOP TARGET - "K"
5 SW#: 33 SHOOTER LANE	13 SW#: 34 LEFT "SMOKE" R.O.B.	21 SW#: 35 MIDDLE "SMOKE" R.O.B.	29 SW#: 36 RIGHT R.O.B. "SMOKE"	37 SW#: 37 BOOP-BALL TARGET	45 SW#: 38 LEFT "OIL" R.O.B.	53 SW#: 39 MIDDLE "OIL" R.O.B.	61 SW#: 40 RIGHT "OIL" R.O.B.
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Star Gazer by Stern

1 SW#: 1 CHUTE (LEFT)	9 SW#: 2 CHUTE (CENTER)	17 SW#: 3 CHUTE (RIGHT)	25 SW#: 4 PSIN TARGET (L)	33 SW#: 5 SPIN TARGET (R)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM & VIB. TILTS
2 SW#: 9 SPIN TARGET (CENTER)	10 SW#: 10 STAND-UP TARGET	18 SW#: 11 STAND-UP TARGET	26 SW#: 12 THUMPER (LEFT)	34 SW#: 13 THUMPER (RIGHT)	42 SW#: 14 THUMPER (CENTER)	50 SW#: 15 RIGHT SLINGSHOT	58 SW#: 16 LEFT SLINGSHOT
3 SW#: 17 STAND-UP TARGET	11 SW#: 18 STAND-UP TARGET	19 SW#: 19 STAND-UP TARGET	27 SW#: 20 STAND-UP TARGET	35 SW#: 21 STAND-UP TARGET	43 SW#: 22 BOTTOM (L) DROP TARGET	51 SW#: 23 MIDDLE (L) DROP TARGET	59 SW#: 24 TOP (L) DROP TARGET
4 SW#: 25 (L) CENTER DROP TARGET	12 SW#: 26 (M) CENTER DROP TARGET	20 SW#: 27 (R) CENTER DROP TARGET	28 SW#: 28 TOP RIGHT DROP TARGET	36 SW#: 29 (M) RIGHT DROP TARGET	44 SW#: 30 BOTTOM (R) DROP TARGET	52 SW#: 31 STAND-UP TARGET	60 SW#: 32 STAND-UP TARGET
5 SW#: 33 OUT HOLE	13 SW#: 34 RIGHT OUT LANE	21 SW#: 35 LEFT OUT LANE	29 SW#: 36 RIGHT BUTTON ROLL-OVER	37 SW#: 37 LEFT BUTTON ROLL-OVER	45 SW#: 38 STAND-UP TARGET	53 SW#: 39 STAND-UP TARGET	61 SW#: 40 STAND-UP TARGET
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Star God by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 TARGET BANK CENTRAL	33 SW#: 32 FIXED TARGET	41 SW#: 40 TOP TARGET BANK
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LOWER LEFT HAND KICKER	26 SW#: 25 TARGET BANK CENTRAL	34 SW#: 33 TOP RIGHT HAND KICKER	42 SW#: 41 TOP TARGET BANK
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 LOWER RIGHT HAND KICKER	27 SW#: 26 TARGET BANK CENTRAL	35 SW#: 34 TOP LEFT HAND KICKER	43 SW#: 42 TOP TARGET BANK
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 BOTTOM RIGHT INSIDE HAND CANAL	28 SW#: 27 TARGET BANK CENTRAL	36 SW#: 35 BUMPER	44 SW#: 43 TOP TARGET BANK
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 BOTTOM RIGHT OUTSIDE HAND CANAL	29 SW#: 28 BACK TARGET BANK	37 SW#: 36 TOP LEFT HAND ROLLOVER	45 SW#: 44 TOP TARGET BANK
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 BOTTOM LEFT OUTSIDE HAND CANAL	30 SW#: 29 LEFT HAND ROLLOVER BUTTON	38 SW#: 37 TOP CENTRE ROLLOVER	46 SW#: 45 TOP TARGET BANK
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 BOTTOM LEFT INSIDE HAND CANAL	31 SW#: 30 LEFT HAND SPINNING TARGET	39 SW#: 38 TOP RIGHT HAND ROLLOVER	47 SW#: 46 TOP TARGET BANK
8 UNUSED	16 UNUSED	24 SW#: 23 OUTSIDE LATERAL CONTACTS	32 SW#: 31 RIGHT HAND SPINNING TARGET	40 SW#: 39 SPECIAL TARGET	48 SW#: 47 TOP TARGET BANK

SW# number is the switch number as known to the game.

Star Light by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 L	25 SW#: 25 SPINNER	33 SW#: 33 STAR 8	41 SW#: 41 LEFT JET	49 SW#: 49 UPPER LEFT SWITCH	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 RAMP 1	18 SW#: 18 I	26 SW#: 26 STAR 1	34 SW#: 34 STAR 9	42 SW#: 42 LOWER JET	50 SW#: 50 LEFT KICKER	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 RAMP 2	19 SW#: 19 G	27 SW#: 27 STAR 2	35 SW#: 35 STAR 10	43 SW#: 43 RIGHT JET	51 SW#: 51 RIGHT KICKER	59 UNUSED
4 SW#: 4 LEFT COIN	12 SW#: 12 SHOOTER LANE SWITCH	20 SW#: 20 H	28 SW#: 28 STAR 3	36 SW#: 36 TOP LANES 1-2	44 SW#: 44 LEFT FLIPPER RETURN	52 SW#: 52 EJECT	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 S	21 SW#: 21 T	29 SW#: 29 STAR 4	37 SW#: 37 TOP LANES 3-4	45 SW#: 45 RIGHT RETURN FLIPPER	53 SW#: 53 PLAYFIELD TILT	61 UNUSED
6 SW#: 6 RIGHT COIN	14 SW#: 14 T	22 SW#: 22 ADV 'X' TOP LEFT TARGET	30 SW#: 30 STAR 5	38 SW#: 38 TOP LANES 5-6	46 SW#: 46 LEFT SPECIAL	54 SW#: 54 LANE CHANGE	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 A	23 SW#: 23 ADV 'X' LANE RIGHT	31 SW#: 31 STAR 6	39 SW#: 39 TOP LANES 7-8	47 SW#: 47 RIGHT SPECIAL	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 R	24 SW#: 24 ADV 'X' RIGHT TARGET	32 SW#: 32 STAR 7	40 SW#: 40 TOP LANES 9-10	48 SW#: 48 LOWER LEFT SWITCH	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Star Race by Gottlieb

1 SW#: #1 ROLLOVER BUTTON	9 SW#: 10 #2 ROLLOVER BUTTON	17 SW#: 20 #1 TOP ROLLOVER	25 SW#: 30 #2 TOP ROLLOVER	33 SW#: 40 #3 TOP ROLLOVER	41 SW#: 50 #4 TOP ROLLOVER	49 SW#: 60 LEFT SIDE ROLLOVER	57 SW#: 70 LEFT OUTSIDE ROLLOVER
2 SW#: 1 "R" LEFT VARI-TARGET	10 SW#: 11 "A" LEFT VARI-TARGET	18 SW#: 21 "T" LEFT VARI-TARGET	26 SW#: 31 "S" LEFT VARI-TARGET	34 SW#: 41 "E" RIGHT VARI-TARGET	42 SW#: 51 "C" RIGHT VARI-TARGET	50 SW#: 61 "A" RIGHT VARI-TARGET	58 SW#: 71 "R" RIGHT VARI-TARGET
3 SW#: 2 #1 TOP DROP TARGET	11 SW#: 12 #2 TOP DROP TARGET	19 SW#: 22 #3 TOP DROP TARGET	27 SW#: 32 #1 CENTER DROP TARGET	35 SW#: 42 #2 CENTER DROP TARGET	43 SW#: 52 #3 CENTER DROP TARGET	51 SW#: 62 #4 CENTER DROP TARGET	59 SW#: 72 HOLE KICKER
4 SW#: 3 LEFT RETURN ROLLOVER	12 SW#: 13 LEFT RETURN ROLLOVER	20 SW#: 23 RIGHT RETURN ROLLOVER	28 SW#: 33 RIGHT OUTSIDE ROLLOVER	36 SW#: 43 RIGHT TARGET	44 SW#: 53 #3, #4, #5 ROLLOVER BUTTONS (3)	52 UNUSED	60 SW#: 73 POP BUMPER (2)
5 SW#: 4 10 POINT (5)	13 SW#: 14 10 POINT (2) CONTACT KICKER	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Star Trek by Stern

1 SW#: 1 (BEAM) ME UP	9 UNUSED	17 SW#: 33 CENTER LOCK (BOT)	25 SW#: 49 RED TARGET 5	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BEAM (ME) UP	10 SW#: 18 TROUGH #4 (L)	18 SW#: 34 CENTER LOCK (TOP)	26 SW#: 50 RED TARGET 6	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 19 TROUGH #3	19 SW#: 35 LEFT RAMP EXIT	27 SW#: 51 RIGHT ORBIT	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 BEAM ME (UP)	12 SW#: 20 TROUGH #2	20 SW#: 36 WARP RAMP EXIT	28 SW#: 52 LEFT ORBIT	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 RIGHT RAMP ENTRANCE	29 SW#: 53 SHIP CRASH	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH JAM	22 SW#: 38 RIGHT RAMP EXIT	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 RT. 3 BANK TARGET (TOP)	15 SW#: 23 SHOOTER LANE	23 SW#: 39 C. 3-BANK TARGET (TOP)	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 RT. 3 BANK TARGET (CENTER)	16 SW#: 24 (T)REK	24 SW#: 40 C. 3-BANK TARGET (CEN)	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Star Trek by Stern

Bank 2

1 SW#: 9 RT. 3 BANK TARGET (BOTTOM)	9 SW#: 25 T(R)EK	17 SW#: 41 C. 3-BANK TARGET (TOP)	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 LEFT EJECT	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 L. 2-BANK TARGET (TOP)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 CENTER DROP TARGET	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 L. 2-BANK TARGET (BOT)	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 SPINNER	12 SW#: 28 TR(E)K	20 SW#: 44 BEHIND UPPER FLIPPER	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 WARP RAMP ENTER	13 SW#: 29 TRE(K)	21 SW#: 45 RED TARGET 1	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 LEFT RAMP ENTER	14 SW#: 30 LEFT POP BUMPER	22 SW#: 46 RED TARGET 2	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 SW#: 47 RED TARGET 3	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 SW#: 48 BIG RED TARGET	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Star Trek by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 MOVING TARGET	33 SW#: 33 LEFT TURBO BUMPER	41 SW#: 41 LEFT TOP LANE	49 SW#: 49 RIGHT OUTLANE	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 RIGHT TGT. STANDUP	34 SW#: 34 CENTER TURBO BUMPER	42 SW#: 42 CENTER TOP LANE	50 SW#: 50 RIGHT RETURN	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 LEFT SLINGSHOT	27 SW#: 27 LOWER LEFT HOLE	35 SW#: 35 RIGHT TURBO BUMPER	43 SW#: 43 RIGHT TOP LANE	51 SW#: 51 RIGHT SLINGSHOT	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 LEFT DROP 1 TAR. BOT.	28 SW#: 28 UPPER LEFT HOLE TOP	36 SW#: 36 ENTER LEFT RAMP	44 SW#: 44 RIGHT DROP 1 TAR. TOP	52 SW#: 52 UPPER LEFT HOLE BOTTOM	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT DROP 2 TAR.	29 SW#: 29 MOVING HOLE TARGET	37 SW#: 37 EXIT CENTER RAMP	45 SW#: 45 RIGHT DROP 2 TAR.	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 LEFT DROP 3 TAR.	30 SW#: 30 BALL LAUNCH BUTTON	38 SW#: 38 ENTER RIGHT RAMP	46 SW#: 46 RIGHT DROP 3 TAR.	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 LEFT DROP 4 TAR. TOP	31 SW#: 31 TRANSP. CREW VISIBLE	39 SW#: 39 UP/DOWN RAMP UP	47 SW#: 47 RIGHT DROP 4 TAR. BOT.	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 LEFT STANDUP TGT.	32 SW#: 32 TRANSP. CREW GONE	40 SW#: 40 VUK	48 SW#: 48 TOP RIGHT ROLLOVER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Star Trek by Bally

1 SW#: 1 DROP TARGET D (BOTTOM)	9 SW#: 2 DROP TARGET C	17 SW#: 3 DROP TARGET B	25 SW#: 4 DROP TARGET A (TOP)	33 SW#: 5 COLLECT LANE BONUS	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 UNUSED	11 SW#: 18 TOP LOWER ROLLOVER BUTTON	19 SW#: 19 RIGHT FEEDER FLIPPER LANE	27 SW#: 20 LEFT FLIPPER FEEDER LANE	35 SW#: 21 TOP LEFT TARGET	43 SW#: 22 TOP UPPER ROLLOVER BUTTON	51 SW#: 23 DROP TARGET 3 10 PT. REBOUNDS	59 SW#: 24 CENTER TARGET
4 SW#: 25 LEFT MIDDLE INSIDE LANE	12 SW#: 26 LEFT MIDDLE OUTSIDE LANE	20 SW#: 27 'Y' TARGET	28 SW#: 28 LOWER 'L' TARGET	36 SW#: 29 UPPER 'L' TARGET	44 SW#: 30 'A' ROLLOVER	52 SW#: 31 'B' ROLLOVER	60 SW#: 32 SAUCER
5 UNUSED	13 SW#: 34 RIGHT OUTLANE	21 SW#: 35 LEFT OUTLANE	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Star Trek The Next Generation by Williams

1 SW#: 11 BUY-IN BUTTON	9 SW#: 21 SLAM TILT	17 SW#: 31 BORG LOCK	25 SW#: 41 UNDER L. SW. LOCK 1	33 SW#: 51 L. BANK TOP	41 SW#: 61 TROUGH L.R. 1	49 SW#: 71 LFET JET	57 SW#: 81 TIME
2 SW#: 12 RIGHT FIRE BUTTON	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 UNDER L. GUN SW. 2	26 SW#: 42 UNDER L. SW. LOCK 3	34 SW#: 52 L. BANK MIDDLE	42 SW#: 62 TROUGH L.R. 2	50 SW#: 72 RIGHT JET	58 SW#: 82 RIFT
3 SW#: 13 START BUTTON	11 SW#: 23 MADE MIDDLE RAMP	19 SW#: 33 UNDER R. GUN SW. 2	27 SW#: 43 UNDER L. SW. LOCK 4	35 SW#: 53 L. BANK BOTTOM	43 SW#: 63 TROUGH L.R. 3	51 SW#: 73 BOTTOM JET	59 SW#: 83 MADE LEFT RAMP
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 RIGHT GUN SHOOTER	28 SW#: 44 LEFT OUTER LOOP	36 SW#: 54 R. BANK TOP	44 SW#: 64 TROUGH L.R. 4	52 SW#: 74 RIGHT SLING	60 SW#: 84 Q
5 SW#: 15 LEFT OUTLANE	13 SW#: 25 ENTER RIGHT RAMP	21 SW#: 35 UNDER L. SW. LOCK 2	29 SW#: 45 UNDER TOP HOLE	37 SW#: 55 R. BANK MIDDLE	45 SW#: 65 TROUGH L.R. 5	53 SW#: 75 LEFT SLING	61 SW#: 85 LEFT 2X SHUTTLE
6 SW#: 16 LEFT RETURN LANE	14 SW#: 26 LEFT 45 DEGREE TARGET	22 SW#: 36 UNDER L. GUN SW. 1	30 SW#: 46 UNDER LEFT HOLE	38 SW#: 56 R. BANK BOTTOM	46 SW#: 66 TROUGH L.R. 6	54 SW#: 76 TOP LANE LEFT	62 SW#: 86 RIGHT 2X SHUTTLE
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 CENTER 45 DEGREE TARGET	23 SW#: 37 UNDER R. GUN SW. 1	31 SW#: 47 UNDER BORG HOLE	39 SW#: 57 TOP DROP TARGET	47 SW#: 67 TROUGH UP	55 SW#: 77 TOP LANE CENTER	63 SW#: 87 MADE RIGHT RAMP
8 SW#: 18 RIGHT OUTLANE	16 SW#: 28 RIGHT 45 DEGREE TARGET	24 SW#: 38 LEFT GUN SHOOTER	32 SW#: 48 BORG ENTRY	40 SW#: 58 RIGHT OUTER LOOP	48 SW#: 68 SHOOTER	56 SW#: 78 TOP LANE RIGHT	64 SW#: 88 ENTER LEFT RAMP

SW# number is the switch number as known to the game.

COL 9 IS NOT ACCESSIBLE USING THE STANDARD WPC HARNESS FOR THE 64 SWITCH MATRIX TESTER. COL 9 MUST BE TESTED SEPARATELY OR WIRED TO A 2ND 64 SWITCH MATRIX TESTER.

Star Wars by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 RIGHT LOOP	25 SW#: 25 X-WING 1 TARGET LEFT	33 SW#: 33 RIGHT SCOOP	41 SW#: 41 BAR MOTOR UP	49 UNUSED	57 UNUSED
2 SW#: 2 4TH COIN	10 SW#: 10 OUTHOLE	18 UNUSED	26 SW#: 26 X-WING 2 TARGET	34 SW#: 34 DEATH STAR TROUGH	42 SW#: 42 BAR MOTOR DOWN	50 SW#: 50 SHIFT BUTTON	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT TROUGH	19 SW#: 19 LEFT LOOP	27 SW#: 27 X-WING 3 TARGET	35 SW#: 35 OBI-WAN TROUGH	43 SW#: 43 LEFT SLINGSHOT	51 SW#: 51 SHIFT DOWN	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 CENTER TROUGH	20 SW#: 20 RAMP ENTRANCE	28 SW#: 28 X-WING 4 TARGET	36 SW#: 36 LEFT VUK	44 SW#: 44 RIGHT SLINGSHOT	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 RIGHT TROUGH	21 SW#: 21 RIGHT OUTLANE	29 SW#: 29 X-WING 5 TARGET RIGHT	37 SW#: 37 LEFT SCOOP	45 SW#: 45 TOP TURBO BUMPER	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT RETURN	30 SW#: 30 TOP DROP TARGET	38 SW#: 38 R2D2 ENTRANCE	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT FLIPPER	23 SW#: 23 LEFT RETURN	31 SW#: 31 MIDDLE DROP TARGET	39 SW#: 39 RAMP EXIT	47 SW#: 47 RIGHT TURBO BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT FLIPPER	24 SW#: 24 LEFT OUTLANE	32 SW#: 32 BOTTOM DROP TARGET	40 SW#: 40 BAR TARGET	48 SW#: 48 BOTTOM TURBO BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Star Wars Tilogy by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 4-BANK DROP #1 (TOP)	25 UNUSED	33 UNUSED	41 UNUSED	49 SW#: 49 TOP TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 4-BANK DROP #2	26 UNUSED	34 SW#: 34 SPECIAL	42 UNUSED	50 SW#: 50 LEFT TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 UNUSED	19 SW#: 19 4-BANK DROP #3	27 UNUSED	35 SW#: 35 X-WING HOME	43 SW#: 43 RIGHT ORBIT TOP	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #1 TROUGH (LEFT)	20 SW#: 20 4-BANK DROP #4 (BOTTOM)	28 SW#: 28 (F)ORCE S-U	36 SW#: 36 X-WING ENABLE	44 SW#: 44 RIGHT ORBIT BOTTOM	52 SW#: 52 BOTTOM TURBO BUMPER	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #2 TROUGH	21 SW#: 21 DROP TARGET HOLE	29 SW#: 29 F(O)RCE S-U	37 SW#: 37 X-WING LOADED	45 SW#: 45 TOP VUK	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL #3 TROUGH	22 SW#: 22 BIG RAMP ENTER (LEFT)	30 SW#: 30 FO(R)CE S-U	38 SW#: 38 3-BANK (BOTTOM)	46 SW#: 46 BOTTOM VUK	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 SW#: 23 BIG RAMP EXIT	31 SW#: 31 FOR(C)E S-U	39 SW#: 39 3-BANK (MID)	47 SW#: 47 LEFT ORBIT BOTTOM	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 BIG RAMP ENTER (RIGHT)	32 SW#: 32 FORC(E) S-U	40 SW#: 40 3-BANK (TOP)	48 UNUSED	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Stargate by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 UNUSED
2 SW#: 10 BOTTOM POP BUMPER	10 SW#: 11 TOP POP BUMPER	18 SW#: 12 LEFT KICKING RUBBER (2)	26 SW#: 13 RIGHT RUBBER KICKING (2)	34 SW#: 14 LEFT KICKING TARGET	42 SW#: 15 CENTER KICKING TARGET	50 SW#: 16 RIGHT TARGET KICKING	58 SW#: 17 LEFT DROP #1 TARGET
3 UNUSED	11 SW#: 21 GLIDER MOTOR STOP	19 SW#: 22 BULLSEYE TARGET	27 SW#: 23 TOP CENTER UPKICKER	35 SW#: 24 OUTHOLE	43 SW#: 25 LOWER LEFT KICKER	51 SW#: 26 CENTER DROP TARGET #1	59 SW#: 27 LEFT DROP #2 TARGET
4 SW#: 30 GLIDER RIGHT (MOTOR)	12 SW#: 31 SHOOTER LANE ROLLOVER	20 SW#: 32 BULLSEYE TARGET (OUTER)	28 SW#: 33 TOP RIGHT UPKICKER	36 SW#: 34 TROUGH	44 SW#: 35 ROLLOVER DROP TARGET	52 SW#: 36 CENTER DROP TARGET #2	60 SW#: 37 LEFT DROP #3 TARGET
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Stars by Stern

1 SW#: 1 LEFT SPINNER	9 UNUSED	17 UNUSED	25 SW#: 4 LEFT OUT LANE	33 SW#: 5 LEFT RETURN LANE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN #3 (RT)	10 SW#: 10 COIN #2 (CTR)	18 SW#: 11 COIN #1 (LT)	26 SW#: 12 RIGHT OUT LANE	34 SW#: 13 RIGHT RETURN LANE	42 UNUSED	50 SW#: 15 ROLL-OVER (BONUS)	58 SW#: 16 SLAM (3)
3 SW#: 17 RIGHT SPINNER	11 UNUSED	19 UNUSED	27 SW#: 20 STAR NO. 5	35 SW#: 21 STAR NO. 4	43 SW#: 22 STAR NO. 3	51 SW#: 23 STAR NO. 2	59 SW#: 24 STAR NO. 1
4 SW#: 25 (7) 10 POINT SWITCH	12 UNUSED	20 SW#: 27 DROP TARGET NO. 5	28 SW#: 28 DROP TARGET NO. 2	36 SW#: 29 DROP TARGET NO. 6	44 SW#: 30 DROP TARGET NO. 4	52 SW#: 31 DROP TARGET NO. 3	60 SW#: 32 DROP TARGET NO. 1
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 THUMPER BUMPER	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Starship Troopers by Sega

1 UNUSED	9 SW#: 9 U'TROUGH: SKILL SHOT	17 SW#: 17 LEFT BOTTOM S-U (GRN)	25 SW#: 25 LEFT RAMP ENTER	33 SW#: 33 STEPPER REAR MOTOR	41 SW#: 41 LEFT TOP LANE	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 U'TROUGH: BUG HOLE	18 SW#: 18 LEFT MIDDLE S-U (YEL)	26 SW#: 26 LEFT RAMP EXIT	34 SW#: 34 STEPPER MOTOR FRONT	42 SW#: 42 MIDDLE TOP LANE	50 SW#: 50 BOTTOM TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 UNUSED	19 SW#: 19 LEFT MIDDLE S-U (RED)	27 SW#: 27 LEFT RAMP S-U (YEL)	35 SW#: 35 STEPPER BUG MOTOR	43 SW#: 43 RIGHT TOP LANE	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #1 TROUGH (LEFT)	20 SW#: 20 LEFT TOP S-U (YEL)	28 SW#: 28 POP S-U (BLU)	36 UNUSED	44 UNUSED	52 SW#: 52 RIGHT RAMP ENTER	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #2 TROUGH	21 SW#: 21 RIGHT BOTTOM S-U (RED)	29 SW#: 29 POP S-U (GRN)	37 SW#: 37 BRAIN BUG UP	45 SW#: 45 VUK	53 SW#: 53 RIGHT RAMP EXIT	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL #3 TROUGH	22 SW#: 22 RIGHT MIDDLE S-U (YEL)	30 SW#: 30 VUK S-U (GRN)	38 SW#: 38 BRAIN BUG HIT	46 SW#: 46 SUPER VUK	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 SW#: 23 RIGHT MIDDLE S-U (GRN)	31 SW#: 31 VUK S-U (BLU)	39 SW#: 39 BRAIN BUG UP	47 SW#: 47 LEFT ORBIT	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT TOP S-U (YEL)	32 SW#: 32 RIGHT RAMP S-U (YEL)	40 SW#: 40 U'TROUGH: POP EXIT HOLE	48 SW#: 48 RIGHT ORBIT	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Stellar Wars by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 LEFT 3-BANK, CENTER DROP TARGET	25 SW#: 25 LEFT SPINNER	33 SW#: 33 TOP 3-BANK, RIGHT DROP TARGET	41 SW#: 41 RIGHT SPECIAL	49 SW#: 49 PLAYFIELD TILT	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT SPECIAL	18 SW#: 18 LEFT 3-BANK, TOP DROP TARGET	26 SW#: 26 "1" ROLLOVER	34 SW#: 34 TOP 3-BANK, DROP TARGET SERIES	42 SW#: 42 "S" ROLLOVER	50 SW#: 50 4-BANK, LEFT DROP TARGET	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 "W" ROLLOVER	19 SW#: 19 LEFT 3-BANK DROP TARGET SERIES	27 SW#: 27 "2" ROLLOVER	35 SW#: 35 TOP 3-BANK SERIES	43 SW#: 43 "R" ROLLOVER	51 SW#: 51 4-BANK, LEFT CENTER DROP TARGET	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 "A" ROLLOVER	20 SW#: 20 LEFT 3-BANK STANDUP	28 SW#: 28 "3" ROLLOVER	36 SW#: 36 TOP RIGHT STANDUP	44 SW#: 44 RIGHT KICKER	52 SW#: 52 4-BANK, DROP RIGHT CENTER TARGET	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT KICKER	21 SW#: 21 EJECT HOLE	29 SW#: 29 "4" ROLLOVER	37 SW#: 37 RIGHT SPINNER	45 SW#: 45 TOP LEFT JET BUMPER	53 SW#: 53 4-BANK, DROP RIGHT TARGET	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 BOTTOM LEFT JET BUMPER	22 SW#: 22 CAPTIVE BALL TARGET	30 SW#: 30 MIDDLE RIGHT STANDUP	38 SW#: 38 RIGHT TARGET BULL'S-EYE	46 SW#: 46 TOP RIGHT JET BUMPER	54 SW#: 54 4-BANK, SERIES	62 UNUSED
7 SW#: 7 SLAM TILT	15 UNUSED	23 SW#: 23 LOWER TOP LEFT STANDUP	31 SW#: 31 TOP 3-BANK, LEFT DROP TARGET	39 UNUSED	47 SW#: 47 LOWER RIGHT JET BUMPER	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT 3-BANK, BOTTOM DROP TARGET	24 SW#: 24 UPPER TOP LEFT STANDUP	32 SW#: 32 TOP 3-BANK, CENTER DROP TARGET	40 SW#: 40 TOP CENTER JET BUMPER	48 SW#: 48 CENTER STANDUP	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Stingray by Stern

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN #3 (RT)	10 SW#: 10 COIN #2 (CTR)	18 SW#: 11 COIN #1 (LT)	26 SW#: 12 BALL KICK OUT (2)	34 UNUSED	42 SW#: 14 (1) ADVANCE BONUS ROLL-OVER	50 UNUSED	58 SW#: 16 SLAM (3)
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 21 (2) 10 POINT SWS	43 SW#: 22 R & L 50 POINT	51 SW#: 23 LT INNER OUTLANE	59 SW#: 24 RT INNER OUTLANE
4 SW#: 25 DROP TARGET A (BOTTOM)	12 SW#: 26 DROP TARGET B	20 SW#: 27 DROP TARGET C	28 SW#: 28 DROP TARGET D	36 SW#: 29 DROP TARGET E (TOP)	44 SW#: 30 SPINNER, 5 & R.O. 2 TARGETS	52 SW#: 31 LT OUT OUTLANE	60 SW#: 32 RT OUT OUTLANE
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 36 RT SLINGSHOT	37 SW#: 37 LT SLINGSHOT	45 SW#: 38 RIGHT BUMPER	53 SW#: 39 TOP BUMPER	61 SW#: 40 LEFT BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Strange Science by Bally

1 SW#: 1 RIGHT OUTLANE	9 SW#: 2 LEFT OUTLANE	17 SW#: 3 EXIT ANTI-GRAVITY	25 SW#: 4 ENTER ANTI-GRAVITY	33 SW#: 5 BUTTON LEFT	41 SW#: 6 CREDIT	49 SW#: 7 BUTTON RIGHT	57 SW#: 8 OUTHOLE
2 SW#: 9 COINS RIGHT	10 SW#: 10 COINS LEFT	18 SW#: 11 COINS MIDDLE	26 SW#: 12 LEFT BUBBLE LANE	34 SW#: 13 RIGHT BUBBLE LANE	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 UNUSED
3 SW#: 17 SCIENCE TOP TARGET	11 SW#: 18 SCIENCE TARGET MIDDLE	19 SW#: 19 SCIENCE TARGET BOTTOM	27 SW#: 20 STRANGE TOP TARGET	35 SW#: 21 STRANGE TARGET MIDDLE	43 SW#: 22 STRANGE TARGET BOTTOM	51 UNUSED	59 UNUSED
4 SW#: 25 RETURN LANES	12 SW#: 26 THUMPER BUMPER MIDDLE	20 SW#: 27 THUMPER LEFT BUMPER	28 SW#: 28 THUMPER BUMPER RIGHT	36 SW#: 29 SLINGSHOT LEFT	44 SW#: 30 SLINGSHOT RIGHT	52 UNUSED	60 SW#: 32 SAUCER RIGHT
5 SW#: 33 OUT BALL LEFT-5	13 SW#: 34 OUT BALL 4	21 SW#: 35 OUT BALL 3	29 SW#: 36 OUT BALL 2	37 SW#: 37 OUT BALL RIGHT-1	45 SW#: 38 (LOWER) LAB 'L'	53 SW#: 39 (LOWER) LAB 'A'	61 SW#: 40 (LOWER) LAB 'B'
6 SW#: 41 BRAIN LEFT ROLLOVER	14 SW#: 42 BRAIN RIGHT ROLLOVER	22 SW#: 43 UNLOAD BALL LANE	30 SW#: 44 LOAD BALL LANE	38 SW#: 45 REBOUND	46 SW#: 46 (UPPER) LAB 'L'	54 SW#: 47 (UPPER) LAB 'A'	62 SW#: 48 (UPPER) LAB 'B'
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Street Fighter II by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 UNUSED
2 SW#: 10 POP BUMPER	10 SW#: 11 LEFT KICKING RUBBER (2)	18 SW#: 12 RIGHT RUBBER KICKING (2)	26 SW#: 13 LEFT HOLE	34 SW#: 14 RIGHT HOLE	42 SW#: 15 CAR HIT	50 UNUSED	58 UNUSED
3 SW#: 20 BRACELET TARGET (INNER)	11 SW#: 21 OUTHOLE	19 SW#: 22 SHOOTER LANE ROLLOVER	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 30 BRACELET TARGET (OUTER)	12 SW#: 31 TROUGH	20 SW#: 32 LOOP	28 SW#: 33 BOTTOM LEFT UPKICKER	36 SW#: 34 RIGHT UPKICKER	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Striker by Gottlieb

1 SW#: #1 LEFT DROP TARGET	9 SW#: 10 #2 LEFT DROP TARGET	17 SW#: 20 #3 LEFT DROP TARGET	25 SW#: 30 #4 LEFT DROP TARGET	33 SW#: 40 #5 LEFT DROP TARGET	41 SW#: 50 LEFT TOP POP BUMPER	49 UNUSED	57 UNUSED
2 SW#: 1 #1 RIGHT DROP TARGET	10 SW#: 11 #2 RIGHT DROP TARGET	18 SW#: 21 #3 RIGHT DROP TARGET	26 SW#: 31 #4 RIGHT DROP TARGET	34 SW#: 41 #5 RIGHT DROP TARGET	42 SW#: 51 RIGHT TOP POP BUMPER	50 UNUSED	58 UNUSED
3 SW#: 2 #1 CENTER DROP TARGET	11 SW#: 12 #2 CENTER DROP TARGET	19 SW#: 22 #3 CENTER DROP TARGET	27 SW#: 32 #4 CENTER DROP TARGET	35 SW#: 42 #10 SPOT TARGET	43 SW#: 52 SPECIAL ROLLOVER	51 UNUSED	59 UNUSED
4 SW#: 3 #1 SPOT TARGET	12 SW#: 13 #2 SPOT TARGET	20 SW#: 23 #3 SPOT TARGET	28 SW#: 33 LEFT SPINNER	36 SW#: 43 LEFT RETURN ROLLOVER	44 SW#: 53 10 POINT AND KICKING RUBBER	52 UNUSED	60 UNUSED
5 SW#: 4 #4 SPOT TARGET	13 SW#: 14 #5 SPOT TARGET	21 SW#: 24 #6 SPOT TARGET	29 SW#: 34 #1 TOP ROLLOVER	37 SW#: 44 #2 TOP ROLLOVER	45 SW#: 54 #3 TOP ROLLOVER	53 UNUSED	61 UNUSED
6 SW#: 5 #7 SPOT TARGET	14 SW#: 15 #8 SPOT TARGET	22 SW#: 25 #9 SPOT TARGET	30 SW#: 35 RIGHT SPINNER	38 SW#: 45 RIGHT RETURN ROLLOVER	46 SW#: 55 RIGHT SWITCH FLIPPER	54 UNUSED	62 UNUSED
7 SW#: 6 HOLE	15 SW#: 16 1ST POSITION TROUGH	23 SW#: 26 OUTHOLE PLUS TOP AND	31 SW#: 36 ROLLUNDER PLUS TOP AND	39 SW#: 46 RIGHT BUTTON PLUS TOP AND	47 SW#: 56 TILT	55 UNUSED	63 SW#: 76 LEFT BUTTON (GREEN)
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Strikes and Spares by Bally

1 SW#: 1 TOP 'B' R.O. LANE	9 SW#: 2 TOP 'C' R.O. LANE	17 SW#: 3 TOP 'A' R.O. LANE	25 SW#: 4 RT. FLIPPER FEEDER LANE	33 SW#: 5 LEFT FLIPPER FEEDER LANE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 500 SIDE TARGET	34 SW#: 13 10 PT. REBOUND	42 SW#: 14 50 PT. REBOUND	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 1 PIN	11 SW#: 18 2 PIN	19 SW#: 19 3 PIN	27 SW#: 20 4 PIN	35 SW#: 21 5 PIN	43 SW#: 22 6 PIN	51 SW#: 23 7 PIN	59 SW#: 24 8 PIN
4 SW#: 25 SPINNER	12 SW#: 26 9 PIN	20 SW#: 27 10 PIN	28 SW#: 28 'E' TARGET	36 SW#: 29 'R' TARGET	44 SW#: 30 'A' TARGET	52 SW#: 31 'P' TARGET	60 SW#: 32 SAUCER
5 SW#: 33 'S' TARGET	13 SW#: 34 RIGHT OUTLANE	21 SW#: 35 LEFT OUTLANE	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 LEFT THUMPER BUMPER	61 SW#: 40 RIGHT BUMPER THUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Super Mario Bros by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 SHOOTER BUTTON	49 UNUSED	57 UNUSED
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 TOP POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 UNUSED	50 SW#: 16 LEFT UPKICKER	58 SW#: 17 TOP RAMP
3 SW#: 20 LEFT SPOT PLAYBOARD TARGET	11 SW#: 21 TOP SPOT (2) TARGET	19 SW#: 22 BOTTOM SPOT PLAYBOARD TARGET	27 SW#: 23 LEFT RAMP SPOT TARGET	35 SW#: 24 UPPER SPOT PLAYBOARD TARGET	43 UNUSED	51 SW#: 26 RIGHT UPKICKER	59 SW#: 27 LOWER TROUGH
4 SW#: 30 ROLLOVER DROP TARGET	12 UNUSED	20 SW#: 32 SHOOTER LANE ROLLOVER	28 SW#: 33 OUTHOLE	36 SW#: 34 TROUGH	44 UNUSED	52 SW#: 36 UPPER PLAYBOARD UPKICKER	60 UNUSED
5 SW#: 40 TOP RIGHT ROLLOVER	13 SW#: 41 LEFT OUTSIDE ROLLOVER	21 SW#: 42 LEFT RETURN ROLLOVER	29 SW#: 43 RIGHT RETURN ROLLOVER	37 SW#: 44 RIGHT OUTSIDE ROLLOVER	45 SW#: 45 LEFT FLIPPER	53 SW#: 46 UPPER PLAYBOARD ROLLOVER	61 SW#: 47 RIGHT FLIPPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Super Mario Bros Mushroom World by Gottlieb

1 SW#: 1 (LEFT) #1 COIN CHUTE	9 SW#: 1 (RIGHT) #2 COIN CHUTE	17 SW#: 2 (CENTER) #3 COIN CHUTE	25 SW#: 3 #4 COIN CHUTE	33 SW#: 4 CREDIT BUTTON	41 SW#: 5 #2 LEFT DROP TARGET	49 SW#: 6 #2 RIGHT DROP TARGET	57 UNUSED
2 SW#: 10 TOP POP BUMPER	10 SW#: 11 CENTER POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 KICKING RUBBER	34 SW#: 14 LOWER LEFT UPKICKER	42 SW#: 15 #3 LEFT DROP TARGET	50 SW#: 16 #3 RIGHT DROP TARGET	58 UNUSED
3 SW#: 20 #1 LEFT DROP TARGET	11 UNUSED	19 SW#: 22 SHOOTER LANE ROLLOVER	27 SW#: 23 TROUGH	35 SW#: 24 TOP CENTER UPKICKER	43 SW#: 25 #4 LEFT DROP TARGET	51 SW#: 26 #4 RIGHT DROP TARGET	59 UNUSED
4 SW#: 30 #1 RIGHT DROP TARGET	12 UNUSED	20 SW#: 32 SPOT TARGET	28 SW#: 33 OUTHOLE	36 SW#: 34 BOTTOM RIGHT UPKICKER	44 SW#: 35 #5 LEFT DROP TARGET	52 SW#: 36 #5 RIGHT DROP TARGET	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Super Orbit by Gottlieb

1 SW#: VARI-TARGET, POSITION 0	9 SW#: 10 VARI-TARGET, POSITION 1	17 SW#: 20 VARI-TARGET, POSITION 2	25 SW#: 30 VARI-TARGET, POSITION 3	33 SW#: 40 VARI-TARGET, POSITION 4	41 SW#: 50 VARI-TARGET, POSITION 5	49 SW#: 60 VARI-TARGET, POSITION 6	57 UNUSED
2 SW#: 1 TOP LEFT TOP ROLLOVER	10 SW#: 11 TOP RIGHT ROLLOVER	18 SW#: 21 ROLLUNDER OVER, RIGHT LOWER	26 SW#: 31 SPIN TARGET TARGET	34 SW#: 41 LEFT OUTSIDE ROLLOVER	42 SW#: 51 TOP CENTER ROLLOVER	50 SW#: 61 LEFT RETURN ROLLOVER	58 UNUSED
3 SW#: 2 LEFT POP BUMPER	11 SW#: 12 CENTER POP BUMPER	19 SW#: 22 RIGHT POP BUMPER	27 SW#: 32 KICKING (2) RUBBER	35 SW#: 42 ON LEFT ON FLIPPER, RIGHT FLIPPER	43 SW#: 52 RIGHT OUTSIDE ROLLOVER	51 SW#: 62 10 POINTS (8)	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Supersonic by Bally

1 SW#: 1 DROP TARGET E (BOTTOM)	9 SW#: 2 DROP TARGET D	17 SW#: 3 DROP TARGET C	25 SW#: 4 DROP TARGET B	33 SW#: 5 DROP TARGET A (TOP)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 TOP R.O. BUTTON	34 SW#: 13 DROP TARGET REBOUND	42 SW#: 14 RIGHT OUTLANE	50 SW#: 15 LEFT OUTLANE	58 SW#: 16 SLAM (2)
3 SW#: 17 SPINNER	11 SW#: 18 #5 TOP R.O. & #5 TARGET	19 SW#: 19 #4 TOP R.O. & #4 TARGET	27 SW#: 20 #3 TOP R.O. & #3 TARGET	35 SW#: 21 #2 TOP R.O.	43 SW#: 22 #1 TOP R.O. & #1 TARGET	51 SW#: 23 L&R LANE, FLIP/FEED TOP RT. REB.	59 SW#: 24 SAUCER
4 UNUSED	12 SW#: 26 #5 STAR	20 SW#: 27 #4 STAR	28 SW#: 28 #3 STAR	36 SW#: 29 #2 STAR	44 SW#: 30 #1 STAR	52 SW#: 31 RIGHT SLINGSHOT	60 SW#: 32 LEFT SLINGSHOT
5 SW#: 33 BOTTOM THUMPER BUMPER	13 SW#: 34 #5 LEFT LANE R.O. BUTTON	21 SW#: 35 #4 LEFT LANE R.O. BUTTON	29 SW#: 36 #3 LEFT LANE R.O. BUTTON	37 SW#: 37 #2 LEFT LANE R.O. BUTTON	45 SW#: 38 #1 LEFT LANE R.O. BUTTON	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Surfn Safari by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 UNUSED	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 OUTHOLE	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 LEFT POP BUMPER	10 SW#: 11 RIGHT POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER (2)	34 SW#: 14 RIGHT RUBBER KICKING (2)	42 SW#: 15 KICKING TARGET	50 SW#: 16 CENTER DROP TARGET #1	58 SW#: 17 RIGHT DROP TARGET #1
3 SW#: 20 SPINNER	11 SW#: 21 TOP UPKICKER	19 SW#: 22 BULLS-EYE TARGET	27 SW#: 23 LEFT OUTSIDE ROLLOVER	35 SW#: 24 RIGHT OUTSIDE ROLLOVER	43 SW#: 25 TROUGH	51 SW#: 26 CENTER DROP TARGET #2	59 SW#: 27 RIGHT DROP TARGET #2
4 SW#: 30 SHOOTER LANE ROLLOVER	12 SW#: 31 TOP RIGHT ROLLOVER	20 SW#: 32 MILLION SPOT TARGET	28 SW#: 33 LEFT RETURN ROLLOVER	36 SW#: 34 RIGHT RETURN ROLLOVER	44 SW#: 35 LEFT UPKICKER	52 SW#: 36 CENTER DROP TARGET #3	60 SW#: 37 RIGHT DROP TARGET #3
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 50 LEFT RAMP ENTRANCE	14 SW#: 51 LEFT RAMP EXIT	22 SW#: 52 CENTER RAMP LOOP	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Swords of Fury by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 DROP TARGET RED	25 SW#: 25 LEFT RETURN LANE	33 UNUSED	41 UNUSED	49 UNUSED	57 SW#: 57 LEFT OUTLANE
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 DROP TARGET YELLOW	26 SW#: 26 A	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 58 LANE CHANGE L FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH 1 (RIGHT)	19 SW#: 19 DROP TARGET BLUE	27 SW#: 27 V	35 UNUSED	43 UNUSED	51 UNUSED	59 SW#: 59 RIGHT OUTLANE
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH 2 (MID)	20 SW#: 20 DROP TARGET ORANGE	28 SW#: 28 E	36 UNUSED	44 UNUSED	52 UNUSED	60 SW#: 60 LANE CHANGE R FLIPPER
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH 3 (LEFT)	21 SW#: 21 DROP TARGET RED II	29 SW#: 29 N	37 SW#: 37 UPR RIGHT 10 PT	45 UNUSED	53 UNUSED	61 SW#: 61 TOP LOOP "LEFT"
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 BALL SHOOTER LANE	22 UNUSED	30 SW#: 30 G	38 SW#: 38 RIGHT RAMP	46 SW#: 46 PAYOFF RAMP	54 SW#: 54 TOP EJECT	62 SW#: 62 TOP LOOP "RIGHT"
7 SW#: 7 SLAM TILT	15 SW#: 15 TOP TUBE	23 SW#: 23 LEFT LOOP "LEFT"	31 SW#: 31 E	39 SW#: 39 LEFT SPIN	47 SW#: 47 TOP CENTER RAMP	55 SW#: 55 LEFT SLOT LOCKUP	63 SW#: 63 LEFT KICKER
8 SW#: 8 HIGH-SCORE RESET	16 SW#: 16 BOTTOM TUBE	24 SW#: 24 LEFT LOOP "RIGHT"	32 SW#: 32 R	40 SW#: 40 LWR RIGHT 10 PT	48 SW#: 48 RIGHT RETURN LANE	56 SW#: 56 UPPER LEFT LOCK	64 SW#: 64 RIGHT KICKER

SW# number is the switch number as known to the game.

TX Sector by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 TOP #1 DROP TARGET	41 SW#: 50 TOP #2 DROP TARGET	49 SW#: 60 TOP #3 DROP TARGET	57 SW#: 70 TOP #4 DROP TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 RIGHT #1 DROP TARGET	42 SW#: 51 RIGHT #2 DROP TARGET	50 SW#: 61 RIGHT #3 DROP TARGET	58 SW#: 71 RIGHT #4 DROP TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 LEFT #1 DROP ROLLOVER TARGET	43 SW#: 52 TOP LEFT POP BUMPER	51 SW#: 62 TOP RIGHT POP BUMPER	59 SW#: 72 BOTTOM POP BUMPER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT RAMP ROLLUNDER	44 SW#: 53 LEFT SPOT TARGET	52 SW#: 63 SHOOTER RAMP ROLLUNDER	60 SW#: 73 LEFT SPINNER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 RIGHT RAMP ROLLUNDER	45 SW#: 54 RIGHT SPOT TARGET	53 SW#: 64 TOP SPOT TARGET	61 SW#: 74 RIGHT SPINNER
6 UNUSED	14 UNUSED	22 UNUSED	30 SW#: 35 LEFT RETURN ROLLOVER	38 SW#: 45 TOP LEFT HOLE	46 SW#: 55 LOWER LEFT HOLE	54 SW#: 65 TOP RIGHT HOLE	62 SW#: 75 LOWER RIGHT HOLE
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 SW#: 36 RIGHT RETURN ROLLOVER	39 SW#: 46 LEFT AND RIGHT OUTSIDE ROLLOVERS	47 SW#: 56 #2 TROUGH KICKING TARGET (LEFT), KICKING TARGET (RIGHT), TOP (4 BANK) RUBBER SWITCH,	55 SW#: 66 OUTHOLE	63 SW#: 76 KICKING (2),
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Tag Team Pinball by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 SW#: 40 #1 DROP TARGET (LOWER)	41 SW#: 50 #2 DROP TARGET (LOWER)	49 SW#: 60 #3 DROP TARGET (LOWER)	57 SW#: 70 #4 DROP TARGET (LOWER)
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 TOP ROLLUNDER	42 SW#: 51 #1 DROP TARGET (UPPER)	50 SW#: 61 #2 DROP TARGET (UPPER)	58 SW#: 71 #3 DROP TARGET (UPPER)
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 SPOT TARGET	43 SW#: 52 #1 TOP ROLLOVER	51 SW#: 62 #2 TOP ROLLOVER	59 SW#: 72 #3 TOP ROLLOVER
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 SW#: 43 LEFT SIDE ROLLOVER	44 SW#: 53 LEFT RETURN ROLLOVER	52 SW#: 63 LEFT OUTSIDE ROLLOVER	60 SW#: 73 RIGHT OUTSIDE ROLLOVER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 RIGHT SPINNER	45 SW#: 54 RIGHT RETURN ROLLOVER	53 SW#: 64 RIGHT FLIPPER	61 SW#: 74 3RD POSITION TROUGH
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT TOP HOLE	46 SW#: 55 RIGHT SIDE HOLE	54 SW#: 65 LEFT SIDE KICKER	62 SW#: 75 POP BUMPERS (3)
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 10 POINT (3)	47 UNUSED	55 SW#: 66 OUTHOLE	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Tales From The Crypt by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 TROUGH #1 LEFT	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 RIGHT OUTLANE	33 SW#: 33 UP	41 SW#: 41 LEFT DROP	49 SW#: 49 LEFT TURBO	57 SW#: 57 LAMP RAMP EXIT
2 SW#: 2 4TH COIN	10 SW#: 10 TROUGH #2	18 SW#: 18 LEFT RETURN	26 SW#: 26 RIGHT RETURN	34 UNUSED	42 SW#: 42 MIDDLE DROP	50 SW#: 50 BOTTOM TURBO	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #3	19 SW#: 19 LEFT SLINGSHOT	27 SW#: 27 RIGHT SLINGSHOT	35 UNUSED	43 SW#: 43 RIGHT DROP	51 SW#: 51 RIGHT TURBO	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #4	20 SW#: 20 LEFT BOTTOM3 -BANK	28 SW#: 28 RIGHT BOTTOM 3-BANK	36 SW#: 36 DOWN	44 SW#: 44 LEFT RAMP ENTER	52 SW#: 52 SUPER VUK RIGHT	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #5	21 SW#: 21 LEFT MIDDLE 3-BANK	29 SW#: 29 RIGHT MIDDLE 3-BANK	37 SW#: 37 GRAVE STONE	45 SW#: 45 LEFT RAMP MIDDLE	53 SW#: 53 SMALL TROUGH	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 TROUGH #6	22 SW#: 22 LEFT TOP 3-BANK	30 SW#: 30 RIGHT TOP 3-BANK	38 SW#: 38 VUK LEFT	46 SW#: 46 RIGHT RAMP ENTER	54 SW#: 54 LARGE TROUGH	62 SW#: 62 LAUNCH BUTTON
7 SW#: 7 SLAM TILT	15 SW#: 15 TROUGH #7 RIGHT	23 SW#: 23 LEFT BOTTOM ORBIT	31 SW#: 31 RIGHT BOTTOM ORBIT	39 SW#: 39 CAPTIVE BALL	47 SW#: 47 RIGHT RAMP EXIT	55 SW#: 55 POWER SCOOP	63 SW#: 63 LEFT END OF STROKE
8 SW#: 8 BUY-IN TYPE	16 SW#: 16 SHOOTER LANE	24 SW#: 24 LEFT TOP ORBIT	32 SW#: 32 RIGHT TOP ORBIT	40 SW#: 40 LEFT SPINNER	48 SW#: 48 RIGHT SPINNER	56 SW#: 56 MIDDLE SPINNER	64 SW#: 64 RIGHT END OF STROKE

SW# number is the switch number as known to the game.

Tales of the Arabian Nights by Williams

1 SW#: 11 HAREM PASSAGE	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 RAMP MADE LEFT	33 SW#: 51 LEFT SLING	41 SW#: 61 LEFT STANDUPS	49 UNUSED	57 UNUSED
2 SW#: 12 VANISH TUNNEL	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 GENIE TARGET	34 SW#: 52 RIGHT SLING	42 SW#: 62 RIGHT STANDUPS	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 GENIE TARGET STANDUP	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 LEFT LOOP	35 SW#: 53 LEFT JET	43 SW#: 63 TOP SKILL	51 UNUSED	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 INNER LOOP LEFT	36 SW#: 54 RIGHT JET	44 SW#: 64 MIDDLE SKILL	52 UNUSED	60 UNUSED
5 SW#: 15 RAMP ENTER	13 SW#: 25 BAZAAR EJECT	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 INNER LOOP RIGHT	37 SW#: 55 MIDDLE JET	45 SW#: 65 BOTTOM SKILL	53 UNUSED	61 UNUSED
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT INLANE	22 SW#: 36 LEFT CAGE OPTO	30 SW#: 46 MINI STANDUPS	38 SW#: 56 LAMP SPIN CCW	46 SW#: 66 LOCK 1 (BOTTOM)	54 UNUSED	62 UNUSED
7 SW#: 17 RIGHT INLANE	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 RIGHT CAGE OPTO	31 SW#: 47 RAMP MADE RIGHT	39 SW#: 57 LAMP SPIN CW	47 SW#: 67 LOCK 2 (MIDDLE)	55 UNUSED	63 UNUSED
8 SW#: 18 BALL SHOOTER	16 SW#: 28 LEFT WIRE MAKE	24 SW#: 38 LEFT EJECT	32 SW#: 48 RIGHT BALL CAPTIVE	40 SW#: 58 LEFT CAPTIVE BALL	48 SW#: 68 LOCK 3 (TOP)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Taxi by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 LEFT JET BUMPER	25 SW#: 25 LEFT RAMP ENTRY	33 SW#: 33 RIGHT RAMP EXIT	41 UNUSED	49 UNUSED	57 SW#: 57 LANE CHANGE RIGHT
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT SLINGSHOT	26 SW#: 26 RIGHT RAMP ENTRY	34 SW#: 34 LEFT RAMP EXIT	42 UNUSED	50 UNUSED	58 SW#: 58 LANE CHANGE LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1	19 SW#: 19 RIGHT JET BUMPER	27 SW#: 27 MDL 3-BANK DROP TARGET (LEFT)	35 SW#: 35 CATAPULT	43 SW#: 43 SPINOUT KICKBIG	51 UNUSED	59 UNUSED
4 SW#: 4 LEFT COIN CHUTE	12 SW#: 12 BALL TROUGH #2	20 SW#: 20 RIGHT SLINGSHOT	28 SW#: 28 MDL 3-BANK DROP TARGET (MID)	36 SW#: 36 RIGHT EJECT	44 SW#: 44 "SPINS" COUNTER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 TOP EJECT HOLE	21 SW#: 21 LOWER JET BUMPER	29 SW#: 29 MDL 3-BANK DROP TARGET (RIGHT)	37 SW#: 37 LEFT OUTLANE	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 RIGHT COIN CHUTE	14 SW#: 14 C TOP LANE	22 SW#: 22 BALL SHOOTER	30 SW#: 30 R 3-BANK DROP TARGET (TOP)	38 SW#: 38 LEFT RETURN LANE	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 A TOP LANE	23 SW#: 23 TOP LANE ENTRY	31 SW#: 31 R 3-BANK DROP TARGET (MID)	39 SW#: 39 RIGHT OUTLANE	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 B TOP LANE	24 SW#: 24 CARRY PASSENGERS DROP	32 SW#: 32 R 3-BANK DROP TARGET (BOTTOM)	40 SW#: 40 RIGHT RETURN LANE	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Teed Off by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 START BUTTON (CREDIT)	41 SW#: 5 TOURNAMENT	49 SW#: 6 FRONT DOOR (SERVICE)	57 SW#: 7 DROP TARGET #1
2 SW#: 10 POP BUMPER	10 SW#: 11 LEFT KICKING RUBBER (2)	18 SW#: 12 RIGHT RUBBER KICKING (2)	26 SW#: 13 TOP KICKING RUBBER	34 SW#: 14 TROUGH	42 UNUSED	50 SW#: 16 TOP UPKICKER	58 SW#: 17 DROP TARGET #3
3 UNUSED	11 SW#: 21 LEFT (INNER) BULLSEYE	19 SW#: 22 RIGHT BULLSEYE (INNER)	27 SW#: 23 HOLE	35 SW#: 24 OUTHOLE	43 UNUSED	51 SW#: 26 CENTER UPKICKER	59 SW#: 27 DROP TARGET #4
4 UNUSED	12 SW#: 31 LEFT (OUTER) BULLSEYE	20 SW#: 32 RIGHT BULLSEYE (OUTER)	28 SW#: 33 CENTER ROLLOVER	36 SW#: 34 SHOOTER LANE ROLLOVER	44 UNUSED	52 SW#: 36 BOTTOM UPKICKER	60 SW#: 37 DROP TARGET #5
5 SW#: 40 SPIN UNIT "G"	13 SW#: 41 SPIN UNIT "O"	21 SW#: 42 SPIN UNIT "P"	29 SW#: 43 SPIN UNIT "H"	37 SW#: 44 SPIN UNIT "E"	45 SW#: 45 SPIN UNIT "R"	53 UNUSED	61 UNUSED
6 SW#: 50 SPIN UNIT "G"	14 SW#: 51 SPIN UNIT "O"	22 SW#: 52 SPIN UNIT "P"	30 SW#: 53 SPIN UNIT "H"	38 SW#: 54 SPIN UNIT "E"	46 SW#: 55 SPIN UNIT "R"	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Teenage Mutant Ninja Turtles by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 RED ARROW TOP	33 SW#: 33 AMBER ARROW LEFT	41 SW#: 41 MANHOLE VUK	49 SW#: 49 CAPTIVE BALL TARGET	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 RED ARROW CENTER	34 SW#: 34 AMBER ARROW CENTER	42 UNUSED	50 SW#: 50 ROLLOVER #1 BOTTOM	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 RED ARROW BOTTOM	35 SW#: 35 AMBER ARROW RIGHT	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 RIGHT RETURN	28 SW#: 28 PURPLE ARROW TOP	36 SW#: 36 BLUE ARROW TOP	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 PURPLE ARROW CENTER	37 SW#: 37 BLUE ARROW CENTER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 PURPLE ARROW BOTTOM	38 SW#: 38 BLUE ARROW BOTTOM	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 UNUSED	31 UNUSED	39 UNUSED	47 SW#: 47 CENTER TURBO BUMPER	55 SW#: 55 RANSOM TARGET	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 SW#: 32 LEFT RAMP EXIT YELLOW	40 SW#: 40 RIGHT RAMP EXIT GREEN	48 SW#: 48 RIGHT TURBO BUMPER	56 SW#: 56 SPINNER	64 UNUSED

SW# number is the switch number as known to the game.

Terminator 2 Judgement Day by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 GUN LOADED	25 SW#: 41 LEFT JET	33 SW#: 51 LEFT LOCK	41 SW#: 61 LEFT RAMP ENTRY	49 SW#: 71 TARGET 1 HIGH	57 UNUSED
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 GUN MARK	26 SW#: 42 RIGHT JET	34 UNUSED	42 SW#: 62 LEFT RAMP MADE	50 SW#: 72 TARGET 2	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET DISPENSER	19 SW#: 33 GUN HOME	27 SW#: 43 BOTTOM JET	35 SW#: 53 LOW ESCAPE ROUTE	43 SW#: 63 RIGHT RAMP ENTRY	51 SW#: 73 TARGET 3	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 GRIP TRIGGER	28 SW#: 44 LEFT SLING	36 SW#: 54 HIGH ESCAPE ROUTE	44 SW#: 64 RIGHT RAMP MADE	52 SW#: 74 TARGET 4	60 UNUSED
5 SW#: 15 TROUGH LEFT	13 SW#: 25 LEFT OUTLANE	21 UNUSED	29 SW#: 45 RIGHT SLING	37 SW#: 55 TOP LOCK	45 SW#: 65 LOW CHASE LOOP	53 SW#: 75 TARGET 5 LOW	61 UNUSED
6 SW#: 16 TROUGH CENTER	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 MID LEFT STAND-UP TARGET	30 SW#: 46 TOP RIGHT STAND-UP TARGET	38 SW#: 56 TOP LANE LEFT	46 SW#: 66 HIGH CHASE LOOP	54 SW#: 76 BALL POPPER	62 UNUSED
7 SW#: 17 TROUGH RIGHT	15 SW#: 27 RIGHT RETURN LANE	23 SW#: 37 MID CENTER STAND-UP TARGET	31 SW#: 47 MID RIGHT STAND-UP TARGET	39 SW#: 57 TOP LANE CENTER	47 UNUSED	55 SW#: 77 DROP TARGET	63 UNUSED
8 SW#: 18 OUTHOLE	16 SW#: 28 RIGHT OUTLANE	24 SW#: 38 MID RIGHT STAND-UP TARGET	32 SW#: 48 BOTTOM RIGHT STAND-UP TARGET	40 SW#: 58 TOP LANE RIGHT	48 SW#: 68 LEFT RAMP ENTRY UNUSED	56 SW#: 78 SHOOTER	64 UNUSED

SW# number is the switch number as known to the game.

Terminator 3 Rise of the Machines by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 UNUSED	17 SW#: 17 LT 3-BANK S-U BOT	25 SW#: 25 DROP TARGET	33 SW#: 33 LOCKUP 1 (RIGHT)	41 SW#: 41 BACKBOX 5-BANK (TOP)	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 STANDUP	18 SW#: 18 LT 3-BANK S-U MID	26 UNUSED	34 SW#: 34 LOCKUP 2	42 SW#: 42 BACKBOX 2 5-BANK	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 LT 3-BANK S-U TOP	27 UNUSED	35 SW#: 35 LOCKUP 3 (LEFT)	43 SW#: 43 BACKBOX 3 5-BANK	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 RT 3-BANK S-U TOP	28 SW#: 28 LEFT ORBIT BOTTOM	36 SW#: 36 VUK	44 SW#: 44 BACKBOX 4 5-BANK	52 SW#: 52 SKILL SHOT	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 RT 3-BANK S-U MID	29 SW#: 29 LEFT ORBIT TOP	37 SW#: 37 LEFT TOP LANE	45 SW#: 45 BACKBOX 5-BANK (BOT)	53 SW#: 53 TOURNAMENT START	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 RT 3-BANK S-U BOT	30 SW#: 30 LEFT RAMP	38 SW#: 38 MIDDLE TOP LANE	46 SW#: 46 RIGHT ORBIT TOP	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 CAPTIVE BALL	31 SW#: 31 T-X MADE	39 SW#: 39 RIGHT TOP LANE	47 UNUSED	55 SW#: 55 GUN TRIGGER	63 UNUSED
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT ORBIT BOTTOM	32 SW#: 32 RIGHT RAMP	40 SW#: 40 CENTER RAMP	48 UNUSED	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

The Addams Family by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 UPPER LEFT JET	25 SW#: 41 GRAVE "G"	33 SW#: 51 SHOOTER LANE	41 SW#: 61 LET RAMP ENTER	49 SW#: 71 SWAMP LOCK UPPER	57 SW#: 81 BOOKCASE OPEN
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 UPPER RIGHT JET	26 SW#: 42 GRAVE "R"	34 UNUSED	42 SW#: 62 TRAIN WRECK	50 SW#: 72 SWAMP LOCK CENTER	58 SW#: 82 BOOKCASE CLOSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO.	19 SW#: 33 CENTER LEFT JET	27 SW#: 43 CHAIR KICKOUT	35 SW#: 53 BOOKCASE 1 OPTO	43 SW#: 63 THING EJECT LANE	51 SW#: 73 SWAMP LOCK LOWER	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 CENTER LEFT JET	28 SW#: 44 COUISIN IT	36 SW#: 54 BOOKCASE 2 OPTO	44 SW#: 64 RIGHT RAMP ENTER	52 SW#: 74 LOCKUP KICKOUT	60 SW#: 84 THING DOWN OPTO
5 SW#: 15 LEFT TROUGH	13 SW#: 25 RIGHT LANE FLIPPER	21 SW#: 35 LOWER JET	29 SW#: 45 LOWER SWAMP MILLION	37 SW#: 55 BOOKCASE 3 OPTO	45 SW#: 65 RIGHT RAMP TOP	53 SW#: 75 LEFT OUTLANE	61 SW#: 85 THING UP OPTO
6 SW#: 16 CENTER TROUGH	14 SW#: 26 RIGHT OUTLANE	22 SW#: 36 LEFT SLINGSHOT	30 UNUSED	38 SW#: 56 BOOKCASE 4 OPTO	46 SW#: 66 LEFT RAMP TOP	54 SW#: 76 LEFT FLIPPER LANE 2	62 SW#: 86 GRAVE "A"
7 SW#: 17 RIGHT TROUGH	15 SW#: 27 BALL SHOOTER	23 SW#: 37 RIGHT SLINGSHOT	31 SW#: 47 CENTER SWAMP MILLION	39 SW#: 57 BUMPER LANE OPTO	47 SW#: 67 UPPER RIGHT LOOP	55 SW#: 77 THING KICKOUT	63 SW#: 87 THING EJECT HOLE
8 SW#: 18 OUTHOLE	16 UNUSED	24 SW#: 38 UPPER LEFT LOOP	32 SW#: 48 UPPER SWAMP MILLION	40 SW#: 58 RIGHT RAMP EXIT	48 SW#: 68 VAULT	56 SW#: 78 LEFT FLIPPER LANE 1	64 UNUSED

SW# number is the switch number as known to the game.

The Amazing SpiderMan by Gottlieb

1 SW#: #1 RIGHT DROP TARGET	9 SW#: 10 #2 RIGHT DROP TARGET	17 SW#: 20 #3 RIGHT DROP TARGET	25 SW#: 30 #4 RIGHT DROP TARGET	33 SW#: 40 #5 RIGHT DROP TARGET	41 SW#: 50 ROLLOVER BUTTON	49 SW#: 60 SPIN TARGET	57 SW#: 70 TOP TARGET
2 SW#: 1 #1 LEFT DROP TARGET	10 SW#: 11 #2 LEFT DROP TARGET	18 SW#: 21 #3 LEFT DROP TARGET	26 SW#: 31 "A" ROLLOVER (2)	34 SW#: 41 "B" ROLLOVER (2) ROLLOVER	42 SW#: 51 RIGHT RETURN ROLLOVER, LEFT OUTSIDE ROLLOVER	50 SW#: 61 LEFT RETURN ROLLOVER	58 SW#: 71 SIDE TARGET
3 SW#: 2 #1 HOLE	11 SW#: 12 #2 HOLE	19 SW#: 22 #3 HOLE	27 SW#: 32 10 POINT (4) CONTACTS	35 SW#: 42 50 POINT (2) CONTACTS (6), KICKING RUBBER	43 UNUSED	51 SW#: 62 RIGHT OUTSIDE ROLLOVER	59 SW#: 72 POP BUMPERS (2)
4 UNUSED	12 UNUSED	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

The Bally Game Show by Williams

1 SW#: 1 PLUMB BOB TILT	9 UNUSED	17 SW#: 17 TOP LANE, LEFT	25 SW#: 25 EASY SPIN	33 SW#: 33 PRIZE LETTER T IN TRUCK	41 SW#: 41 SPIN WHEEL	49 UNUSED	57 SW#: 57 RIGHT FLIPPER
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 TOP LANE, MIDDLE	26 SW#: 26 CENTER RAMP	34 SW#: 34 PRIZE LETTER R IN TRUCK	42 SW#: 42 RIGHT SPINNER	50 UNUSED	58 SW#: 58 LEFT FLIPPER
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH 1, RIGHT	19 SW#: 19 TOP LANE, RIGHT	27 SW#: 27 PRIZE LETTER T IN TV	35 SW#: 35 PRIZE LETTER U IN TRUCK	43 SW#: 43 SPOT LETTER	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH 2, LEFT	20 SW#: 20 RIGHT RAMP	28 SW#: 28 PRIZE LETTER V IN TV	36 SW#: 36 PRIZE LETTER C IN TRUCK	44 UNUSED	52 UNUSED	60 SW#: 60 LEFT JET
5 SW#: 5 CENTER COIN	13 UNUSED	21 SW#: 21 BALL POPPER	29 SW#: 29 PRIZE LETTER T IN TRIP	37 SW#: 37 PRIZE LETTER K IN TRUCK	45 SW#: 45 LEFT OUTLANE	53 UNUSED	61 SW#: 61 RIGHT JET
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 UNUSED	30 SW#: 30 PRIZE LETTER R IN TRIP	38 UNUSED	46 SW#: 46 LEFT RETURN	54 UNUSED	62 SW#: 62 BOTTOM JET
7 SW#: 7 SLAM TILT	15 UNUSED	23 SW#: 23 LEFT LOCKUP	31 SW#: 31 PRIZE LETTER I IN TRIP	39 SW#: 39 DROP TARGET CAR	47 SW#: 47 RIGHT RETURN	55 UNUSED	63 SW#: 63 LEFT SLINGSHOT
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 BIG BUCKS	24 UNUSED	32 SW#: 32 PRIZE LETTER P IN TRIP	40 UNUSED	48 SW#: 48 RIGHT OUTLANE	56 UNUSED	64 SW#: 64 RIGHT SLINGSHOT

SW# number is the switch number as known to the game.

The Champion Pub by Williams

1 SW#: 11 MADE RAMP	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH EJECT	25 SW#: 41 BOXER POLE CENTER	33 SW#: 51 LEFT SLINGSHOT	41 SW#: 61 LEFT SCOOP UP	49 SW#: 71 EXIT ROPE	57 UNUSED
2 SW#: 12 HEAVY BAG	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH BALL 1	26 SW#: 42 BEHIND LEFT SCOOP	34 SW#: 52 RIGHT SLINGSHOT	42 SW#: 62 RIGHT SCOOP UP	50 SW#: 72 ENTER SPEED BAG	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BALL LAUNCH	19 SW#: 33 TROUGH BALL 2	27 SW#: 43 BEHIND RIGHT SCOOP	35 SW#: 53 THREE BANK BOTTOM	43 SW#: 63 THROWN TOWEL	51 SW#: 73 DANGER ZONE	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH BALL 3	28 SW#: 44 ENTER RAMP	36 SW#: 54 THREE BANK TOP	44 SW#: 64 ROPE CAM	52 SW#: 74 ENTER LOCK UP	60 UNUSED
5 SW#: 15 LOCK UP 1	13 SW#: 25 THREE BANK MIDDLE	21 SW#: 35 TROUGH BALL 4	29 SW#: 45 JUMP RAMP	37 SW#: 55 LEFT HALF GUY	45 SW#: 65 SPEED BAG	53 SW#: 75 UP/DOWN POST	61 UNUSED
6 SW#: 16 LEFT OUTLANE	14 SW#: 26 LEFT RETURN	22 SW#: 36 LEFT JAB MADE	30 SW#: 46 BAG POLE CENTER	38 SW#: 56 RIGHT HALF GUY	46 SW#: 66 BOXER GUT 1	54 SW#: 76 TOP OF RAMP	62 UNUSED
7 SW#: 17 RIGHT RETURN	15 SW#: 27 RIGHT OUTLANE	23 SW#: 37 CORNER EJECT	31 SW#: 47 BOXER POLE RIGHT	39 SW#: 57 LOCK UP 2	47 SW#: 67 BOXER GUT 2	55 UNUSED	63 UNUSED
8 SW#: 18 SHOOTER LANE	16 SW#: 28 POPPER	24 SW#: 38 RIGHT JAB MADE	32 SW#: 48 BOXER POLE LEFT	40 SW#: 58 LOCK UP 3	48 SW#: 68 BOXER HEAD	56 SW#: 78 ENTER ROPE	64 UNUSED

SW# number is the switch number as known to the game.

The Flintstones by Williams

1 SW#: 11 LAUNCH BUTTON	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH 1	25 SW#: 41 4-BNK DROP 1 TGT.	33 SW#: 51 LT. & RT. 3-BNK BOT. TGTS.	41 SW#: 61 LEFT SLING	49 SW#: 71 LEFT OUT ROLLOVER	57 UNUSED
2 SW#: 12 TICKET DISP.	10 SW#: 22 DOOR CLOSED	18 SW#: 32 TROUGH 2	26 SW#: 42 4-BNK DROP 2 TGT.	34 SW#: 52 LT. & RT. 3-BNK MID. TGTS.	42 SW#: 62 RIGHT SLING	50 SW#: 72 LEFT RETURN ROLLOVER	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 EXTRA BALL BUTTON	19 SW#: 33 TROUGH 3	27 SW#: 43 4-BNK DROP 3 TGT.	35 SW#: 53 LT. & RT. 3-BNK UP. TGTS.	43 SW#: 63 TOP LEFT JET BUMPER	51 SW#: 73 RIGHT RETURN ROLLOVER	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 4	28 SW#: 44 4-BNK DROP 4 TGT.	36 SW#: 54 LOWER LEFT SINGLE TGT.	44 SW#: 64 TOP RIGHT JET BUMPER	52 SW#: 74 RIGHT OUT ROLLOVER	60 UNUSED
5 SW#: 15 SHOOTER LANE	13 SW#: 25 MACHINE EXIT	21 SW#: 35 TROUGH JAM	29 SW#: 45 3-BNK DROP 1 TGT.	37 SW#: 55 RIGHT SINGLE TGT.	45 SW#: 65 BOTTOM JET BUMPER	53 SW#: 75 UP. RT. LANE ROLLOVER	61 UNUSED
6 SW#: 16 UPPER 3-BNK LT. TGT. 'I'	14 SW#: 26 UPPER LEFT SINGLE TGT.	22 SW#: 36 BALL POPPER	30 SW#: 46 3-BNK DROP 2 TGT.	38 SW#: 56 DICTABIRD	46 SW#: 66 TOP LEFT "D" ROLLOVER	54 SW#: 76 UP. RT. LN. EXIT ROLLOVER	62 UNUSED
7 SW#: 17 UPPER 3-BNK CR. TGT. 'X'	15 SW#: 27 LEFT LANE ROLLOVER	23 SW#: 37 RIGHT RAMP ENTRANCE	31 SW#: 47 3-BNK DROP 3 TGT.	39 UNUSED	47 SW#: 67 TOP CENTER ROLLOVER "I"	55 SW#: 77 RIGHT RAMP EXIT	63 UNUSED
8 SW#: 18 UPPER 3-BNK RT. TGT. 'I'	16 SW#: 28 INNER LEFT LANE ROLLOVER	24 SW#: 38 LEFT RAMP ENTRANCE	32 SW#: 48 CENTER LANE ROLLOVER	40 UNUSED	48 SW#: 68 TOP RIGHT ROLLOVER "G"	56 SW#: 78 LEFT RAMP EXIT	64 UNUSED

SW# number is the switch number as known to the game.

The Games by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 VARI-TARGET #1	33 SW#: 40 VARI-TARGET #2	41 SW#: 50 VARI-TARGET #3	49 SW#: 60 VARI-TARGET #4	57 UNUSED
2 UNUSED	10 UNUSED	18 UNUSED	26 SW#: 31 #1 TOP ROLLOVER	34 SW#: 41 #2 TOP ROLLOVER	42 SW#: 51 #3 TOP ROLLOVER	50 SW#: 61 #4 TOP ROLLOVER	58 UNUSED
3 UNUSED	11 UNUSED	19 UNUSED	27 SW#: 32 #1 CAPTIVE ROLLOVER	35 SW#: 42 #2 CAPTIVE ROLLOVER	43 SW#: 52 #3 CAPTIVE ROLLOVER	51 SW#: 62 CAPTIVE BALL SPOT TARGET	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 33 RIGHT CENTER SPOT TARGET	36 SW#: 43 HOLE	44 SW#: 53 SPINNER	52 SW#: 63 LEFT CENTER SPOT TARGET	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 34 LEFT RETURN ROLLOVER	37 SW#: 44 LEFT OUTSIDE ROLLOVER	45 SW#: 54 RIGHT RETURN ROLLOVER	53 SW#: 64 RIGHT OUTSIDE ROLLOVER	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 SW#: 35 POP BUMPERS (TOP, BOTTOM, LEFT, RIGHT)	38 SW#: 45 10 POINT (5)	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

The Getaway High Speed II by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 LEFT SLING	25 SW#: 41 TOP YELLOW	33 SW#: 51 TOP GREEN	41 SW#: 61 TOP JET	49 SW#: 71 TOP LOOP	57 SW#: 81 OPTO 1
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 RIGHT SLING	26 SW#: 42 MIDDLE YELLOW	34 SW#: 52 MIDDLE GREEN	42 SW#: 62 LEFT JET	50 SW#: 72 MIDDLE LOOP	58 SW#: 82 OPTO 2
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO.	19 SW#: 33 GEAR SHIFTER LOW	27 SW#: 43 BOTTOM YELLOW	35 SW#: 53 BOTTOM GREEN	43 SW#: 63 BOTTOM JET	51 SW#: 73 BOTTOM LOOP	59 SW#: 83 OPTO 3
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 GEAR SHIFTER HIGH	28 SW#: 44 RIGHT BANK BOTTOM	36 SW#: 54 RAMP DOWN	44 UNUSED	52 SW#: 74 TOP LOCK	60 SW#: 84 OPTO MADE LOOP
5 SW#: 15 LEFT FREEWAY BOTTOM	13 SW#: 25 LEFT OUTLANE	21 UNUSED	29 SW#: 45 RIGHT BANK MIDDLE	37 SW#: 55 OUTHOLE	45 SW#: 65 MADE UP/DOWN RAMP	53 SW#: 75 MIDDLE LOCK	61 SW#: 85 ENTER LEFT RAMP
6 SW#: 16 LEFT FREEWAY TOP	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 TOP RED	30 SW#: 46 RIGHT BANK TOP	38 SW#: 56 LEFT TROUGH	46 UNUSED	54 SW#: 76 BOTTOM LOCK	62 SW#: 86 LEFT BANK BOTTOM
7 SW#: 17 RIGHT BOTTOM FREEWAY	15 SW#: 27 RIGHT RETURN LANE	23 SW#: 37 MIDDLE RED	31 UNUSED	39 SW#: 57 CENTER TROUGH	47 SW#: 67 MADE LEFT RAMP	55 SW#: 77 EJECT HOLE	63 SW#: 87 LEFT BANK MIDDLE
8 SW#: 18 RIGHT TOP FREEWAY	16 SW#: 28 RIGHT OUTLANE	24 SW#: 38 BOTTOM RED	32 UNUSED	40 SW#: 58 RIGHT TROUGH	48 UNUSED	56 SW#: 78 SHOOTER	64 SW#: 88 LEFT BANK TOP

SW# number is the switch number as known to the game.

The Incredible Hulk by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 #1 TARGET	10 SW#: 11 #7 DROP TARGET	18 SW#: 12 #6 DROP TARGET	26 UNUSED	34 SW#: 14 ROLLOVER (4) BUTTON
3 SW#: 20 #2 TARGET	11 SW#: 21 #5 DROP TARGET	19 SW#: 22 #4 DROP TARGET	27 UNUSED	35 SW#: 24 SPIN TARGET
4 SW#: 30 #3 TARGET	12 SW#: 31 #3 DROP TARGET	20 SW#: 32 #2 DROP TARGET	28 UNUSED	36 SW#: 34 #1 DROP TARGET
5 SW#: 40 10 POINT (5) SWITCH	13 SW#: 41 "A" SHOOTER	21 SW#: 42 "B" SHOOTER	29 UNUSED	37 SW#: 44 RIGHT SIDE ROLLOVER
6 SW#: 50 POP BUMPER (2)	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED
7 SW#: 60 2X ROLLOVER	15 SW#: 61 3X ROLLOVER	23 SW#: 62 LEFT OUTSIDE ROLLOVER	31 UNUSED	39 SW#: 64 LEFT RETURN ROLLOVER
8 SW#: 70 4X ROLLOVER	16 SW#: 71 5X ROLLOVER	24 SW#: 72 RIGHT OUTSIDE ROLLOVER	32 UNUSED	40 SW#: 74 RIGHT RETURN ROLLOVER

SW# number is the switch number as known to the game.

The Lord of the Rings by Stern

1 UNUSED	9 SW#: 9 LEFT VUK	17 SW#: 17 SWORD LOCK HIGH	25 SW#: 25 RIGHT RAMP ENTER	33 SW#: 33 MINIPF U.L.	41 SW#: 41 TOP VUK	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COINSLOT	10 SW#: 10 STANDUP	18 SW#: 18 SWORD LOCK MID	26 UNUSED	34 SW#: 34 MINIPF U.R.	42 SW#: 42 INNER LOOP	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COINSLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 SWORD LOCK LOW	27 UNUSED	35 SW#: 35 MINIPF L.L.	43 SW#: 43 LEFT TOP LANE	51 SW#: 51 BOTOTM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COINSLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 RIGHT ORBIT LOW	28 SW#: 28 BALROG HIT	36 SW#: 36 MINIPF L.R.	44 SW#: 44 MIDDLE TOP LANE	52 SW#: 52 SPINNER	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COINSLOT/DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 RIGHT ORBIT HI	29 SW#: 29 PALANTIR	37 SW#: 37 LEFT ORBIT LOW	45 SW#: 45 RIGHT TOP LANE	53 SW#: 53 SPOT RING	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COINSLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 RAIL RAMP EXIT	30 SW#: 30 RIGHT VUK	38 SW#: 38 LEFT ORBIT HI	46 SW#: 46 TOP SAUCER	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COINSLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 RIGHT RAMP TARGET	31 SW#: 31 BALROG OPEN	39 SW#: 39 LEFT RAMP ENTER	47 SW#: 47 RING MADE	55 SW#: 55 TOURNAMENT START	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT RAMP MADE	32 SW#: 32 BALROG CLOSED	40 SW#: 40 LEFT RAMP MADE	48 SW#: 48 BACK TROUGH	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

The Lost World Jurassic Park by Sega

1 UNUSED	9 SW#: 9 ADD TIME S-U	17 SW#: 17 INNER LOOP	25 UNUSED	33 SW#: 33 LEFT SPINNER	41 SW#: 41 SITE (B)	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 LEFT ORBIT	26 UNUSED	34 SW#: 34 RIGHT SPINNER	42 SW#: 42 SIT(E) B	50 SW#: 50 BOTTOM TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 UNUSED	19 SW#: 19 RIGHT ORBIT	27 UNUSED	35 SW#: 35 MOTOR: HOME	43 SW#: 43 SI(T)E B	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #1 TROUGH	20 UNUSED	28 UNUSED	36 SW#: 36 MOTOR: DOWN	44 SW#: 44 S(I)TE B	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #2 TROUGH	21 SW#: 21 LEFT RAMP ENTER	29 SW#: 29 DROP TARGET	37 SW#: 37 INNER LOOP GATE	45 SW#: 45 (S)ITE B	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL #3 TROUGH	22 SW#: 22 LEFT RAMP EXIT	30 SW#: 30 RAPTO(R) S-U	38 SW#: 38 (R)APTOR S-U	46 SW#: 46 POWER SCOOP	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 SW#: 23 RIGHT RAMP ENTER	31 SW#: 31 RAP(TO)R S-U	39 SW#: 39 R(A)PTOR S-U	47 SW#: 47 LEFT TOP LANE	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT RAMP EXIT	32 SW#: 32 RAP(T)OR S-U	40 SW#: 40 RA(P)TOR S-U	48 SW#: 48 RIGHT TOP LANE	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

The Machine Bride Of PinBot by Williams

1 SW#: 11 RIGHT FLIPPER	9 SW#: 21 SLAM TILT	17 SW#: 31 SKILL SHOT 50K	25 SW#: 41 RIGHT RAMP MADE	33 SW#: 51 SPINNER	41 UNUSED	49 SW#: 71 WIREFORM TOP	57 UNUSED
2 SW#: 12 LEFT FLIPPER	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 SKILL SHOT 75K	26 UNUSED	34 SW#: 52 SHOOTER LANE FEEDER	42 UNUSED	50 SW#: 72 WIREFORM BOTTOM	58 UNUSED
3 SW#: 13 GAME START	11 SW#: 23 TICKET OPTO.	19 SW#: 33 SKILL SHOT 100K	27 SW#: 43 LEFT LOOP	35 SW#: 53 UPPER RIGHT JET BUMPER	43 SW#: 63 HEAD - LEFT EYE	51 SW#: 73 ENTER MINI PLAYFIELD	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 SKILL SHOT 200K	28 SW#: 44 RIGHT LOOP TOP	36 SW#: 54 UPPER LEFT JET BUMPER	44 SW#: 64 HEAD - RIGHT EYE	52 SW#: 74 EXIT MINI PLAYFIELD LEFT	60 UNUSED
5 SW#: 15 LEFT OUTLANE	13 SW#: 25 RIGHT TROUGH	21 SW#: 35 SKILL SHOT 25K	29 SW#: 45 RIGHT LOOP BOTTOM	37 SW#: 55 LOWER JET BUMPER	45 SW#: 65 HEAD - MOUTH	53 SW#: 75 EXIT MINI PLAYFIELD RIGHT	61 UNUSED
6 SW#: 16 LEFT FLIPPER LANE	14 SW#: 26 CENTER TROUGH	22 SW#: 36 RIGHT TOP STANDUP	30 SW#: 46 UNDER KICKER PLAYFIELD	38 SW#: 56 JET BUMPER SLING KICKER	46 UNUSED	54 SW#: 76 LEFT RAMP ENTER	62 UNUSED
7 SW#: 17 RIGHT LANE FLIPPER	15 SW#: 27 LEFT TROUGH	23 SW#: 37 RIGHT BOTTOM STANDUP	31 SW#: 47 ENTER HEAD	39 SW#: 57 LEFT SLINGSHOT	47 SW#: 67 FACE POSITION	55 SW#: 77 RIGHT RAMP ENTER	63 UNUSED
8 SW#: 18 RIGHT OUTLANE	16 SW#: 28 LEFT STANDUP	24 SW#: 38 OUTHOLE	32 UNUSED	40 SW#: 58 RIGHT SLINGSHOT	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

The Rolling Stones by Stern

1 SW#: 1 L. 3 BANK #1 (BOT)	9 SW#: 17 TROUGH #5 (L)	17 SW#: 33 MICK POS. #1 (HOME)	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 L. 3 BANK #2 (MID)	10 SW#: 18 TROUGH #4	18 SW#: 34 MICK POS. #2	26 SW#: 50 SHOOTER LANE (TOP)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 L. 3 BANK #3 (TOP)	11 SW#: 19 TROUGH #3	19 SW#: 35 MICK POS. #3	27 SW#: 51 STAR TARGET (LEFT)	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 20 TROUGH #2	20 SW#: 36 MICK POS. #4	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1	21 SW#: 37 MICK POS. #6	29 SW#: 53 CENTER LOCK 1 (BOT)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 TOP LANE RONNIE	14 SW#: 22 TROUGH JAM	22 SW#: 38 MICK POS #7 (AWAY)	30 SW#: 54 ROCK STAR (LEFT)	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 TOP LANE MICK	15 SW#: 23 SHOOTER LANE	23 SW#: 39 MICK POS. #5	31 SW#: 55 ROCK STAR (RIGHT)	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 TOP LANE KEITH	16 SW#: 24 LEFT OUTLANE	24 UNUSED	32 SW#: 56 STAR TARGET (RIGHT)	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

The Rolling Stones by Stern

Bank 2

1 SW#: 9 TOP LANE CHARLIE	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 L. ORBIT SPINNER	25 SW#: 57 STAR TARGET (CENTER)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 RIGHT 3 BANK #1 (BOT)	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 L. RAMP EXIT	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 RIGHT 3 BANK #2 (MID)	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 POP BUMPER LANE	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 RIGHT 3 BANK #3 (TOP)	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 LEFT ORBIT	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 R. RAMP EXIT	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 30 LEFT POP BUMPER	22 SW#: 46 CENTER LOCK 2 (TOP)	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 SW#: 48 RIGHT ORBIT	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

The Shadow by Williams

1 SW#: 11 GUN TRIGGER	9 SW#: 21 SLAM TILT	17 SW#: 31 LEFT RAMP ENTER	25 SW#: 41 TROUGH 1	33 SW#: 51 WALL TARGET DOWN	41 SW#: 61 LEFT SLINGSHOT	49 SW#: 71 MINI LEFT 1 STANDUP	57 SW#: 81 MINI RIGHT 4 STANDUP
2 SW#: 12 RIGHT PHURBA CONTROL	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 RIGHT RAMP ENTER	26 SW#: 42 TROUGH 2	34 SW#: 52 MO(N)GOL TARGET	42 SW#: 62 RIGHT SLINGSHOT	50 SW#: 72 MINI LEFT 2 STANDUP	58 SW#: 82 MINI RIGHT 3 STANDUP
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 INNER SANCTUM	27 SW#: 43 TROUGH 3	35 SW#: 53 MON(G)OL TARGET	43 SW#: 63 LOCKUP RIGHT	51 SW#: 73 MINI LEFT 3 STANDUP	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 LEFT PHURBA CONTROL	28 SW#: 44 TROUGH 4	36 SW#: 54 LEFT LOOP ENTER	44 SW#: 64 LOCKUP MIDDLE	52 SW#: 74 MINI LEFT 4 STANDUP	60 SW#: 84 MINI RIGHT 1 STANDUP
5 SW#: 15 RIGHT OUTLANE	13 SW#: 25 (M)ONGOL TARGET	21 SW#: 35 LEFT RUBBER	29 SW#: 45 TROUGH 5	37 SW#: 55 BATTLE DROP DOWN	45 SW#: 65 LOCKUP LEFT	53 SW#: 75 LEFT RAMP LEFT MADE	61 SW#: 85 MINI DROP LEFT
6 SW#: 16 RIGHT RETURN LANE	14 SW#: 26 M(O)NGOL TARGET	22 SW#: 36 MINI KICKER	30 SW#: 46 TOP TROUGH	38 SW#: 56 CENTER STANDUP	46 SW#: 66 LEFT EJECT	54 SW#: 76 LEFT RAMP RIGHT MADE	62 SW#: 86 MINI DROP MIDDLE LEFT
7 SW#: 17 LEFT RETURN LANE	15 SW#: 27 MONGO(L) TARGET	23 SW#: 37 MINI LIMIT LEFT	31 SW#: 47 INNER LOOP ENTER	39 SW#: 57 RIGHT LOOP ENTER	47 SW#: 67 RIGHT EJECT	55 SW#: 77 RIGHT RAMP LEFT MADE	63 SW#: 87 MINI DROP MIDDLE RIGHT
8 SW#: 18 LEFT OUTLANE	16 SW#: 28 MONG(O)L TARGET	24 SW#: 38 MINI LIMIT RIGHT	32 SW#: 48 SHOOTER	40 SW#: 58 MINI EXIT TUBE	48 SW#: 68 POPPER	56 SW#: 78 RIGHT RAMP RIGHT MADE	64 SW#: 88 MINI DROP RIGHT

SW# number is the switch number as known to the game.

The Simpsons by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 CHOCOLATE	33 SW#: 33 CENTER D.T. LEFT	41 SW#: 41 RIGHT BANK 1 TOP	49 SW#: 49 TOP LANE RIGHT	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 DOUBLE CHOCOLATE	34 SW#: 34 CENTER D.T.	42 SW#: 42 RIGHT BANK 2	50 SW#: 50 TOP LANE CENTER	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1 LEFT	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 TRIPLE CHOCOLATE	35 SW#: 35 CENTER D.T. RIGHT	43 SW#: 43 RIGHT BANK 3	51 SW#: 51 TOP LANE LEFT	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2 CENTER	20 SW#: 20 RIGHT RETURN	28 SW#: 28 LEFT LOCK	36 SW#: 36 SPINNER	44 SW#: 44 RIGHT BANK 4	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3 RIGHT	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 CENTER LOCK BOTTOM	37 SW#: 37 RIGHT LOCK	45 SW#: 45 RIGHT BANK 5 BOTTOM	53 SW#: 53 MULTIBALL START	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 CENTER LOCK TOP	38 SW#: 38 RAMP ENTRANCE	46 SW#: 46 LEFT TURBO BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 UNUSED	31 UNUSED	39 SW#: 39 RAMP EXIT	47 SW#: 47 CENTER TURBO BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 UNUSED	40 UNUSED	48 SW#: 48 RIGHT TURBO BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

The Simpsons Pinball Party by Stern

1 SW#: 1 LEFT BUTTON (UK ONLY)	9 SW#: 9 COMIC BOOK GUY STANDUP	17 SW#: 17 DROP TARGET #1 (TOP)	25 SW#: 25 UPPER EXIT PLAYFIELD	33 SW#: 33 UPF LIGHT STANDUP	41 SW#: 41 BULLY 3-BANK (TOP)	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 5-BALL #1 TROUGH (LEFT)	18 SW#: 18 DROP TARGET #2 (MID)	26 SW#: 26 GARAGE RAMP ENTER	34 SW#: 34 UPF LOCK STANDUP	42 SW#: 42 BULLY 3-BANK (MID)	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 5-BALL #2 TROUGH	19 SW#: 19 DROP TARGET #3 (BOT)	27 UNUSED	35 SW#: 35 UPF TOP STANDUP	43 SW#: 43 BULLY 3-BANK (BOT)	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 5-BALL #3 TROUGH	20 SW#: 20 ITCHY & SCRATCHY SAUCER	28 UNUSED	36 SW#: 36 COUCH ENTER	44 SW#: 44 UP RIGHT SAUCER BACKUP	52 SW#: 52 POP SIDE STANDUP	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 5-BALL #4 TROUGH	21 SW#: 21 SPINNER	29 SW#: 29 KWI-E-MART LOOP	37 SW#: 37 TV LOCKUP	45 SW#: 45 RIGHT RAMP ENTER	53 SW#: 53 TOURNAMENT BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 5-BALL VUK TROUGH OPTO	22 SW#: 22 BART TOP SKATEBOARD	30 SW#: 30 KWI-E-MART STANDUP	38 SW#: 38 COUCH LOCK (BOT)	46 SW#: 46 RIGHT RAMP MADE	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 5-BALL OPTO STACKING	23 SW#: 23 BART SKATEBOARD	31 SW#: 31 ADV. POPS STANDUP	39 SW#: 39 COUCH LOCK (MID)	47 SW#: 47 LEFT RAMP ENTER	55 SW#: 55 UPPER LEFT VUK	63 SW#: 63 LEFT ORBIT
8 SW#: 8 RIGHT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 UPPER RIGHT SAUCER	32 SW#: 32 LIGHT OTTO STANDUP	40 SW#: 40 COUCH LOCK (TOP)	48 SW#: 48 GARAGE DOOR	56 SW#: 56 PLUMB BOB TILT	64 SW#: 64 RIGHT ORBIT

SW# number is the switch number as known to the game.

The Six Million Dollar Man by Bally

1 SW#: 1 DROP TARGET E (BOTTOM)	9 SW#: 2 DROP TARGET D	17 SW#: 3 DROP TARGET C	25 SW#: 4 DROP TARGET B	33 SW#: 5 DROP TARGET A (TOP)	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 SW#: 14 RIGHT OUTLANE	50 SW#: 15 LEFT OUTLANE	58 SW#: 16 SLAM (2)
3 SW#: 17 TOP RIGHT LANE	11 SW#: 18 TOP LEFT LANE	19 UNUSED	27 SW#: 20 SPINNER RIGHT	35 SW#: 21 SPINNER LEFT	43 SW#: 22 LEFT BOTTOM TARGET	51 SW#: 23 LEFT MIDDLE TARGET	59 SW#: 24 LEFT TOP TARGET
4 SW#: 25 DOWN POST R.O. BUTTON (2)	12 SW#: 26 DROP TAR. & REB. TOP R.O. BUTTON	20 SW#: 27 TOP RIGHT TARGET	28 SW#: 28 TOP LEFT TARGET	36 SW#: 29 CENTER TARGET	44 UNUSED	52 UNUSED	60 SW#: 32 SAUCER
5 UNUSED	13 UNUSED	21 SW#: 35 L & R LANE FLIP/FEED	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

The Sopranos by Stern

1 SW#: 1 LT BUTTON (UK ONLY)	9 SW#: 9 LEFT RAMP	17 SW#: 17 LEFT EJECT	25 SW#: 25 RIGHT RAMP	33 SW#: 33 RIGHT ORBIT	41 UNUSED	49 SW#: 49 LEFT BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 SAFE LIMIT	18 SW#: 18 LEFT ORBIT	26 SW#: 26 DROP TARGET	34 SW#: 34 LEFT STANDUP	42 UNUSED	50 SW#: 50 RIGHT BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 4-BALL #1 TROUGH (LEFT)	19 SW#: 19 BING 1	27 SW#: 27 SPINNER	35 SW#: 35 CENTER STANDUP	43 UNUSED	51 SW#: 51 BOTTOM BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #2 TROUGH	20 SW#: 20 BING 2	28 SW#: 28 CENTER EJECT	36 SW#: 36 R. 2-BANK TOP	44 UNUSED	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #3 TROUGH	21 SW#: 21 SAFE HIT LEFT	29 SW#: 29 RIGHT RAMP EXIT	37 SW#: 37 R. 2-BANK BOTTOM	45 UNUSED	53 SW#: 53 SLAM TILT (OPT)	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL VUK TROUGH OPTO	22 SW#: 22 CENTER LOCK 1	30 UNUSED	38 SW#: 38 LEFT TOP LANE	46 UNUSED	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL OPTO STACKING	23 SW#: 23 CENTER LOCK 2	31 SW#: 31 BOAT LOCK 1	39 SW#: 39 MIDDLE TOP LANE	47 UNUSED	55 SW#: 55 TOURNAMENT START	63 UNUSED
8 SW#: 8 RT BUTTON (UK ONLY)	16 SW#: 16 SHOOTER LANE	24 SW#: 24 SAFE HIT RIGHT	32 SW#: 32 BOAT LOCK 2	40 SW#: 40 RIGHT TOP LANE	48 UNUSED	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

The Walking Dead by Stern

1 SW#: 1 RIGHT SPINNER	9 UNUSED	17 SW#: 33 UPPER LANE SHOOTER	25 SW#: 49 BICYCLE GIRL HIT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 WELL WALKER	10 SW#: 18 TROUGH #4 LEFT	18 SW#: 34 RIGHT RAMP ENTER	26 SW#: 50 CROSSBOW HOME	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 PRISON HIT WALKER	11 SW#: 19 TROUGH #3	19 SW#: 35 LEFT RAMP EXIT	27 SW#: 51 CROSSBOW MARK	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 PRISON DOORS CLOSED	12 SW#: 20 TROUGH #2	20 SW#: 36 LEFT TOP LANE	28 SW#: 52 CROSSBOW EJECT	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 OPTO RT.	21 SW#: 37 RIGHT TOP LANE	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH JAM	22 SW#: 38 TOWER STANDUP	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 SW#: 23 SHOOTER LANE	23 SW#: 39 RIGHT LOOP	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 LT. LOOP SPINNER	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

The Walking Dead by Stern

Bank 2

1 SW#: 9 LT. 3-BANK #1 (BOT)	9 SW#: 25 L. RETURN LANE	17 SW#: 41 LEFT LOOP	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 LT. 3-BANK #2 (MID)	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 RIGHT RAMP EXIT	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 LT. 3-BANK #3 (TOP)	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 LEFT RAMP ENTER	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 LT. PRISON STANDUP	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 RT. PRISON STANDUP	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 30 LEFT POP BUMPER	22 SW#: 46 PRISON DOORS OPTO	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 SW#: 47 CENTER LANE	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 TOP POP BUMPER	24 SW#: 48 RIGHT DROP TARGET	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

The Whos Tommy Pinball Wizard by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 BALL TROUGH #1 LT	17 SW#: 17 LEFT SLINGSHOT	25 SW#: 25 LEFT 3-BANK STAND-UP BOT	33 SW#: 33 RIGHT 3-BANK STAND-UP TOP	41 SW#: 41 MIRROR TROUGH	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT RAMP ENTER
2 SW#: 2 4TH COIN	10 SW#: 10 BALL TROUGH #2	18 SW#: 18 RIGHT SLINGSHOT	26 SW#: 26 LEFT 3-BANK STAND-UP MID	34 SW#: 34 RIGHT 3-BANK STAND-UP MID	42 SW#: 42 SKILL TROUGH	50 SW#: 50 CENTER TURBO BUMPER	58 SW#: 58 LEFT RAMP EXIT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #3	19 SW#: 19 VUK	27 SW#: 27 LEFT 3-BANK STAND-UP TOP	35 SW#: 35 RIGHT 3-BANK STAND-UP BOT	43 SW#: 43 CAPTIVE BALL	51 SW#: 51 RIGHT TURBO BUMPER	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 BALL TROUGH #4	20 SW#: 20 LEFT RAMP STAND-UP LEFT	28 SW#: 28 MIRROR UP	36 SW#: 36 LEFT RETURN LANE	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 BALL TROUGH #5	21 SW#: 21 LEFT RAMP STAND-UP RIGHT	29 SW#: 29 TOP LEFT ROLLOVER	37 SW#: 37 RIGHT RETURN LANE	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 BALL TROUGH #6	22 SW#: 22 RIGHT RAMP STAND-UP	30 SW#: 30 RIGHT RAMP ENTER	38 SW#: 38 MIDDLE STAND-UP	46 UNUSED	54 UNUSED	62 SW#: 62 RIGHT RAMP EXIT
7 SW#: 7 SLAM TILT	15 SW#: 15 BALL TROUGH #7 RT	23 SW#: 23 LEFT SCOOP	31 SW#: 31 MIRROR DOWN	39 SW#: 39 LEFT SPINNER	47 SW#: 47 EJECT	55 SW#: 55 LEFT OUTLANE	63 SW#: 63 LEFT FLIPPER
8 SW#: 8 EXTRA BALL BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 SILVER BALL TARGET	32 SW#: 32 MIRROR TARGET	40 SW#: 40 RIGHT SPINNER	48 SW#: 48 TOP RIGHT ROLLOVER	56 SW#: 56 RIGHT OUTLANE	64 SW#: 64 RIGHT FLIPPER

SW# number is the switch number as known to the game.

The X Files by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 LEFT 3-BANK BOTTOM	25 SW#: 25 LEFT RAMP ENTER	33 SW#: 33 LEFT ORBIT	41 SW#: 41 UNDER-TROUGH TOP #1	49 SW#: 49 TOP TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 LEFT 3-BANK MID	26 SW#: 26 LEFT RAMP EXIT	34 UNUSED	42 SW#: 42 UNDER-TROUGH TOP #2	50 SW#: 50 BOTTOM TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 UNUSED	19 SW#: 19 LEFT 3-BANK TOP	27 SW#: 27 RIGHT RAMP ENTER	35 SW#: 35 RIGHT ORBIT	43 SW#: 43 FILE CABINET TOP	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #1 TROUGH	20 SW#: 20 RIGHT 3-BANK BOTTOM	28 SW#: 28 RIGHT RAMP EXIT	36 UNUSED	44 SW#: 44 FILE CABINET MIDDLE	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #2 TROUGH	21 SW#: 21 RIGHT 3-BANK MID	29 SW#: 29 LEFT TOP LANE	37 SW#: 37 MINI LOOP LEFT	45 SW#: 45 FILE CABINET BOTTOM	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL #3 TROUGH	22 SW#: 22 RIGHT 3-BANK TOP	30 SW#: 30 MIDDLE TOP LANE	38 SW#: 38 MINI LOOP RIGHT	46 SW#: 46 MAGNET OPTO	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 UNUSED	31 SW#: 31 RIGHT TOP LANE	39 SW#: 39 SHOOTER UNDER-TROUGH	47 SW#: 47 FILE CABINET OPTO	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 UNUSED	32 UNUSED	40 SW#: 40 TRAP DOOR UP	48 SW#: 48 SUPER VUK	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Theatre of Magic by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH JAM	25 SW#: 41 LOCK 1	33 SW#: 51 LEFT BANK TARGET	41 SW#: 61 LEFT SLING	49 SW#: 71 CENTER RAMP EXIT	57 SW#: 81 LOOP RIGHT
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 1	26 SW#: 42 LOCK 2	34 SW#: 52 CAPTIVE BALL REST	42 SW#: 62 RIGHT SLING	50 UNUSED	58 SW#: 82 CENTER RAMP TARGETS
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN	19 SW#: 33 TROUGH 2	27 SW#: 43 LOCK 3	35 SW#: 53 RIGHT LANE ENTER	43 SW#: 63 BOTTOM JET	51 SW#: 73 RIGHT RAMP EXIT	59 SW#: 83 VANISH LOCK 1
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 3	28 SW#: 44 POPPER	36 SW#: 54 LEFT LANE ENTER	44 SW#: 64 MIDDLE JET	52 SW#: 74 RIGHT RAMP 2 EXIT	60 SW#: 84 VANISH LOCK 2
5 SW#: 15 SHOOTER LANE	13 SW#: 25 LEFT OUTLANE	21 SW#: 35 TROUGH 4	29 SW#: 45 LEFT DRAIN EDDY	37 SW#: 55 CUBE 4 POSITION	45 SW#: 65 TOP JET	53 SW#: 75 CENTER RAMP ENTER	61 SW#: 85 TRUNK HIT
6 UNUSED	14 SW#: 26 LEFT RETURN LANE	22 SW#: 36 SUBWAY OPTO	30 UNUSED	38 SW#: 56 CUBE 1 POSITION	46 SW#: 66 TOP LANE 1	54 SW#: 76 RIGHT RAMP ENTER	62 SW#: 86 RIGHT LANE EXIT
7 UNUSED	15 SW#: 27 RIGHT RETURN LANE	23 SW#: 37 SPINNER	31 SW#: 47 SUBWAY MICRO	39 SW#: 57 CUBE 2 POSITION	47 SW#: 67 TOP LANE 2	55 SW#: 77 CAPTIVE BALL TOP	63 SW#: 87 LEFT LANE EXIT
8 UNUSED	16 SW#: 28 RIGHT OUTLANE	24 SW#: 38 RIGHT LOWER TARGET	32 SW#: 48 RIGHT DRAIN EDDY	40 SW#: 58 CUBE 3 POSITION	48 UNUSED	56 SW#: 78 LOOP LEFT	64 UNUSED

SW# number is the switch number as known to the game.

Time Fantasy by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 "F"	17 SW#: 17 RIGHT TURNAROUND	25 SW#: 25 LANE 4	33 SW#: 33 TOP LEFT JET BUMPER	41 SW#: 41 PLAYFIELD TILT	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 "A"	18 SW#: 18 LEFT DRAIN LANE	26 SW#: 26 LANE 5	34 SW#: 34 RIGHT JET BUMPER	42 SW#: 42 LEFT LANE SWITCH	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 "N"	19 SW#: 19 RIGHT DRAIN LANE	27 SW#: 27 LOWER LEFT STANDUP TARGET	35 SW#: 35 BOTTOM LEFT JET BUMPER	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 "T"	20 SW#: 20 LEFT FLIPPER RETURN LANE	28 SW#: 28 UPPER LEFT STANDUP TARGET	36 SW#: 36 RAMP STANDUP TARGET TIMETUBE	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 "A"	21 SW#: 21 RIGHT RETURN FLIPPER LANE RIGHT	29 SW#: 29 UPPER TOP STANDUP TARGET	37 SW#: 37 LEFT KICKER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 "S"	22 SW#: 22 LANE 1	30 SW#: 30 UPPER CENTER RIGHT STANDUP TARGET	38 SW#: 38 RIGHT KICKER	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 "Y"	23 SW#: 23 LANE 2	31 SW#: 31 UPPER BOTTOM RIGHT STANDUP TARGET	39 SW#: 39 OUTHOLE	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 LEFT TURNAROUND	24 SW#: 24 LANE 3	32 SW#: 32 LOWER RIGHT STANDUP TARGET	40 SW#: 40 FLIPPER LANE CHANGE	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Time Line by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 1 #1 TOP TARGET	10 UNUSED	18 SW#: 21 #2 TOP TARGET	26 UNUSED	34 SW#: 41 #3 TOP TARGET	42 SW#: 51 RIGHT SIDE ROLLOVER	50 SW#: 61 RIGHT SIDE TARGET	58 SW#: 71 10 POINT (8) CONTACTS
3 SW#: 2 #1 RED DROP TARGET	11 SW#: 12 #2 RED DROP TARGET	19 SW#: 22 #3 RED DROP TARGET	27 SW#: 32 #4 RED DROP TARGET	35 SW#: 42 #5 RED DROP TARGET	43 SW#: 52 RUNWAY ROLLOVER, CENTER RETURN	51 SW#: 62 LEFT RETURN ROLLOVER	59 SW#: 72 LEFT OUTSIDE SOLE ROLLER
4 SW#: 3 #1 YELLOW DROP TARGET	12 SW#: 13 #2 YELLOW DROP TARGET	20 SW#: 23 #3 YELLOW DROP TARGET	28 SW#: 33 #4 YELLOW DROP TARGET	36 SW#: 43 LEFT LANE TARGET	44 SW#: 53 COLLECT BONUS ROLLOVER	52 SW#: 63 BALL KICKER	60 SW#: 73 POP BUMPERS (3)
5 SW#: 4 #1 BLACK DROP TARGET	13 SW#: 14 #2 BLACK DROP TARGET	21 SW#: 24 #3 BLACK DROP TARGET	29 SW#: 34 #4 BLACK DROP TARGET	37 SW#: 44 #5 BLACK DROP TARGET	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Time Machine by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 1 LANE	33 SW#: 33 LEFT BANK 1	41 SW#: 41 CENTER BANK 1	49 SW#: 49 RIGHT BANK 1	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 2 LANE	34 SW#: 34 LEFT BANK 2	42 SW#: 42 CENTER BANK 2	50 SW#: 50 RIGHT BANK 2	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1	19 SW#: 19 RIGHT OUTLANE	27 SW#: 27 3 LANE	35 SW#: 35 LEFT BANK 3	43 SW#: 43 CENTER BANK 3	51 SW#: 51 RIGHT BANK 3	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2	20 SW#: 20 RIGHT RETURN	28 SW#: 28 LEFT RAMP	36 SW#: 36 WIREFORM 1	44 SW#: 44 WIREFORM 4	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3	21 SW#: 21 LEFT SLINGSHOT	29 SW#: 29 CENTER RAMP	37 SW#: 37 WIREFORM 2	45 SW#: 45 SUPER VUK	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT SLINGSHOT	30 SW#: 30 RIGHT RAMP	38 SW#: 38 WIREFORM 3	46 SW#: 46 LEFT POP BUMPER	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 UNUSED	31 SW#: 31 LEFT ROLLOVER	39 UNUSED	47 SW#: 47 CENTER POP BUMPER	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 UNUSED	32 SW#: 32 RIGHT ROLLOVER	40 UNUSED	48 SW#: 48 RIGHT POP BUMPER	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Time Warp by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 LEFT TARGET	25 SW#: 25 5-BANK DROP TARGET #1 (TOP)	33 SW#: 33 3-BANK DROP TARGET LEFT	41 SW#: 41 RIGHT KICKER	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 UPPER RIGHT STANDUP	18 SW#: 18 RIGHT INSIDE ROLLOVER	26 SW#: 26 5-BANK DROP TARGET #2	34 SW#: 34 3-BANK DROP TARGET CENTER	42 SW#: 42 LEFT KICKER	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 UPPER LEFT STANDUP	19 SW#: 19 LEFT TOP JET BUMPER	27 SW#: 27 5-BANK DROP TARGET #3	35 SW#: 35 3-BANK DROP TARGET RIGHT	43 SW#: 43 PLAYFIELD TILT	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 "A" ROLLOVER	20 SW#: 20 LEFT CENTER JET BUMPER	28 SW#: 28 5-BANK DROP TARGET #4	36 SW#: 36 3-BANK DROP TARGET SERIES	44 SW#: 44 LEFT INSIDE ROLLOVER	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 "B" ROLLOVER	21 SW#: 21 LEFT BOTTOM JET BUMPER	29 SW#: 29 5-BANK DROP TARGET #5 (BOTTOM)	37 SW#: 37 3-BANK STANDUP	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 "C" ROLLOVER	22 SW#: 22 RIGHT CENTER JET BUMPER	30 SW#: 30 5-BANK DROP TARGET SERIES	38 SW#: 38 LEFT STANDUP	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 TOP EJECT HOLE	23 SW#: 23 RIGHT JET BUMPER	31 SW#: 31 5-BANK STANDUP	39 SW#: 39 RIGHT OUTSIDE ROLLOVER	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 BULL'S-EYE TARGET	24 SW#: 24 RIGHT EJECT	32 SW#: 32 RIGHT STANDUP	40 SW#: 40 LEFT OUTSIDE ROLLOVER	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Title Fight by Gottlieb

1 SW#: LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 CREDIT BUTTON	33 SW#: 4 LEFT BLACK BUTTON	41 SW#: 5 RIGHT BLACK BUTTON	49 SW#: 6 LEFT FLIPPER	57 SW#: 7 RIGHT FLIPPER
2 SW#: 10 POP BUMPER	10 SW#: 11 (2) KICKING RUBBER	18 SW#: 12 CAPTIVE BALL LEFT SPOT TARGET	26 SW#: 13 LEFT SIDE #1 SPOT TARGET	34 SW#: 14 RIGHT SIDE SPOT TARGET #1	42 SW#: 15 3 BANK #1 DROP TARGET	50 SW#: 16 5 BANK SCORE SW.	58 SW#: 17 5 BANK #1 DROP TARGET
3 SW#: 20 BOTTOM RIGHT SIDE ROLLOVER	11 SW#: 21 BOTTOM LEFT SIDE ROLLOVER	19 SW#: 22 CAPTIVE BALL RIGHT SPOT TARGET	27 SW#: 23 LEFT SIDE #2 SPOT TARGET	35 SW#: 24 RIGHT SIDE SPOT TARGET #2	43 SW#: 25 3 BANK #2 DROP TARGET	51 UNUSED	59 SW#: 27 5 BANK #2 DROP TARGET
4 SW#: 30 RIGHT RETURN ROLLOVER BUTTON	12 SW#: 31 LEFT RETURN ROLLOVER BUTTON	20 SW#: 32 CENTER LANE ROLLOVER BUTTON	28 SW#: 33 LEFT SIDE #3 SPOT TARGET	36 SW#: 34 RIGHT SIDE SPOT TARGET #3	44 SW#: 35 3 BANK #3 DROP TARGET	52 SW#: 36 HOLE	60 SW#: 37 5 BANK #3 DROP TARGET
5 SW#: 40 BOTTOM LEFT SIDE ROLLOVER	13 SW#: 41 RIGHT SIDE ROLLOVER	21 SW#: 42 TOP LOOP LEFT ROLLOVER	29 SW#: 43 LEFT SIDE CENTER SPOT TARGET	37 SW#: 44 RIGHT SIDE SPOT TARGET #4	45 SW#: 45 3 BANK SPOT TARGET #1	53 SW#: 46 OUTHOLE	61 SW#: 47 5 BANK #4 DROP TARGET
6 SW#: 50 TOP LEFT SIDE ROLLOVER	14 SW#: 51 SHOOTER LANE ROLLOVER	22 SW#: 52 TOP LOOP RIGHT ROLLOVER	30 SW#: 53 LEFT SIDE TOP SPOT TARGET	38 SW#: 54 RIGHT SIDE SPOT TARGET #5	46 SW#: 55 3 BANK SPOT TARGET #2	54 SW#: 56 2ND. TROUGH POSITION	62 SW#: 57 5 BANK #5 DROP TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Torch by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 LEFT BLUE ROLLOVER	10 SW#: 11 POP BUMPER (2)	18 SW#: 12 SPECIAL TARGET	26 SW#: 13 RIGHT BLUE ROLLOVER	34 SW#: 14 LEFT EXTRA BALL ROLLOVER
3 SW#: 20 LEFT GREEN ROLLOVER	11 SW#: 21 ROLLUNDER GATE	19 UNUSED	27 SW#: 23 RIGHT GREEN ROLLOVER	35 SW#: 24 RIGHT EXTRA BALL ROLLOVER
4 SW#: 30 10 POINT (6) TARGET AND/OR LEFT BOTTOM ROLLOVER	12 SW#: 31 LEFT ROTO TARGET AND/OR LEFT BOTTOM ROLLOVER	20 SW#: 32 LEFT ROTO TARGET AND/OR LEFT BOTTOM ROLLOVER	28 UNUSED	36 SW#: 34 LEFT ROTO TARGET AND/OR LEFT BOTTOM ROLLOVER
5 SW#: 40 LEFT KICKING RUBBER	13 SW#: 41 CENTER ROTO TARGET	21 SW#: 42 CENTER ROTO TARGET	29 UNUSED	37 SW#: 44 CENTER ROTO TARGET
6 SW#: 50 RIGHT RUBBER KICKER AND/OR RIGHT BOTTOM ROLLOVER	14 SW#: 51 RIGHT ROTO TARGET AND/OR RIGHT BOTTOM ROLLOVER	22 SW#: 52 RIGHT ROTO TARGET AND/OR RIGHT BOTTOM ROLLOVER	30 UNUSED	38 SW#: 54 RIGHT ROTO TARGET AND/OR RIGHT BOTTOM ROLLOVER
7 SW#: 60 #1 RIGHT DROP TARGET	15 SW#: 61 #2 RIGHT DROP TARGET	23 SW#: 62 #3 RIGHT DROP TARGET	31 SW#: 63 #4 RIGHT DROP TARGET	39 SW#: 64 #5 RIGHT DROP TARGET
8 SW#: 70 #1 LEFT DROP TARGET	16 SW#: 71 #2 LEFT DROP TARGET	24 SW#: 72 #3 LEFT DROP TARGET	32 SW#: 73 #4 LEFT DROP TARGET	40 SW#: 74 #5 LEFT DROP TARGET

SW# number is the switch number as known to the game.

Torpedo Alley by Data_East

1 SW#: 1 PLUMB TILT	9 UNUSED	17 SW#: 17 LASER KICK	25 SW#: 25 TOP LEFT SPINNER	33 SW#: 33 LEFT YELLOW TARGET	41 SW#: 41 LEFT KICKER #1	49 SW#: 49 LEFT POP BUMPER	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN	26 SW#: 26 "S" LANE	34 SW#: 34 CENTER YELLOW TARGET	42 SW#: 42 LEFT KICKER #2	50 SW#: 50 RIGHT POP BUMPER	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH #1	19 UNUSED	27 SW#: 27 "U" LANE	35 SW#: 35 RIGHT YELLOW TARGET	43 SW#: 43 VERTICAL UP KICKER	51 SW#: 51 CENTER POP BUMPER	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 TROUGH #2	20 SW#: 20 LEFT GREEN TARGET	28 SW#: 28 "B" LANE	36 SW#: 36 RIGHT STAR RO	44 SW#: 44 CENTER #1 KICKER	52 SW#: 52 LEFT SLINGSHOT	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 TROUGH #3	21 SW#: 21 CENTER GREEN TARGET	29 SW#: 29 LEFT DROP TARGET	37 SW#: 37 LEFT 50 POINT SWITCH	45 SW#: 45 CENTER #2 KICKER	53 SW#: 53 RIGHT SLINGSHOT	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 SHOOTER LANE	22 SW#: 22 RIGHT GREEN TARGET	30 SW#: 30 CENTER DROP TARGET	38 SW#: 38 LEFT BLUE TARGET	46 SW#: 46 RAMP	54 SW#: 54 RIGHT OUTLANE	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 LEFT EOS	23 SW#: 23 BOTTOM LEFT STAR RO	31 SW#: 31 RIGHT DROP TARGET	39 SW#: 39 CENTER BLUE TARGET	47 UNUSED	55 SW#: 55 RIGHT RETURN SWITCH	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT EOS	24 SW#: 24 SPOTS LASER KICK	32 SW#: 32 RIGHT SPINNER	40 SW#: 40 RIGHT BLUE TARGET	48 UNUSED	56 SW#: 56 RIGHT 50 POINT	64 UNUSED

SW# number is the switch number as known to the game.

Totem by Gottlieb

1 SW#: TEST BUTTON (ON FRONT DOOR)	9 SW#: 1 #1 COIN (ON CHUTE FRONT DOOR)	17 SW#: 2 #2 COIN (ON CHUTE FRONT DOOR)	25 SW#: 3 REPLAY (ON BUTTON FRONT DOOR)	33 SW#: 4 TILT SWITCHES
2 SW#: 10 LEFT RETURN ROLLOVER	10 SW#: 11 RIGHT RETURN ROLLOVER	18 UNUSED	26 UNUSED	34 SW#: 14 POP BUMPER (2)
3 SW#: 20 #2 DROP TARGET	11 SW#: 21 #3 DROP TARGET	19 UNUSED	27 UNUSED	35 SW#: 24 #1 DROP TARGET
4 SW#: 30 #4 DROP TARGET	12 SW#: 31 #5 DROP TARGET	20 UNUSED	28 UNUSED	36 SW#: 34 #6 DROP TARGET
5 SW#: 40 #1 & #3 ROLLOVER BUTTON	13 SW#: 41 HOLE	21 SW#: 42 #1 & #2 POS. VARI-TARGET	29 UNUSED	37 UNUSED
6 SW#: 50 #2 ROLLOVER BUTTON	14 SW#: 51 OUTSIDE & 5 POS. VARI-TARGET	22 SW#: 52 #3 & #4 POS. VARI-TARGET	30 UNUSED	38 UNUSED
7 SW#: 60 10 POINT (6) SWITCHES	15 SW#: 61 ROLLUNDER	23 SW#: 62 TARGET (3)	31 UNUSED	39 SW#: 64 BULLS-EYE TARGET
8 SW#: 70 "B" ROLLOVER	16 SW#: 71 "C" ROLLOVER	24 SW#: 72 "D" ROLLOVER	32 UNUSED	40 SW#: 74 "A" ROLLOVER

SW# number is the switch number as known to the game.

Touchdown by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 LEFT "P" TARGET	33 SW#: 40 LEFT "A" TARGET	41 SW#: 50 LEFT "S" TARGET	49 SW#: 60 LEFT "S" TARGET	57 UNUSED
2 UNUSED	10 UNUSED	18 UNUSED	26 SW#: 31 RIGHT "P" TARGET	34 SW#: 41 RIGHT "A" TARGET	42 SW#: 51 RIGHT "S" TARGET	50 SW#: 61 RIGHT "S" TARGET	58 UNUSED
3 UNUSED	11 UNUSED	19 UNUSED	27 SW#: 32 "F" ROLLOVER	35 SW#: 42 "O" ROLLOVER	43 SW#: 52 "O" ROLLOVER	51 SW#: 62 "T" ROLLOVER	59 UNUSED
4 UNUSED	12 UNUSED	20 UNUSED	28 SW#: 33 LEFT HOLE	36 SW#: 43 RIGHT HOLE	44 SW#: 53 LEFT SPINNER	52 SW#: 63 RIGHT SPINNER	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 SW#: 34 "B" ROLLOVER	37 SW#: 44 "A" ROLLOVER	45 SW#: 54 "L" ROLLOVER	53 SW#: 64 "L" ROLLOVER	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 SW#: 35 EXTRA BALL TARGET	38 SW#: 45 POP BUMPER (4)	46 SW#: 55 KICKING (2) TARGET	54 SW#: 65 10 POINT (2)	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 SW#: 36 ON RIGHT FLIPPER	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 SW#: 67 OUTHOLE	64 UNUSED

SW# number is the switch number as known to the game.

Transformers by Stern

1 SW#: 1 BUMBLEBEE TARGET	9 UNUSED	17 UNUSED	25 SW#: 49 ENERGON (CENTER)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 ENERGON (LEFT)	10 SW#: 18 TROUGH #4 (L)	18 SW#: 34 R. ORBIT SPINNER	26 SW#: 50 R. 2 BANK TARGET (TOP)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 LEFT EJECT	11 SW#: 19 TROUGH #3	19 SW#: 35 R. RAMP ENTRANCE	27 SW#: 51 OPTIMUS PRIME	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 L. RAMP ENTRANCE	12 SW#: 20 TROUGH #2	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 L. ORBIT (BOTTOM)	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 R. 2 BANK TARGET (BOT)	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 L. ORBIT (TOP)	14 SW#: 22 TROUGH JAM	22 SW#: 38 MEGATRON #4 LOCK	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 RIGHT TOP LANE	15 SW#: 23 SHOOTER LANE	23 SW#: 39 MEGATRON #3 LOCK	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 LEFT TOP LANE	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 MEGATRON #2 LOCK	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Transformers by Stern

Bank 2

1 UNUSED	9 SW#: 25 L. RETURN LANE	17 SW#: 41 MEGATRON #1 LOCK (BACK)	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 L. RAMP EXIT	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 MEGATRON JAM	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 CENTER LANE	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 OPTIMUS (UP) PRIME	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 RIGHT ORBIT	12 SW#: 28 R. RETURN LANE	20 SW#: 44 OPTIMUS PRIME (DOWN)	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 MEGATRON BACK DOOR	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 CAPTIVE BALL	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 R. RAMP EXIT	14 SW#: 30 TOP POP BUMPER	22 SW#: 46 ENERGON (RIGHT)	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Transporter the Rescue by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 PLAYFIELD TILT	17 SW#: 17 TOP OF RAMP	25 SW#: 25 TOP LANE LEFT	33 SW#: 33 LEFT LOCKUP	41 UNUSED	49 UNUSED	57 SW#: 57 RIGHT LANE FLIPPER CHANGE
2 UNUSED	10 SW#: 10 OUTHOLE	18 UNUSED	26 SW#: 26 TOP LANE MIDDLE	34 SW#: 34 RIGHT LOCKUP	42 UNUSED	50 UNUSED	58 SW#: 58 LEFT FLIPPER LANE CHANGE
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TROUGH 1, RIGHT	19 SW#: 19 LEFT DROP TARGET BANK "R"	27 SW#: 27 TOP LANE RIGHT	35 SW#: 35 SPINNER	43 UNUSED	51 UNUSED	59 SW#: 59 LEFT OUTLANE
4 SW#: 4 RIGHT COIN SW	12 SW#: 12 TROUGH 2, MIDDLE	20 SW#: 20 LEFT DROP TARGET BANK "E"	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 SW#: 60 LEFT BUMPER
5 SW#: 5 CENTER COIN SW	13 SW#: 13 TROUGH 3, LEFT	21 SW#: 21 LEFT DROP TARGET BANK "S"	29 UNUSED	37 SW#: 37 LEFT RETURN	45 UNUSED	53 UNUSED	61 SW#: 61 RIGHT BUMPER
6 SW#: 6 LEFT COIN SW	14 SW#: 14 SHOOTER LANE	22 SW#: 22 MID DROP "C" TARGET BANK	30 SW#: 30 JET 10 POINT	38 UNUSED	46 UNUSED	54 UNUSED	62 SW#: 62 BOTTOM BUMPER
7 SW#: 7 SLAM TILT	15 SW#: 15 BALL POPPER	23 SW#: 23 MID DROP "U" TARGET BANK	31 SW#: 31 TRANSPORT	39 SW#: 39 RIGHT RETURN	47 UNUSED	55 UNUSED	63 SW#: 63 LEFT SLINGSHOT
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 SINGLE STANDUP TARGET	24 SW#: 24 MID DROP "E" TARGET BANK	32 UNUSED	40 SW#: 40 RIGHT OUTLANE	48 UNUSED	56 UNUSED	64 SW#: 64 RIGHT SLINGSHOT

SW# number is the switch number as known to the game.

Tri Zone by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 RIGHT STANDUP	25 SW#: 25 EJECT HOLE	33 SW#: 33 "N" DROP TARGET	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 TOP A ROLLOVER	18 SW#: 18 "R" ROLLOVER	26 SW#: 26 LEFT KICKER	34 SW#: 34 PLAYFIELD TILT	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 TOP B ROLLOVER	19 SW#: 19 "I" ROLLOVER	27 SW#: 27 LEFT INSIDE ROLLOVER	35 SW#: 35 "Z-O-N-E" DROP TARGETS SERIES	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT STANDUP	20 SW#: 20 "E" DROP TARGET	28 SW#: 28 LEFT OUTSIDE ROLLOVER	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 TOP JET BUMPER	21 SW#: 21 LOWER RIGHT STANDUP	29 SW#: 29 BOTTOM LEFT STANDUP	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 LEFT JET BUMPER	22 SW#: 22 RIGHT OUTSIDE ROLLOVER	30 SW#: 30 "Z" DROP TARGET	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT JET BUMPER	23 SW#: 23 RIGHT INSIDE ROLLOVER	31 SW#: 31 SPINNER	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 "O" DROP TARGET	24 SW#: 24 RIGHT KICKER	32 SW#: 32 "T" ROLLOVER	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Trident by Stern

1 SW#: 1 COIN #3 (RIGHT)	9 SW#: 2 COIN #1 (CENTER)	17 SW#: 3 COIN #2 (LEFT)	25 SW#: 4 RIGHT SPINNER	33 SW#: 5 LEFT SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILTS	57 SW#: 8 SLAM TILT
2 UNUSED	10 SW#: 10 ADV. LEFT LANE ROLLOVER BUTTON	18 SW#: 11 TOP RIGHT SLING-SHOT	26 SW#: 12 TOP LEFT SLING-SHOT	34 SW#: 13 BOTTOM RIGHT SLING-SHOT	42 SW#: 14 BOTTOM LEFT SLING-SHOT	50 SW#: 15 RIGHT THUMPER	58 SW#: 16 LEFT THUMPER
3 SW#: 17 RIGHT OUTER LANE	11 SW#: 18 RIGHT RETURN LANE	19 SW#: 19 LEFT RETURN LANE	27 SW#: 20 STAND-UP "P" TARGET	35 SW#: 21 STAND-UP "Y" TARGET	43 SW#: 22 STAND-UP "A" TARGET	51 SW#: 23 STAND-UP "G" TARGET	59 SW#: 24 STAND-UP "W" TARGET
4 UNUSED	12 SW#: 26 TOP EJECT POCKET	20 SW#: 27 10 PTS. & CHANGE	28 SW#: 28 DROP TARGET #5	36 SW#: 29 DROP TARGET #4	44 SW#: 30 DROP TARGET #3	52 SW#: 31 DROP TARGET #2	60 SW#: 32 DROP TARGET #1
5 SW#: 33 OUT HOLE	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Tron by Stern

1 SW#: 1 TRO(N)	9 UNUSED	17 UNUSED	25 SW#: 49 RECOGNIZ (L) 3-BANK	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 TR(O)N	10 SW#: 18 TROUGH #4 (L)	18 SW#: 34 R. RAMP EXIT	26 SW#: 50 RECOGNIZ (C) 3-BANK	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 T(R)ON	11 SW#: 19 TROUGH #3	19 SW#: 35 L. RAMP ENTRANCE	27 SW#: 51 RECOGNIZ (R) 3-BANK	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 (T)RON	12 SW#: 20 TROUGH #2	20 SW#: 36 RIGHT ORBIT SPINNER	28 SW#: 52 3-BANK MOTOR (DN)	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 L. RAMP EXIT	29 SW#: 53 3-BANK MOTOR (UP)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH JAM	22 SW#: 38 R. RAMP ENTRANCE	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 (Z)USE	15 SW#: 23 SHOOTER LANE	23 SW#: 39 RIGHT INNER LOOP	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 Z(U)SE	16 SW#: 24 LEFT OUTLANE	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Tron by Stern

Bank 2

1 UNUSED	9 SW#: 25 (C)LU	17 SW#: 41 DISC OPTO	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 26 LEFT SLINGSHOT	18 UNUSED	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 VIDEO GAME EJECT	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 LEFT ORBIT	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 ZEN ROLLOVER	12 SW#: 28 CL(U)	20 SW#: 44 LEFT SPINNER	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 ZUS(E)	13 SW#: 29 RIGHTOUTLANE	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 C(L)U	14 SW#: 30 LEFT BUMPER	22 SW#: 46 RIGHT ORBIT	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 ZU(S)E	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Truck Stop by Bally

1 SW#: 1 "C" RAMP ENTRY	9 SW#: 2 "I" RAMP ENTRY	17 SW#: 3 "T" RAMP ENTRY	25 SW#: 4 "Y" RAMP ENTRY	33 SW#: 5 LEFT CABINET	41 SW#: 6 CREDIT	49 SW#: 7 RIGHT CABINET	57 SW#: 8 OUTHOLE
2 SW#: 9 RIGHT COIN #3	10 SW#: 10 LEFT COIN #1	18 SW#: 11 MIDDLE COIN #2	26 SW#: 12 LEFT RAMP EXIT	34 SW#: 13 RIGHT RAMP EXIT	42 SW#: 14 SLAM	50 SW#: 15 TILT	58 SW#: 16 SHOOTER LANE
3 SW#: 17 LEFT BOTTOM SLING	11 SW#: 18 RIGHT BOTTOM SLING	19 SW#: 19 LEFT TOP SLING	27 SW#: 20 TOP RIGHT SLING	35 SW#: 21 MIDDLE SINGLE TARGET	43 SW#: 22 LEFT MUSHROOM	51 SW#: 23 RIGHT MUSHROOM	59 SW#: 24 SPINNER
4 SW#: 25 BOTTOM DROP INLINE TARGET	12 SW#: 26 MIDDLE DROP INLINE TARGET	20 SW#: 27 TOP INLINE DROP TARGET	28 UNUSED	36 SW#: 29 LEFT TRUCK STOP	44 SW#: 30 RIGHT SAUCER	52 SW#: 31 LEFT RETURN LANE	60 SW#: 32 RIGHT RETURN LANE
5 SW#: 33 LEFT #1 BLUE	13 SW#: 34 #2 BLUE	21 SW#: 35 #3 BLUE	29 SW#: 36 #4 BLUE	37 SW#: 37 #5 BLUE	45 SW#: 38 RIGHT #6 BLUE	53 SW#: 39 LEFT OUTLANE	61 SW#: 40 RIGHT OUTLANE
6 SW#: 41 LEFT SINGLE TARGET	14 SW#: 42 RIGHT SINGLE TARGET	22 UNUSED	30 UNUSED	38 SW#: 45 LOWER DOCK	46 SW#: 46 UPPER DOCK	54 SW#: 47 LEFT TROUGH #1	62 SW#: 48 RIGHT TROUGH #2
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Twilight Zone by Williams

1 SW#: 11 RIGHT INLANE	9 SW#: 21 SLAM TILT	17 SW#: 31 LEFT JET BUMPER	25 SW#: 41 DEAD END	33 SW#: 51 GUMBALL LANE POPPER	41 SW#: 61 LOWER SKILL	49 UNUSED	57 SW#: 81 LOWER RIGHT MAGNET
2 SW#: 12 RIGHT OUTLANE	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 RIGHT JET BUMPER	26 SW#: 42 THE CAMERA	34 SW#: 52 HITCH-HIKER	42 SW#: 62 CENTER SKILL	50 SW#: 72 AUTO-FIRE KICKER	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 LOWER JET BUMPER	27 SW#: 43 PLAYER PIANO	35 SW#: 53 LEFT RAMP ENTER	43 SW#: 63 UPPER SKILL	51 SW#: 73 RIGHT RAMP	59 SW#: 83 LEFT MAGNET
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 LEFT SLINGSHOT	28 SW#: 44 MINI ENTER PLAYFIELD	36 SW#: 54 LEFT RAMP	44 SW#: 64 UPPER RIGHT 5 MILLION	52 SW#: 74 GUMBALL POPPER	60 SW#: 84 CENTER LOCK
5 SW#: 15 RIGHT TROUGH	13 SW#: 25 FAR LEFT TROUGH	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 45 MINI LEFT PLAYFIELD (2)	37 SW#: 55 GUMBALL GENEVA	45 SW#: 65 POWER PAYOFF (2)	53 SW#: 75 MINI TOP PLAYFIELD	61 SW#: 85 UPPER LOCK
6 SW#: 16 CENTER TROUGH	14 SW#: 26 TROUGH PROXIMITY	22 SW#: 36 LEFT OUTLANE	30 SW#: 46 MINI RIGHT PLAYFIELD (2)	38 SW#: 56 GUMBALL EXIT	46 SW#: 66 MIDDLE RIGHT 5 MILLION 1	54 SW#: 76 MINI EXIT PLAYFIELD	62 UNUSED
7 SW#: 17 LEFT TROUGH	15 SW#: 27 BALL SHOOTER	23 SW#: 37 LEFT INLANE 1	31 SW#: 47 CLOCK MILLIONS	39 SW#: 57 SLOT PROXIMITY	47 SW#: 67 MIDDLE RIGHT 5 MILLION 2	55 SW#: 77 MIDDLE LEFT 5 MILLION	63 SW#: 87 GUMBALL ENTER
8 SW#: 18 OUTHOLE	16 SW#: 28 ROCKET KICKER	24 SW#: 38 LEFT INLANE 2	32 SW#: 48 LOWER LEFT 5 MILLION	40 SW#: 58 SLOT KICKOUT	48 SW#: 68 LOWER RIGHT 5 MILLION	56 SW#: 78 UPPER LEFT 5 MILLION	64 SW#: 88 LOCK LOWER

SW# number is the switch number as known to the game.

COL 9 IS NOT ACCESSIBLE USING THE STANDARD WPC HARNESS FOR THE 64 SWITCH MATRIX TESTER. COL 9 MUST BE TESTED SEPARATELY OR WIRED TO A 2ND 64 SWITCH MATRIX TESTER.

Twister by Sega

1 UNUSED	9 SW#: 9 DROP TARGET	17 SW#: 17 LEFT TOP LANE	25 SW#: 25 DISC MAGNET - Q2 MAG. BD.	33 SW#: 33 3-BANK S-U (T)WI	41 SW#: 41 5-BALL LOCK #1 (BOTTOM)	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 SW#: 10 5-BALL #1 TROUGH (LEFT)	18 SW#: 18 MIDDLE TOP LANE	26 SW#: 26 WEST STAND-UP	34 SW#: 34 3-BANK S-U T(W)I	42 SW#: 42 5-BALL LOCK #2	50 SW#: 50 BOTTOM TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 SW#: 11 5-BALL #2 TROUGH	19 SW#: 19 RIGHT TOP LANE	27 SW#: 27 NW STAND-UP	35 SW#: 35 3-BANK S-U TW(I)	43 SW#: 43 5-BALL LOCK #3	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 5-BALL #3 TROUGH	20 SW#: 20 LEFT SPINNER	28 SW#: 28 NORTH STAND-UP	36 SW#: 36 S-U TOP TW(S)TER	44 SW#: 44 5-BALL LOCK #4	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 5-BALL #4 TROUGH	21 SW#: 21 LEFT ORBIT	29 SW#: 29 NE STAND-UP	37 SW#: 37 3-BANK S-U (T)ER	45 SW#: 45 5-BALL LOCK VUK	53 UNUSED	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 5-BALL #5 TROUGH (RIGHT)	22 SW#: 22 RIGHT SPINNER	30 SW#: 30 EAST STAND-UP	38 SW#: 38 3-BANK S-U T(E)R	46 UNUSED	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 5-BALL VUK TROUGH OPTO	23 SW#: 23 RIGHT ORBIT	31 SW#: 31 SE STAND-UP	39 SW#: 39 3-BANK S-U TE(R)	47 UNUSED	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 SW#: 24 RIGHT RAMP ENTER	32 SW#: 32 DIVERTER - MAGNET Q1 MAG. BD.	40 SW#: 40 RIGHT RAMP EXIT	48 UNUSED	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Varkon by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 2-PLAYER START	17 SW#: 17 8 STANDUP TARGET, LLP	25 SW#: 25 BULL'S-EYE TARGET, LLP	33 SW#: 33 JET BUMPER, ULP	41 SW#: 41 RIGHT SIDE KICKER, ULP	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 10 OUTHOLE/EJECT, LLP	18 SW#: 18 9 STANDUP TARGET, LLP	26 SW#: 26 LANE A ULP ROLLOVER,	34 SW#: 34 RAMP ULP CHAMBER,	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 1-PLAYER START	11 UNUSED	19 SW#: 19 10 STANDUP TARGET, LLP	27 SW#: 27 LANE V ULP ROLLOVER,	35 SW#: 35 OUTHOLE/EJECT, ULP	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN CHUTE	12 UNUSED	20 SW#: 20 5 STANDUP TARGET, ULP	28 SW#: 28 FLIPPER LANE TURN R ROLLOVER,	36 SW#: 36 TOP LEFT ULP STANDUP SWITCH,	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 8 STANDUP TARGET, LLP	21 SW#: 21 4 STANDUP TARGET, ULP	29 SW#: 29 K STANDUP TARGET, ULP	37 SW#: 37 BOTTOM LEFT STANDUP SWITCH, ULP	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN CHUTE	14 SW#: 14 A STANDUP TARGET, LLP	22 SW#: 22 3 STANDUP TARGET, ULP	30 SW#: 30 O STANDUP TARGET, ULP	38 SW#: 38 CENTER LEFT STANDUP SWITCH, ULP	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 6 STANDUP TARGET, LLP	23 SW#: 23 2 STANDUP TARGET, ULP	31 SW#: 31 N STANDUP TARGET, ULP	39 SW#: 39 LANE CHANGE RIGHT	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 7 STANDUP TARGET, LLP	24 SW#: 24 1 STANDUP TARGET, ULP	32 SW#: 32 SPINNER, ULP	40 SW#: 40 LANE CHANGE LEFT	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Vector by Bally

1 SW#: 1 #2 LEFT OF & OUTHOLE #1 RIGHT OF OUTHOLE	9 SW#: 2 #1 LEFT OF OUTHOLE	17 SW#: 3 OUTHOLE	25 SW#: 4 RIGHT BOTTOM SAUCER	33 SW#: 5 LEFT BOTTOM SAUCER	41 SW#: 6 CREDIT BUTTON	49 UNUSED	57 SW#: 8 PUSH BUTTON (UNDER PANEL IN FRONT)
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 SHOOTER LANE	34 SW#: 13 TOP RIGHT LANE	42 SW#: 14 VECTORSCAN LEFT GATE	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 CAPTIVE SAUCER (BOTTOM)	11 SW#: 18 CAPTIVE SAUCER (MIDDLE)	19 SW#: 19 CAPTIVE SAUCER (TOP)	27 UNUSED	35 SW#: 21 "E" TARGET	43 SW#: 22 "P" TARGET	51 SW#: 23 "Y" TARGET	59 SW#: 24 "H" TARGET
4 UNUSED	12 SW#: 26 3 LOWER DROP TARGET (RIGHT)	20 SW#: 27 3 LOWER DROP TARGET (MIDDLE)	28 SW#: 28 3 LOWER DROP TARGET (LEFT)	36 SW#: 29 3 TOP DROP TARGET (RIGHT)	44 SW#: 30 3 TOP DROP TARGET (MIDDLE)	52 SW#: 31 3 TOP DROP TARGET (LEFT)	60 UNUSED
5 SW#: 33 RIGHT OUTLANE	13 SW#: 34 RIGHT RETURN LANE	21 SW#: 35 LEFT OUTLANE	29 SW#: 36 LEFT RETURN LANE	37 SW#: 37 ADVANCE R.O. BONUS BUTTON	45 SW#: 38 RIGHT SLINGSHOT	53 SW#: 39 LEFT SLINGSHOT	61 SW#: 40 THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 SW#: 46 "Z" DROP TARGET	54 SW#: 47 "Y" DROP TARGET	62 SW#: 48 "X" DROP TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

A FEW BALLY GAMES HAVE A 5TH STROBE (STROBE5) COMING FROM A DIFFERENT MPU HEADER THAT ALLOWS FOR AN ADDITIONAL 8 SWITCHES (SWITCHES 41-48). THIS IS NOT PART OF THE NORMAL WIRE HARNESS USED WITH THE 64 SWITCH MATRIX TESTER SINCE THIS IS ONLY A VERY LIMITED NUMBER OF GAMES. SWITCHES 41-48 WOULD NEED TO BE MANUALLY TESTED ON THE GAME. SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Vegas by Gottlieb

1 SW#: 1 LEFT COIN CHUTE	9 SW#: 1 RIGHT COIN CHUTE	17 SW#: 2 CENTER COIN CHUTE	25 SW#: 3 REPLAY BUTTON	33 SW#: 4 LEFT ADVANCE	41 SW#: 5 RIGHT ADVANCE	49 SW#: 6 OUTHOLE	57 SW#: 7 TROUGH
2 SW#: 10 TOP LEFT POP BUMPER	10 SW#: 11 BOTTOM LEFT POP BUMPER	18 SW#: 12 RIGHT POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER	34 SW#: 14 RIGHT RUBBER KICKING	42 SW#: 15 DROP TARGET RUBBER SWITCH	50 SW#: 16 TOP RIGHT #4 SPOT TARGET	58 SW#: 17 #1 DROP TARGET
3 SW#: 20 TOP LEFT ROLLOVER	11 SW#: 21 TOP LEFT ROLLOVER BUTTON	19 SW#: 22 BOTTOM LEFT ROLLOVER BUTTON	27 SW#: 23 LEFT OUTSIDE ROLLOVER	35 SW#: 24 TOP LEFT SPOT TARGET	43 SW#: 25 #1 RIGHT SIDE SPOT TARGET	51 SW#: 26 TOP RIGHT #1 SPOT TARGET	59 SW#: 27 #2 DROP TARGET
4 SW#: 30 TOP RIGHT ROLLOVER	12 SW#: 31 TOP RIGHT ROLLOVER BUTTON	20 SW#: 32 BOTTOM RIGHT ROLLOVER BUTTON	28 SW#: 33 RIGHT OUTSIDE ROLLOVER	36 SW#: 34 CENTER SPOT TARGET	44 SW#: 35 #2 RIGHT SIDE SPOT TARGET	52 SW#: 36 TOP RIGHT #2 SPOT TARGET	60 SW#: 37 #3 DROP TARGET
5 SW#: 40 TOP SHOOTER LANE ROLLOVER	13 SW#: 41 RIGHT SIDE ROLLOVER	21 SW#: 42 HOLE	29 SW#: 43 BOTTOM LANE SHOOTER ROLLOVER	37 UNUSED	45 SW#: 45 #3 RIGHT SIDE SPOT TARGET	53 SW#: 46 TOP RIGHT #3 SPOT TARGET	61 SW#: 47 #4 DROP TARGET
6 SW#: 50 LEFT FLIPPER	14 SW#: 51 RIGHT FLIPPER	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 SW#: 57 #5 DROP TARGET
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

Victory by Gottlieb

1 UNUSED	9 UNUSED	17 UNUSED	25 SW#: 30 TOP RIGHT ENTRANCE ROLLUNDER	33 SW#: 40 #1 SPOT TARGET	41 SW#: 50 #2 SPOT TARGET	49 SW#: 60 #3 SPOT TARGET	57 SW#: 70 LEFT SPOT TARGET
2 UNUSED	10 UNUSED	18 UNUSED	26 UNUSED	34 SW#: 41 #4 SPOT TARGET	42 SW#: 51 #5 SPOT TARGET	50 SW#: 61 #6 SPOT TARGET	58 SW#: 71 RIGHT SPOT TARGET
3 UNUSED	11 UNUSED	19 UNUSED	27 UNUSED	35 SW#: 42 #1 DROP TARGET	43 SW#: 52 #2 DROP TARGET	51 SW#: 62 #3 DROP TARGET	59 SW#: 72 #4 DROP TARGET
4 UNUSED	12 UNUSED	20 UNUSED	28 RAMP ENTRANCE ROLLUNDER	36 SW#: 43 TOP LEFT ENTRANCE ROLLUNDER	44 SW#: 53 LEFT SPINNER	52 SW#: 63 LEFT SIDE ROLLUNDER	60 SW#: 73 LEFT TRACK EXIT ROLLUNDER
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 SW#: 44 TOP ROLLOVER	45 SW#: 54 RIGHT SPINNER	53 SW#: 64 TOP BALL KICKER	61 SW#: 74 RIGHT BALL KICKER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 SW#: 45 LEFT OUTSIDE ROLLOVER	46 SW#: 55 LEFT RETURN ROLLOVER	54 SW#: 65 RIGHT RETURN ROLLOVER	62 SW#: 75 RIGHT OUTSIDE ROLLOVER
7 SW#: 6 LEFT ADVANCE BUTTON	15 SW#: 16 RIGHT BUTTON ADVANCE	23 UNUSED	31 UNUSED	39 SW#: 46 KICKING (2) RUBBER	47 SW#: 56 TROUGH	55 SW#: 66 OUTHOLE	63 SW#: 76 HOLE KICKER
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Viking by Bally

1 SW#: 1 INLINE DROP TARGET A (TOP)	9 SW#: 2 INLINE DROP TARGET B	17 SW#: 3 INLINE DROP TARGET C	25 SW#: 4 INLINE DROP TARGET D (BOTTOM)	33 SW#: 5 INLINE RED TARGET	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 TOP B ROLLOVER	34 SW#: 13 TOP A ROLLOVER	42 SW#: 14 SPINNER	50 SW#: 15 SIDE R.O. BUTTON	58 SW#: 16 SLAM (2)
3 SW#: 17 3 DROP 3 TARGET (BOTTOM)	11 SW#: 18 3 DROP 2 TARGET	19 SW#: 19 3 DROP 1 TARGET (TOP)	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 SW#: 24 TOP SAUCER
4 SW#: 25 RED SIDE TARGET	12 SW#: 26 RIGHT OUT ROLLOVER	20 SW#: 27 FLIP FEED LANE (RT)	28 SW#: 28 FLIP FEED LANE (LT)	36 SW#: 29 LEFT OUTLANE	44 SW#: 30 RIGHT SIDE LANE R.O.	52 UNUSED	60 SW#: 32 UP-DOWN SAUCER
5 SW#: 33 3 DROP TARGET REBOUND	13 UNUSED	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 RIGHT SIDE THUMPER BUMPER	45 SW#: 38 LEFT SIDE THUMPER BUMPER	53 SW#: 39 TOP RIGHT THUMPER BUMPER	61 SW#: 40 TOP LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Viper by Stern

1 SW#: 1 COIN CHUTE #1	9 SW#: 2 COIN CHUTE #2	17 SW#: 3 COIN CHUTE #3	25 SW#: 4 ROTOR FIRE	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUTHOLE REFLEX
2 SW#: 9 RIGHT ROLL OVER (3)	10 UNUSED	18 SW#: 11 BALL WALKER SW.	26 SW#: 12 LEFT OUT LANE	34 SW#: 13 RIGHT BUMPER THUMPER	42 SW#: 14 LEFT THUMPER BUMPER	50 SW#: 15 RIGHT SLINGSHOT	58 SW#: 16 LEFT SLINGSHOT
3 SW#: 17 TARGET 8	11 SW#: 18 TARGET 7	19 SW#: 19 TARGET 6	27 SW#: 20 TARGET 5	35 SW#: 21 TARGET 4	43 SW#: 22 TARGET 3	51 SW#: 23 TARGET 2	59 SW#: 24 TARGET 1
4 SW#: 25 RIGHT DROP BANK (RIGHT)	12 SW#: 26 RIGHT DROP BANK (MID.)	20 SW#: 27 RIGHT DROP BANK (LEFT)	28 SW#: 28 LEFT DROP BANK (RIGHT)	36 SW#: 29 LEFT DROP BANK (MID.)	44 SW#: 30 LEFT DROP BANK (LEFT)	52 SW#: 31 ROTOR TARGET (BLUE)	60 SW#: 32 ROTOR TARGET (WHITE)
5 SW#: 33 RIGHT OUTHOLE	13 SW#: 34 MIDDLE OUTHOLE	21 SW#: 35 LEFT OUTHOLE	29 SW#: 36 ROLL OVER LEFT (1)	37 SW#: 37 ROLL OVER MIDDLE (2)	45 SW#: 38 ROTOR TARGET (RED)	53 SW#: 39 ROTOR TARGET (YELLOW)	61 SW#: 40 ROTOR CATCH
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Viper Night Drivin by Sega

1 UNUSED	9 UNUSED	17 SW#: 17 JUMP RAMP OPTO	25 SW#: 25 LEFT RAMP ENTER	33 UNUSED	41 SW#: 41 LEFT TOP LANE	49 SW#: 49 LEFT TURBO BUMPER	57 SW#: 57 LEFT OUTLANE
2 SW#: 2 4TH COIN SLOT	10 UNUSED	18 SW#: 18 RIGHT RAMP ENTER	26 SW#: 26 LEFT RAMP EXIT	34 UNUSED	42 SW#: 42 RIGHT TOP LANE	50 SW#: 50 TOP TURBO BUMPER	58 SW#: 58 LEFT RETURN LANE
3 SW#: 3 6TH COIN SLOT	11 UNUSED	19 SW#: 19 RIGHT RAMP EXIT	27 SW#: 27 CENTER RAMP ENTER	35 UNUSED	43 UNUSED	51 SW#: 51 RIGHT TURBO BUMPER	59 SW#: 59 LEFT SLINGSHOT
4 SW#: 4 RIGHT COIN SLOT	12 SW#: 12 4-BALL #1 TROUGH (LEFT)	20 SW#: 20 LEFT BUTTON (UK ONLY)	28 SW#: 28 CENTER RAMP EXIT	36 UNUSED	44 SW#: 44 BILL BOARD	52 UNUSED	60 SW#: 60 RIGHT OUTLANE
5 SW#: 5 CENTER COIN SLOT / DBA	13 SW#: 13 4-BALL #2 TROUGH	21 SW#: 21 RIGHT BUTTON (UK ONLY)	29 SW#: 29 LT RACCOON S-U	37 UNUSED	45 SW#: 45 LEFT VUK (LOCK)	53 SW#: 53 LAUNCH BUTTON	61 SW#: 61 RIGHT RETURN LANE
6 SW#: 6 LEFT COIN SLOT	14 SW#: 14 4-BALL #3 TROUGH	22 SW#: 22 RIGHT RUBBER	30 SW#: 30 RT RACCOON S-U	38 UNUSED	46 SW#: 46 RIGHT VUK (LOCK)	54 SW#: 54 START BUTTON	62 SW#: 62 RIGHT SLINGSHOT
7 SW#: 7 5TH COIN SLOT	15 SW#: 15 4-BALL VUK TROUGH OPTO	23 SW#: 23 LEFT RUBBER	31 SW#: 31 LEFT TARGET (LOWER)	39 UNUSED	47 SW#: 47 LEFT ORBIT	55 SW#: 55 SLAM TILT	63 UNUSED
8 UNUSED	16 SW#: 16 SHOOTER LANE	24 UNUSED	32 SW#: 32 RIGHT TARGET (LOWER)	40 UNUSED	48 SW#: 48 RIGHT ORBIT	56 SW#: 56 PLUMB BOB TILT	64 UNUSED

SW# number is the switch number as known to the game.

Volcano by Gottlieb

1 SW#: 1 #1 SUBWAY	9 SW#: 10 #2 SUBWAY	17 SW#: 20 OUTHOLE	25 SW#: 30 RIGHT TROUGH	33 SW#: 40 LEFT TROUGH	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 1 #1 RIGHT DROP TARGET	10 SW#: 11 #2 RIGHT DROP TARGET	18 SW#: 21 #3 RIGHT DROP TARGET	26 SW#: 31 #4 RIGHT DROP TARGET	34 SW#: 41 #5 RIGHT DROP TARGET	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 2 #1 TOP DROP TARGET	11 SW#: 12 #2 TOP DROP TARGET	19 SW#: 22 #3 TOP DROP TARGET	27 SW#: 32 #4 TOP DROP TARGET	35 SW#: 42 #5 TOP DROP TARGET	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 13 BOTTOM POP BUMPERS (2)	20 SW#: 23 HOLE KICKER	28 UNUSED	36 SW#: 43 LEFT SIDE KICKER	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 4 CRATER #4	13 SW#: 14 CRATER #3	21 SW#: 24 CRATER #2	29 SW#: 34 CRATER #1	37 SW#: 44 SPINNER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 5 RIGHT OUTLANE ROLLOVER	14 SW#: 15 10 POINT (7) SWITCHES	22 SW#: 25 ROLLUNDER	30 SW#: 35 TOP POP (2) BUMPERS	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 6 LEFT OUTLANE ROLLOVER	15 SW#: 16 LEFT RETURN ROLLOVER	23 SW#: 26 KICKING TARGET	31 SW#: 36 SPOT TARGET	39 SW#: 46 TILT (PLAYBOARD)	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 7 PLAY/TEST	16 SW#: 17 LEFT COIN	24 SW#: 27 RIGHT COIN	32 SW#: 37 CENTER COIN	40 SW#: 47 REPLAY	48 SW#: 57 TILT (3)	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Voltan Escapes Cosmic Doom by Bally

1 UNUSED	9 UNUSED	17 UNUSED	25 UNUSED	33 UNUSED	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 RIGHT SPINNER	11 SW#: 18 LEFT SPINNER	19 UNUSED	27 SW#: 20 TOP R.O. BUTTON	35 SW#: 21 30 PT. (5) REBOUNDS	43 SW#: 22 #5 CENTER TARGET	51 SW#: 23 "B" TARGET	59 SW#: 24 "A" TARGET
4 SW#: 25 #8 TARGET	12 SW#: 26 #6 ROLLOVER	20 SW#: 27 #4 ROLLOVER	28 SW#: 28 #2 TARGET	36 SW#: 29 #9 ROLLOVER	44 SW#: 30 #7 ROLLOVER	52 SW#: 31 #3 ROLLOVER	60 SW#: 32 #1 ROLLOVER
5 UNUSED	13 SW#: 34 RIGHT OUTLANE	21 SW#: 35 LEFT OUTLANE	29 SW#: 36 RIGHT SLINGSHOT	37 SW#: 37 LEFT SLINGSHOT	45 SW#: 38 BOTTOM THUMPER BUMPER	53 SW#: 39 LEFT THUMPER BUMPER	61 SW#: 40 RIGHT BUMPER THUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

WHO Dunnit by Williams

1 SW#: 11 3-BANK 2 POSITION	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH JAM	25 SW#: 41 TOP LEFT HOLE	33 SW#: 51 LOCK UP 1	41 SW#: 61 LEFT SLING	49 SW#: 71 TOP 2-BANK	57 UNUSED
2 SW#: 12 SLOT INDEX LEFT	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 1	26 SW#: 42 POST JETS	34 SW#: 52 TOP 4-BANK	42 SW#: 62 RIGHT SLING	50 SW#: 72 BOTTOM 2-BANK	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 BUY-IN BUTTON	19 SW#: 33 TROUGH 2	27 SW#: 43 BACK RIGHT POPPER	35 SW#: 53 2ND 4-BANK	43 SW#: 63 LEFT JET	51 SW#: 73 3-BANK UP POSITION	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 3	28 SW#: 44 LOWER RIGHT POPPER	36 SW#: 54 3RD 4-BANK	44 SW#: 64 BOTTOM JET	52 SW#: 74 UP DOWN RAMP	60 UNUSED
5 SW#: 15 SHOOTER LANE	13 SW#: 25 SLOT INDEX CENTER	21 SW#: 35 TROUGH 4	29 UNUSED	37 SW#: 55 BOTTOM 4-BANK	45 SW#: 65 RIGHT JET	53 SW#: 75 SCOOP CENTER	61 UNUSED
6 SW#: 16 RIGHT OUTLANE	14 SW#: 26 LEFT INLANE	22 SW#: 36 ENTER RAMP	30 UNUSED	38 SW#: 56 MYSTERY TARGET	46 SW#: 66 LEFT 3-BANK	54 SW#: 76 SCOOP RIGHT	62 UNUSED
7 SW#: 17 RIGHT INLANE	15 SW#: 27 LEFT OUTLANE	23 SW#: 37 MADE RAMP LEFT	31 SW#: 47 ENTER RIGHT HOLE	39 SW#: 57 LOWER RIGHT LOCK 2	47 SW#: 67 CENTER 3-BANK	55 SW#: 77 SCOOP LEFT	63 UNUSED
8 SW#: 18 RIGHT LOOP	16 SW#: 28 LEFT LOOP	24 UNUSED	32 SW#: 48 SLOT INDEX RIGHT	40 SW#: 58 RED	48 SW#: 68 RIGHT 3-BANK	56 SW#: 78 BLACK	64 UNUSED

SW# number is the switch number as known to the game.

WWF Royal Rumble by Data_East

1 SW#: 1 PLUMB TILT	9 SW#: 9 BALL TROUGH #1 LT	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 RIGHT OUTLANE	33 SW#: 33 LEFT 3-BANK STAND-UP "G"	41 SW#: 41 LEFT RAMP ENTER	49 SW#: 49 LEFT TURBO BUMPER	57 UNUSED
2 SW#: 2 4TH COIN	10 SW#: 10 BALL TROUGH #2	18 SW#: 18 LEFT RETURN	26 SW#: 26 RIGHT RETURN	34 SW#: 34 LEFT 3-BANK STAND-UP "A"	42 SW#: 42 LEFT RAMP EXIT	50 SW#: 50 BOTTOM TURBO BUMPER	58 SW#: 58 UPER P/F EXIT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #3	19 SW#: 19 LEFT SLINGSHOT	27 SW#: 27 RIGHT SLINGSHOT	35 SW#: 35 LEFT 3-BANK STAND-UP "T"	43 SW#: 43 MID RAMP ENTER	51 SW#: 51 RIGHT TURBO BUMPER	59 UNUSED
4 SW#: 4 RIGHT COIN	12 SW#: 12 BALL TROUGH #4	20 SW#: 20 VUK	28 SW#: 28 EJECT	36 SW#: 36 RIGHT 3-BANK STAND-UP "T"	44 SW#: 44 MID RAMP EXIT	52 SW#: 52 LEFT TOP ROLLOVER	60 UNUSED
5 SW#: 5 CENTER COIN	13 SW#: 13 BALL TROUGH #5	21 SW#: 21 LEFT DROP 1 TARGET "D"	29 SW#: 29 UPPER P/F ROLLOVER	37 SW#: 37 RIGHT 3-BANK STAND-UP "A"	45 SW#: 45 RIGHT BOTTOM ROLLOVER	53 SW#: 53 MID TOP ROLLOVER	61 UNUSED
6 SW#: 6 LEFT COIN	14 SW#: 14 BALL TROUGH #6	22 SW#: 22 LEFT DROP 2 TARGET "A"	30 SW#: 30 UPPER P/F DROP TARGET LEFT	38 SW#: 38 RIGHT 3-BANK STAND-UP "G"	46 SW#: 46 RIGHT TOP ROLLOVER	54 SW#: 54 RIGHT TOP ROLLOVER	62 SW#: 62 TAG BUTTON
7 SW#: 7 SLAM TILT	15 SW#: 15 BALL TROUGH #7 RT	23 SW#: 23 LEFT DROP 3 TARGET "E"	31 SW#: 31 UPPER P/F DROP TARGET MID	39 SW#: 39 UNDER TROUGH	47 SW#: 47 CAPTIVE BALL	55 SW#: 55 OUT OF RING	63 SW#: 63 LEFT FLIPPER UPPER/LOWER
8 SW#: 8 EXTRA BALL BUTTON	16 SW#: 16 SHOOTER LANE	24 SW#: 24 LEFT DROP 4 TARGET "D"	32 SW#: 32 UPPER P/F DROP TARGET RIGHT	40 SW#: 40 SUPER VUK	48 UNUSED	56 SW#: 56 IN THE RING	64 SW#: 64 RIGHT FLIPPER UPPER/LOWER

SW# number is the switch number as known to the game.

Warlok by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 OUTHOLE	17 SW#: 17 "Y"	25 SW#: 25 RIGHT RETURN FLIPPER LANE	33 SW#: 33 UPPER DROP - TARGET BANK LEFT	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT SPINNER	18 SW#: 18 "Z"	26 SW#: 26 RIGHT OUTLANE	34 SW#: 34 UPPER DROP - TARGET BANK CENTER	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 UPPER RIGHT SPINNER	19 SW#: 19 TOP LEFT TARGET	27 SW#: 27 LEFT DROP - TARGET BANK LEFT	35 SW#: 35 UPPER DROP - TARGET BANK RIGHT	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LOWER RIGHT SPINNER	20 SW#: 20 LEFT KICKER	28 SW#: 28 LEFT DROP - TARGET BANK CENTER	36 SW#: 36 LANE CHANGE	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT JET BUMPER	21 SW#: 21 RIGHT KICKER	29 SW#: 29 LEFT DROP - TARGET BANK RIGHT	37 SW#: 37 LEFT UPPER ROLLUNDER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 RIGHT JET BUMPER	22 SW#: 22 RIGHT BALL EXIT	30 SW#: 30 CENTER DROP TARGET BANK - LEFT	38 SW#: 38 RIGHT UPPER ROLLUNDER	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 CENTER JET BUMPER	23 SW#: 23 LEFT OUTLANE	31 SW#: 31 CENTER DROP TARGET BANK - CENTER	39 SW#: 39 PLAYFIELD TILT	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 "X"	24 SW#: 24 LEFT FLIPPER RETURN LANE	32 SW#: 32 CENTER DROP TARGET BANK - RIGHT	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Wheel of Fortune by Stern

1 SW#: 1 CENTER DRAIN LEFT	9 UNUSED	17 SW#: 33 MINI-RAMP (LOCK)	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 CENTER DRAIN RIGHT	10 SW#: 18 TROUGH #4 (L)	18 UNUSED	26 SW#: 50 SKILL SHOT MADE	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 19 TROUGH #3	19 UNUSED	27 SW#: 51 RIGHT RAMP MADE	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 UNUSED	12 SW#: 20 TROUGH #2	20 SW#: 36 RED CONTESTANT	28 SW#: 52 LEFT RAMP ENTER	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 (R)	21 SW#: 37 YELLOW CONTESTANT	29 SW#: 53 CENTER RAMP MADE	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT RAMP MADE	14 SW#: 22 TROUGH JAM	22 SW#: 38 BLUE CONTESTANT	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 M(UL)TI-BALL	15 SW#: 23 SHOOTER LANE	23 SW#: 39 DROP TARGET FRONT	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 (M)ULTI-BALL	16 SW#: 24 LEFT OUTLANE (TOP)	24 SW#: 40 DROP TARGET MIDDLE	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

Wheel of Fortune by Stern

Bank 2

1 SW#: 9 MULTI-(B)ALL	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 DROP TARGET BACK	25 SW#: 57 LEFT ORBIT (TOP)	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 MULTI-B(A)LL	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 LEFT OUTLANE (BOTTOM)	26 SW#: 58 LEFT ORBIT (BOTTOM)	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 MULTI-BA(L)L	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 RIGHT OUTLANE (BOTTOM)	27 SW#: 59 RIGHT ORBIT (TOP)	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 MULTI-BAL(L)	12 SW#: 28 RIGHT RETURN LANE	20 UNUSED	28 SW#: 60 RIGHT ORBIT (BOTTOM)	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 MU(L)TI-BALL	13 SW#: 29 RIGHT (TOP) OUTLANE	21 SW#: 45 WILD CARD LANE	29 SW#: 61 MUL(T)I-BALL	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 MULT(I)-BALL	14 SW#: 30 LEFT BUMPER	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 WHEEL HOME	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Whirlwind by Williams

1 SW#: 1 PLUMB BOB TILT	9 UNUSED	17 SW#: 17 LEFT OUTLANE	25 SW#: 25 RIGHT STANDUP	33 SW#: 33 ENTER LEFT RAMP	41 SW#: 41 SPINNER	49 SW#: 49 TOP JETS (LEFT)	57 SW#: 57 FLIPPER RIGHT
2 SW#: 2 C SIDE POWER A/C RELAY	10 SW#: 10 OUTHOLE	18 SW#: 18 LEFT RETURN LANE	26 SW#: 26 TOP SNGL DROP TARGET	34 SW#: 34 L RAMP SCORE (TOP)	42 SW#: 42 RIGHT RAMP DOWN	50 SW#: 50 TOP JETS (RIGHT)	58 SW#: 58 FLIPPER LEFT
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 BALL TROUGH #1 (LEFT)	19 SW#: 19 RIGHT CELLAR	27 SW#: 27 M 3-BANK DR TGT (LWR)	35 SW#: 35 L RAMP SCORE (BOT)	43 SW#: 43 TR EJECT	51 SW#: 51 TOP JETS (BOT)	59 SW#: 59 SHOOTER LANE
4 SW#: 4 RIGHT COIN CHUTE	12 SW#: 12 BALL TROUGH #2 (MID)	20 SW#: 20 LEFT CELLAR	28 SW#: 28 M 3-BANK DR TGT (MID)	36 SW#: 36 LEFT LOOP (TOP)	44 SW#: 44 R RAMP SCORE (TOP)	52 SW#: 52 BTM JETS (LEFT)	60 SW#: 60 LEFT 110 POINT
5 SW#: 5 CENTER COIN CHUTE	13 SW#: 13 BALL TROUGH #3 (RIGHT)	21 SW#: 21 LEFT STANDUP	29 SW#: 29 M 3-BANK DR TGT (TOP)	37 SW#: 37 LEFT LOOP (BOT)	45 SW#: 45 R RAMP SCORE (BOT)	53 SW#: 53 BTM JETS (RIGHT)	61 SW#: 61 RIGHT 110 POINT
6 SW#: 6 LEFT COIN CHUTE	14 UNUSED	22 SW#: 22 LEFT LOCK 1 (LWR)	30 SW#: 30 MIDDLE STANDUP	38 SW#: 38 RIGHT LOOP (TOP)	46 UNUSED	54 SW#: 54 BTM JETS (TOP)	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 RIGHT RETURN LANE	23 SW#: 23 LEFT LOCK 2 (MID)	31 UNUSED	39 SW#: 39 RIGHT LOOP (BOT)	47 SW#: 47 L STANDUP (R RAMP)	55 SW#: 55 BL KICKER ("SLING")	63 UNUSED
8 SW#: 8 HIGH SCORE RESET	16 SW#: 16 RIGHT OUTLANE	24 SW#: 24 LEFT LOCK 3 (TOP)	32 UNUSED	40 SW#: 40 INNER LOOP	48 SW#: 48 R STANDUP (R RAMP)	56 SW#: 56 BR KICKER ("SLING")	64 UNUSED

SW# number is the switch number as known to the game.

White Water by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 RIVER "R2"	25 SW#: 41 LIGHT LOCK LEFT	33 SW#: 51 LEFT SLING	41 SW#: 61 WHIRLPOOL POPPER	49 SW#: 71 RAPIDS RAMP MAIN	57 UNUSED
2 UNUSED	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 RIVER "E"	26 SW#: 42 LIGHT LOCK RIGHT	34 SW#: 52 RIGHT SLING	42 SW#: 62 WHIRLPOOL EXIT	50 UNUSED	58 UNUSED
3 SW#: 13 START BUTTON	11 SW#: 23 TICKET OPTO.	19 SW#: 33 RIVER "V"	27 SW#: 43 LEFT LOOP	35 SW#: 53 BALL SHOOTER	43 SW#: 63 LOCKUP RIGHT	51 SW#: 73 HOT FOOT UPPER	59 UNUSED
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 RIVER "I"	28 SW#: 44 RIGHT LOOP	36 SW#: 54 LOWER JET ARENA	44 SW#: 64 LOCKUP CENTER	52 SW#: 74 HOT FOOT LOWER	60 UNUSED
5 SW#: 15 OUTHOLE	13 SW#: 25 LEFT OUTLANE	21 SW#: 35 RIVER "R1"	29 SW#: 45 SECRET PASSAGE	37 SW#: 55 RIGHT JET ARENA	45 SW#: 65 LOCKUP LEFT	53 SW#: 75 DISASTER DROP MAIN	61 UNUSED
6 SW#: 16 LEFT JET BUMPER	14 SW#: 26 LEFT FLIPPER LANE	22 SW#: 36 3-BANK TOP	30 SW#: 46 LEFT RAMP ENTER	38 SW#: 56 EXTRA BALL	46 SW#: 66 LEFT RAMP MAIN	54 SW#: 76 RIGHT TROUGH	62 SW#: 86 BIGFOOT OPTO 1
7 SW#: 17 RIGHT JET BUMPER	15 SW#: 27 RIGHT LANE FLIPPER	23 SW#: 37 3-BANK CENTER	31 SW#: 47 RAPIDS ENTER	39 SW#: 57 CANYON MAIN	47 UNUSED	55 SW#: 77 CENTER TROUGH	63 SW#: 87 BIGFOOT OPTO 2
8 SW#: 18 CENTER JET BUMPER	16 SW#: 28 RIGHT OUTLANE	24 SW#: 38 3-BANK LOWER	32 SW#: 48 CANYON ENTRANCE	40 SW#: 58 BIGFOOT CAVE	48 SW#: 68 DISASTER DROP ENTER	56 SW#: 78 LEFT TROUGH	64 UNUSED

SW# number is the switch number as known to the game.

Wild Fyre by Stern

1 SW#: 1 RIGHT OUTLANE	9 SW#: 2 RIGHT RETURN LANE	17 SW#: 3 LEFT OUTLANE	25 SW#: 4 LEFT RETURN LANE	33 SW#: 5 1,000 ARROW ADVANCE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT	57 SW#: 8 OUT-HOLE
2 SW#: 9 COIN #3 (RIGHT)	10 SW#: 10 COIN #1 (CENTER)	18 SW#: 11 COIN #2 (LEFT)	26 SW#: 12 TARGET #1 (4-BANK)	34 SW#: 13 RIGHT MIDDLE LANE	42 UNUSED	50 SW#: 15 SPIN-TARGET	58 SW#: 16 SLAM-TILT (3)
3 SW#: 17 ROLL-OVER BUTTON (10-PTS)	11 SW#: 18 1,000 BONUS ADVANCE	19 SW#: 19 10 POINTS & CHANGE	27 SW#: 20 TARGET #2 (4-BANK)	35 SW#: 21 TARGET #2 (3-BANK)	43 SW#: 22 SAUCER #3	51 SW#: 23 SAUCER #2	59 SW#: 24 SAUCER #1
4 UNUSED	12 UNUSED	20 SW#: 27 LEFT MIDDLE LANE	28 SW#: 28 TARGET #3 (4-BANK)	36 SW#: 29 TARGET #2 (3-BANK)	44 UNUSED	52 UNUSED	60 SW#: 32 ROLL OVER (EXTRA BALL)
5 SW#: 33 CENTER THUMPER	13 SW#: 34 RIGHT THUMPER	21 SW#: 35 LEFT THUMPER	29 SW#: 36 TARGET #4 (4-BANK)	37 SW#: 37 TARGET #3 (3-BANK)	45 SW#: 38 RIGHT SLING-SHOT	53 SW#: 39 LEFT SLING-SHOT	61 SW#: 40 SAUCER (COLLECT BONUS)
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Winter Sports by Zaccaria

1 SW#: METER BUTTON DISPLAY	9 UNUSED	17 SW#: 16 OUTHOLE	25 SW#: 24 TARGET 2	33 SW#: 32 RIGHT BUMPER	41 UNUSED
2 SW#: 1 PLUMB BOB TILT (ROLL BALL)	10 UNUSED	18 SW#: 17 LEFT KICKER SWITCH	26 SW#: 25 TARGET 3	34 SW#: 33 LEFT BUMPER	42 UNUSED
3 SW#: 2 SHOCK PROOF TILT (SLAM TILT)	11 UNUSED	19 SW#: 18 RIGHT KICKER SWITCH	27 SW#: 26 TARGET 4	35 SW#: 34 DOUBLE BONUS BUTTON	43 UNUSED
4 SW#: 3 CREDIT BUTTON	12 UNUSED	20 SW#: 19 BOTTOM RIGHT INSIDE ROLLOVER	28 SW#: 27 TOP TARGET 5	36 SW#: 35 TOP LEFT ROLLOVER	44 UNUSED
5 SW#: 4 COIN CHUTE 1 (LEFT HAND SIDE)	13 UNUSED	21 SW#: 20 BOTTOM RIGHT OUTSIDE ROLLOVER	29 SW#: 28 SPINNING TARGET	37 SW#: 36 TOP LEFT TARGET	45 UNUSED
6 SW#: 5 COIN CHUTE 2 (RIGHT HAND SIDE)	14 UNUSED	22 SW#: 21 BOTTOM LEFT INSIDE ROLLOVER	30 SW#: 29 SINGLE DROP TARGET	38 SW#: 37 TOP HOLE	46 UNUSED
7 SW#: 6 COIN CHUTE 3 (CENTRE)	15 SW#: 14 RESET SCORE HIGHEST BUTTON	23 SW#: 22 BOTTOM LEFT OUTSIDE ROLLOVER	31 SW#: 30 MIDDLE RIGHT ROLLOVER	39 SW#: 38 TOP RIGHT TARGET	47 UNUSED
8 UNUSED	16 UNUSED	24 SW#: 23 BOTTOM 1 TARGET	32 SW#: 31 MIDDLE RIGHT STAND-UP	40 SW#: 39 TOP RIGHT ROLLOVER	48 UNUSED

SW# number is the switch number as known to the game.

Wipe Out by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 CREDIT BUTTON	41 SW#: 5 TOURNAMENT	49 SW#: 6 (SERVICE) FRONT DOOR	57 SW#: 7 DROP TARGET #1
2 SW#: 10 TOP POP BUMPER	10 SW#: 11 CENTER POP BUMPER	18 SW#: 12 BOTTOM POP BUMPER	26 SW#: 13 LEFT KICKING RUBBER	34 SW#: 14 RIGHT RUBBER KICKING	42 SW#: 15 TOP KICKING RUBBER	50 SW#: 16 SPOT TARGET "M"	58 SW#: 17 DROP TARGET #2
3 SW#: 20 TOP L. R.O.	11 SW#: 21 CENTER L. R.O.	19 SW#: 22 BOTTOM L. R.O.	27 SW#: 23 PANIC BUTTON TARGET (INNER)	35 SW#: 24 OUTHOLE	43 SW#: 25 SHOOTER LANE ROLLOVER	51 SW#: 26 SPOT TARGET "O"	59 SW#: 27 DROP TARGET #3
4 SW#: 30 TOP R. R.O.	12 SW#: 31 CENTER R. R.O.	20 SW#: 32 BOTTOM R. R.O.	28 SW#: 33 PANIC BUTTON TARGET (OUTER)	36 SW#: 34 TROUGH	44 SW#: 35 UPKICKER	52 SW#: 36 SPOT TARGET "G"	60 SW#: 37 DROP TARGET #4
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

World Challenge Soccer by Gottlieb

1 SW#: 1 LEFT COIN CHUTE (#1)	9 SW#: 1 RIGHT COIN CHUTE (#2)	17 SW#: 2 CENTER COIN CHUTE (#3)	25 SW#: 3 COIN CHUTE (#4)	33 SW#: 4 CREDIT BUTTON	41 SW#: 5 TOURNAMENT	49 SW#: 6 (SERVICE) FRONT DOOR	57 UNUSED
2 SW#: 10 LEFT (2) KICKING RUBBER	10 SW#: 11 RIGHT (2) KICKING RUBBER	18 SW#: 12 L. DROP #1 TARGET	26 SW#: 13 L. DROP #4 TARGET	34 SW#: 14 R. DROP #1 TARGET	42 SW#: 15 R. DROP #4 TARGET	50 SW#: 16 OUTHOLE	58 SW#: 17 BOTTOM LANE SHOOTER RO
3 SW#: 20 BOTTOM LEFT UPKICKER	11 SW#: 21 TOP LEFT UPKICKER	19 SW#: 22 L. DROP #2 TARGET	27 SW#: 23 L. DROP #5 TARGET	35 SW#: 24 R. DROP #2 TARGET	43 SW#: 25 R. DROP #5 TARGET	51 SW#: 26 TROUGH	59 UNUSED
4 SW#: 30 BOTTOM RIGHT UPKICKER	12 SW#: 31 TOP RIGHT UPKICKER	20 SW#: 32 L. DROP #3 TARGET	28 SW#: 33 L. BANK RUBBER	36 SW#: 34 R. DROP #3 TARGET	44 SW#: 35 R. BANK RUBBER	52 SW#: 36 RO DROP TARGET	60 UNUSED
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

Gottlieb System 3 games support up to 96 playfield switches, but a standard 64-switch matrix tester can only access switches 00-77. To test the remaining switches, you need either a separate harness for the upper strobe lines or two switch matrix testers

World Cup by Williams

1 SW#: 1 PLUMB BOB TILT	9 SW#: 9 LEFT EJECT	17 SW#: 17 RIGHT (10 STANDUP PT)	25 SW#: 25 SPINNER	33 SW#: 33 TOP LEFT (10 STANDUP PT)	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 BALL ROLL TILT	10 SW#: 10 LEFT STANDUP (50 PT)	18 SW#: 18 RIGHT SPECIAL	26 SW#: 26 SUPER BALL ADVANCE	34 SW#: 34 "S" TARGET	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 CREDIT BUTTON	11 SW#: 11 LEFT SPECIAL	19 SW#: 19 RIGHT (50 STANDUP PT)	27 SW#: 27 "R" TARGET	35 SW#: 35 LEFT SUPER BALL ADVANCE	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT COIN SWITCH	12 SW#: 12 LEFT STANDUP (10 PT)	20 SW#: 20 RIGHT EJECT	28 SW#: 28 RIGHT SUPER BALL ADVANCE	36 SW#: 36 LEFT INSIDE BALL ADVANCE	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 CENTER COIN SWITCH	13 SW#: 13 LEFT BALL THROWER ("T")	21 SW#: 21 BALL ADVANCE 1	29 SW#: 29 TOP RIGHT STANDUP (10 PT)	37 SW#: 37 LEFT JET BUMPER	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 LEFT COIN SWITCH	14 SW#: 14 OUTHOLE	22 SW#: 22 BALL ADVANCE 2	30 SW#: 30 TOP RIGHT ROLLOVER (A/R)	38 SW#: 38 RIGHT JET BUMPER	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 SLAM TILT	15 SW#: 15 PLAYFIELD TILT	23 SW#: 23 BALL ADVANCE 3	31 SW#: 31 TOP CENTER ROLLOVER	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 SW#: 16 RIGHT BALL THROWER ("A")	24 SW#: 24 BALL ADVANCE 4	32 SW#: 32 TOP LEFT ROLLOVER (S/T)	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

World Cup Soccer by Williams

1 UNUSED	9 SW#: 21 SLAM TILT	17 SW#: 31 TROUGH 1 (RIGHT)	25 SW#: 41 GOAL TROUGH	33 SW#: 51 SKILL SHOT FRONT	41 SW#: 61 ROLLOVER 1 (HIGH)	49 SW#: 71 LEFT RAMP DIVERTED	57 SW#: 81 LEFT JET BUMPER
2 SW#: 12 MAGNA GOALIE BUTTON	10 SW#: 22 COIN DOOR CLOSED	18 SW#: 32 TROUGH 2	26 SW#: 42 GOAL POPPER OPTO	34 SW#: 52 SKILL SHOT CENTER	42 SW#: 62 ROLLOVER 2	50 SW#: 72 LEFT RAMP ENTRANCE	58 SW#: 82 UPPER JET BUMPER
3 SW#: 13 START BUTTON	11 SW#: 23 BUY EXTRA BALL	19 SW#: 33 TROUGH 3	27 SW#: 43 GOALIE IS LEFT	35 SW#: 53 SKILL SHOT REAR	43 SW#: 63 ROLLOVER 3	51 UNUSED	59 SW#: 83 LOWER JET BUMPER
4 SW#: 14 PLUMB BOB TILT	12 SW#: 24 ALWAYS CLOSED	20 SW#: 34 TROUGH 4	28 SW#: 44 GOALIE IS RIGHT	36 SW#: 54 RIGHT EJECT HOLE	44 SW#: 64 ROLLOVER 4 (LOW)	52 SW#: 74 LEFT RAMP EXIT	60 SW#: 84 LEFT SLINGSHOT
5 SW#: 15 LEFT FLIPPER LANE	13 SW#: 25 FREE KICK TARGET	21 SW#: 35 TROUGH 5 (LEFT)	29 SW#: 45 TV BALL POPPER	37 SW#: 55 UPPER EJECT HOLE	45 SW#: 65 TACKLE SWITCH	53 SW#: 75 RIGHT RAMP ENTRANCE	61 SW#: 85 RIGHT SLINGSHOT
6 SW#: 16 STRIKER 3 (HIGH)	14 SW#: 26 KICKBACK UPPER	22 SW#: 36 TROUGH STACK	30 UNUSED	38 SW#: 56 LEFT EJECT HOLE	46 SW#: 66 STRIKER 1 (LEFT)	54 SW#: 76 LOCK MECH. LOW	62 SW#: 86 KICKBACK
7 SW#: 17 RIGHT RETURN LANE	15 SW#: 27 SPINNER	23 SW#: 37 LIGHT MAGNA GOALIE	31 SW#: 47 TRAVEL LANE ROLLOVER	39 UNUSED	47 SW#: 67 STRIKER 2 (CENTER)	55 SW#: 77 LOCK MECH. HIGH	63 SW#: 87 UPPER LEFT LANE
8 SW#: 18 RIGHT OUTLANE	16 SW#: 28 LIGHT KICKBACK	24 SW#: 38 BALL SHOOTER	32 SW#: 48 GOALIE TARGET	40 UNUSED	48 UNUSED	56 SW#: 78 RIGHT RAMP EXIT	64 SW#: 88 UPPER RIGHT LANE

SW# number is the switch number as known to the game.

World Poker Tour by Stern

1 UNUSED	9 UNUSED	17 SW#: 33 LEFT DROP #1 (BOT)	25 SW#: 49 POP EJECT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 18 4-BALL #4 TROUGH (L)	18 SW#: 34 LEFT DROP #2	26 SW#: 50 RIGHT ORBIT HI	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 3 SHOOTER LANE VUK	11 SW#: 19 4-BALL #3 TROUGH	19 SW#: 35 LEFT DROP #3	27 SW#: 51 SHOOTER VUK EXIT	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 RIGHT DROP #1 (BOT)	12 SW#: 20 4-BALL #2 TROUGH	20 SW#: 36 LEFT DROP #4	28 SW#: 52 RIGHT RAMP MADE	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 5 RIGHT DROP #2	13 SW#: 21 VUK OPTO #1 TROUGH (R)	21 SW#: 37 LEFT DROP #5	29 SW#: 53 UPF EXIT	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 6 RIGHT DROP #3	14 SW#: 22 4-BALL OPTO STACKING	22 SW#: 38 LEFT DROP #6	30 SW#: 54 LEFT RAMP MADE	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 RIGHT DROP #4 (TOP)	15 SW#: 23 SHOOTER LANE	23 SW#: 39 LEFT DROP #7	31 SW#: 55 LEFT VUK	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 RIGHT ORBIT SPINNER	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 LEFT DROP #8 (TOP)	32 SW#: 56 UPF ABOVE LEFT VUK	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

World Poker Tour by Stern

Bank 2

1 SW#: 9 RIGHT RAMP ENTER	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 LOWER LEFT 10PT	25 SW#: 57 JAIL BARS BASH	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 10 MIDDLE DROP #1 (L)	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 LOWER LEFT TARGET	26 SW#: 58 JAIL BARS REST	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 MIDDLE DROP #2	11 SW#: 27 RIGHT SLINGSHOT	19 SW#: 43 LEFT ORBIT SPINNER	27 SW#: 59 TRANSFER TUBE	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 MIDDLE DROP #3	12 SW#: 28 RIGHT RETURN LANE	20 SW#: 44 LEFT ORBIT HI	28 SW#: 60 UPF STANDUP #1 (L)	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 MIDDLE DROP #4 (R)	13 SW#: 29 RIGHT OUTLANE	21 SW#: 45 POP STANDUP #1 (L)	29 SW#: 61 UPF STANDUP #2	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 LOWER RIGHT 10PT	14 SW#: 30 LEFT BUMPER	22 SW#: 46 POP STANDUP #2	30 SW#: 62 UPF STANDUP #3	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT BUMPER	23 SW#: 47 POP STANDUP #3	31 SW#: 63 JAIL BARS UP	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START BUTTON	16 SW#: 32 BOTTOM BUMPER	24 SW#: 48 POP STANDUP #4 (R)	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

XMen by Stern

1 SW#: 1 L. 2 BANK TARGET (BOT)	9 UNUSED	17 SW#: 33 RIGHT RETURN LANE (R)	25 SW#: 49 RIGHT ORBIT	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 SW#: 2 L. 2 BANK TARGET (TOP)	10 SW#: 18 TROUGH #4 LEFT	18 SW#: 34 ICEMAN HOME	26 SW#: 50 (L) HIT NIGHTCRAW	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 UNUSED	11 SW#: 19 TROUGH #3	19 SW#: 35 ICEMAN AWAY	27 SW#: 51 (R) HIT NIGHTCRAW	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 4 LEFT EJECT	12 SW#: 20 TROUGH #2	20 SW#: 36 WOLVERINE TARGET	28 SW#: 52 R. RAMP EXIT	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 UNUSED	13 SW#: 21 TROUGH #1 RIGHT	21 UNUSED	29 SW#: 53 CENTER LOCK 1 (BOTTOM)	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 UNUSED	14 SW#: 22 TROUGH JAM	22 SW#: 38 CENTER LOCK 2	30 SW#: 54 L. INNER LOOP	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 7 R. 2 BANK TARGET (TOP)	15 SW#: 23 SHOOTER LANE	23 SW#: 39 CENTER LOCK 3	31 SW#: 55 LEFT UPKICKER	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 8 R. 2 BANK TARGET (BOT)	16 SW#: 24 LEFT OUTLANE	24 SW#: 40 CENTER LOCK 4 (TOP)	32 SW#: 56 R. NIGHTCRAW DOWN	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

STERN S.A.M. GAMES CAN HAVE UP TO 128 SWITCHES (8 STROBES, 16 RETURNS). MANY GAMES ONLY USE SWITCHES #01-64, HOWEVER ALL 16 RETURN LINES ARE USED SO ONLY HALF OF THE SWITCHES CAN BE TESTED AT ONE TIME ON THE 64 SWITCH MATRIX TESTER. YOU EITHER NEED 2X WIRE HARNESSSES OR A SPLIT HARNESS (WITH THE 8 UPPER AND 8 LOWER RETURNS ON SEPARATE CONNECTORS) OR YOU COULD USE 2X 64 SWITCH MATRIX TESTERS TO HAVE COMPLETE ACCESS TO ALL 128 PLAYFIELD SWITCHES.

XMen by Stern

Bank 2

1 UNUSED	9 SW#: 25 LEFT RETURN LANE	17 SW#: 41 LIGHT LOCK TARGET (L)	25 UNUSED	33 UNUSED	41 UNUSED	49 UNUSED	57 UNUSED
2 UNUSED	10 SW#: 26 LEFT SLINGSHOT	18 SW#: 42 LIGHT LOCK TARGET (R)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 UNUSED
3 SW#: 11 L. RAMP EXIT	11 SW#: 27 RIGHT SLINGSHOT	19 UNUSED	27 UNUSED	35 UNUSED	43 UNUSED	51 UNUSED	59 UNUSED
4 SW#: 12 L. NIGHTCRAW DOWN	12 SW#: 28 RIGHT RETURN LANE (L)	20 UNUSED	28 UNUSED	36 UNUSED	44 UNUSED	52 UNUSED	60 UNUSED
5 SW#: 13 L. RAMP ENTRANCE	13 SW#: 29 RIGHT OUTLANE	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 UNUSED
6 SW#: 14 LEFT ORBIT	14 SW#: 30 LEFT POP BUMPER	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 SW#: 15 TOURNAMENT START	15 SW#: 31 RIGHT POP BUMPER	23 SW#: 47 RIGHT SPINNER	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 SW#: 16 START	16 SW#: 32 BOTTOM POP BUMPER	24 SW#: 48 R. RAMP ENTRANCE	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

Xenon by Bally

1 SW#: 1 END OF TUBE LANE	9 SW#: 2 BALL RELEASE #1	17 SW#: 3 UPPER SIDE TARGET	25 SW#: 4 LOWER SIDE TARGET	33 SW#: 5 SPINNER	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 TILT (3)	57 SW#: 8 OUTHOLE
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 UNUSED	34 UNUSED	42 UNUSED	50 UNUSED	58 SW#: 16 SLAM (2)
3 SW#: 17 #4 BUTTON	11 SW#: 18 #3 BUTTON	19 SW#: 19 #2 BUTTON	27 SW#: 20 #1 BUTTON	35 SW#: 21 #4 DROP TARGET	43 SW#: 22 #3 DROP TARGET	51 SW#: 23 #2 DROP TARGET	59 SW#: 24 #1 DROP TARGET
4 SW#: 25 SHOOTER LANE	12 SW#: 26 30 POINT (2) REBOUND	20 SW#: 27 TUBE SWITCH	28 SW#: 28 BALL RELEASE #2	36 SW#: 29 LEFT OUTLANE	44 SW#: 30 FLIP FEED LANE (LEFT)	52 SW#: 31 FLIP FEED LANE (RIGHT)	60 SW#: 32 RIGHT OUTLANE
5 SW#: 33 SIDE SAUCER	13 SW#: 34 TOP SAUCER	21 SW#: 35 RIGHT SLINGSHOT	29 SW#: 36 LEFT SLINGSHOT	37 SW#: 37 LOWER BUMPER THUMPER	45 SW#: 38 MIDDLE THUMPER BUMPER	53 SW#: 39 RIGHT BUMPER THUMPER	61 SW#: 40 LEFT THUMPER BUMPER
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

Xs Os by Bally

1 SW#: 1 3 DROP TARGET (LEFT)	9 SW#: 2 3 DROP TARGET (MIDDLE)	17 SW#: 3 3 DROP TARGET (RIGHT)	25 SW#: 4 SAUCER	33 SW#: 5 EXTRA BALL / 50,000 LANE	41 SW#: 6 CREDIT BUTTON	49 SW#: 7 30 POINT (4) REBOUND	57 SW#: 8 OUTHOLE KICKER
2 SW#: 9 COIN III (RIGHT)	10 SW#: 10 COIN I (LEFT)	18 SW#: 11 COIN II (MIDDLE)	26 SW#: 12 LEFT AND RIGHT OUTLANE	34 SW#: 13 RIGHT RETURN LANE	42 SW#: 14 SPECIAL / 100,000 LANE	50 SW#: 15 TILT (3)	58 SW#: 16 SLAM (2)
3 SW#: 17 LEFT RETURN LANE	11 SW#: 18 BOTTOM THUMPER BUMPER	19 SW#: 19 LEFT THUMPER BUMPER	27 SW#: 20 TOP THUMPER BUMPER	35 SW#: 21 TARGET RIGHT (TOP)	43 SW#: 22 TARGET RIGHT (CENTER)	51 SW#: 23 TARGET RIGHT (BOTTOM)	59 SW#: 24 "KILL" SKILL SHOT LANE
4 SW#: 25 TARGET LEFT (TOP)	12 SW#: 26 TARGET LEFT (CENTER)	20 SW#: 27 TARGET LEFT (BOTTOM)	28 SW#: 28 SKILL SHOT LANE	36 SW#: 29 TARGET (TOP) CENTER	44 SW#: 30 TARGET CENTER (CENTER)	52 SW#: 31 TARGET CENTER (BOTTOM)	60 SW#: 32 LEFT SIDE ARROW LANE
5 UNUSED	13 UNUSED	21 UNUSED	29 UNUSED	37 UNUSED	45 UNUSED	53 UNUSED	61 SW#: 40 BOTTOM LEFT AND RIGHT REBOUND
6 UNUSED	14 UNUSED	22 UNUSED	30 UNUSED	38 UNUSED	46 UNUSED	54 UNUSED	62 UNUSED
7 UNUSED	15 UNUSED	23 UNUSED	31 UNUSED	39 UNUSED	47 UNUSED	55 UNUSED	63 UNUSED
8 UNUSED	16 UNUSED	24 UNUSED	32 UNUSED	40 UNUSED	48 UNUSED	56 UNUSED	64 UNUSED

SW# number is the switch number as known to the game.

SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.