

RAK button device configuration Setup

Step1: Signup

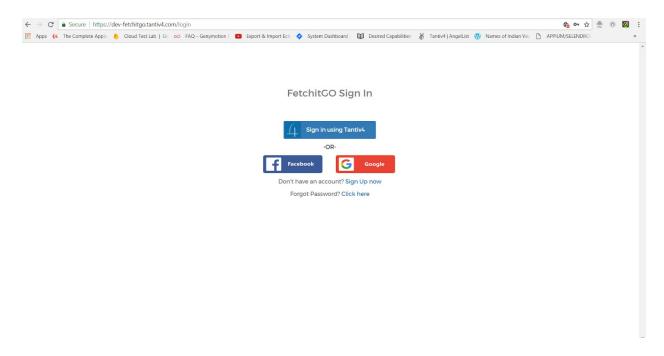

Create your account at dev-fetchitgo.tantiv4.com and Sign Up through Tantiv4


Step 2 : SignIn

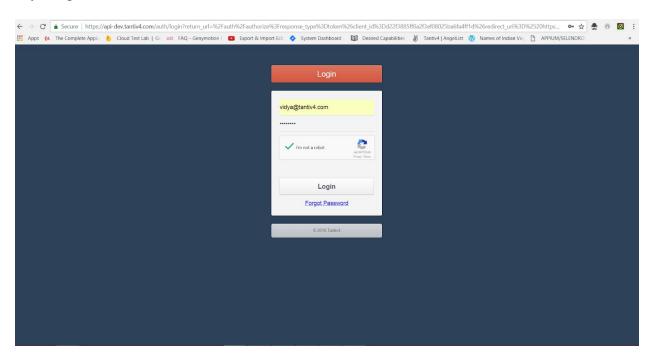


Once you have signed up, go head and login

Step3: Add RAK Device


-> Click on **Beta Link** and click on **RAK** option it will show **Device List page**.

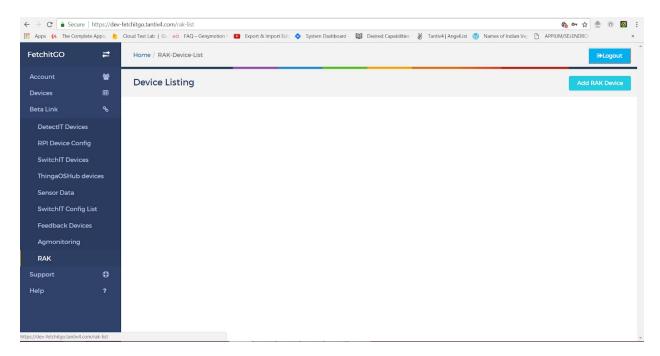

-> In **Devices listing page** by clicking on "**Add RAK Device**" tab you can add device either by entering serial number/customer ID or by Scanning QR code.

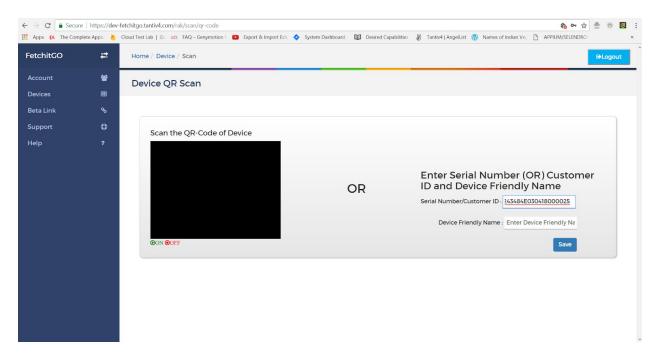


-> Click on **save** button after entered Serial number/customer ID or by Scanning QR code. Device will be added to your account.

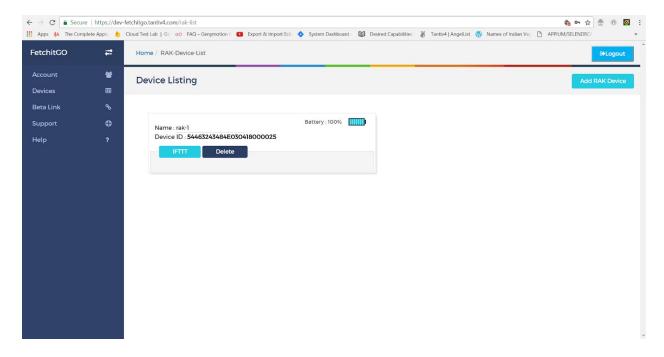


-> When devices gets added successfully device ID and device name is shown.

Step 4 : Device-Configuration


-> Click on the **IFTTT** option at the bottom of the added device box. You will be directed to the Device-Action viewing page with 4 buttons.

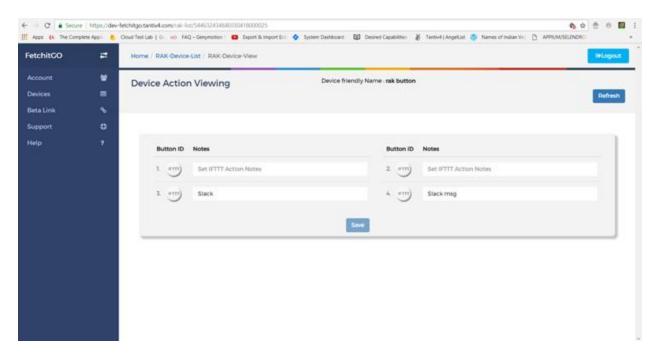


- ->Click on **button** it will re-direct to **IFTTT page**.
- ->Create New Applet in IFTTT

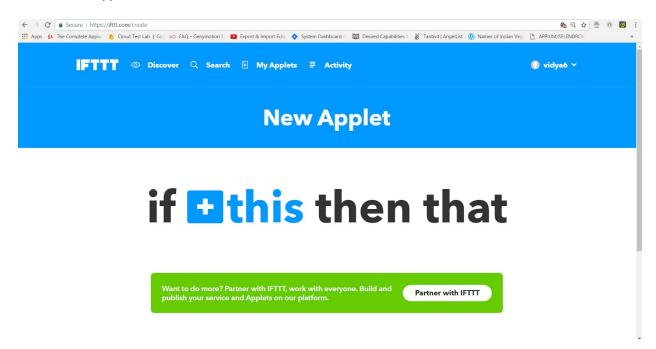

-> Click on + this and choose service as Thinga(Staging) it will show Choose Trigger page.

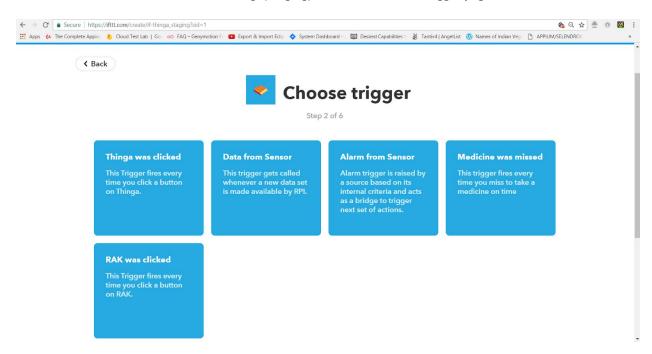

->Click on RAK was clicked it will show Complete Trigger fields page with device id and button number.

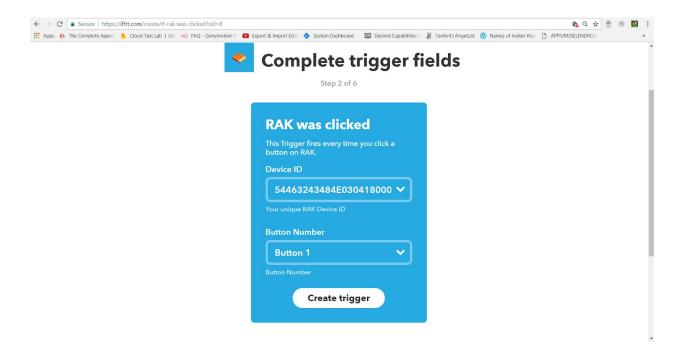

- ->Configure the device with Device ID, Button number and click on **Create Trigger**.
- ->Select +that it will show Choose Action Services page and Select any services like Gmail, Slack and etc..

Step 5 : Contact

For question or support : support@tantiv4.com