Smart Thermostat State Machine

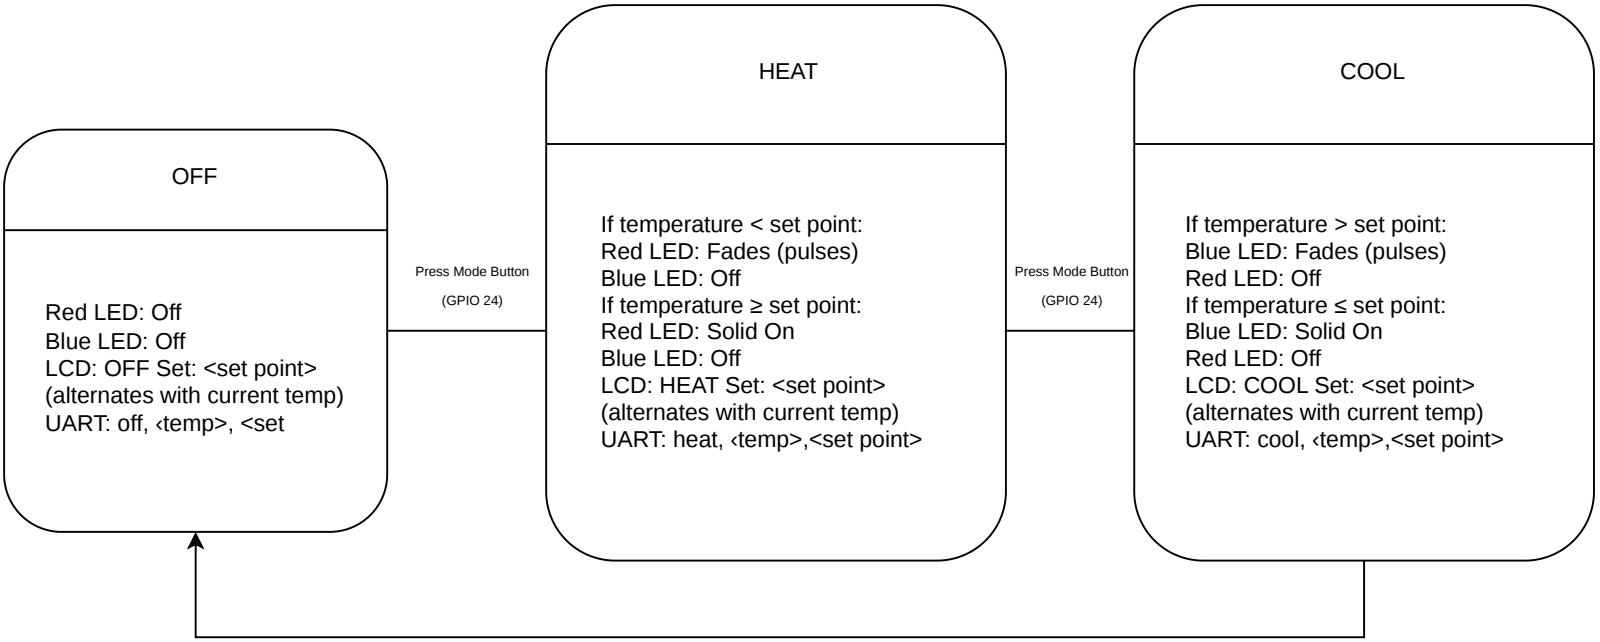

Press Mode Button (GPIO 24)

Temperature Adjustment Buttons

Press Increase Button (GPIO 25): Increase set point by 1°F

Press Decrease Button (GPIO 12): Decrease set point by 1°F

These buttons do not change the current state.

They only adjust the temperature set point.

Additional Information

- Default set point: 72°F
- LCD first line: Current date and time
- LCD second line: Alternates between current temperature and thermostat mode with set point (every ~5 seconds)
- UART: Sends mode, current temperature, and set point every 30 seconds (e.g., heat, 71.5,72)