


Water Circulation Guide


Starting the Water Circulation:

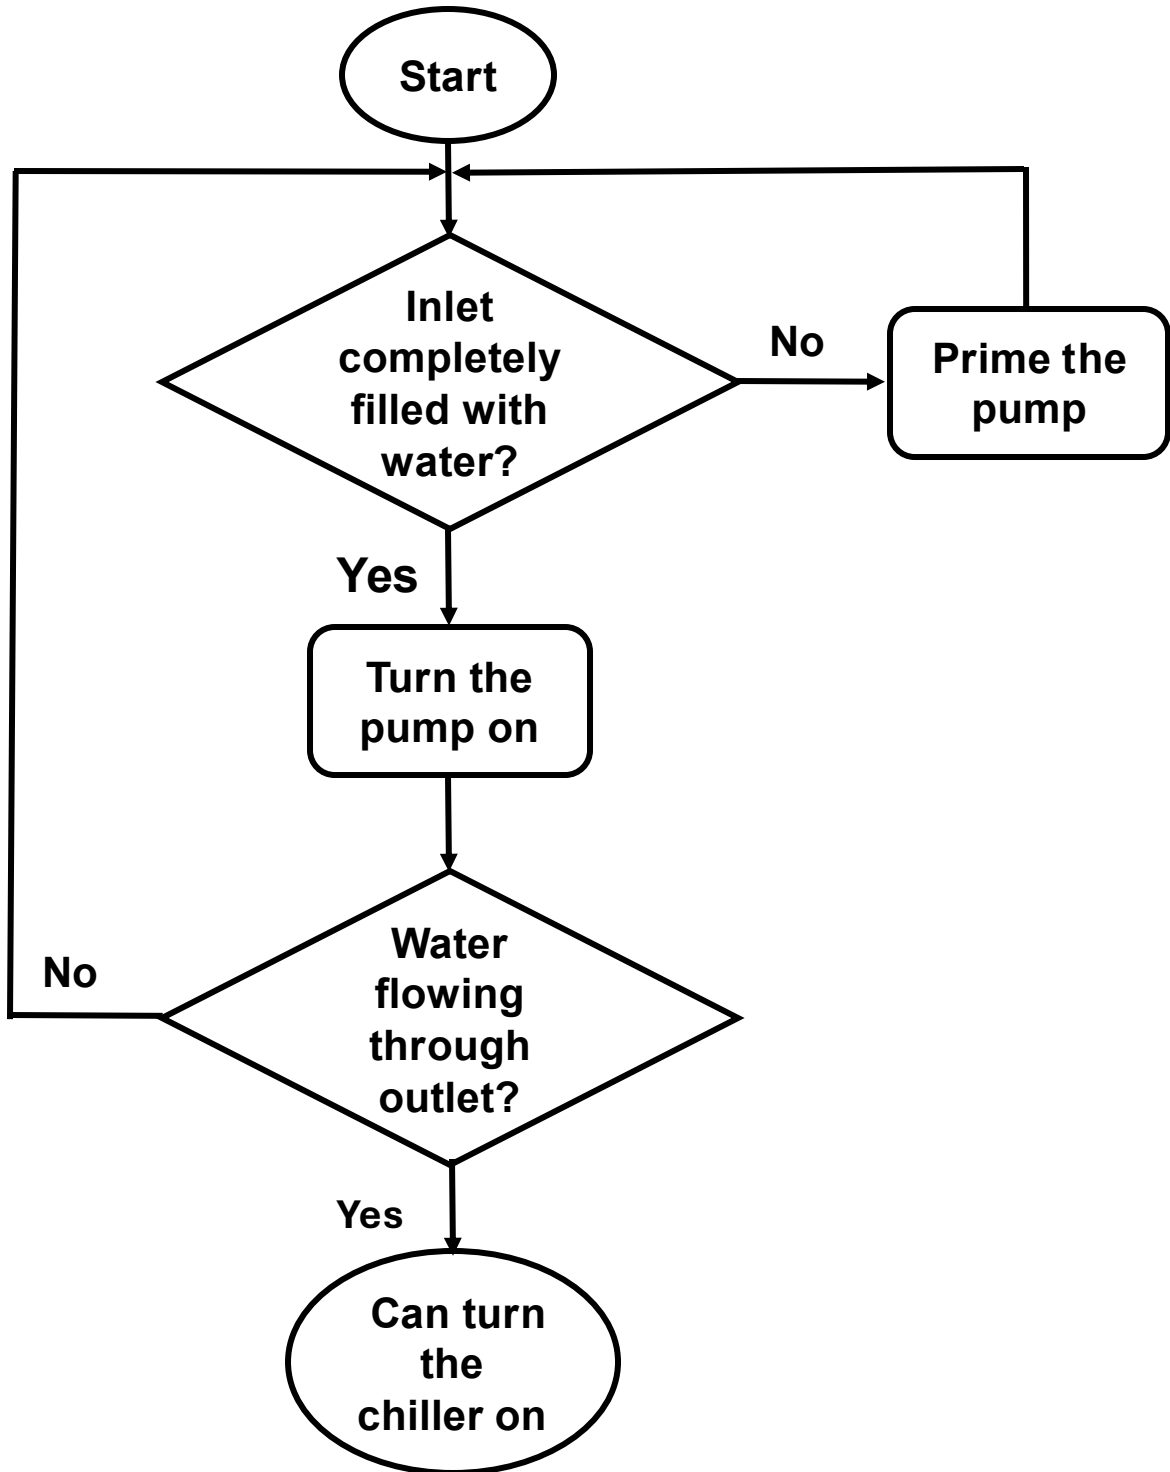

- *If the pump is making noise, check the priming. If the noise persists replace the mechanical seal.*

Water Circulation Guide

Stopping the Water Circulation:

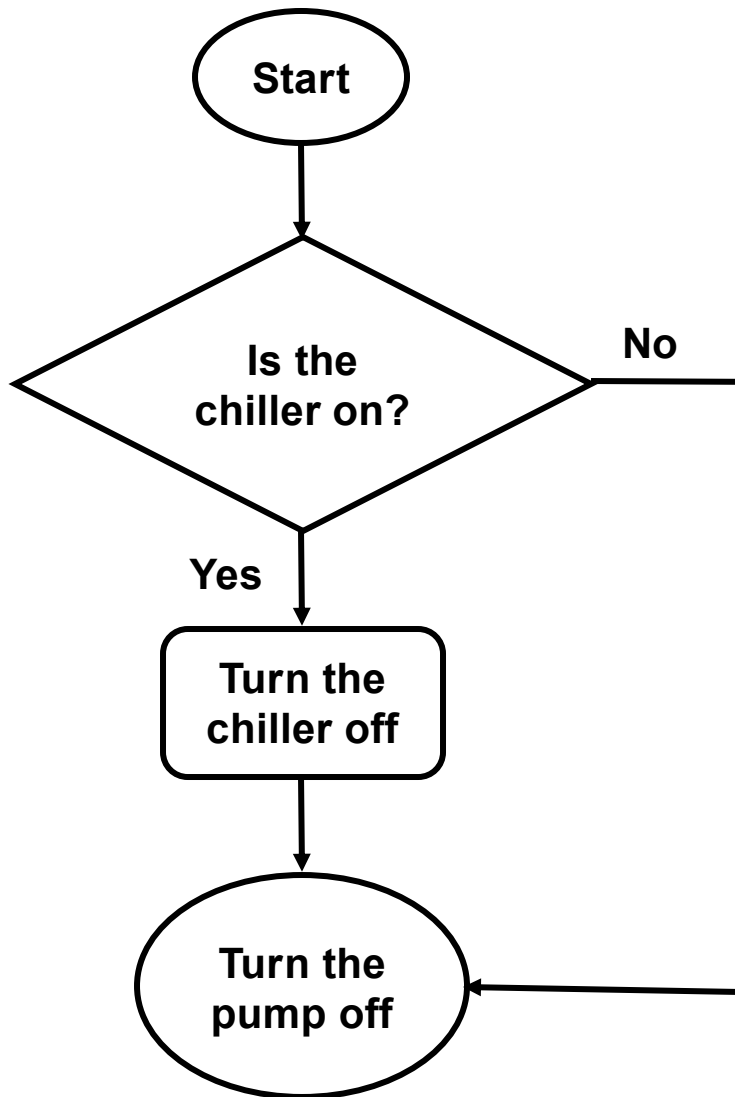

- *It is important to turn the chiller off if there is no water circulation to prevent the damage to the chiller.*

Pump Priming Guide

1. Open both inlet and outlet ports by removing the plug.

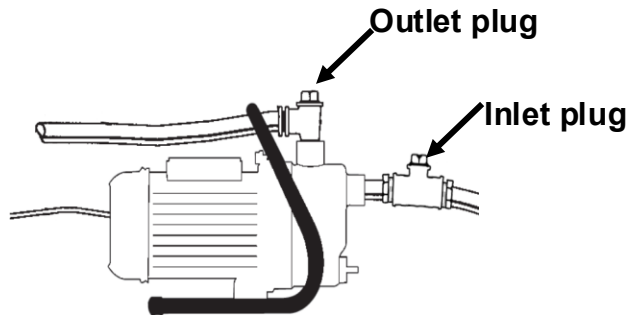


Fig 1: Red Lion RJSE-75SS pump

2. Fill the outlet port with water (as shown in Fig 2) until the inlet line and the pump body are completely filled with water.

You may need to shake the inlet line to help trapped air escape.

It is important to have both port open to allow the air from the inlet and pump body to escape.

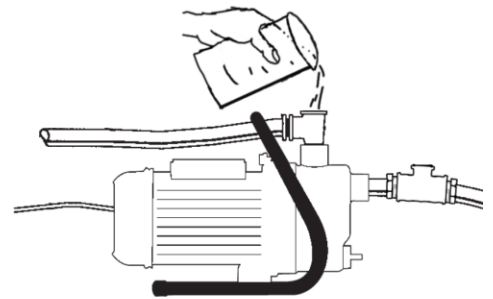


Fig 2: Priming the pump

3. Close both inlet and outlet ports.

If properly primed, the unit should start pumping immediately. If not repeat the priming procedure.