



Edison Electric Table - ELE-TB

Assembly Instructions



How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.



VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts




Assembled in USA



Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

| | | | | |
|--|---|--|---|--|
|  Qty:10 |  Qty:8 |  Qty:20 |  Qty:16 |  Qty:4 |
|  Qty:2 |  Qty:2 |  Qty:1 |  Qty:2 |  Qty:1 |
|  Qty:2 |  Qty:1 |  Qty:1 | | |
|  Qty:1 |  Qty:8 |  Qty:1 |  Qty:1 | |
|  Qty:1 |  Qty:1 | | | |

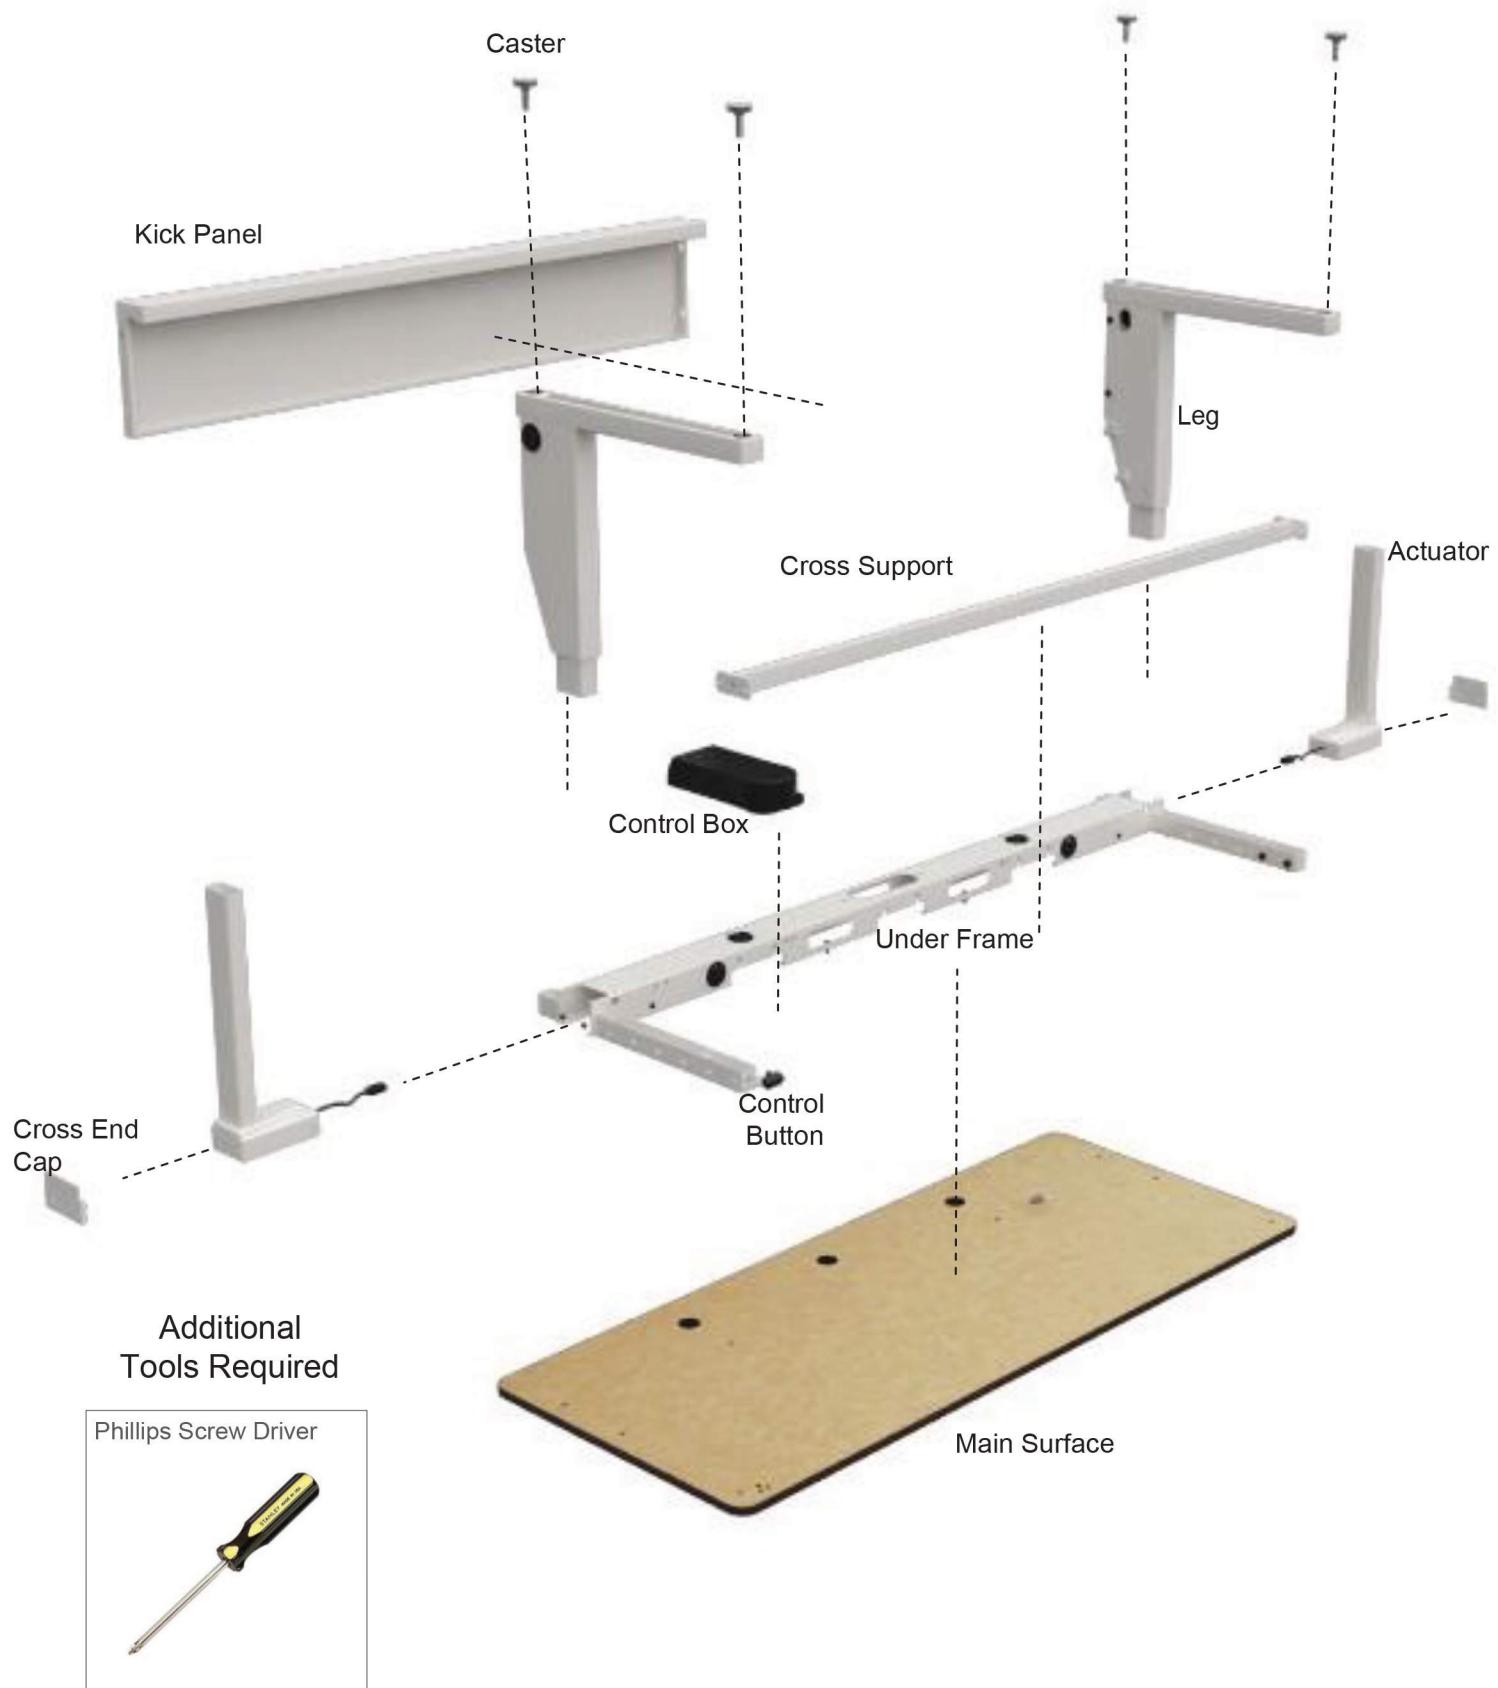

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

Support:

Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com



CONTROLLER**Step 1** Control Button

3/4 Phillips Pan



Qty:2

Attach the Controller to Main Surface using (2) Phillips Pan Head Screws.

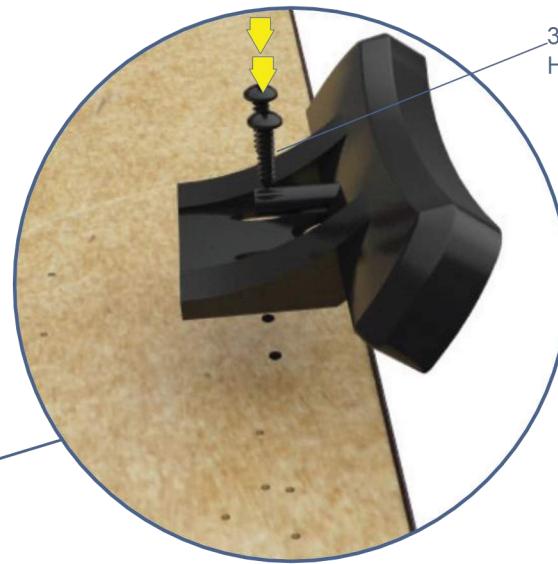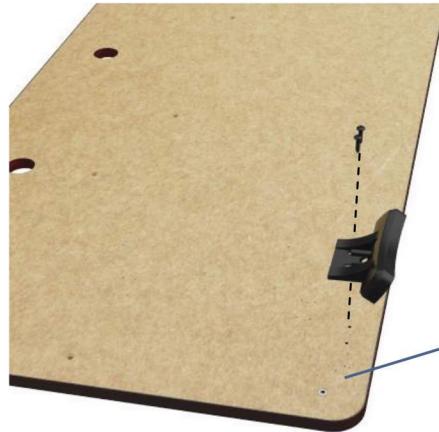3/4 Phillips Pan
Head Screw**VersaTables.com**
14105 Avalon Blvd.
Los Angeles, CA 90061

Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com


Step 2 Control Box

3/4 Phillips Pan Head Screw




Qty:4

Fasten Control Box to the Main Surface using (4) Phillips Pan Head Screws. Sockets should face towards the front of the table.

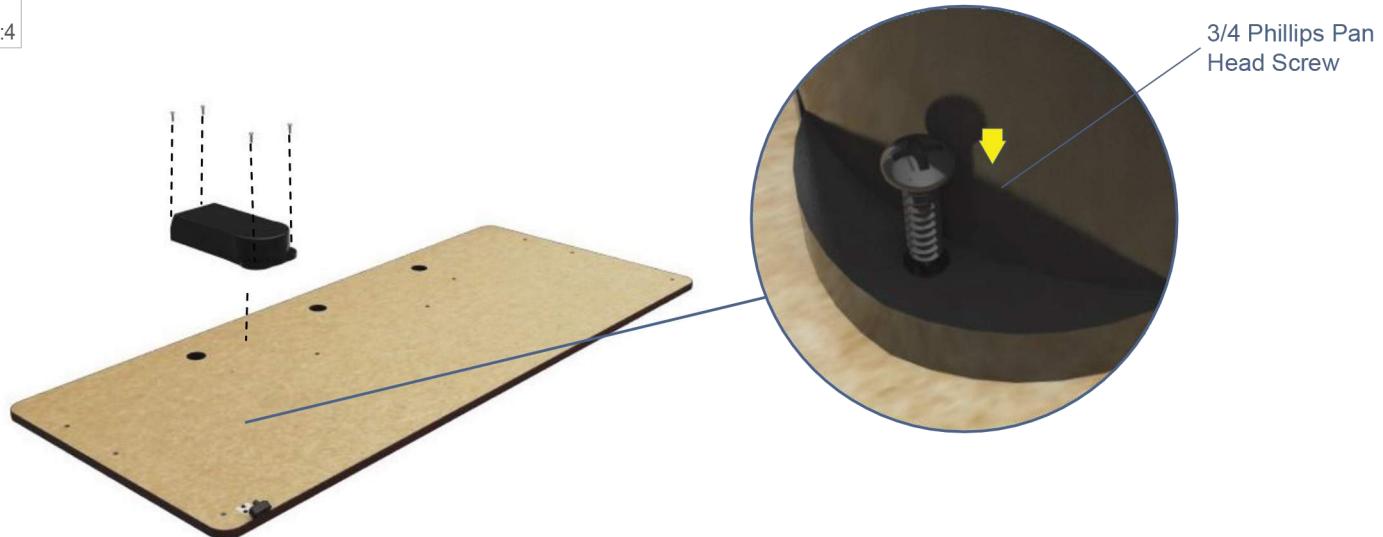**Step 3** Control Button Cable

Run Control Button Cable through Under Frame.

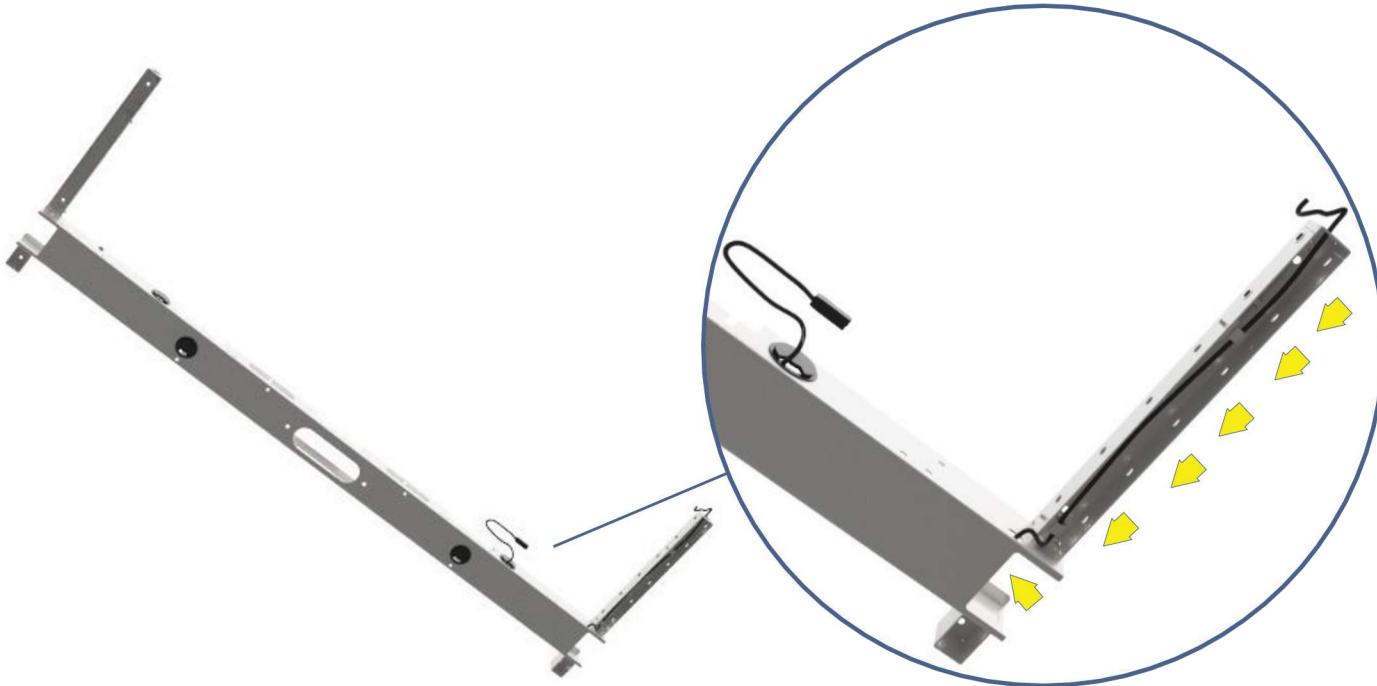

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com


Step 4

1/4-20 Phillips Head Bolt



Qty:8

Fasten Under Frame to Main Surface using (8) 1/4-20 Phillips Head Bolts.

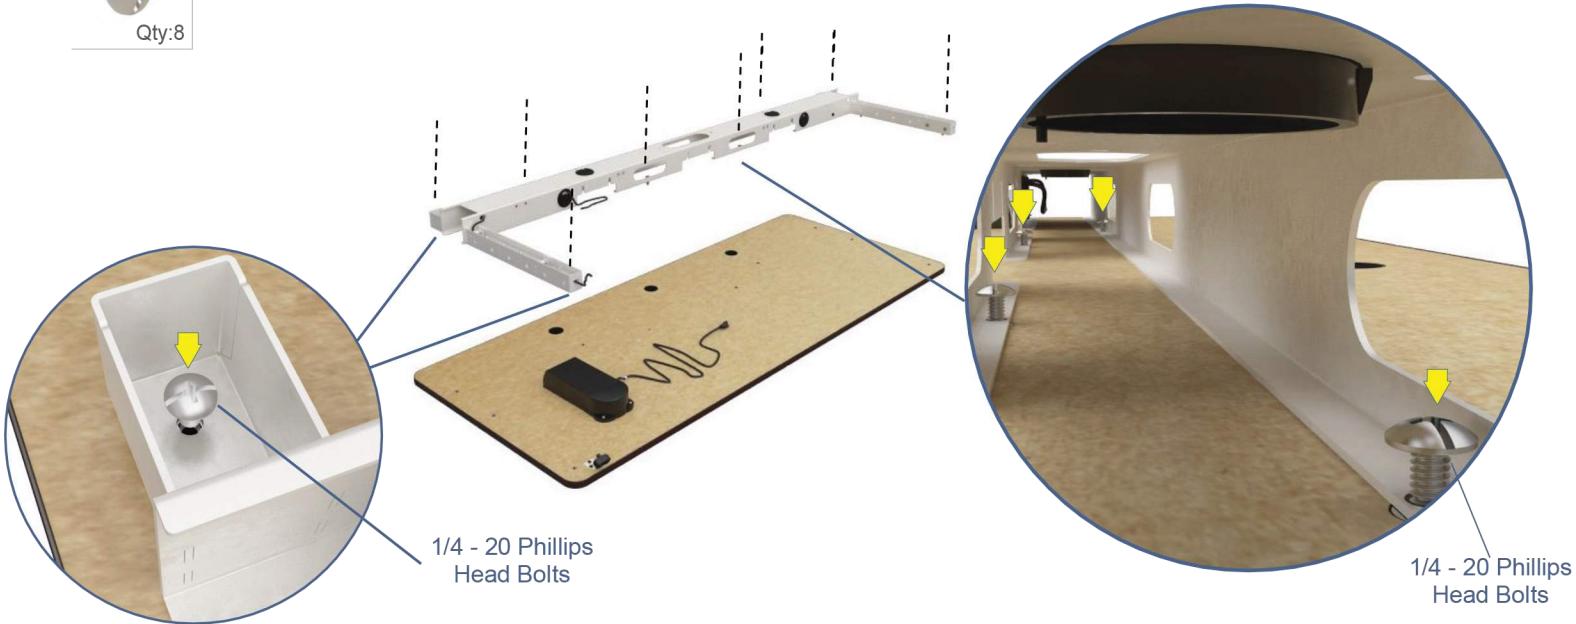


Step 5

Patch Cord



Qty:2

Connect a Patch Cord to each Actuator.

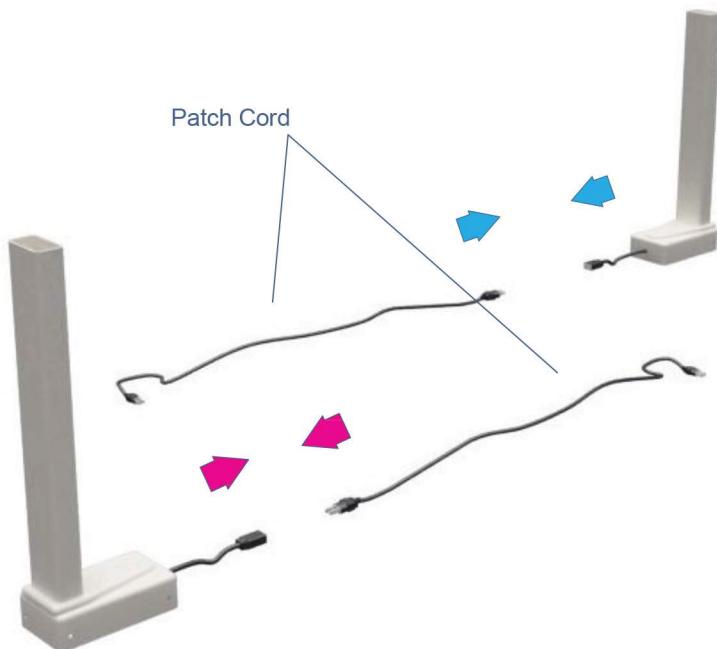

Under Frame

5

Sales:

Local: 310-353-7100

Toll Free: 888-929-0322


Fax: 310-353-7109

Support@VersaTables.com

Step 6

Actuators


Insert Actuators into sides of Under Frame.

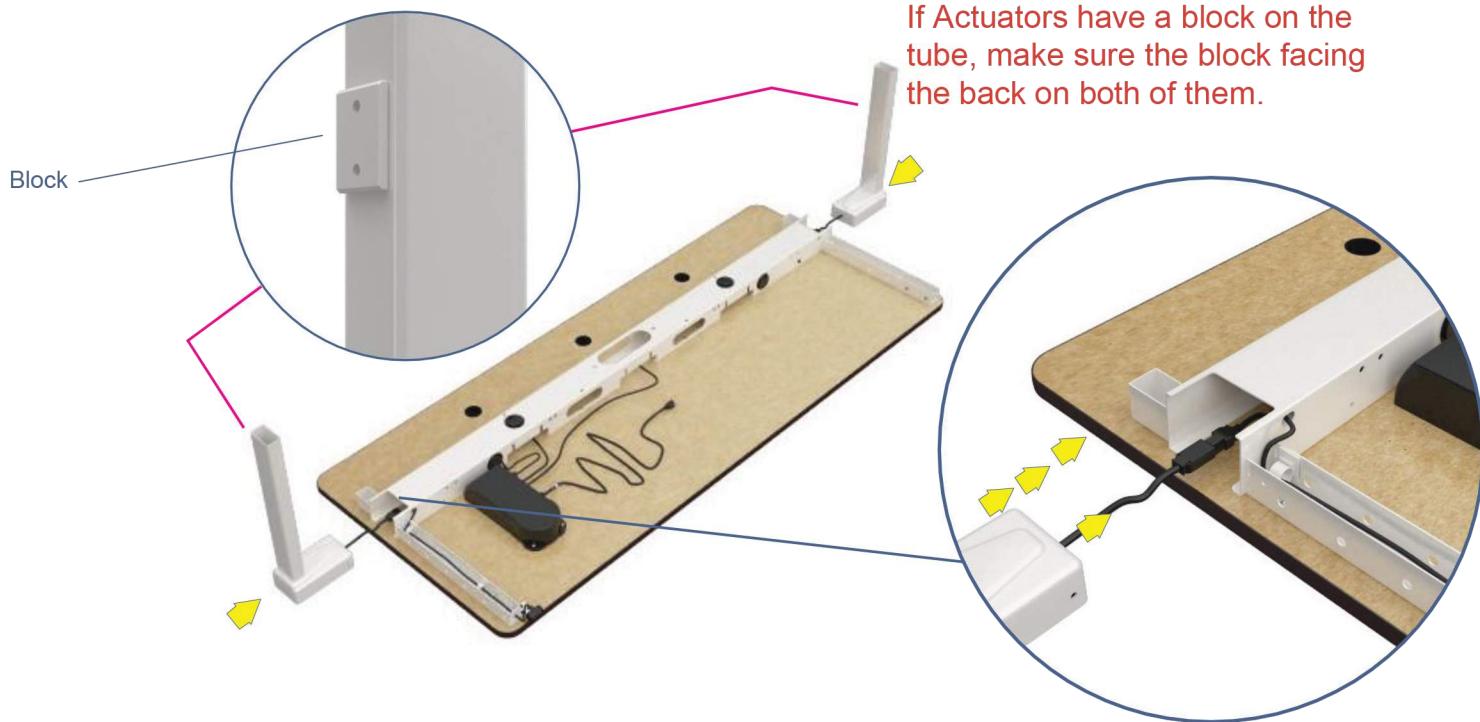

Step 7

Actuators

Secure Actuators to Under Frame using (2) M6 Screws on each Actuator.

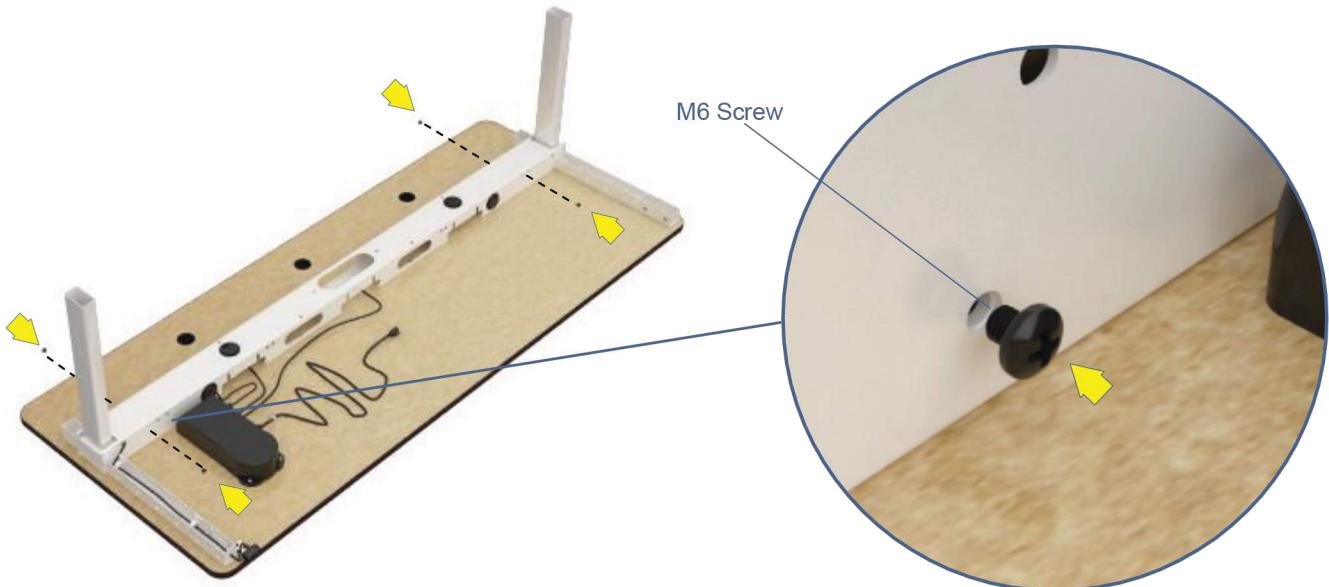

14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA

**Support:**

Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Step 8


Plugging in

3/4 Phillips Pan Head Screw



Qty:1

Make sure Actuators and Control Button are connected to Control Box.

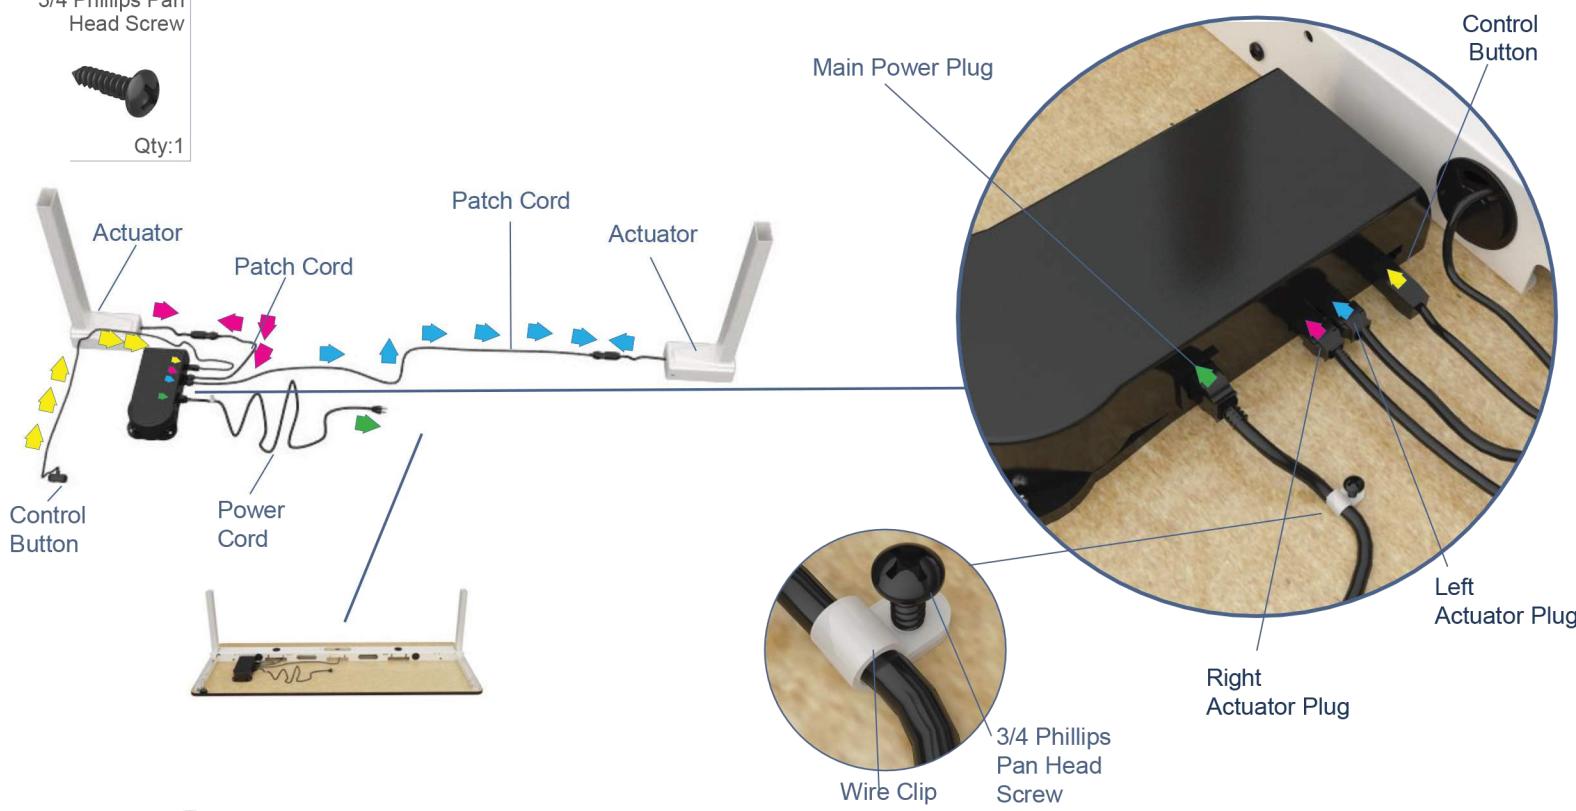

Step 9

Actuators

M6 Screw




Qty:4

3/4 Phillips Pan Head Screw



Qty:8

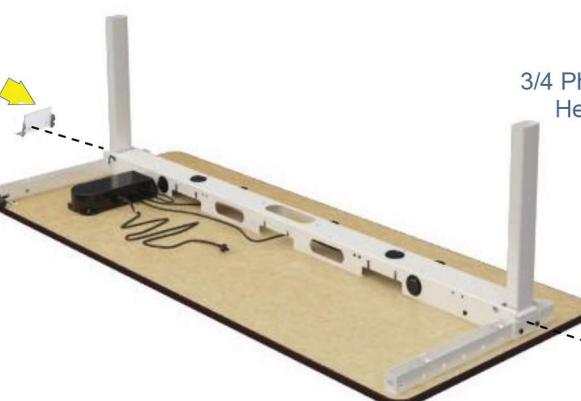

Snap Cross End Cap into Under Frame and then fasten.




Step 10

Attach Legs to Actuators using (4) M6 Screws on each Leg.

M6 Screw
Qty:8



M6 Screw

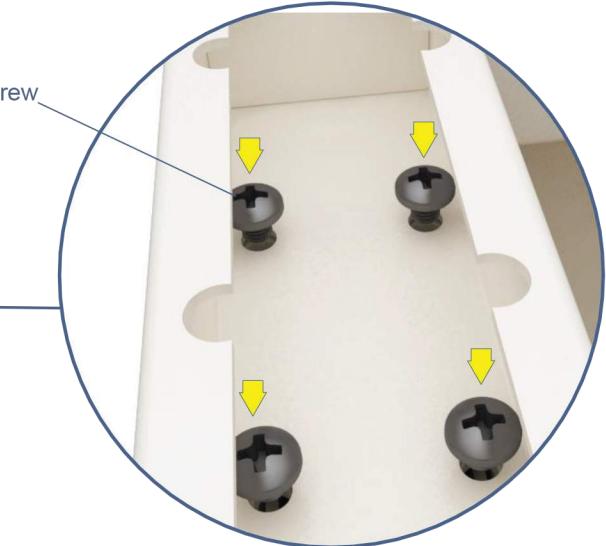



Step 11

Kick Panel

Attach Kick Panel to Actuators using (2) 20mm Furniture Bolts on each side.

20mm
Furniture Bolt
Qty:4

Screw Bolts Half way on one side first to hold up Kick Panel, then screw in the other side and tighten.

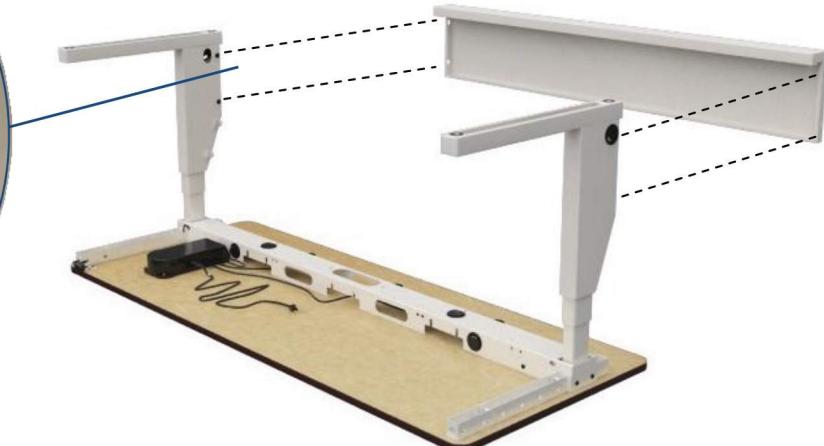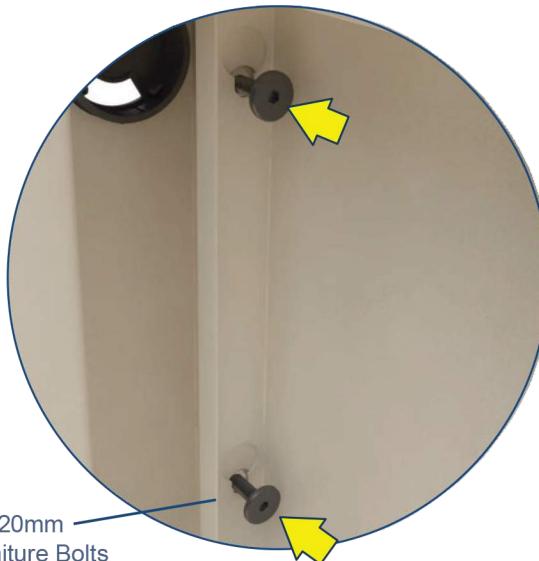

20mm
Furniture Bolts



VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com


Step 12

Attach Casters to Legs.

Caster



Qty:4

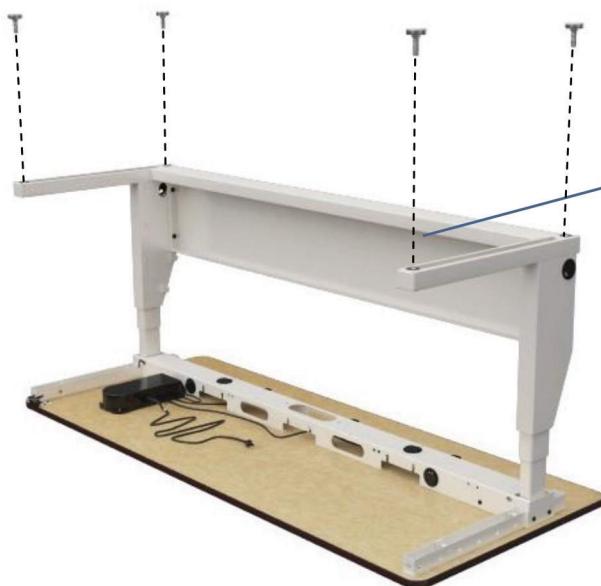

Step 13


Cross Support

Attach Cross Support using (4) 20mm Furniture Bolts.

20mm Furniture Bolt



Qty:4

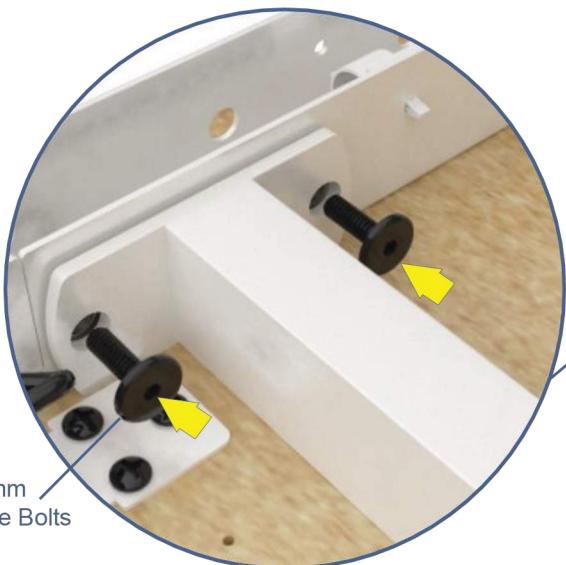

VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

Support:
Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com

Step 14

Test and Flip Over Table

Once assembled, the table needs to be plugged in and run all the way up and down three times while upside down to calibrate the Actuators. **Make sure all of the Screws/Bolts are fully tightened and then flip the table over.**



Table can be flipped over and assembly is complete.



Instructions For Programming Controller With The Presets



How To Store a Memory Position

Favorite positions e.g. for sitting and/or standing can be stored. Follow the described procedure.

How to store a position:

1. Drive Table's surface to the height you wish to store.
2. Press 'S' and then the memory button you wish to store that height.
Your position has now been stored.

To recall your memory position, press the memory button until you reach the stored position.

Images show 4 different height parameters stored on buttons. You can set your own.

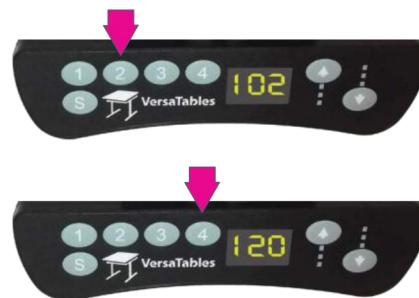
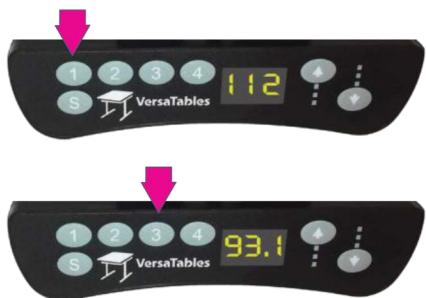


Table Will Not Go Up Only Down.

How to reset your desk

The desk cannot drive up if it has not been initialized.
If display: error code E01

How to Reset:

1. Press down key and drive to the lowest position.
Hold the key until the desk stops completely.
2. Reactivate the down key and hold the key until the desk stops completely.
Now the desk can drive up.

How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.



VersaTables.com
14105 Avalon Blvd.
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

Support:

Local: 310-353-7100
Toll Free: 888-929-0322
Fax: 310-353-7109
Support@VersaTables.com