

FC:


target:	GEPRC_TAKER_F405 AIO
MCU:	STM32F405BGA
IMU:	ICM 42688-P
BLACKBOX:	16MB
Baro:	YES
BEC:	2.5A
Size:	31.5mm x 31.5mm
Install hole:	25.5mm x 25.5mm
Input Voltage:	2-4S LiPo
Uart:	6 Set

ESC:

Continuous Current:	20A
Burst Current:	25A(4S)
Input Voltage:	2-4S(8.4V-14.8V)
Firmwar:	Bluejay




Interface definition:

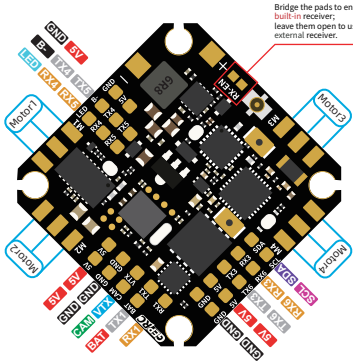

Bridge the pads to enable the built-in receiver; leave them open to use an external receiver.

DJI FPV Digital System :



Identifier	Configuration/MSP	Serial RX
USB VCP	☐ 115200 ▾	☐
UART1	☒ 115200 ▾	☐
UART2	☐ 115200 ▾	☒

Receiver

Serial (Via UART) ▾ Receiver Mode


•The UART for the receiver must be set to "Serial Rx"(in the Ports tab)
•Select the correct data format from the drop-down,below:

SBUS ▾ Serial Receiver Provider




If using an external receiver,
disconnect this line


Bridge the corresponding pads to select
the desired VTX power-supply voltage.

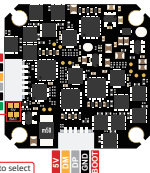


Analog VTX:

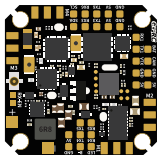

GERPC RAD MINI VTX

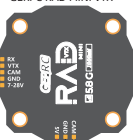


Caddx Rater



Identifier	Configuration/MSP		Peripherals
USB VCP	☒ 115200 ▾		Disabled ▾ AUTO ▾
UART1	☒ 115200 ▾	➔	VTX (IRC Tramp) ▾ AUTO ▾
UART2	☐ 115200 ▾		Disabled ▾ AUTO ▾

Receiver: (TBS Nano RX/ELRS)

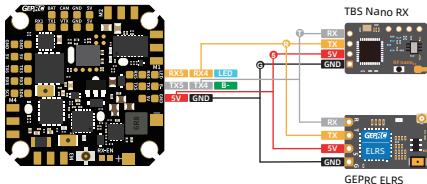

	Identifier	Configuration/MSP	Serial Rx	Telemetry Output	
Presets	USB VCP	☒ 115200 ▾	☐	Disabled ▾	AUTO ▾
PID Tuning	UART1	☒ 115200 ▾	☐	Disabled ▾	AUTO ▾
Receiver	UART2	☐ 115200 ▾	☐	Disabled ▾	AUTO ▾
Modes	UART3	☐ 115200 ▾	☐	Disabled ▾	AUTO ▾
Adjustments	UART4	☐ 115200 ▾	☐	Disabled ▾	AUTO ▾
Motors	UART4	☐ 115200 ▾	☒	Disabled ▾	AUTO ▾

PID

Receiver

Modes

Receiver



Serial(via UART) ▾ Receiver Mode

The UART for the receiver must be set to 'Serial Rx'(in the Ports tab)
Select the correct data format from the drop-down,below:



CRSF ▾ Serial Receiver Provider

Receiver: (Frsky R-xsr)


This socket is on the back

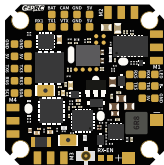

RX5 RX4 LED
TX5 TX4 B-
5V GND



Identifier	Configuration/MSP	Receiver
USB VCP	☒ 115200 ▼	☐
UART1	☐ 115200 ▼	☐
UART2	☒ 115200 ▼	☒



Receiver

Serial(via UART) Receiver Mode

The UART for the receiver must be set to 'Serial Rx'(in the Ports tab)
Select the correct data format from the drop-down, below:

SBUS Serial Receiver Provider

GPS:

Setup

Ports

Configuration

Power&Battery

Failsafe

Identifier		Sensor Input	
USB VCP		Disabled ▾	AUTO ▾
UART1		Disabled ▾	AUTO ▾
UART2		Disabled ▾	AUTO ▾
.....		 ▾	 ▾
UART6	→	GPS ▾	115200 ▾

Setup

Ports

Configuration

Power&Battery

Failsafe


☒ GPS GPS for navigation and telemetry

UBLOX ▾ protocol

☒ Auto Baud

☒ Auto Config

☐ Set Home Point Once



Buzzer&LED:

GEPRC Super Buzzer





BZ-
5V
GND

BUZZER



GND 5V
BZ- TX4 TX5
LED RX4 RX5

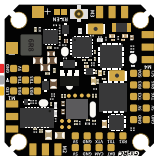

DIN
5V
GND

LED

LED Setup:

- Setup
- Ports
- Configuration**
- Power&Battery
- Failsafe

Other Features

- ☐ SERVO_TILT
- ☐ SOFTSERIAL
- ☐ SONAR
- ☐ TELEMERY
- ☒ LED_STRIP

Servo gimbal

Enable CPU based serial ports

sonar

Telemetry output

Multi-color RGB LED strip support

- Motors
- VideoTransmitter
- LED Strip**
- Sensors
- Tethered Logging

LED Strip Wiring

Wire Ordering Mode

Clear selected


Clear ALL Wiring



Choose a color for each LED

LED Functions

- Function Color
- Color modifier Throttle Blink Blink always
- ☐ Larson scanner
- Overlay
- ☐ Warnings
- ☐ Indicator
- ☐ VTX (uses vtx frequency to assign color)
- LED Orientation ('Modes&Orientaion') and Color



Definition of USB Tuning Board Wiring:



CAUTION:

- 1 Aircraft of 3 inches or more need to install a capacitor, which is included in the package.
 - 2 All wires should try to avoid the gyroscope, so as not to affect the normal work of the gyroscope.
 - 3 After soldering, please check that all connections are correct to avoid damage after power-on.
-

facebook

facebook.com/geprc



Official
website

www.geprc.com



Instagram

instagram.com/geprc



You Tube

youtube.com/geprc



Manual

geprc.com/support



飞控参数

固件目标:	GEPRC_TAKER_F405 AIO
主控:	STM32F405BGA
陀螺仪:	ICM 42688-P
黑匣子:	16MB板载闪存
气压计:	YES
BEC 5V:	2.5A
最大外尺寸:	31.5mm x 31.5mm
安装孔位:	25.5mm x 25.5mm
输入电压:	2-4S
Uart串口:	6个

电调参数

持续电流:	20A
瞬间电流:	25A(4S)
支持电池:	2-4s (8.4V-14.8V)
固件:	Bluejay



DJI 数字图传：



标识符	设置/MSP	串行数字接收机
USB VCP	☐ 115200 ▾	☐
UART1	☒ 115200 ▾	☐
UART2	☐ 115200 ▾	☒

接收机

Serial (Via UART) ▾ 接收机模式

注意：使用串行接收机时，请选择串口接收机类型，并在串口页面设置相应的串口。


SBUS ▾ 串行数字接收机协议

DJI O3 AIR Unit:	7.4-26.4v
DJI AIR Unit :	7.4-17.6v
DJI Vista :	7.4-26.4v




焊接时应注意，
可选择相应图传供电电压

如果使用外置接收机，请断开此线

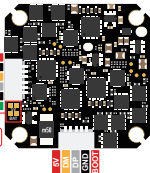


模拟图传：

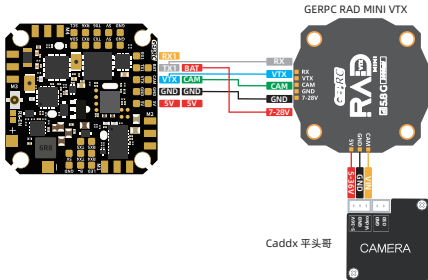

设置	标识符	设置/MSP	外设
端口	USB VCP	☐ 115200 ▼	已禁用 ▼ AUTO ▼
配置	UART1	☒ 115200 ▼	VTX (IRC Tramp) ▼ AUTO ▼
	UART2	☐ 115200 ▼	已禁用 ▼ AUTO ▼

接收机:(TBS Nano RX/ELRS)

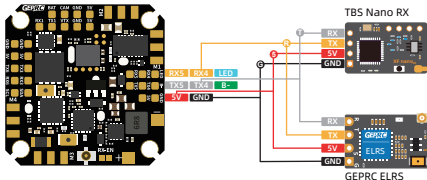

预设	标识符	设置 / MSP	串行数字接收机	遥测输出
PID调校	USB VCP	☒ 115200 ▼	☐	已禁用 ▼ AUTO ▼
接收机	UART1	☒ 115200 ▼	☐	已禁用 ▼ AUTO ▼
模式	UART2	☐ 115200 ▼	☐	已禁用 ▼ AUTO ▼
调整	UART3	☐ 115200 ▼	☐	已禁用 ▼ AUTO ▼
电机	UART4	☐ 115200 ▼	☒	已禁用 ▼ AUTO ▼

PID调校

接收机

模式




接收机

Serial(via UART) ▼ 接收机模式

注意: 使用串行接收机时, 请选择串行接收机类型, 并在串口页面设置相应的串口

CRSF ▼ 串行数字接收机协议

接收机:(Frsky R-xsr)

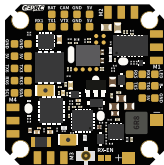

标识符	设置/MSP	串行数字接收机
USB VCP	☒ 115200 ▼	☐
UART1	☐ 115200 ▼	☐
UART2	☒ 115200 ▼	☒

接收机

Serial(via UART) ▼
 接收机模式



注意: 使用串行接收机时, 请选择串行接收机类型, 并在串口页面设置相应的串口

SBUS ▼
 串行数字接收机协议

GPS:



标识符		传感器输入	
USB VCP		已禁用	AUTO
UART1		已禁用	AUTO
UART2		已禁用	AUTO
.....			
UART6	→	GPS	115200




蜂鸣器&LED:


GEPRC 超级蜂鸣器



蜂鸣器



LED灯带

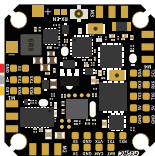

外置LED设置:

设置

端口

配置

动力&电池

失控保护

其他功能

☐ SERVO_TILT

舵机云台

☐ SOFTSERIAL

启用软串口

☐ SONAR

声呐

☐ TELEMERY

遥测输出

☒ LED_STRIP

彩色RGB LED灯带

电机

图传

LED设置

传感器

日志

LED Strio Wiring

布线模式

清除已选定

清除所有布线



给每个LED选择一个颜色

LED 功能

基本功能

颜色修改器

闪烁

☐ 油门

☐ 持续闪烁

☐ 左右扫描


叠加功能

☐ 警告

☐ 指示灯

☐ 图传 (根据图传频率而变化)

LED方向 ('模式'和'方向') 和颜色



USB调参板接线定义：



注意事项：

- 1 3寸及3寸以上的飞行器需要安装电容，包装内附带了一颗。
 - 2 焊接的电线尽量避开陀螺仪，以免影响陀螺仪正常工作。
 - 3 装机后请仔细检查连线是否正确，保持飞控整体干净 无多余焊锡残留。
-

格普官方QQ群：499699918

格普官方微信：



wechat

格普淘宝：



geprc.taobao.com

格普官网：



www.geprc.com