

FC:


target:	GEPRC_F722_AIO
MCU:	STM32F722RET6
IMU:	ICM 42688-P
BLACKBOX:	16MB
Baro:	YES
BEC:	5V 3A
Size:	35.0mm x 34.3mm
Install hole:	25.5mm x 25.5mm
Input Voltage:	2-6S LiPo
Uart:	5 Set

ESC:

Continuous Current:	35A
Burst Current:	45A(5S)
Input Voltage:	2-6S (8.4-25.2V)
Firmwar:	BLHeli32



Interface definition:

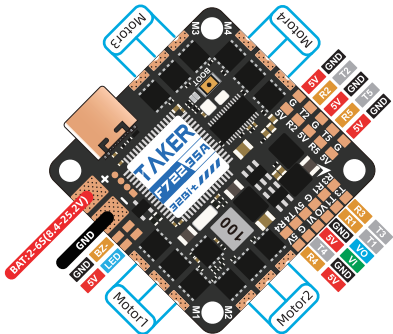


Buzzer&LED:

GEPRC Super Buzzer



BUZZER




LED


BZ-
5V
GND

GND BZ-
5V LED

DIN
5V
GND

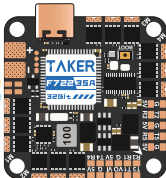

DJI FPV Digital System:




Identifier	Configuration/MSP	Serial RX
USB VCP	☒ 115200 ▾	☐
UART1	☒ 115200 ▾	☐
UART2	☐ 115200 ▾	☒

Receiver

Serial (Via UART) ▾ Receiver Mode




- The UART for the receiver must be set to 'Serial Rx'(in the Ports tab)
- Select the correct data format from the drop-down,below:

SBUS ▾ Serial Receiver Provider

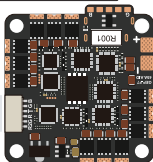


If using an external receiver,
disconnect this line

Receiver: (TBS Nano RX/ELRS)

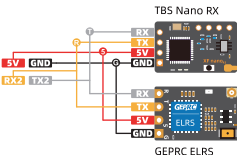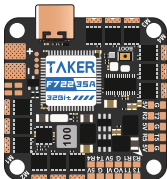

Identifier	Configuration/MSP	Receiver
USB VCP	☒ 115200 ▼	☐
UART1	☐ 115200 ▼	☐
UART2	☒ 115208 ▼	☒




Receiver

Serial(via UART) Receiver Mode

The UART for the receiver must be set to "Serial Rx" (in the Ports tab)
Select the correct data format from the drop-down, below:

CRSF Serial Receiver Provider

CineLog30 V3 Custom Feature Edition:

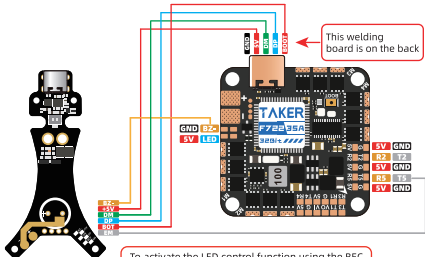

To activate the LED control function using the BEC on the EM pin, flash this configuration:

```
resource SERIAL TX 5 none
resource PINIO 2 C12
set pinio config = 129,1,1,1
set pinio box = 39,40,41,42
save
```

Then, open the "Modes" tab and enable the channel switch



GPS:

Setup

Ports

Configuration

Power&Battery

Failsafe

Identifier		Sensor Input	
USB VCP		Disabled ▾	AUTO ▾
UART1		Disabled ▾	AUTO ▾
UART2		Disabled ▾	AUTO ▾
.....		 ▾	 ▾
UARY4	→	GPS ▾	115200 ▾

Setup

Ports

Configuration

Power&Battery

Failsafe


☒ GPS GPS for navigation and telemetry

UBLOX ▾ protocol

☒ Auto Baud

☒ Auto Config

☐ Set Home Point Once



LED Setup:

Setup

Ports

Configuration

Power&Battery

Failsafe

Other Features

☐ SERVO_TILT

Servo gimbal

☐ SOFTSERIAL

Enable CPU based serial ports

☐ SONAR

sonar

☐ TELEMERY

Telemetry output

☒ LED_STRIP

Multi-color RGB LED strip support

Motors

VideoTransmitter

LED Strip

Sensors

Tethered Logging

LED Strip Wiring

Wire Ordering Mode

Clear selected

Clear ALL Wiring



Choose a color for each LED

LED Functions

Function **Color**

Color modifier **Throttle** Blink ☐ Blink always

☐ Larson scanner


Overlay

☐ Warnings


☐ Indicator

☐ VTX (uses vtx frequency to assign color)


LED Orientation: ('Modes&Orientation') and Color




Analog VTX:

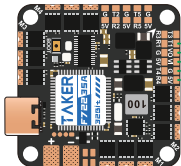

GERPC RAD MINI VTX


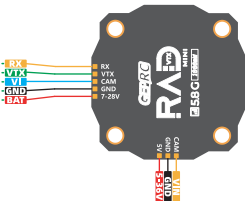


Caddx Rater




Identifier	Configuration/MSP		Peripherals
USB VCP	☐ 115200 ▼		Disabled ▼ AUTO ▼
UART1	☒ 115200 ▼	➔	VTX(IRC Tramp) ▼ AUTO ▼
UART2	☐ 115200 ▼		Disabled ▼ AUTO ▼

Receiver: (Frsky R-xsr)

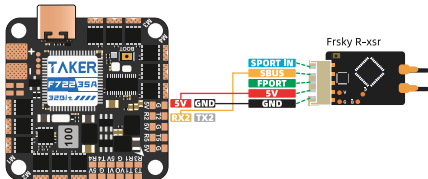

Identifier	Configuration/MSP	Receiver
USB VCP	☒ 115200 ▼	☐
UART1	☐ 115200 ▼	☐
UART2	☐ 115200 ▼	☒





Receiver

Serial(via UART) ▼ Receiver Mode

The UART for the receiver must be set to 'Serial Rx'(in the Ports tab)
Select the correct data format from the drop-down,below:

SBUS ▼ Serial Receiver Provider

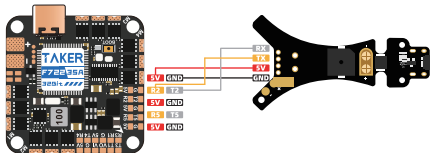

CAUTION:

- 1 Aircraft of 3 inches or more need to install a capacitor, which is included in the package.
 - 2 All wires should try to avoid the gyroscope, so as not to affect the normal work of the gyroscope.
 - 3 After soldering, please check that all connections are correct to avoid damage after power-on.
-

facebook

facebook.com/geprc



Official
website

www.geprc.com



Instagram

instagram.com/geprc



You  Tube

youtube.com/geprc



Manual

geprc.com/support



飞控参数


固件目标:	GEP RC_F722_AIO
主控:	STM32F722RET6
陀螺仪:	ICM 42688-P
黑匣子:	16MB板载闪存
气压计:	YES
BEC 5V:	3A
最大外尺寸:	35.0mm x 34.3mm
安装孔位:	25.5mm x 25.5mm
输入电压:	2-6S
Uart串口:	5个

电调参数

持续电流:	35A
瞬间电流:	45A(5S)
支持电池:	2-6s (8.4-25.2V)
固件:	BLHeli32



接口定义:

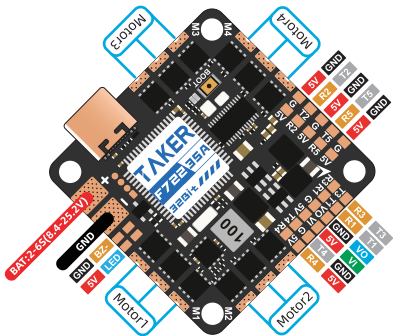

蜂鸣器&LED:

GEPRC 超级蜂鸣器




BZ-
5V
GND

蜂鸣器




GND BZ-
5V LED



LED灯带

DIN
5V
GND

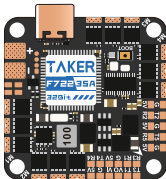

DJI 数字图传：




标识符	设置/MSP	串行数字接收机
USB VCP	☐ 115200 ▼	☐
UART1	☒ 115200 ▼	☐
UART2	☐ 115200 ▼	☒

接收机

串行接收机(通过UART) 接收机模式



注意：使用串行接收机时，请选择串口接收机类型，并在串口页面设置相应的串口。

SBUS 串行数字接收机协议

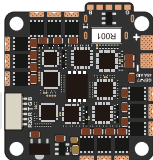

如果使用外置接收机，请断开此线


接收机:(TBS Nano RX/ELRS)

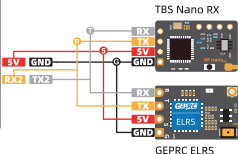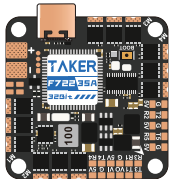

设置	标识符	设置/MSP	串行数字接收机
端口	USB VCP	☒ 115200 ▼	☐
配置	UART1	☐ 115200 ▼	☐
动力&电池	UART2	☐ 115200 ▼	☒
失控保护			

PID调校	接收机
接收机	串行接收机(通过UART) ▼ 接收机模式
模式	CRSF ▼ 串行数字接收机协议

Cinelog30 V3 专用功能板

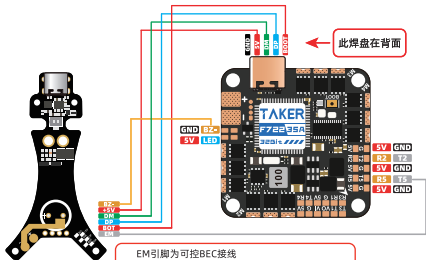

EM引脚为可控BEC接线
想实现可控BEC开关灯带功能需要刷入此代码：
resource SERIAL TX 5 none
resource PINIO 2 C12
set pinio config = 129,1,1
set pinio box = 39,40,41,42
save


刷了此代码后，“模式”界面打开此通道开关即可



GPS:



标识符		传感器输入	
USB VCP		已禁用	AUTO
UART1		已禁用	AUTO
UART2		已禁用	AUTO
.....			
UART4	→	GPS	115200



外置LED设置:

设置

端口

配置

动力&电池

失控保护

其他功能

☐ SERVO_TILT

☐ SOFTSERIAL

☐ SONAR

☐ TELEMERY

☒ LED_STRIP

舵机云台

启用软串口

声呐

遥测输出

彩色RGB LED灯带

电机

图传

LED设置

传感器

日志

LED Strio Wiring

布线模式

清除已选定

清除所有布线



给每个LED选择一个颜色

LED 功能

基本功能

颜色修改器

闪烁

☐ 油门

☐ 持续闪烁

☐ 左右扫描

叠加功能

☐ 警告


☐ 指示灯

☐ 图传 (根据图传频率而变化)

LED方向 ('模式'和'方向') 和颜色




模拟图传：

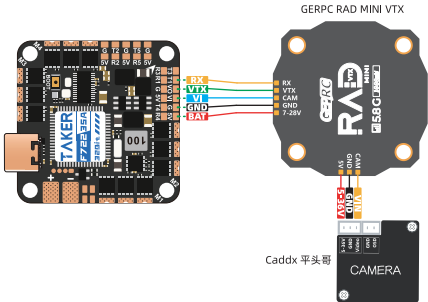

设置	标识符	设置/MSP		外设
🔌 端口	USB VCP	☒ 115200 ▾		已禁用 ▾ AUTO ▾
⚙️ 配置	UART1	☒ 115200 ▾	➡️	VTX(IRC Tramp) ▾ AUTO ▾
	UART2	☐ 115200 ▾		已禁用 ▾ AUTO ▾

接收机:(Frsky R-xsr)

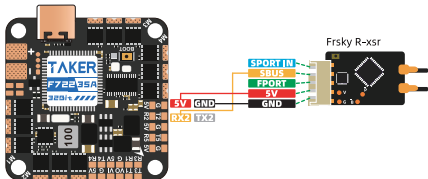

标识符	设置/MSP	串行数字接收机
USB VCP	☒ 115200 ▼	☐
UART1	☐ 115200 ▼	☐
UART2	☐ 115200 ▼	☒





接收机

串行接收机(通过UART) 接收机模式

注意: 使用串行接收机时, 请选择串行接收机类型, 并在串口页面设置相应的串口

SBUS 串行数字接收机协议

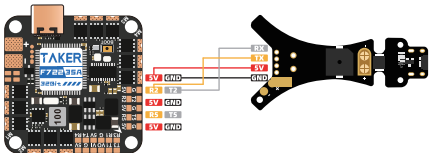

注意事项：

- 1 3寸及3寸以上的飞行器需要安装电容，包装内附带了一颗。
 - 2 焊接的电线尽量避开陀螺仪，以免影响陀螺仪正常工作。
 - 3 装机后请仔细检查连线是否正确，保持飞控整体干净 无多余焊锡残留。
-

格普官方QQ群：499699918

格普官方微信：



wechat

格普淘宝：



geprc.taobao.com

格普官网：



www.geprc.com