
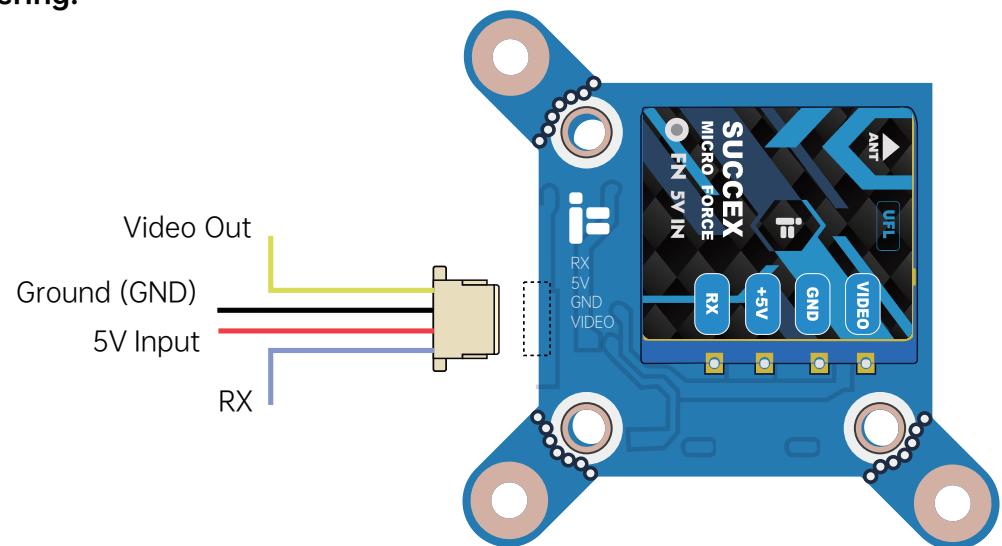
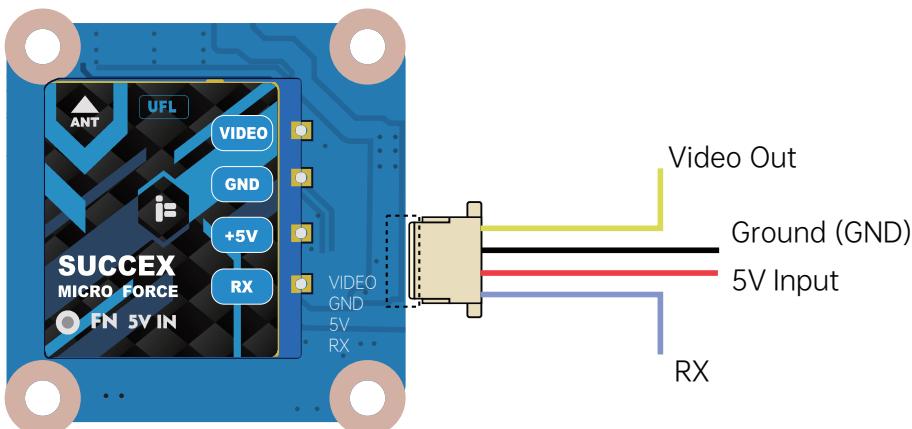


SucceX-Force MICRO 5.8G

25mW/100mW/200mW/300mW

Wiring Diagram


Careful: Make sure to correctly align and orientate the board extender before soldering!

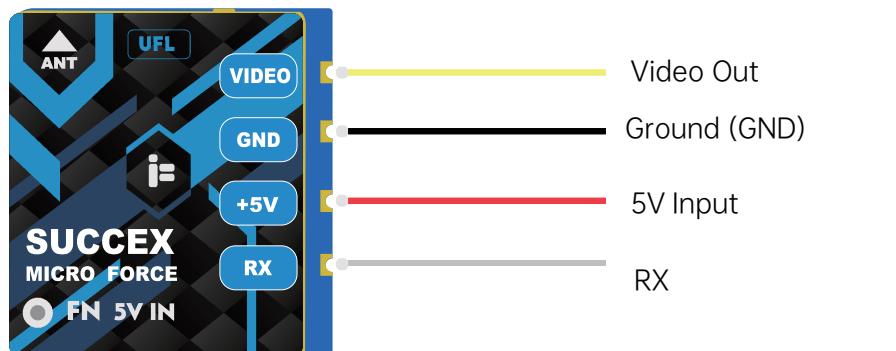

▲ The RX wire can be linked to any free UART TX on your Flight Control and setup for IRC Tramp VTX telemetry to change parameters of your VTX through your OSD.

▲ If you experience severe signal interference in your video feed please inspect your power source for electrical noise. Some common issues are too long motor screws, no additional capacitor added to your ESC, bad or noisy motors, bad or noisy ESC.

LED Indicator and Button

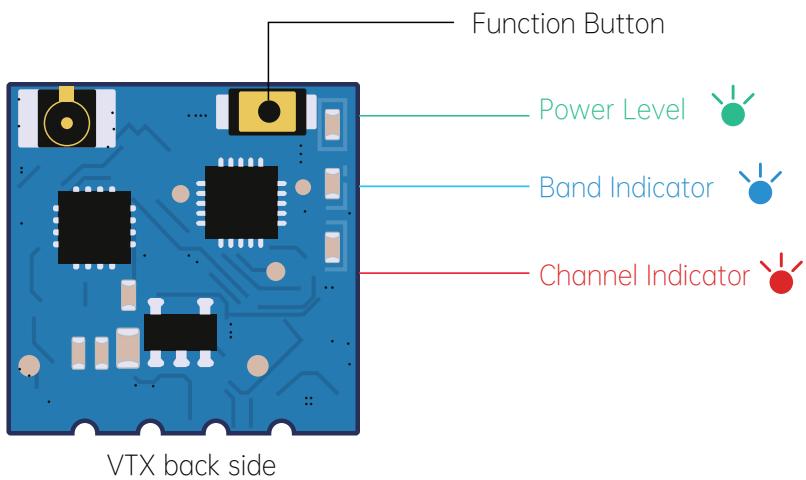

Long press for 2 seconds to switch groups between Channel, Band and Power Level. Short press to change the setting in the group.

For Example: Hold the Function Button for 2 seconds and release it to get into the Channel Group. Short press and count the red LED flashes for desired Channel setting. Long Press to cycle to the Band group etc.

