



Defender 16/20 F411 AIO Wiring Diagram

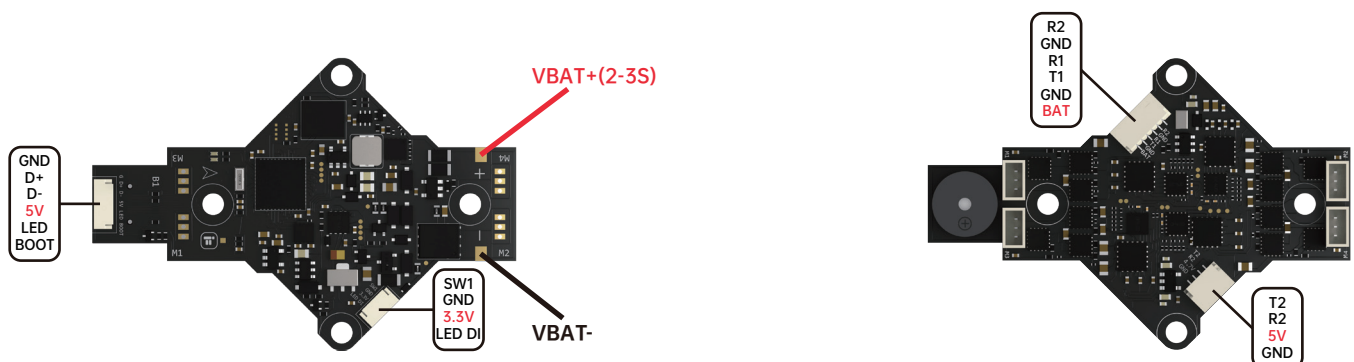


Notice

FC Firmware: JFLIGHT DEFENDER F411
ESC Firmware: Q-H-50 - Bluejay, 0.16

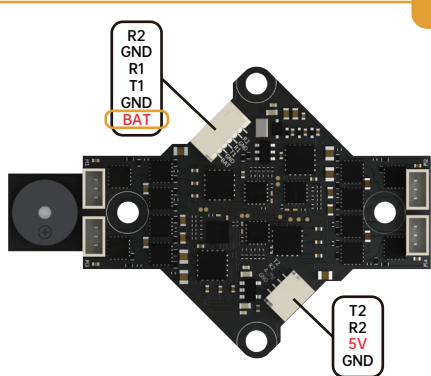


BAT is a controllable output port. When the DJI Air Unit or any VTX is connected to BAT, ensure that VTX ON OFF is always enable in Betaflight (place the AUX in any idle one), and set the AUX channel corresponding to the remote control switch if you wanna the VTX power to be controllable.



DJI Digital Transmitters: SUBS Protocol

To use the sbus signal receiver, the RX2 inverted needs to be turned on in Betaflight mode.

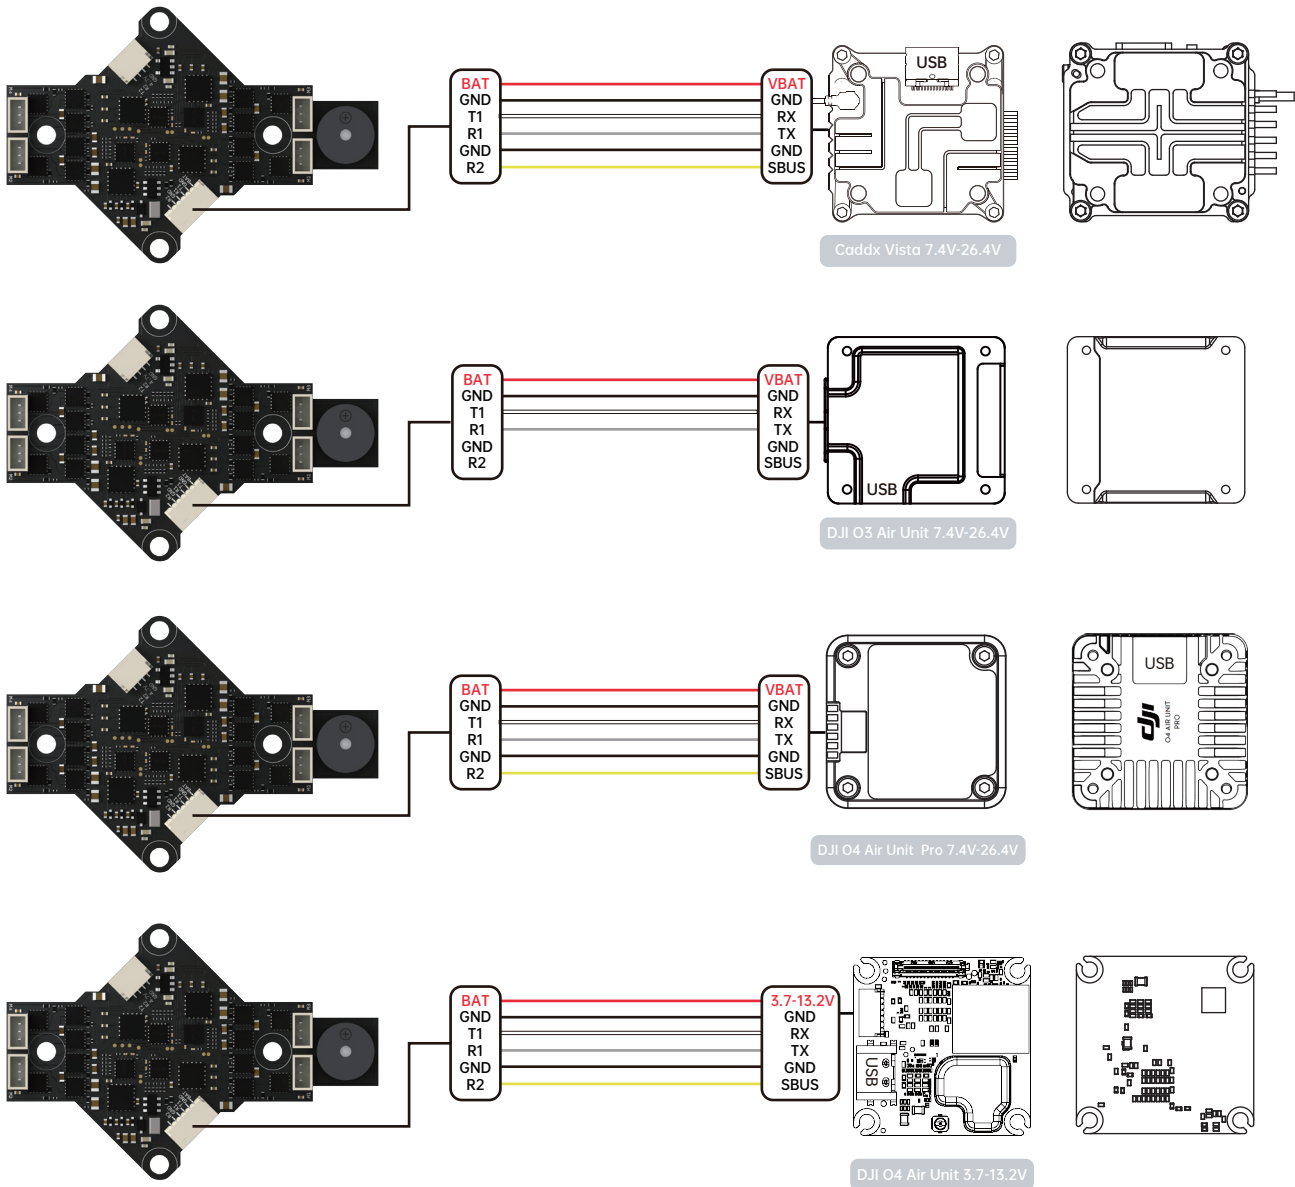


Receiver	Configuration	Serial Rx	Receiver Config	Serial Rx Config	Receiver
Receiver	115200	3	Disabled	AUTO	Disabled
UART1	115200	3	Disabled	AUTO	Disabled
UART2	115200	3	Disabled	AUTO	Disabled

Receiver	Configuration	Serial Rx	Receiver Config	Serial Rx Config	Receiver
Receiver	115200	3	Disabled	AUTO	Disabled
UART1	115200	3	Disabled	AUTO	Disabled
UART2	115200	3	Disabled	AUTO	Disabled

Receiver
Serial (via UART1) Receiver Mode
The UART for the receiver must be set to 'Serial Rx' (in the Ports tab)
Select the correct data format from the drop-down, below:
CRSF Serial Receiver Provider

- To enable the air unit OSD under Betaflight 4.4 version, you need to select VTX (MSP+Displayport) in the peripheral port where the air unit signal is connected to the port interface.
- Please check your protocols, otherwise your DJI Radio won't input signals!
DJI Goggle protocol and Betaflight protocol has to match!
For lower signal latency use the SBUS,BAUD,FAST protocol option on both ends.
- For Betaflight Copy Paste"set sbus baud fast=on"into your Betaflight Configurator CLI then hit enter.
Use"save"and hit enter to save the changes.
Default: sbus_baud_fast=off, Goggle protocol set to NORMAL


Others Receivers(TBS/ELRS): CRSF Protocol

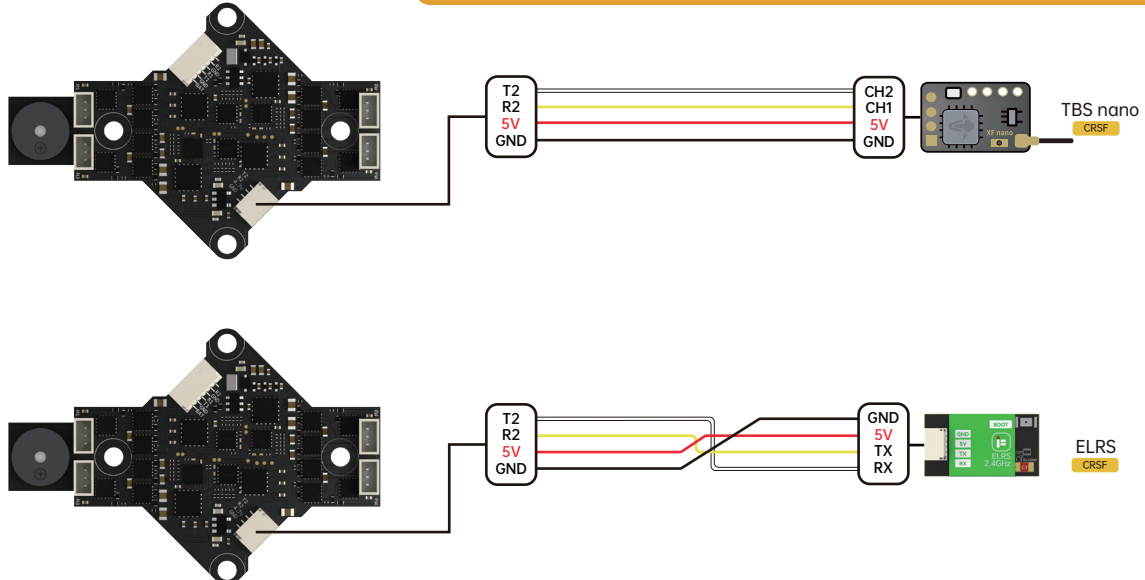

Receiver
Serial (via UART) Receiver Mode
The UART for the receiver must be set to 'Serial Rx' (in the Ports tab)
Select the correct data format from the drop-down, below:
CRSF Serial Receiver Provider


Telemetry
TELEMETRY Telemetry output

VTX

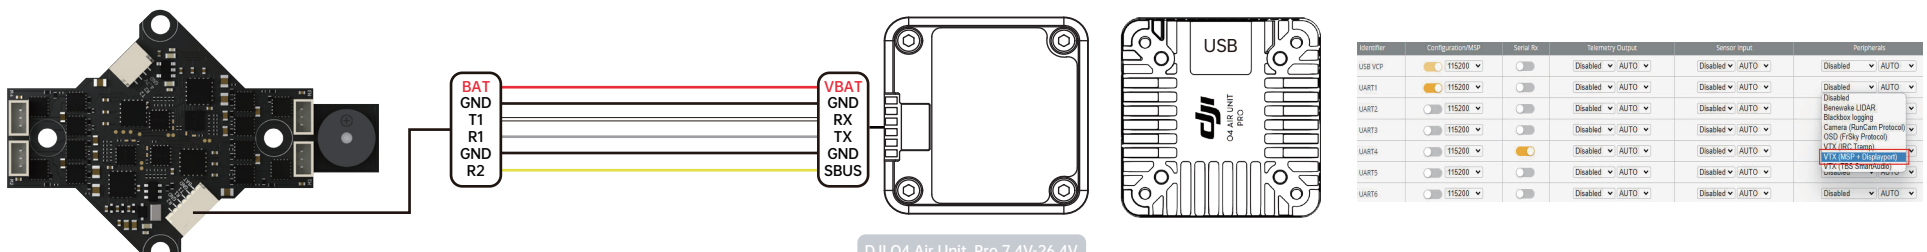

Receiver	Configuration	Serial Rx	Receiver Config	Serial Rx Config	Receiver
Receiver	115200	3	Disabled	AUTO	Disabled
UART1	115200	3	Disabled	AUTO	Disabled
UART2	115200	3	Disabled	AUTO	Disabled
UART3	115200	3	Disabled	AUTO	Disabled
UART4	115200	3	Disabled	AUTO	Disabled
UART5	115200	3	Disabled	AUTO	Disabled

Wiring diagram overview

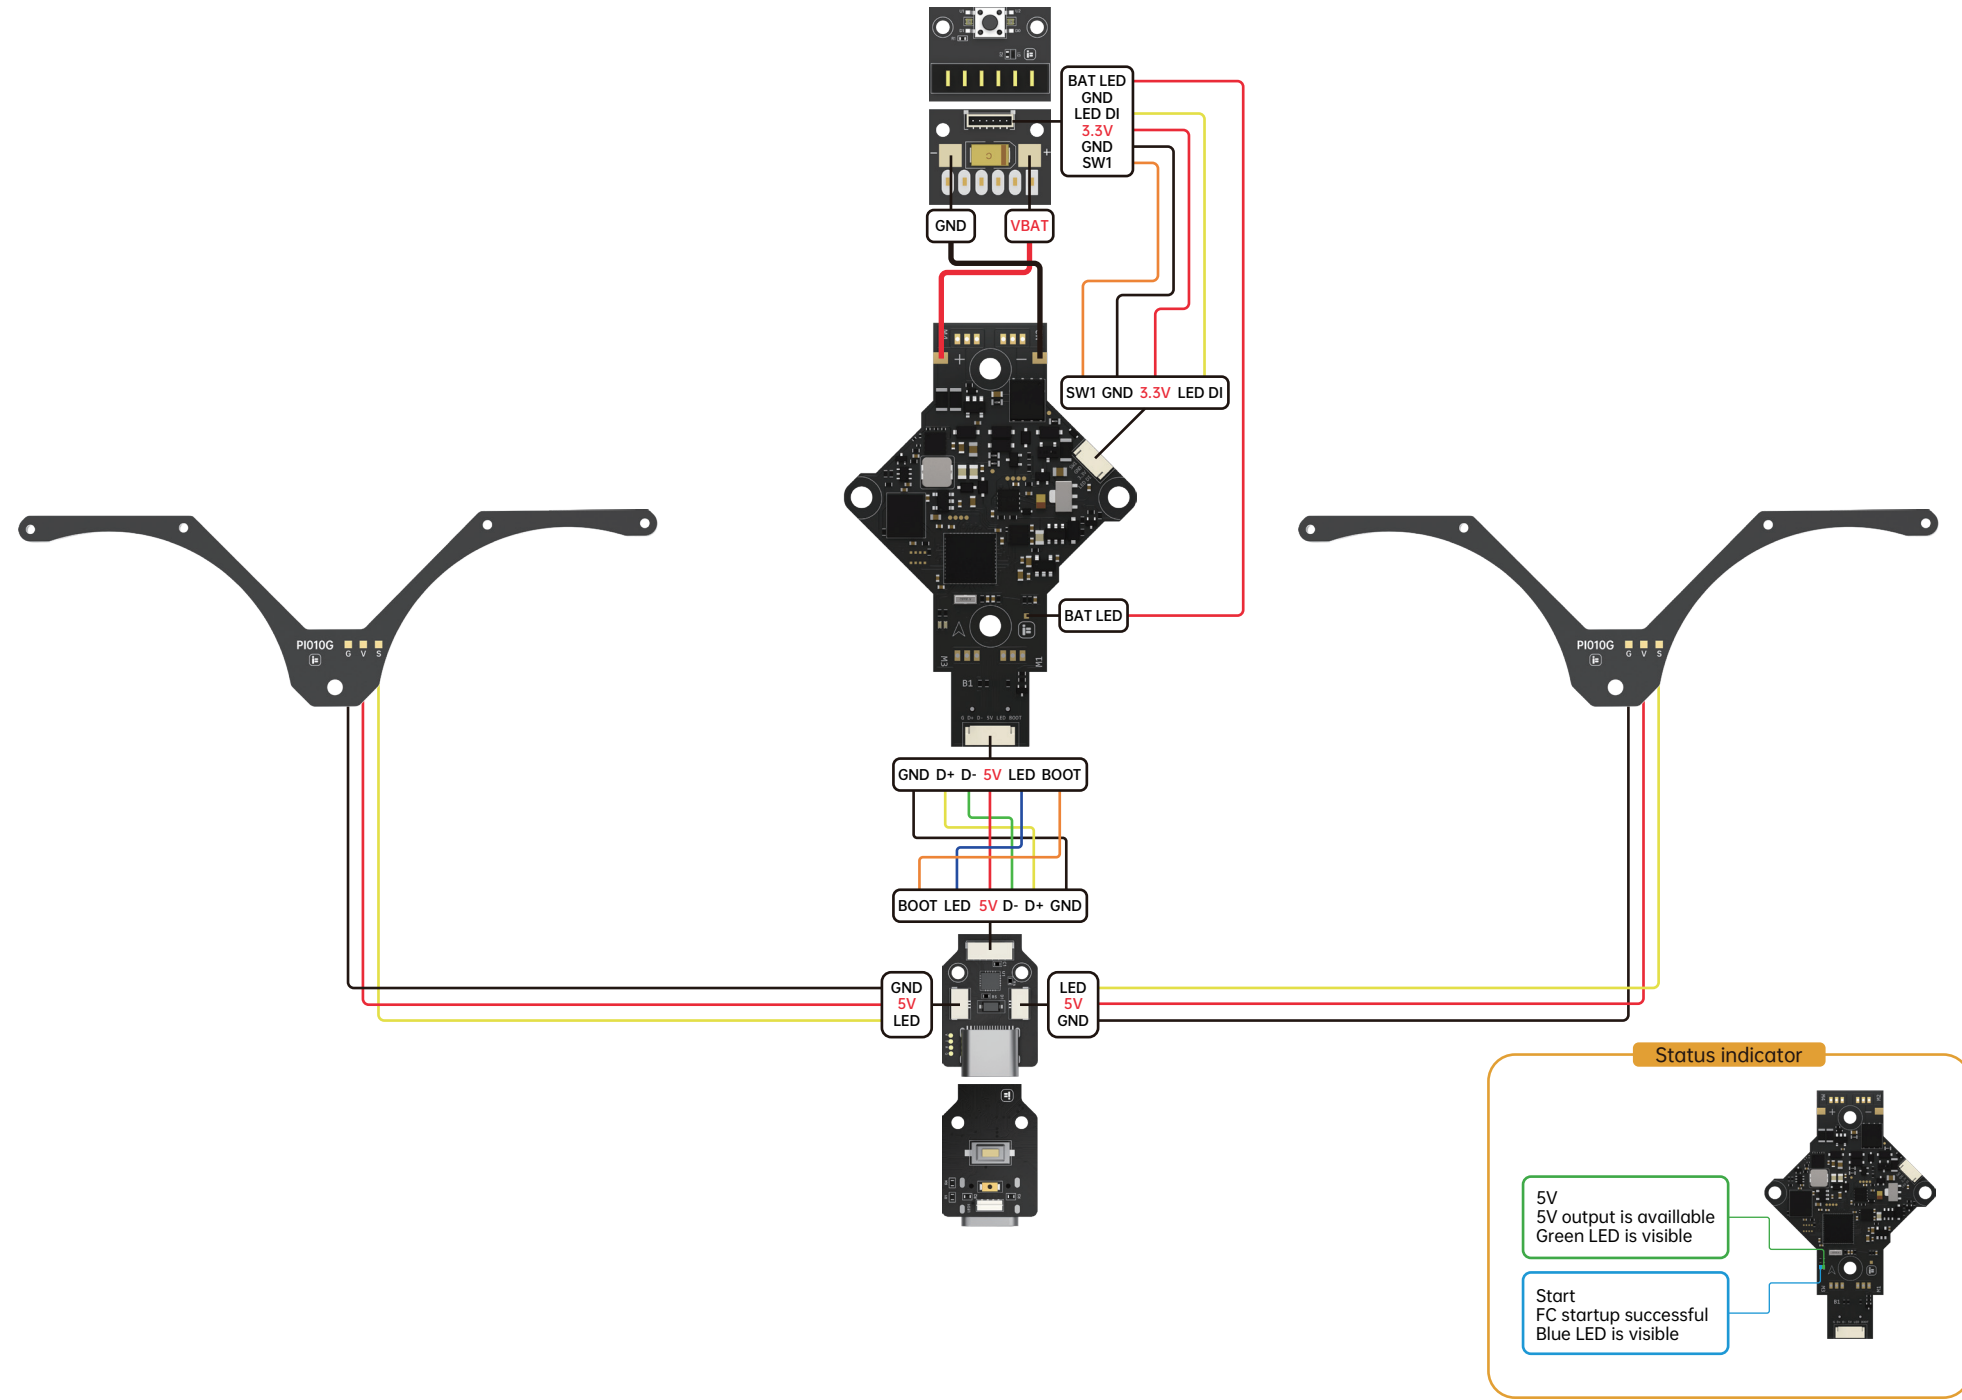

Motors

ESC Firmware: Q-H-50 - Bluejay, 0.16

