



iFlight BLITZ ATF435 Wiring Diagram

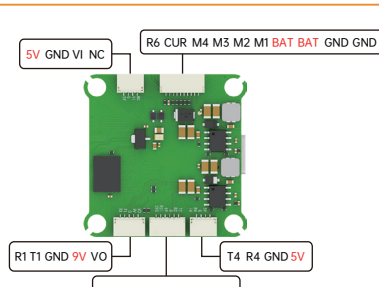


DJI Digital Transmitters: SUBS Protocol

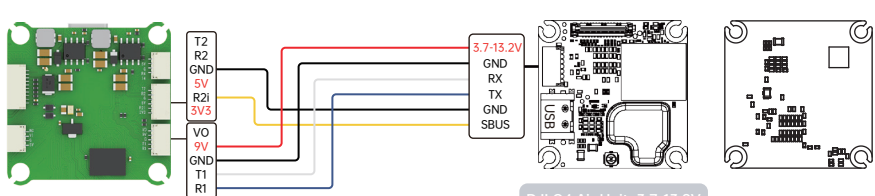


- To enable the air unit OSD under Betaflight 4.4 version, you need to select VTX (MSP+Displayport) in the peripheral port where the air unit signal is connected to the port interface.
- Please check your protocols, otherwise your DJI Radio won't input signals!
DJI Google protocol and Betaflight protocol has to match!
For lower signallatency use the SBUS BAUD_FAST protocol option on both ends.
- For Betaflight Copy Paste"set sbus baud fast=on"into your Betaflight Configurator CLI then hit enter.
Use"save"and hit enter to save the changes.
Default: sbus baud fast=off, Google protocol set to NORMAL


Others Receivers(TBS/ELRS): CRSF Protocol

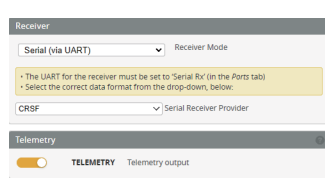


VTX/CAM

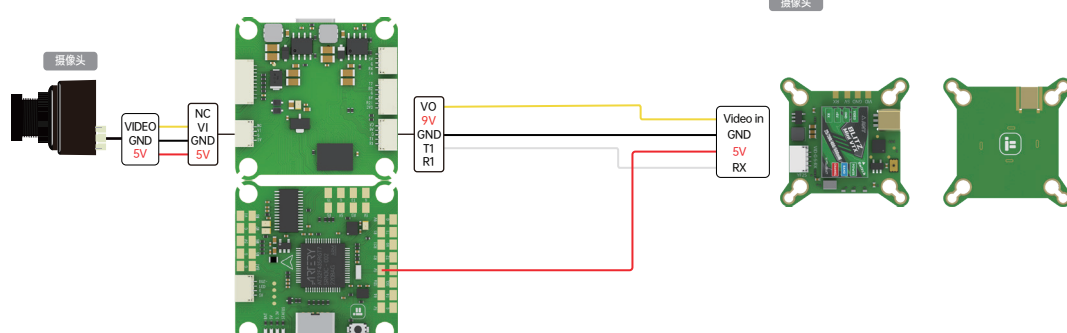


LED/BUZZER

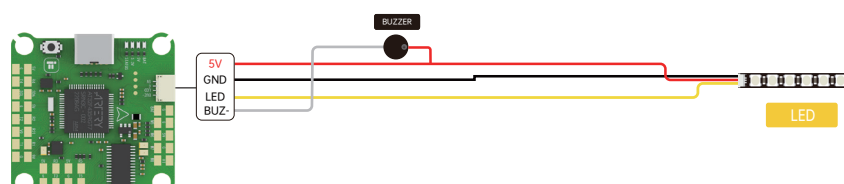

ESC

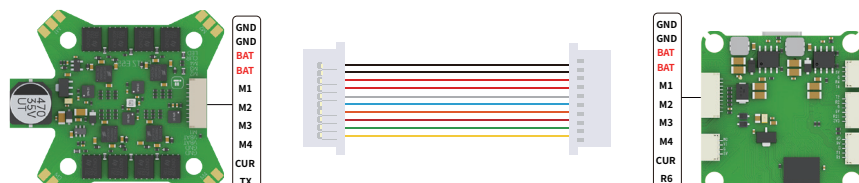

Anti-Spark filter

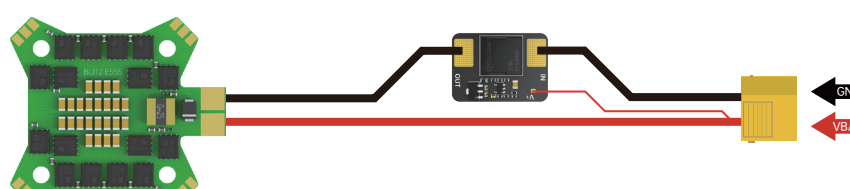

GPS

GPS

☒ GPS
 GPS for navigation and telemetry

Note: Remember to configure a Serial Port (via Ports tab) when using GPS feature.

UBLOX


Protocol

☐ Auto Baud
 ☐ Auto Config
 ☒ Use Galileo
 ☐ Set Home Point Once

Auto-detect

Ground Assistance Type

Status indicator

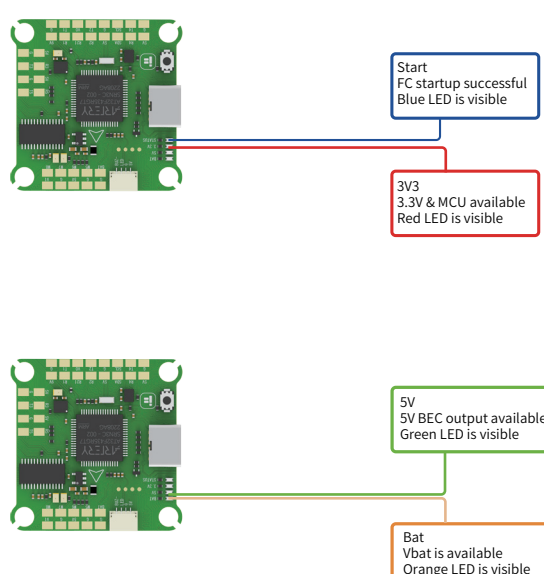

Note: Each LED indicates the status of your flight controller.