



iFlight BLITZ MINI ATF435 Wiring Diagram

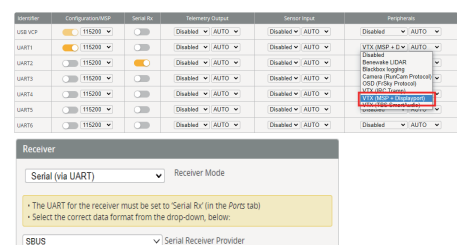



DJI Digital Transmitters: SUBS Protocol

FC plug&play port and setup compatible to DJI Air Unit and Caddx Vista

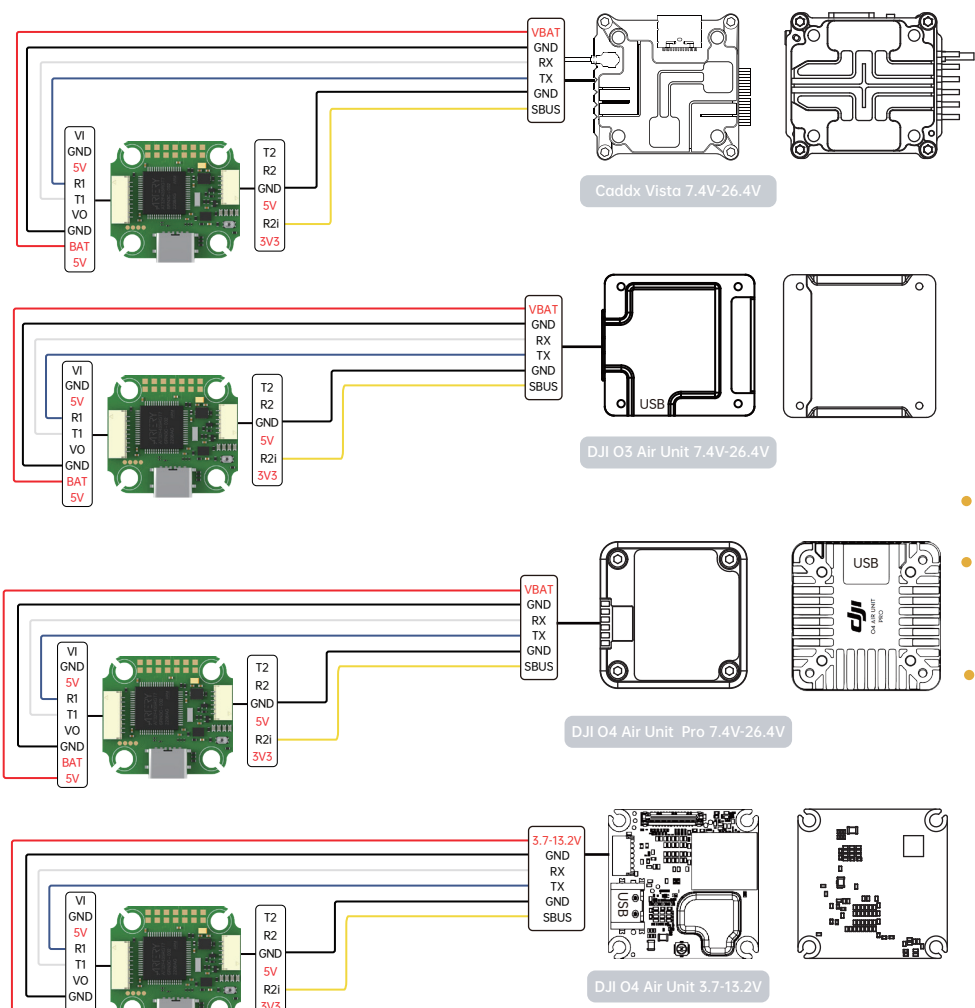


- To enable the air unit OSD under Betaflight 4.4 version, you need to select VTX (MSP+Displayport) in the peripheral port where the air unit signal is connected to the port interface.
- Please check your protocols, otherwise your DJI Radio won't input signals!
- DJI Goggle protocol and Betaflight protocol has to match! For lower signallatency use the SBUS BAUD.FAST protocol option on both ends.
- For Betaflight Copy Paste"set sbus.baud.fast=on"into your Betaflight Configurator CLI then hit enter. Use"save"and hit enter to save the changes. Default: sbus.baud.fast=off, Goggle protocol set to NORMAL

Others Receivers(TBS/ELRS): CRSF Protocol

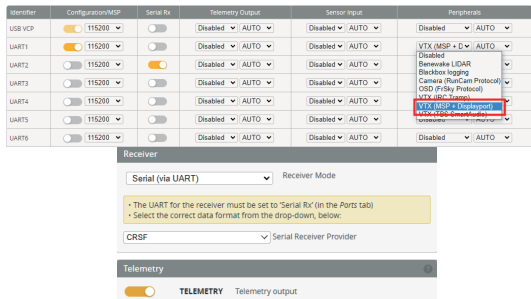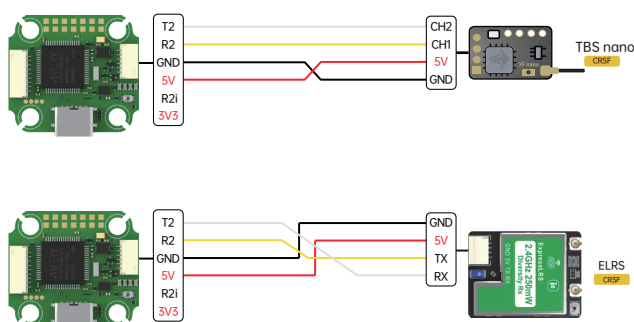


VTX/CAM

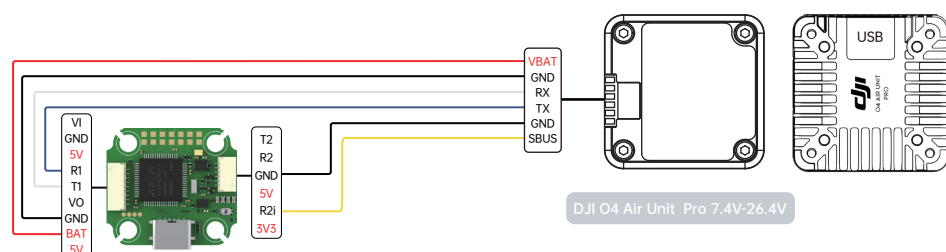


Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor input	Peripherals
USB VCP	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART1	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART2	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART3	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART4	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART5	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART6	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO


Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor input	Peripherals
USB VCP	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART1	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART2	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART3	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART4	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART5	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO
UART6	115200		Disabled / AUTO	Disabled / AUTO	Disabled / AUTO

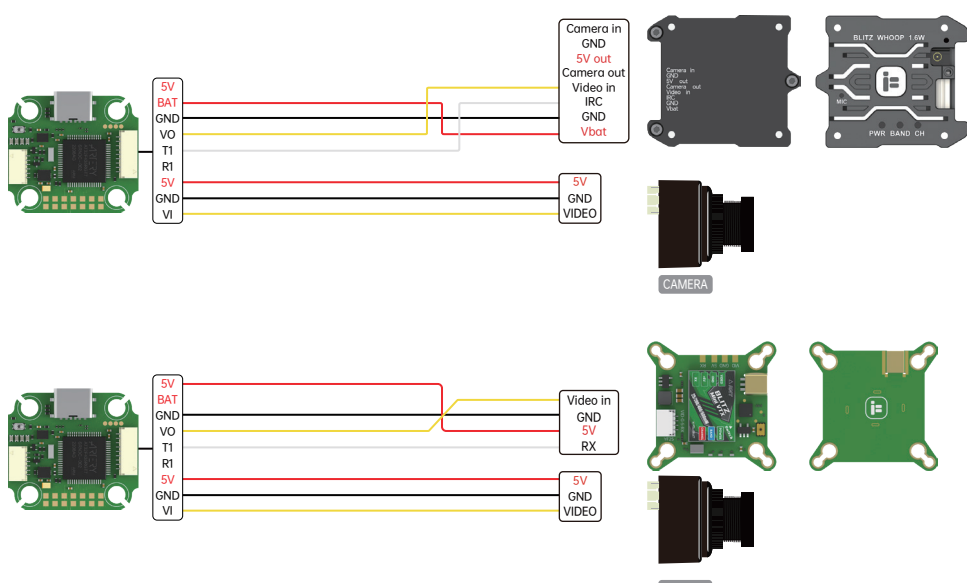


LED/BUZZER

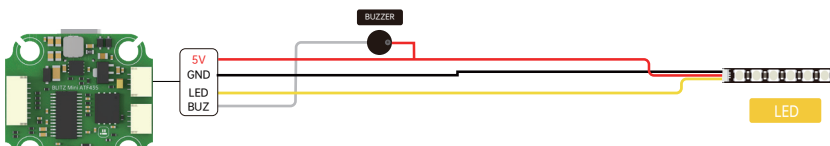


ESC

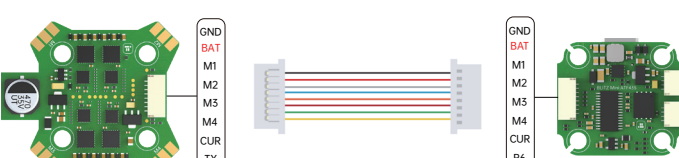


Anti-Spark filter

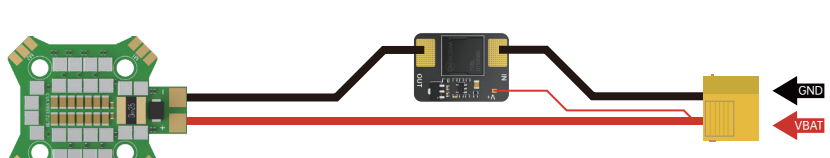

GPS

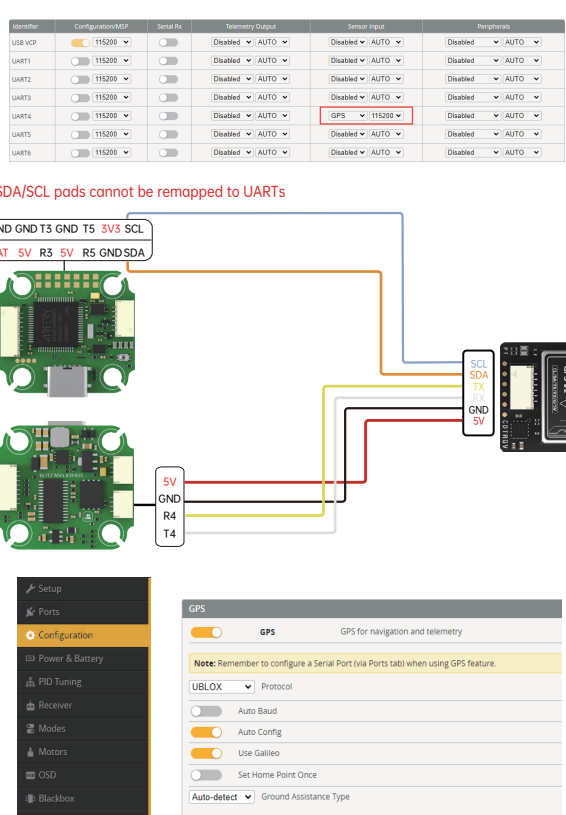

Status indicator

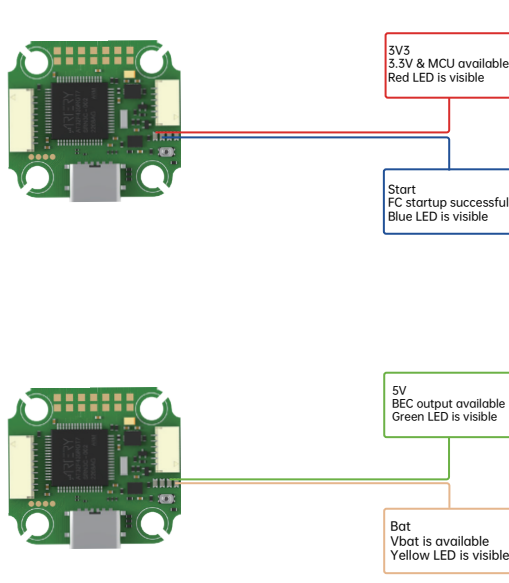

Note:Each LED indicates the status of your flight controller.