


iFlight BLITZ F7 Wiring Diagram

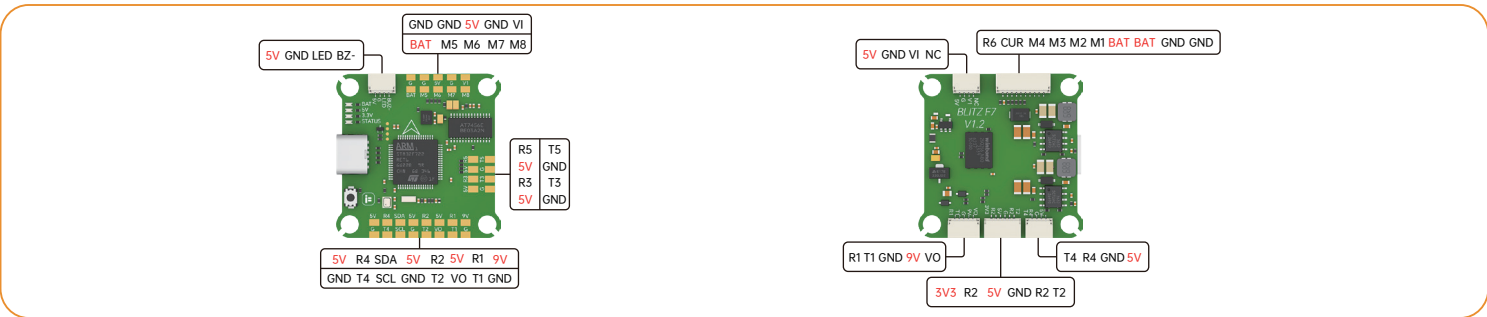

DJI Digital Transmitters: SUBS Protocol

The diagram shows four wiring configurations for DJI Digital Transmitters using the SUBS Protocol. The first configuration is for the Caddx Vista 7.4V-26.4V, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to VBAT, GND, RX, TX, GND, SBUS. The second configuration is for the DJI O3 Air Unit 7.4V-26.4V, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to VBAT, GND, RX, TX, GND, SBUS. The third configuration is for the DJI O4 Air Unit Pro 7.4V-26.4V, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to VBAT, GND, RX, TX, GND, SBUS. The fourth configuration is for the DJI O4 Air Unit 3.7-13.2V, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to GND, RX, TX, GND, SBUS. To the right, there are screenshots of the Betaflight configuration interface showing the UART settings and the Receiver settings. The UART settings show UART1, UART2, UART3, UART4, and UART5, all set to 115200 baud rate. The Receiver settings show the Receiver Mode set to Serial (via UART) and the Receiver Provider set to SUBS.

● To enable the air unit OSD under Betaflight 4.4 version, you need to select VTX (MSP+Displayport) in the peripheral port where the air unit signal is connected to the port interface.

● Please check your protocols, otherwise your DJI Radio won't input signals!

DJI Goggle protocol and Betaflight protocol has to match!

For lower signal latency use the SBUS BAUD_FAST protocol option on both ends.

● For Betaflight Copy Paste "set sbus baud fast=on" into your Betaflight Configurator CLI then hit enter.

Use "save" and hit enter to save the changes.

Default: sbus baud fast=off, Goggle protocol set to NORMAL


Others Receivers(TBS/ELRS): CRSF Protocol

The diagram shows two wiring configurations for TBS and ELRS receivers using the CRSF Protocol. The first configuration is for the TBS nano, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to CH2, CH1, 5V, GND. The second configuration is for the ELRS, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to GND, TX, RX, 5V. To the right, there are screenshots of the Betaflight configuration interface showing the UART settings and the Receiver settings. The UART settings show UART1, UART2, UART3, UART4, and UART5, all set to 115200 baud rate. The Receiver settings show the Receiver Mode set to Serial (via UART) and the Receiver Provider set to CRSF.


VTX/CAM

The diagram shows two wiring configurations for VTX and CAM connections. The first configuration is for the DJI O4 Air Unit Pro 7.4V-26.4V, showing connections for T2, R2, GND, 5V, R2, 3V3, VO, 9V, GND, T1, R1 to VBAT, GND, RX, TX, GND, SBUS. To the right, there are screenshots of the Betaflight configuration interface showing the UART settings and the Peripheral settings. The UART settings show UART1, UART2, UART3, UART4, and UART5, all set to 115200 baud rate. The Peripheral settings show VTX (MSP+Displayport) selected. The second configuration shows connections for a camera: VIDEO GND 5V to VIDEO, GND, 5V; NC V1 GND 5V to NC, V1, GND, 5V; VO 9V GND T1 R1 to VO, 9V, GND, T1, R1; Vbat GND Video in Camera out 5V out GND Camera in to Vbat, GND, Video in, Camera out, 5V out, GND, Camera in.


LED/BUZZER

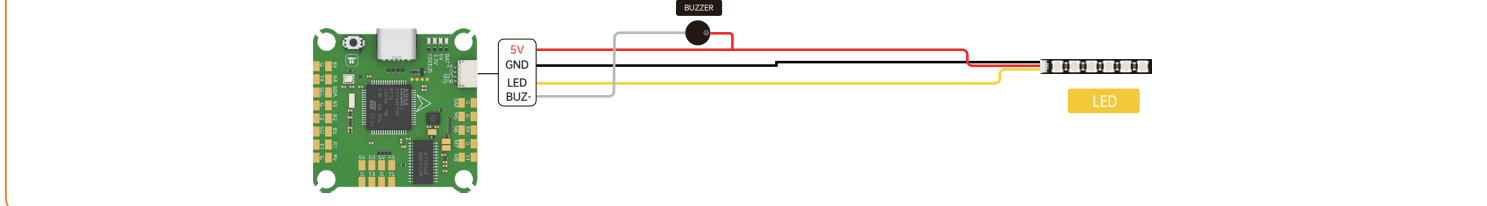

ESC

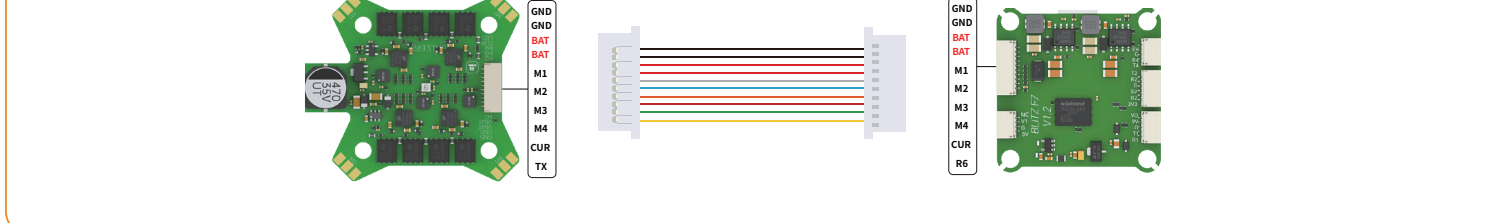

Anti-Spark filter

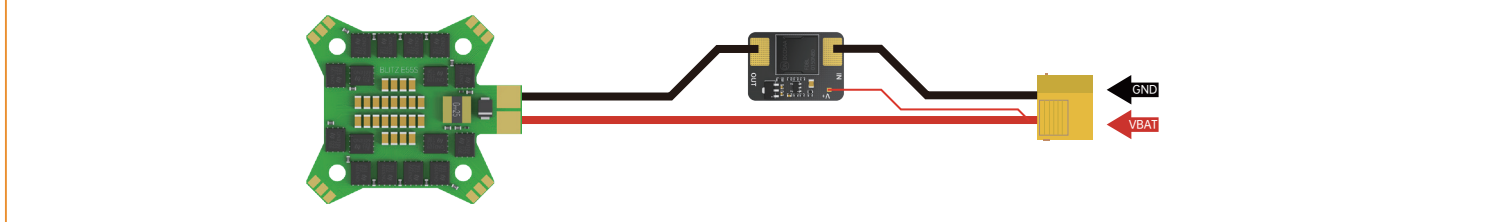

GPS

The diagram shows a wiring configuration for a GPS module. The connections are: GND T1 VO T2 GND SCL T4 GND 9V R1 5V R2 5V SDA R4 5V to GND, T1, VO, T2, GND, SCL, T4, GND, 9V, R1, 5V, R2, 5V, SDA, R4, 5V; SCL SDA TX GND 5V to SCL, SDA, TX, GND, 5V. To the right, there is a screenshot of the Betaflight configuration interface showing the GPS settings. The GPS settings show the GPS module selected and the GPS feature enabled.

Status indicator

The diagram shows a wiring configuration for status indicators. The connections are: 3V3 to Start FC startup successful Blue LED is visible; 3V3 to 3.3V & MCU available Red LED is visible; 5V to 5V BEC output available Green LED is visible; Vbat to Bat Vbat is available Orange LED is visible. To the right, there is a note: Note: Each LED indicates the status of your flight controller.