


Whoop AIO F411 V1.1 Wiring Diagram

DJI Digital Transmitters

Firmware Target: IFLIGHT_F411_PRO (IFRC)

FC plug&play port and setup compatible to Caddx Vista

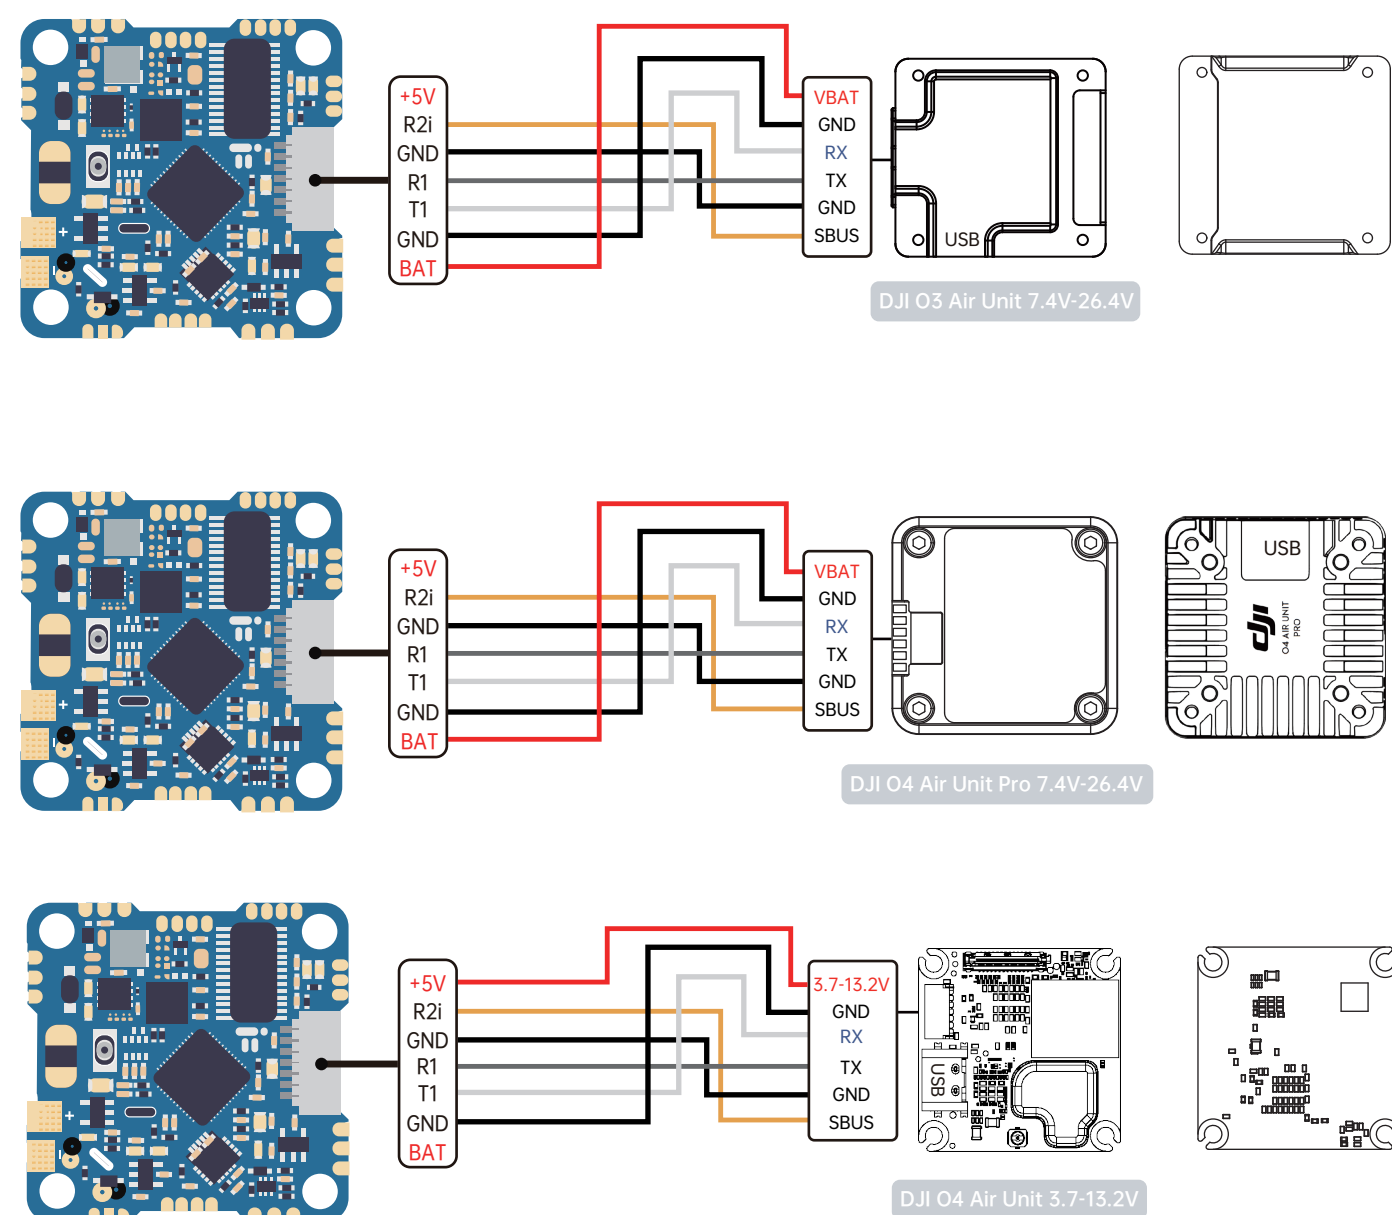

UART	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	☒ 115200	☐	Disabled	AUTO	Disabled
UART1	☐ 115200	☐	Disabled	AUTO	Disabled
UART2	☐ 115200	☒	Disabled	AUTO	Disabled

Receiver

Serial (via UART) Receiver Mode



The UART for the receiver must be set to 'Serial Rx' (in the Ports tab)

Select the correct data format from the drop-down, below:




SBUS Serial Receiver Provider

- Please check your protocols, otherwise your DJI Radio won't input signals!
DJI Goggle protocol and Betaflight protocol has to match!
For lower signal latency use the SBUS_BAUD_FAST protocol option on both ends.
For Betaflight Copy/Paste "set sbus_baud_fast=on" into your Betaflight Configurator CLI then hit enter.
Use "save" and hit enter to save the changes .
Default: sbus_baud_fast=off, Goggle protocol set to NORMAL
- For DJI O3 Air Unit, In to the Betaflight Configurator Cli, Set osd device to MSP : "set osd_displayport_device = MSP"
Specify the serial port of msp_displayport as 0(the number in this place should be the serial port number minus 1): "set displayport_msp_serial = 0"
then type "save" and exit


Others Receivers

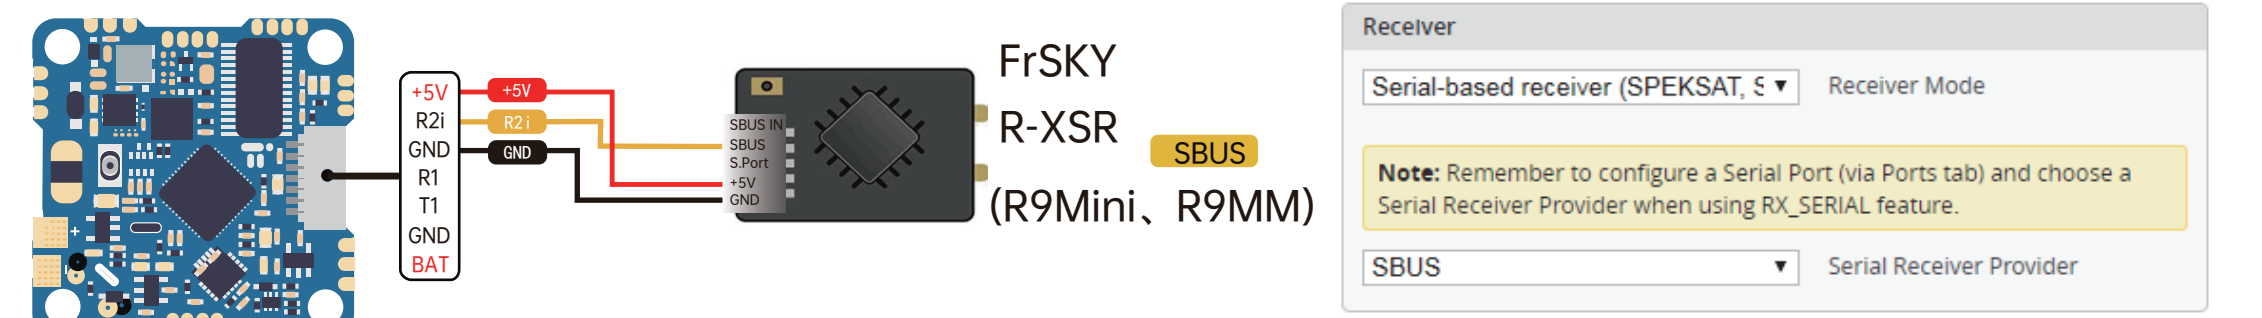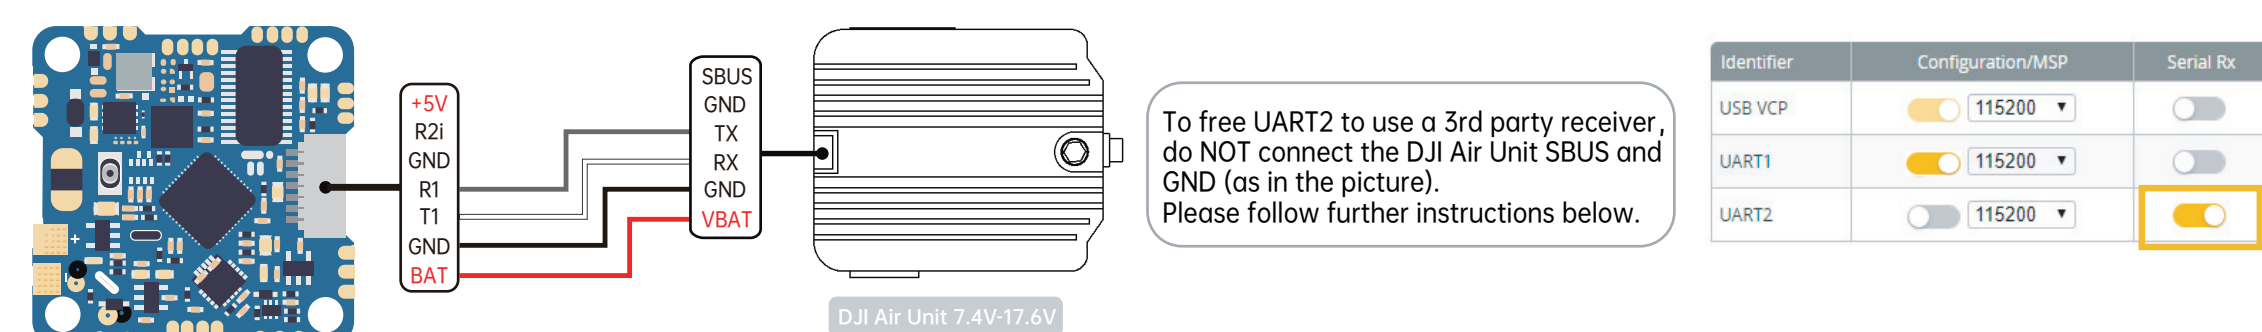

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	☒ 115200	☐	Disabled	AUTO	Disabled
UART1	☐ 115200	☐	Disabled	AUTO	VTX (IRC Tran)
UART2	☐ 115200	☒	Disabled	AUTO	Disabled

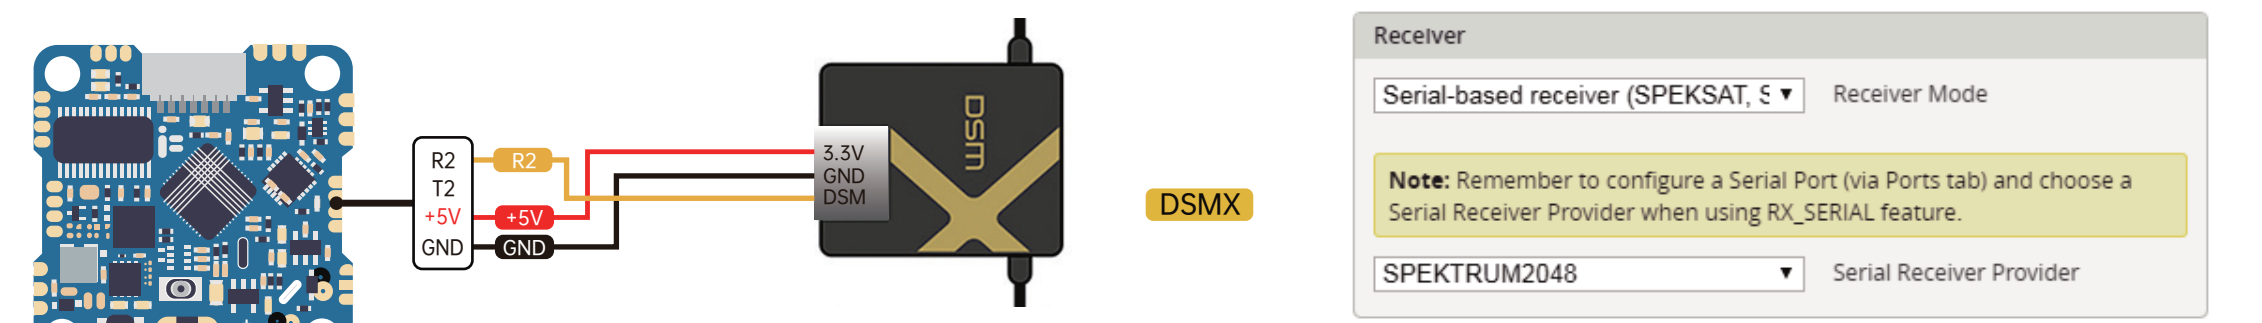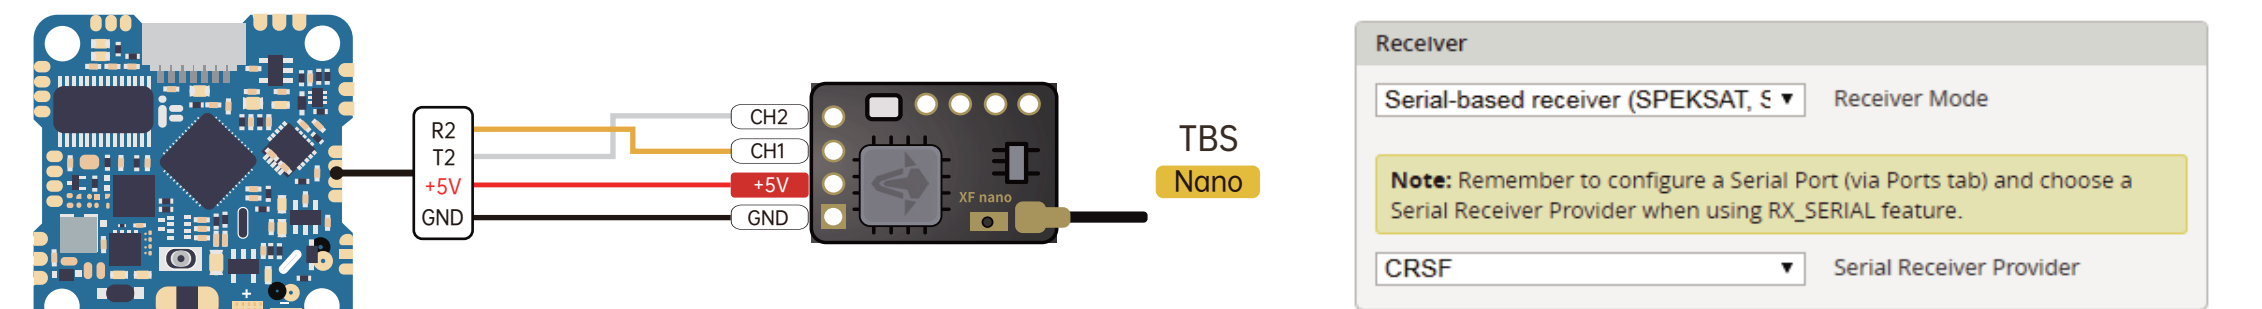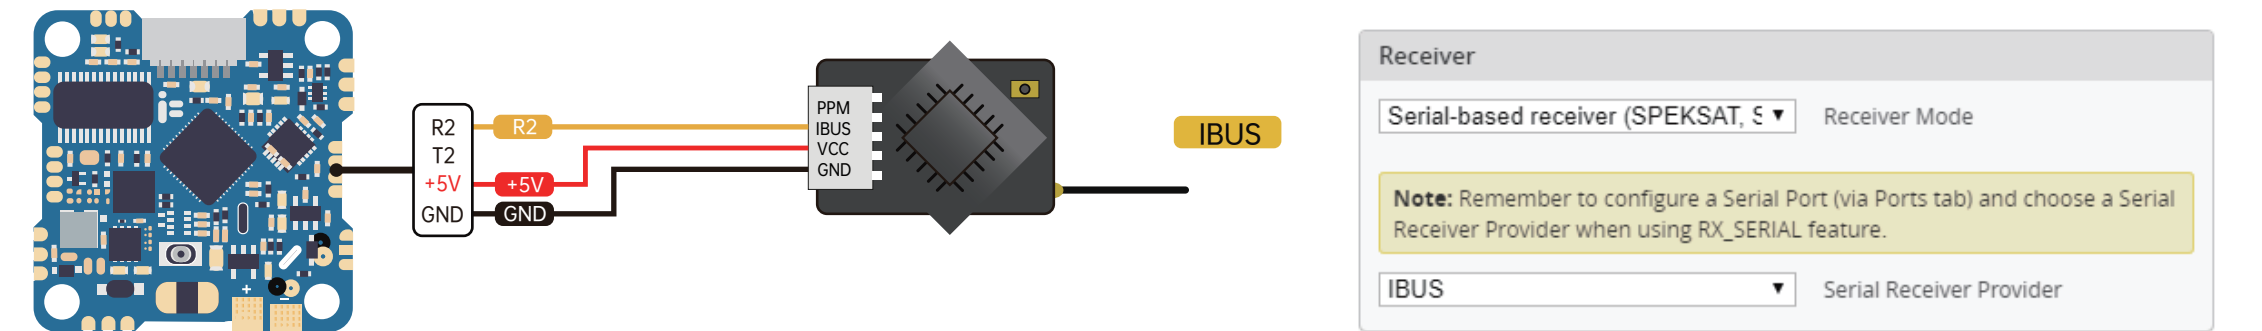

ELRS Connection Method 1

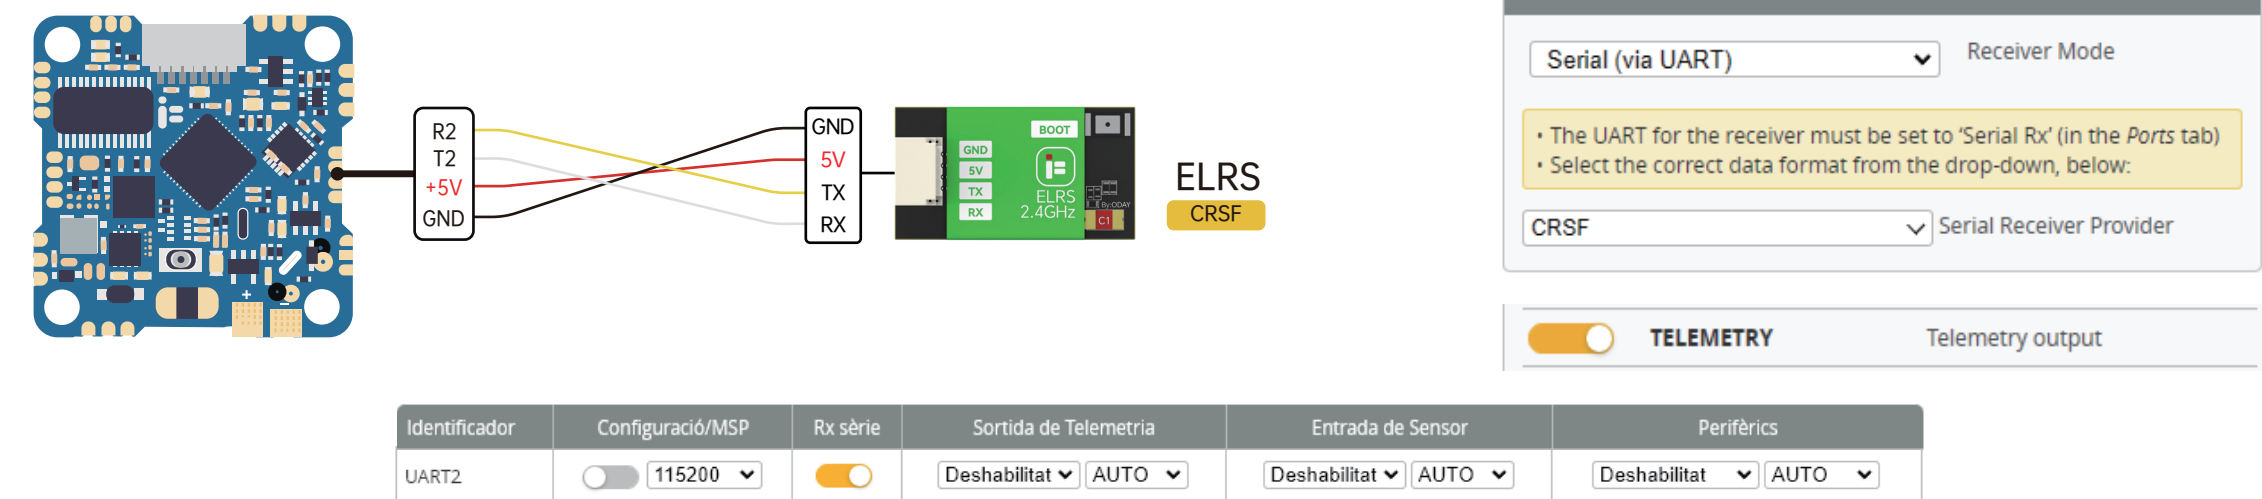


ELRS Connection Method 2

- Notice:
Due to component differences or circuit design, if you are using an iFlight brand ELRS receiver, you can follow the Method 1 to connect.
If you are using a ELRS receiver from other brand, it may happen that the receiver light stays on after powered up, in this case please connect according to Method 2, and you need to refresh the receiver firmware, then select RCVR_INVERT_TX and connect the receiver's TX to FC's R2i.




Analog

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	☒ 115200	☐	Disabled	AUTO	Disabled
UART1	☐ 115200	☐	Disabled	AUTO	VTX (IRC Tran)
UART2	☐ 115200	☒	Disabled	AUTO	Disabled

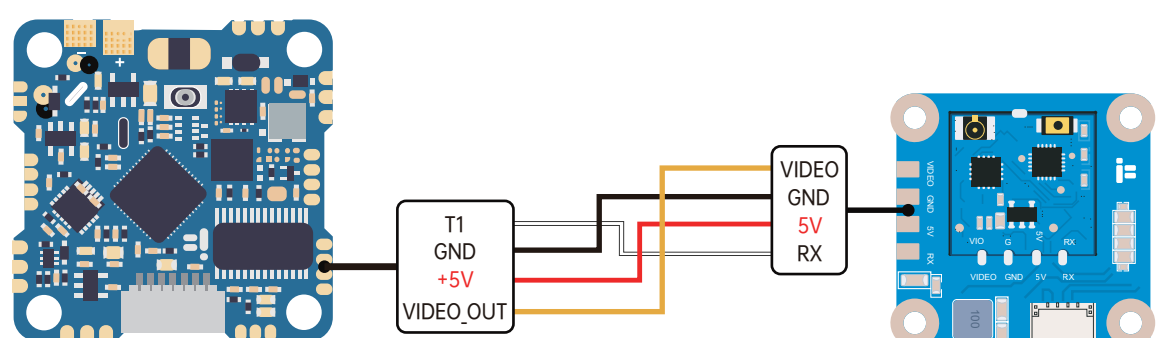

LED/BUZZER

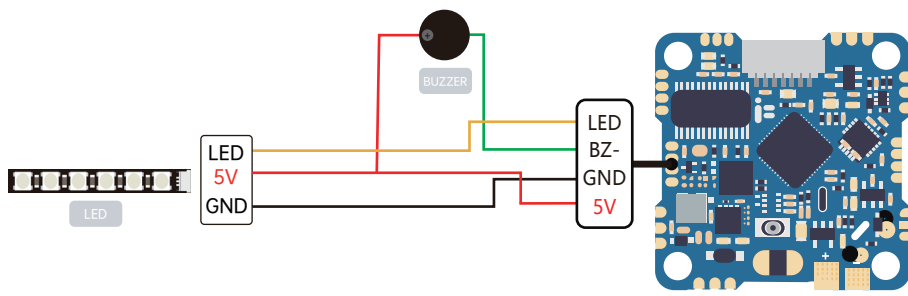

CAM

