



Scan the QR code to get the installation guide.
We recommend you scan it through the SpeedyBee App
for detailed instructions.

请扫描二维码获取安装指南


建议您通过 SpeedyBee App 扫描以获取更详细的安装指南

1

一、包装清单



圈圈

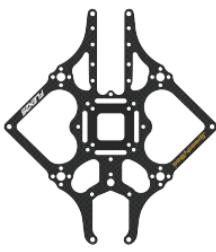

2.5mm机身



电池绑带 (18mm)



1mm飞控保护



x1

14mm机头座



x1

模拟天线座 + 圆环




x1

tx800+2p打印件

高清版配件

A

x5

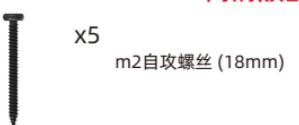

m2自攻螺丝 (18mm)



x1

RunCam Link座 + 圆环



x1

RunCam Link底座+2p

模拟版配件

提示：方框内配件跟随版本配送

2



x1

狗8底座



x1

飞控保护tpu



x2

低电机垫(2mm)



x2

高电机垫(9mm)



x7

m2.5铝柱(15mm)



x3

m2内六角螺丝 (3mm)



x10

m2内六角螺丝 (14mm)



x8

m2内六角螺丝 (12mm)



x10

m2内六角螺丝 (7mm)



x8

m2.5内六角螺丝 6mm)



x8

m2.5内六角螺丝 (16mm)



x5

m2自攻螺丝 (12mm)



x4

m2压铆螺母 (2_1mm)




x2

m2压铆螺母 (2_2mm)

3

二、飞机各部件标注图

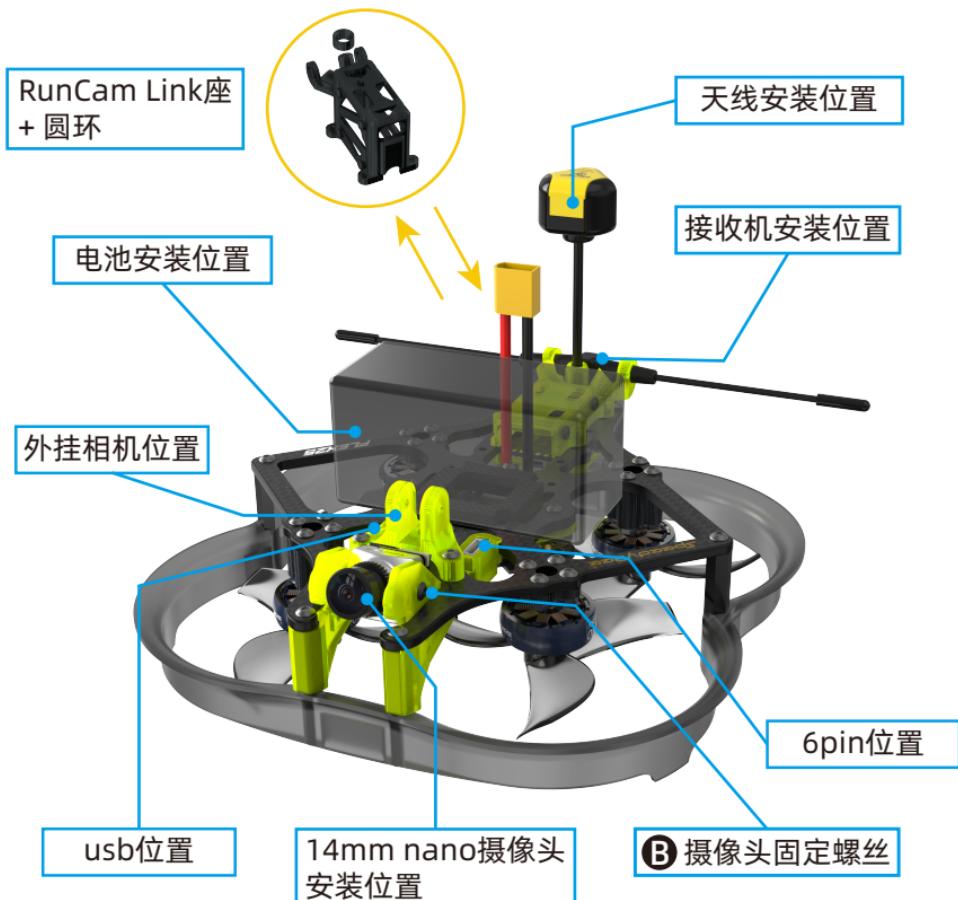

4

电机安装位置

25.5x25.5 AIO
飞控安装位置


模拟图传安装位置



高清图传安装位置




模拟

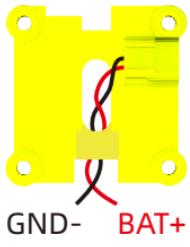


高清



Type-c

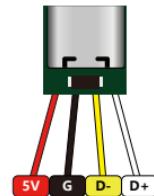


6Pin高清录像机排线

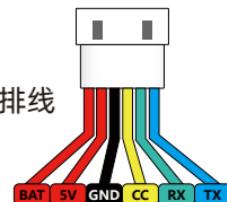

接收机固定TPU




图传安装TPU

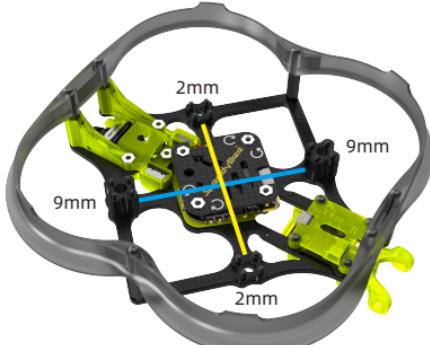

三、螺丝安装说明

模拟版

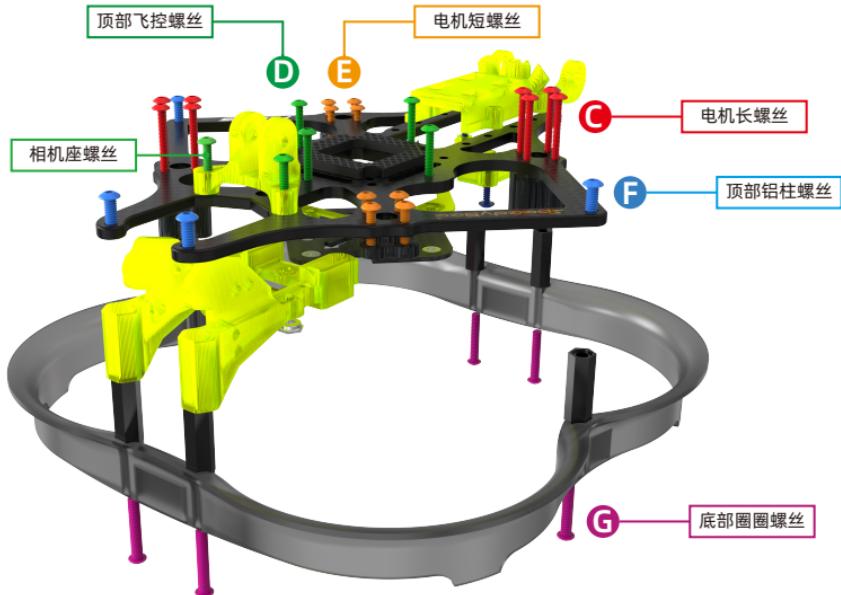

C m2内六角螺丝 (14mm)

E m2内六角螺丝 (7mm)


D m2内六角螺丝 (12mm)

F m2.5内六角螺丝(6mm)

G m2.5内六角螺丝 (16mm)

7

模拟版

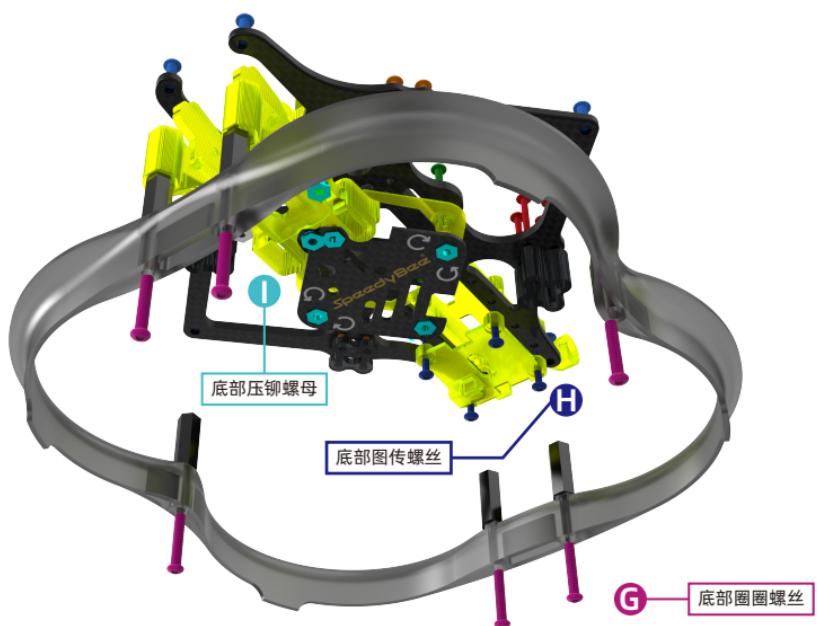


I m2压铆螺母(2_1mm)

H m2自攻螺丝(12mm)

8

高清版

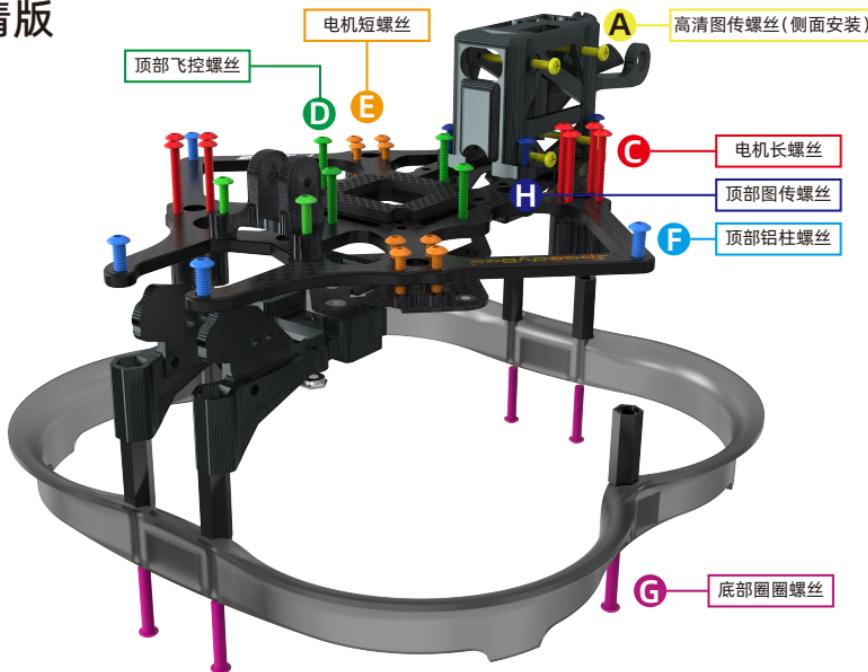

C m2内六角螺丝 (14mm)

E m2内六角螺丝 (7mm)

D m2内六角螺丝 (12mm)


F m2.5内六角螺丝(6mm)

H m2自攻螺丝(12mm)

A m2自攻螺丝(18mm)

9

高清版

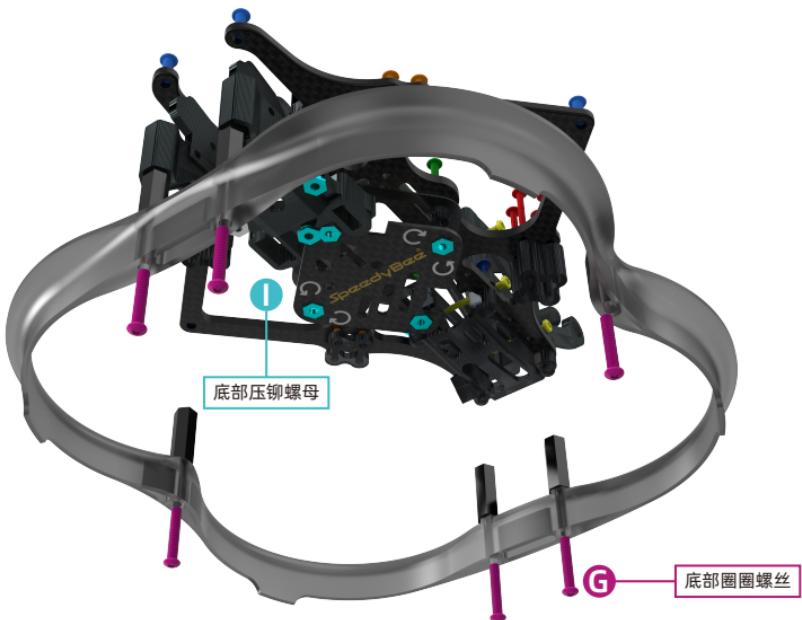

I m2压铆螺母(2_1mm)

G m2.5内六角螺丝 (16mm)