

# Northwest FM Studio Operation Guide

Peter McMurray

February 26, 2025



# Contents

|                              |             |
|------------------------------|-------------|
| <b>Contents</b>              | <b>i</b>    |
| <b>1 Programs</b>            | <b>1</b>    |
| <b>2 Studio</b>              | <b>3</b>    |
| <b>3 Console</b>             | <b>5</b>    |
| <b>4 Jazler</b>              | <b>9</b>    |
| <b>5 Media</b>               | <b>11</b>   |
| <b>6 OBS</b>                 | <b>13</b>   |
| <b>7 Phones</b>              | <b>15</b>   |
| 7.1 Basic Guide . . . . .    | 15          |
| 7.2 Advanced Guide . . . . . | 16          |
| <b>8 Remote</b>              | <b>133■</b> |
| <b>9 Spots</b>               | <b>135■</b> |



# 1 Programs

TODO: Presentation and content of programs put to air



## 2 Studio

TODO: Presenter responsibilities in the care and use of studio equipment





## 3 Console

TODO: Use of console in studio

Lorem ipsum dolor sit amet, consectetur adipiscing elit. Ut purus elit, vestibulum ut, placerat ac, adipiscing vitae, felis. Curabitur dictum gravida mauris. Nam arcu libero, nonummy eget, consectetur id, vulputate a, magna. Donec vehicula augue eu neque. Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Mauris ut leo. Cras viverra metus rhoncus sem. Nulla et lectus vestibulum urna fringilla ultrices. Phasellus eu tellus sit amet tortor gravida placerat. Integer sapien est, iaculis in, pretium quis, viverra ac, nunc. Praesent eget sem vel leo ultrices bibendum. Aenean faucibus. Morbi dolor nulla, malesuada eu, pulvinar at, mollis ac, nulla. Curabitur auctor semper nulla. Donec varius orci eget risus. Duis nibh mi, congue eu, accumsan eleifend, sagittis quis, diam. Duis eget orci sit amet orci dignissim rutrum.

Nam dui ligula, fringilla a, euismod sodales, sollicitudin vel, wisi. Morbi auctor lorem non justo. Nam lacus libero, pretium at, lobortis vitae, ultricies et, tellus. Donec aliquet, tortor sed accumsan bibendum, erat ligula aliquet magna, vitae ornare odio metus a mi. Morbi ac orci et nisl hendrerit mollis. Suspendisse ut massa. Cras nec ante. Pellentesque a nulla. Cum sociis natoque penatibus et magnis dis parturient montes, nascetur ridiculus mus. Aliquam tincidunt urna. Nulla ullamcorper vestibulum turpis. Pellentesque cursus luctus mauris.

Nulla malesuada porttitor diam. Donec felis erat, congue non, volutpat at, tincidunt tristique, libero. Vivamus viverra fermentum felis. Donec nonummy pellentesque ante. Phasellus adipiscing semper elit. Proin fermentum massa ac quam. Sed diam turpis, molestie vitae, placerat a, molestie nec, leo. Maecenas lacinia. Nam ipsum ligula, eleifend at, accumsan nec, suscipit a, ipsum. Morbi blandit ligula feugiat magna. Nunc eleifend consequat lorem. Sed lacinia nulla vitae enim. Pellentesque tincidunt purus vel magna. Integer non enim. Praesent euismod nunc eu purus. Donec bibendum quam in tellus. Nullam cursus pulvinar lectus. Donec et mi. Nam vulputate metus eu enim. Vestibulum pellentesque felis eu massa.

Quisque ullamcorper placerat ipsum. Cras nibh. Morbi vel justo vitae lacus tincidunt ultrices. Lorem ipsum dolor sit amet, consectetur adipiscing elit. In hac habitasse platea dictumst. Integer tempus convallis augue. Etiam facilisis. Nunc elementum fermentum wisi. Aenean placerat. Ut imperdiet, enim sed gravida sollicitudin, felis odio placerat quam, ac pulvinar elit purus eget enim. Nunc vitae tortor. Proin tempus nibh sit amet nisl. Vivamus quis tortor vitae risus porta vehicula.

Fusce mauris. Vestibulum luctus nibh at lectus. Sed bibendum, nulla a

faucibus semper, leo velit ultricies tellus, ac venenatis arcu wisi vel nisl. Vestibulum diam. Aliquam pellentesque, augue quis sagittis posuere, turpis lacus congue quam, in hendrerit risus eros eget felis. Maecenas eget erat in sapien mattis porttitor. Vestibulum porttitor. Nulla facilisi. Sed a turpis eu lacus commodo facilisis. Morbi fringilla, wisi in dignissim interdum, justo lectus sagittis dui, et vehicula libero dui cursus dui. Mauris tempor ligula sed lacus. Duis cursus enim ut augue. Cras ac magna. Cras nulla. Nulla egestas. Curabitur a leo. Quisque egestas wisi eget nunc. Nam feugiat lacus vel est. Curabitur consectetur.

Suspendisse vel felis. Ut lorem lorem, interdum eu, tincidunt sit amet, laoreet vitae, arcu. Aenean faucibus pede eu ante. Praesent enim elit, rutrum at, molestie non, nonummy vel, nisl. Ut lectus eros, malesuada sit amet, fermentum eu, sodales cursus, magna. Donec eu purus. Quisque vehicula, urna sed ultricies auctor, pede lorem egestas dui, et convallis elit erat sed nulla. Donec luctus. Curabitur et nunc. Aliquam dolor odio, commodo pretium, ultricies non, pharetra in, velit. Integer arcu est, nonummy in, fermentum faucibus, egestas vel, odio.

Sed commodo posuere pede. Mauris ut est. Ut quis purus. Sed ac odio. Sed vehicula hendrerit sem. Duis non odio. Morbi ut dui. Sed accumsan risus eget odio. In hac habitasse platea dictumst. Pellentesque non elit. Fusce sed justo eu urna porta tincidunt. Mauris felis odio, sollicitudin sed, volutpat a, ornare ac, erat. Morbi quis dolor. Donec pellentesque, erat ac sagittis semper, nunc dui lobortis purus, quis congue purus metus ultricies tellus. Proin et quam. Class aptent taciti sociosqu ad litora torquent per conubia nostra, per inceptos hymenaeos. Praesent sapien turpis, fermentum vel, eleifend faucibus, vehicula eu, lacus.

Pellentesque habitant morbi tristique senectus et netus et malesuada fames ac turpis egestas. Donec odio elit, dictum in, hendrerit sit amet, egestas sed, leo. Praesent feugiat sapien aliquet odio. Integer vitae justo. Aliquam vestibulum fringilla lorem. Sed neque lectus, consectetur at, consectetur sed, eleifend ac, lectus. Nulla facilisi. Pellentesque eget lectus. Proin eu metus. Sed porttitor. In hac habitasse platea dictumst. Suspendisse eu lectus. Ut mi mi, lacinia sit amet, placerat et, mollis vitae, dui. Sed ante tellus, tristique ut, iaculis eu, malesuada ac, dui. Mauris nibh leo, facilisis non, adipiscing quis, ultrices a, dui.

Morbi luctus, wisi viverra faucibus pretium, nibh est placerat odio, nec commodo wisi enim eget quam. Quisque libero justo, consectetur a, feugiat vitae, porttitor eu, libero. Suspendisse sed mauris vitae elit sollicitudin malesuada. Maecenas ultricies eros sit amet ante. Ut venenatis velit. Maecenas sed mi eget dui varius euismod. Phasellus aliquet volutpat odio. Vestibulum ante ipsum primis in faucibus orci luctus et ultrices posuere cubilia Curae; Pellentesque sit amet pede ac sem eleifend consectetur. Nullam elementum, urna vel imperdiet sodales, elit ipsum pharetra ligula, ac pretium ante justo a nulla. Curabitur tristique arcu eu metus. Vestibulum lectus. Proin mauris. Proin eu nunc eu urna hendrerit faucibus. Aliquam auctor, pede consequat laoreet varius, eros tellus scelerisque quam, pellentesque hendrerit ipsum dolor sed augue. Nulla nec lacus.

Suspendisse vitae elit. Aliquam arcu neque, ornare in, ullamcorper quis, commodo eu, libero. Fusce sagittis erat at erat tristique mollis. Maecenas sapien libero, molestie et, lobortis in, sodales eget, dui. Morbi ultrices rutrum

lorem. Nam elementum ullamcorper leo. Morbi dui. Aliquam sagittis. Nunc placerat. Pellentesque tristique sodales est. Maecenas imperdiet lacinia velit. Cras non urna. Morbi eros pede, suscipit ac, varius vel, egestas non, eros. Praesent malesuada, diam id pretium elementum, eros sem dictum tortor, vel consectetur odio sem sed wisi.



## 4 Jazler

To change the operation mode of Jazler, click on the mode button found on the top line of the screen. This button will display the current mode of jazler (Manual, Auto, Offline)

Auto mode is used for when the studio in automation / unattended mode, such as overnight or when a live presenter is unavailable.

Manual mode is used when a live presenter is present. In this mode, you will be alerted when a scheduled break is due to play, and then must be played manually.

Offline mode is for when a studio is not in use or not on air.

When you are finished with a studio, and that studio is not being used by another presenter or automation, please leave it in "Offline" mode.

TODO: How to use Jazler during your program



## 5 Media

TODO: Describe differences in audio file formats.

Audio files have been stored in three different formats. The following table will show the main differences between the formats used at the station.

Note the difference between compressed audio and compressed data. With compressed audio, the audio information itself is altered to provide a smaller file size, but it results in a loss of audio quality. In contrast, compressed data means that while the data that makes up the audio is compressed, when the data is converted back into audio by the computer, the quality of the audio is unaffected.

It is therefore recommended to use the .flac file format for final playout audio where possible as it offers the best compromise between file size and audio quality. Audio editing should always be performed using .wav format files.

.mp3 files should only be used if that is how the file was supplied.



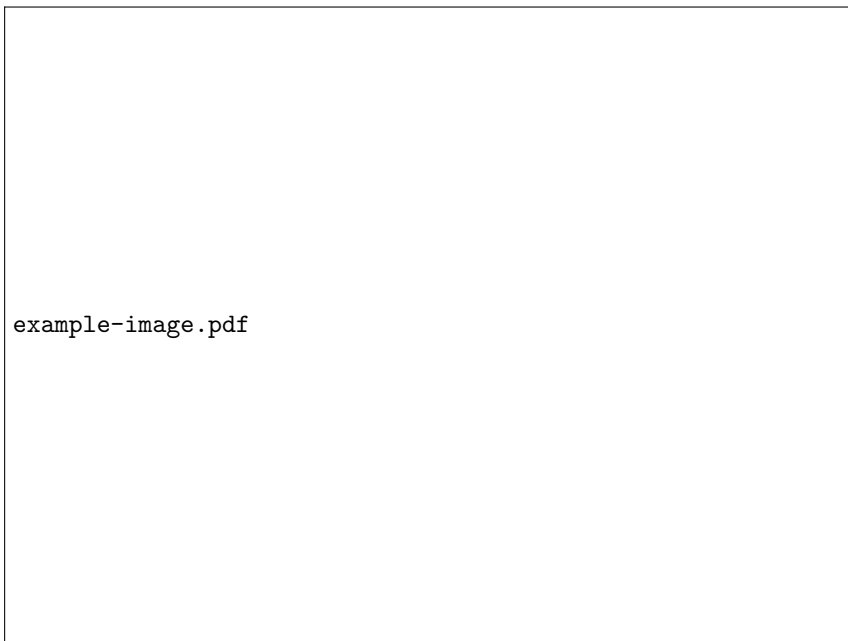


## 6 OBS

TODO: Use of Outside Broadcast System



# 7 Phones



## 7.1 Basic Guide

Basic operation of the phone is the same as any standard landline phone.

### Making a call

1. Pick up handset
2. Dial the required phone number on the keypad

### Receiving a call

1. Pick up handset
2. When answering a call, please include the phrase "98-point-9 Northwest FM" as part of your greeting

**Putting call to air**

1. Establish the call to the handset - do not use speakerphone!
2. Switch phone channel to PGM on the Console
  - a) This takes call from handset and put's to air.
3. To return the call to the handset, simple return phone channel switch to middle position.

**Put a call on hold (PARK)**

While on a call, simply press any unused park button (shown as green). The call can now be picked up on any handset at on the selected park button.

**7.2 Advanced Guide**

These are advanced operations, and should be tried several time BEFORE you attempt to used them On Air!

**Conference calls together**

1. When both calls are parked a. Pick up the first parked call, press the HOLD button (on screen) b. Pick up the second parked call, press the CONF button (on screen) c. Calls are now in conference!
2. When you have 1 call in progress and want to add another a. Press the CONF button (on screen) b. Dial the second caller's number c. Press CONF button (on screen) d. Calls are now in conference

**Terminate Conference call, hang up on callers**

1. Simply hang up the handset

**Terminate Conference call, hold callers**

1. Press the SPLIT button (on screen)
2. The screen will show a page for each caller. Use the UP and DOWN arrows to browse the callers ON HOLD. Notice the 1/2 indication at the top-tight of the screen.
3. Press RESUME (on screen) to select a caller. They will now be connected to your handset. Terminate or park the call as required.
4. Repeat from Step 2 for every call ON HOLD.

\*NOTE:\* While a call is ON HOLD, it is not available to any other handset. To make the call available at any handset, /Resume/ the call and /PARK/ it.

**Transfer**

To transfer a call directly to a handset, without using the PARK feature

1. While on a call, press the TRANSFER button (on screen)
2. Dial the extension number the call where the call is be transferred.
  - a. Press TRANSFER button (on screen) to immediately send the call - or -
  - b. Wait for the transfer destination to answer i. Speak to the transfer destination. (usually used to

brief the destination about the call that is being transferred to them) ii. Hang up the handset. The call is now transferred to the destination.

## Yealink User Guide

Note - this section is taken directly from official manual. As such, it contains information not needed by presenters. TODO: Remove irrelevant information, review and reformat.

Copyright © 2014 YEALINK NETWORK TECHNOLOGY CO., LTD.

Copyright © 2014 Yealink Network Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording, or otherwise, for any purpose, without the express written permission of Yealink Network Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

When this publication is made available on media, Yealink Network Technology CO., LTD. gives its consent to downloading and printing copies of the content provided in this file only for private use but not for redistribution. No parts of this publication may be subject to alteration, modification or commercial use. Yealink Network Technology CO., LTD. will not be liable for any damages arising from use of an illegally modified or altered publication.

media/image005.png

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS GUIDE ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS GUIDE ARE BELIEVED TO BE ACCURATE AND PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF PRODUCTS. YEALINK NETWORK TECHNOLOGY CO., LTD. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS GUIDE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Yealink Network Technology CO., LTD. shall not be liable for errors contained herein nor for incidental or consequential damages in connection with the furnishing, performance, or use of this guide.

media/image006.png

Hereby, Yealink Network Technology CO., LTD. declares that this phone is in conformity with the essential requirements and other relevant provisions of the CE, FCC.

media/image011.png

This device is marked with the CE mark in compliance with EC Directives 2006/95/EC and 2004/108/EC.

media/image012.png

This device is compliant with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

media/image013.png

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

media/image014.png

media/image015.png

To avoid the potential effects on the environment and human health as a result of the

presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

media/image016.png

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocsFeedback@yealink.com](mailto:DocsFeedback@yealink.com). ■

media/image017.png

Yealink SIP-T28P firmware contains third-party software under the GNU General Public License (GPL). Yealink uses software under the specific terms of the GPL. Please refer to the GPL for the exact terms and conditions of the license.

The original GPL license, source code of components licensed under GPL and used in Yealink products can be downloaded online:

### About This Guide

media/image018.png

Thank you for choosing the SIP-T28P IP phone, exquisitely designed to provide business telephony features, such as Call Hold, Call Transfer, Busy Lamp Field, Multicast Paging and Conference over an IP network.

This guide provides everything you need to quickly use your new phone. First, verify with your system administrator that the IP network is ready for phone configuration. Also be sure to read the Packaging Contents and Regulatory Notices sections in this guide before you set up and use the SIP-T28P IP phone.

Shared Line, Network Directory and Network Call Log features are hidden for IP phones in neutral firmware version, which are designed for the BroadWorks environment. Please contact your system administrator for more information.

### Note

Topics provided in this guide include:

- Chapter 1 Overview
- Chapter 2 Getting Started
- Chapter 3 Customizing Your Phone
- Chapter 4 Basic Call Features
- Chapter 5 Advanced Phone Features

media/image023.png

This section describes the changes to this guide for each release and guide version.

The following section is new:

- Optional Accessor on page 10

Major updates have occurred to the following sections:

- DSS Keys on page 53
- Appendix A - Time Zones on page 147

The following sections are new:

- BLF List on page 111

Major updates have occurred to the following sections:

- LED Instructions on page 4
- Ring Tones on page 29
- Anonymous Call Rejection on page 107
- Multicast Paging on page 119
- Troubleshooting on page 133
- Appendix A - Time Zones on page 147

Major updates have occurred to the following sections:

- Documentations on page 8
- Packaging Contents on page 9
- Phone Installation on page 11
- Phone Status on page 14

Major updates have occurred to the following sections:

- LED Instructions on page 4
- Contrast on page 19
- Backlight on page 20
- Anonymous Call on page 106

Major updates have occurred to the following sections:

- Appendix A - Time Zones on page 147

Major updates have occurred to the following sections:

About This Guide

- LED Instructions on page 4
- Ring Tones on page 29
- Remote Phone Book on page 46
- Anonymous Call on page 106
- Troubleshooting on page 133

Major updates have occurred to the following sections:

- Phone Status on page 14
- Call Transfer on page 95
- Appendix A - Time Zones on page 147



Major updates have occurred to the following sections:

- Phone Status on page 14
- Remote Phone Book on page 46

The following sections are new:

- Recent Call In Dialing on page 78

Major updates have occurred to the following sections:

- Basic Network Settings on page 15
- Phone Lock on page 25
- Contact Management on page 31
- DSS Keys on page 53

media/image064.png

Major updates have occurred to the following sections:

- Phone Lock on page 25
- Volume on page 28
- Ring Tones on page 29
- Call Completion on page 81
- DSS Keys on page 53
- Do Not Disturb (DND) on page 84
- Call Forward on page 88
- Call Pickup on page 101
- Busy Lamp Field (BLF) on page 109

Table of Contents

About This Guide ..... v

In This Guide ..... ■  
v

Summary of Changes ..... ■  
v

Changes for Release 73, Guide Version 73.40 ..... ■  
v

Changes for Release 73, Guide Version 73.16 ..... ■  
vi

|                                                    |    |
|----------------------------------------------------|----|
| Changes for Release 72, Guide Version 72.25 .....  | ■  |
| vi                                                 |    |
| Changes for Release 72, Guide Version 72.1 .....   | ■  |
| vi                                                 |    |
| Changes for Release 71, Guide Version 71.165 ..... | ■  |
| vi                                                 |    |
| Changes for Release 71, Guide Version 71.140 ..... | ■  |
| vi                                                 |    |
| Changes for Release 71, Guide Version 71.125 ..... | ■  |
| vii                                                |    |
| Changes for Release 71, Guide Version 71.120 ..... | ■  |
| vii                                                |    |
| Changes for Release 71, Guide Version 71.110 ..... | ■  |
| vii                                                |    |
| Changes for Release 70, Guide Version 70 .....     | ■  |
| vii                                                |    |
| Table of Contents .....                            | ix |
| Overview .....                                     | 1  |
| Hardware Component Instructions .....              | ■  |
| 1                                                  |    |
| Icon Instructions .....                            | ■  |
| 3                                                  |    |
| LED Instructions .....                             | ■  |
| 4                                                  |    |
| User Interfaces .....                              | ■  |
| 5                                                  |    |
| Phone User Interface .....                         | ■  |
| 6                                                  |    |
| Web User Interface .....                           | ■  |
| 6                                                  |    |
| Documentations .....                               | ■  |
| 8                                                  |    |
| Getting Started .....                              | 9  |
| Packaging Contents .....                           | ■  |
| 9                                                  |    |
| Optional Accessories .....                         | ■  |
| 10                                                 |    |
| Phone Installation.....                            | ■  |
| 11                                                 |    |
| Phone Initialization .....                         | ■  |
| 13                                                 |    |

|                              |    |
|------------------------------|----|
| Phone Status.....            | ■  |
| 14                           |    |
| Basic Network Settings ..... | ■  |
| 15                           |    |
| Registration .....           | ■  |
| 17                           |    |
| Idle Screen .....            | ■  |
| 17                           |    |
| Customizing Your Phone ..... | 19 |
| General Settings .....       | ■  |
| 19                           |    |
| Contrast .....               | ■  |
| 19                           |    |
| Backlight .....              | ■  |
| 20                           |    |
| Language .....               | ■  |
| 20                           |    |
| Time & Date .....            | ■  |
| 21                           |    |
| Administrator Password ..... | ■  |
| 23                           |    |
| Key as Send .....            | ■  |
| 24                           |    |
| Phone Lock .....             | ■  |
| 25                           |    |
| Audio Settings .....         | ■  |
| 28                           |    |
| Volume .....                 | ■  |
| 28                           |    |
| Ring Tones .....             | ■  |
| 29                           |    |
| Contact Management .....     | ■  |
| 31                           |    |
| Directory .....              | ■  |
| 31                           |    |
| Local Directory .....        | ■  |
| 33                           |    |
| Blacklist.....               | ■  |
| 44                           |    |
| Remote Phone Book .....      | ■  |
| 46                           |    |

|                               |    |
|-------------------------------|----|
| Call History Management ..... | ■  |
| 48                            |    |
| System Customizations .....   | ■  |
| 50                            |    |
| Logo Customization .....      | ■  |
| 50                            |    |
| Headset Use .....             | ■  |
| 51                            |    |
| DSS Keys .....                | ■  |
| 53                            |    |
| Account Management .....      | ■  |
| 62                            |    |
| Dial Plan .....               | ■  |
| 65                            |    |
| Emergency Number .....        | ■  |
| 70                            |    |
| Live Dialpad .....            | ■  |
| 71                            |    |
| Hotline .....                 | ■  |
| 72                            |    |
| Basic Call Features .....     | 73 |
| Placing Calls .....           | ■  |
| 73                            |    |
| Answering Calls .....         | ■  |
| 75                            |    |
| Ending Calls .....            | ■  |
| 77                            |    |
| Redialing Numbers .....       | ■  |
| 77                            |    |
| Recent Call In Dialing .....  | ■  |
| 78                            |    |
| Auto Answer .....             | ■  |
| 79                            |    |
| Auto Redial .....             | ■  |
| 79                            |    |
| Call Completion .....         | ■  |
| 81                            |    |
| Recall .....                  | ■  |
| 82                            |    |
| Call Mute .....               | ■  |
| 83                            |    |

|                            |   |
|----------------------------|---|
| Call Hold/Resume .....     | ■ |
| 83                         |   |
| Do Not Disturb (DND) ..... | ■ |
| 84                         |   |
| Call Forward.....          | ■ |
| 88                         |   |
| Call Transfer .....        | ■ |
| 95                         |   |
| Call Waiting .....         | ■ |
| 96                         |   |
| Conference.....            | ■ |
| 97                         |   |

#### Table of Contents

|                                |     |
|--------------------------------|-----|
| Local Conference .....         | ■   |
| 97                             |     |
| Network Conference .....       | ■   |
| 98                             |     |
| Call Park .....                | ■   |
| 100                            |     |
| Call Pickup .....              | ■   |
| 101                            |     |
| Anonymous Call .....           | ■   |
| 106                            |     |
| Anonymous Call Rejection ..... | ■   |
| 107                            |     |
| Advanced Phone Features .....  | 109 |
| Busy Lamp Field (BLF).....     | ■   |
| 109                            |     |
| BLF List .....                 | ■   |
| 111                            |     |
| Call Recording .....           | ■   |
| 113                            |     |
| Hot Desking .....              | ■   |
| 115                            |     |
| Intercom .....                 | ■   |
| 117                            |     |
| Outgoing Intercom Calls .....  | ■   |
| 117                            |     |
| Incoming Intercom Calls .....  | ■   |
| 117                            |     |

|                                       |     |   |
|---------------------------------------|-----|---|
| Multicast Paging .....                | 119 | ■ |
| Sending RTP Stream .....              | 119 | ■ |
| Receiving RTP Stream .....            | 123 | ■ |
| Music on Hold .....                   | 124 | ■ |
| Messages .....                        | 126 | ■ |
| Short Message Service (SMS) .....     | 126 | ■ |
| Voice Mail.....                       | 129 | ■ |
| Message Waiting Indicator (MWI) ..... | 130 | ■ |
| Troubleshooting .....                 | 133 |   |
| Regulatory Notices .....              | 143 |   |
| Service Agreements .....              | 143 | ■ |
| Limitations of Liability .....        | 143 | ■ |
| Safety Instructions .....             | 143 | ■ |
| Appendix A - Time Zones .....         | 147 |   |
| Index .....                           | 151 |   |

This chapter provides the overview of the SIP-T28P IP phone. Topics include:

- Hardware Component Instructions
- Icon Instructions
- LED Instructions
- User Interfaces
- Documentations

If you require additional information or assistance with your new phone, contact your system administrator.

The main hardware components of the SIP-T28P IP phone are the LCD screen and the keypad.



Hardware component instructions of the SIP-T28P IP phone are:  
Item Description

#### LCD Screen

Shows information about calls, messages, soft keys, time, date and other relevant data:

- Call information — caller ID, call duration
- Icons (for example, `media/image076.png`)
- Missed call text or second incoming caller information
- Prompt text (for example, "Saving config file!")
- Time and date

#### Power Indicator LED

Indicates phone power status and phone status.

#### Line Keys

Use these keys to activate up to six accounts and assign various features.

#### Memory Keys

Use these keys to assign various features.

#### MESSAGE Key

Indicates and accesses voice mails.

**HEADSET Key**

Toggles and indicates the headset mode.

**HOLD Key**

Places a call on hold or resumes a held call.

**TRAN Key**

Transfers a call to another party.

**MUTE Key**

Mutes or un-mutes an active call.

**Speakerphone Key**

Toggles the hands-free speakerphone mode.

**RD Key**

Redials a previously dialed number.

**CONF Key**

Conducts a conference call with multiple other parties.

**Volume Key**

Adjusts the volume of the handset, headset, speaker, and ringer.

**Keypad**

Provides the digits, letters and special characters in context-sensitive applications.

Scroll through the displayed information.

 media/image085.png

Confirms actions or answers incoming calls.

 media/image086.png

Cancels actions or rejects incoming calls.

**Soft Keys**

Label automatically to identify their context-sensitive features.


**Speaker**



Provides ringer and hands-free (speakerphone) audio output.

Hookswitch

Picking up the handset from the handset cradle, the hookswitch bounces and the phone connects to the line, laying the handset down on the handset cradle, the phone disconnects from the line.



Icons appearing on the LCD screen are described in the following table:

| Icons                         | Description |
|-------------------------------|-------------|
| <div>media/image088.png</div> |             |
| <div>media/image089.png</div> |             |
| <div>media/image090.png</div> |             |
| <div>media/image091.png</div> |             |
| <div>media/image092.png</div> |             |
| <div>media/image093.png</div> |             |
| <div>media/image094.png</div> |             |
| <div>media/image095.png</div> |             |
| <div>media/image096.png</div> |             |
| <div>media/image097.png</div> |             |
| <div>media/image098.png</div> |             |
| <div>media/image099.png</div> |             |

mode

`media/image100.png`

`media/image101.png`

`media/image102.png`

media/image103.png

media/image104.png

media/image105.png

Icons

Description

media/image106.png

media/image107.png

media/image108.png

media/image109.png

media/image110.png

media/image111.png

media/image112.png

media/image113.png

media/image114.png

media/image115.png

media/image116.png

media/image117.png

Power Indicator LED (Hardware version must be 1.0.0.2 or higher)  
LED Status

Description

- The phone is initializing.
- The phone is busy.
- The phone is idle.
- The call is placed on hold or is held.
- The phone receives a text message or voice mail.
- The phone is ringing.
- The call is muted.
- The phone is powered off.

Line key LED

LED Status

Description

The above introduces the default LED status. The statuses of the power indicator LED and BLF key are configurable via web user interface. For more information, refer to *Yealink\_SIP-T2xP\_IP\_Phones\_Administrator\_Guide*.

#### Note

Two ways to customize configurations of your SIP-T28P IP phone:

- The user interface on the IP phone.
- The user interface in a web browser on your PC.

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many cases, either the phone user interface and/or the web user interface interchangeably. However, in some cases, it is only possible to use one or the other interface to operate the phone and change settings.

`media/image122.png`

You can customize your phone by pressing the Menu soft key to access the phone user interface. The Advanced Settings option is only accessible to the administrator, and the default administrator password is “admin” (case-sensitive). For more information on customizing your phone with the available options from the phone user interface, refer to *Customizing Your Phone* on page 19.

`media/image123.png`

In addition to the phone user interface, you can also customize your phone via web user interface. In order to access the web user interface, you need to know the IP address of your new phone. To obtain the IP address, press the OK key on the phone when the phone is idle. Enter the IP address (e.g., `http://192.168.0.10` or `192.168.0.10`) in the address bar of a web browser on your PC. The default administrator user name and password are both “admin” (case-sensitive).

The options you can use to customize the IP phone via phone user interface and/or via web user interface are listed in the following table:

Options

Phone User Interface

Web User Interface

Status

- IP Address
- MAC
- Firmware
- Network
- Phone
- Accounts

Basic Phone Settings

- Contrast
- Backlight
- Language
- Time & Date
- Administrator Password

- Key as Send

Options

Phone User Interface

Web User Interface

- Phone Lock

- Ring Tones

- Contact Management

- Directory

- Local Directory

- Blacklist

- Remote Phone Book

- Call History Management

- Logo Customization

--DSS Keys

--Account Registration

--Dial Plan

--Emergency Number

--Live Dialpad

--Hotline

Basic Call Features

--Recent Call In Dialing

--Auto Answer

--Auto Redial

--Call Completion

--Recall

--Do Not Disturb (DND)

--Call Forward

--Call Transfer

--Call Waiting

--Conference

--Call Park

--Call Pickup

--Anonymous Call

--Anonymous Call Rejection

Advanced Phone Features

--Busy Lamp Field (BLF)

--BLF List

--Call Recording

--Hot Desking

--Intercom

--Multicast Paging

--Music on Hold

--Messages

SIP Account

--User Options

Options

Phone User Interface

Web User Interface

--Account Status

--Label

--Display Name

--Register Name

--User Name

--Password

--SIP Server1/2

--Server Option

--Registrar Port

--Outbound Status

--Outbound Proxy

--NAT Traversal

--STUN Status

--STUN Server

The table above lists most of the feature options. Please refer to the relevant sections for more information.

Note

The following table shows documentations available for the SIP-T28P IP phone.

| Name | Contents | Where found | Language |
|------|----------|-------------|----------|
|------|----------|-------------|----------|

Quick Start Guide



## User Guide

You can also download the latest documentations online:

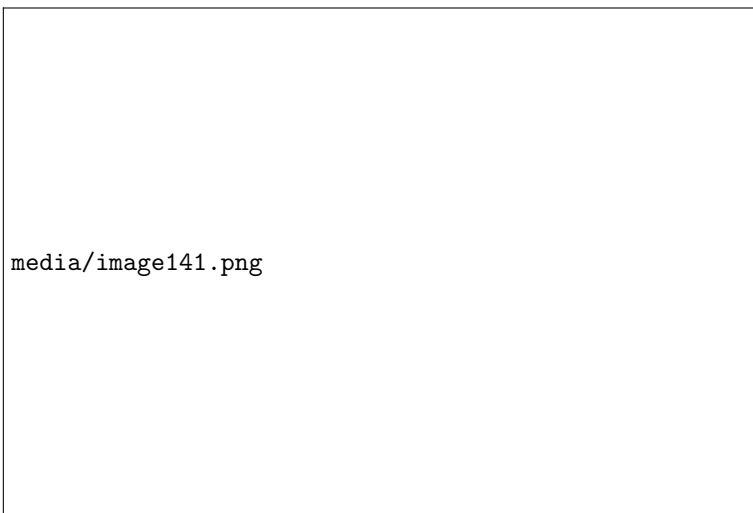
Note

This chapter provides basic installation instructions and information for obtaining the best performance with the SIP-T28P IP phone. Topics include:

- Packaging Contents
- Phone Installation
- Phone Initialization
- Phone Status
- Basic Network Settings
- Registration
- Idle Screen

If you require additional information or assistance with your new phone, contact your system administrator.

The following components are included in your SIP-T28P IP phone package:



- Phone Stand



- Handset & Handset Cord



DD/MM/YYYY

MM/DD/YY

DD MMM YYYY

26 Jul 2014

Sat 26 Jul


Time and date is configurable via web user interface at the path Settings->Time & Date.

The Advanced Settings option is only accessible to the administrator. The default administrator password is “admin”. For security reasons, you should change the default administrator password as soon as possible.

To change the administrator password via phone user interface:

1. Press Menu->Settings->Advanced Settings (default password: admin) ->Set Password.
2. Enter the old password in the Current PWD field.
3. Enter the new password in the New PWD field.
4. Re-enter the new password in the Confirm PWD field.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

Administrator password is configurable via web user interface at the path Security->Password.

media/image220.png

You can set the “#” or “\*” to perform as a send key while dialing.

To configure key as send via phone user interface:

1. Press Menu->Features->Key as Send.
2.  
Press  
or  
, or the  
Switch  
soft key  
to  
select  
#  
or  
\*

from  
the  
Key as  
Send  
field  
,  
or  
select  
Disable  
d  
to disable this feature  
.

3. Press the Save soft key to accept the change or the Back soft key to cancel.

Key as send is configurable via web user interface at the path Features->General Information.

You can lock your phone temporarily when you are not using it. This feature helps to protect your phone from unauthorized use.

Phone lock consists of the following:

**Menu Key:** The Menu soft key and MESSAGE key are locked. You cannot

access the menu of the phone until unlocked.

**Function Keys:** The function keys are locked. You cannot use the MESSAGE, RD, CONF, HOLD, MUTE, TRAN, OK, X, navigation keys, soft keys, line keys and memory keys until unlocked.

**All Keys:** All keys are locked except the Volume key. You are only allowed

to dial emergency numbers, reject incoming calls by pressing the X key, answer incoming calls by lifting the handset, pressing the Speakerphone key, the HEADSET key or the OK key, place an active call on hold by pressing the Hold soft key or the HOLD key, resume the held call by pressing the Resume soft key or the HOLD key, and end the call by pressing the X key, hanging up the handset, pressing the Speakerphone key.

The emergency number setting, if desired, must be made before lock activation. For more information, refer to Emergency Number on page 70.

#### Note

To activate the phone lock via phone user interface:

1. Press Menu->Settings->Advanced Settings (default password: admin) ->Phone Lock.
2.  
Lock field.

Press  
or  
, or the  
Switch  
soft key  
to  
select  
the  
desired type from  
the  
Phone

3. Press the Save soft key to accept the change.

4.  Long press to lock the phone immediately when the phone is idle.

The  
LCD screen prompts

“  
Phone  
locked

.”

and  
displays  
the  
icon

.

 You can specify the interval (in seconds) to automatically lock

the phone instead of long pressing .

To configure the interval of automatic phone lock via web user interface:

1. Click on Features->Phone Lock.

2. Enter the desired interval in the Phone Lock Time Out (0~3600s) field.

3. Click Confirm to accept the change.

 The default interval is 0 second, that is, you need to long press to lock

the phone.

The interval of automatic phone lock is configurable via web user interface only.

Note

To unlock the phone, you must know the phone unlock PIN of the phone. The default phone unlock PIN is “123”.

To change the phone unlock PIN via phone user interface:

1. Press Menu->Settings->Basic Settings->Change PIN.
2. Enter the old PIN in the Current PIN field.
3. Enter the new PIN in the New PIN field.
4. Re-enter the new password in the Confirm PIN field.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

Note The unlock PIN length must be within 15 digits.

To unlock the phone via phone user interface:

1. Press any locked key, the LCD screen prompts “Please Enter PIN”.
2. Enter the PIN in the Phone Unlock PIN field.
3. Press the OK soft key to unlock the phone.

The  icon disappears from the LCD screen.

You can long press  or wait for a period of time (if configured) to lock the phone again.

Note You can also unlock the phone by administrator password. When you enter the administrator password to unlock the phone, the phone will turn to the Reset Phone PIN screen.


To deactivate the phone lock via phone user interface:


1. Press Menu->Settings->Advanced Settings (default password: admin) ->Phone Lock.
2. field.

Press  
or  
, or the  
Switch  
soft key  
to select  
Disable  
d  
from  
the  
Phone  
Lock

3. Press the Save soft key to accept the change.

Phone lock is configurable via web user interface at the path Features- >Phone Lock.





You can press the Volume key to adjust the ringer volume when the phone is idle. You can also press the Volume key to adjust the receiver volume of currently engaged audio devices (handset, speakerphone or headset) when the phone is in use.


To adjust the volume when the phone is idle:


1. Press  
to adjust the ringer volume

 If the ringer volume is adjusted to minimum, the icon will appear on the LCD screen.

Note

To adjust the volume when the phone is during a call:

1. Press  to adjust the volume of currently engaged audio device (handset, speakerphone or headset).



Ring tones are used to indicate incoming calls. You can select different ring tones to distinguish different accounts registered on your phone, or to distinguish your phone from your neighbor's.

To select a ring tone for the phone via phone user interface:

1. Press Menu->Settings->Basic Settings ->Sound->Ring Tones->Common. ■
2. Press  
or  
to select the desired ring tone.
3. Press the Save soft key to accept the change or the Back soft key to cancel.

A ring tone for the phone is configurable via web user interface at the path Settings->Preference->Ring Type.

To select a ring tone for the account via phone user interface:

1. Press Menu->Settings->Basic Settings ->Sound->Ring Tones.
2. Press  
or  
to select the desired  
account  
and then press the

Enter  
soft k  
ey  
.

3.

Press or to select the desired ring tone.

If Common is selected, this account will use the ring tone selected for the phone.

4. Press the Save soft key to accept the change or the Back soft key to cancel.

A ring tone for the account is configurable via web user interface at the path Account->Basic->Ring Type.

The ring tone for an incoming call on the phone may be different. For example, when the phone receives an incoming call from a contact stored in the local directory, it will play the ring tone assigned to the contact in the contact directory (refer to Adding Contacts). If no ring tone is assigned to the contact, the phone will play the ring tone assigned to the associated group (refer to Adding Groups). Otherwise, the phone will play the ring tone assigned to the account. If no ring tone is assigned to the contact, the associated group or account, the phone will play the ring tone assigned to the phone.

Note

To upload a custom ring tone for your phone via web user interface:

1. Click on Settings->Preference.
2. Click Browse to locate a ring tone file (the file format must be \*.wav) from your local system.
3. Click Upload to upload the file.

All custom ring tone files must be no greater than 100KB.


Custom ring tones for your phone can be uploaded via web user interface only.

Note

media/image260.png

This section provides the operating instructions for managing contacts. Topics include:

- Directory
- Local Directory
- Blacklist
- Remote Phone Book

 media/image261.png

Directory provides easy access to frequently used lists. The lists may contain Local Directory, History, Remote Phone Book and LDAP.

To configure the directory via web user interface:

1. Click on Directory->Setting.
2. In the Directory block, select the desired list from the Disabled column and then click .

The selected list appears in the Enabled column.

3. Repeat step 2 to add more lists to the Enabled column.
4.  To remove a list from the Enabled column, select the desired list and then click .
5. To adjust the display order of list, select the desired list and then click or .

The LCD screen will display the list(s) in the adjusted order.

6. Click Confirm to accept the change.

Directory is configurable via web user interface only. ■


#### Note

To view the directory via phone user interface:


1. Press the Directory soft key when the phone is idle.

The LCD screen displays the list(s) in the directory.

If there is only one list in the directory, press the Directory soft key to enter this list directly.

 media/image272.png

The built-in phone directory can store the names and phone numbers of your contacts. You can store up to 1000 contacts and 5 groups in your phone's local directory. You can add new groups and contacts, edit, delete or search for a contact, or simply dial a contact number from the local directory.

 media/image273.png

To add a group to the local directory:

1. Press the Directory soft key.




The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory->Local Directory to enter the local directory.

2. Press the Add Group soft key.
3. Enter the desired group name in the Name field.
4. Press or , or the Switch soft key to select the desired group ring tone from the Ring field.

If Auto is selected, this group will use the ring tone specified for the contact. If no ring tone is specified for the contact, it will then play the ring tone specified for the account. For more information on ring tone for the account, refer to Ring Tones on page 29.

5. Press the Add soft key to accept the change or the Back soft key to cancel.



To edit a group in the local directory:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.


If Local Directory is removed from the directory, press Menu->Directory->Local Directory to enter the local directory.

2. Select the desired group (e.g., Test).
3. Press the Option soft key, and then select Detail from the prompt list.

Press  
or  
to  
select  
the  
group  
information and then edit.

- 4.

5. Press the Save soft key to accept change or the Back soft key to cancel.



To delete a group from the local directory:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory- >Local Directory to enter the local directory.


2. Select the desired group (e.g., Test).
3. Press the Option soft key, and then select Delete from the prompt list.

The LCD screen prompts “Delete selected group?”.

4. Press the OK soft key to confirm the deletion or the Cancel soft key to cancel.

You can also delete all groups by pressing the Option soft key and then select Delete All.

For more information, refer to the above steps.



You can add contacts to your local directory in one of the following ways:

- Manually
- From call history
- From a remote phone book

To add a contact to the local directory manually:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory- >Local Directory to enter the local directory.

2. Press the Enter soft key.

If the groups have been added to the local directory, select the desired group and then press the Enter soft key.

3. Press the Add soft key.
4. Enter the name and the office name, mobile name or other number in the corresponding fields.

Press  
or  
, or the  
Switch  
soft key  
to  
select the desired  
account  
from  
the

5.

Account field.

If Auto is selected, the phone will use the first available account when placing calls to the contact from the local directory.

6. Press or , or the Switch soft key to select the desired ring tone from the Ring field.

If Auto is selected, this contact will use the ring tone assigned to the group. 7. Press the Add soft key to accept the change or the Back soft key to cancel.

Note If the contact already exists in the directory, the LCD screen will prompt "Contact name existed!".

To add a contact to the local directory from call history:

1. Press the History soft key.
2. Press or to select the desired entry.
3. Press the Option soft key, and then select Add to Contacts from the prompt list.
4. Enter the contact name.
5. Press the Save soft key to accept the change.

The entry is successfully saved to the local directory.

To add a contact to the local directory from a remote phone book:

1. Press Directory->Remote Phone Book.


If Remote Phone Book is removed from the directory, press Menu->Directory->Remote Phonebook to enter the remote phone book.

2. Press or to select the desired contact.
3. Press the Option soft key, and then select Add to Contacts from the prompt list.

4. Press the Save soft key to save the contact to the local directory.

If the contact already exists in the local directory, the LCD screen will prompt "Overwrite the original contact?". Press the OK soft key to overwrite the original contact in the local directory or the Cancel soft key to cancel.

For more information on remote phone book operating, refer to Remote Phone Book on page 46.



To edit a contact in the local directory:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory->Local Directory to enter the local directory.

2. Press the Enter soft key.


If the groups have been added to the local directory, select the desired group and then press the Enter soft key.

3. Press or to select the desired contact.
4. Press the Option soft key, and then select Detail from the prompt list.

Press  
or  
to  
select  
the contact information and then edit.

- 5.

6. Press the Save soft key to accept change or the Back soft key to cancel.



To delete a contact from the local directory:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory->Local Directory to enter the local directory.

2. Press the Enter soft key.

If the groups have been added to the local directory, select the desired group and then press the Enter soft key.

3. Press or to select the desired contact.
4. Press the Option soft key, and then select Delete from the prompt list.

The LCD screen prompts “Delete selected item?”.

5. Press the OK soft key to confirm the deletion or the Cancel soft key to cancel.

media/image297.png

To place a call to a contact from the local directory:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory-█>Local Directory to enter the local directory.

2. Press the Enter soft key.

If the groups have been added to the local directory, select the desired group and then press the Enter soft key.

3. Press or to select the desired contact.
4. Do one of the following:
  - If only one number for the contact is stored in the local directory, press the Send soft key to dial out the number.
  - If multiple numbers for the contact are stored in the local directory, press the Send soft key to display a list of numbers.

Press or to select the desired number.

Press the Send soft key to dial out the number.

media/image298.png

To search for a contact in the local directory:


1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory-█>Local Directory to enter the local directory.

2. Press or to select the All Contacts field.
3. Press the Search soft key.
4. Enter a few continuous characters of the contact name or continuous numbers of the contact number (office number, mobile number or other number) using the keypad.

The contacts whose name or phone number matches the characters entered will appear on the LCD screen. You can dial from the result list.





You can search for a contact in your desired lists when the phone is in the dialing screen.

The lists may contain Local Directory, History, Remote Phone Book and LDAP.

To configure search source list in dialing via web user interface:

1. Click on Directory->Setting.
2.  In the Search Source List In Dialing block, select the desired list from the Disabled column and then click .

The selected list appears in the Enabled column.

3. Repeat step 2 to add more lists to the Enabled column.
4.  To remove a list from the Enabled column, select the desired list and then click .
5.  To adjust the display order of search results, select the desired list and then click or .

The LCD screen will display search results in the adjusted order.

6. Click Confirm to accept the change.

Search source list in dialing is configurable via web user interface only. ■

#### Note

To search for a contact in the enabled search source lists:

1. Pick up the handset, press the speakerphone or press the line key.
2. Enter a few continuous characters of the contact name or continuous numbers of the contact number (office number, mobile number or other number) using the keypad.

The contacts in the enabled search source lists whose name or phone number matches the characters entered will appear on the LCD screen. You can press  or  to scroll to the desired contact and then place a call to the contact.

You can manage your phone's local directory via phone or web user interface. But you can only import or export the contact list via web user interface.

To import an XML contact list file via web user interface:

1. Click on Directory->Local Directory.
2. Click Browse to locate a contact list file (the file format must be \*.xml) from your local system.
3. Click Import XML to import the contact list.

The web user interface prompts "The original contact will be covered, Continue?".

4. Click OK to complete importing the contact list.

To import a CSV contact list file via web user interface:

1. Click on Directory->Local Directory.
2. Click Browse to locate a contact list file (the file format must be \*.csv) from your local system.
3. (Optional.) Check the Show Title checkbox.

It will prevent importing the title of the contact information which is located in the first line of the CSV file.

4. Click Import CSV to import the contact list.
5. (Optional.) Mark the On radio box in the Delete Old Contacts field.

It will delete all existing contacts while importing the contact list.

6. Select the contact information you want to import into the local directory from the pull down list of Index.

At least one item should be selected to be imported into the local directory.

7. Click Import to complete importing the contact list.


To export a contact list via web user interface:

1. Click on Directory->Local Directory.
2. Click Export XML (or Export CSV).

3. Click Save to save the contact list to your local system.

Contact lists can be imported/exported via web user interface only. ■

#### Note

318.png

The built-in phone directory can store names and phone numbers for a blacklist. You can store up to 30 contacts, add, edit, delete or search for a contact in the blacklist directory, and even call a contact from the blacklist directory. Incoming calls from blacklist directory contacts will be rejected automatically.

To add a contact to the blacklist manually:

1. Press Menu->Directory->Blacklist.
2. Press the Add soft key.
3. Enter the name and the office, mobile or other numbers in the corresponding fields.

Press or , or the  
Switch  
soft key to select the desired account from the

4.

Account field.

If Auto is selected, the phone will use the first available account when placing calls to the contact from the blacklist.

5. Press the Add soft key to accept the change or the Back soft key to cancel.

To add a contact to the blacklist from the local directory:

1. Press the Directory soft key.

The IP phone enters the local directory directly as there is only Local Directory enabled in the directory by default.

If Local Directory is removed from the directory, press Menu->Directory-->Local Directory to enter the local directory.

2. Press the Enter soft key.

If the groups have been added to the local directory, select the desired group and then press the Enter soft key.

3. Press or to select the desired contact.
4. Press the Option soft key and then select Add to Blacklist from the prompt list.



The LCD screen prompts "Move selected to blacklist?".

5. Press the Ok soft key to confirm the setting.

For more operating instructions on editing, deleting, placing calls to and/or searching for contacts in the blacklist, refer to the operating instructions of Local Directory on page

33.

You can add new contacts to the local directory, search for a contact, or simply dial a contact number from the remote phone book.

You can configure your new phone to access up to 5 remote phone books. The phone supports up to 2500 remote phone book entries. For the access URL of the remote phone book, contact your system administrator.

To configure an access URL for a remote phone book via web user interface:

1. Click on Directory->Remote Phone Book.
2. Enter the access URL in the Remote URL field.
3. Enter the name in the Display Name field.

4.  
Click  
Confirm  
to  
accept  
the  
change

An access URL for a remote phone book is configurable via web user interface only.

Note

To access your remote phone book via phone user interface:

1. Press Menu->Directory->Remote Phone Book.

If Remote Phone Book is added to the directory, press Directory->Remote Phone Book to enter the remote phone book.

2. Select the desired remote group, and then press the Enter soft key.

The phone then connects to the remote phone book and proceeds to load it. The contacts in the remote phone book are displayed on the LCD screen.

3. Press the Back soft key to back to the previous interface.

To search for a contact in the remote phone book:

1. Press Menu->Directory->Remote Phone Book.

If Remote Phone Book is added to the directory, press Directory->Remote Phone Book to enter the remote phone book.

2. Select the desired remote group, and then press the Enter soft key to load the remote phone book.
3. Press the Search soft key.
4. Enter a few continuous characters of the contact name or continuous numbers of the contact number using the keypad.

The contacts whose name or phone number matches the characters entered will appear on the LCD screen. You can dial from the result list.

To place a call from the remote phone book:

1. Press Menu->Directory->Remote Phone Book.

If Remote Phone Book is added to the directory, press Directory->Remote Phone

Book to enter the remote phone book.

2. Select the desired remote group, and then press the Enter soft key to load the remote phone book.
3. Select the desired contact in the remote phone book.
4. Press the Send soft key.

In addition, you can enable the phone to present the caller identify stored in the remote phone book when receiving a call.

To enable the presentation of caller identify stored in a remote phone book via web user interface:

1. Click on Directory->Remote Phone Book.
2. Select Enabled from the pull-down list of Incoming/Outgoing Call lookup.
3. Enter the desired refresh period in the Update Time Interval (Seconds) field.

The default value is 21600 seconds.

4. Click Confirm to accept the change.

The SIP-T28P IP phone maintains call history lists of Placed Calls, Received Calls, Missed Calls and Forwarded Calls. Call history lists support 100 entries in all. You can view call history, place a call, add a contact or delete an entry from the call history list.

History record feature is enabled by default. If you don't want to save the call history, you can disable the feature.

To disable history record via phone user interface:

1. Press Menu->Features->History Setting.

field.

- 2.

Press

or

, or the

Switch

soft key

to select

Disable

d

from

the

History Record

3. Press the Save soft key to accept the change or the Back soft key to cancel.

To view call history:

1. Press the History soft key.

The LCD screen displays All Calls list.

2. Press or to switch between All Calls, Placed Calls, Received Calls, Missed Calls and Forwarded Calls.
3. Press or to select the desired entry.
4. Press the Option soft key, and then select Detail from the prompt list.

The detailed information of the entry appears on the LCD screen.

To place a call from the call history list:

1. Press the History soft key.
2. Press or to switch between All Calls, Placed Calls, Received Calls, Missed Calls and Forwarded Calls.
3. Press or to select the desired entry.
4. Press the Send soft key.

To add a contact to the local directory or blacklist from the call history list:

1. Press the History soft key.
2. Press or to switch between All Calls, Placed Calls, Received Calls, Missed Calls and Forwarded Calls.
3. Press or to select the desired entry.
4. Press the Option soft key, and then select Add to Contacts (or Add to Blacklist) from the prompt list.
5. Enter the desired values in the corresponding fields, and then press the Save soft key.

For more information, refer to Contact Management on page 31.

To delete an entry from the call history list:

1. Press the History soft key.
2. Press or to switch between All Calls, Placed Calls, Received Calls, Missed Calls and Forwarded Calls.
3. Press or to select the desired entry.
4. Press the Delete soft key.

To delete all entries from the call history list:

1. Press the History soft key.
2. Press or to switch between All Calls, Placed Calls, Received Calls, Missed Calls and Forwarded Calls
3. Press the Option soft key, and then select Delete All from the prompt list.
4. Press the OK soft key.

The LCD screen prompts "Delete all the call records?".

5. Press the OK soft key to confirm the deletion or the Cancel soft key to cancel.

media/image341.png

media/image342.png

You can upload your custom logo which will be displayed on the idle screen.

To upload a custom logo via web user interface:


1. Click on Features->General Information.

2. Select Custom logo from the pull-down list of Use Logo.
3. Click Browse to locate the logo file from your local system.
4. Click Upload to upload the file.
5. Click Confirm to accept the change.

The logo file format must be \*.dob, contact your system administrator for more information.


A custom logo can be uploaded via web user interface only.

#### Note

 media/image345.png


Physically connect your headset and activate the headset mode for use. For more information on physically connecting a headset, refer to Phone Installation on page 11

To activate the headset mode:


1. Press  on the phone:

The HEADSET key LED illuminates solid green when the headset mode is activated. Press the line key or the Answer soft key to answer a call. The call will connect to your headset automatically. Enter the desired number and press the Send soft key, the phone will then place a call using the headset automatically. For more information on using the headset to place a call, refer to Placing Calls on page 73.

To deactivate the headset mode:

1. Press  again on the phone.

The HEADSET key LED goes out when the headset mode is deactivated.

 media/image353.png

You can use headset in priority when headset prior feature is enabled. This feature is especially useful for permanent or full-time headset users.

To enable headset prior via web user interface:

1. Click on Features->General Information.
2. Select Enabled from the pull-down list of Headset Prior.
3. Click Confirm to accept the change.

To use headset prior, you should activate the headset mode in advance:

1. Physically connect the headset.

2. Press  to activate the headset mode.

If headset prior is enabled, the headset mode will not be deactivated until you press the HEADSET key again.

If headset prior is disabled, the headset mode can be deactivated by pressing the speakerphone key or the HEADSET key.

Headset prior is configurable via web user interface only.

#### Note



You can use two headsets when dual headset feature is enabled. To use this feature, you must physically connect headsets to the headset jack and handset jack respectively. Once the phone connects to a call, the headset connected to the headset jack will have full-duplex capabilities, while the one connected to the handset jack will only be able to listen.

To enable dual headset via web user interface:

1. Click on Features->General Information.
2. Select Enabled from the pull-down list of Dual-Headset.
3. Click Confirm to accept the change.

Dual headset is configurable via web user interface only.

#### Note



There are four types of DSS keys: Memory Keys, Line Keys, Programmable Keys and Ext Keys. The details will be introduced in the following. The use of line keys and memory keys are almost the same. The SIP-T28P IP phone supports 10 memory keys and 6 line keys.



You can assign predefined functionalities to the memory keys located on the right of the phone. Memory keys allow you to have quick access to features such as recall and voice mail. The memory key LEDs will indicate status when the keys are assigned with particular features, such as BLF. The default key type of each memory key is N/A, which indicates that this memory key provides no functionality until configuration.

To configure a memory key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys.

2. Select the desired memory key, and then press the Enter soft key.
3. Select the desired key type from the Type field.
4. (Optional.) Select the desired key event type from the Key Type field.
5. (Optional.) Select the desired account from the Account ID field.
6. (Optional.) Enter the corresponding value in the Value field.
7. (Optional.) Enter the corresponding value in the Extension field.
8. Press the Save soft key to accept the change or the Back soft key to cancel.

Memory key is configurable via web user interface at the path  
DSSKey->Memory Key.

When the phone is idle, you can also long press the memory key to configure it directly on the phone.

#### Note

Common used memory key features are explained in the following subchapters in detail:

- Line
- Speed Dial
- Voice Mail
- Directed Pickup
- Group Pickup
- DTMF
- Prefix
- Local Group
- XML Group
- XML Browser
- LDAP
- Conference
- Forward
- Transfer
- Hold
- DND

- SMS
- Group Listening
- Zero Touch
- URL
- Phone Lock
- Directory

For the features not listed above, refer to Basic Call Features on page 73 and Advanced Phone Features on page 109. For more information, contact your system administrator.

#### Line

You can use this key feature to accept incoming calls, place active calls on hold or resume a held call. It performs in the same way as a hard line key.

Dependencies: Type (Line)

Account ID (the account this feature will be applied to)

Label (key label displayed on the LCD screen) Usage: When receiving an incoming call, the DSS key LED flashes green:

1. Press the DSS key to accept the incoming call.
2. Press the DSS key to place a new call.

The active call is placed on hold.

3. Press the DSS key to cancel the new call.
4. Press the DSS key again to resume the held call.

#### Speed Dial

You can use this key feature to speed up dialing the numbers frequently used or hard to remember.

Dependencies: Type (Speed Dial)

Account ID (the account this feature will be applied to)

Value (the number you want to dial out)

Usage: Press the DSS key to dial out the number specified in the Value field, using the account selected from the Account ID field.

#### Voice Mail

You can use this key feature to quickly connect voice mail. For more information, refer to Voice Mail on page 129.

Dependencies: Type (Key Event)

Key Type (Voice Mail)

Account ID (the account this feature will be applied to)



Value (the voice mail access code)

Usage: Press the DSS key to dial out the voice mail access code. Then follow the voice prompt to listen to voice mails.

Directed Pickup

You can use this key feature to answer someone else's incoming call on the phone.

Dependencies: Type (Key Event)

Key Type (DPickup)

Account ID (the account this feature will be applied to)

Value (the directed pickup code followed by the target phone number)

Usage: Press the DSS key on your phone when the target phone number receives an incoming call. The call is then answered on your phone.

Group Pickup

You can use this key feature to answer incoming calls in a group that is associated with their own group.

Dependencies: Type (Key Event)

Key Type (GPickup)

Account ID (the account this feature will be applied to)

Value (the group pickup feature code)

Usage: Press the DSS key on your phone when a phone number in the group receives an incoming call. The call is answered on your phone.

DTMF

You can use this key feature to send the specification of arbitrary key sequences via DTMF.

Dependencies: Type (Key Event)

Key Type (DTMF)

Value (DTMF sequence)

DTMF sequence only contains "0-9", "\*", "#", and "A-D".

Note

Usage: Press the DSS key during an active call to send the key sequence specified in the Value field. Prefix

You can use this key feature to add a specified prefix number before the dialed number.

Dependencies: Type (Key Event)

Key Type (Prefix)

Value (the prefix number)

Usage: Press the DSS key when the phone is idle, the phone will then enter the pre-dialing screen and display the prefix number that you specified in the Value field.

You can enter the remaining digits.

#### Local Group

You can use this key feature to quickly access a group in the local directory. For more information, refer to Local Directory on page 33.

Dependencies: Type (Key Event)

Key Type (Local Group)

Usage: Press the DSS key to access the group specified in the Local Group field.

#### XML Group

You can use this key feature to quickly access a remote group in your remote phone book. You should configure a remote phone book in advance. For more information, refer to Remote Phone Book on page 46.

Dependencies: Type (Key Event)

Key Type (XML Group)

Phone Book Name (the remote group you want to access if the remote phone book is configured)

Usage: Press the DSS key to access the remote group specified in the Phone Book Name field.

#### XML Browser

You can use this key feature to quickly access a XML browser. The XML browser allows you to create custom services which meet your functional requirements on the server.

You can customize practical applications, such as weather report, stock information, Google search, etc.

Dependencies: Type (XML Browser)

Value (the access URL for xml browser)

Usage: Press the DSS key to access the XML browser specified in the Value field.

#### LDAP

You can use this key feature to quickly access a LDAP search screen.

Dependencies: Type (Key Event)

Key Type (LDAP)

Usage:

1. Press the DSS key to access the LDAP search screen.
2. Enter a few continuous characters of the contact name or continuous numbers of the contact number using the keypad.

The contacts whose name or phone number matches the characters entered will appear on the LCD screen.

#### Conference

You can use this key feature to set up a conference call. For more information, refer to Conference on page 97.

Dependencies: Type (Key Event)

Key Type (Conf)

Value (the number you want to add to the conference)

Usage: Press the DSS key during an active call to set up a conference with the number specified in the Value field.

If the Value field is left blank, the DSS key performs the same function as the CONF key or the Conf soft key during a call.

#### Note

##### Forward

You can use this key feature to forward an incoming call to someone else. For more information, refer to Call Forward on page 88.

Dependencies: Type (Key Event)

Key Type (Forward)

Value (the number you want to forward to)

Usage: Press the DSS key to forward an incoming call to the number specified in the Value field.

Note If the Value field is left blank, the DSS key performs the same function as the Forward soft key when receiving an incoming call.

##### Transfer

When there is an active call on the phone, you can use this key feature to handle the call differently depending on the transfer mode assigned to the DSS key.

Dependencies: Type (Key Event)

Key Type (Transfer)

Value (the number you want to transfer to)

Usage:

- When the transfer mode on DSS key is Blind Transfer, press the DSS key to complete the blind transfer to the number specified in the Value field.
- When the transfer mode on DSS key is Attended Transfer, press the DSS key to dial out the number specified in the Value field, and then you can perform the attended or semi-attended transfer.
- When the transfer mode on DSS key is New Call, press the DSS key to place a new call to the number specified in the Value field.

Note Transfer mode on DSS key is configurable via web user interface at the path Features->Transfer->Transfer Mode Via Dsskey.

If the Value field is left blank, the DSS key performs the same function as the TRAN key or the Transfer soft key during a call. For more information, refer to Call Transfer on page 95.

#### Hold

You can use this key feature to place an active call on hold or retrieve a held call.

Dependencies: Type (Key Event)

Key Type (Hold)

Usage:

1. Press the DSS key during an active call to place the call on hold.
2. Press the DSS key again to retrieve the held call.

#### DND

You can use this key feature to activate or deactivate DND. You can also use this key feature to access the custom DND screen. For more information, refer to Do Not Disturb (DND) on page 84.

Dependencies: Type (Key Event)

Key Type (DND)

Usage:

When the DND is in phone mode:

1. Press the DSS key to activate DND.
2. Press the DSS key again to deactivate DND.

When the DND is in custom mode:

1. Press the DSS key to access the custom DND screen.
2. Activate or deactivate DND for an account or all accounts.

When DND is activated, the incoming calls will be rejected automatically. ■

#### Note

#### SMS

You can use this key feature to quickly access text message. For more information, refer to Short Message Service (SMS) on page 126.

Dependencies: Type (Key Event)

Key Type (SMS)

Usage: Press the DSS key when the phone is idle to access text message.

### Group Listening

You can use this key feature to activate the Speakerphone and Handset/Headset mode at the same time. It is suitable for the group conversations which have more than one person present at one end. You are able to speak and listen through the handset/headset, while the others nearby can only listen through the speaker.

Dependencies: Type (Key Event)

Key Type (Group Listening)

Usage:

1. During a call, press the DSS key to activate the group listening mode.

You can then speak and listen through the handset/ headset, while other people at your side can only listen through the speaker at the same time.

2. Press the DSS key again to deactivate the group listening mode.

### Zero Touch

You can use this key feature to quickly configure auto provision and network parameters.

Dependencies: Type (Key Event)

Key Type (Zero Touch)

Usage:

1. Press the DSS key to access the zero touch screen.
2. Press the OK soft key within a few seconds.
3. Configure the network parameters in the corresponding fields.
4. Press the Next soft key.
5. Configure the auto provision parameters in the corresponding fields.
6. Press the OK soft key.

The phone will reboot to update configurations.

### URL

You can use this key feature to trigger the phone to send an HTTP GET request containing a specific URL.

Dependencies: Type (URL)

Usage: Press the DSS key to trigger the phone to send an HTTP GET request containing the URL specified in the Value field.

#### Phone Lock

 media/image229.png

You can use this key feature to immediately lock your phone instead of long pressing . For more information, refer to Phone Lock on page 25.

Dependencies: Type (phone Lock)

 media/image361.png

Usage: Press the DSS key to immediately lock your phone instead of long pressing .

#### Directory

You can use this key feature to easily access frequently used lists. For more information, refer to Directory on page 31.

Dependencies: Type (Directory)

Usage: Press the DSS key to immediately access frequently used lists.

The DSS key performs the same function as the Directory soft key when the phone is idle.

#### Note

 media/image362.png

You can assign predefined functionalities to the line keys as same as memory keys. You can also define a label for line key which will appear on the LCD screen. The default key type of each line key is Line.

To configure a line key via phone user interface:

1. Press Menu->Features->DSS Keys->Line Keys.
2. Select the desired line key, and then press the Enter soft key.
3. Select the desired key type from Type field.
4. (Optional.) Select the desired key event type from the Key Type field.
5. (Optional.) Select the desired account from the Account ID field.
6. (Optional.) Enter the string that will appear on the LCD screen in the Label field.
7. (Optional.) Enter the corresponding value in the Value field.
8. (Optional.) Enter the corresponding value in the Extension field.
9. Press the Save soft key to accept the change or the Back soft key to cancel.

Line key is configurable via web user interface at the path DSSKey->Line Key.

For more information on using the line keys, refer to Memory Keys introduced above on page 53.

`media/image363.png`

You can customize the soft keys, navigation keys and function keys on the keypad.

To customize programmable keys via web user interface:

1. Click on DSSKey->Programmable Key.
- 2.
- Customize specific features for these keys.
3. Click Confirm to accept the change.

You can click Reset to default to reset custom settings to defaults.

Then you can press the keys on the phone to perform the features you configured.

For example:

Switch Account

You can press this key to switch default account.

Dependencies: Type (Switch Account)

Usage: Press the programmable key to scroll down the account list to select the desired default account.

Programmable keys are configurable via web user interface only. ■

Note

You can customize features to Ext keys.

To customize Ext keys via web user interface:

1. Click on DSSKey->Ext Key.
- 2.
- Customize specific features for these keys.
3. Click Confirm to accept the change.


For more information, refer to EXP39 User Guide.

Ext keys are configurable via web user interface only. ■

Note

`media/image372.png`

You can register one or multiple accounts on the SIP-T28P IP phone. You can also configure each line key to associate with an account or configure multiple line keys to associate with an account.



To register an account via phone user interface:

1. Press Menu->Settings->Advanced Settings (default password: admin) ->Accounts.
2. Select the desired account and then press the Enter soft key.
3. Select Enabled from the Account Status field.
4. Enter the desired values in the Label, Display Name, Register Name, User Name, Password and SIP Server1/2 fields respectively. Contact your system administrator for more information.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

You can repeat steps 2 to 5 to register more accounts.

The following figures demonstrate single or multiple accounts registered on the phone:

Single account:

Multiple accounts:


To disable an account via phone user interface:

1. Press Menu->Settings->Advanced Settings (default password: admin) ->Accounts.
2. Select the desired account and then press the Enter soft key.
3. Select Disabled from the Account Status field.
4. Press the Save soft key to accept the change or the Back soft key to cancel.

Account registration is configurable via web user interface at the path Account->Register.

Press or to set the default account. It has priority when placing a call. The phone's default account cannot be changed after reboot. ■

Note



You can configure multiple line keys to associate with an account. This enhances call visualization and simplifies call handling.

If this is the case, the LCD screen will resemble the following figure:

Incoming calls to this account will be distributed evenly among the available line keys. Outgoing calls will be distributed similarly.

Your phone can be configured to have a combination of accounts with a single line key and accounts with multiple line keys.



media/image385.png

Dial plan is a string of characters that governs the way your SIP-T28P IP phone processes the inputs received from your phone keypad. The SIP-T28P IP phone supports the following dial plan features:

- Replace Rule
- Dial-now
- Area Code
- Block Out

The basic expression syntax you need to know:

- The dot "." can be used as a placeholder or multiple placeholders for any character. Example:  
"12." would match "123", "1234", "12345", "12abc", etc.

x

Example:

"12x" would match "121", "122", "123", "12a", etc.

single character which matches any of a set of characters. Example:

"91[5-7]1234" would match "9151234", "9161234", "9171234".

()

patterns,

for instance, to logically combine two or more patterns. Example:

"91([5-7])1(x)" would match "91511", "91618", "91715", etc.

\$

a paren-

thesis. The "\$" plus the sequence number means the whole character or characters placed in the parenthesis. The number directs to the right parenthesis when there are more than one. Example:

A replace rule configuration, Prefix: "001(xxx)45(xx)", Replace: "9001\$145\$2".

When you dial out "0012354599" on your phone, the IP phone will replace the number with "90012354599". "\$1" means 3 digits in the first parenthesis, that is, "235". "\$2" means 2 digits in the second parenthesis, that is, "99".

media/image386.png

You can configure one or more replace rules (up to 100) to remove the specified string and replace it with another string. You can configure a pattern with wildcards (refer to the expression syntax in the table above), so that any string that matches the pattern will be replaced. This feature is convenient for you to dial out a long number. For example, a replace rule is configured as "Prefix: 1" and "Replace: 1234", when you try to dial out the number "1234", you just need to enter "1" on the phone and then press the Send soft key.

To add a replace rule via web user interface:

1. Click on Settings->Dial Plan->Replace Rule.
2. Enter the string in the Prefix field.
3. Enter the string in the Replace field.
4. Enter the desired line ID in the Account field or leave it blank.
5. Click Add to add the replace rule.

When you enter the number “1” using the keypad and then press the Send soft key, the phone will dial out “1234” instead.

Note The valid values for the Account field can be one or more digits among 1, 2, 3, 4, 5 and 6. Each digit must be separated by a comma. For example, when you enter the value “1, 2” in the Account field, this replace rule will apply to account1 and account2.

If you leave the Account field blank or enter 0, the replace rule will apply to all accounts.

To edit a replace rule via web user interface:

1. Click on Settings->Dial Plan->Replace Rule.
2. Select the desired replace rule by checking the check box.
3. Edit the values in the Prefix and Replace fields.
4. Enter the desired line ID in the Account field or leave it blank.
5. Click Edit to accept the change.

To delete one or more replace rules via web user interface:

1. Click on Settings->Dial Plan->Replace Rule.
2. Select the one or more replace rules by checking the check box(es).
3. Click Del to delete the replace rule(s).

Note Replace rule is configurable via web user interface only.

You can configure one or more dial-now rules (up to 100) on your phone. When the dialed out number matches the dial-now string, the number will be dialed out automatically. For example, a dial-now rule is configured as “2xx”, any entered three-digit string beginning with 2 will then be dialed out automatically on the phone.

To add a dial-now rule via web user interface:

1. Click on Settings->Dial Plan->Dial-now.
2. Enter the desired value (e.g., 2xx) in the Rule field.
3. Enter the desired line ID in the Account field or leave it blank.

For more information on the valid values for the Account field, refer to Replace Rule on page 65.

4. Click Add to add the dial-now rule.

When you enter the number “234” using the keypad, the phone will dial out “234” automatically without the pressing of any key.

You can also edit or delete the dial-now rule, refer to Replace Rule on page 65 for more information.

Dial-now rule is configurable via web user interface only.

#### Note

##### Delay Time for Dial-now Rule


You can configure the delay time for dial-now rules. That is, you can configure your phone to automatically dial out the phone number which matches a dial-now rule, after the designated delay time.

To configure the delay time for dial-now rule via web user interface:

1. Click on Features->General Information.
2. Enter the time between 1 and 14 (seconds) in the Time-Out for Dial-Now Rule field.
3. Click Confirm to accept the change.

Delay time for dial-now rule is configurable via web user interface only.

#### Note

 media/image401.png

Area codes are also known as Numbering Plan Areas (NPAs). They usually indicate geographical areas in a country. This feature is necessary when dialing a phone number outside the code area. For example, an area code is configured as ”Code: 0592, Min Length: 1, Max Length: 15”. When you dial out the number ”56789” (the length of the number is between 1 and 15), the phone will add the area code and dial out the number ”059256789”. You can only configure one area code rule on your phone.

To configure the area code via web user interface:


1. Click on Settings->Dial Plan->Area Code.
2. Enter the desired values in the Code, Min Length (1-15) and Max Length (1-15) fields.
3. Enter the desired line ID in the Account field or leave it blank.

For more information on the valid values for the Account field, refer to Replace Rule on page 65.

4. Click Confirm to accept the change.

The default values of minimum and maximum length are 1 and 15 respectively .  
Area code is configurable via web user interface only.

Note

404.png

You can block specific numbers from being dialed on your phone. When you dial a block out number on your phone, the dialing will fail and the LCD screen will prompt "Forbidden Number". You can add 10 block out rules at most on your phone.

To add a block out number via web user interface:


1. Click on Settings->Dial Plan->Block Out.
2. Enter the desired value in the BlockOut Number field.
3. Enter the desired line ID in the Account field or leave it blank.

For more information on the valid values for the Account field, refer to Replace Rule on page 65.

4. Click Confirm to add the block out number.

Block out number is configurable via web user interface only.

Note

407.png

Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when necessary. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

Contact your local phone service provider for available emergency numbers in your area.

Note

To specify emergency numbers via web user interface:

1. Click on Features->Phone Lock.


2. Enter the emergency number in the Emergency field.

For multiple numbers, enter a comma between every two emergency numbers. The default emergency numbers are 112, 911 and 110.

3. Click Confirm to accept the change.

Emergency number is configurable via web user interface only. ■

Note



You can enable live dialpad on the SIP-T28P IP phone, which enables the IP phone to automatically dial out a phone number without the pressing of the send key. You can also configure a delay, where the phone will dial out the phone number automatically after the designated period of time.

To enable live dialpad via web user interface:

1. Click on Settings->Preference.
2. Select Enabled from the pull-down list of Live Dialpad.
3. Enter the desired delay time in the Inter Digit Time (1~14s) field.

The default delay time is 4s

.

4. Click Confirm to accept the change.

Live dialpad is configurable via web user interface only. ■

Note

You can dial a hotline number immediately upon lifting the handset, pressing the Speakerphone key or pressing a line key. You can also configure a delay, where the phone will dial out the hotline number automatically after the designated period of time.

To configure hotline number via phone user interface:

1. Press Menu->Features->Hot Line.
2. Enter the desired number in the Number field.
3. Enter the delay time (in seconds) in the Hotline Delay field.

The valid values range from 0 to 10.

4. Press the Save soft key to accept the change or the Back soft key to cancel.

Hotline is configurable via web user interface at the path Features->General Information.

The SIP-T28P IP phone is designed to be easily used like a regular phone on a public switched telephone network (PSTN). You can place calls, answer calls, transfer a call to someone else, or conduct a conference call.

This chapter provides basic operating instructions for the SIP-T28P IP phone. Topics include:

- Placing Calls
- Answering Calls
- Ending Calls
- Redialing Numbers
- Recent Call In Dialing
- Auto Answer
- Auto Redial
- Call Completion
- Recall
- Call Mute
- Call Hold/Resume
- Do Not Disturb (DND)
- Call Transfer
- Call Waiting
- Conference
- Call Park
- Call Pickup
- Anonymous Call
- Anonymous Call Rejection

If you require additional information or assistance with your new phone, contact your system administrator.

media/image423.png

You can place a call in one of three ways using your SIP-T28P IP phone:

- Using the handset
- Using the speakerphone
- Using the headset

You can also dial the number first, and then choose the way you want to speak to the other party.

You can also search and dial a contact from call history, local directory or remote phone book. For more information, refer to Contact Management on page 31 and Call History Management on page 48.

During a call, you can alternate between Speakerphone, Headset, and Handset modes by pressing the Speakerphone key, the HEADSET key, or by picking up the handset.

The call duration of the active call is visible on the LCD screen. In the figure below, the call to the number "1005" has lasted 6 seconds.

To place a call using the handset:

1. Pick up the handset.
2. Enter the desired number using the keypad.
3. Press **, ,** or the Send soft key.

The **#** key is configured as a send key by default. You can also set the **\*** key as the send key, or set neither. For more information, refer to Key as Send on page 24.

You can also dial using the SIP URI or IP address. To obtain the IP address of the phone, press the OK key when the phone is idle. The maximum SIP URI or IP address length is 32 characters. For example, SIP URI: 2210@sip.com, IP: 192.168.1.15.

Your phone may not support direct IP dialing. Contact your system administrator for more information.

#### Note

To place a call using the hands-free speakerphone mode:

Do one of the following:

- With the handset on-hook, press  or the line key to obtain a dial tone.

Enter the desired number using the keypad.

Press **, ,** or the Send soft key.

- With the handset on-hook, enter the desired number using the keypad.

Press **, , ,** or the Send soft key.

To place a call using the headset:

Do one of the following:

- With the optional headset connected, press  to activate the headset mode.

Press the line key to obtain a dial tone.

Enter the desired number using the keypad.

Press , , or the Send soft key.

- With the optional headset connected, press  to activate the headset mode.

Enter the desired number using the keypad.

Press , , or the Send soft key.

To permanently activate the headset mode, refer to Headset Prior on page 51. ■

#### Note

The SIP-T28P IP phone can handle multiple calls at a time. However, only one active call

(the call that has audio associated with it) can be in progress at any given time. The SIP-T28P IP phone can handle a maximum of 6 calls at one time.

To place multiple calls:

You can have more than one call on your SIP-T28P IP phone. To place a new call during an active call, do one of the following:

- Press the line key. The active call is placed on hold.

Enter the desired number using the keypad.

Press , , or the Send soft key.

- Press  or the Hold soft key to place the original call on hold.

Press the New Call soft key.

Enter the desired number using the keypad.

Press , , or the Send soft key.

You can press or to switch between the calls, and then press the Resume soft key to retrieve the desired call.

If multiple accounts are registered on the phone, you can first press the desired line key in the idle screen or press the Line soft key in the dialing screen, and then you can use the selected account to place a call. ■

#### Note





When you are not in another call, you can answer a call in one of three ways:

- Using the handset
- Using the speakerphone
- Using the headset

You can reject incoming calls by pressing the X key, or the Reject soft key. You can also activate Do Not Disturb mode to reject all incoming calls without ringing on your phone. For more information, refer to Do Not Disturb (DND) on page 84.

You can forward incoming calls to someone else by pressing the Forward soft key. For more information, refer to Call Forward on page 88.

#### Note

##### Answering When Not in Another Call

Call duration and destination will always appear on the LCD screen for the active call.

To answer a call using the handset:

1. Pick up the handset.

To answer a call using the hands-free speakerphone mode:

Do one of the following:

- Press .
- With the handset on-hook and the headset mode deactivated, press the Answer soft key.
- With the handset on-hook and the headset mode deactivated, press the line key (the line key LED flashes green).

To answer a call using the headset:

Do one of the following:

- Press .
- With the headset mode activated, press the Answer soft key.
- With the headset mode activated, press the line key (the line key LED flashes green).

##### Answering When in Another Call

If you have an active call, and an incoming call arrives on the phone, do one of the following:

- Press the Answer soft key.

The incoming call is answered and the original call is placed on hold.

-  
Press  
to access the new call.  
Press  
or the  
Answer  
soft key  
.

The incoming call is answered and the original call is placed on hold.




To end a call:

Do one of the following:

- If you are using the handset, press the Cancel soft key or hang up the handset.
- If you are using the headset, press the Cancel soft key.
- If you are using the speakerphone, press  or the Cancel soft key.

To end a call placed on hold, you can press the Cancel soft key to end the call directly, or press the Resume soft key to resume the call before ending it. 

Note




To redial the last dialed number from your phone:

1. Press  twice.

A call to your last dialed number is attempted.

To redial a previously dialed number from your phone:

1. Press  when the phone is idle.
2. Press or to select the desired entry from the placed calls list, and then press or the Send soft key.



You can view the placed calls list when the phone is in the pre-dialing screen. To do this, you should enable recent call in dialing in advance.

To enable recent call in dialing via web user interface:

1. Click on Directory->Setting.
2. Select Enabled from the pull-down list of Recent Call In Dialing.
3. Click Confirm to accept the change.

Recent call in dialing is configurable via web user interface only. ■

Note

To view placed calls list when the phone is in the pre-dialing screen:

1. Pick up the handset, press the speakerphone or press the line key.

The LCD screen displays the placed calls list.

media/image446.png

You can use auto answer to automatically answer an incoming call on a line. Auto answer is configurable on a per-line basis.

To configure auto answer via phone user interface:

1. Press Menu->Settings->Advanced Settings (default password: admin) ->Accounts.
2. Select the desired account and then press the Enter soft key.

3.  
field.

Press

or

, or the

Switch

soft key

to select

Enable

d

from the

Auto

Answer

4. Press the Save soft key to accept the change or the Back soft key to cancel.

The

icon

appears

on the LCD screen.

Auto answer is configurable via web user interface at the path Account->Basic.

Auto answer is only applicable when there is no other call in progress on the phone.

Note

media/image453.png

You can enable auto redial to automatically redial a phone number when the called party is busy. You can also configure the number of auto redial attempts and the time to wait between redial attempts.

To configure auto redial via phone user interface:

1. Press Menu->Features->Auto Redial.
2. Press or , or the Switch soft key to select Enabled from the Auto Redial field.
3. Enter the desired time in the Redial Interval field.

The default time interval is 10 seconds.

4. Enter the desired number of redial attempts in the Redial Times field.

The default times are 10.

5. Press the Save soft key to accept the change or the Back soft key to cancel.

Auto redial is configurable via web user interface at the path Features->General Information.

To use auto redial:

When the called party is busy, the following prompt will appear on the LCD screen of the phone:

1. Press the OK soft key to activate auto redial. The following prompt will appear on the LCD screen of the phone:
2. Wait for the designated period of time or press the OK soft key to redial the phone number.

The phone will retry as many times as configured until the called party is idle.

media/image460.png

You can use call completion to notify the caller who failed to reach a desired party when the party becomes available to receive a call.

To configure call completion via phone user interface:

1. Press Menu->Features->Call Completion.

Completion field.

- 2.

Press

or

, or the

Switch

soft key

to select

Enable

d

from the

Call

3. Press the Save soft key to accept the change or the Back soft key to cancel.

Call completion is configurable via web user interface at the path Features->General Information.

To use call completion:

When the called party is busy, the following prompt will appear on the LCD screen of the phone:


1. Press the OK soft key, the phone returns to the idle screen and call completion is activated.

When the called party becomes idle, the following prompt appears on the LCD screen of the phone:

2. Press the OK soft key to redial the number.

Call completion is not available on all servers. For more information, contact your system administrator.

Note

 media/image467.png


You can press a recall key to place a call back to the last incoming call.

To configure a recall key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select a desired DSS key.
3. Press or , or the Switch soft key to select Key Event from the Type field.

4. Press  
or  
, or the  
Switch  
soft key  
to  
select  
ReCall  
from the  
Key Type  
field.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

Recall key is configurable via web user interface at the path DSSKey.■

.png

You can mute the microphone of the active audio device during an active call so that the other party cannot hear you. Call mute applies to all modes (Handset, Headset and Speakerphone).


To mute a call:

1. Press  during an active call.

The LCD screen indicates that the call is now muted.

To un-mute a call:

1. Press  again to un-mute the call.

.png

You can place an active call on hold. Only one active call can be in progress at any time. Other calls can be made and received while placing the original call on hold. When you place a call on hold, your IP PBX may play music to the other party while waiting.

To place a call on hold:

1. Press  or the Hold soft key during a call.

The LCD screen indicates that the call is on hold and the line key LED flashes green.

The phone will beep softly every 30 seconds to remind you that you still have a call on hold.■

Note

To resume a held call:


1. Press  or the Resume soft key.

Multiple Calls on Hold:

If multiple calls are placed on hold, do one of the following:

- Press or to switch between the calls, and then press the Resume soft key to retrieve the desired call.
- Press the corresponding line key to retrieve the desired call.

A numbered prompt appears on the LCD screen, for example "2/4", indicating that this is the second call out of four calls.



You can use DND to reject incoming calls automatically on the phone. The prompt message "n New Missed Call(s)" ("n" indicates the number of missed calls) will appear on the LCD screen, and callers will receive a busy message. All calls you receive while DND is enabled are logged to your missed calls list.

The prompt message will display only if Missed Call Log for the line is enabled. Missed Call Log is configurable via web user interface at the path Account->Basic.

Do Not Disturb is local to the phone, and may be overridden by the server settings. For more information, contact your system administrator.

#### Note

You can enable/disable DND for the phone system, or you can customize DND for each or all accounts. Two DND modes:

- Phone (default): DND is effective for the phone system.
- Custom: DND can be configured for each or all accounts.

You can receive incoming calls from authorized numbers when DND is enabled.


To configure the DND mode via web user interface:

1. Click on Features->Forward & DND.
2. In the DND block, mark the desired radio box in the Mode field.
3. Click Confirm to accept the change.

Note DND mode is configurable via web user interface only.

To activate DND in phone mode:

1. Press the DND soft key when the phone is idle.

The  icon on the idle screen indicates that DND is enabled.

Incoming calls will be rejected automatically and "n New Missed Call(s)" ("n" indicates the number of missed calls) will appear on the LCD screen.

When DND and busy forward are enabled in phone mode, calls will be sent to the configured destination number. For more information on busy forward, refer to Call Forward on page 88.

#### Note

To activate DND in custom mode for a specific account:

1. Press the DND soft key when the phone is idle.

The LCD screen displays a list of the accounts on the phone.

Press  
or  
to select the  
desired account  
and then press the  
Enter  
soft key.  
Press  
,  
or the  
Switch  
soft key  
to select  
Enable  
d  
to  
activate  
DND  
from the

- 2.
3.  
DND Enable field.

4. Press the Save soft key to accept the change.

If you activate DND for the default account, the associated line icon will change to , and the  icon will appear on the status bar.

If you activate DND for the non-default account, only the associated line icon will change to .

Incoming calls on this line will be rejected automatically and "n New Missed



Call(s)" ("n" indicates the number of missed calls) will prompt on the LCD screen.

When DND and busy forward are enabled for a specific account, calls from the specific account will be sent to the configured destination number. For more information on busy forward, refer to Call Forward on page 88.


#### Note


To activate DND in custom mode for all accounts:

1. Press the DND soft key when the phone is idle.

The LCD screen displays a list of the accounts on the phone.

2. Press the All On soft key to activate DND for all accounts.
3. Press the Save soft key to accept the change.

media/image480.png

The icon appears on the idle screen and all line icons change to media/image486.png

Incoming calls will be rejected automatically and "n New Missed Call(s)" ("n" indicates the number of missed calls) will prompt on the LCD screen.

To configure the DND authorized numbers via web user interface:

1. Click on Features->Forward & DND.
2. Select Enabled from the pull-down list of DND Emergency.
3. Enter the numbers in the DND Authorized Numbers field.


For multiple numbers, enter a comma between every two numbers.

4. Click Confirm to accept the change.

When DND is enabled on the phone, the phone can still receive incoming calls from the numbers specified in the DND Authorized Numbers field.

DND authorized number is configurable via web user interface only. When the phone receives a voice mail, the voice mail prompt window will pop up by default, if you want to disable the feature, contact your system administrator for more information.

#### Note

media/image494.png

You can configure your phone to forward incoming calls to another party through static forwarding. You can also forward calls while your phone is ringing; refer to dynamic forwarding.

Three types of static forwarding:

- Always Forward: Incoming calls are immediately forwarded.
- Busy Forward: Incoming calls are immediately forwarded if the phone is busy.
- No Answer Forward: Incoming calls are forwarded if not answered after a period

of time.

You can enable/disable call forward for the phone system, or you can customize call forward for each or all accounts. Two call forward modes:

- Phone (default): Call forward is effective for the phone system.
- Custom: Call forward can be configured for each or all accounts.

To configure the call forward mode via web user interface:

1. Click on Features->Forward & DND.
2. In the Forward block, mark the desired radio box in the Mode field.
3. Click Confirm to accept the change.

Note Call forward mode is configurable via web user interface only.

To enable call forward in phone mode:

1. Press Menu->Features->Call Forward.
2. Press or to select the desired forwarding type, and then press the Enter soft key.
3. Depending on your selection:

a.) If you select Always Forward:

- 1) Press or , or the Switch soft key to select Enabled from the Always Forward field.
- 2) Enter the destination number you want to forward incoming calls to in the Forward to field.
- 3) (Optional.) Enter the always forward on code and off code respectively in the On Code and Off Code field.

Always forward on code/ off code is used to activate/deactivate the server-side always forward feature when the user enables/ disables always forward feature on the phone.

b. If you select Busy Forward:

- 1) Press or , or the Switch soft key to select Enabled from the Busy Forward field.
- 2) Enter the destination number you want to forward incoming calls to when the phone is busy in the Forward to field.
- 3) (Optional.) Enter the busy forward on code and off code respectively in the On Code and Off Code field.

Busy forward on code/ off code is used to activate/deactivate the server-side always forward feature when the user enables/ disables busy forward feature on the phone.

c. If you select No Answer Forward:

- 1) Press or , or the Switch soft key to select Enabled from the No Answer Forward field.
- 2) Enter the destination number you want to forward unanswered incoming calls to in the Forward to field.
- 3) Press or , or the Switch soft key to select the ring time to wait before forwarding from the After Ring Time field.

The default ring time is 12 seconds.

- 4) (Optional.) Enter the no answer forward on code and off code respectively in the On Code and Off Code field.

No answer forward on code/ off code is used to activate/deactivate the

server-side always forward feature when the user enables/ disables no answer forward feature on the phone.

4. Press the Save soft key to accept the change.

The  on the idle screen indicates that call forward is enabled.

To enable call forward in custom mode:

1. Press Menu->Features->Call Forward.
2. Press or to select the desired account, and then press the Enter soft key.
3. Press or to select the desired forwarding type, and then press the Enter soft key.
4. Depending on your selection:
  - a.) If you select Always Forward, you can enable it for a specific account.
- 1) Press or , or the Switch soft key to select Enabled from the Always Forward field.

- 2) Enter the destination number you want to forward incoming calls to in the Forward to field.
- 3) (Optional.) Enter the always forward on code and off code respectively in the On Code and Off Code field.

Always forward on code/ off code is used to activate/deactivate the server-side always forward feature when the user enables/ disables always forward feature for this account.

You can also enable always forward for all accounts. After always forward was enabled for a specific account, do the following:

- 1) Press or to select the Always Forward field.
- 2) Press the All Lines soft key.

The LCD screen prompts “Copy to all lines?”.

- 3) Press the OK soft key to accept the change or the Cancel soft key to cancel.

- b. If you select Busy Forward, you can enable it for a specific account.

- 1) Press or , or the Switch soft key to select Enabled from the Busy Forward field.
- 2) Enter the destination number you want to forward incoming calls to when the phone is busy in the Forward to field.
- 3) (Optional.) Enter the busy forward on code and off code respectively in the On Code and Off Code field.

Busy forward on code/ off code is used to activate/deactivate the server-side always forward feature when the user enables/ disables busy forward feature for this account.

You can also enable busy forward for all accounts. After busy forward was enabled for a specific account, do the following:

- 1) Press or to select the Busy Forward field.
- 2) Press the All Lines soft key.

The LCD screen prompts “Copy to all lines?”.

- 3) Press the OK soft key to accept the change or the Cancel soft key to cancel.

- c. If you select No Answer Forward, you can enable it for a specific account.

- 1) Press or , or the Switch soft key to select Enabled from the No Answer Forward field.
- 2) Enter the destination number you want to forward unanswered incoming calls to in the Forward to field.

- 3) Press or , or the Switch soft key to select the ring time to wait before forwarding from the After Ring Time field.

The default ring time is 12 seconds.

- 4) (Optional.) Enter the no answer forward on code and off code respectively in the On Code and Off Code field.

No answer forward on code/ off code is used to activate/deactivate the server-side always forward feature when the user enables/ disables no answer forward feature for this account.

You can also enable no answer forward for all accounts. After no answer forward was enabled for a specific account, do the following:

- 1) Press or to select the No Answer Forward field.
- 2) Press the All Lines soft key.

The LCD screen prompts




“


Copy to all lines?

”

.

- 3) Press the OK soft key to accept the change or the Cancel soft key to cancel.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

 If you activate call forward for the default account, the associated line icon will change to , and the  icon will appear on the status bar.

 If you activate call forward for the non-default account, only the associated line icon will change to .

Call forward is configurable via web user interface at the path Features->Forward & DND.

You can also enter the SIP URI or IP address in the Forward to field. For more information on using the SIP URI or IP address, refer to Placing Calls on page 73.

Call forward is local to the phone, and may be overridden by the server settings. Call forward on code or off code may be different between servers. For more information, contact your system administrator.

#### Note

To disable call forward in phone mode:

Do one of the following:

- Press  when the phone is idle.
- Press Menu->Features->Call Forward.

Press or to select the desired forwarding type, then press the Enter soft key.

Press or , or the Switch soft key to select Disabled to disable call forward.

Press the Save soft key to accept the change.

To disable call forward in custom mode for a specific account:

1. Press Menu->Features->Call Forward or press  when the phone is idle.
2. Press or to select the desired account and then press the Enter soft key.
3. Press or to select the desired forwarding type, then press the Enter soft key.
4. Press , or the Switch soft key to select Disabled to disable call forward.
5. Press the Save soft key to accept the change.

To forward an incoming call to another party:

1. When the phone is ringing, press the Forward soft key.
2. Enter the number you want to forward the incoming call to.
3. Press  
,  
,  
or the  
Send  
soft key.

The LCD screen prompts a call forward message.

When the phone forwards a call, the forward call prompt window will pop up by default, if you want to disable the feature, contact your system administrator for more information.

#### Note

You can transfer a call to another party in one of three ways:

- Blind Transfer: Transfer a call directly to another party without consulting.
- Semi-Attended Transfer: Transfer a call when the target phone is ringing.

- Attended Transfer: Transfer a call with prior consulting.

To perform a blind transfer:

1. Press  or the Transfer Soft key during a call.
2. Do one of the following:
  - Enter the number or you want to transfer the call to.
3. Press  to complete the transfer.

Then the call is connected to the number to which you are transferring.

To perform a semi-attended transfer:

1. Press  or the Transfer Soft key during a call.
2. Do one of the following:
  - Enter the number you want to transfer the call to.
  - Press the Directory soft key, and then select Local Directory. Select the desired group, and search for the contact (Directory should be configured in advance. Refer to Local Directory on page 33 for more information.).
  - Press the Directory soft key, and then select History. Select the desired list and use or to select the entry (Directory should be configured in advance.

Refer to Local Directory on page 33 for more information.).

- Press the Directory soft key, and then select Remote Phone Book. Select the desired group and search for the contact (Directory and remote phone book should be configured in advance. Refer to Local Directory on page 33 and Remote Phone Book on page 46 for more information.)
3. Press or to dial out.
4. Press or the Transfer soft key to complete the transfer when receiving ringback.

To perform an attended transfer:

1. Press  or the Transfer Soft key during a call.
2. Do one of the following:
  - Enter the number you want to transfer the call to.

- Press the Directory soft key, and then select Local Directory. Select the desired group, and search for the contact (Directory should be configured in advance. Refer to Local Directory on page 33 for more information.).
- Press the Directory soft key, and then select History. Select the desired list and use or to select the entry (Directory should be configured in advance).


Refer to Local Directory on page 33 for more information.).

- Press the Directory soft key, and then select Remote Phone Book. Select the desired group and search for the contact (Directory and remote phone book should be configured in advance. Refer to Local Directory on page 33 and Remote Phone Book on page 46 for more information.)

3. Press the Send soft key, or to dial out.
4. After the party answers the call, press or the Transfer soft key to complete the transfer.

If you are using a handset, the transfer can be completed by hanging up the handset.

You can cancel the transfer before the call is connected by pressing the Cancel soft key.



You can enable or disable call waiting on the phone. If call waiting is enabled, you can receive another call while there is already an active call on the phone. Otherwise, another incoming call is automatically rejected by the phone with a busy message when there is an active call on the phone. You can also enable or disable the phone to play a warning tone when receiving another call.

To configure call waiting via phone user interface:


1. Press Menu->Features->Call Waiting.
2. Press or , or the Switch soft key to select Enabled from the Call Waiting field.
3. Press or , or the Switch soft key to select Enabled from the Play Tone field.
4. (Optional.) Enter the call waiting on code and off code respectively in the On Code and Off Code field.

Call waiting on code/ off code is used to activate/deactivate the server-side call waiting feature when the user enables/ disables call waiting feature on the phone.



5. Press the Save soft key to accept the change or the Back soft key to cancel.


Call waiting is configurable via web user interface at the path Features->General Information.



You can create a conference with other two parties using the phone's local conference. You can create a conference between an active call and a call on hold (on the same or another line) by pressing the CONF key or the Conf soft key.

Network conference is not available on all servers. For more information, contact your system administrator.

#### Note



The SIP-T28P IP phone supports up to 3 parties (including yourself) in a conference call.

This is the default method of conference called Local Conference.

To set up a local conference call:

1. Place a call to the first party.
2. When the first party answers the call, press  or the Conf soft key to place a new call.

The active call is placed on hold.


3. Enter the number of the second party and press , , or the Send soft key.

4. When the second party answers the call, you can consult with him or her before adding to the conference.
5. Press  or the Conf soft key again to join all parties in the conference.

To join two calls in a conference:

1. Place two calls using two different accounts on the phone (for example, place the first call using account 1, and then place the second call using account 2).
2. Press  or to select the call for conference and ensure that the call is active (for example, select the call on account 1).
3. Press  or the Conf soft key to join the two calls in the conference on the selected account.

You can press  or the Hold soft key to place the conference on hold. You can press the Split soft key to split the conference call into two individual calls on hold. To drop the conference call, press the Cancel soft key.



You can use network conference on the SIP-T28P IP phone to conduct a conference with multiple participants.

This feature allows you to perform the following:

- Join two calls together into a conference call.
- Invite another party into an active conference call.

To use this feature, contact your system administrator for the network conference URI in advance.

To configure network conference via web user interface:

1. Click on Account.
2. Select the desired account from the pull-down list of Account.
3. Click on Advanced.
4. Select Network Conference from the pull-down list of Conference Type.
5. Enter the conference URI (e.g., conference@example.com) in the Conference URI field.
6. Click Confirm to accept the change.

Network conference is configurable via web user interface only. ■

Note

To set up a network conference call:

1. Place a call to the first party.
2. Press  or the Conf soft key to place a new call.


The active call is placed on hold.

3. Enter the number of the second party and press , , or the Send soft key.
4. When the second party answers the call, press or the Conf soft key to add the second party to the conference.
5. Press  or the Conf soft key to place a new call.

The conference is placed on hold.

6. Enter the number of the new party and then press , , or the Send soft key.
7. When the new party answers the call, press or the Conf soft key to add the new party to the conference.
8. Repeat steps 5 to 7 until you have added all intended parties.

The procedures to set up a network conference call for specific servers may be different from introduced above. Contact your system administrator for more information.

7.png

You can use call park to place a call on hold, and then retrieve the call from another phone in the system (for example, a phone in another office or conference room). You can park an active call by pressing the call park key on the phone. If the call is parked successfully, the response is either a voice prompt confirming that the call was parked, or a visible prompt on the LCD screen.

Call park is not available on all servers. Contact your system administrator for more information. 

#### Note

To configure a call park key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select the desired DSS key.
3. Press or , or the Switch soft key to select Key Event from the Type field.
4. Press or , or the Switch soft key to select Call Park from the Key Type field.

5. Press **OK**, **Cancel**, or the **Switch** soft key to select the desired account from the Account ID field.
6. Enter the call park code in the Value field.
7. Press the **Save** soft key to accept the change or the **Back** soft key to cancel.

Call park key is configurable via web user interface at the path `DSSKey`.

To use call park:

1. User on phone A places a call to phone B.
2. User on phone A wants to take the call in a conference room for privacy, and so presses the call park key on phone A.
3. User on phone A walks to an available conference room where the phone is designated as phone C. The user dials call park retrieve code to retrieve the parked call.

The system establishes call between phone C and B.

The call park code and call park retrieve code are predefined on the system server. Contact your system administrator for more information.

If the parked call is not retrieved within a period of time assigned by the system, the phone performing call park will receive a call back.

#### Note

You can use call pickup to answer someone else's incoming call on your phone. The SIP-T28P IP phone supports directed call pickup and group call pickup. Directed call pickup is used for picking up a call that is ringing at a target phone number. Group call pickup is used for picking up a call that is ringing at any phone number in a certain group. The pickup group should be predefined, contact your system administrator for more information.

You can pick up an incoming call by using the **DPickup**/**GPickup** soft key. To use call pickup, you need to configure the call pickup code beforehand on a global or per-line basis via web user interface.

**Note** If there are many incoming calls at the same time, pressing the **GPickup** soft key on the phone will pick up the call that rings first.

The directed call pickup code and group call pickup code are predefined on the system server. Contact your system administrator for more information.

The call pickup code configured on a per-line basis takes precedence over that configured on a global basis.

To enable the directed call pickup via web user interface:

1. Click on Features->Call Pickup.
2. Select Enabled from the pull-down list of Directed Call Pickup.
3. Click Confirm to accept the change.

To configure the directed call pickup code on a global basis via web user interface:

1. Click on Features->Call Pickup.
2. Enter the directed call pickup code in the Directed Call Pickup Code field.
3. Click Confirm to accept the change.

To configure the directed call pickup code on a per-line basis via web user interface:

1. Click on Account.
2. Select the desired account from the pull-down list of Account.
3. Click on Advanced.
4. Enter the directed call pickup code in the Directed Call Pickup Code field.
5. Click Confirm to accept the change.

To pick up a call directly:

1. Pick up the handset and press the more soft key.

The DPickup soft key appears on the LCD screen.

2. Press the DPickup soft key on your phone when the target phone receives an incoming call.
3. Enter the phone number which is receiving an incoming call.
4. Press the DPickup soft key again.

The call is answered on your phone.

You can also configure a DSS key as a directed pickup key via phone user interface or web user interface. Once configured, you can pick up a call by pressing the directed pickup key directly.

Note If a pickup code is already configured on a global or a per -line basis, you should not configure the pickup code when configuring a DSS key to be pickup key.

To enable group call pickup via web user interface:

1. Click on Features->Call Pickup.

2. Select Enabled from the pull-down list of Group Call Pickup.
3. Click Confirm to accept the change.

To configure the group call pickup code on a global basis via web user interface:

1. Click on Features->Call Pickup.
2. Enter the group call pickup code in the Group Call Pickup Code field.
3. Click Confirm to accept the change.

To configure the group call pickup code on a per-line basis via web user interface:

1. Click on Account.
2. Select the desired account from the pull-down list of Account.
3. Click on Advanced.
4. Enter the group call pickup code in the Group Call Pickup Code field.
5. Click Confirm to accept the change.

To pick up a call in the group:

1. Pick up the handset.

The GPickup soft key appears on the LCD screen.

2. Press the GPickup soft key on your phone when a phone in the group receives an incoming call.

The call is answered on your phone.

You can also configure a DSS key as a group pickup key via phone user interface or web user interface. Once configured, you can pick up a call by pressing the group pickup key directly.

media/image556.png

You can use anonymous call to block your identify and phone number from appearing to the called party when you call someone. For example, you want to call to consult some of the services, but don't want to be harassed. Anonymous call is configurable on a per-line basis. You can also configure the phone to send anonymous call on/off code to the server to activate/deactivate anonymous call on the server side.

Anonymous call is not available on all servers. Contact your system administrator for the anonymous call on code and off code.

Note

To configure anonymous call via phone user interface:

1. Press Menu->Features->Anonymous Call.

- 2.

ID field.

Press

or

,

or the

Switch

soft key

to select the desired line

from the

Account

Press

or

to select

Enable

d

from the

Local

Anonymous

field.

(

Optional.

)

Press or

to select

the desired value

from the

Send Anony Code

- 3.

- 4.

field.

5. (Optional.) Enter the anonymous call on code and off code respectively in the On Code and Off Code field.

The phone will send the configured on code or off code depending on your selection when you enable or disable anonymous call feature on the phone.

6. Press the Save soft key to accept the change or the Back soft key to cancel.

Anonymous call is configurable via web user interface at the path Account->Basic.

To place an anonymous call:

1. Using the specific line on the phone to place a call to phone B.

The LCD screen of phone B prompts an incoming call from anonymity.■

media/image561.png

You can use anonymous call rejection to reject incoming calls from anonymous callers. Anonymous call rejection automatically rejects incoming calls from callers who deliberately block their identities and numbers from being displayed. Anonymous call rejection is configurable on a per-line basis. You can also configure the phone to send anonymous call rejection on/off code to the server to activate/deactivate anonymous call rejection on the server side.

To configure anonymous call rejection via phone user interface:

1. Press Menu->Features->Anonymous Call.

- 2.

ID field.

Press  
or  
, or the  
Switch  
soft key to  
select the desired line  
from  
the  
Account  
Press  
or  
to scroll to the  
Anon  
Reject  
field.  
Press  
or  
to select  
Enable  
d  
from  
the  
Anon  
Reject  
field.  
Press or to scroll to the  
Send  
r  
ejection Code



field.  
(  
Optional.) Press or  
to select  
the desired value  
from the  
Send  
r  
ejection

3.

4.

5.

6.

Code field.

7. (Optional.) Enter the anonymous call rejection on code and off code respectively in the On Code and Off Code field.

The phone will send the configured on code or off code depending on your selection when you enable or disable local anonymous rejection feature on the phone.

8. Press the Save soft key to accept the change or the Back soft key to cancel.

Anonymous call rejection is configurable via web user interface at the path Account->Basic.

This chapter provides operating instructions for the advanced features of the SIP-T28P IP phone. Topics include:

- Busy Lamp Field (BLF)
- BLF List
- Call Recording
- Hot Desking
- Intercom
- Multicast Paging
- Music on Hold
- Messages

If you require additional information or assistance with your new phone, contact your system administrator.

You can use BLF to monitor a specific line for status changes on the phone. For example, you can configure a BLF key on the phone

to monitor the status of a friend's line (busy or idle). The BLF key LED slow flashing green when the friend's line is in use. For more information on BLF key LED indications, refer to LED Instructions on page 4.

You can press a BLF key to dial out the monitored phone number when the monitored line is idle. You can receive a visual or/and an audio alert (if enabled), and also pick up calls that are received on the monitored line. For more information, contact your system administrator.

To configure a BLF key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select the desired DSS key.
3. Press or , or the Switch soft key to select BLF from the Type field.
4. Press or , or the Switch soft key to select the desired account from the Account ID field.
5. Enter the phone number or extension you want to monitor in the Value field.
6. (Optional.) Enter the pickup code in the Extension field.
7. Press the Save soft key to accept the change or the Back soft key to cancel.

BLF key is configurable via web user interface at the path DSSKey.

You can enable audio alert feature for BLF pickup on the phone. This allows the phone to play a warning tone when the monitored line receives an incoming call. You can also enable visual alert feature for BLF pickup on the phone. This allows the LCD screen of the monitoring phone to display the caller ID when the monitored line receives an incoming call.

To enable visual and audio alert features via web user interface:

1. Click on Features->Call Pickup.
2. Select Enabled from the pull-down list of Visual Alert for BLF Pickup.
3. Select Enabled from the pull-down list of Audio Alert for BLF Pickup.

4.  
Click  
Confirm  
to  
accept the change

Visual and audio alert features are configurable via web user interface only. ■

Note

When the monitored line receives an incoming call, the following occurs on your phone:

- The phone plays a warning tone (if enabled).
- The BLF key LED flashes.
- The caller ID appears on the LCD screen (if enabled).

In the following figure, the LCD screen shows an incoming call from 2388 on the monitored line.

If your phone is locked and the type of the phone lock is configured as Function Keys or All Keys, you cannot use the Pickup, Send, New Call and Cancel soft keys until unlocked.

#### Note

When there is an active call on the IP phone, you can transfer the active call to the monitored phone number directly by pressing the BLF key. The phone handles the active call differently depending on the transfer mode on DSS key. For more information on the transfer mode on DSS key, refer to transfer in DSS Keys section on page 53.

You can use the BLF List feature to monitor a list of users defined by your system administrator. For example, your system administrator enables BLF List, and creates a BLF List URI (e.g., BLFList@example.com) including a list of user1, user2 on the server. The BLF List keys on the IP phone can present the status of user1 and user2. The key LEDs illuminate either flashing or solid depending on the status of those users. For more BLF List key LED indications, refer to LED Instructions on page 4.

You can use the BLF List keys in the following ways:

- When the monitored user is idle, press the BLF list key to dial out the phone number.
- When there is already an active call on the IP phone, you can transfer the active call to the monitored user by pressing the BLF List key. The phone handles the active call differently depending on the transfer mode on DSS key. For more information on the transfer mode on DSS key, refer to Transfer section on page 58.
- When the monitored user receives an incoming call, press the BLF list key to pick up the call directly. Before picking up an incoming call, ensure that the directed pickup code has been configured in advance. If the directed pickup code is not configured, the phone will place a call to the monitored user instead of picking up the incoming call of the monitored user when you press the BLF List key.

- When there is a conversation on the monitored user, press the BLF list key to barge in and set up a conference call. Before barging in an active call, ensure that the barge-in code has been configured in advance. If the BLF list barge in code is not configured, the phone will place a call to the monitored user instead of barging in an active call of the monitored user when you press the BLF List key.
- When a call is being parked against the monitored phone, press the BLF List key to retrieve the parked call from the monitored user. Before retrieving the parked call, ensure that the BLF List Retrieve call parked Code has been configured in advance. If the code is not configured, the phone will place a call to the monitored user instead of retrieving the parked call when you press the BLF List key.

To configure BLF List settings via web user interface:

1. Click on Account->Advanced.
2. Select the desired account from the pull-down list of Account.
3. Enter the BLF List URI in the BLF List URI field.
4. (Optional.) Enter the directed pickup code in the BLF List code field.
5. (Optional.) Enter the barge-in code in the BLF List Barge In Code field.
6. (Optional.) Enter the call park retrieve code in the BLF List Retrieve call parked Code field.
7. Click Confirm to accept the change.

For more information on BLF List URI/BLF List Code/BLF List Barge In Code/BLF List Retrieve Call Parked Code, contact your system administrator.

#### Note

According to the response message from the server, the IP phone will automatically configure the BLF List keys beginning from the first unused DSS key (The default order of BLF list keys assigned automatically is Line Key->Memory Key->Ext Key). Once any DSS key is seized, the IP phone will skip to configure the next DSS key.

You can receive a visual or/and an audio alert (if enabled) on your phone when the monitored user receives an incoming call. For more information, refer to Busy Lamp Field (BLF) on page 109.

The pickup code is used in the following order of preference: BLF List Code (Account->Advanced)>Directed Call Pickup Code (Account->Advanced)>Directed Call Pickup Code (Features->Call Pickup). If all of them are not configured, pressing the BLF List key will directly call the monitored user when he/she receives an incoming call. For more information about pickup Code, refer to Call Pickup on page 101.

Note

media/image584.png

You can record calls by pressing a record key on the phone. The SIP-T28P IP phone supports record and URL record.

Two ways of call recording:

- Record: The phone sends SIP INFO message containing a specific header “Record: on/off” to trigger a recording.
- URL Record: The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

Note Call record is not available on all servers. Contact your system administrator for more information.

To configure a record key via phone user interface:

1. Press Menu->Features->DSS Keys->(or Line Keys).
2. Select the desired DSS key.
3.  
Press  
or  
, or the  
Switch  
soft key  
to select  
Key Event  
from the  
Type  
field.
4.  
Press  
or  
, or the  
Switch  
soft key  
to select  
Record  
from the  
Key Type  
field.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

To configure a URL record key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).

2. Select the desired DSS key.
3. Press or , or the Switch soft key to select URL Record from the Type field.
4. Enter the URL (e.g., `http://10.1.2.224/phonerecording.cgi`) in the Value field.
5. Press the Save soft key to accept the change or the Back soft key to cancel.

Record and URL record keys are configurable via web user interface at the path DSSKey.

The record and URL record keys control the recording function, and are available:

- During an active call
- When calls are on hold or muted
- During a blind or attended transfer
- During a conference call
- When the phone prompts you to answer an incoming call The record and URL record keys are not available when:
- There are no connected calls on your phone
- You place a new call To record a call:

1. Press a record or URL record key during a call.

If the recording starts successfully, the recording icon will appear on the LCD screen and the record or URL record key LED will flash green.

2. Press the record or URL record key again to stop recording.

The recording icon disappears from the LCD screen and the record or URL record key LED goes out.

Recording status indications you need to know:

Circumstance Icons on the LCD screen



 `media/image589.png` Appears on the LCD screen

 `media/image590.png` appears for 1 second

 `media/image591.png` appears for 1 second, then goes back

 `media/image592.png` appears for 1 second

 appears for 1 second

You can listen to the recordings stored on your server system. For example, you can dial an access code to listen to the recordings.

The way in which you listen to the recordings may be different depending on the server. Contact your system administrator for more information.

#### Note



Hot desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for hot desking is cost reduction. This feature is regularly used in places where not all the employees are in the office at the same time, or not in the office for very long, which means that actual personal offices would be often vacant, consuming valuable space and resources.

You can use hot desking on the SIP-T28P IP phone to log out of existing accounts and then log into a new account, that is, many users can share the phone resource at different times. To use this feature, you need to configure a hot desking key in advance.

Hot desking is not available on all servers. Contact your system administrator for more information.

#### Note

To configure a hot desking key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select the desired DSS key.
3. Press , or the Switch soft key to select Key Event from the Type field.

field.

4.

Press

or

, or the

Switch

soft key

to select

Hot Desking

from the

Key Type

5. Press the Save soft key to accept the change or the Back soft key to cancel.

Hot desking key is configurable via web user interface at the path DSSKey.

To use hot desking:

1. Press the hot desking key when the phone is idle.

The LCD screen prompts “Clear all account config?”.


2. Press the OK soft key, registration configurations of all accounts will be cleared immediately.

The login wizard will be displayed as below:

3. Enter the desired values in the User Name and Password fields respectively.

Contact your system administrator for more information.

4. Press the Save soft key to login or Cancel soft key to cancel.

media/image601.png

Intercom is a useful feature in an office environment to quickly connect with the operator or the secretary. You can press the intercom key to automatically connect with a remote extension for outgoing intercom calls, and the remote extension will automatically answer incoming intercom calls.

Intercom is not available on all servers. Contact your system administrator for more information.

#### Note

To configure an intercom key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select the desired DSS key.
3. Press or , or the Switch soft key to select Intercom from the Type field.
4. Select the desired account from the Account ID field.
5. Enter the remote extension number in the Value field.
6. Press the Save soft key to accept the change or the Back soft key to cancel.

Intercom key is configurable via web user interface at the path DSSKey.

To place an intercom call:

1. Press the intercom key when the phone is idle.



The phone is automatically connected to the extension specified in the Value field.

2. Press the intercom key again or the Cancel soft key to end the intercom call.

The SIP-T28P IP phone supports automatically to answer an incoming intercom call by default. The phone automatically plays a warning tone when it receives an incoming intercom call. In addition, you can enable the phone to mute the microphone when it automatically answers an incoming intercom call. You can also enable the phone to automatically answer an incoming intercom call while there is already an active call on the phone. The active call is then placed on hold.

Intercom features you need to know:

Intercom Feature

Description

Enable or disable the IP phone to automatically answer an incoming intercom call.

Enable or disable the IP phone's microphone for intercom calls.

Enable or disable the IP phone to play a warning tone when it receives an incoming intercom call.

Enable or disable the IP phone to automatically answer an incoming intercom call while there is already an active call on the phone.

To configure intercom features via phone user interface:

1. Press Menu->Features->Intercom.
2. Make the desired changes.
3. Press the Save soft key to accept the change or the Back soft key to cancel.

These specific parameters are configurable via web user interface at the path Features->Intercom.

Accept Intercom

You can enable or disable the phone to automatically answer an incoming intercom call. If Accept Intercom is enabled, the phone will automatically answer an incoming intercom call. If Accept Intercom is disabled, the phone will reject incoming intercom calls and send a busy message to the caller. Accept Intercom is enabled by default.

Your administrator can set a delay time before the phone automatically answers intercom calls. Contact your system administrator for more information.

#### Note

##### Intercom Mute

You can mute or un-mute the phone's microphone for intercom calls automatically. If

Intercom Mute is enabled, the microphone will be muted for intercom calls. If Intercom Mute is disabled, the microphone will work for intercom calls. Intercom Mute is disabled by default.

##### Intercom Tone

You can enable or disable the phone to play a warning tone when receiving an intercom call. If Intercom Tone is enabled, the phone will play a warning tone before answering the intercom call. If Intercom Tone is disabled, the phone will automatically answer the intercom call without warning. Intercom Tone is enabled by default.

##### Intercom Barge

You can enable or disable the phone to automatically answer an incoming intercom call while there is already an active call on the phone. If Intercom Barge is enabled, the phone will automatically answer the intercom call and place the active call on hold. If Intercom Barge is disabled, the phone will handle an incoming intercom call like a waiting call. Intercom Barge is disabled by default.

`media/image624.png`

You can use multicast paging to quickly and easily forward out time sensitive announcements to people within the multicast group. You can configure a multicast paging key or a paging list key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

To configure a multicast paging key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select the desired DSS key.
3. Press or , or the Switch soft key to select Key Event from the Type field.
4. Press or , or the Switch soft key to select Multicast Paging from the Key Type field.

5. Enter the multicast IP address and port number (e.g., 224.5.6.20:10008) in the Value field.

The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.■

6. Press the Save soft key to accept the change or the Back soft key to cancel.

Multicast paging key is configurable via web user interface at the path DSSKey.

To configure a paging list key via phone user interface:

1. Press Menu->Features->DSS Keys->Memory Keys (or Line Keys).
2. Select the desired DSS key.
- 3.
- 4.
- field.

Press

or

, or the Switch soft key

to select

Key Event

from the

Type

field.

Press

or

, or the Switch soft key

to select

Paging

List

from the

Key Type

5. Press the Save soft key to accept the change or the Back soft key to cancel.

Paging list key is configurable via web user interface at the path DSSKey.

To configure paging list via phone user interface:

1. Press the paging list key when the phone is idle.
2. Press or to select a desired paging group.

The default tag is Empty if it is not configured before.

3. Press the Option soft key.

4. Press the Edit soft key.
5. Enter the multicast IP address and port number (e.g., 224.5.6.20:10008) in the Address field.

The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.■

6. Enter the group name in the Label field.
7. Press the Save soft key to accept the change.
8. Repeat the step 2-7, you can add more paging groups.

Paging list is configurable via web user interface at the path: Directory-■  
>Multicast IP.

To delete paging group via phone user interface:

1. Press the Paging list key when the phone is idle.
2. Press or to select a desired group.
3. Press the Option soft key.
4. Press the Delete soft key.
5. Press the OK soft key to accept the change or the Cancel soft key to cancel.

If you want to delete all paging group, you can press the Delete All soft key.

You can also configure the phone to use a default codec for sending multicast RTP stream via web user interface.

To configure a default codec for multicast paging via web user interface:

1. Click on Features->General Information.
2. Select the desired codec from the pull-down list of Multicast Codec.

The default codec is G722.


3.

Click

Confirm

to accept the change.

If G722 codec is used for multicast paging, the LCD screen will display the

 icon to indicate that it is providing high definition voice. ■

Default codec for multicast paging is configurable via web user interface only.

Note

To send RTP stream via a multicast paging key:

1. Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP: Port). For both sending and receiving of the multicast RTP, there is no SIP signaling involved.

The multicast paging key LED illuminates solid green.

The following figure shows a multicast RTP session on the phone:

2. Press the Hold soft key to place the current multicast RTP session on hold.
3. Press the Cancel soft key to cancel the multicast RTP session.

Multicast RTP is one way only from the sender to the multicast address(es) (receiver). For outgoing RTP multicasts, all other existing calls on the phone will be placed on hold.

Note

To send RTP stream via a paging key list:

1. Press the paging list key when the phone is idle.
- 2.

Press  
or  
to select the  
desired group

.  
Press  
or  
the  
Paging  
soft key  
to  
send  
RT  
P  
.

- 3.
4. Press the Hold soft key to place the current multicast RTP session on hold.
5. Press the Cancel soft key to cancel the multicast RTP session.

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

#### Paging Barge

The paging barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take precedence over all incoming multicast paging calls.

Valid values in the Paging Barge field:

- 1 to 10: Define the priority of the active call, 1 is the highest priority, 10 is the lowest.
- Disabled: The voice call in progress will take precedence over all incoming paging calls.

#### Paging Priority Active

The paging priority active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.

To configure multicast listening addresses via web user interface:

1. Select the desired value from the pull-down list of Paging Barge.
2. Select the desired value from the pull-down list of Paging Priority Active.
3. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:10008) ■ which the phone listens to for incoming RTP multicast in the Listening Address field.

The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255. ■

6. Enter the label in the Label field.

Label will appear on the LCD screen when receiving the RTP multicast.


7. Click Confirm to accept the change.

The priorities of listening addresses are predefined: 1 with the highest priority, 10 with the lowest.

Both the multicast paging sender and receiver's phones play a warning tone when establishing a multicast paging call.

Multicast listening addresses are configurable via web user interface only.

Note



Music on hold (MoH) is the business practice of playing recorded music to fill the silence that would be heard by the party placed on hold. To use this feature, you should specify a SIP URI pointing to a Music on Hold Server account. When a call is placed on hold, the phone will send a SIP INVITE message to the Music on Hold Server account. The Music on Hold Server account automatically answers the SIP INVITE messages and immediately plays audio from some source located anywhere (LAN, Internet) to the held party. Contact your system administrator for the SIP URI. To configure the music on hold server via web user interface:


1. Click on Account.
2. Select the desired account from the pull-down list of Account.
3. Click on Advanced.
4. Enter the SIP URI (e.g., sip:moh@sip.com) in the Music Server URI field.
5. Click Confirm to accept the change.

When you have placed a call on hold, the held party can hear the music.

For this feature to function, all involved parties cannot use encrypted RTP (SRTP).

Music on hold server is configurable via the web user interface only.

Note



You can send and receive text messages using the SIP-T28P IP phone. New text messages can be indicated both acoustically and visually. When receiving a new text message, the phone will play a warning tone, and the LCD screen will prompt receiving new text messages with the number of waiting messages (example: 2 New Text Message(s)) and a flashing icon.

Note When the phone receives a text message, the text message prompt window will pop up by default, if you want to disable the feature, contact your system administrator for more information.

You can store text messages in your phone's Inbox, Sentbox, Outbox or Draftbox. Each of the boxes can store up to 100 text messages. If the number of the text messages in one box is more than 100, the phone will directly delete the oldest text message in the box.

Note SMS is not available on all servers. Contact your system administrator for more information.

To read a text message:

1. Press Menu->Messages->Text Message->Inbox.
2. Select the desired message and press the View soft key.

If the phone prompts receiving new text messages, you can also press the View soft key to read the new messages directly.

Note

To send a text message:

1. Press Menu->Messages->Text Message->New Message.
2. Compose the new text message. You can press the abc soft key to change the input mode.
3. Press the Send soft key.
4. (Optional.) Press or , or the Switch soft key to select the desired account from the From field.
5. Enter the number you want to send the message to in the To field.
6. Press the Send soft key to send the message or the Back soft key to cancel.

Sending a text message is configurable via web user interface at the path Features->SMS.

To reply a text message:

1. Press Menu->Messages->Text Message->Inbox.
2. Select the desired message and press the Reply soft key.
3. Compose the new text message. You can press the abc soft key to change the input mode.
4. Press the Send soft key after completing the content.
5. Check the From and To fields, and then press the Send soft key.

To delete a text message:

1. Press Menu->Messages->Text Message->Inbox (Sentbox, Outbox or Draftbox).



2. Select the desired message and then press the Delete soft key.
3. Select Delete to delete the desired message.


The LCD screen prompts "Delete message?".

4. Press the OK soft key to delete this message or the Cancel soft key to cancel.

You can also delete all text messages by pressing the Delete soft key and then select Delete All. For more information, refer to the above steps.

You can also delete a specific message after retrieving by pressing the Delete soft key.

#### Note

 media/image671.png

You can leave voice mails for someone else using the SIP-T28P IP phone. You can also listen to voice mails that are stored in a voice mailbox. When receiving a new voice mail, the phone will play a warning tone and the MESSAGE key LED will illuminate. The LCD screen will prompt that the phone receives a new message and display a flashing icon.

If the voice mail pop-up message box disappears, it won't pop up again unless the user receives a new voice mail or the user re-registers the account that has unread voice mail(s).

Voice mail is not available on all servers.

You can configure the phone not to display the pop-up prompt, contact your system administrator for more information.

#### Note

To leave a voice mail:

You can leave a voice mail for someone else when he/she is busy or inconvenient to answer the call. Follow the voice prompt from the system server to leave a voice mail, and then hang up.

To configure voice mail access codes via phone user interface:

1. Press Menu->Messages->Voice Mail->Set Voice Mail.
2. Press the navigation keys to select the account which you want to set.
3. Press the 123 soft key to select the proper input mode and then enter the voice mail access code (e.g., \*97).
4. Press the Save soft key to accept the change or the Back soft key to cancel.

Note Voice mail access codes must be predefined on the system server. Contact your system administrator for the more information.

To listen to voice mails:

1. When the LCD screen prompts that the phone receives a new voice mail, press  or the Connect soft key to dial out the voice mail access code.
2. Follow the voice prompt to listen to your voice mails.

Note Before listening to voice mails, make sure the voice mail access code has been configured.

When all new voice mails are retrieved, the MESSAGE key LED will go out.

To view voice mails via phone user interface:

1. Press Menu->Messages->Voice Mail->View Voice Mail.

The LCD screen displays the amount of new and old voice mails.

2. Select an account and then press the Connect soft key to listen to voice mails.



The SIP-T28P IP phone supports MWI feature when receiving a new voice message. If someone leaves you a voice mail, you will receive a message waiting indicator. MWI will be indicated in three ways: a warning tone, a prompt message (including a voice mail icon) on the LCD screen, and the MESSAGE key LED illuminates solid green. This will be cleared when you retrieve all voice mails or delete them.

The MWI service is unsolicited for some servers, so the SIP-T28P IP phone only handles the MWI messages sent from the server. But for other servers, the MWI service is solicited, so the SIP-T28P IP phone must enable subscription for MWI.

MWI service is not available on all servers. Contact your system administrator for more information.

Note

The MWI Subscription parameters you need to know:

Options

Description

Enable or disable a subscription for MWI service.

Period of MWI subscription. The IP phone sends a refresh SUBSCRIBE request before initial SUBSCRIBE expiration.

#### Subscribe MWI to Voice

Enable or disable a subscription to the voice mail number for MWI service.

To use this feature, you should also configure the voice mail number.

The phone will send SUBSCRIBE messages for the MWI service to the account or the voice number MWI service depending on the server. Contact your system administrator for more information.

#### Note

To configure subscribe for MWI via web user interface:

1. Click on Account.
2. Select the desired account from the pull-down list of Account.
3. Click on Advanced.
4. Select Enabled from the pull-down list of Subscribe for MWI.
5. Enter the period time in the MWI Subscription Period (Seconds) field.
6. Click Confirm to accept the change.

To enable Subscribe MWI to Voice Mail via web user interface:

1. Click on Account.
2. Select the desired account from the pull-down list of Account.
3. Click on Advanced.
4. Select Enabled from the pull-down list of Subscribe MWI To Voice Mail.
5. Enter the desired voice mail number in the Voice Mail field.
6. Click Confirm to accept the change.

The IP phone will subscribe to the voice mail number for MWI service using Subscribe MWI to Voice Mail.

MWI subscription is configurable via web user interface only.

#### Note

This chapter provides general troubleshooting information to help to solve the problems you might encounter when using your SIP-T28P IP phone.

If you require additional information or assistance with your new phone, contact your system administrator.

Why is the LCD screen blank?

- Ensure that the phone is properly plugged into a functional AC outlet.
- Ensure that the phone is plugged into a socket controlled by a switch that is on.
- If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
- If the phone is powered from PoE, ensure that you use a PoE-compliant switch or hub.

Why does the LCD screen have bad contrast?

You need to adjust the contrast of LCD screen. To adjust the contrast, refer to Contrast on page 19.

Why does the phone display "Network Unavailable"?

- Ensure that the Ethernet cable is plugged into the Internet port of the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is operational.

Why does the phone display "No Service"?

The LCD screen prompts "No Service" message when no SIP account registers successfully.

Why doesn't the phone display time and date correctly?

Check if you have configured the phone to obtain the time and date from the SNTP server automatically. If the phone fails to connect to the SNTP server, you need to configure the time and date manually.

How do I find the basic information of the phone?

Press the OK key when the phone is idle to check the basic information of the phone, such as the IP address and firmware version. For more the basic information, refer to Phone Status on page 14.

How to obtain the MAC address of a phone when the phone is not powered on?

Three ways to obtain the MAC address of a phone:

- You can ask your supplier for the shipping information sheet which includes MAC addresses according to the corresponding PO (Purchase Order).
- You can find the MAC address on the label of the carton box.
- You can also find the MAC address from the phone's bar code on the back of the phone.

Why can't I get a dial tone?

- Check for any loose connections and that the phone has been installed properly.

For the installation instructions, refer to Phone Installation on page 11.

- Switch between the Handset, Headset (if present) or Hands-Free Speakerphone to check whether the dial tone is present for one of the audio modes.

If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

Why doesn't the phone ring?

Check that the ringer volume on the phone. To adjust the ringer volume setting, press the Volume key when the phone is idle. For more information, refer to Volume on page 28.

Why can't I receive calls?

- Check that the SIP registration with your system administrator.
- Check that the DND (Do Not Disturb) mode is deactivated on the phone. Refer to Do Not Disturb (DND) on page 84.
- Check that call forward is disabled on the phone. Refer to Call Forward on page 88.
- Check whether the caller number is stored in the blacklist directory. Refer to Blacklist on page 44.

Why is my handset not working?

Check that the handset cord is fully connected to both the handset jack on the phone and handset. Refer to Phone Installation on page 11.

Why is my headset not working?

- Check that the headset cord is fully connected to the headset jack on the phone.

Refer to Phone Installation on page 11.

- Check that the headset mode is activated. Refer to Headset Mode Activation/Deactivation on page 51.
- Check that the headset volume is adjusted to an appropriate level. Refer to Volume on page 28.

What will happen if I connect both PoE cable and power adapter? Which has the priority?

The phones manufactured before February 2010 use the power adapter preferentially, otherwise the phones use PoE preferentially.

What is the difference between user name, register name and display name?

Both user name and register name are defined by the server. A user name is used to identify the account while a register name matched with a password is used for authentication if the server requires. Display name is the caller ID that will be displayed on the callee's LCD screen. Server configurations may override local configurations.

Why does the phone play a tone when there is a call on hold? How to disable it?

When there is a call on hold, the phone will play a hold tone every 30 seconds. Play hold tone is enabled by default. Play hold tone and the interval of play a hold tone are configurable via web user interface only.

To configure play hold tone and play hold tone delay via web user interface:

1. Click on Features->General Information.
2. Select the Enabled or Disabled from the pull-down list of Play Hold Tone.
3. Enter the desired time (in seconds) in the Play Hold Tone Delay field.
4. Click Confirm to accept the change.

Why can't I send a SMS to any other phone?

SMS depends on support from a SIP server. Contact your system administrator for more information.

How to change the user password?

To change the user password via web user interface:

1. Click on Security->>Password.
2. Select User from the pull-down list of User Type.
3. Enter the new user password in the New Password field and Confirm Password field.
4. Click Confirm to accept the change.

If you are logging into the web user interface of the phone with user credentials, you need to enter the current user password in the Old Password field.

User password is configurable via the web user interface only.

#### Note

How to make a call using SRTP?

You can enable SRTP to encrypt the audio stream(s) of phone calls. The parties participating in the call should enable SRTP. You can enable SRTP on a per-line basis.

To enable SRTP via web user interface:

1. Click on Account.
  2. Select the desired account from the pull-down list of Account.
  3. Click on Advanced.
  4. Select the desired value from the pull-down list of RTP Encryption (SRTP).
  5. Click Confirm to accept the change.
- SRTP is not available on all servers. Contact your system administrator for more information.

#### Note

How to reboot the phone?

To reboot the phone via web user interface:

1. Click on Settings -> Upgrade.
  2. Click Reboot to reboot the phone.
- Any reboot of the phone may take a few minutes.

#### Note

How to export PCAP trace?

We may need you to provide a PCAP trace to help analyze your problem.

To export a PCAP trace via web user interface:

1. Click on Settings->Configuration.
2. Click Start to begin recording signal traffic.
3. Recreate the error to be documented in the trace.
4. Click Stop to end recording.
5. Click Export to open file download window, and then save the file to your local system.

How to export system log?

We may need you to provide a system log to help analyze your problem.

To export the system log to a local PC via web user interface:

1. Click on Settings->Configuration.
2. Select 6 from the pull-down list of System Log Level.
3. Click Confirm to accept the change.
4. Mark the Local radio box in the Export System Log field.
5. Click Export to open file download window, and then save the file to your local system.

You can also export the system log to a syslog server. Contact your system administrator for more information.

It is recommended you reset the system log level to 3 after you have the syslog file provided.

#### Note

How to export/import phone configurations?

We may need you to provide the phone configurations to help analyze your problem. In some instance, you may need to import configurations to the phone.

To export the phone configurations via web user interface:

1. Click on Settings->Configuration.
2. In the Export or Import Configuration block, click Export to open file download window, and then save the file to your local system.

To import the phone configurations via web user interface:

1. Click on Settings->Configuration.
2. In the Export or Import Configuration block, click Browse to locate a configuration file from your local system.
3. Click Import to import the configuration file.

The file format of configuration file must be \*.bin.

#### Note

How to upgrade firmware?

To upgrade firmware via web user interface:

1. Click on Settings->Upgrade.
2. Click Browse to locate the required firmware from your local system.
3. Click Upgrade to upgrade the firmware.

The web user interface prompts "Firmware of the SIP Phone will be updated. It will take 5 minutes to complete. Please don't power off!".



4. Click OK to confirm upgrading.

How to reset the phone?

Reset the phone to factory configurations after you have tried all troubleshooting suggestions but do not solve the problem. You need to note that all custom settings will be overwritten after resetting. We recommend asking your system administrator for advice before resetting the phone.

To reset the phone via phone user interface:

1. Press Menu->Settings->Advanced Settings (default password: admin).
2. Press or to scroll to Reset to Factory, and then press the Enter soft key.

The LCD screen prompts “Reset to factory settings?”.

3. Press the OK soft key.

The LCD screen prompts “Resetting... Please Wait!”.

The LCD screen prompts “Welcome Initializing... Please Wait”.

The phone will be reset to factory settings successfully after startup. Reset of your phone may take a few minutes. Do not power off until the phone has started up successfully.

Note

Regulatory Notices

Contact your Yealink Authorized Reseller for information about service agreements applicable to your product.

media/image710.png

TO THE FULL EXTENT ALLOWED BY LAW, YEALINK EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF YEALINK OR ITS AUTHORIZED

RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS

LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT

YEALINK'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Save these instructions. Read these safety instructions before use!

The following basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and other personal injury.

#### General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean.
- During the process of storage, transportation, and operation, please avoid collision and crash of the device.
- Please do not attempt to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Without prior written consent, no organization or individual is permitted to make any change to the structure or the safety design of the device. Yealink is under no circumstances liable to consequences or legal issues caused by such changes.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should also be respected as well.

#### Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dust.
- Place the device on a stable and level platform.
- Please do not place heavy objects on the device in case of damage and deformation caused by the heavy load.
- Keep at least 10 cm between the device and the closest object for heat dissipation.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

- Keep the device away from any household appliance with a strong magnetic field or electromagnetic field, such as a microwave oven or a refrigerator.

#### Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please only use the accessories provided or authorized by the manufacturer.
- The power supply of the device must meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- Do not tread on, pull, or over-bend any cable in case of malfunction of the device.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately. Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you have disconnected all other cables.

#### Cleaning Requirements

- Before cleaning the device, stop using it and disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.

## Regulatory Notices

- Keep the power plug clean and dry. Using a dirty or wet power plug may lead to electric shock or other perils.

## Appendix A-Time Zones

| Time Zone |        | Time   |
|-----------|--------|--------|
| Zone Name |        |        |
|           | -11:00 |        |
|           | -10:00 | -09:30 |
|           | -09:00 | -08:00 |
|           | -08:00 | -08:00 |
|           | -07:00 | -07:00 |
|           |        | -07:00 |
|           |        | -06:00 |
|           | -06:00 | -06:00 |
|           | -05:00 | -05:00 |
|           |        | -05:00 |
|           | -04:30 | -04:00 |
|           | -04:00 |        |
|           |        | -03:30 |
|           |        | -03:00 |
| Aires)    |        |        |
|           | -03:00 | -03:00 |
|           | -02:30 | -02:00 |
|           | -01:00 | 0      |
|           | 0      | 0      |
|           | 0      | 0      |
|           | 0      | 0      |
|           | 0      | +01:00 |
|           | +01:00 | +01:00 |
|           | +01:00 | +01:00 |
|           | +01:00 | +01:00 |
|           | +01:00 | +01:00 |
| Time Zone |        | Time   |
| Zone Name |        |        |
|           | +01:00 | +01:00 |
|           | +01:00 | +01:00 |
|           | +01:00 | +01:00 |
|           | +01:00 | +02:00 |
|           | +02:00 | +02:00 |
|           | +02:00 | +02:00 |
| Aviv)     |        |        |
|           | +02:00 | +02:00 |
|           | +02:00 | +02:00 |
|           | +02:00 | +02:00 |
|           | +02:00 | +02:00 |
|           | +02:00 | +03:00 |
|           | +03:00 | +03:00 |

|                  |        |
|------------------|--------|
| +03:30           | +04:00 |
| +04:00           | +04:00 |
| +04:00           | +04:00 |
| +04:30           | +05:00 |
| +05:00           | +05:00 |
| +05:00           | +05:30 |
| +05:45           | +06:00 |
| +06:00           | +06:30 |
| +07:00           | +07:00 |
| +08:00           | +08:00 |
| Singapore +08:00 | ■      |
| +08:00           | +08:45 |
| +09:00           | +09:00 |
| +09:00           | +09:30 |
| +09:30           | +10:00 |
| +10:00           | +10:00 |

#### Appendix A-Time Zones

##### Time Zone

#### Time Zone Name

|        |        |
|--------|--------|
| +10:00 | +10:30 |
| +11:00 | +11:00 |
| +11:30 | +12:00 |
| +12:00 | +12:45 |
| +13:00 | +13:30 |
| +14:00 |        |

#### Index

##### A

About This Guide v  
 Account Management 62  
 Account Registration 63  
 Adding Contacts 35  
 Adding Groups 33  
 Administrator password 23  
 Anonymous Call 106  
 Anonymous Call Rejection 107  
 Answering Calls 75 Area Code 68  
 Attaching Stand 11  
 Audio Settings 28  
 Auto Answer 79  
 Auto Redial 79  
 B  
 Backlight 20  
 Basic Network Settings 15  
 Blacklist 44  
 Block Out 69  
 Busy Lamp Field (BLF) 109 BLF List 111  
 C  
 Call Completion 81  
 Call Forward 88

- Call History Management 48
- Call Hold/Resume 83
- Call Mute 83
- Call Park 100
- Call Pickup 101
- Call Recording 111 Call Transfer 95
- Call Waiting 96
- CE Mark Warning ii
- Conference 97 Contrast 19
- Contact Management 31
- Copyright i
- Customizing Your Phone 19
- D
- Declaration of Conformity ii
- Deleting Contacts 39
- Deleting Groups 35
- Dial-now 67 Dial Plan 65 Directory 31
- Do Not Disturb (DND) 84
- Documentations 8
- DSS Keys 53
- Dual Headset 52
- E
- Editing Contacts 38
- Editing Groups 34
- Emergency Number 70 Ending Calls 77
- G
- Getting Started 9
- General Settings 19
- H
- Hardware Component Instructions 1
- Headset Mode Activation/Deactivation 51
- Headset Prior 51
- Headset Use 51
- Hot Desking 115
- Hotline 72
- I
- Icon Instructions 3
- Idle screen 17
- Importing/Exporting Contact lists 43
- In This Guide v
- Incoming Intercom Calls 117
- Intercom 117
- K
- Key as Send 24
- L
- Language 20
- LED Instructions 4
- Limitation of Liability 143 Line Keys 60
- Live Dialpad 71
- Local Conference 97

- Local Directory 33
- Logo Customization 50
- M
- Memory Keys 53
- Messages 126
- Message Waiting Indicator 130
- Multicast Paging 119
- Multiple Line Keys per Account 64
- Music on Hold 124
- N
- Network Conference 98
- Network Connection 11
- No answer Forward 88
- O
- Outgoing Intercom Calls 117
- Overview 1
- Optional Accessories 10
- P
- Packaging Contents 9
- Phone Initialization 13
- Phone Installation 11
- Phone Status 14
- Phone Lock 25
- Phone User Interface 6
- Placing Calls 73
- Placing Calls to Contacts 40 Programmable Keys 61
- R
- Receiving RTP Stream 123
- Recent Call In Dialing 78
- Redialing Numbers 77
- Recall 82
- Registration 17
- Regulatory Notices 143 Remote Phone Book 46
- Replace Rule 65
- Ring Tones 29
- S
- Safety Instructions 143
- Search Source List in Dialing 41
- Searching for Contacts 41
- Semi-attended Transfer 95
- Sending RTP Stream 119
- Service Agreements 143
- Short Message Service (SMS) 126
- System Customizations 50
- T
- Time and Date 21
- Time Zones 147
- Troubleshooting 133
- V
- Voice Mail 129

Volume 28

W

Warranty ii

Web User Interface 6

WEEE Warning iii



## 8 Remote

TODO: Creating content remotely (work from home) and preparing it for broadcast from the station



## 9 Spots

TODO: Scheduling and preparation of spots (carts)

