

Charging Station Quick Commissioning Guide

This is a quick commissioning guide for Winline all-in-one DC chargers after installation (including the modules installed inside), covering the following steps:

- Safety Precaution
- Charger and Modules Power-up
- Module Addresses Configuration
- Enabling Offline RFID via HMI and Performing a Charging Test

1. Safety Precaution


- Check before power on: ensure that there is no short circuit between the input and output of the system. Refer to the table below.

Classification	NO.	Items	Qualification standard
AC distribution	1	Between three-phase AC air switch terminals, and between AC contactor terminals	No short circuit
	2	AC incoming line (including zero line and ground line)	Accessible and reliable
DC distribution	3	Between each control circuit, between closing circuit, between positive and negative bus bar	No short circuit
Charging module	4	Between input and output integrated terminals, between air switch AC input terminals of the charging module	No short circuit of AC input
			The contact pin shall be free of bending and deformation.

- Initial adjustment of AC distribution: ensure that the AC input voltage ranges $400\text{VAC} \pm 10\%$.
- Initial adjustment of charging module: the working output is within the set voltage and current range.

2. Charger and Modules Power-up

- Close the QF0 (MCCB) circuit breaker, and the equipment will power up and enter standby mode.
- After the charger powered on, the power modules will turn on for a short period. Please program the module addresses according to **Step 3** during this time.
- After a while, the modules will shut down automatically. If the module addresses have not been set yet, please push the relay upward shown in the picture below (blue switch facing upward) to activate the modules, **and return it to its original position again after completing the module address configuration**. Alternatively, you may connect the charging gun to a vehicle to activate the modules.

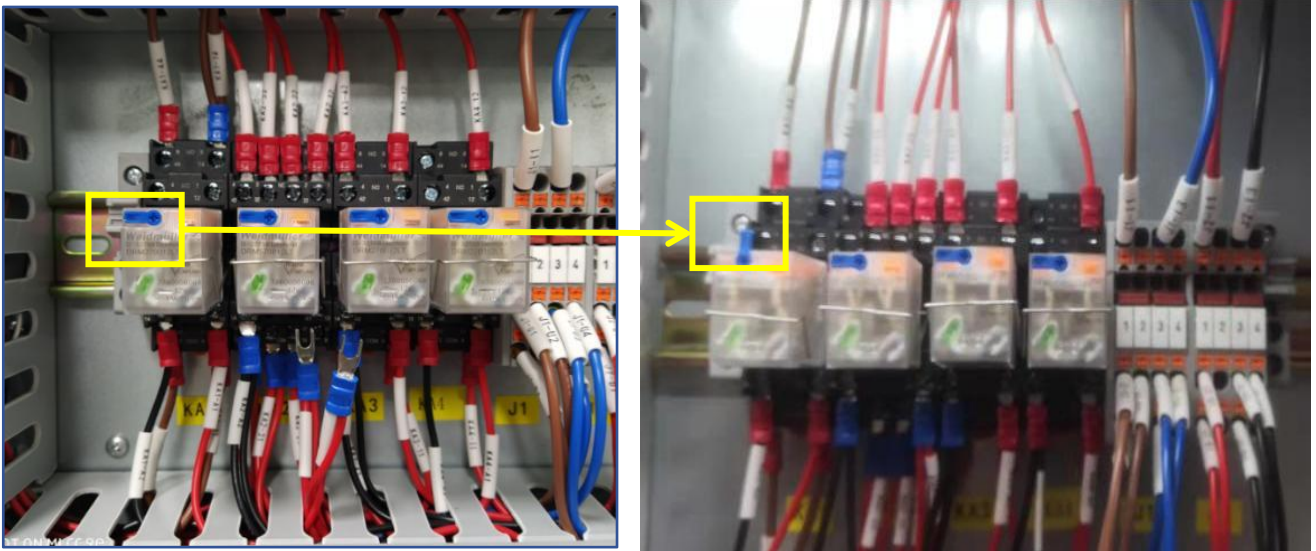

3. Module Addresses Configuration

The module on RM1 address should be 00H, and 01H on RM2, 02H on RM3, 03H on RM4, and so on.



The address allocation of module is usually 00H by default. The module address can be set by pressing the key (down and up) on the module:



To configure the address to 01H for the module on RM2:




- (1) Press (▼) to navigate to page 3. The interface will display the current address (e.g., 00H);
- (2) Press and hold either (▲) or (▼) for 3 seconds, then release to enter edit mode. The address will begin to flash;
- (3) While the address is flashing, press (▲) to adjust the value to "01H";
- (4) Press and hold either (▲) or (▼) for 3 seconds to confirm and save the setting, then release.

Repeat the same steps to set the address for other modules.

After configuring the module address, please close the side door and front door.



4. Enabling Offline RFID via HMI and Performing a Charging Test

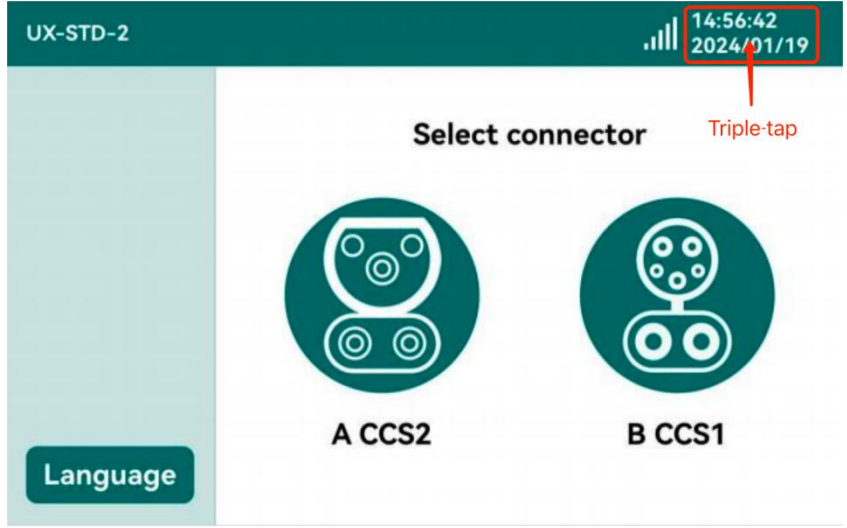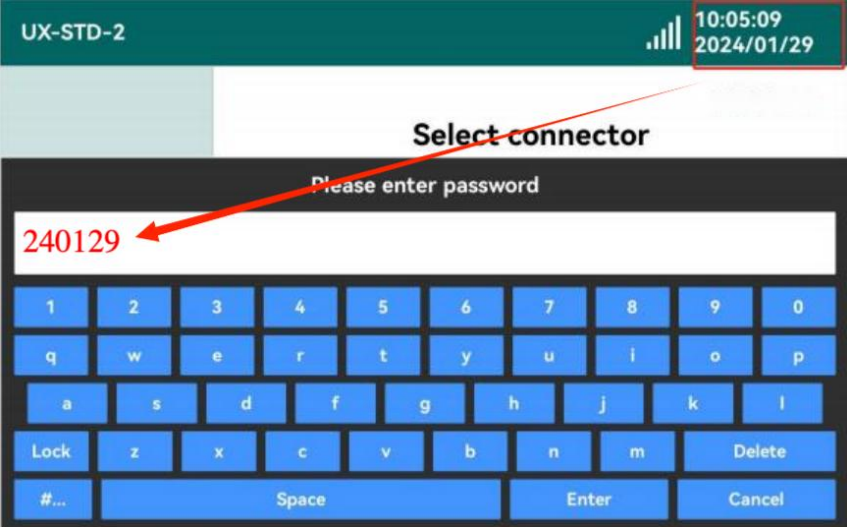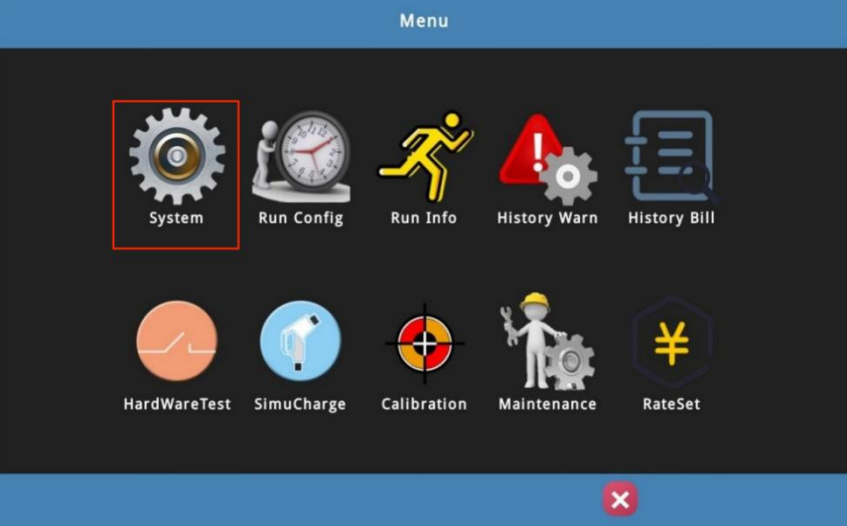Step 1: Triple-tap the date & time area.	
Step 2: Enter the default password. The default password is the last six digits of the date displayed on the screen.	
Step 3: Tap the "System" icon	


Step 4:

Go to the "Local Sup" page,
and set the following items:

CardReader: on

Card on/offline: off


Tap  to confirm.

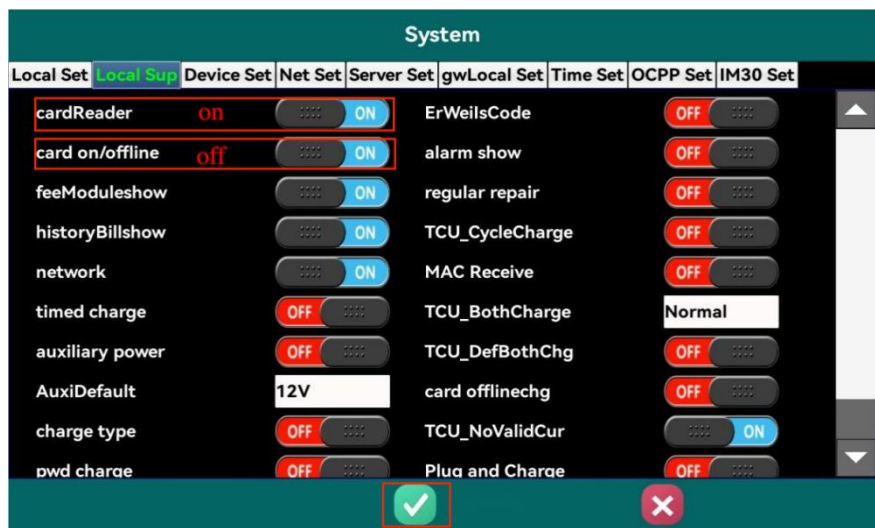

Step 5:

Plug the charging gun into a
vehicle, and start a test
charge by swiping a RFID
card.

For more details, please
refer to the HMI Manual.

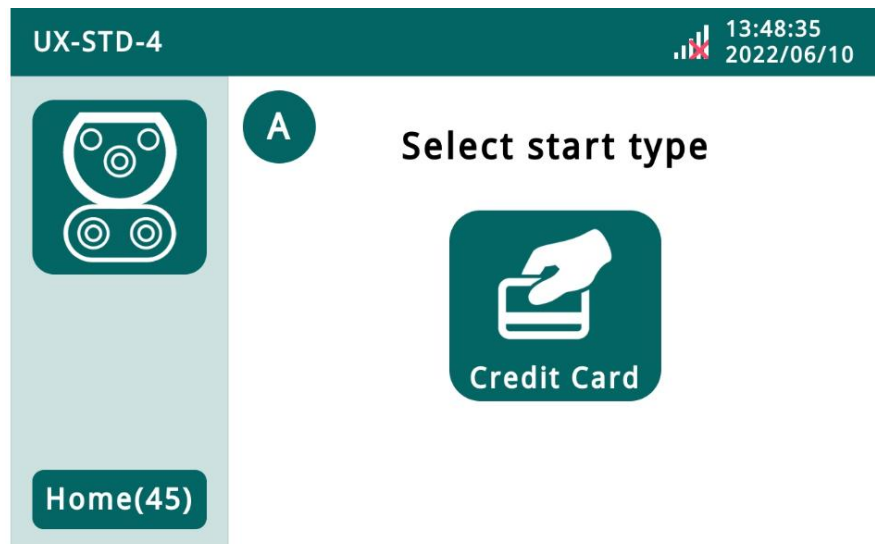

Note: This is the configuration for offline mode (when the charger is not connected to an OCPP platform). For other operating modes, please contact us for support.

If there are any issues or questions during the commissioning, please feel free to contact us:

Email: megan.lin@szwinline.com

Phone / WhatsApp / WeChat: +86 138 5005 1140