

# F2807x Firmware Development Package

## USER'S GUIDE



---

# Copyright

Copyright © 2026 Texas Instruments Incorporated. All rights reserved. Other names and brands may be claimed as the property of others.

 Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this document.

Texas Instruments  
13905 University Boulevard  
Sugar Land, TX 77479  
<http://www.ti.com/c2000>



## Revision Information

This is version 3.22.00.00 of this document, last updated on Tue May 19 23:53:48 IST 2026.

# Table of Contents

|                                                                     |           |
|---------------------------------------------------------------------|-----------|
| <b>Copyright</b>                                                    | <b>2</b>  |
| <b>Revision Information</b>                                         | <b>2</b>  |
| <b>1 Introduction</b>                                               | <b>9</b>  |
| 1.1 Detailed Revision History                                       | 9         |
| <b>2 Getting Started and Troubleshooting</b>                        | <b>17</b> |
| 2.1 Introduction                                                    | 17        |
| 2.2 Project Creation                                                | 17        |
| 2.3 Project: Adding Bit-field or DriverLib Support                  | 26        |
| 2.4 Troubleshooting                                                 | 26        |
| <b>3 Interrupt Service Routine Priorities</b>                       | <b>29</b> |
| 3.1 Interrupt Hardware Priority Overview                            | 29        |
| 3.2 PIE Interrupt Priorities                                        | 30        |
| 3.3 Software Prioritization of Interrupts                           | 31        |
| <b>4 CLA C Compiler</b>                                             | <b>35</b> |
| 4.1 Introduction                                                    | 35        |
| 4.2 Overview                                                        | 35        |
| 4.3 Framework                                                       | 43        |
| 4.4 Getting Started with the CLA Compiler                           | 44        |
| 4.5 Debugging                                                       | 48        |
| 4.6 Known Debugging Issues                                          | 49        |
| 4.7 Tips and Tricks                                                 | 49        |
| <b>5 CPU 1 Bit-field Example Applications</b>                       | <b>53</b> |
| 5.1 ADC PPB Delay Capture (adc_ppb_delay)                           | 53        |
| 5.2 ADC PPB Limits (adc_ppb_limits)                                 | 53        |
| 5.3 ADC PPB Offset (adc_ppb_offset)                                 | 53        |
| 5.4 ADC Continuous Triggering (adc_soc_continuous)                  | 54        |
| 5.5 ADC Continuous Conversions Read by DMA (adc_soc_continuous_dma) | 54        |
| 5.6 ADC ePWM Triggering (adc_soc_epwm)                              | 54        |
| 5.7 ADC temperature sensor conversion (adc_soc_epwm_tempsensor)     | 54        |
| 5.8 ADC SOC Software Force (adc_soc_software)                       | 55        |
| 5.9 ADC Synchronous SOC Software Force (adc_soc_software_sync)      | 55        |
| 5.10 Blinky                                                         | 55        |
| 5.11 Blinky with DCSM                                               | 55        |
| 5.12 Buffered DAC Enable (buffdac_enable)                           | 56        |
| 5.13 Buffered DAC Ramp (buffdac_ramp)                               | 56        |
| 5.14 Buffered DAC Random (buffdac_random)                           | 57        |
| 5.15 Buffered DAC Sine (buffdac_sine)                               | 57        |
| 5.16 Buffered DAC Sine DMA (buffdac_sine_dma)                       | 58        |
| 5.17 Buffered DAC Square (buffdac_square)                           | 59        |
| 5.18 CAN External Loopback Using Bitfields (can_loopback_bitfields) | 60        |
| 5.19 CLA 5 Tap Finite Impulse Response Filter (cla_adc_fir32_cpu01) | 60        |
| 5.20 CLA $\arcsine(x)$ using a lookup table (cla_asin_cpu01)        | 60        |
| 5.21 CLA $\arctangent(x)$ using a lookup table (cla_atan_cpu01)     | 61        |
| 5.22 CLA CRC8 Table-Lookup Algorithm (cla_crc8_cpu01)               | 62        |
| 5.23 CLA CRC8 Table-generation Algorithm (cla_crc8table1_cpu01)     | 62        |
| 5.24 CLA Determinant of 3X3 Matrix (cla_det_3by3_cpu01)             | 63        |
| 5.25 CLA Division: Newton Raphson Approximation (cla_divide_cpu01)  | 63        |

|      |                                                                        |    |
|------|------------------------------------------------------------------------|----|
| 5.26 | CLA $10^X$ using a lookup table (cla_exp2_cpu01)                       | 64 |
| 5.27 | CLA $e^{\frac{A}{B}}$ using a lookup table (cla_exp2_cpu01)            | 64 |
| 5.28 | CLA 5 Tap Finite Impulse Response Filter (cla_fir32_cpu01)             | 65 |
| 5.29 | CLA 2 Pole 2 Zero Infinite Impulse Response Filter (cla_iir2p2z_cpu01) | 65 |
| 5.30 | CLA Logic Test (cla_logic_cpu01)                                       | 66 |
| 5.31 | CLA Matrix Multiplication (cla_matrix_mpy_cpu01)                       | 66 |
| 5.32 | CLA Matrix Transpose (cla_matrix_transpose_cpu01)                      | 66 |
| 5.33 | CLA Mixed C and Assembly Code (cla_mixed_c_asm_cpu01)                  | 67 |
| 5.34 | CLA Primes (cla_prime_cpu01)                                           | 67 |
| 5.35 | CLA Shell Sort (cla_shellsort_cpu01)                                   | 68 |
| 5.36 | CLA Square Root (cla_sqrt_cpu01)                                       | 68 |
| 5.37 | CLA Vector Inverse (cla_inverse_cpu01)                                 | 69 |
| 5.38 | CLA Vector Maximum (cla_vmaxfloat_cpu01)                               | 69 |
| 5.39 | CLA Vector Minimum (cla_vminfloat_cpu01)                               | 70 |
| 5.40 | CMPSS Asynchronous Trip                                                | 71 |
| 5.41 | CMPSS Digital Filter                                                   | 71 |
| 5.42 | CPU Timers                                                             | 72 |
| 5.43 | SafeCopyCode Reset (dcsm_scc_reset_cpu01)                              | 72 |
| 5.44 | DMA GSRAM Transfer (dma_gsram_transfer)                                | 72 |
| 5.45 | ECAP APWM Example                                                      | 72 |
| 5.46 | ECAP Capture PWM Example                                               | 72 |
| 5.47 | ECAP Capture PWM XBAR Example                                          | 73 |
| 5.48 | EMIF ASYNC module (emif1_16bit_asram)                                  | 73 |
| 5.49 | EMIF1 SDRAM Module (emif1_16bit_sdram_dma)                             | 74 |
| 5.50 | EMIF1 SDRAM Module (emif1_16bit_sdram_far)                             | 74 |
| 5.51 | EMIF1 SDRAM Module (emif1_32bit_sdram)                                 | 74 |
| 5.52 | Empty Project                                                          | 75 |
| 5.53 | EPWM dead band control (epwm_deadband)                                 | 75 |
| 5.54 | EPWM Trip Zone Module (epwm_trip_zone)                                 | 75 |
| 5.55 | EPWM Action Qualifier (epwm_up_aq)                                     | 76 |
| 5.56 | EPWM Action Qualifier (epwm_updown_aq)                                 | 76 |
| 5.57 | Frequency measurement using EQEP peripheral (Eqep_freqcal)             | 76 |
| 5.58 | EQEP Speed and Position Measurement (Eqep_pos_speed)                   | 77 |
| 5.59 | External Interrupts (ExternalInterrupt)                                | 78 |
| 5.60 | External Interrupts Latency (ExternalInterruptLatency)                 | 79 |
| 5.61 | Flash Programming Solution SCI for F2807x                              | 79 |
| 5.62 | Flash Programming                                                      | 80 |
| 5.63 | Flash Programming with DCSM                                            | 80 |
| 5.64 | Device GPIO Setup (GpioSetup)                                          | 80 |
| 5.65 | GPIO toggle test program (GpioToggle)                                  | 80 |
| 5.66 | HRPWM Dead-Band Example (hrpwm_deadband_sfo_v8)                        | 80 |
| 5.67 | HRPWM SFO Test (hrpwm_duty_sfo_v8)                                     | 82 |
| 5.68 | HRPWM SFO Test (hrpwm_prdupdown_sfo_v8)                                | 82 |
| 5.69 | HRPWM Slider Test (hrpwm_slider)                                       | 83 |
| 5.70 | I2C EEPROM Example (i2c_eeprom)                                        | 84 |
| 5.71 | Low Power Modes: Halt Mode and Wakeup (lpm_haltwake)                   | 84 |
| 5.72 | Low Power Modes: HIB Mode and Wakeup (lpm_hibwake)                     | 84 |
| 5.73 | Low Power Modes: Device Idle Mode and Wakeup(lpm_idlewake)             | 85 |
| 5.74 | Low Power Modes: Device Standby Mode and Wakeup(lpm_standbywake)       | 85 |
| 5.75 | McBSP Loopback (mcbbsp_loopback)                                       | 86 |
| 5.76 | McBSP Loopback with DMA (mcbbsp_loopback_dma)                          | 86 |
| 5.77 | McBSP Loopback with Interrupts (mcbbsp_loopback_interrupts)            | 87 |

|          |                                                                 |           |
|----------|-----------------------------------------------------------------|-----------|
| 5.78     | McBSP Loopback using SPI mode (mcbbsp_spi_loopback)             | 87        |
| 5.79     | SCI Echoback (sci_echoback)                                     | 88        |
| 5.80     | SCI FIFO Digital Loop Back Test (sci_looback)                   | 89        |
| 5.81     | SCI Digital Loop Back with Interrupts (sci_loopback_interrupts) | 89        |
| 5.82     | SDFM Filter Sync CLA                                            | 90        |
| 5.83     | SDFM Filter Sync CPU                                            | 91        |
| 5.84     | SDFM Filter Sync DMA                                            | 92        |
| 5.85     | SDFM PWM Sync                                                   | 92        |
| 5.86     | SPI Digital Loop Back (spi_loopback)                            | 93        |
| 5.87     | SPI Digital Loop Back with DMA (spi_loopback_dma)               | 94        |
| 5.88     | SPI Digital Loop Back with Interrupts (spi_loopback_interrupts) | 94        |
| 5.89     | Software Prioritized Interrupts (sw_prioritized_interrupts)     | 95        |
| 5.90     | LED Blink Getting Started Program (timed_led_blink)             | 95        |
| 5.91     | Profiling $\sin(x)$ using the TMU (tmu_sinegen)                 | 96        |
| 5.92     | Watchdog                                                        | 96        |
| <b>6</b> | <b>CPU 1 Driver Library Example Applications</b>                | <b>97</b> |
| 6.1      | ADC PPB PWM trip (adc_ppb_pwm_trip)                             | 97        |
| 6.2      | ADC ePWM Triggering Multiple SOC                                | 98        |
| 6.3      | ADC Burst Mode                                                  | 98        |
| 6.4      | ADC Burst Mode Oversampling                                     | 98        |
| 6.5      | ADC SOC Oversampling                                            | 99        |
| 6.6      | ADC Software Triggering                                         | 99        |
| 6.7      | ADC ePWM Triggering                                             | 100       |
| 6.8      | ADC Temperature Sensor Conversion                               | 100       |
| 6.9      | ADC Synchronous SOC Software Force (adc_soc_software_sync)      | 100       |
| 6.10     | ADC Continuous Triggering (adc_soc_continuous)                  | 100       |
| 6.11     | ADC Continuous Conversions Read by DMA (adc_soc_continuous_dma) | 101       |
| 6.12     | ADC PPB Offset (adc_ppb_offset)                                 | 101       |
| 6.13     | ADC PPB Limits (adc_ppb_limits)                                 | 102       |
| 6.14     | ADC PPB Delay Capture (adc_ppb_delay)                           | 102       |
| 6.15     | CAN example that illustrates the usage of Mask registers        | 102       |
| 6.16     | CAN Error Generation Example                                    | 103       |
| 6.17     | CAN External Loopback                                           | 103       |
| 6.18     | CAN External Loopback with Interrupts                           | 104       |
| 6.19     | CAN-A to CAN-B External Transmit                                | 104       |
| 6.20     | CAN-A External Transmit                                         | 105       |
| 6.21     | CAN simple example that illustrates data reception              | 105       |
| 6.22     | CAN-A Remote-Frame Transmit                                     | 105       |
| 6.23     | CAN-A Remote-Frame Auto-answer                                  | 106       |
| 6.24     | CLA $\arcsine(x)$ using a lookup table (cla_asin_cpu01)         | 106       |
| 6.25     | CLA $\arctangent(x)$ using a lookup table (cla_atan_cpu01)      | 107       |
| 6.26     | Empty CLA Project Example                                       | 107       |
| 6.27     | CLB Timer Two States                                            | 107       |
| 6.28     | CLB Interrupt Tag                                               | 107       |
| 6.29     | CLB Output Intersect                                            | 107       |
| 6.30     | CLB PUSH PULL                                                   | 108       |
| 6.31     | CLB Multi Tile                                                  | 108       |
| 6.32     | CLB Tile to Tile Delay                                          | 108       |
| 6.33     | CLB based One-shot PWM                                          | 108       |
| 6.34     | CLB Combinational Logic                                         | 108       |
| 6.35     | CLB GPIO Input Filter                                           | 108       |
| 6.36     | CLB Auxilary PWM                                                | 108       |

|      |                                                                                                     |     |
|------|-----------------------------------------------------------------------------------------------------|-----|
| 6.37 | CLB PWM Protection                                                                                  | 109 |
| 6.38 | CLB Event Window                                                                                    | 109 |
| 6.39 | CLB Signal Generator                                                                                | 109 |
| 6.40 | CLB State Machine                                                                                   | 109 |
| 6.41 | CLB External Signal AND Gate                                                                        | 109 |
| 6.42 | CLB Timer                                                                                           | 109 |
| 6.43 | CLB Empty Project                                                                                   | 109 |
| 6.44 | CMPSS Asynchronous Trip                                                                             | 110 |
| 6.45 | CMPSS Digital Filter Configuration                                                                  | 110 |
| 6.46 | Buffered DAC Enable                                                                                 | 111 |
| 6.47 | Buffered DAC Random                                                                                 | 111 |
| 6.48 | DCSM Memory partitioning Example                                                                    | 111 |
| 6.49 | DMA GSRAM Transfer (dma_ex1_gsransfer)                                                              | 112 |
| 6.50 | eCAP APWM Example                                                                                   | 112 |
| 6.51 | eCAP Capture PWM Example                                                                            | 112 |
| 6.52 | EMIF1 ASYNC module accessing 16bit ASRAM.                                                           | 112 |
| 6.53 | EMIF1 module accessing 16bit ASRAM as code memory.                                                  | 113 |
| 6.54 | EMIF1 module accessing 16bit SDRAM using memcpy_fast_far().                                         | 113 |
| 6.55 | EMIF1 module accessing 16bit SDRAM then puts into Self Refresh mode before entering Low Power Mode. | 114 |
| 6.56 | EMIF1 module accessing 32bit SDRAM using DMA.                                                       | 114 |
| 6.57 | ePWM Chopper                                                                                        | 115 |
| 6.58 | EPWM Configure Signal                                                                               | 115 |
| 6.59 | Realization of Monoshot mode                                                                        | 116 |
| 6.60 | EPWM Action Qualifier (epwm_up_aq)                                                                  | 116 |
| 6.61 | ePWM Trip Zone                                                                                      | 116 |
| 6.62 | ePWM Up Down Count Action Qualifier                                                                 | 117 |
| 6.63 | ePWM Synchronization                                                                                | 117 |
| 6.64 | ePWM Digital Compare                                                                                | 118 |
| 6.65 | ePWM Digital Compare Event Filter Blanking Window                                                   | 118 |
| 6.66 | ePWM Valley Switching                                                                               | 119 |
| 6.67 | ePWM Digital Compare Edge Filter                                                                    | 119 |
| 6.68 | ePWM Deadband                                                                                       | 120 |
| 6.69 | ePWM DMA                                                                                            | 120 |
| 6.70 | Frequency Measurement Using eQEP                                                                    | 121 |
| 6.71 | Position and Speed Measurement Using eQEP                                                           | 122 |
| 6.72 | Device GPIO Setup                                                                                   | 123 |
| 6.73 | Device GPIO Toggle                                                                                  | 123 |
| 6.74 | Device GPIO Interrupt                                                                               | 123 |
| 6.75 | HRPWM Duty Control with SFO                                                                         | 123 |
| 6.76 | HRPWM Slider                                                                                        | 124 |
| 6.77 | HRPWM Period Control                                                                                | 124 |
| 6.78 | HRPWM Duty Control with UPDOWN Mode                                                                 | 124 |
| 6.79 | HRPWM Duty Control with AHC Deadband                                                                | 125 |
| 6.80 | I2C Digital Loopback with FIFO Interrupts                                                           | 126 |
| 6.81 | I2C EEPROM                                                                                          | 126 |
| 6.82 | I2C Digital External Loopback with FIFO Interrupts                                                  | 127 |
| 6.83 | I2C EEPROM                                                                                          | 127 |
| 6.84 | I2C master slave communication using FIFO interrupts                                                | 127 |
| 6.85 | I2C EEPROM                                                                                          | 128 |
| 6.86 | External Interrupts (ExternalInterrupt)                                                             | 128 |
| 6.87 | Multiple interrupt handling of I2C, SCI & SPI Digital Loopback                                      | 129 |

|                                                                                 |            |
|---------------------------------------------------------------------------------|------------|
| 6.88 CPU Timer Interrupt Software Prioritization . . . . .                      | 130        |
| 6.89 LED Blinky Example . . . . .                                               | 130        |
| 6.90 Low Power Modes: Halt Mode and Wakeup . . . . .                            | 131        |
| 6.91 Low Power Modes: Device Idle Mode and Wakeup . . . . .                     | 131        |
| 6.92 Low Power Modes: Device Standby Mode and Wakeup . . . . .                  | 132        |
| 6.93 McBSP loopback example . . . . .                                           | 132        |
| 6.94 McBSP loopback with DMA example. . . . .                                   | 133        |
| 6.95 McBSP loopback with interrupts example . . . . .                           | 133        |
| 6.96 McBSP loopback example using SPI mode . . . . .                            | 134        |
| 6.97 McBSP external loopback example . . . . .                                  | 134        |
| 6.98 McBSP external loopback example using SPI mode . . . . .                   | 135        |
| 6.99 Tune Baud Rate via UART Example . . . . .                                  | 136        |
| 6.100SCI FIFO Digital Loop Back . . . . .                                       | 137        |
| 6.101SCI Digital Loop Back with Interrupts . . . . .                            | 137        |
| 6.102SCI Echoback . . . . .                                                     | 137        |
| 6.103SDFM Filter Sync CPU . . . . .                                             | 138        |
| 6.104SDFM Filter Sync CPU . . . . .                                             | 139        |
| 6.105SPI Digital Loopback . . . . .                                             | 139        |
| 6.106SPI Digital Loopback with FIFO Interrupts . . . . .                        | 140        |
| 6.107SPI Digital External Loopback with FIFO Interrupts . . . . .               | 140        |
| 6.108SPI Digital Loopback with DMA . . . . .                                    | 141        |
| 6.109Missing clock detection (MCD) . . . . .                                    | 141        |
| 6.110CPU Timers . . . . .                                                       | 142        |
| 6.111USB HUB Host example . . . . .                                             | 142        |
| 6.112USB CDC serial example . . . . .                                           | 142        |
| 6.113USB HID Mouse Device . . . . .                                             | 143        |
| 6.114USB Device Keyboard . . . . .                                              | 143        |
| 6.115USB Generic Bulk Device . . . . .                                          | 143        |
| 6.116USB HID Mouse Host . . . . .                                               | 144        |
| 6.117USB HID Keyboard Host . . . . .                                            | 144        |
| 6.118USB Mass Storage Class Host . . . . .                                      | 144        |
| 6.119USB Dual Detect . . . . .                                                  | 145        |
| 6.120USB Throughput Bulk Device Example (usb_ex9_throughput_dev_bulk) . . . . . | 145        |
| 6.121Watchdog . . . . .                                                         | 145        |
| <b>7 Device APIs for examples . . . . .</b>                                     | <b>147</b> |
| 7.1 Introduction . . . . .                                                      | 147        |
| 7.2 API Functions . . . . .                                                     | 147        |
| <b>IMPORTANT NOTICE . . . . .</b>                                               | <b>150</b> |





# 1 Introduction

The Texas Instruments® F2807x Firmware development library is a group of example applications and helper libraries that demonstrate the basics of getting started with a F2807x device.

**The following chapter (chapter 2) provides a step by step guide for from scratch project creation as well as debug. It is highly recommended that users new to the F2807x family of devices start by reading this section first.**

The F2807x devices have a set of example applications that users can load and run on their device.

- The bit-field example applications can be found in the `~/device_support/f2807x/examples/cpul` directory.
- The driver library example applications can be found in the `~/driverlib/f2807x/examples/cpul` directory.

As users move past evaluation, and get started developing their own application, TI recommends they maintain a similar project directory structure to that used in the example projects. Example projects have a heirarchy as follows:

- Main project directory
  - Project folder
    - \* Project sources (\*.c, \*.h)
    - \* CCS folder (ccs)
      - CCS project specific files

## 1.1 Detailed Revision History

### V3.12.00.00

- Updated Driver Library to v3.04.00.00
- Added new examples - I2C,ADC examples
- Added Flash linker command file with CRC
- 

### V3.11.00.00

- Updated Driver Library to v3.03.00.00
- Added projectspec for driverlib.
- Updated compiler version to 20.2.1.LTS for all driverlib examples
- Added Sysconfig pinmux support to all examples
- Added EPWM Example to demonstrate configure signal-epwm\_ex11\_configure\_signal
- Added CAN Example- can\_ex11\_error\_generation
- Added Example for Baud Tune via SCI- baud\_tune\_via\_uart

### V3.10.00.00

- Updated driverlib examples for GPIO, SPI, I2C, SCI to use sysconfig

### **V3.09.00.00**

- Updated Driver Library to v3.01.00.00
- New driverlib examples: Added pinumx examples with sysconfig support, DCSM tool example, interrupt-nesting example

### **V3.07.00.00**

- Updated Driver Library to v2.00.00.03
- Several bug fixes in driverlib examples - details in release notes
- New driverlib examples: CLB and USB examples
- Updating default option of driverlib examples to EABI
- Removal of USB bitfield examples

### **V3.05.00.00**

- Updated Driver Library to v1.04.00.00
- Release-build configuration of driverlib now built and included within /driverlib
- adc\_ex1\_soc\_software, adc\_ex2\_soc\_epwm (driverlib examples) - Macro fixes related to setting resolution
- can\_loopback\_bitfields (bit-field example) - Corrected to only do 32-bit writes to IFxCMD
- can\_external\_transmit (bit-field example) - Corrected comments
- Flash CLA Linker - Corrected so that load and run are on the same memory page
- F2807x\_I2c\_defines.h - Fixed max buffer size to be 16
- Moved usb.c/h and usb\_hal.c/h from the /deprecated folder to /common/source

### **V3.04.00.00**

- New buffdac\_sine\_dma bit-field example
- New empty\_project bit-field example
- adc\_ex2\_soc\_epwm.c (driverlib example) - Corrected issue where enumerations were redefined as macros
- gpio\_setup (bit-field example) - Switched input Xbar (INPUT8SELECT) to use ECAP2 on GPIO24
- adc\_soc\_continuous (bit-field example) - Corrected missing write to ADCSOC8CTL
- hrpwm\_duty\_sfo\_v8 (bit-field example) - Corrected commented code regarding when auto-conversion is enabled
- F2807x\_Adc.c - Added comment for AdcSetMode() that EALLOW/EDIS must be performed before calling the function
- F2807x\_Adc.c - Updated to support when using with combined bit-field and driverlib support (\_DUAL\_HEADERS predefine)
- i2c\_eeprom (bit-field example) - Corrected I2C module clock prescaler to get between 7-12MHz
- Corrected details, formatting, and instructions in the firmware development document

### **V3.03.00.00**

- **IMPORTANT:** Removed DCSM Z1/Z2 OTP structs (f28x7x\_dcsm.h) and memory sections in header linker command files
- Updated Driver Library to v1.03.00.00
- CAN Loopback Interrupts, External Transmit - Updated for interrupt numbering changes (1 and 2 to 0 and 1)
- f28x7x\_adc.h - Various comment clarifications
- f28x7x\_epwm.h - Marked self clear translator as reserved, added structs for valley and edge modes
- f28x7x\_flash.h - Marked illegal address detected as reserved in struct
- f28x7x\_output\_xbar.h - Comment numbering correction
- f28x7x\_xbar.h - Corrected INPUT7 naming to INPUT6
- f28x7x\_sysctrl.c - Corrected InitSysPll timer overflow check to use CPU timer 1
- f28x7x\_sysctrl.c, device.c - Added memcpy namespace for when building for C++
- f28x7x\_GlobalPrototypes.h - Added missing prototypes for GPIO\_SetupXINT4Gpio() and GPIO\_SetupXINT5Gpio()
- f28x7x\_input\_xbar.h - Comment numbering correction
- f28x7x\_adc.h - Resolution and signal mode set to reserved. Various comment clarifications.
- f28x7x\_adc.c - Removed setting ADC resolution and signal mode in ADC control register
- Corrected system clock timing in CAN example configurations

### **V3.02.00.00**

- **IMPORTANT:** F2807x\_SysCtrl.c - InitSysPll() and InitAuxPll() enhanced with slip bit monitor and SYSCLK frequency check
- **IMPORTANT:** When combining bitfield and driverlib support files, add a pre-defined symbol within the project properties called "\_DUAL\_HEADERS"
- Updated Driver Library to v1.02.00.00
- All driverlib examples now include F2807x\_CodeStartBranch.asm to properly run from flash
- Removed RAM build configurations from LPM hibernate wake bitfield examples
- Driverlib cmpss\_ex1\_asynch and bitfield cmpss\_asynch example comments corrected
- Driverlib timer\_ex1\_cputimer example - Fixed configuration of LED GPIO
- New driverlib example - SPI and FSI Full Duplex Communication (spi\_ex4\_spifsi\_full\_duplex)
- New driverlib example - ADC temperature sensor conversion (adc\_ex3\_temp\_sensor)
- New bitfield example - Empty combined bitfield and driverlib usage example (empty\_bitfield\_driverlib)
- New bitfield examples - EMIF daughtercard CLA, CPU, DMA, Flash, and Pages examples
- can\_ex3\_external\_transmit.c - Updated description that example requires custom board with two CAN transceivers
- Driverlib usb.c/h removed. Use USB library under the libraries directory
- Bitfield CAN loopback example - Fixed configuration of standard message ID
- Bitfield CLA ADC FIR32 example - Fixed CLA Task 7
- F2807x\_Gpio.c - Renamed various function parameters
- Product page links now included in documentation directory

- Re-added F2807x\_sci\_flash\_kernel bitfield example

### **V3.01.00.00**

- IMPORTANT: F2807x\_sdfm.h - Renamed bit field "FILRESEN" to "SDSYNCEN" and renamed registers "SDIPARMx" to "SDDPARMx"
- IMPORTANT: Global boot variables EmuKey and EmuBMode corrected and replaced with EmuBmode and EmuBootPins variables
- Updated Driver Library to v1.01.00.00
- EPWM Trip Zone Example - Corrected with necessary EALLOW and EDIS
- F2807x\_sdfm\_drivers.h - Corrected SDFM macros to be volatile
- F2807x\_usDelay.asm - Added ramfunc check logic to handle older compilers
- ADC Software and ADC Software Sync Examples - Updated examples to use different ADC channels
- Flash API error check and messages updated
- device.h - Corrected LSPCLK comments
- F2807x\_sysctrl.h - Added DC6 register to header
- F2807x\_can.h - Removed PDR and WUBA fields. Removed CAN\_REL register. Updated comments.
- GPIO Setup Example - Corrected GPIO33 to GPIO32 for SDAA async input
- ECAP Capture PWM Example - Corrected comment
- Updated SW Prioritized Interrupts example with dedicated Pie Vect source file (F2807x\_SWPrioritizedPieVect.c)
- Added driverlib SPI external loopback with FIFO interrupts example
- Added ADC SOC continuous example with DMA usage
- Added ECAP Capture PWM XBAR example

### **V3.00.00.00**

- F2807x Package updated and enhanced for C2000Ware. New driverlib and examples added.
- IMPORTANT: SysCtrl functions switching to INTOSC1 or INTOSC2 now turn off XTAL
- Deprecated F2807x\_common/driverlib. Use the new driverlib within the C2000Ware /driverlib root folder.
- Firmware User Guide - Added section on adding bit field and driverlib support to a project
- F2807x\_can.h - Switched byte peripheral arrays to regular uint32\_t arrays to fix build issues
- FATFS mmc\_F2837x.c - Fixed xmit\_datablock()
- Updated all examples and removed deprecated compiler options
- F2807x\_GlobalPrototypes.h - Externed EmuKey and EmuBMode
- Fixed ADC SOC Continuous example and added missing EALLOWs
- F2807x\_device.h - Updated to avoid CLA and byte peripheral attribute conflicts
- CAN Examples - Corrected to handle data incrementation and rollover
- SD Card Example - Updated for better Launchpad compatibility
- Added bit field HRPWM Deadband SFO v8 example
- Removed unneeded CPU2 macro defines in F2807x\_Gpio.c

- Corrected F2807x\_Epwm.c GPIO init functions
- Various correction of dashes replaced with underscores
- Refined development user guide description of examples included
- New CCS example importing and building quickstart guide

## **V2.10**

- IMPORTANT: For compiler versions 15.9.0 and newer, linker command files use section .TI.ramfunc instead of ramfuncs
- IMPORTANT: F2807x\_CodeStartBranch.asm - Watchdog is now enabled by default
- Header files updates: F2807x\_flash.h, F2807x\_dcsn.h, F2807x\_emif.h, F2807x\_epwm.h
- sysctl.c - Fixed SysCtlClockGet function use of IMULT to FMULT
- Updated Bitfield SCI flash kernel example with Checksum
- All Bitfield examples updated to use compiler v15.12.1.LTS
- Removed BIST linker files
- F2807x\_device.h - Changed BIT0-BIT31 defines to C28X\_BIT0-C28X\_BIT31
- SetDBGIER extern prototype added to F2807x\_GlobalPrototype.h
- SPI examples updated to use common InitSpi()
- Added CAN bitfield header support
- Added CAN loopback example using bitfields
- Corrected logical OR to AND in F2807x\_Emif.c
- Corrected oscillator XTAL and OSC1 define values in sysctl.h

## **V2.00**

- IMPORTANT: InitSysPll and InitAuxPll functions updated for errata fix in F2807x\_SysCtrl.c
- Header files updates: F2807x\_cla.h, F2807x\_piectrl.h, F2807x\_sysctrl.h
- Added External Interrupt Latency Example
- Comment clarifications in DMA GSRAM Transfer example
- Comment clarifications in CMPSS Asynch example
- Cleaned up formatting and whitespace in linker command files
- Source, Header, and Example file whitespace cleanup and update to new comment structure
- Fixed comment in Blinky with DCSM example Z1 and Z2 Zone Select Block files
- F2807x\_TempSensorConv.c - Updated global variables to be float32 types to handle negative values
- Flash Programming examples updated - ECC no longer disabled before initialization
- Flash API User Defined Functions for all flash examples updated to be placed in ramfuncs memory section
- Added build guards in F2807x\_SysCtrl.c for C++ support
- Fixed Compiler Version guard in linker command files for ramfunc section
- F2807x\_EPwm\_defines.h - Fixed incorrect defines

## **V1.90**

- F2807x\_Gpio.c - Comment correction

- can.c - Fixed case statement
- Assigned buffer to RAM section in flash programming examples
- Fixed ePWM setup in eQEP examples
- F2807x\_CpuTimer.c - Fixed period in ConfigCpuTimer function
- Updated missing fields in DCCAPCTL register in ePWM header file
- Updated DCSM SCC Reset example to allow CPU Timer selection
- Updates to blinky DCSM example
- General fixes to USB library
- USB Dev Mouse example fixes

#### **V1.80**

- SDFM Header - MS bit marked as reserved
- EPWM Header - DBRED and DBFED bit fields updated as union and struct. Must be accessed now using .bit or .all
- Flash Header - FBAC.BAGP marked as reserved and FPAC2 register is removed.
- I2C Header - Added I2CISRC.WRITE\_ZEROS bit field
- XBAR Header - Renamed ADCSOCA to ADCSOCOA and ADCSOCB to ADCSOCBO
- Added new example - DMA GSRAM Transfer
- Corrected issue with Blinky DCSM example
- Corrected LPM examples regarding watchdog and flash power down
- sysctl.c - Corrected SysCtlAuxClockSet driver function race condition for 120MHz SysClk

#### **V1.70**

- Fixed flash\_programming example to assign Example\_CallFlashAPI() to RAM section
- Memory Configuration header - Renamed ROM Prefetch register bit field PFDISABLE to PFENABLE
- DMA header - Removed bit fields SYNCE and SYNCSEL from DMA channel Mode register
- DMA header - Removed bit fields SYNCFRC and SYNCCLR from DMA channel Control register
- SCI header - Corrected spelling of SCI FIFO transmit register bit field from TXFIFOXRESET to TXFIFORESET
- SPI header - Removed PRIORITY bit field from SPI priority control register (SPIPRI)
- F2807x\_defaultisr.h is no longer included in F2807x\_device.h
- Corrected PLLCLK\_BY\_80 value in F2807x\_Examples.h
- DCSM header - Changed GRAB\_BANK2 to GRAB\_BANK1, EXEONLY\_BANK2 to EXEONLY\_BANK1, and STATUS\_BANK2 to STATUS\_BANK1
- Added CAN Message RAM section to linker command files
- Flash header - Removed FSPRD register
- Updated linker command files to support ramfunc attribute
- Updated CAN (CANA, CANB) interrupt line and ISR references from 1 and 2 to 0 and 1
- Added new BUFFDAC examples: buffdac\_ramp, buffdac\_random, buffdac\_sine, and buffdac\_square

- Added new ADC SOC EPWM temperature sensor example (adc\_soc\_epwm\_tempsensor)
- Updated example description for adc\_soc\_software
- Added new ADC synchronous software triggering example (adc\_soc\_software\_sync)
- X-Bar header - Renamed TrigRegs to SyncSocRegs and moved to the SysCtrl header
- X-Bar header - EXTADCSOCSELECT register renamed to ADCSOCOUTSELECT and SYNC-SOCLOCK.EXTADCSOCSELECT field renamed to SYNCLOCK.ADCSOCOUTSELECT
- SysCtrl header - Added SyncSocRegs and removed incorrect DCx and SOFTPRESx registers
- Added SafeCopyCode Reset example (dcsn\_scc\_reset)
- SDFM header - Removed SDSTATUS register and removed SDCTLPARM1.MS bit field
- F2807x\_Examples.h - Changed FMULT\_1 to FMULT\_0

### **V1.60**

- Aligned sysctl.c SysCtlClockSet() with correct clock initialization flow
- Removed F2807x\_hwbistcontext.asm
- Updated F2807x\_epwm.h with HRPCTL PWMSYNCSSEL bit
- Changed HWBIST bits to reserved in f28x7\_nmiinterrupt.h and F2807x\_sysctrl.h
- Updated InitAuxPll() in F2807x\_SysCtrl.c with correct initialization flow
- Updated InitSysPll() in F2807x\_SysCtrl.c to set multipliers in a single 32-bit write
- Fixed GPIO setup options in all SCI examples
- Fixed CAN drivers to avoid issues with 32-bit reads/writes while using optimization
- Fixed adc\_soc\_epwm example and added volatile to bufferFull variable
- Added power consumption note regarding InitPeripheralClocks() in F2807x\_SysCtrl.c
- Fixed uart.c driver issue regarding non-volatile loop conditions
- Added target configuration file to all examples
- usb.c - Updated USBIntStatus to work around USB stalling due to edge triggering issue
- Updated USBIntHandlerInternals to accept USBTXIS/USBRXIS status argument to ensure the status is handled correctly.
- Fixed offsets in USBHSCSIWrite10() of usbhscsi.c to prevent writing of incorrect commands
- Removed OTG mode section from the USB Library User Guide
- Fixed UARTprintf function in uartstdio.c to support long format

### **V1.50**

- Added Flash Programming Example for Bank0
- Added EMIF 16bit SDRAM DMA example
- Added EMIF 16bit SDRAM Far memcpy example
- Added hibernate wake-up example
- Added F2807x Peripheral Driver Library User Guide
- F2807x\_cla.h - Reserved space added between MAR1 and MSTF
- F2807x\_cla.h - Added a union called MR\_REG made up of an Uint32 and a float
- F2807x\_epwm.h - Added HRCNFG2 register
- F2807x\_epwm.h - Changed TZOSTFLG.DCxEVT2 bits to TZOSTFLG.DCxEVT1

- F2807x\_epwm.h - Changed TZOSTCLR.DCx EVT2 bits to TZOSTCLR.DCx EVT1
- F2807x\_spi.h - Added HS\_MODE bit
- Updated hrpwm\_prdupdown\_sfo\_v8 example so that PHSEN is disabled
- Cleaned up example source and header code comments
- Cleaned up example CCS warnings
- Fixed error in mmc-F2837x.c for FATFS
- Corrected CAN Loopback interrupts example source name
- Updated CLA C compiler section in F2807x User Guide
- Updates to F2807x SCI Flash Kernel example
- Renamed DCAN references to CAN
- Updated IPC ISR comments to reflect correct interrupt numbers

#### **V1.40**

- Updated SysCtrl to use XTSL\_OSC instead of INT\_OSC2
- Updated SCI Echo Example with correct baud rate
- sci\_echoback example description updated
- Updated F2807x\_Cla\_typedefs.h to include additional typedef guards
- Updated F2807x\_device.h typedefs guards
- Updated CLA linker command files for C2000 compiler 6.4.x support
- Fixed case mismatches in various example include files
- Removed PBIST and HWBIST header files
- Updated CLA examples and removed 3 NOPs before writing to the MCTL register
- Removed CAN sections from linker header files
- Updated F2807x PieVect.c file
- Updated Flash linker command files to align on 64-bit boundary
- Cleaned up F2807x CPU1 Examples CCS warnings
- F2807x\_PieVect.c - Fixed comment for IPC interrupt
- Updated mcbasp\_loopback\_dma example to initialize PIE correctly
- Changed .Mux to .MUX in F2807x\_epwm\_xbar.h and F2807x\_output\_xbar.h
- Fixed build error in SDFM Filter Sync CLA example
- Updated EPwm.h - TRIPINPUT13 in DC submodule reserved
- Added lpm\_haltwake example
- Updated EPWM X-Bar TRIPINV misnamed fields
- Updated DCSM reserved fields in header structs to correct word size
- Added Cla1SoftIntRegs to CLA Header file
- Cleaned up code and comments in F2807x\_device.h
- Added EMIF1 examples and associated source/header files
- F2807x\_Dcan\_defines.h renamed to F2807x\_Can\_defines.h

#### **V1.30**

- This version is the first release (packaged with development tools and customer trainings) of the F2807x header files and examples.



## 2 Getting Started and Troubleshooting

|                                                      |    |
|------------------------------------------------------|----|
| Project Creation .....                               | 17 |
| Project: Adding Bit-field or DriverLib Support ..... | 26 |
| Troubleshooting .....                                | 26 |

### 2.1 Introduction

Because of the sheer complexity of the F2807x devices, it is not uncommon for new users to have trouble bringing up the device their first time. This guide aims to give you, the user, a step by step guide for how to create and debug projects from scratch. This guide will focus on the user of a F2807x controlCARD, but these same ideas should apply to other boards with minimal translation.

### 2.2 Project Creation

A typical F2807x application consists of setting up a CCS project, which involves configuring the build settings, file linking, and adding in any source code.

## CCS Project Creation

1. From the main CCS window select File -> New -> CCS Project. Select your Target as "Generic C28xx Device". Name your project and choose a location for it to reside. Click Finish and your project will be created.

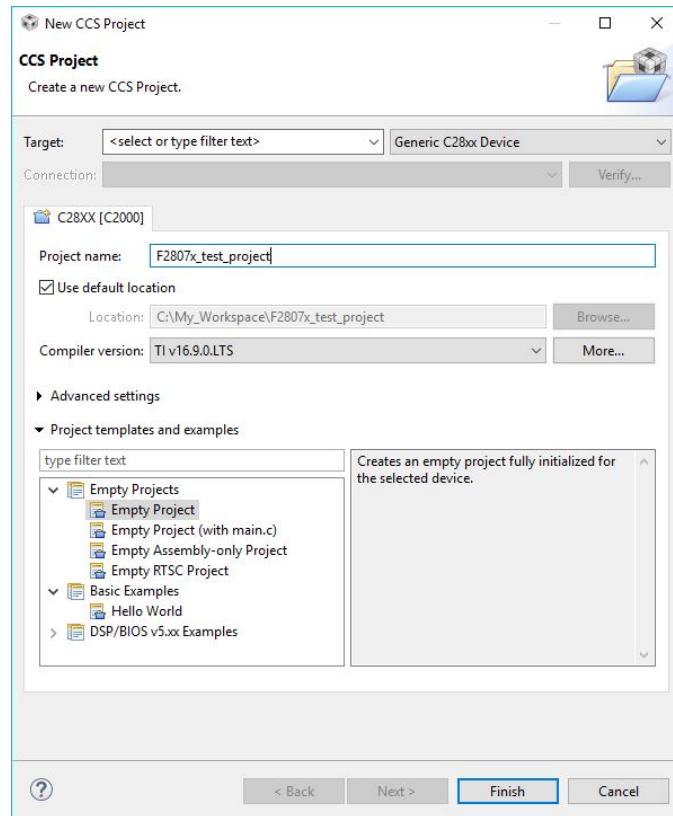


Figure 2.1: Creating a new C28 project

2. Before we can successfully build a project we need to setup some build specific settings. Right click on your project and select Properties. Look at the Processor Options and ensure they match the below image:

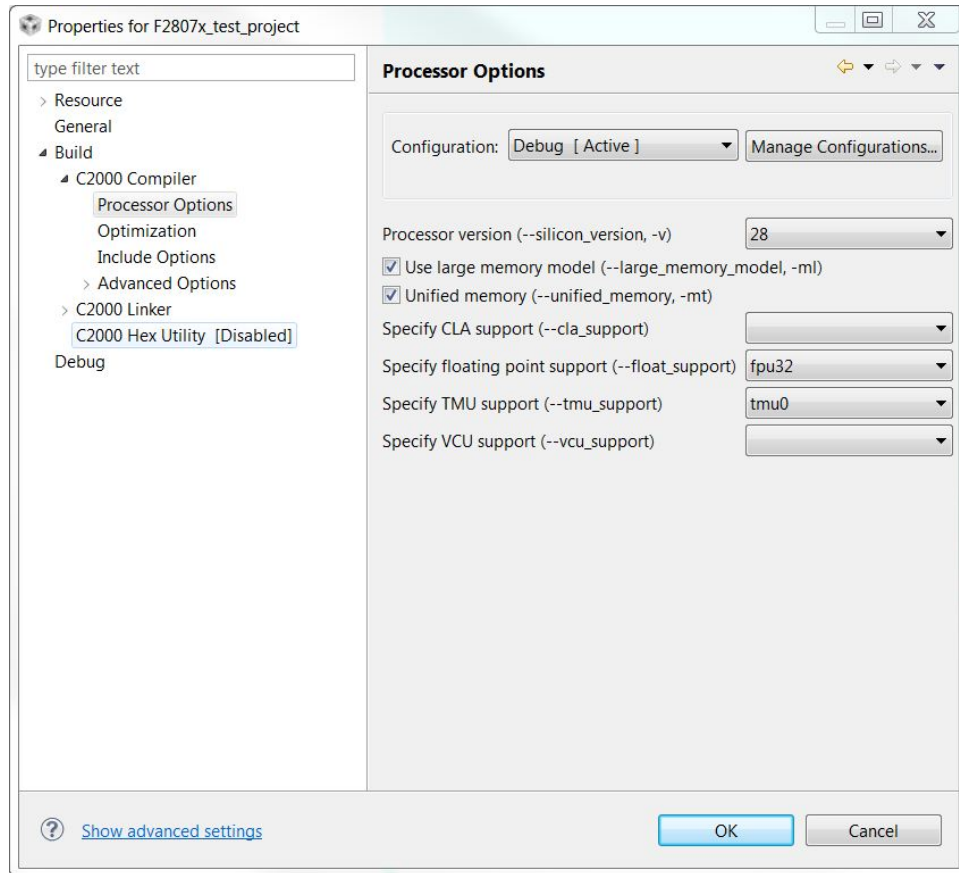


Figure 2.2: Project configuration dialog box

3. In the C2000 Compiler entry look for and select the Include Options. Click on the add directory icon to add a directory to the search path. Click the File System button to browse to the `common\include` folder of your C2000Ware installation (typically `C:\ti\c2000\C2000Ware_X_XX_XX_XX\device_support\f2807x\common\include`). Replace the 'X's with your current C2000Ware version installation. Click ok to add this path, and repeat this same process to add the `headers\include` directory.

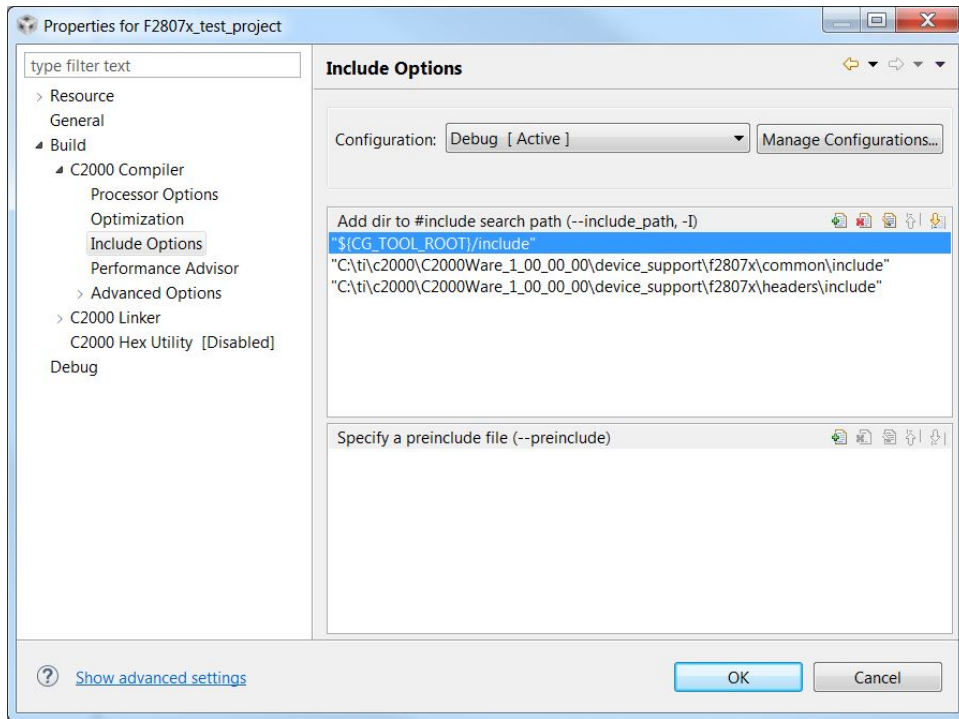


Figure 2.3: Project configuration dialog box

4. Expand the Advanced Options and look for the Predefined Symbol entry. Add a Pre-define NAME called "CPU1". This ensures that the header files build correct for this CPU.

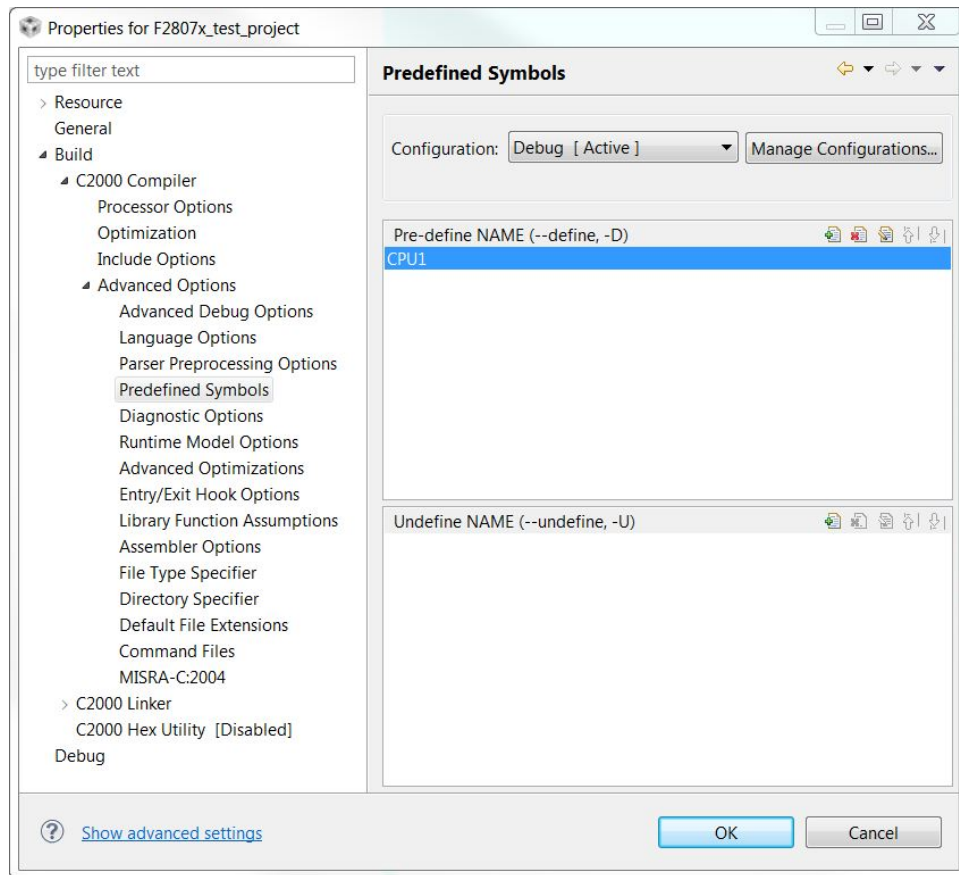


Figure 2.4: Project configuration dialog box

5. Click on the Linker File Search Path. Add these directories to the search path: `common\cmd` and `headers\cmd`. Then you'll also want to add the following files: `rts2800_fpu32.lib`, `2807x_Generic_RAM_lnk.cmd`, and `F2807x-Headers_nonBIOS.cmd`. Finally, delete `libc.a`, we will use `rts2800_fpu32.lib` as our run time support library instead.

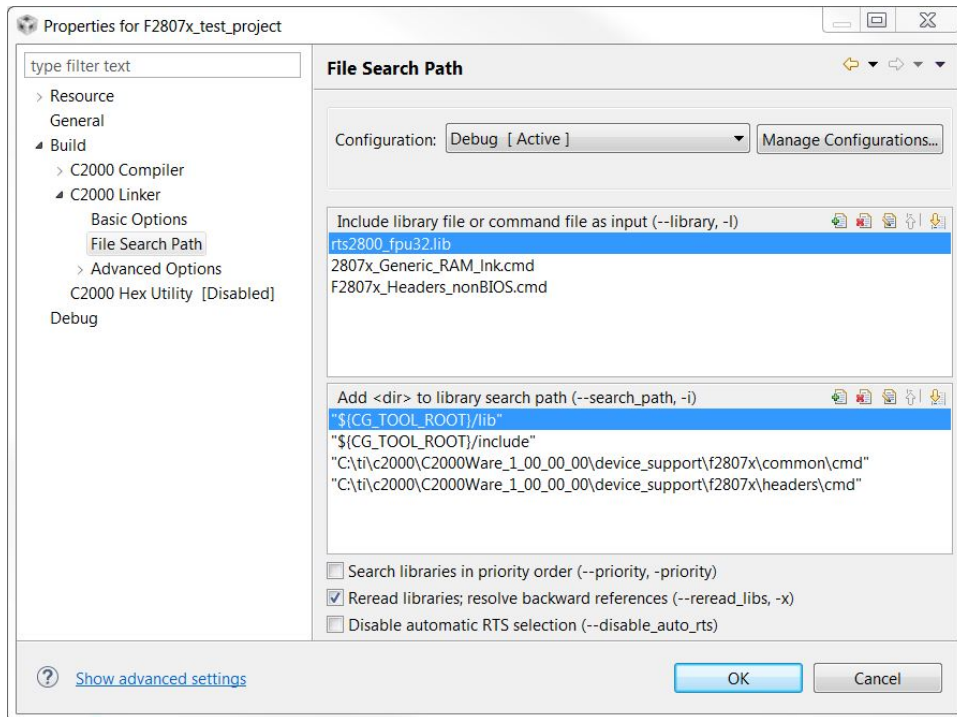


Figure 2.5: Project configuration dialog box

6. While you have this window open select the Symbol Management options under C2000 Linker Advanced Options. Specify the program entry point to be `code_start`. Select ok to close out of the Build Properties.

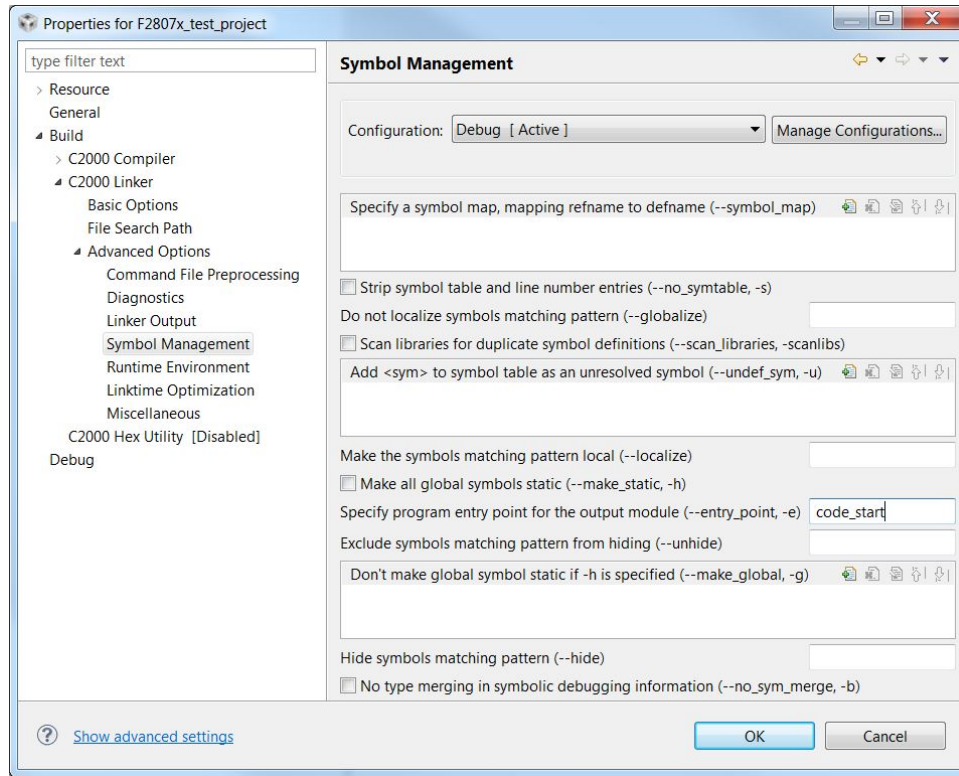


Figure 2.6: Include path setup

7. In the project explorer, check that no linker command file got added during project setup. If so, remove the linker command file that got added.
8. Next we need to link in a few files which are used by the header files. To do this right click on your project in the workspace and select Add Files... Navigate to the `headers\source` directory, and select `F2807x_GlobalVariableDefs.c`. After you select the file you'll have the option to copy the file into the project or link it. We recommend you link files like this to the project as you will probably not modify these files. Link in the following files as well:

- `common\source\F2807x_CodeStartBranch.asm`
- `common\source\F2807x_usDelay.asm`
- `common\source\F2807x_SysCtrl.c`
- `common\source\F2807x_Gpio.c`

The codestart section in the linker cmd file is used to physically place this code at the correct memory location. This section should be placed at the location the BOOT ROM will re-direct the code to. For example, for boot to FLASH this code will be located at 0x3f7ff6.

In addition, the example projects are setup such that the codegen entry point is also set to the `code_start` label. This is done by linker option `-e` in the project build options. When the debugger loads the code, it will automatically set the PC to the "entry point" address indicated by the `-e` linker option. In this case the debugger is simply assigning the PC, it is not the same as a full reset of the device.

The compiler may warn that the entry point for the project is other than `_c_init00`. `_c_init00` is the C environment setup and is run before `main()` is entered. The `code_start` code will redirect the execution to `_c_init00` and thus there is no worry and this warning can be ignored. Code for redirecting code execution after boot is added to `F2807x_codestartbranch.asm` file and hence this file needs to be linked to the CCS project.

At this point your project workspace should look like the following:

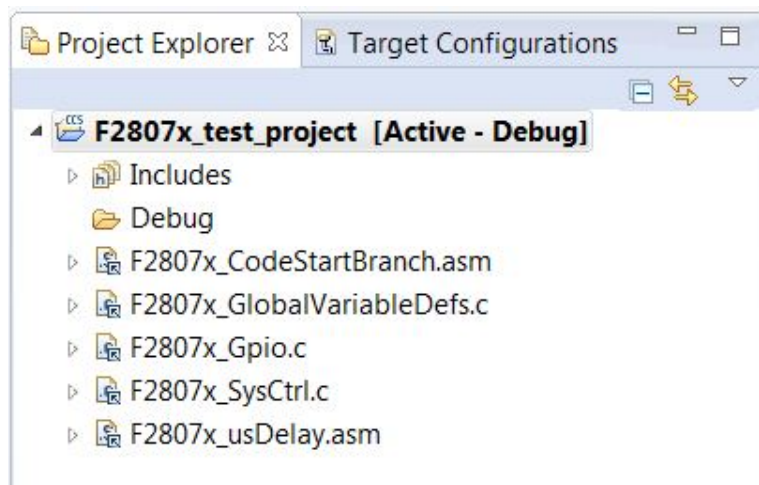


Figure 2.7: Linking files to project



9. Create a new file by right clicking on the project and selecting New -> File. Name this file main.c and copy the following code into it:

```
#include "F28x_Project.h"

void main(void)
{
    uint32_t delay;

    InitSysCtrl();

    // Set pin direction
    EALLOW;
    GpioCtrlRegs.GPDIR.bit.GPIO10 = 1;
    EDIS;

    GPIO_SetupPinOptions(14, GPIO_OUTPUT, GPIO_PUSHPULL);
    GPIO_SetupPinMux(14, GPIO_MUX_CPU1, 0);

    // turn off LED
    GpioDataRegs.GPADAT.bit.GPIO10 = 1;

    while(1)
    {
        // Turn on LED
        GpioDataRegs.GPADAT.bit.GPIO10 = 0;

        // Delay for a bit.
        for(delay = 0; delay < 2000000; delay++)
        {
        }

        // Turn off LED
        GpioDataRegs.GPADAT.bit.GPIO10 = 1;

        // Delay for a bit.
        for(delay = 0; delay < 2000000; delay++)
        {
        }
    }
}
```

10. Save main.c and then attempt to build the project by right click on it and selecting Build Project. Assuming the project builds try debugging this project on a F2807x device. When the code runs you should see GPIO 10 toggle.

## 2.3 Project: Adding Bit-field or DriverLib Support

F2807x devices support two types of development software, driver library APIs and bit-field structures. Each have their advantages and are implemented to be compatible together within the same user application. This section details how to add driverlib support to a bit-field project as well as how to add bit-field support to a driverlib project.

When combining bit-field and driverlib support, add a pre-defined symbol within the project properties called `"_DUAL_HEADERS"`. This is required to avoid having conflicting definitions (in enums/structs/macros) which share the exact same names in both bit-field and driverlib headers.

### Adding DriverLib Support

1. Add the following include directory path to the project:  
`driverlib\f2807x\driverlib`
2. Include the following header file in the project main source file:  
`device_support\f2807x\common\include\driverlib.h`
3. Add or link the `driverlib.lib` library to the project. Location of file:  
`driverlib\f2807x\driverlib\ccs\Debug`

### Adding Bit-field Support

1. Add the following include directory path to the project:  
`device_support\f2807x\headers\include`
2. Include the following header file in the project main source file:  
`device_support\f2807x\headers\include\f28x7x_device.h`
3. Add or link the `F2807x_GlobalVariableDefs.c` file to the project. Location of file:  
`device_support\f2807x\headers\source`
4. Add or link the `F2807x_Headers_nonBIOS.cmd` file to the project. Location of file:  
`device_support\f2807x\headers\cmd`

## 2.4 Troubleshooting

There are a number of things that can cause the user trouble while bringing up a debug session the first time. This section will try to provide solutions to the most common problems encountered with the Delfino devices.

### "I get a managed make error when I import the example projects"

This occurs when one imports a project for which he or she doesn't have the code generation tools for. Please ensure that you have at least version 16.9.1.LTS of the C2000 Code Generation Tools.

### "I cannot build the example projects"

This is caused by linked resources not being where the project expects them to be. For instance, if you imported the projects and selected "Copy projects to workspace", the projects would no longer build because the files they reference aren't a part of your workspace. Always build and run the examples directly in the C2000Ware directory tree.

### "My F2807x device isn't in the target configuration selection list"

The list of available device for debug is determined based on a number of factors, including drivers and tools chains available on the host system. If your system has previously been used only for

development on previous C2000 devices, you may not have the required CCS device files. In CCS click on "Help, Check for updates" and follow the dialog boxes to update your CCS installation.

### **"I cannot connect to the target"**

This is most often times caused by either a bad target configuration, or simply the emulator being physically disconnected. If you are unable to connect to a target check the following things:

1. Ensure the target configuration is correct for the device you have.
2. Ensure the emulator is plugged in to both the computer and the device to be debugged.
3. Ensure that the target device is powered.

### **"I cannot load code"**

This is typically caused by an error in the GEL script or improperly linked code. If you are having trouble loading code, check the linker command files and maps to ensure that they match the device memory map. If these appear correct, there is a chance there is something wrong in one of your GEL scripts.

### **"When a core gets an interrupt, it faults"**

Ensure that the interrupt vector table is where the interrupt controller thinks it is. On the core, the interrupt vector table may be mapped to either RAM or flash. Please ensure that your vector table is where the interrupt controller thinks it is.

### **"When the CPU comes up, it is not fresh out of reset"**

F2807x devices support several boot modes, several of which allow program code to be loaded into and executed out of RAM via one of the device many serial peripherals. If the boot mode pins are in the wrong state at power up, one of these peripheral boot modes may be entered accidentally before the debugger is connected. This leaves the chip in an unclear state with potentially several of the peripherals configured as well as the interrupt vector table setup. If you are seeing strange behavior check to ensure that the "Boot to Flash" or "Boot to RAM" boot mode is selected.

**"Fapi\_Error\_InvalidHclkValue\" is returned after execution of Fapi\_setActiveFlashBank(Fapi\_FlashBank0) function."** Occurs when using the Flash APIs in the code.

Please ensure that the correct frequency is passed as an input to the Fapi\_initializeAPI function and the wait states are correctly configured



## 3 Interrupt Service Routine Priorities

|                                                           |    |
|-----------------------------------------------------------|----|
| Interrupt Hardware Priority Overview .....                | 29 |
| F2807x PIE Interrupt Priorities .....                     | 30 |
| Software Prioritization of Interrupts - The Example ..... | 31 |

### 3.1 Interrupt Hardware Priority Overview

With the PIE block enabled, the interrupts are prioritized in hardware by default as follows:

**Global Priority (CPU Interrupt level):**

| CPU Interrupt | Hardware Priority      |
|---------------|------------------------|
| Reset         | 1(Highest)             |
| INT1          | 5                      |
| INT2          | 6                      |
| INT3          | 7                      |
| INT4          | 8                      |
| INT5          | 9                      |
| INT6          | 10                     |
| INT7          | 11                     |
| ...           | ...                    |
| INT12         | 16                     |
| INT13         | 17                     |
| INT14         | 18                     |
| DLOGINT       | 19(Lowest)             |
| RTOSINT       | 20                     |
| reserved      | 2                      |
| NMI           | 3                      |
| ILLEGAL       | -                      |
| USER1         | -(Software Interrupts) |
| USER2         | -                      |
| ...           | ...                    |

CPU Interrupts INT1 - INT14, DLOGINT and RTOSINT are maskable interrupts. These interrupts can be enabled or disabled by the CPU Interrupt enable register (IER).

**Group Priority (PIE Level):**

If the Peripheral Interrupt Expansion (PIE) block is enabled, then CPU interrupts INT1 to INT12 are connected to the PIE. This peripheral expands each of these 12 CPU interrupt into 8 interrupts. Thus the total possible number of available interrupts in the PIE is 96. Note, not all of the 96 are used on a 2803x device.

Each of the PIE groups has its own interrupt enable register (PIEIERx) to control which of the 8 interrupts (INTx.1 - INTx.8) are enabled and permitted to issue an interrupt.

| CPU Interrupt | PIE Group | PIE Interrupts                                                |         |         |         |         |         |         |        |
|---------------|-----------|---------------------------------------------------------------|---------|---------|---------|---------|---------|---------|--------|
|               |           | Highest ————— Hardware Priority Within the Group ————— Lowest |         |         |         |         |         |         |        |
| INT1          | 1         | INT1.1                                                        | INT1.2  | INT1.3  | INT1.4  | INT1.5  | INT1.6  | INT1.7  | INT1.8 |
| INT2          | 2         | INT2.1                                                        | INT2.2  | INT2.3  | INT2.4  | INT2.5  | INT2.6  | INT2.7  | INT2.8 |
| INT3          | 3         | INT3.1                                                        | INT3.2  | INT3.3  | INT3.4  | INT3.5  | INT3.6  | INT3.7  | INT3.8 |
| ... etc ...   |           |                                                               |         |         |         |         |         |         |        |
| ... etc ...   |           |                                                               |         |         |         |         |         |         |        |
| INT12         | 12        | INT12.1                                                       | INT12.2 | INT12.3 | INT12.4 | INT12.5 | INT12.6 | INT12.7 | INT4.8 |

Table 3.1: PIE Group Hardware Priority

## 3.2 PIE Interrupt Priorities

The PIE block is organized such that the interrupts are in a logical order. Interrupts that typically require higher priority, are organized higher up in the table and will thus be serviced with a higher priority by default.

The interrupts in a control subsystem can be categorized as follows (ordered highest to lowest priority):

### 1. Non-Periodic, Fast Response

These are interrupts that can happen at any time and when they occur, they must be serviced as quickly as possible. Typically these interrupts monitor an external event.

On the F2807x devices, such interrupts are allocated to the first few interrupts within PIE Group 1 and PIE Group 2. This position gives them the highest priority within the PIE group. In addition, Group 1 is multiplexed into the CPU interrupt INT1. CPU INT1 has the highest hardware priority. PIE Group 2 is multiplexed into the CPU INT2 which is the 2nd highest hardware priority.

### 2. Periodic, Fast Response

These interrupts occur at a known period, and when they do occur, they must be serviced as quickly as possible to minimize latency. The A/D converter is one good example of this. The A/D sample must be processed with minimum latency.

On the F2807x devices, such interrupts are allocated to the group 1 in the PIE table. Group 1 is multiplexed into the CPU INT1. CPU INT1 has the highest hardware priority.

### 3. Periodic

These interrupts occur at a known period and must be serviced before the next interrupt. Some of the PWM interrupts are an example of this. Many of the registers are shadowed, so the user has the full period to update the register values.

In the F2807x device's PIE modules, such interrupts are mapped to group 2 - group 5. These groups are multiplexed into CPU INT3 to INT5 (the ePWM and eCAP), which are the next lowest hardware priority.

### 4. Periodic, Buffered

These interrupts occur at periodic events, but are buffered and hence the processor need

only service such interrupts when the buffers are ready to filled/emptied. All of the serial ports (SCI / SPI / I2C / CAN) either have FIFOs or multiple mailboxes such that the CPU has plenty of time to respond to the events without fear of losing data.

In the F2807x device, such interrupts are mapped to INT6, INT8, and INT9, which are the next lowest hardware priority.

## 3.3 Software Prioritization of Interrupts

The user will probably find that the PIE interrupts are organized where they should be for most applications. However, some software prioritization may still be required for some applications.

Recall that the basic software priority scheme on the C28x works as follows:

### ■ Global Priority

This priority can be managed by manipulating the CPU IER register. This register controls the 16 maskable CPU interrupts (INT1 - INT16).

### ■ Group Priority

This can be managed by manipulating the PIE block interrupt enable registers (PIEIERx). There is one PIEIERx per group and each control the 8-interrupts multiplexed within that group.

The F28 software prioritization of interrupt example demonstrates how to configure the Global priority (via IER) and group priority (via PIEIERx) within an ISR in order to change the interrupt service priority based on user assigned levels. The steps required to do this are:

#### 1. Set the global priority

Modify the IER register to allow CPU interrupts with a higher user priority to be serviced.

#### 2. Set the Group priority

Modify the appropriate PIEIERx register to allow group interrupts with a higher user set priority to be serviced.

#### 3. Enable interrupts

The software prioritized interrupts example provides a method using mask values that are configured during compile time to allow you to manage this easily.

To setup software prioritization for the example, the user must first assign the desired global priority levels and group priority levels.

This is done in the F2807x\_common/include/F2807x\_SWPrioritizedIsrLevels.h file as follows:

#### 1. User assigns global priority levels

INT1PL - INT16PL

These values are used to assign a priority level to each of the 16 interrupts controlled by the CPU IER register. A value of 1 is the highest priority while a value of 16 is the lowest. More than one interrupt can be assigned the same priority level. In this case the default hardware priority would determine which would be serviced first. A priority of 0 is used to indicate that the interrupt is not used.

2. *User assigns PIE group priority levels*

GxyPL (where x = PIE group number 1 - 12 and y = interrupt number 1 - 8)

These values are used to assign a priority level to each of the 8 interrupts within a PIE group. A value of 1 is the highest priority while a value of 8 is the lowest. More than one interrupt can be assigned the same priority level. In this case the default hardware priority would determine which would be serviced first. A priority of 0 is used to indicate that the interrupt is not used.

Once the user has defined the global and group priority levels, the compiler will generate mask values that can be used to change the IER and PIEIERx registers within each ISR. In this manner the interrupt software prioritization will be changed. The masks that are generated at compile time are:

■ **IER mask values**

MINT1 - MINT16

The user assigned INT1PL - INT16PL values are used at compile time to calculate an IER mask for each CPU interrupt. This mask value will be used within an ISR to allow CPU interrupts with a higher priority to interrupt the current ISR and thus be serviced at a higher priority level.

■ **PIEIERxy mask values**

MGxy (where x = PIE group number 1 - 12 and y = interrupt number 1 - 8)

The assigned group priority levels (GxyPL) are used at compile time to calculate PIEIERx masks for each PIE group. This mask value will be used within an ISR to allow interrupts within the same group that have a higher assigned priority to interrupt the current ISR and thus be serviced at a higher priority level.

### 3.3.1 Using the IER/PIEIER Mask Values

Within an interrupt service routine, the global and group priority can be changed by software to allow other interrupts to be serviced. The procedure for setting an interrupt priority using the mask values created in the F28\_SWPrioritizedIsrLevels.h is the following:

1. **Set the global priority**

- Modify IER to allow CPU interrupts from the same PIE group as the current ISR.
- Modify IER to allow CPU interrupts with a higher user defined priority to be serviced.

2. **Set the group priority**

- Save the current PIEIERx value to a temporary register.
- The PIEIER register is then set to allow interrupts with a higher priority within a PIE group to be serviced.

3. **Enable interrupts**

- Enable all PIE interrupt groups by writing all 1's to the PIEACK register
- Enable global interrupts by clearing INTM

4. **Execute ISR.** Interrupts that were enabled in steps 1-3 (those with a higher software priority) will be allowed to interrupt the current ISR and thus be serviced first.

5. **Restore the PIEIERx register**

6. **Exit**



### 3.3.2 Example Code

The sample C code below shows an EV-A Comparator 1 Interrupt service routine software prioritization written in C. This interrupt is connected to PIE group 2 interrupt 1.

```
// Connected to PIEIER2_1 (use MINT2 and MG21 masks):
#if (G21PL != 0)
interrupt void EPWM1_TZINT_ISR(void)    // EPWM1 Trip Zone
{
    // Set interrupt priority:
    volatile Uint16 TempPIEIER = PieCtrlRegs.PIEIER2.all;
    IER |= M_INT2;
    IER &= MINT2;                    // Set "global" priority
    PieCtrlRegs.PIEIER2.all &= MG21; // Set "group" priority
    PieCtrlRegs.PIEACK.all = 0xFFFF; // Enable PIE interrupts
    asm(" NOP");
    EINT;

    // Insert ISR Code here.....
    // for now just insert a delay
    for(i = 1; i <= 10; i++) {}

    // Restore registers saved:
    DINT;
    PieCtrlRegs.PIEIER2.all = TempPIEIER;

    // Add ISR to Trace
    ISRTrace[ISRTraceIndex] = 0x0021;
    ISRTraceIndex++;
}
#endif

CMP1INT_ISR:
    ASP
    ADDB     SP,#1
    CLRC     OVM,PAGE0
    MOVW     DP,#0x0033
    MOV      AL,@36
    MOV      *-SP[1],AL
    OR       IER,#0x0002
    AND      IER,#0x0002
    AND      @36,#0x000E
    MOV      @33,#0xFFFF
    CLRC     INTM

    User code goes here...

    SETC     INTM
    MOV      AL,*-SP[1]
    MOV      @36,AL
    SUBB     SP,#1
```

NASP  
IRET

The interrupt latency is approx 22 cycles.

/\*!

## 4 CLA C Compiler

|                                             |    |
|---------------------------------------------|----|
| Introduction .....                          | 35 |
| Overview .....                              | 35 |
| Framework .....                             | 43 |
| Getting Started with the CLA Compiler ..... | 44 |
| Debugging .....                             | 48 |
| Known Debugging Issues .....                | 49 |
| Tips and Tricks .....                       | 49 |

### 4.1 Introduction

The goal of the CLA compiler is to implement enough of the C programming environment to make it easier to access the capabilities of the CLA architecture and integrate CLA task code and data into a C28x application.

The compiler is available as part of the codegen tools (v6.0.1 and later). All bugs, performance issues should be reported to Compiler Support at the forum [Compiler Forum](#).

### 4.2 Overview

The README.txt file included in the compiler download package contains the latest details on the CLA compiler's C language implementation and it is highly recommended that you go over this document before you begin coding.

#### 4.2.1 How to Invoke the CLA Compiler

The CLA compiler is invoked using the same command used for compiling C28x code (cl2000[.exe]).

Files that have a .cla extension will be recognized by the compiler as CLA C files. The shell will invoke separate CLA versions of the compiler passes to generate CLA-specific code. The object files generated by the compiler can then be linked with C28x objects files to create a C28x/CLA program.

Usage:

```
cl2000 -v28 -cla_support=cla0 [other options] file.cla
or
cl2000 -v28 -cla_support=cla1 [other options] file.cla
```

**NOTE: THE COMPILER DOES NOT SUPPORT COMPILING BOTH CLA AND C28X C FILES IN ONE INVOCATION.**

## 4.2.2 C Language Implementation

### 4.2.2.1 Characteristics

#### Language

Supports C only. No C++ or GCC extension support.

#### Data Types

(NOTE THE DIFFERENCES FROM C28X DATA TYPES!!)

- char, short - 16 bits
- int, long - 32 bits ('long long' data type is not supported)
- float, double, long double - 32 bits
- pointers - 16 bits

| IMPORTANT NOTES:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The CLA and C28x CPU have different type sizes. <ul style="list-style-type: none"><li>• When declaring data that will be shared by both C28x and CLA use type declarations that will result in objects of the same size</li><li>• To avoid ambiguity use typedefs for basic types that include size information (eg. int32, uint16, etc)</li></ul>                                                                                                                                                                                    |
| The CLA architecture is oriented for 32-bit data types. <ul style="list-style-type: none"><li>• 16-bit data types incur sign extension overhead and should primarily be used for load/store operations such as reading/writing 16-bit peripherals.</li></ul>                                                                                                                                                                                                                                                                          |
| Pointers are <b>INTERPRETED</b> differently <ul style="list-style-type: none"><li>• Pointers on the C28 are 22-bits wide and require at minimum 2 contiguous 16-bit locations for storage. As such they are treated as 32-bit data types (since we cannot allocate 22 bit memory locations)</li><li>• The CLA treats pointers as 16-bit data types. Any pointer shared between the C28 and CLA will be interpreted as a 16-bit location by the CLA compiler and this could cause undesired or bad data accesses by the CLA.</li></ul> |
| <b>NOTE: THE CLA COMPILER DOES NOT PROVIDE 64-BIT DATA TYPE SUPPORT. THE CLA_TYPEDEFs HEADER FILE DOES HOWEVER DEFINE A 64 BIT INTEGER AS THE UNION OF TWO 32-BIT INTEGERS; THIS WAS DONE IN ORDER TO PREVENT ERRORS IN THE COMPILATION PROCESS OF OTHER PERIPHERAL HEADERS THAT USE 64-BIT TYPES, E.G. USB</b>                                                                                                                                                                                                                       |

#### Pragmas

The compiler accepts C28x pragmas except for the FAST\_FUNC\_CALL

## C Standard Library

In general, the C standard library is not supported. `abs()` and `fabs()` are supported as intrinsics. An inline fast floating-point divide is supported.

## Keywords

The keywords `'__register'`, `'far'`, and `'ioport'` are not recognized

## Intrinsics

The following intrinsics are supported:

- `float __meisqrtf32(float)`
- `float __meinvf32(float)`
- `float __mminf32(float, float)`
- `float __mmaxf32(float, float)`
- `void __mswapf(float, float)`
- `short __mf32toi16r(float)`
- `unsigned short __mf32toui16r(float)`
- `float __mfracf32(float)`
- `__mdebugstop()`
- `__meallow()`
- `__medis()`
- `__msetflg(unsigned short, unsigned short)`
- `__mnop()`

## 4.2.3 Language Restrictions

### Global Initialization

Defining and initializing global data is not supported.

Since the CLA code is executed in an interrupt driven environment there is no C system boot sequence. As a result, definitions of the form 'int global\_var = 5;' are not allowed for variables that are defined globally (outside the scope of a function). Initialization of global data must either be done by the C28x driver code or within a function.

Variables defined as 'const' can be initialized globally. The compiler will create initialized data sections named **.const\_cla** to hold these variables. The same restriction applies to variables declared as 'static'. Even if the variable is defined within a function.

### Stack

Local variables and compiler temps are placed into a scratchpad memory area. On older CGT (before 6.4.0) these variables were accessed directly using the symbols '**\_\_cla\_scratchpad\_start**' and '**\_\_cla\_scratchpad\_end**' and it was expected that the user would manage this area and define these symbols using a linker command file. In CGT 6.4.0 (and above) these variables are placed in a ".scratchpad" memory section, which the compiler will then partition into local frames, one for the all eight tasks, and one for each leaf function. These local frames will have unique symbols that the compiler will use to access variables.

#### IMPORTANT NOTES:

Local variables and compiler temps are expected to be placed into a scratchpad memory area and accessed directly using the symbols '**\_\_cla\_scratchpad\_start**' and '**\_\_cla\_scratchpad\_end**' (for CGT 6.2.x and older), while they are placed in ".scratchpad" for CGT 6.4.0 (and above) and the compiler access them relative to the local frame symbol

- For the legacy memory convention (CGT 6.2.x and older) the user is expected to manage the size of the area and define start/end symbols using a linker command file. For the newer convention (CGT 6.4.0+), this is handled by the compiler
- This scratchpad serves as a CLA stack.

To allow debug of local variables, the linker .cmd file has been updated from that originally distributed

- Please ensure the changes to the .cmd file shown below are made before proceeding.
- The linker file should look like the code shown below.
- This also required a compiler released after July 21, 2011.

## Linker Command File (CGT 6.2.x and older)

The following is an example of what needs to be added to a linker command file to define the CLA compiler scratchpad memory (legacy convention):

- Define the scratchpad size - **CLA\_SCRATCHPAD\_SIZE** is a linker defined symbol that can be added to the application's linker command file to designate the size of the scratchpad memory.
- A SECTION's directive can reference this symbol to allocate the scratchpad area. This directive reserves a 0x100 word memory hole to be used as the compiler scratchpad area.
- The scratchpad area is named **CLAscratch** and is allotted to CLA Data RAM 1 (CLARAM1)
- The value of CLA\_SCRATCHPAD\_SIZE can be changed based on the application.

```
// Define a size for the CLA scratchpad area that will be used
// by the CLA compiler for local symbols and temps
// Also force references to the special symbols that mark the
// scratchpad area.

// If using --define CLA_SCRATCHPAD_SIZE=0x100, remove next line
CLA_SCRATCHPAD_SIZE = 0x100;
--undef_sym=__cla_scratchpad_end
--undef_sym=__cla_scratchpad_start

.....
MEMORY
{
    .....
}
SECTIONS
{
    //
    // Must be allocated to memory the CLA has write access to
    //
    CLAscratch :
    { *.obj(CLAscratch)
      . += CLA_SCRATCHPAD_SIZE;
      *.obj(CLAscratch_end) } > CLARAM1, PAGE = 1
    }
```

The scratchpad size can alternatively be defined and altered in the linker options of a project as shown below

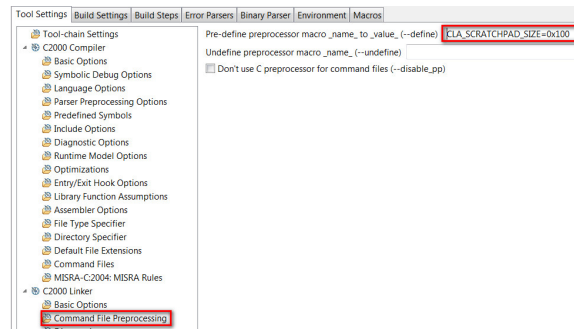


Figure 4.1: Adjusting scratchpad size through the linker options

## Linker Command File (CGT 6.4.0 and newer)

The following is an example of the linker command file with the new memory convention (CGT 6.4.0+):

- The old convention for CLAScratch will still be supported by the new compiler, albeit, inefficiently from a memory allocation standpoint.
- The new compiler creates a common local frame for the 8 tasks, i.e. each task's local frame is overlayed on top of each other - they use the same memory locations; this is possible since there is no nesting of tasks, so one task cannot corrupt the scratch area of another.
- By having the CLAScratch memory section, the compiler cannot take advantage of the overlaying strategy and is, instead, forced to allocate each task's locals in separate locations within the scratchpad.

```

.....
MEMORY
{
.....
}
SECTIONS
{
    //
    // Must be allocated to memory the CLA has write access to
    //
    .scratchpad : > CLARAM1, PAGE = 1
}

```

## Function Nesting

Only 2 levels of call stack depth is supported. See Section [4.2.5](#) for details on the calling conventions.



## Recursion

Recursive function calls are not supported.

## Function Pointers

Function pointers are not supported.

## Other Operations

The following operations are currently not supported due to lack of instruction set support making them expensive to implement. It is not clear that these operations are critical for typical CLA algorithms.

- Integer divide, modulus
- Integer unsigned compares

## 4.2.4 Memory Model - Sections

### CLA Program

The CLA compiler will place CLA code into section “**Cla1Prog**” as per the current convention used for CLA assembly.

### Global Data

Uninitialized global data will be placed in the section “**.bss\_cla**”

### Constants

Initialized constant data will be placed in section “**.const\_cla**”

### Heap

There is no support for operations such as malloc(). Therefore there is no C system heap for CLA.

## 4.2.5 Function Structure and Calling Conventions (CGT 6.2.x and older)

### Function Nesting

The compiler supports 2 level of function calls. Functions declared as interrupts may call leaf functions only. Leaf function may not call other functions. Functions not declared as interrupt

will be considered leaf functions. **NOTE: THE CLA TASKS ARE PREFIXED WITH THE KEYWORD '`__interrupt`' TO SET THEM APART FROM LEAF FUNCTIONS. THEY ARE NOT TO BE CONFUSED WITH C28X INTERRUPT SERVICE ROUTINES**

## Register Calling Convention

The CLA compiler supports calling functions with up to 2 arguments.

- Pointer arguments are passed in MAR0/MAR1.
- Integer/float arguments are passed in MR0,MR1.
- Integer and float return values from functions are passed in MR0.
- Pointer or return by reference value from functions are passed in MAR0.

## Register Save/Restore

All registers except for MR3 are saved on call. MR3 is saved on entry. **NOTE: IF YOU ARE WRITING AN ASM ROUTINE TO BE CALLED IN THE C CONTEXT IT IS YOUR RESPONSIBILITY TO SAVE/RESTORE MR3 UPON ENTRY AND EXIT RESPECTIVELY**

## Local Variables

A static scratchpad area is used as a stack for locals and compiler temporary variables. **NOTE:THE USER IS RESPONSIBLE FOR ENSURING THE SCRATCHPAD AREA IS ALLOCATED INTO THE MEMORY MAP AND IS LARGE ENOUGH. THIS IS DONE USING THE EITHER THE LINKER COMMAND FILE OR THROUGH THE PROJECT'S LINKER OPTIONS (SEE ABOVE).**

## Mixing CLA C and Assembly

When interfacing with CLA assembly language modules use the calling conventions defined above to interface with compiled CLA code.

## 4.2.6 Function Structure and Calling Conventions (CGT 6.4.0 and newer)

### Function Nesting

The compiler supports an infinite call depth subject to memory constraints. **NOTE: THE CLA TASKS ARE PREFIXED WITH THE KEYWORD '`__interrupt`' TO SET THEM APART FROM LEAF FUNCTIONS. THEY ARE NOT TO BE CONFUSED WITH C28X INTERRUPT SERVICE ROUTINES**

### Register Calling Convention

The CLA compiler supports calling functions with up to 2 arguments.

- Pointer arguments are passed in MAR0/MAR1.

- Integer/float arguments are passed in MR0,MR1, MR2.
- Additional arguments are passed on the scratchpad
- Integer and float return values from functions are passed in MR0.
- Pointer or return by reference value from functions are passed in MAR0.

## Register Save/Restore

All registers except for MR3 are saved on call. MR3 is saved on entry. **NOTE: IF YOU ARE WRITING AN ASM ROUTINE TO BE CALLED IN THE C CONTEXT IT IS YOUR RESPONSIBILITY TO SAVE/RESTORE MR3 UPON ENTRY AND EXIT RESPECTIVELY**

## Local Variables

A scratchpad area is used as a stack for locals, compiler temporary variables and passed arguments. A call graph is computed in the linker to determine which function frames can be overlayed in placement to save memory - these are usually the tasks since they can't be nested. All generated function frames are part of the .scratchpad section and are named in the form ".scratchpad:[function section name]". For example:

- `.scratchpad:Cla1Prog:_Cla1Task2`
- `.scratchpad:Cla1Prog:_Cla1Func1`

Therefore, the only section that needs to be placed in the linker command file is the .scratchpad section. All function frames that are part of that section will be placed automatically within the .scratchpad placement. It is not necessary to specify a size for the .scratchpad section. Additionally, CLA object files compiled with previous tool versions will be fully compatible with newly generated object files as long as the user supports both scratchpad naming conventions in the linker command file. However, the scratchpad section used for old object files cannot be overlayed with the new .scratchpad section and the user must ensure enough memory is available for both.

## Mixing CLA C and Assembly

When interfacing with CLA assembly language modules use the calling conventions defined above to interface with compiled CLA code.

## 4.3 Framework

The CLA examples are in the folder "*F2807x\_examples\_Cpu1*". Each CLA example within this folder share a similar structure as shown in the figure below (Fig. [4.2](#))

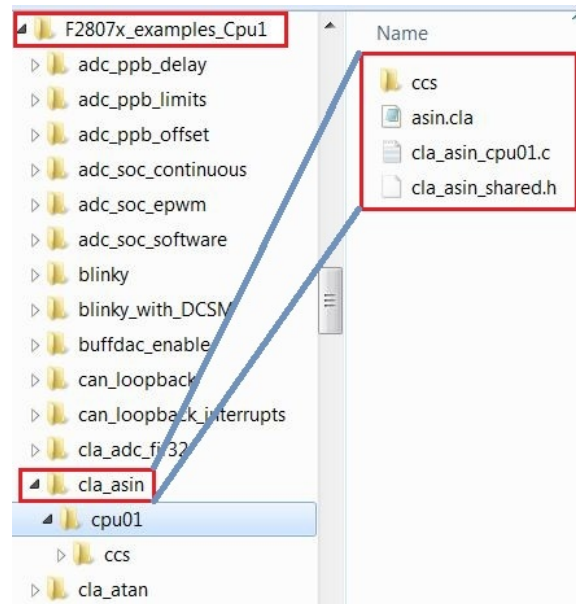


Figure 4.2: Structure of a CLA example

For any given *example* there are 3 specific files associated with it as described in Table. 4.1.

| Source File        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <example>_cpu01.c  | implements the main() routine which runs the tests; this often involves triggering a CLA task once or several times, running an algorithm within that task, returning and storing the result of that algorithm and then finally checking against a reference output. The main() also performs the system, peripheral, and CLA initialization. Variables declared in <example>_shared.h are defined here and allocated to memory (using #pragma DATA_SECTION). <b>NOTE: CLA VARIABLES MUST BE ALLOCATED TO A MEMORY SPACE THAT THE CLA HAS ACCESS TO, NAMELY THE CLA&lt;-&gt;CPU MESSAGE RAMS OR THE CLA DATA RAMS.</b> |
| <example>.cla      | The C implementation of all the CLA tasks. File level data global to the CLA only(not shared with the C28x) should also be defined in this file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <example>_shared.h | External declarations for the global data defined in the C28x code and referenced by the CLA task code.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 4.1: Example specific files

## 4.4 Getting Started with the CLA Compiler

The C code for the CLA is saved to a file with the .cla extension. If running an older version of CCSv5 (v5.2 or older) that does not recognize the extension, you can follow these steps:

**NOTE: FOR EACH NEW WORKSPACE THE USER MUST CONFIGURE CCS IN THE MANNER DESCRIBED BELOW**

1. Go to Windows->Preferences->C/C++->File Types.
2. Select "New"
3. Type in \*.cla in the top text box
4. In the drop down menu select C source file(see Fig. 4.3).
5. Select "ok"

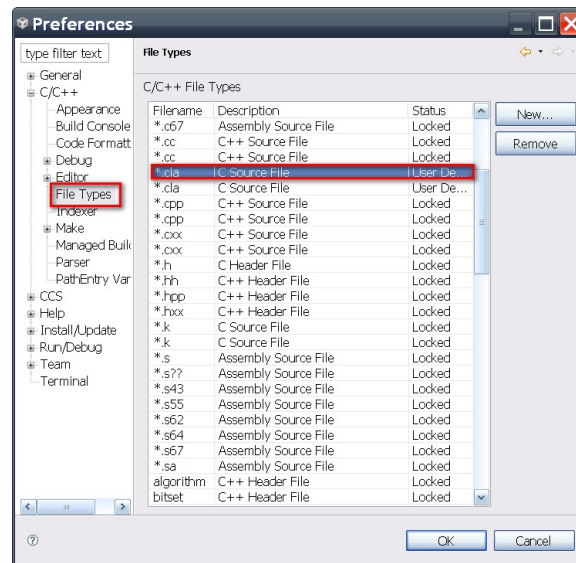


Figure 4.3: Configuring CCS5 to recognize the .cla extension

The IDE will now recognize the .cla extension as code to be compiled.

#### 4.4.1 Creating Your Own Project

The simplest way to start writing code is to copy over an existing project (from the examples folder) and to edit it. Lets take an example: I would like to create a new project, **exp2**, from an existing project, **atan**.

1. Copy a Project:
  - Make a copy of the **atan** folder in the example directory and rename it to **exp2**
2. Rename Files:
  - Rename all files `atan*.*` to `exp2*.*`. (Notice the naming convention. All files have the test folder name as a prefix, see Fig. 4.4 below)

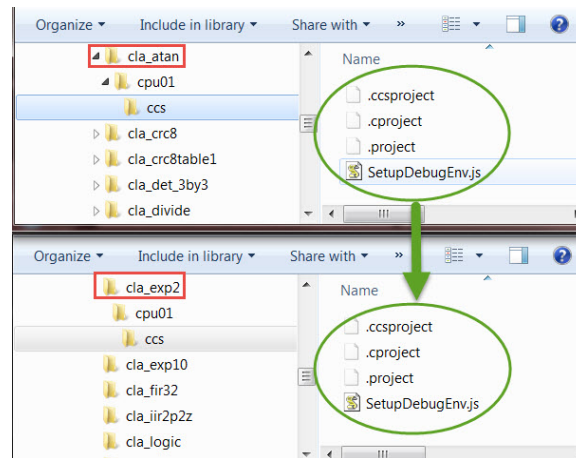


Figure 4.4: Creating a new project from existing examples

3. Edit the Project Files:

- Open the .cproject and .project files in any text editor and replace all instances of the word atan with exp2.
- This will ensure all the object files come out with the correct name and any directory dependencies are taken care of.
- If the project uses a predefined symbol, TEST\_NAME=<test\_name>. For e.g. the atan project might have a predefined symbol, TEST\_NAME=atan. By altering the .cproject files in the manner described you won't have to change the build settings for each new project.
- If the project does not use predefined symbols, go into the .c file and include the correct shared header file. For e.g. in our example, change *cla\_atan\_shared.h* to *cla\_exp2\_shared.h*

4. Import the Project:

- Import the exp2 project into your workspace (see Fig. 4.5).
- The files highlighted in the red box are common to all the CLA examples and are linked in by the .project file. The rest of the source files are specific to each test case

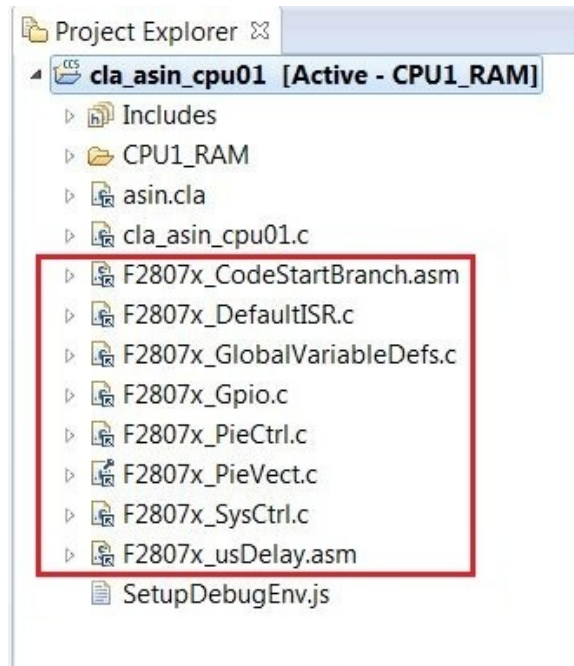


Figure 4.5: Common source files for each CLA example

5. Modify the Source:

- Edit the test specific source files.

## 4.4.2 Suggested Build Options

The following table lists build options that are useful for CLA C code. You can setup build properties that apply only to \*.cla file by right clicking the file and selecting Properties->C/C++ Build.

| Option                                                            | Notes                                                                                                                         |
|-------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <i>Debugging Model-&gt;Full Symoblic debug (-g)</i>               | If you would like to access watch variables etc while debugging(default setting).                                             |
| <i>Debugging Model-&gt;Suppress symbolic debug information</i>    | View compiler generated assembly code without all the debug information.                                                      |
| <i>Optimization-&gt;Optimization Level = none - O2</i>            | <b>DUE TO THE SMALL NUMBER OF REGISTERS AVAILABLE LESS AGGRESSIVE OPTIMIZATION MAY YIELD BETTER RESULTS (EG. -O1 vs -O2).</b> |
| <i>Assembler Options -&gt; Keep generated assembly files (-k)</i> | Useful if you want to compare compiler generated code with hand coded assembly.                                               |

Table 4.2: Suggested Build Options

## 4.5 Debugging

The user can follow these steps to start debugging their code on the CLA (The project *exp2* is used as an example here)

1. Add `__mdebugstop()`
  - Place an `__mdebugstop()` at the beginning of the CLA task you wish to debug. For example, task 1 of *exp2.cla*.
2. Set build options:
  - You can setup individual build properties for the \*.cla file seperately from the rest of the application.
  - Right click the .cla file and select **Properties->C/C++ Build**.
3. Connect to the CLA:
  - Once you have built your project and launched the debug session CCS, by default, will connect to only the C28 core.
  - To be able to debug CLA code you will need to connect to the CLA core. The action of connecting to the CLA core enables all software breakpoints and single-stepping abilities.
  - **IF YOU WISH TO STEP THROUGH C CODE BUILD THE PROJECT WITH -G (FULL SYMBOLIC DEBUG) TO GENERATE THE SYMBOLS THAT WILL BE LOADED TO THE DEBUGGER.**
    - (a) Click on the CLA debug session (highlighted in Fig. 4.6)
    - (b) Select *Target->Connect to Target* or hit Alt-C.
    - (c) Once the CLA core is connected proceed to load the project symbols by clicking on *Target->Load Symbols-><example>.out* (e.g. *exp2.out*).



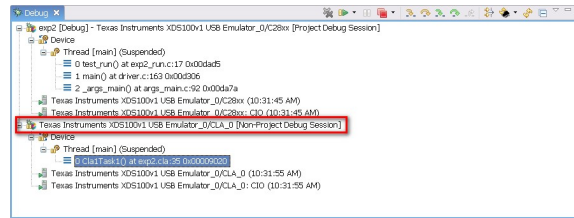


Figure 4.6: CLA Debug Session

#### 4. Run the C28x:

- In the exp2 example we have enabled task 1 of the CLA and we trigger it in software on the C28 side. When we run the code on the C28 debug session it seems to stall at the Cla1ForceTask1andWait() routine. It is waiting for the CLA task 1 to run to completion. When we switch over to the CLA session we see that execution has stopped at the \_\_mdebustop() intrinsic

#### 5. Debug the Code:

- At this point we can proceed to single step through the code or continue till completion.
- There are some restrictions to debugging the CLA and they are discussed next.

## 4.6 Known Debugging Issues

1. The CLA pipeline is not flushed on a single step and so results may not be visible until a few instructions later. Please refer to the CLA user guide or the device *Technical Reference Manual* for more details about the pipeline.  
**UNLIKE THE C28, SINGLE-STEPPING ON THE CLA DOES NOT FLUSH THE PIPELINE AND EXECUTE AN INSTRUCTION , IT MERELY MOVES THE PIPELINE FORWARD BY ONE STAGE)**
2. If you plan to debug (single step) code on the CLA it is necessary that MNOPs are placed prior to any MSTOP to ensure the instructions prior to the MSTOP proceed through the pipeline before the MSTOP executes. The compiler will insert these MNOPs if compiling with debug (-g). The MNOPs are unnecessary if you are not debugging the CLA code.
3. **YOU WILL NOT BE ABLE TO EXECUTE THE "RUN TO LINE" OR "STEP OVER" COMMANDS ON THE CLA. BE SURE TO PLACE \_\_MDEBUGSTOP() INTRINSICS AROUND FUNCTIONS YOU WISH TO STEP OVER AND HAVE THE CORE RUN TO THESE BREAKPOINTS DIRECTLY**

## 4.7 Tips and Tricks

### 4.7.1 Dealing with Pointers

Pointers are interpreted differently on the C28x and the CLA. The C28 treats them as 32-bit data types(address size is 22-bits) while the CLA can only use an address size of 16 bits. Assume the following structure is declared in a shared header file(i.e. common to the C28 and CLA) and defined and allocated to a memory section in a .c file

```
/*****
```

```
Shared Header File
*****/
typedef struct{
    float a;
    float *b;
    float *c;
}foo;

/*****
main.c
*****/
#pragma(X, "CpuToCla1MsgRam") //Assign X to section CpuToCla1MsgRam
foo X;

/*****
test.cla
*****/
__interrupt void Cla1Task1 ( void )
{
    float f1,f2;
    f1 = *(X.b);
    f2 = *(X.c); //Pointer incorrectly dereferenced
                  //Tries to access location 0x1503 instead
                  //of 0x1504
}
```

Assume that the C28 compiler will allocate space for X at the top of the section **CpuToCla1MsgRam** as follows:

| Element | Address |
|---------|---------|
| X.a     | 0x1500  |
| X.b     | 0x1502  |
| X.c     | 0x1504  |

The CLA compiler will interpret this structure differently

| Element    | Address       |
|------------|---------------|
| X.a        | 0x1500        |
| X.b        | 0x1502        |
| <b>X.c</b> | <b>0x1503</b> |

The CLA compiler treats pointers **b** and **c** as 16-bits wide and therefore incorrectly dereferences pointer **c**.

The solution to this is to declare a new pointer as follows:

```
*****
Shared Header File
*****/
typedef union{
    float *ptr; //Aligned to lower 16-bits
    Uint32 pad; //32-bits
```

```

}CLA_FPTR;

typedef struct{
    float a;
    CLA_FPTR b;
    CLA_FPTR c;
}foo;

/*****
main.c
*****/
#pragma(X, "CpuToClalMsgRam") //Assign X to section CpuToClalMsgRam
foo X;

/*****
test.cla
*****/
__interrupt void ClalTask1 ( void )
{
    float f1,f2;
    f1 = *(X.b.ptr);
    f2 = *(X.c.ptr); //Correct Access
}

```

The new pointer **CLA\_FPTR** is a union of a 32-bit integer and a pointer to a float. The CLA compiler recognizes the size of the larger of the two elements(the 32 bit integer) and therefore aligns the pointer to the lower 16-bits. Now both the pointers **b** and **c** will occupy 32-bit memory spaces and any instruction that tries to dereference pointer **c** will access the correct address 0x1504.

## 4.7.2 Benchmarking

The CLA does not support the clock function and therefore it is not possible to get a direct cycle count of a particular task. The user can configure the time base module on an ePWM to keep track of the execution time of a task

Setup the time base of ePWM1(or any ePWM) to run at SYSCLKOUT in the up-count mode as shown below:

```

void InitEPwm(void)
{
    // Setup TBCLK
    EPwm1Regs.TBCTL.bit.CTRMODE = TB_COUNT_UP; // Count up
    EPwm1Regs.TBPRD = 0xFFFF; // Set timer period
    EPwm1Regs.TBCTL.bit.PHSEN = TB_DISABLE; // Disable phase loading
    EPwm1Regs.TBPHS.half.TBPHS = 0x0000; // Phase is 0
    EPwm1Regs.TBCTR = 0x0000; // Clear counter
    EPwm1Regs.TBCTL.bit.HSPCLKDIV = TB_DIV1; // Clock ratio to SYSCLKOUT
    EPwm1Regs.TBCTL.bit.CLKDIV = TB_DIV1;
}

```

Proceed to define two macros **READ\_CLOCK** and **RESTART\_CLOCK**, the former to freeze the ePWM timer and copy the elapsed time to a variable, and the latter to restart the ePWM timer.

```
#define READ_CLOCK(X) __meallow();\
    EPwm1Regs.TBCTL.bit.CTRMODE = TB_FREEZE;\
    X = EPwm1Regs.TBCTR;\
    __medis();\
#define RESTART_CLOCK __meallow();\
    EPwm1Regs.TBCTL.bit.CTRMODE = TB_FREEZE;\
    EPwm1Regs.TBCTR = 0;\
    EPwm1Regs.TBCTL.bit.CTRMODE = TB_COUNT_UP;\
    __medis();
```

Define a variable e.g. **ulCycleCount** to hold the cycle count

```
#pragma DATA_SECTION(ulCycleCount, "ClalToCpuMsgRAM");
unsigned long ulCycleCount;
```

Place the macro **RESTART\_CLOCK** at the beginning of a task to restart the ePWM timer and place **READ\_CLOCK** at the end of the task to read the value of the timer. The elapsed time will be give you the cycle count plus a minimal overhead from the two macros

```
__interrupt void ClalTask1 ( void )
{
    //Local Variables
    float a;

    __mdebugstop();
    RESTART_CLOCK;
    a = 10;
    ...
    ...
    ...
    READ_CLOCK(ulCycleCount);
}
```

## 5 CPU 1 Bit-field Example Applications

These example applications show how to make use of various peripherals of a F2807x device. These applications are intended for demonstration and as a starting point for new applications.

All these examples contain two build configurations which allow you to build each project to run from either RAM or Flash. To change how the project is built simply right click on the project and select "Build Configurations". Then, move over to set the active build configuration, either RAM or Flash.

**The examples provided are built for controlCARD compatibility. For LaunchPad use, some minor modifications may be required.**

All of these examples reside in the `device_support/F2807x/examples/cpu1` subdirectory of the C2000Ware package.

### 5.1 ADC PPB Delay Capture (`adc_ppb_delay`)

This example demonstrates delay capture using the post-processing block.

Two asynchronous ADC triggers are setup:

- ePWM1, with period 2048, triggering SOC0 to convert on pin A0
- ePWM1, with period 9999, triggering SOC1 to convert on pin A1

Each conversion generates an ISR at the end of the conversion. In the ISR for SOC0, a conversion counter is incremented and the PPB is checked to determine if the sample was delayed.

After the program runs, the memory will contain:

- **conversion** : the sequence of conversions using SOC0 that were delayed
- **delay** : the corresponding delay of each of the delayed conversions

### 5.2 ADC PPB Limits (`adc_ppb_limits`)

This example sets up the ePWM to periodically trigger the ADC. If the results are outside of the defined range, the post-processing block will generate an interrupt.

The default limits are 1000LSBs and 3000LSBs. With VREFHI set to 3.3V, the PPB will generate an interrupt if the input voltage goes above about 2.4V or below about 0.8V.

### 5.3 ADC PPB Offset (`adc_ppb_offset`)

This example software triggers the ADC. Some SOC's have automatic offset adjustment applied by the post-processing block.

After the program runs, the memory will contain:

- **AdcaResult** : a digital representation of the voltage on pin A0
- **AdcaResult\_offsetAdjusted** : a digital representation of the voltage on pin A0, plus 100 LSBs of automatically added offset
- **AdcbResult** : a digital representation of the voltage on pin B0
- **AdcbResult\_offsetAdjusted** : a digital representation of the voltage on pin B0 minus 100 LSBs of automatically added offset

## 5.4 ADC Continuous Triggering (adc\_soc\_continuous)

This example sets up the ADC to convert continuously, achieving maximum sampling rate.

After the program runs, the memory will contain:

- **AdcaResults** : A sequence of analog-to-digital conversion samples from pin A0. The time between samples is the minimum possible based on the ADC speed.

## 5.5 ADC Continuous Conversions Read by DMA (adc\_soc\_continuous\_dma)

This example sets up two ADC channels to convert simultaneously. The results will be transferred by the DMA into a buffer in RAM.

After the program runs, the memory will contain:

- **adcData0** : a digital representation of the voltage on pin A3
- **adcData1** : a digital representation of the voltage on pin B3

## 5.6 ADC ePWM Triggering (adc\_soc\_epwm)

This example sets up the ePWM to periodically trigger the ADC.

After the program runs, the memory will contain:

- **AdcaResults** : A sequence of analog-to-digital conversion samples from pin A0. The time between samples is determined based on the period of the ePWM timer.

## 5.7 ADC temperature sensor conversion (adc\_soc\_epwm\_tempsensor)

This example sets up the ePWM to periodically trigger the ADC. The ADC converts the internal connection to the temperature sensor, which is then interpreted as a temperature by calling the GetTemperatureC function.

After the program runs, the memory will contain:

- **sensorSample** : The raw reading from the temperature sensor.
- **sensorTemp** : The interpretation of the sensor sample as a temperature in degrees Celsius.

## 5.8 ADC SOC Software Force (adc\_soc\_software)

This example converts some voltages on ADCA and ADCB based on a software trigger.

After the program runs, the memory will contain:

- **AdcaResult0** : a digital representation of the voltage on pin A2
- **AdcaResult1** : a digital representation of the voltage on pin A3
- **AdcbResult0** : a digital representation of the voltage on pin B2
- **AdcbResult1** : a digital representation of the voltage on pin B3

Note: The software triggers for the two ADCs happen sequentially, so the two ADCs will run asynchronously.

## 5.9 ADC Synchronous SOC Software Force (adc\_soc\_software\_sync)

This example converts some voltages on ADCA and ADCB using input 5 of the input X-BAR as a software force. Input 5 is triggered by toggling GPIO0, but any spare GPIO could be used. This method will ensure that both ADCs start converting at exactly the same time.

After the program runs, the memory will contain:

- **AdcaResult0** : a digital representation of the voltage on pin A2
- **AdcaResult1** : a digital representation of the voltage on pin A3
- **AdcbResult0** : a digital representation of the voltage on pin B2
- **AdcbResult1** : a digital representation of the voltage on pin B3

## 5.10 Blinky

This example blinks LED X

## 5.11 Blinky with DCSM

This example blinks LED X

## 5.12 Buffered DAC Enable (buffdac\_enable)

This example generates a voltage on the buffered DAC output, DACOUTA/ADCINA0 (HSEC Pin 9) and uses the default DAC reference setting of VDAC.

When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0 (HSEC pin 12).

## 5.13 Buffered DAC Ramp (buffdac\_ramp)

This example generates a ramp wave on the buffered DAC output, DACOUTA/ADCINA0 (HSEC Pin 9) and uses the default DAC reference setting of VDAC.

When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0 (HSEC pin 12).

Run the included .js file to add the watch variables. This example uses the SGEN module. Documentation for the SGEN module can be found in the SGEN library directory.

The generated waveform can be adjusted with the following variables while running:

- **waveformGain** : Adjust the magnitude of the waveform. Range is from 0.0 to 1.0. The default value of 0.8003 centers the waveform within the linear range of the DAC
- **waveformOffset** : Adjust the offset of the waveform. Range is from -1.0 to 1.0. The default value of 0 centers the waveform
- **outputFreq\_hz** : Adjust the output frequency of the waveform. Range is from -maxOutputFreq\_hz to maxOutputFreq\_hz
- **maxOutputFreq\_hz** : Adjust the max output frequency of the waveform. Range - See SGEN module documentation for how this affects other parameters

The generated waveform can be adjusted with the following variables/macros but require recompile:

- **samplingFreq\_hz** : Adjust the rate at which the DAC is updated. Range - See SGEN module documentation for how this affects other parameters
- **REFERENCE** : The reference for the DAC. Range - REFERENCE\_VDAC, REFERENCE\_VREF
- **CPUFREQ\_MHZ** : The cpu frequency. This does not set the cpu frequency. Range - See device data manual
- **DAC\_NUM** : The DAC to use. Range - DACA, DACB, DACC

The following variables give additional information about the generated waveform: See SGEN module documentation for details

- **freqResolution\_hz**
- **maxOutput\_Isb** : Maximum value written to the DAC.
- **minOutput\_Isb** : Minimum value written to the DAC.
- **pk\_to\_pk\_Isb** : Magnitude of generated waveform.



- **cpuPeriod\_us** : Period of cpu.
- **samplingPeriod\_us** : The rate at which the DAC is updated. Note that samplingPeriod\_us has to be greater than the DAC settling time.
- **interruptCycles** : Interrupt duration in cycles.
- **interruptDuration\_us** : Interrupt duration in uS.
- **sgen** : The SGEN module instance.
- **DataLog** : Circular log of writes to the DAC.

## 5.14 Buffered DAC Random (buffdac\_random)

This example generates random voltages on the buffered DAC output, DACOUTA/ADCINA0 (HSEC Pin 9) and uses the default DAC reference setting of VDAC.

When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0 (HSEC pin 12).

## 5.15 Buffered DAC Sine (buffdac\_sine)

This example generates a sine wave on the buffered DAC output, DACOUTA/ADCINA0 (HSEC Pin 9) and uses the default DAC reference setting of VDAC.

When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0 (HSEC pin 12).

Run the included .js file to add the watch variables. This example uses the SGEN module. Documentation for the SGEN module can be found in the SGEN library directory.

The generated waveform can be adjusted with the following variables while running:

- **waveformGain** : Adjust the magnitude of the waveform. Range is from 0.0 to 1.0. The default value of 0.8003 centers the waveform within the linear range of the DAC
- **waveformOffset** : Adjust the offset of the waveform. Range is from -1.0 to 1.0. The default value of 0 centers the waveform
- **outputFreq\_hz** : Adjust the output frequency of the waveform. Range is from 0 to maxOutputFreq\_hz
- **maxOutputFreq\_hz** : Adjust the max output frequency of the waveform. Range - See SGEN module documentation for how this affects other parameters

The generated waveform can be adjusted with the following variables/macros but require recompile:

- **samplingFreq\_hz** : Adjust the rate at which the DAC is updated. Range - See SGEN module documentation for how this affects other parameters
- **SINEWAVE\_TYPE** : The type of sine generated. Range - LOW\_THD\_SINE, HIGH\_PRECISION\_SINE
- **REFERENCE** : The reference for the DAC. Range - REFERENCE\_VDAC, REFERENCE\_VREF

- **CPUFREQ\_MHZ** : The cpu frequency. This does not set the cpu frequency. Range - See device data manual
- **DAC\_NUM** : The DAC to use. Range - DACA, DACB, DACC

The following variables give additional information about the generated waveform: See SGEN module documentation for details

- **freqResolution\_hz**
- **maxOutput\_lsb** : Maximum value written to the DAC.
- **minOutput\_lsb** : Minimum value written to the DAC.
- **pk\_to\_pk\_lsb** : Magnitude of generated waveform.
- **cpuPeriod\_us** : Period of cpu.
- **samplingPeriod\_us** : The rate at which the DAC is updated. Note that samplingPeriod\_us has to be greater than the DAC settling time.
- **interruptCycles** : Interrupt duration in cycles.
- **interruptDuration\_us** : Interrupt duration in uS.
- **sgen** : The SGEN module instance.
- **DataLog** : Circular log of writes to the DAC.

## 5.16 Buffered DAC Sine DMA (buffdac\_sine\_dma)

This example generates a sine wave on the buffered DAC output using the DMA to transfer sine values stored in a sine table in GSRAM to DACVALS, DACOUTA/ADCINA0 (HSEC Pin 9) and uses the default DAC reference setting of VDAC.

When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0 (HSEC pin 12).

Run the included .js file to add the watch variables.

`outputFreq_hz = (samplingFreq_hz/SINE_TBL_SIZE)*tableStep`

The generated waveform can be adjusted with the following variables/macros but require recompile:

- **waveformGain** : Adjust the magnitude of the waveform. Range is from 0.0 to 1.0. The default value of 0.8003 centers the waveform within the linear range of the DAC.
- **waveformOffset** : Adjust the offset of the waveform. Range is from -1.0 to 1.0. The default value of 0 centers the waveform.
- **samplingFreq\_hz** : Adjust the rate at which the DAC is updated. Range - Bounded by cpu timer maximum interrupt rate.
- **tableStep** : The sine table step size. Range - Bounded by sine table size, should be much less than sine table size to have good resolution.
- **REFERENCE** : The reference for the DAC. Range - REFERENCE\_VDAC, REFERENCE\_VREF
- **CPUFREQ\_MHZ** : The cpu frequency. This does not set the cpu frequency. Range - See device data manual
- **DAC\_NUM** : The DAC to use. Range - DACA, DACB, DACC

## 5.17 Buffered DAC Square (buffdac\_square)

This example generates a square wave on the buffered DAC output, DACOUTA/ADCINA0 (HSEC Pin 9) and uses the default DAC reference setting of VDAC.

When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0 (HSEC pin 12).

Run the included .js file to add the watch variables. This example uses the SGEN module. Documentation for the SGEN module can be found in the SGEN library directory.

The generated waveform can be adjusted with the following variables while running:

- **waveformGain** : Adjust the magnitude of the waveform. Range is from 0.0 to 1.0. The default value of 0.8003 centers the waveform within the linear range of the DAC
- **waveformOffset** : Adjust the offset of the waveform. Range is from -1.0 to 1.0. The default value of 0 centers the waveform
- **outputFreq\_hz** : Adjust the output frequency of the waveform. Range is from 0 to maxOutputFreq\_hz
- **maxOutputFreq\_hz** : Adjust the max output frequency of the waveform. Range - See SGEN module documentation for how this affects other parameters

The generated waveform can be adjusted with the following variables/macros but require recompile:

- **samplingFreq\_hz** : Adjust the rate at which the DAC is updated. Range - See SGEN module documentation for how this affects other parameters
- **REFERENCE** : The reference for the DAC. Range - REFERENCE\_VDAC, REFERENCE\_VREF
- **CPUFREQ\_MHZ** : The cpu frequency. This does not set the cpu frequency. Range - See device data manual
- **DAC\_NUM** : The DAC to use. Range - DACA, DACB, DACC

The following variables give additional information about the generated waveform: See SGEN module documentation for details

- **freqResolution\_hz**
- **maxOutput\_lsb** : Maximum value written to the DAC.
- **minOutput\_lsb** : Minimum value written to the DAC.
- **pk\_to\_pk\_lsb** : Magnitude of generated waveform.
- **cpuPeriod\_us** : Period of cpu.
- **samplingPeriod\_us** : The rate at which the DAC is updated. Note that samplingPeriod\_us has to be greater than the DAC settling time.
- **interruptCycles** : Interrupt duration in cycles.
- **interruptDuration\_us** : Interrupt duration in uS.
- **sgen** : The SGEN module instance.
- **DataLog** : Circular log of writes to the DAC.

## 5.18 CAN External Loopback Using Bitfields (can\_loopback\_bitfields)

IMPORTANT: CAN Bitfield headers require compiler v16.6.0.STS and newer!

This example, using bitfield headers, shows the basic setup of CAN in order to transmit and receive messages on the CAN bus. The CAN peripheral is configured to transmit messages with a specific CAN ID. A message is then transmitted once per second, using a simple delay loop for timing. The message that is sent is a 4 byte message that contains an incrementing pattern.

This example sets up the CAN controller in External Loopback test mode. Data transmitted is visible on the CAN0TX pin and can be received with an appropriate mailbox configuration.

## 5.19 CLA 5 Tap Finite Impulse Response Filter (cla\_adc\_fir32\_cpu01)

This example implements a 5 Tap FIR filter. It will setup EPWM1 to trigger ADCA at a frequency of 50KHz. Once the ADC completes sampling, it will trigger task 7 of the CLA which runs the filter on the ADC sample.

EPWM2 is setup to switch at 10KHz. Connect pin EPWM2A to ADCA0 on the board to see the filtering effect.

### Memory Allocation

- CPU to CLA1 Message RAM
  - A - Filter Coefficients
- CLA1 to CPU Message RAM
  - voltFilt - Filtered sample
  - X - filter sample delay line

### Watch Variables

- voltFilt - Filtered sample
- X - filter sample delay line

### External Connections

- EPWM2A (GPIO2) to ADCA0

## 5.20 CLA $\arcsine(x)$ using a lookup table (cla\_asin\_cpu01)

In this example, Task 1 of the CLA will calculate the arcsine of an input argument in the range (-1.0 to 1.0) using a lookup table.

### Memory Allocation

- CLA1 Math Tables (RAMLS0)
  - CLAasinTable - Lookup table
- CLA1 to CPU Message RAM
  - fResult - Result of the lookup algorithm
- CPU to CLA1 Message RAM
  - fVal - Sample input to the lookup algorithm

**Watch Variables**

- fVal - Argument to task 1
- fResult - Result of  $\arcsin(fVal)$
- y - Array that holds the calculated asin values
- asin\_expected - Array that holds the expected asin values
- pass - pass counter
- fail - fail counter

## 5.21 CLA $\arctangent(x)$ using a lookup table (cla\_atan\_cpu01)

In this example, Task 1 of the CLA will calculate the arctangent of an input argument using a lookup table.

**Memory Allocation**

- CLA1 Math Tables (RAMLS0)
  - CLAatan2Table - Lookup table
- CLA1 to CPU Message RAM
  - fResult - Result of the lookup algorithm
- CPU to CLA1 Message RAM
  - fNum - Numerator of sample input
  - fDen - Denominator of sample input

**Watch Variables**

- fVal - Argument to task 1
- fResult - Result of  $\arctan(fVal)$
- y - Array that holds the calculated atan values
- atan\_expected - Array that holds the expected atan values
- pass - pass counter
- fail - fail counter

## 5.22 CLA CRC8 Table-Lookup Algorithm (cla\_crc8\_cpu01)

This example implements a table lookup method of determining the 8-bit CRC of a message sequence. The polynomial used is 0x07.

### Memory Allocation

- CLA1 Data RAM 0(RAMLS0)
  - table - CRC Lookup table
- CLA1 to CPU Message RAM
  - crc8\_msg1 - CRC of message 1
  - crc8\_msg2 - CRC of message 2
  - crc8\_msg3 - CRC of message 3
  - crc8\_msg4 - CRC of message 4
- CPU to CLA1 Message RAM
  - msg1 - Test message 1
  - msg2 - Test message 2
  - msg3 - Test message 3
  - msg4 - Test message 4

### Watch Variables

- crc8\_msg1 - CRC of message 1
- crc8\_msg2 - CRC of message 2
- crc8\_msg3 - CRC of message 3
- crc8\_msg4 - CRC of message 4
- pass
- fail

## 5.23 CLA CRC8 Table-generation Algorithm (cla\_crc8table1\_cpu01)

This example will generate the lookup table for an 8bit CRC checker with the polynomial 0x07.

### Memory Allocation

- CLA1 Data RAM 0(RAMLS0)
  - table - CRC Lookup table

### Watch Variables

- table - Lookup table
- pass - pass counter
- fail - fail counter

## 5.24 CLA Determinant of 3X3 Matrix (cla\_det\_3by3\_cpu01)

In this example, Task 1 of the CLA will calculate the determinant of a 3x3 matrix.

### Memory Allocation

- CLA1 to CPU Message RAM
  - fDet - Determinant of the 3x3 matrix
- CPU to CLA1 Message RAM
  - x - 3x3 input matrix

### Watch Variables

- fDet - Determinant of the 3x3 matrix
- pass - pass counter
- fail - fail counter

## 5.25 CLA Division: Newton Raphson Approximation (cla\_divide\_cpu01)

In this example, Task 1 of the CLA will divide two input numbers using multiple approximations in the Newton Raphson method.

### Memory Allocation

- CLA1 to CPU Message RAM
  - Res - Result of the division operation
- CPU to CLA1 Message RAM
  - Num - Numerator of input
  - Den - Denominator of input

### Watch Variables

- Num - Numerator of input
- Den - Denominator of input
- Res - Result of the division operation
- y - Array that holds the results
- div\_expected - Array that holds the expected results
- pass - pass counter
- fail - fail counter

## 5.26 CLA $10^X$ using a lookup table (cla\_exp2\_cpu01)

In this example, Task 1 of the CLA will calculate the Xth power of 10 using a table lookup method.

### Memory Allocation

- CLA1 Math Tables (RAMLS0)
  - CLAexpTable - Lookup table
- CLA1 to CPU Message RAM
  - ExpRes - Result of the exponentiation operation
- CPU to CLA1 Message RAM
  - Val - The exponent

### Watch Variables

- Val - Input
- ExpRes - Result of  $10^{Val}$
- y - Array that holds the results
- exp10\_expected - Array that holds the expected results
- pass - pass counter
- fail - fail counter

## 5.27 CLA $e^{\frac{A}{B}}$ using a lookup table (cla\_exp2\_cpu01)

In this example, Task 1 of the CLA will divide two input numbers using multiple approximations in the Newton Raphson method and then calculate the exponent of the result using a lookup table.

### Memory Allocation

- CLA1 Math Tables (RAMLS0)
  - CLAexpTable - Lookup table
- CLA1 to CPU Message RAM
  - ExpRes - Result of the exponentiation operation
- CPU to CLA1 Message RAM
  - Num - Numerator of input
  - Den - Denominator of input

### Watch Variables

- Num - Numerator of input
- Den - Denominator of input
- ExpRes - Result of  $e^{\frac{Num}{Den}}$
- pass - pass counter
- fail - fail counter



## 5.28 CLA 5 Tap Finite Impulse Response Filter (cla\_fir32\_cpu01)

This example implements a 5 Tap FIR filter. The input vector, stored in a lookup table, is filtered and then stored in an output buffer for storage.

### Memory Allocation

- CLA1 Data RAM 0 (RAMLS0)
  - fCoeffs - Filter Coefficients
  - fDelayLine - Delay line memory elements
- CLA1 to CPU Message RAM
  - xResult - Result of the FIR operation
- CPU to CLA1 Message RAM
  - xAdcInput - Simulated ADC input

### Watch Variables

- xResult - Result of the FIR operation
- xAdcInput - Simulated ADC input
- pass
- fail

## 5.29 CLA 2 Pole 2 Zero Infinite Impulse Response Filter (cla\_iir2p2z\_cpu01)

This example implements a Transposed Direct Form II IIR filter, commonly known as a Biquad. The input vector is a software simulated noisy signal that is fed to the biquad one sample at a time, filtered and then stored in an output buffer for storage.

### Memory Allocation

- CLA1 Data RAM 1 (RAML2)
  - S1\_A - Feedback coefficients
  - S1\_B - Feedforward coefficients
- CLA1 to CPU Message RAM
  - yn - Output of the Biquad
- CPU to CLA1 Message RAM
  - xn - Sample input to the filter

### Watch Variables

- fBiquadOutput
- pass
- fail

## 5.30 CLA Logic Test (cla\_logic\_cpu01)

In this example, Task 1 of the CLA implements a set of logic tests. More information about these logic statements can be found at:

<http://graphics.stanford.edu/~seander/bithacks.html#OperationCounting>

### Memory Allocation

- CLA1 to CPU Message RAM
  - cla\_pass\_count - Logic test pass count
  - cla\_fail\_count - Logic test fail count

### Watch Variables

- cla\_pass\_count - Logic test pass count
- cla\_fail\_count - Logic test fail count
- pass - pass counter
- fail - fail counter

## 5.31 CLA Matrix Multiplication (cla\_matrix\_mpy\_cpu01)

In this example, Task 1 of the CLA multiplies two 3x3 matrices.

### Memory Allocation

- CLA1 to CPU Message RAM
  - z - Result of the matrix multiplication
- CPU to CLA1 Message RAM
  - x - 3X3 Input Matrix
  - y - 3X3 Input Matrix

### Watch Variables

- x - 3X3 Input Matrix
- y - 3X3 Input Matrix
- z - Result of the matrix multiplication
- pass - pass counter
- fail - fail counter

## 5.32 CLA Matrix Transpose (cla\_matrix\_transpose\_cpu01)

In this example, Task 1 of the CLA calculates the transpose of a 3x3 matrix.

### Memory Allocation

- CLA1 to CPU Message RAM
  - z - Transposed Matrix
- CPU to CLA1 Message RAM
  - x - 3X3 Input Matrix

**Watch Variables**

- x - 3X3 Input Matrix
- z - Transposed Matrix
- pass - pass counter
- fail - fail counter

## 5.33 CLA Mixed C and Assembly Code (cla\_mixed\_c\_asm\_cpu01)

This example shows the use of both C and assembly code on the CLA. The arc-cosine function uses a table lookup method and polynomial interpolation to determine the angle corresponding to the argument. The tables are stored in the CLA data ROM.

The tables needed by the acos routine are located in the CLA data ROM. A symbol table library is included with this example:

c1bootROM\_CLADDataROMSymbols(\_fpu32).lib

The user must add this to the inclusion list in the upper window of the "File Search Path" options which can be found under "properties → c2000 linker → File Search Path"

Since this library is present in the source directory, the user must also add the search path to the bottom window "\${PROJECT\_ROOT}/../"

**Watch Variables**

- y1 - Accumulated results (angles in radians) from C routine
- y2 - Accumulated results (angles in radians) from asm routine
- pass - pass counter
- fail - fail counter

## 5.34 CLA Primes (cla\_prime\_cpu01)

In this example, Task 1 of the CLA calculates the set of prime numbers up to a length defined by the user.

**Memory Allocation**

- CLA1 Data RAM 0 (RAMLS0)
  - out - Set of primes

#### Watch Variables

- out - Set of primes
- pass - pass counter
- fail - fail counter

## 5.35 CLA Shell Sort (cla\_shellsort\_cpu01)

In this example, Task 1 will perform the shell sort iteratively. Task 2 will do the same with mswapf intrinsic and Task 3 will also implement an in-place sort on an integer vector

#### Memory Allocation

- CLA1 Data RAM 1 (RAML2)
  - vector3 - Input/Output to task 3(in-place sorting)
- CLA1 to CPU Message RAM
  - vector1\_sorted - Sorted output Task 1
  - vector2\_sorted - Sorted output Task 2
- CPU to CLA1 Message RAM
  - vector1 - Input vector to task 1
  - vector2 - Input vector to task 2

#### Watch Variables

- vector3 - Input/Output to task 3(in-place sorting)
- vector1\_sorted - Sorted output Task 1
- vector2\_sorted - Sorted output Task 2
- vector1 - Input vector to task 1
- vector2 - Input vector to task 2
- pass - pass counter
- fail - fail counter

## 5.36 CLA Square Root (cla\_sqrt\_cpu01)

In this example, Task 1 calculates the square root of a number using multiple iterations of the Newton-Raphson approximation

#### Memory Allocation

- CLA1 to CPU Message RAM
  - fResult -  $\sqrt{fVal}$
- CPU to CLA1 Message RAM
  - fVal - Input value

**Watch Variables**

- fVal - Input value
- fResult -  $\sqrt{fVal}$
- pass - pass counter
- fail - fail counter

## 5.37 CLA Vector Inverse (cla\_inverse\_cpu01)

In this example, Task 1 calculates the element-wise inverse of a vector while Task 2 calculates the element-wise inverse of a vector and saves the result in the same vector

**Memory Allocation**

- CLA1 Data RAM 1 (RAML2)
  - vector2 - Input/Output vector for task 2
- CLA1 to CPU Message RAM
  - vector1\_inverse - Inverse of input vector1
- CPU to CLA1 Message RAM
  - vector1 - Input vector to task 1

**Watch Variables**

- vector1 - Input vector to task 1
- vector1\_inverse - Inverse of input vector1
- vector2 - Input/Output vector for task 2
- pass - pass counter
- fail - fail counter

## 5.38 CLA Vector Maximum (cla\_vmaxfloat\_cpu01)

Task 1 calculates the vector max moving backward through the array.

Task 2 calculates the vector max moving forward through the array.

Task 3 calculates the vector max using the ternary operator.

Task 4 calculates the vector max using min/max intrinsics.

**Memory Allocation**

- CLA1 to CPU Message RAM
  - max1 - Maximum value in vector 1
  - index1 - Index of the maximum value in vector 1
  - max2 - Maximum value in vector 2
  - index2 - Index of the maximum value in vector 2

- max3 - Maximum value in vector 3
- index3 - Index of the maximum value in vector 3
- max4 - Maximum value in vector 4
- min4 - Minimum value in vector 4
- CPU to CLA1 Message RAM
  - vector1 - Input vector to task 1
  - vector2 - Input vector to task 2
  - vector3 - Input vector to task 3
  - vector4 - Input vector to task 4
  - length1 - Length of vector 1
  - length2 - Length of vector 2

#### Watch Variables

- vector1 - Input vector to task 1
- vector2 - Input vector to task 2
- vector3 - Input vector to task 3
- vector4 - Input vector to task 4
- max1 - Maximum value in vector 1
- index1 - Index of the maximum value in vector 1
- max2 - Maximum value in vector 2
- index2 - Index of the maximum value in vector 2
- max3 - Maximum value in vector 3
- index3 - Index of the maximum value in vector 3
- max4 - Maximum value in vector 4
- min4 - Minimum value in vector 4
- pass - pass counter
- fail - fail counter

## 5.39 CLA Vector Minimum (cla\_vminfloat\_cpu01)

Task 1 calculates the vector min moving backward through the array.

Task 2 calculates the vector min moving forward through the array.

Task 3 calculates the vector min using the ternary operator.

#### Memory Allocation

- CLA1 to CPU Message RAM
  - min1 - Minimum value in vector 1
  - index1 - Index of the minimum value in vector 1
  - min2 - Minimum value in vector 2
  - index2 - Index of the minimum value in vector 2
  - min3 - Minimum value in vector 3

- index3 - Index of the minimum value in vector 3
- CPU to CLA1 Message RAM
  - vector1 - Input vector to task 1
  - vector2 - Input vector to task 2
  - vector3 - Input vector to task 3
  - length1 - Length of vector 1
  - length2 - Length of vector 2
  - length3 - Length of vector 3

**Watch Variables**

- vector1 - Input vector to task 1
- vector2 - Input vector to task 2
- vector3 - Input vector to task 3
- min - Minimum value in vector 1
- index1 - Index of the minimum value in vector 1
- min2 - Minimum value in vector 2
- index2 - Index of the minimum value in vector 2
- min3 - Minimum value in vector 3
- index3 - Index of the minimum value in vector 3
- pass - pass counter
- fail - fail counter

## 5.40 CMPSS Asynchronous Trip

This example enables the CMPSS1 COMPH comparator and feeds the asynch CTRIPOUTH to GPIO14/OUTPUTXBAR3 pin and CTRIPH to GPIO15/EPWM8B

The COMPH inputs are:

- POS signal from CMPIN1P pin
- NEG signal from internal DACH

## 5.41 CMPSS Digital Filter

This example enables the CMPSS1 COMPH comparator and feeds the output through the digital filter to the GPIO14/OUTPUTXBAR3 pin.

The COMPH inputs are:

- POS signal from CMPIN1P pin
- NEG signal from internal DACH

## 5.42 CPU Timers

This example configures CPU Timer0, 1, and 2 and increments a counter each time the timer asserts an interrupt.

### Watch Variables

- CpuTimer0.InterruptCount
- CpuTimer1.InterruptCount
- CpuTimer2.InterruptCount

## 5.43 SafeCopyCode Reset (dcsm\_scc\_reset\_cpu01)

This example shows how to issue a reset using the SafeCopyCode (SCC) function. In the case of a vector fetch while the PC points to the SCC function, an SCCRESETn gets generated. In this example, a CPU Timer interrupt is enabled to cause this vector fetch.

### Note:

The CPU Timer used can be switched based on the value passed to IssueSCCReset(). Valid values include **CPUTIMER0**, **CPUTIMER1**, and **CPUTIMER2**.

## 5.44 DMA GSRAM Transfer (dma\_gsram\_transfer)

This example uses one DMA channel to transfer data from a buffer in RAMGS0 to a buffer in RAMGS1. The example sets the DMA channel PERINTFRC bit repeatedly until the transfer of 16 bursts (where each burst is 8 16-bit words) has been completed. When the whole transfer is complete, it will trigger the DMA interrupt.

### Watch Variables

- **sdata** - Data to send
- **rdata** - Received data

## 5.45 ECAP APWM Example

This program sets up the eCAP pins in the APWM mode. This program runs at 200 MHz SYSCLK assuming a 20 MHz OSCCLK.

eCAP1 will come out on the GPIO5 pin This pin is configured to vary between frequencies using the shadow registers to load the next period/compare values

## 5.46 ECAP Capture PWM Example

This example configures ePWM3A for:



- Up count
- Period starts at 2 and goes up to 1000
- Toggle output on PRD

eCAP1 is configured to capture the time between rising and falling edge of the ePWM3A output.

#### External Connections

- eCAP1 is on GPIO19
- ePWM3A is on GPIO4
- Connect GPIO4 to GPIO19.

#### Watch Variables

- **ECap1PassCount** - Successful captures
- **ECap1IntCount** - Interrupt counts

## 5.47 ECAP Capture PWM XBAR Example

This example configures ePWM3A for:

- Up count
- Set on CMPA, Clear on CMPB
- CMP and PRD values are cycled throughout the example

eCAP1 is configured to monitor the pulse width and effective period of ePWM3A through internal routing via the Input X-Bar

#### External Connections

- No external connections are required

#### Watch Variables

- **ECap1PassCount** - Successful captures
- **ECap1IntCount** - Interrupt counts

## 5.48 EMIF ASYNC module (emif1\_16bit\_asram)

This example configures EMIF1 in 16bit ASYNC mode This example uses CS2 as chip enable.

#### Watch Variables:

- **TEST\_STATUS** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **ErrCount** - Error counter

## 5.49 EMIF1 SDRAM Module (emif1\_16bit\_sdram\_dma)

This example configures EMIF1 in 16bit SDRAM mode and uses CS0 (SDRAM) as chip enable. It will first write to an array in the SDRAM and then read it back using the DMA for both operations. The buffer in SDRAM will be placed in the .farbss memory on account of the fact that its assigned the attribute "far" indicating it lies beyond the 22-bit program address space. The compiler will take care to avoid using instructions such as PREAD, which uses the Program Read Bus, or addressing modes restricted to the lower 22-bit space when accessing data with the attribute "far"

**Note:**

The memory space beyond 22-bits must be treated as data space for load/store operations only. The user is cautioned against using this space for either instructions or working memory.

Example has been tested using Micron 48LC32M16A2 "P -75 C" part.

**Watch Variables:**

- **TEST\_STATUS** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **ErrCount** - Error counter

## 5.50 EMIF1 SDRAM Module (emif1\_16bit\_sdram\_far)

This example configures EMIF1 in 16bit SDRAM mode and uses CS0 (SDRAM) as chip enable. It will first write to an array in the SDRAM and then read it back using the FPU function, mem\_cpy\_fast\_far(), for both operations. The buffer in SDRAM will be placed in the .farbss memory on account of the fact that its assigned the attribute "far" indicating it lies beyond the 22-bit program address space. The compiler will take care to avoid using instructions such as PREAD, which uses the Program Read Bus, or addressing modes restricted to the lower 22-bit space when accessing data with the attribute "far"

**Note:**

The memory space beyond 22-bits must be treated as data space for load/store operations only. The user is cautioned against using this space for either instructions or working memory.

**Watch Variables:**

- **TEST\_STATUS** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **ErrCount** - Error counter

## 5.51 EMIF1 SDRAM Module (emif1\_32bit\_sdram)

This example configures EMIF1 in 32bit SDRAM mode. This example uses CS0 (SDRAM) as chip enable.

**Watch Variables:**

- **TEST\_STATUS** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **ErrCount** - Error counter

## 5.52 Empty Project

This is an empty project for bit field development

**Note:**

If using a Launchpad, use the Launchpad build configurations.

## 5.53 EPWM dead band control (epwm\_deadband)

During the test, monitor ePWM1, ePWM2, and/or ePWM3 outputs on a scope.

- ePWM1A is on GPIO0
- ePWM1B is on GPIO1
- ePWM2A is on GPIO2
- ePWM2B is on GPIO3
- ePWM3A is on GPIO4
- ePWM3B is on GPIO5

This example configures ePWM1, ePWM2 and ePWM3 for:

- Count up/down
- Deadband

3 Examples are included:

- ePWM1: Active low PWMs
- ePWM2: Active low complementary PWMs
- ePWM3: Active high complementary PWMs

Each ePWM is configured to interrupt on the 3rd zero event. When this happens the deadband is modified such that  $0 \leq DB \leq DB\_MAX$ . That is, the deadband will move up and down between 0 and the maximum value.

View the EPWM1A/B, EPWM2A/B and EPWM3A/B waveforms via an oscilloscope

## 5.54 EPWM Trip Zone Module (epwm\_trip\_zone)

This example configures ePWM1 and ePWM2 as follows

- ePWM1 has TZ1 as one shot trip source

- ePWM2 has TZ1 as cycle by cycle trip source

Initially tie TZ1 high. During the test, monitor ePWM1 or ePWM2 outputs on a scope. Pull TZ1 low to see the effect.

#### **External Connections**

- EPWM1A is on GPIO0
- EPWM2A is on GPIO2
- TZ1 is on GPIO12

This example also makes use of the Input X-BAR. GPIO12 (the external trigger) is routed to the input X\_BAR, from which it is routed to TZ1.

The TZ-Event is defined such that EPWM1A will undergo a One-Shot Trip and EPWM2A will undergo a Cycle-By-Cycle Trip.

## **5.55 EPWM Action Qualifier (epwm\_up\_aq)**

This example configures ePWM1, ePWM2, ePWM3 to produce an waveform with independent modulation on EPWMxA and EPWMxB.

The compare values CMPA and CMPB are modified within the ePWM's ISR.

The TB counter is in up count mode for this example.

View the EPWM1A/B(PA0\_GPIO0 & PA1\_GPIO1), EPWM2A/B(PA2\_GPIO2 & PA3\_GPIO3) and EPWM3A/B(PA4\_GPIO4 & PA5\_GPIO5) waveforms via an oscilloscope.

## **5.56 EPWM Action Qualifier (epwm\_updown\_aq)**

This example configures ePWM1, ePWM2, ePWM3 to produce an waveform with independent modulation on EPWMxA and EPWMxB.

The compare values CMPA and CMPB are modified within the ePWM's ISR.

The TB counter is in up/down count mode for this example.

View the EPWM1A/B(PA0\_GPIO0 & PA1\_GPIO1), EPWM2A/B(PA2\_GPIO2 & PA3\_GPIO3) and EPWM3A/B(PA4\_GPIO4 & PA5\_GPIO5) waveforms via an oscilloscope.

## **5.57 Frequency measurement using EQEP peripheral (Eqep\_freqcal)**

This test will calculate the frequency and period of an input signal using eQEP module.

EPWM1A is configured to generate a frequency of 5 kHz.

**See also:**

Section on Frequency Calculation for more details on the frequency calculation performed in this example.

In addition to the main example file, the following files must be included in this project:

- **Example\_freqcal.c** - includes all eQEP functions
- **Example\_EPwmSetup.c** - sets up EPWM1A for use with this example
- **Example\_freqcal.h** - includes initialization values for frequency structure.

The configuration for this example is as follows

- Maximum frequency is configured to 10KHz (BaseFreq)
- Minimum frequency is assumed at 50Hz for capture pre-scalar selection

**SPEED\_FR:** High Frequency Measurement is obtained by counting the external input pulses for 10ms (unit timer set to 100Hz).

$$SPEED\_FR = \frac{Count\ Delta}{10ms}$$

**SPEED\_PR:** Low Frequency Measurement is obtained by measuring time period of input edges. Time measurement is averaged over 64 edges for better results and capture unit performs the time measurement using pre-scaled SYSCLK.

Note that pre-scalar for capture unit clock is selected such that capture timer does not overflow at the required minimum frequency. This example runs forever until the user stops it.

**External Connections**

- Connect GPIO20/EQEP1A to GPIO0/EPWM1A

**Watch Variables**

- **freq.freqhz\_fr** - Frequency measurement using position counter/unit time out
- **freq.freqhz\_pr** - Frequency measurement using capture unit

## 5.58 EQEP Speed and Position Measurement (Eqep\_pos\_speed)

This example provides position measurement, speed measurement using the capture unit, and speed measurement using unit time out. This example uses the IQMath library. It is used merely to simplify high-precision calculations. The example requires the following hardware connections from EPWM1 and GPIO pins (simulating QEP sensor) to QEP peripheral.

- GPIO20/eQEP1A <- GPIO0/ePWM1A (simulates eQEP Phase A signal)
- GPIO21/eQEP1B <- GPIO1/ePWM1B (simulates eQEP Phase B signal)
- GPIO23/eQEP1I <- GPIO4 (simulates eQEP Index Signal)

See DESCRIPTION in Example\_posspeed.c for more details on the calculations performed in this example. In addition to this file, the following files must be included in this project:

- Example\_posspeed.c - includes all eQEP functions
- Example\_EPwmSetup.c - sets up ePWM1A and ePWM1B as simulated QA and QB encoder signals
- Example\_posspeed.h - includes initialization values for pos and speed structure

Note:

- Maximum speed is configured to 6000rpm(BaseRpm)
- Minimum speed is assumed at 10rpm for capture pre-scalar selection
- Pole pair is configured to 2 (pole\_pairs)
- QEP Encoder resolution is configured to 4000counts/revolution (mech\_scaler)
- Which means:  $4000/4 = 1000$  line/revolution quadrature encoder (simulated by EPWM1)
- EPWM1 (simulating QEP encoder signals) is configured for 5kHz frequency or 300 rpm ( $=4*5000 \text{ cnts/sec} * 60 \text{ sec/min}/4000 \text{ cnts/rev}$ )
- SPEEDRPM\_FR: High Speed Measurement is obtained by counting the QEP input pulses for 10ms (unit timer set to 100Hz).
- $\text{SPEEDRPM\_FR} = (\text{Position Delta}/10\text{ms}) * 60 \text{ rpm}$
- SPEEDRPM\_PR: Low Speed Measurement is obtained by measuring time period of QEP edges. Time measurement is averaged over 64edges for better results and capture unit performs the time measurement using pre-scaled SYSCLK
- Pre-scalar for capture unit clock is selected such that capture timer does not overflow at the required minimum RPM speed.

#### External Connections

- Connect eQEP1A(GPIO20) to ePWM1A(GPIO0)(simulates eQEP Phase A signal)
- Connect eQEP1B(GPIO21) to ePWM1B(GPIO1)(simulates eQEP Phase B signal)
- Connect eQEP1I(GPIO23) to GPIO4 (simulates eQEP Index Signal)

#### Watch Variables

- qep\_posspeed.SpeedRpm\_fr - Speed meas. in rpm using QEP position counter
- qep\_posspeed.SpeedRpm\_pr - Speed meas. in rpm using capture unit
- qep\_posspeed.theta\_mech - Motor mechanical angle (Q15)
- qep\_posspeed.theta\_elec - Motor electrical angle (Q15)

## 5.59 External Interrupts (ExternalInterrupt)

This program sets up GPIO0 as XINT1 and GPIO1 as XINT2. Two other GPIO signals are used to trigger the interrupt (GPIO30 triggers XINT1 and GPIO31 triggers XINT2). The user is required to externally connect these signals for the program to work properly.

XINT1 input is synced to SYSCLKOUT.

XINT2 has a long qualification - 6 samples at  $510*SYSCLKOUT$  each.

GPIO34 will go high outside of the interrupts and low within the interrupts. This signal can be monitored on a scope.

Each interrupt is fired in sequence - XINT1 first and then XINT2

#### External Connections

- Connect GPIO30 to GPIO0. GPIO0 will be assigned to XINT1
- Connect GPIO31 to GPIO1. GPIO1 will be assigned to XINT2

Monitor GPIO34 with an oscilloscope. GPIO34 will be high outside of the ISRs and low within each ISR.

#### Watch Variables

- Xint1Count for the number of times through XINT1 interrupt
- Xint2Count for the number of times through XINT2 interrupt
- LoopCount for the number of times through the idle loop

## 5.60 External Interrupts Latency (ExternalInterruptLatency)

This program triggers external interrupts when GPIO16 is pulled low. GPIO10 can be used to do this, or an external signal generator can be connected. GPIO19 will toggle when the interrupt is entered. A global variable (isrType) can be modified at run time to switch between C and assembly ISRs running out of RAM (0-wait state) or flash (3-wait states).

Measured delays from GPIO16 falling to GPIO19 rising at SYSCLK=200 MHz:

ISR Delay Cycles

---

ASM/RAM 125ns 25

ASM/Flash 135ns 27

C/RAM 145ns 29

C/Flash 155ns 31

Some of the delay is due to the rise and fall times of the IOs. To see this, reduce SYSCLK to less than 75 MHz. Under that condition, the ASM/RAM delay is 23 cycles, which is close to the theoretical minimum latency of 16 cycles.

The extra delay in the flash ISRs is due to the wait states. The extra delay in the C ISRs is due to two CLRC instructions that are generated to make sure the address and overflow modes match the normal C environment. With optimization enabled (-O1 and above), these instructions are removed.

## 5.61 Flash Programming Solution SCI for F2807x

In this example, we set up a UART connection with a host using SCI, receive commands for CPU1 to perform which then sends ACK, NAK, and status packets back to the host after receiving and completing the tasks. Each command either expects no data from the command packet or specific data relative to the command.

In this example, we set up a UART connection with a host using SCI, receive an application for CPU01 in -sci8 ascii format to run on the device and program it into Flash.

## 5.62 Flash Programming

This example demonstrates F021 Flash API usage to program Flash Bank 0 on F2807x.

## 5.63 Flash Programming with DCSM

This example programs secure memory

## 5.64 Device GPIO Setup (GpioSetup)

Configures the F2807x GPIO into two different configurations This code is verbose to illustrate how the GPIO could be setup. In a real application, lines of code can be combined for improved code size and efficiency.

This example only sets-up the GPIO. Nothing is actually done with the pins after setup.

**In general:**

- All pullup resistors are enabled. For ePWMs this may not be desired.
- Input qual for communication ports (eCAN, SPI, SCI, I2C) is asynchronous
- Input qual for Trip pins (TZ) is asynchronous
- Input qual for eCAP and eQEP signals is synch to SYSCLKOUT
- Input qual for some I/O's and \_\_interrupts may have a sampling window

## 5.65 GPIO toggle test program (GpioToggle)

Three different examples are included. Select the example (data, set/clear or toggle) to execute before compiling using the define statements found at the top of the code.

Toggle all of the GPIO PORT pins

The pins can be observed using Oscilloscope.

## 5.66 HRPWM Dead-Band Example (hrpwm\_deadband\_sfo\_v8)

This program requires the F2807x header files, including the following files required for this example: SFO\_V8.h and SFO\_v8\_fpu\_lib\_build\_c28.lib

Monitor ePWM1 & ePWM2 A/B pins on an oscilloscope



**DESCRIPTION:**

This example sweeps the ePWM frequency while maintaining a duty cycle of ~50% in ePWM up-down count mode. In addition, this example demonstrates ePWM high-resolution dead-band (HRDB) capabilities utilizing the HRPWM extension of the respective ePWM module.

This example calls the following TI's micro-edge positioner (MEP) Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

updates MEP\_ScaleFactor dynamically when HRPWM is in use updates HRMSTEP register (exists only in EPwm1Regs register space) which updates MEP\_ScaleFactor value

- returns 0 if not complete for the specified channel
- returns 1 when complete for the specified channel
- returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)

This example is intended to demonstrate the HRPWM capability to control the dead-band falling edge delay (FED) and rising edge delay (RED).

ePWM1 and ePWM2 A/B channels will have fine edge movement due to HRPWM control.

=====

NOTE: For more information on using the SFO software library, see the F2807x High-Resolution Pulse Width Modulator (HRPWM) Chapter in the Technical Reference Manual.

=====

To load and run this example:

1. Run this example at maximum SYSCLKOUT
2. Activate Real time mode
3. Run the "AddWatchWindowVars\_HRPWM.js" script from the scripting console (View -> Scripting Console) to populate watch window by using the command: loadJSFile <path\_to\_JS\_file>/AddWatchWindowVars\_HRPWM.js
4. Run the code
5. Watch ePWM A / B channel waveforms on an oscilloscope
6. In the watch window: Change the variable InputPeriodInc to increase or decrease the frequency sweep rate. Setting InputPeriodInc = 0 will stop the sweep while allowing other variables to be manipulated and updated in real time.
7. In the watch window: Change values for registers EPwm1Regs.DBRED/EPwm2Regs.DBRED to see changes in rising edge dead-bands for ePWM1 and ePWM2 respectively. Alternatively, changing values for registers EPwm1Regs.DBFED/EPwm2Regs.DBFED will change falling edge dead-bands for ePWM1 and ePWM2. Changing these values will alter the duty cycle percentage for their respective ePWM modules. !!NOTE!!\*\* - DBRED/DBFED values should never be set below 4. Do not set these values to 0, 1, 2 or 3.
8. In the watch window: Change values for registers EPwm1Regs.DBREDHR.bit.DBREDHR/EPwm2Regs.DBFEDHR.bit.DBFEDHR to increase or decrease number of resolvable high-resolution steps at the dead-band rising edge. Alternatively, change values for EPwm1Regs.DBFEDHR.bit.DBFEDHR/EPwm2Regs.DBFEDHR.bit.DBFEDHR to change the number of resolvable steps at the dead-band falling edge for ePWM1 and ePWM2 respectively.

## 5.67 HRPWM SFO Test (hrpwm\_duty\_sfo\_v8)

This program requires the F2807x header files, which include the following files required for this example: SFO\_V8.h and SFO\_TI\_Build\_V8\_FPU.lib

Monitor ePWM1-ePWM8 A/B pins on an oscilloscope. DESCRIPTION:

This example modifies the MEP control registers to show edge displacement for high-resolution period with ePWM in Up-Down count mode due to the HRPWM control extension of the respective ePWM module.

This example calls the following TI's MEP Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

updates MEP\_ScaleFactor dynamically when HRPWM is in use updates HRMSTEP register (exists only in EPwm1Regs register space) with MEP\_ScaleFactor value

- returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)
- returns 1 when complete for the specified channel
- returns 0 if not complete for the specified channel

This example is intended to explain the HRPWM capabilities. The code can be optimized for code efficiency. Refer to TI's Digital power application examples and TI Digital Power Supply software libraries for details.

All ePWM1 -7 all channels will have fine edge movement due to the HRPWM logic

```
=====
NOTE:  For more information on using the SFO software library, see the
F2807x High-Resolution Pulse Width Modulator (HRPWM) Reference Guide
=====
```

To load and run this example:

1. Run this example at maximum SYSCLKOUT
2. Activate Real time mode
3. Run the code
4. Watch ePWM A / B channel waveforms on a Oscilloscope
5. In the watch window: Set the variable UpdateFine = 1 to observe the ePWMxA & ePWMxB output with HRPWM capabilities (default) Observe the period/frequency of the waveform changes in fine MEP steps
6. In the watch window: Change the variable UpdateFine to 0, to observe the ePWMxA & ePWMxB output without HRPWM capabilities Observe the period/frequency of the waveform changes in coarse SYSCLKOUT cycle steps.

## 5.68 HRPWM SFO Test (hrpwm\_prdupdown\_sfo\_v8)

This program requires the F2807x header files, which include the following files required for this example: SFO\_V8.h and SFO\_TI\_Build\_V8\_FPU.lib

Monitor ePWM1-ePWM8 A/B pins on an oscilloscope. DESCRIPTION:

This example modifies the MEP control registers to show edge displacement for high-resolution period with ePWM in Up-Down count mode due to the HRPWM control extension of the respective ePWM module.

This example calls the following TI's MEP Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

updates MEP\_ScaleFactor dynamically when HRPWM is in use updates HRMSTEP register (exists only in EPwm1Regs register space) with MEP\_ScaleFactor value

- returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)
- returns 1 when complete for the specified channel
- returns 0 if not complete for the specified channel

This example is intended to explain the HRPWM capabilities. The code can be optimized for code efficiency. Refer to TI's Digital power application examples and TI Digital Power Supply software libraries for details.

All ePWM1-8 A/B channels will have fine edge movement due to the HRPWM logic

=====

NOTE: For more information on using the SFO software library, see the F2807x High-Resolution Pulse Width Modulator (HRPWM) Reference Guide

=====

To load and run this example:

1. Run this example at maximum SYSCLKOUT
2. Activate Real time mode
3. Run the code
4. Watch ePWM A / B channel waveforms on an Oscilloscope
5. In the watch window: Set the variable UpdateFine = 1 to observe the ePWMxA & ePWMxB output with HRPWM capabilities (default) Observe the period/frequency of the waveform changes in fine MEP steps
6. In the watch window: Change the variable UpdateFine to 0, to observe the ePWMxA & ePWMxB output without HRPWM capabilities Observe the period/frequency of the waveform changes in coarse SYSCLKOUT cycle steps.

## 5.69 HRPWM Slider Test (hrpwm\_slider)

This example modifies the MEP control registers to show edge displacement due to HRPWM control blocks of the respective EPwm module channel A and B will have fine edge movement due to HRPWM logic. Load the F2807x\_HRPWM\_slider.gel file. Select the HRPWM\_eval from the GEL menu. A FineDuty slider graphics will show up in CCS. Load the program and run. Use the Slider to and observe the EPwm edge displacement for each slider step change. This explains the MEP control on the EPwmxA channels.

Monitor ePWM1-ePWM8 A/B pins on an oscilloscope.

## 5.70 I2C EEPROM Example (i2c\_eeprom)

This program will write 1-14 words to EEPROM and read them back. The data written and the EEPROM address written to are contained in the message structure, I2cMsgOut1. The data read back will be contained in the message structure I2cMsgIn1.

### External Connections

- This program requires an external I2C EEPROM connected to the I2C bus at address 0x50.

## 5.71 Low Power Modes: Halt Mode and Wakeup (lpm\_haltwake)

This example puts the device into HALT mode. If the lowest possible current consumption in HALT mode is desired, the JTAG connector must be removed from the device board while the device is in HALT mode.

The example then wakes up the device from HALT using GPIO10. GPIO10 wakes the device from HALT mode when a high-to-low signal is detected on the pin. This pin must be pulsed by an external agent for wakeup.

The wakeup process begins as soon as GPIO10 is held low for the time indicated in the device datasheet. After the device wakes up, GPIO11 can be observed to go low.

GPIO10 is configured as the LPM wakeup pin to trigger a WAKEINT interrupt upon detection of a low pulse. Initially, pull GPIO10 high externally.

To observe when device wakes from HALT mode, monitor GPIO11 with an oscilloscope (Cleared to 0 in WAKEINT ISR)

## 5.72 Low Power Modes: HIB Mode and Wakeup (lpm\_hibwake)

This example puts the device into HIB mode. This is the lowest possible power configuration of the device. To realize the lowest possible current consumption in HIB mode, The JTAG connector should be removed from the device board while the device is in HIB mode.

This example will configure the IoRestore Address, Memory Retention, and then enter HIB mode. After wake-up, the example will reconfigure the GPIOs, disable IO isolation and then re-enter main.

GPIOHIBWAKEn(GPIO41) wakes the device from HIB mode when a high->low->high signal is detected on the pin. This pin must be pulsed by an external agent for wakeup.

GPIO10 and GPIO11 are configured as outputs for status indicators to the outside world. Connect GPIO10 to an external agent to notify that the device has entered HIB mode. View both GPIO10 and GPIO11 on an oscilloscope to view the device status.

GPIO10 = 1, GPIO11 = 1: Device is in HIB mode

GPIO10 = 1, GPIO11 = 0: Code execution is in IoRestore, IO isolation has been disabled

GPIO10 = 0, GPIO11 = 0: Code execution is in main.

The wakeup process begins after GPIOHIBWAKEn is held low for the time indicated in the device datasheet and then brought high again. After the device wakes up, GPIO11 can be observed to go low in IoRestore and GPIO10 will go low when the program has re-entered main.

If M0M1 memory retention is not desired, set RETAINM0M1 to 0.

## 5.73 Low Power Modes: Device Idle Mode and Wakeup(lpm\_idlewake)

This example puts the device into IDLE mode then wakes up the device from IDLE using XINT1 which triggers on a falling edge from GPIO0.

This pin must be pulled from high to low by an external agent for wakeup. GPIO0 is configured as an XINT1 pin to trigger an XINT1 interrupt upon detection of a falling edge.

Initially, pull GPIO0 high externally. To wake device from idle mode by triggering an XINT1 interrupt, pull GPIO0 low (falling edge)

### External Connections

- To observe the device wakeup from IDLE mode, monitor GPIO1 with an oscilloscope, which goes high in the XINT\_1\_ISR.

## 5.74 Low Power Modes: Device Standby Mode and Wakeup(lpm\_standbywake)

This example puts the device into STANDBY mode. If the lowest possible current consumption in STANDBY mode is desired, the JTAG connector must be removed from the device board while the device is in STANDBY mode.

GPIO0 is configured as the LPM wakeup pin to trigger a WAKEINT interrupt upon detection of a low pulse. Initially, pull GPIO0 high externally. To wake device from standby mode, pull GPIO0 low for at least (2+QUALSTDBY) OSCLKS, then pull it high again.

The example then wakes up the device from STANDBY using GPIO0. GPIO0 wakes the device from STANDBY mode when a low pulse (signal goes high->low->high) is detected on the pin. This pin must be pulsed by an external agent for wakeup.

As soon as GPIO0 goes high again after the pulse, the device should wake up, and GPIO1 can be observed to toggle.

### External Connections

- To observe when device wakes from STANDBY mode, monitor GPIO1 with an oscilloscope (set to 1 in WAKEINT\_ISR)

## 5.75 McBSP Loopback (mcbbsp\_loopback)

Three different serial word sizes can be tested. Before compiling this project, select the serial word size of 8, 16 or 32 by using the #define statements at the beginning of the code.

This example does not use interrupts. Instead, a polling method is used to check the receive data. The incoming data is checked for accuracy. If an error is found the error() function is called and execution stops.

This program will execute until terminated by the user.

### 8-bit word example:

The sent data looks like this:

00 01 02 03 04 05 06 07 .... FE FF

### 16-bit word example:

The sent data looks like this:

0000 0001 0002 0003 0004 0005 0006 0007 .... FFFE FFFF

### 32-bit word example:

The sent data looks like this:

FFFF0000 FFFE0001 FFFD0002 .... 0000FFFF

### Watch Variables:

- sdata1 - Sent data word: 8 or 16-bit or low half of 32-bit
- sdata2 - Sent data word: upper half of 32-bit
- rdata1 - Received data word: 8 or 16-bit or low half of 32-bit
- rdata2 - Received data word: upper half of 32-bit
- rdata1\_point - Tracks last position in receive stream 1 for error checking
- rdata2\_point - Tracks last position in receive stream 2 for error checking

### Note:

sdata2 and rdata2 are not used for 8-bit or 16-bit word size

## 5.76 McBSP Loopback with DMA (mcbbsp\_loopback\_dma)

This program is a McBSP example that uses the internal loopback of the peripheral and utilizes the DMA to transfer data from one buffer to the McBSP, and then from the McBSP to another buffer.

Initially, sdata[] is filled with values from 0x0000- 0x007F. The DMA moves the values in sdata[] one by one to the DXRx registers of the McBSP. These values are transmitted and subsequently received by the McBSP. Then, the DMA moves each data value to rdata[] as it is received by the McBSP.

The sent data buffer will alternate between:

0000 0001 0002 0003 0004 0005 .... 007F

and

FFFF FFFE FFFD FFFC FFFB FFFA ....

Three different McBSP serial word sizes can be tested. Before compiling this project, select the serial word size of 8, 16 or 32 by using the #define statements at the beginning of the code.

This example uses DMA channel 1 and 2 interrupts. The incoming data is checked for accuracy. If an error is found the error() function is called and execution stops.

By default for the McBSP examples, the McBSP sample rate generator (SRG) input clock frequency is LSPCLK (80E6/4) assuming SYSCLKOUT = 80 MHz.

This example will execute until terminated by the user.

**Watch Variables:**

- sdata - Sent data buffer
- rdata - Received data buffer

## 5.77 McBSP Loopback with Interrupts (mcbbsp\_loopback\_interrupts)

This program is a McBSP example that uses the internal loopback of the peripheral. Both Rx and Tx interrupts are enabled.

Incrementing values from 0x0000 to 0x00FF are being sent and received.

This pattern is repeated forever.

By default for the McBSP examples, the McBSP sample rate generator (SRG) input clock frequency is LSPCLK 80E6/4.

**Watch Variables:**

- sdata - Sent data word
- rdata - Received data word
- rdata\_point - Tracks last position in receive stream for error checking

## 5.78 McBSP Loopback using SPI mode (mcbbsp\_spi\_loopback)

This program will execute and transmit words until terminated by the user. SPI master mode transfer of 32-bit word size with digital loopback enabled.

**McBSP Signals - SPI equivalent**

- MCLKX - SPICLK
- MFSX - SPISTE
- MDX - SPISIMO
- MDR - SPISOMI (not used for this example)

By default for the McBSP examples, the McBSP sample rate generator (SRG) input clock frequency is LSPCLK 80E6/4.

**Watch Variables:**

- sdata1 - Sent data word(1)
- sdata2 - Sent data word(2)
- rdata1 - Received data word(1)
- rdata2 - Received data word(2)

## 5.79 SCI Echoback (sci\_echoback)

This test receives and echo-backs data through the SCI-A port.

The PC application 'hyperterminal' or another terminal such as 'putty' can be used to view the data from the SCI and to send information to the SCI. Characters received by the SCI port are sent back to the host.

**Running the Application**

1. Configure hyperterminal or another terminal such as putty:

For hyperterminal you can use the included hyperterminal configuration file SCI\_96.ht. To load this configuration in hyperterminal

1. Open hyperterminal
2. Go to file->open
3. Browse to the location of the project and select the SCI\_96.ht file.

Check the COM port. The configuration file is currently setup for COM1. If this is not correct, disconnect (Call->Disconnect) Open the File-Properties dialogue and select the correct COM port.

1. Connect hyperterminal Call->Call and then start the 2807x SCI echoback program execution.
2. The program will print out a greeting and then ask you to enter a character which it will echo back to hyperterminal.

**Note:**

If you are unable to open the .ht file, or you are using a different terminal, you can open a COM port with the following settings

- Find correct COM port
- Bits per second = 9600
- Data Bits = 8
- Parity = None
- Stop Bits = 1
- Hardware Control = None

**Watch Variables**

- LoopCount - the number of characters sent



**External Connections**

Connect the SCI-A port to a PC via a transceiver and cable.

- GPIO28 is SCI\_A-RXD (Connect to Pin3, PC-TX, of serial DB9 cable)
- GPIO29 is SCI\_A-TXD (Connect to Pin2, PC-RX, of serial DB9 cable)

## 5.80 SCI FIFO Digital Loop Back Test (sci\_looback)

This program uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required.

This test uses the loopback test mode of the SCI module to send characters starting with 0x00 through 0xFF. The test will send a character and then check the receive buffer for a correct match.

**Watch Variables**

- **LoopCount** - Number of characters sent
- **ErrorCount** - Number of errors detected
- **SendChar** - Character sent
- **ReceivedChar** - Character received

## 5.81 SCI Digital Loop Back with Interrupts (sci\_loopback\_interrupts)

This program uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required. Both interrupts and the SCI FIFOs are used.

A stream of data is sent and then compared to the received stream. The SCI-A sent data looks like this:

00 01

01 02

02 03

....

FE FF

FF 00

etc..

The pattern is repeated forever.

**Watch Variables**

- **sdataA** - Data being sent
- **rdataA** - Data received

- **rdata\_pointA** - Keep track of where we are in the data stream. This is used to check the incoming data

## 5.82 SDFM Filter Sync CLA

In this example, SDFM filter data is read by CLA in Cla1Task1. The SDFM configuration is shown below:

- SDFM1 used in this example
- MODE0 Input control mode selected
- Comparator settings
  - Sinc3 filter selected
  - OSR = 32
  - HLT = 0x7FFF (Higher threshold setting)
  - LLT = 0x0000 (Lower threshold setting)
- Data filter settings
  - All the 4 filter modules enabled
  - Sinc3 filter selected
  - OSR = 256
  - All the 4 filters are synchronized by using MFE (Master Filter enable bit)
  - Filter output represented in 16 bit format
  - In order to convert 25 bit Data filter into 16 bit format user needs to right shift by 9 bits for Sinc3 filter with OSR = 256
- Interrupt module settings for SDFM filter
  - All the 4 higher threshold comparator interrupts disabled
  - All the 4 lower threshold comparator interrupts disabled
  - All the 4 modulator failure interrupts disabled
  - All the 4 filter will generate interrupt when a new filter data is available

### External Connections

- SDFM\_PIN\_MUX\_OPTION1 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO16-GPIO31
- SDFM\_PIN\_MUX\_OPTION2 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO48-GPIO63
- SDFM\_PIN\_MUX\_OPTION3 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO122-GPIO137

### Watch Variables

- **Filter1\_Result** - Output of filter 1
- **Filter2\_Result** - Output of filter 2
- **Filter3\_Result** - Output of filter 3
- **Filter4\_Result** - Output of filter 4

## 5.83 SDFM Filter Sync CPU

In this example, SDFM filter data is read by CPU in SDFM ISR routine. The SDFM configuration is shown below:

- SDFM used in this example - SDFM1
- Input control mode selected - MODE0
- Comparator settings
  - Sinc3 filter selected
  - OSR = 32
  - HLT = 0x7FFF (Higher threshold setting)
  - LLT = 0x0000 (Lower threshold setting)
- Data filter settings
  - All the 4 filter modules enabled
  - Sinc3 filter selected
  - OSR = 256
  - All the 4 filters are synchronized by using MFE (Master Filter enable bit)
  - Filter output represented in 16 bit format
  - In order to convert 25 bit Data filter into 16 bit format user needs to right shift by 9 bits for Sinc3 filter with OSR = 256
- Interrupt module settings for SDFM filter
  - All the 4 higher threshold comparator interrupts disabled
  - All the 4 lower threshold comparator interrupts disabled
  - All the 4 modulator failure interrupts disabled
  - All the 4 filter will generate interrupt when a new filter data is available.

### External Connections

- SDFM\_PIN\_MUX\_OPTION1 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO16-GPIO31
- SDFM\_PIN\_MUX\_OPTION2 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO48-GPIO63
- SDFM\_PIN\_MUX\_OPTION3 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO122-GPIO137

### Watch Variables

- **Filter1\_Result** - Output of filter 1
- **Filter2\_Result** - Output of filter 2
- **Filter3\_Result** - Output of filter 3
- **Filter4\_Result** - Output of filter 4

## 5.84 SDFM Filter Sync DMA

In this example, SDFM filter data is read by DMA. The SDFM configuration is shown below:

- SDFM1 used in this example
- MODE0 Input control mode selected
- Comparator settings
  - Sinc3 filter selected
  - OSR = 32
  - HLT = 0x7FFF (Higher threshold setting)
  - LLT = 0x0000 (Lower threshold setting)
- Data filter settings
  - All the 4 filter modules enabled
  - Sinc3 filter selected
  - OSR = 256
  - All the 4 filters are synchronized by using MFE (Master Filter enable bit)
  - Filter output represented in 16 bit format
  - In order to convert 25 bit Data filter into 16 bit format user needs to right shift by 9 bits for Sinc3 filter with OSR = 256
- Interrupt module settings for SDFM filter
  - All the 4 higher threshold comparator interrupts disabled
  - All the 4 lower threshold comparator interrupts disabled
  - All the 4 modulator failure interrupts disabled
  - All the 4 filter will generate interrupt when a new filter data is available

### External Connections

- SDFM\_PIN\_MUX\_OPTION1 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO16-GPIO31
- SDFM\_PIN\_MUX\_OPTION2 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO48-GPIO63
- SDFM\_PIN\_MUX\_OPTION3 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4, SDx-C4) on GPIO122-GPIO137

### Watch Variables

- **Filter1\_Result** - Output of filter 1
- **Filter2\_Result** - Output of filter 2
- **Filter3\_Result** - Output of filter 3
- **Filter4\_Result** - Output of filter 4

## 5.85 SDFM PWM Sync

In this example, SDFM filter data is read by CPU in SDFM ISR routine. The SDFM configuration is shown below:

- SDFM1 is used in this example
- MODE0 Input control mode selected
- Comparator settings
  - Sinc3 filter selected
  - OSR = 32
  - HLT = 0x7FFF (Higher threshold setting)
  - LLT = 0x0000 (Lower threshold setting)

#### Data filter settings

- All the 4 filter modules enabled
- Sinc3 filter selected
- OSR = 256
- All the 4 filters are synchronized by using PWM (Master Filter enable bit)
- Filter output represented in 16 bit format
- In order to convert 25 bit Data filter into 16 bit format user needs to right shift by 9 bits for Sinc3 filter with OSR = 256

#### Interrupt module settings for SDFM filter

- All the 4 higher threshold comparator interrupts disabled
- All the 4 lower threshold comparator interrupts disabled
- All the 4 modulator failure interrupts disabled
- All the 4 filter will generate interrupt when a new filter data is available **External Connections**

SDFM\_PIN\_MUX\_OPTION1 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4,SDx-C4) on GPIO16-GPIO31

- SDFM\_PIN\_MUX\_OPTION2 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4,SDx-C4) on GPIO48-GPIO63
- SDFM\_PIN\_MUX\_OPTION3 Connect Sigma-Delta streams to (SDx-D1, SDx-C1 to SDx-D4,SDx-C4) on GPIO122-GPIO137

#### Watch Variables

- **Filter1\_Result** - Output of filter 1
- **Filter2\_Result** - Output of filter 2
- **Filter3\_Result** - Output of filter 3
- **Filter4\_Result** - Output of filter 4

## 5.86 SPI Digital Loop Back (spi\_loopback)

This program uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required. Interrupts are not used.

A stream of data is sent and then compared to the received stream. The sent data looks like this:

0000 0001 0002 0003 0004 0005 0006 0007 .... FFFE FFFF

This pattern is repeated forever.

#### Watch Variables

- **sdata** - sent data
- **rdata** - received data

## 5.87 SPI Digital Loop Back with DMA (spi\_loopback\_dma)

This program uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required. Both DMA Interrupts and the SPI FIFOs are used.

A stream of data is sent and then compared to the received stream. The sent data looks like this:

0000 0001

0001 0002

0002 0003

....

007E 007F

#### Watch Variables

- **sdata** - Data to send
- **rdata** - Received data
- **rdata\_point** - Used to keep track of the last position in the receive stream for error checking

## 5.88 SPI Digital Loop Back with Interrupts (spi\_loopback\_interrupts)

This program uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required. Both interrupts and the SPI FIFOs are used.

A stream of data is sent and then compared to the received stream. The sent data looks like this:

0000 0001

0001 0002

0002 0003

....

FFFE FFFF

FFFF 0000

etc..

This pattern is repeated forever.

**Watch Variables**

- **sdata** - Data to send
- **rdata** - Received data
- **rdata\_point** - Used to keep track of the last position in the receive stream for error checking

## 5.89 Software Prioritized Interrupts(**sw\_prioritized\_interrupts**)

For most applications, the hardware prioritizing of the the PIE module is sufficient. For applications that need custom prioritizing, this example illustrates how this can be done through software.

For more information on F2807x interrupt priorities, refer to the "Example ISR Priorities" Appendix in the Firmware Development Users guide

This program simulates interrupt conflicts by writing to the PIEIFR registers. This will cause multiple interrupt requests to come into the PIE block at the same time.

The interrupt service routines are software prioritized as per the table found in the F2807x\_SWPrioritizedIsrLevels.h file.

**Running the Application**

1. Before compiling you must set the Global and Group interrupt priorities in the F2807x\_SWPrioritizedIsrLevels.h file.
2. Select which test case you'd like to run with the #define CASE directive (1-9, default 1).
3. Compile the code, load, and run
4. At the end of each test there is a hard coded breakpoint (ESTOP0). When code stops at the breakpoint, examine the ISRTrace buffer to see the order in which the ISR's completed. All PIE interrupts will be added to the ISRTrace. The ISRTrace will consist of a list of hex values as shown:  
0x00wx <- PIE Group w interrupt x finished first  
0x00yz <- PIE Group y interrupt z finished next
5. If desired, set a new set of Global and Group interrupt priorities and repeat the test to see the change.

**Watch Variables**

- **ISRTrace** - Trace of ISR's in the order they complete. After each test, examine this buffer to determine if the ISR's completed in the order desired.

## 5.90 LED Blink Getting Started Program (**timed\_led\_blink**)

This example configures CPU Timer0 for a 500 msec period, and toggles the GPIO34 LED once per interrupt. For testing purposes, this example also increments a counter each time the timer asserts an interrupt.

**Watch Variables**

- CpuTimer0.InterruptCount

Monitor the GPIO34 LED blink on (for 500 msec) and off (for 500 msec) on the F2807x control card.

## 5.91 Profiling $\sin(x)$ using the TMU (tmu\_sinegen)

In this example, we will use TMU intrinsics to calculate the sine for a series of per-unit arguments (the argument is not represented in radians, it is normalized to the range -1.0 to 1.0). We will profile the execution time of the TMU versus the conventional implementation in the run-time support library

$$\forall x \in [-2\pi, 2\pi], x_{pu} = \frac{x}{2\pi} \quad y = \sin(x_{pu} * 2\pi)$$

Instead of using intrinsics, the compiler can implement most of the RTS trigonometric functions through TMU instructions if the option *fp\_mode* is set to *relaxed*. In this example, this option is left untouched; it defaults to the *strict* mode.

### Watch Variables

- timeRTS - time to run RTS routine
- timeTMU - time to run TMU routine
- pass - pass counter
- fail - fail counter

## 5.92 Watchdog

This example shows how to service the watchdog or generate a wakeup interrupt using the watchdog. By default the example will generate a Wake interrupt. To service the watchdog and not generate the interrupt uncomment the ServiceDog() line the the main for loop.



## 6 CPU 1 Driver Library Example Applications

These example applications show how to make use of various peripherals of a F2807x device. These applications are intended for demonstration and as a starting point for new applications.

All these examples are setup using the Code Composer Studio (CCS) "projectspec" format. Upon importing the "projectspec", the example project will be generated in the CCS workspace with copies of the source and header files included.

All these examples contain two build configurations which allow you to build each project to run from either RAM or Flash. To change how the project is built simply right click on the project and select "Build Configurations". Then, move over to set the active build configuration, either RAM or Flash.

**The examples provided are built for controlCARD compatibility. For LaunchPad use, some minor modifications may be required.**

If using a Launchpad, add a pre-defined symbol within the project properties called "\_LAUNCHXL\_F28377S". This is required to setup the proper device clocking.

All of these examples reside in the `driverlib/f2807x/examples/cpul` subdirectory of the C2000Ware package.

### 6.1 ADC PPB PWM trip (adc\_ppb\_pwm\_trip)

This example demonstrates EPWM tripping through ADC limit detection PPB block. ADCAINT1 is configured to periodically trigger the ADCA channel 2 post initial software forced trigger. The limit detection post-processing block(PPB) is configured and if the ADC results are outside of the defined range, the post-processing block will generate an ADCxEVTy event. This event is configured as EPWM trip source through configuring EPWM XBAR and corresponding EPWM's trip zone and digital compare sub-modules. The example showcases

- one-shot
- and direct tripping of PWMs through ADCAEVT1 source via Digital compare submodule.

The default limits are 0LSBs and 3600LSBs. With VREFHI set to 3.3V, the PPB will generate a trip event if the input voltage goes above about 2.9V.

#### External Connections

- A2 should be connected to a signal to convert
- Observe the following signals on an oscilloscope
  - ePWM1(GPIO0 - GPIO1)
  - ePWM3(GPIO4 - GPIO5)

■

#### Watch Variables

- adcA2Results - digital representation of the voltage on pin A2

## 6.2 ADC ePWM Triggering Multiple SOC

This example sets up ePWM1 to periodically trigger a set of conversions on ADCA and ADCD. This example demonstrates multiple ADCs working together to process a batch of conversions using the available parallelism across multiple ADCs.

ADCA Interrupt ISRs are used to read results of both ADCA and ADCD.

### External Connections

- A0, A1, A2 and D2, D3, D4 pins should be connected to signals to be converted.

### Watch Variables

- **adcAResult0** - Digital representation of the voltage on pin A0
- **adcAResult1** - Digital representation of the voltage on pin A1
- **adcAResult2** - Digital representation of the voltage on pin A2
- **adcDResult0** - Digital representation of the voltage on pin D2
- **adcDResult1** - Digital representation of the voltage on pin D3
- **adcDResult2** - Digital representation of the voltage on pin D4

## 6.3 ADC Burst Mode

This example sets up ePWM1 to periodically trigger ADCA using burst mode. This allows for different channels to be sampled with each burst.

Each burst triggers 3 conversions. A0 and A1 are part of every burst while the third conversion rotates between A2, A3, and A4. This allows high importance signals to be sampled at high speed while lower priority signals can be sampled at a lower rate.

ADCA Interrupt ISRs are used to read results for ADCA.

### External Connections

- A0, A1, A2, A3, A4

### Watch Variables

- **adcAResult0** - Digital representation of the voltage on pin A0
- **adcAResult1** - Digital representation of the voltage on pin A1
- **adcAResult2** - Digital representation of the voltage on pin A2
- **adcAResult3** - Digital representation of the voltage on pin A3
- **adcAResult4** - Digital representation of the voltage on pin A4

## 6.4 ADC Burst Mode Oversampling

This example sets up ePWM1 to periodically trigger SOC0 and SOC1 on ADCA (to sample A0 and A1). Additionally, the ADC burst mode is also triggered using ePWM1. The burst SOC's are used to accumulate multiple conversions to oversample A2 over multiple ePWM periods.

**External Connections**

- A0, A1, A2

**Watch Variables**

- **adcAResult0** - Digital representation of the voltage on pin A0
- **adcAResult1** - Digital representation of the voltage on pin A1
- **adcAResult2** - Digital representation of the voltage on pin A2

## 6.5 ADC SOC Oversampling

This example sets up ePWM1 to periodically trigger a set of conversions on ADCA including multiple SOC's that all convert A2 to achieve oversampling on A2.

ADCA Interrupt ISRs are used to read results of ADCA.

**External Connections**

- A0, A1, A2 should be connected to signals to be converted.

**Watch Variables**

- **adcAResult0** - Digital representation of the voltage on pin A0
- **adcAResult1** - Digital representation of the voltage on pin A1
- **adcAResult2** - Digital representation of the voltage on pin A2

## 6.6 ADC Software Triggering

This example converts some voltages on ADCA and ADCD based on a software trigger.

The ADCD will not convert until ADCA is complete, so the ADCs will not run asynchronously. However, this is much less efficient than allowing the ADCs to convert synchronously in parallel (for example, by using an ePWM trigger).

**External Connections**

- A0, A1, D2, and D3 should be connected to signals to convert

**Watch Variables**

- **adcAResult0** - Digital representation of the voltage on pin A0
- **adcAResult1** - Digital representation of the voltage on pin A1
- **adcDResult0** - Digital representation of the voltage on pin D2
- **adcDResult1** - Digital representation of the voltage on pin D3

## 6.7 ADC ePWM Triggering

This example sets up ePWM1 to periodically trigger a conversion on ADCA.

### External Connections

- A0 should be connected to a signal to convert

### Watch Variables

- **adcAResults** - A sequence of analog-to-digital conversion samples from pin A0. The time between samples is determined based on the period of the ePWM timer.

## 6.8 ADC Temperature Sensor Conversion

This example sets up the ePWM to periodically trigger the ADC. The ADC converts the internal connection to the temperature sensor, which is then interpreted as a temperature by calling the `ADC_getTemperatureC()` function.

### Watch Variables

- **sensorSample** - The raw reading from the temperature sensor
- **sensorTemp** - The interpretation of the sensor sample as a temperature in degrees Celsius.

## 6.9 ADC Synchronous SOC Software Force (`adc_soc_software_sync`)

This example converts some voltages on ADCA and ADCD using input 5 of the input X-BAR as a software force. Input 5 is triggered by toggling GPIO0, but any spare GPIO could be used. This method will ensure that both ADCs start converting at exactly the same time.

### External Connections

- A2, A3, D2, D3 pins should be connected to signals to convert

### Watch Variables

- **adcAResult0** : a digital representation of the voltage on pin A2
- **adcAResult1** : a digital representation of the voltage on pin A3
- **adcDResult0** : a digital representation of the voltage on pin D2
- **adcDResult1** : a digital representation of the voltage on pin D3

## 6.10 ADC Continuous Triggering (`adc_soc_continuous`)

This example sets up the ADC to convert continuously, achieving maximum sampling rate.

**External Connections**

- A0 pin should be connected to signal to convert

**Watch Variables**

- **adcAResults** - A sequence of analog-to-digital conversion samples from pin A0. The time between samples is the minimum possible based on the ADC speed.

## 6.11 ADC Continuous Conversions Read by DMA (adc\_soc\_continuous\_dma)

This example sets up two ADC channels to convert simultaneously. The results will be transferred by the DMA into a buffer in RAM.

**External Connections**

- A3 & D3 pins should be connected to signals to convert

**Watch Variables**

- **adcADataBuffer** : a digital representation of the voltage on pin A3
- **adcDDataBuffer** : a digital representation of the voltage on pin D3

## 6.12 ADC PPB Offset (adc\_ppb\_offset)

This example software triggers the ADC. Some SOC's have automatic offset adjustment applied by the post-processing block. After the program runs, the memory will contain ADC & post-processing block(PPB) results.

**External Connections**

- A2, D2 pins should be connected to signals to convert

**Watch Variables**

- **adcAResult** : a digital representation of the voltage on pin A2
- **adcAPPBResult** : a digital representation of the voltage on pin A2, minus 100 LSBs of automatically added offset
- **adcDResult** : a digital representation of the voltage on pin D2
- **adcCPPBResult** : a digital representation of the voltage on pin D2 plus 100 LSBs of automatically added offset

## 6.13 ADC PPB Limits (adc\_ppb\_limits)

This example sets up the ePWM to periodically trigger the ADC. If the results are outside of the defined range, the post-processing block will generate an interrupt.

The default limits are 1000LSBs and 3000LSBs. With VREFHI set to 3.3V, the PPB will generate an interrupt if the input voltage goes above about 2.4V or below about 0.8V.

### External Connections

- A0 should be connected to a signal to convert

### Watch Variables

- None

## 6.14 ADC PPB Delay Capture (adc\_ppb\_delay)

This example demonstrates delay capture using the post-processing block.

Two asynchronous ADC triggers are setup:

- ePWM1, with period 2048, triggering SOC0 to convert on pin A0
- ePWM2, with period 9999, triggering SOC1 to convert on pin A2

Each conversion generates an ISR at the end of the conversion. In the ISR for SOC0, a conversion counter is incremented and the PPB is checked to determine if the sample was delayed.

After the program runs, the memory will contain:

- **conversion** : the sequence of conversions using SOC0 that were delayed
- **delay** : the corresponding delay of each of the delayed conversions

## 6.15 CAN example that illustrates the usage of Mask registers

This example initializes CAN module A for Reception. When a frame with a matching filter criterion is received, the data will be copied in mailbox 1 and GPIO65 will be toggled a few times and the code gets ready for the next frame. If a message of any other MSGID is received, an ACK will be provided. Completion of reception is determined by polling CAN\_NDAT\_21 register. No interrupts are used.

### Hardware Required

- An external CAN node that transmits to CAN-A on the C2000 MCU

### Watch Variables

- rxMsgCount - A counter for the number of messages received
- rxMsgData - An array with the data that was received

## 6.16 CAN Error Generation Example

This example demonstrates the ways of handling CAN Error conditions. It generates the CAN Packets and sends them over GPIO. It is looped back externally to be received in CAN module. The CAN Interrupt service routine reads the Error status and demonstrates how different Error conditions can be detected.

Change `ERR_CFG` define to the different Error Scenarios and run the example. The corresponding Error Flag will be set in status variable of `canalSR()` routine. Uses a CPU Timer (Timer 0) for periodic timer interrupt of `CANBITRATE`  $\mu$ Sec. On the Timer interrupt, it sends the required CAN Frame type with the specified error conditions.

**Note:**

CAN modules on the device need to be connected to via CAN transceivers.

Please refer to the application note titled "Configurable Error Generator for Controller Area Network" at [www.ti.com/lit/pdf/spracq3](http://www.ti.com/lit/pdf/spracq3) for further details on this example.

**External Connections**

- ControlCARD GPIOTX\_PIN(GPIO4) should be connected to GPIO5(CANRXA)

**Watch Variables Transmit**

- status - variable in `canalSR` for checking error Status

## 6.17 CAN External Loopback

This example shows the basic setup of CAN in order to transmit and receive messages on the CAN bus. The CAN peripheral is configured to transmit messages with a specific CAN ID. A message is then transmitted once per second, using a simple delay loop for timing. The message that is sent is a 2 byte message that contains an incrementing pattern.

This example sets up the CAN controller in External Loopback test mode. Data transmitted is visible on the CANTXA pin and is received internally back to the CAN Core. Please refer to details of the External Loopback Test Mode in the CAN Chapter in the Technical Reference Manual.

**External Connections**

- None.

**Watch Variables**

- msgCount - A counter for the number of successful messages received
- txMsgData - An array with the data being sent
- rxMsgData - An array with the data that was received

## 6.18 CAN External Loopback with Interrupts

This example shows the basic setup of CAN in order to transmit and receive messages on the CAN bus. The CAN peripheral is configured to transmit messages with a specific CAN ID. A message is then transmitted once per second, using a simple delay loop for timing. The message that is sent is a 4 byte message that contains an incrementing pattern. A CAN interrupt handler is used to confirm message transmission and count the number of messages that have been sent.

This example sets up the CAN controller in External Loopback test mode. Data transmitted is visible on the CANTXA pin and is received internally back to the CAN Core. CAN-B module is not involved.

Note: "External" loopback does not mean the loopback is done externally. The loopback is done internally, but the transmitted data can be seen externally on the CANTX pin.

### External Connections

- None. (Transmitting node generates its own ACK)

### Watch Variables

- txMsgCount - A counter for the number of messages sent
- rxMsgCount - A counter for the number of messages received
- txMsgData - An array with the data being sent
- rxMsgData - An array with the data that was received
- errorFlag - A flag that indicates an error has occurred

## 6.19 CAN-A to CAN-B External Transmit

This example initializes CAN module A and CAN module B for external communication. CAN-A module is setup to transmit incrementing data for "n" number of times to the CAN-B module, where "n" is the value of TXCOUNT. CAN-B module is setup to trigger an interrupt service routine (ISR) when data is received. An error flag will be set if the transmitted data doesn't match the received data.

### Note:

Both CAN modules on the device need to be connected to each other via CAN transceivers. GPIOs will be different on Launchpad.

### Hardware Required

- A C2000 board with two CAN transceivers

### External Connections

- ControlCARD CANA is on GPIO31 (CANTXA) and GPIO30 (CANRXA)
- ControlCARD CANB is on GPIO8 (CANTXB) and GPIO10 (CANRXB)

### Watch Variables

- TXCOUNT - Adjust to set the number of messages to be transmitted



- txMsgCount - A counter for the number of messages sent
- rxMsgCount - A counter for the number of messages received
- txMsgData - An array with the data being sent
- rxMsgData - An array with the data that was received
- errorFlag - A flag that indicates an error has occurred

## 6.20 CAN-A External Transmit

This example initializes CAN module A for external communication. CAN-A module is setup to transmit data for "n" number of times, where "n" is the value of TXCOUNT. Another CAN node configured for the same bit-rate is needed to provide the ACK. No interrupts are used.

### Hardware Required

- A C2000 board with CAN transceiver and another CAN node configured for the same bit-rate to provide the ACK.

### Watch Variables

- TXCOUNT - Adjust to set the number of messages to be transmitted
- txMsgCount - A counter for the number of messages sent
- txMsgData - An array with the data being sent

## 6.21 CAN simple example that illustrates data reception

This example initializes CAN module A for Reception. When a frame with a STD-MSGID of 0x1 is received, the data will be copied in mailbox 1. If a message of any other MSGID is received, an ACK will be provided. GPIO65 will be toggled in both cases. Completion of reception is determined by polling. No interrupts are used. Note: RxOK bit is set even when the MSGID does not match.

### Hardware Required

- An external CAN node that transmits to CAN-A on the C2000 MCU

### Watch Variables

- rxMsgCount - A counter for the number of messages received
- rxMsgData - An array with the data that was received

## 6.22 CAN-A Remote-Frame Transmit

This example initializes CAN module A for external communication. It demonstrates the ability of the module to transmit a Remote-frame and receive a response in the same mailbox. CAN-B node is configured to respond to the Remote frame. No interrupts are used.

### Hardware Required

- A C2000 board with CAN transceiver and another CAN node configured for the same bit-rate to provide the response to the Remote frame. In this example, CAN-B is the "other node".

**Watch Variables**

- TXCOUNT - Adjust to set the number of Remote frames to be transmitted
- txMsgCount - A counter for the number of messages sent
- rxMsgData - An array with the data being received

## 6.23 CAN-A Remote-Frame Auto-answer

This example initializes CAN module A for external communication. It demonstrates the ability of the module to respond to a Remote-frame.

**Hardware Required**

- A C2000 board with CAN transceiver and another CAN node configured for the same bit-rate to transmit the Remote frame.

**Watch Variables**

- txMsgCount - A counter for the number of data frames sent

## 6.24 CLA $\arcsine(x)$ using a lookup table (cla\_asin\_cpu01)

In this example, Task 1 of the CLA will calculate the arcsine of an input argument in the range (-1.0 to 1.0) using a lookup table.

**Memory Allocation**

- CLA1 Math Tables (RAMLS0)
  - CLAasinTable - Lookup table
- CLA1 to CPU Message RAM
  - fResult - Result of the lookup algorithm
- CPU to CLA1 Message RAM
  - fVal - Sample input to the lookup algorithm

**Watch Variables**

- fVal - Argument to task 1
- fResult - Result of  $\arcsin(fVal)$

## 6.25 CLA $\arctangent(x)$ using a lookup table (cla\_atan\_cpu01)

In this example, Task 1 of the CLA will calculate the arctangent of an input argument using a lookup table.

### Memory Allocation

- CLA1 Math Tables (RAMLS0)
  - CLAatan2Table - Lookup table
- CLA1 to CPU Message RAM
  - fResult - Result of the lookup algorithm
- CPU to CLA1 Message RAM
  - fNum - Numerator of sample input
  - fDen - Denominator of sample input

### Watch Variables

- fVal - Argument to task 1
- fResult - Result of  $\arctan(fVal)$

## 6.26 Empty CLA Project Example

This example is an empty project setup for driverlib development on the C28x with initializations and project properties configured for the CLA.

## 6.27 CLB Timer Two States

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## 6.28 CLB Interrupt Tag

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## 6.29 CLB Output Intersect

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.30 CLB PUSH PULL**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.31 CLB Multi Tile**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.32 CLB Tile to Tile Delay**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.33 CLB based One-shot PWM**

For the detailed description of this example, please refer to : C2000Ware\_PATH Tool Users Guide.pdf

## **6.34 CLB Combinational Logic**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.35 CLB GPIO Input Filter**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.36 CLB Auxilary PWM**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.37 CLB PWM Protection**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.38 CLB Event Window**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.39 CLB Signal Generator**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.40 CLB State Machine**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.41 CLB External Signal AND Gate**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.42 CLB Timer**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## **6.43 CLB Empty Project**

For the detailed description of this example, please refer to: C2000Ware\_PATH Tool Users Guide.pdf

## 6.44 CMPSS Asynchronous Trip

This example enables the CMPSS1 COMPH comparator and feeds the asynchronous CTRIPOUTH signal to the GPIO14/OUTPUTXBAR3 pin and CTRIPH to GPIO15/EPWM8B.

CMPSS is configured to generate trip signals to trip the EPWM signals. CMPIN1P is used to give positive input and internal DAC is configured to provide the negative input. Internal DAC is configured to provide a signal at VDD/2. An EPWM signal is generated at GPIO15 and is configured to be tripped by CTRIPOUTH.

When a low input(VSS) is provided to CMPIN1P,

- Trip signal(GPIO14) output is low
- PWM8B(GPIO15) gives a PWM signal

When a high input(higher than VDD/2) is provided to CMPIN1P,

- Trip signal(GPIO14) output turns high
- PWM8B(GPIO15) gets tripped and outputs as high

### External Connections

- Outputs can be observed on GPIO14 and GPIO15
- Comparator input pin is on ADCINA2

### Watch Variables

- None

## 6.45 CMPSS Digital Filter Configuration

This example enables the CMPSS1 COMPH comparator and feeds the output through the digital filter to the GPIO14/OUTPUTXBAR3 pin.

CMPIN1P is used to give positive input and internal DAC is configured to provide the negative input. Internal DAC is configured to provide a signal at VDD/2.

When a low input(VSS) is provided to CMPIN1P,

- GPIO14 output is low

When a high input(higher than VDD/2) is provided to CMPIN1P,

- GPIO14 output turns high

### External Connections

- Output can be observed on GPIO14
- Comparator input pin is on ADCINA2

### Watch Variables

- None

## 6.46 Buffered DAC Enable

This example generates a voltage on the buffered DAC output, DACOUTA/ADCINA0 and uses the default DAC reference setting of VDAC.

### External Connections

- When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0.

### Watch Variables

- None.

## 6.47 Buffered DAC Random

This example generates random voltages on the buffered DAC output, DACOUTA/ADCINA0 and uses the default DAC reference setting of VDAC.

### External Connections

- When the DAC reference is set to VDAC, an external reference voltage must be applied to the VDAC pin. This can be accomplished by connecting a jumper wire from 3.3V to ADCINB0.

### Watch Variables

- None.

## 6.48 DCSM Memory partitioning Example

This example demonstrates how to configure and use DCSM. It configures the OTP needed to change the zone passwords and allocates LS2-LS3 to zone 1. Zoning of memories is done by the OTP programming while the securing functionalities are done through this example. It Writes some data in the zones and checks before locking and after locking and matches with the data set. Ideally after locking zone1 should read a wrong 0 value.

It demonstrates how to lock and and unlock zone by showing where to put the password and how to check if it is secured or unsecured.

### External Connections

- None.

### Watch Variables

- **result** - Status of Secure memory partitioning done through OTP programming.
- **Zone1\_Locked\_Array** - Array demonstrating secured memory
- **Unsecure\_mem\_Array** - Array demonstrating Unsecured memory

## 6.49 DMA GSRAM Transfer (dma\_ex1\_gsram\_transfer)

This example uses one DMA channel to transfer data from a buffer in RAMGS0 to a buffer in RAMGS1. The example sets the DMA channel PERINTFRC bit repeatedly until the transfer of 16 bursts (where each burst is 8 16-bit words) has been completed. When the whole transfer is complete, it will trigger the DMA interrupt.

### Watch Variables

- **sData** - Data to send
- **rData** - Received data

## 6.50 eCAP APWM Example

This program sets up the eCAP module in APWM mode. The PWM waveform will come out on GPIO5. The frequency of PWM is configured to vary between 5Hz and 10Hz using the shadow registers to load the next period/compare values.

## 6.51 eCAP Capture PWM Example

This example configures ePWM3A for:

- Up count mode
- Period starts at 500 and goes up to 8000
- Toggle output on PRD

eCAP1 is configured to capture the time between rising and falling edge of the ePWM3A output.

### External Connections

- eCAP1 is on GPIO16
- ePWM3A is on GPIO4
- Connect GPIO4 to GPIO16.

### Watch Variables

- **ecap1PassCount** - Successful captures.
- **ecap1IntCount** - Interrupt counts.

## 6.52 EMIF1 ASYNC module accessing 16bit ASRAM.

This example configures EMIF1 in 16bit ASYNC mode and uses CS2 as chip enable.

### External Connections



- External ASRAM memory (CY7C1041CV33 -10ZSXA) daughter card

**Watch Variables**

- **testStatusGlobal** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **errCountGlobal** - Error counter

## 6.53 EMIF1 module accessing 16bit ASRAM as code memory.

This example configures EMIF1 in 16bit ASYNC mode and uses CS2 as chip enable. This example enables use of ASRAM as code memory.

**External Connections**

- External ASRAM memory (CY7C1041CV33 -10ZSXA) daughter card

**Watch Variables**

- **testStatusGlobal** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **errCountGlobal** - Error counter

## 6.54 EMIF1 module accessing 16bit SDRAM using memcpy\_fast\_far().

This example configures EMIF1 in 16bit SYNC mode and uses CS0 as chip enable. It will first write to an array in the SDRAM and then read it back using the FPU function, memcpy\_fast\_far(), for both operations.

The buffer in SDRAM will be placed in the .farbss memory on account of the fact that its assigned the attribute "far" indicating it lies beyond the 22-bit program address space. The compiler will take care to avoid using instructions such as PREAD, which uses the Program Read Bus, or addressing modes restricted to the lower 22-bit space when accessing data with the attribute "far".

**Note:**

The memory space beyond 22-bits must be treated as data space for load/store operations only. The user is cautioned against using this space for either instructions or working memory.

**External Connections**

- External SDR-SDRAM memory (MT48LC32M16A2 -75) daughter card

**Watch Variables**

- **testStatusGlobal** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**

- **errCountGlobal** - Error counter

## 6.55 EMIF1 module accessing 16bit SDRAM then puts into Self Refresh mode before entering Low Power Mode.

This example configures EMIF1 in 16bit SYNC mode and uses CS0 as chip enable. This example puts SDRAM into self refresh before entering standby mode. Watchdog timer is configured to trigger WAKEINT interrupt.

As soon as the watchdog timer expires, the device should wake up, SDRAM should come out of self refresh mode and GPIO11 can be observed to toggle.

### External Connections

- External SDR-SDRAM memory (MT48LC32M16A2 -75) daughter card

### Watch Variables

- **testStatusGlobal** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **errCountGlobal** - Error counter

## 6.56 EMIF1 module accessing 32bit SDRAM using DMA.

This example configures EMIF1 in 16bit SYNC(SDRAM) mode and uses CS0 as chip enable. It will first write to an array in the SDRAM and then read it back, using the DMA for both operations.

The buffer in SDRAM will be placed in the .farbss memory on account of the fact that its assigned the attribute "far" indicating it lies beyond the 22-bit program address space. The compiler will take care to avoid using instructions such as PREAD, which uses the Program Read Bus, or addressing modes restricted to the lower 22-bit space when accessing data with the attribute "far".

### Note:

The memory space beyond 22-bits must be treated as data space for load/store operations only. The user is cautioned against using this space for either instructions or working memory.

### External Connections

- External SDR-SDRAM (Micron MT48LC32M16A2 "P -75 C") daughter card.

### Watch Variables

- **testStatusGlobal** - Equivalent to **TEST\_PASS** if test finished correctly, else the value is set to **TEST\_FAIL**
- **errCountGlobal** - Error counter

## 6.57 ePWM Chopper

This example configures ePWM1, ePWM2, ePWM3 and ePWM4 as follows

- ePWM1 with Chopper disabled (Reference)
- ePWM2 with chopper enabled at 1/8 duty cycle
- ePWM3 with chopper enabled at 6/8 duty cycle
- ePWM4 with chopper enabled at 1/2 duty cycle with One-Shot Pulse enabled

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO2 EPWM2A
- GPIO3 EPWM2B
- GPIO4 EPWM3A
- GPIO5 EPWM3B
- GPIO6 EPWM4A
- GPIO7 EPWM4B

### Watch Variables

- None.

## 6.58 EPWM Configure Signal

This example configures ePWM1, ePWM2, ePWM3 to produce signal of desired frequency and duty. It also configures phase between the configured modules.

Signal of 10kHz with duty of 0.5 is configured on ePWMxA & ePWMxB with ePWMxB inverted. Also, phase of 120 degree is configured between ePWM1 to ePWM3 signals.

During the test, monitor ePWM1, ePWM2, and/or ePWM3 outputs on an oscilloscope.

- ePWM1A is on GPIO0
- ePWM1B is on GPIO1
- ePWM2A is on GPIO2
- ePWM2B is on GPIO3
- ePWM3A is on GPIO4
- ePWM3B is on GPIO5

## 6.59 Realization of Monoshot mode

This example showcases how to generate monoshot PWM output based on external trigger i.e. generating just a single pulse output on receipt of an external trigger. And the next pulse will be generated only when the next trigger comes. The example utilizes external synchronization and T1 action qualifier event features to achieve the desired output.

ePWM1 is used to generate the monoshot output and ePWM2 is used as an external trigger for that. No external connections are required as ePWM2A is fed as the trigger using Input X-BAR automatically.

ePWM1 is configured to generate a single pulse of 0.5us when received an external trigger. This is achieved by enabling the phase synchronization feature and configuring EPWMxSYNCl as EXTSYNCIN1. And this EPWMxSYNCl is also configured as T1 event of action qualifier to set output HIGH while "CTR = PRD" action is used to set output LOW.

ePWM2 is configured to generate a 100 KHz signal with a duty of 1% (to simulate a rising edge trigger) which is routed to EXTSYNCIN1 using Input XBAR.

Observe GPIO6 (EPWM4A : Monoshot Output) and GPIO2 (EPWM2 : External Trigger) on oscilloscope.

**NOTE :** In the following example, the ePWM timer is still running in a continuous mode rather than a one-shot mode thus for more reliable implementation, refer to CLB based one shot PWM implementation demonstrated in "clb\_ex17\_one\_shot\_pwm" example

## 6.60 EPWM Action Qualifier (epwm\_up\_aq)

This example configures ePWM1, ePWM2, ePWM3 to produce an waveform with independent modulation on EPWMxA and EPWMxB.

The compare values CMPA and CMPB are modified within the ePWM's ISR.

The TB counter is in up count mode for this example.

View the EPWM1A/B(GPIO0 & GPIO1), EPWM2A/B(GPIO2 & GPIO3) and EPWM3A/B(GPIO4 & GPIO5) waveforms via an oscilloscope.

## 6.61 ePWM Trip Zone

This example configures ePWM1 and ePWM2 as follows

- ePWM1 has TZ1 as one shot trip source
- ePWM2 has TZ1 as cycle by cycle trip source

Initially tie TZ1 high. During the test, monitor ePWM1 or ePWM2 outputs on a scope. Pull TZ1 low to see the effect.

### External Connections

- ePWM1A is on GPIO0
- ePWM2A is on GPIO2

- TZ1 is on GPIO12

This example also makes use of the Input X-BAR. GPIO12 (the external trigger) is routed to the input X-BAR, from which it is routed to TZ1.

The TZ-Event is defined such that ePWM1A will undergo a One-Shot Trip and ePWM2A will undergo a Cycle-By-Cycle Trip.

## 6.62 ePWM Up Down Count Action Qualifier

This example configures ePWM1, ePWM2, ePWM3 to produce a waveform with independent modulation on ePWMxA and ePWMxB.

The compare values CMPA and CMPB are modified within the ePWM's ISR.

The TB counter is in up/down count mode for this example.

View the ePWM1A/B(GPIO0 & GPIO1), ePWM2A/B(GPIO2 & GPIO3) and ePWM3A/B(GPIO4 & GPIO5) waveforms on oscilloscope.

## 6.63 ePWM Synchronization

This example configures ePWM1, ePWM2, ePWM3 and ePWM4 as follows

- ePWM1 without phase shift as master
- ePWM2 with phase shift of 300 TBCLKs
- ePWM3 with phase shift of 600 TBCLKs
- ePWM4 with phase shift of 900 TBCLKs

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO2 EPWM2A
- GPIO3 EPWM2B
- GPIO4 EPWM3A
- GPIO5 EPWM3B
- GPIO6 EPWM4A
- GPIO7 EPWM4B

### Watch Variables

- None.

## 6.64 ePWM Digital Compare

This example configures ePWM1 as follows

- ePWM1 with DCAEVT1 forcing the ePWM output LOW
- GPIO25 is used as the input to the INPUT XBAR INPUT1
- INPUT1 (from INPUT XBAR) is used as the source for DCAEVT1
- GPIO25's PULL-UP resistor is enabled, in order to test the trip, PULL this pin to GND

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO25 TZ1, pull this pin low to trip the ePWM

### Watch Variables

- None.

## 6.65 ePWM Digital Compare Event Filter Blanking Window

This example configures ePWM1 as follows

- ePWM1 with DCAEVT1 forcing the ePWM output LOW
- GPIO25 is used as the input to the INPUT XBAR INPUT1
- INPUT1 (from INPUT XBAR) is used as the source for DCAEVT1
- GPIO25's PULL-UP resistor is enabled, in order to test the trip, PULL this pin to GND
- ePWM1 with DCBEVT1 forcing the ePWM output LOW
- GPIO25 is used as the input to the INPUT XBAR INPUT1
- INPUT1 (from INPUT XBAR) is used as the source for DCAEVT1
- GPIO25's PULL-UP resistor is enabled, in order to test the trip, PULL this pin to GND
- DCBEVT1 uses the filtered version of DCBEVT1
- The DCFILT signal uses the blanking window to ignore the DCBEVT1 for the duration of DC Blanking window

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO25 TRIPIN1, pull this pin low to trip the ePWM

### Watch Variables

- None.

## 6.66 ePWM Valley Switching

This example configures ePWM1 as follows

- ePWM1 with DCAEVT1 forcing the ePWM output LOW
- GPIO25 is used as the input to the INPUT XBAR INPUT1
- INPUT1 (from INPUT XBAR) is used as the source for DCAEVT1
- GPIO25 is set to output and toggled in the main loop to trip the PWM
  
- ePWM1 with DCBEVT1 forcing the ePWM output LOW
- GPIO25 is used as the input to the INPUT XBAR INPUT1
- INPUT1 (from INPUT XBAR) is used as the source for DCAEVT1
- GPIO25 is set to output and toggled in the main loop to trip the PWM
- DCBEVT1 uses the filtered version of DCBEVT1
- The DCFILT signal uses the valley switching module to delay the
- DCFILT signal by a software defined DELAY value.

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO25 TRIPIN1 (Output Pin, toggled through software)

### Watch Variables

- None.

## 6.67 ePWM Digital Compare Edge Filter

This example configures ePWM1 as follows

- ePWM1 with DCBEVT2 forcing the ePWM output LOW as a CBC source
- GPIO25 is used as the input to the INPUT XBAR INPUT1
- INPUT1 (from INPUT XBAR) is used as the source for DCBEVT2
- GPIO25 is set to output and toggled in the main loop to trip the PWM
- The DCBEVT2 is the source for DCFILT
- The DCFILT will count edges of the DCBEVT2 and generate a signal to trip the ePWM on the 4th edge of DCBEVT2

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO25 TRIPIN1 (Output Pin, toggled through software)

### Watch Variables

- None.

## 6.68 ePWM Deadband

This example configures ePWM1 through ePWM6 as follows

- ePWM1 with Deadband disabled (Reference)
- ePWM2 with Deadband Active High
- ePWM3 with Deadband Active Low
- ePWM4 with Deadband Active High Complimentary
- ePWM5 with Deadband Active Low Complimentary
- ePWM6 with Deadband Output Swap (switch A and B outputs)

### External Connections

- GPIO0 EPWM1A
- GPIO1 EPWM1B
- GPIO2 EPWM2A
- GPIO3 EPWM2B
- GPIO4 EPWM3A
- GPIO5 EPWM3B
- GPIO6 EPWM4A
- GPIO7 EPWM4B
- GPIO8 EPWM5A
- GPIO9 EPWM5B
- GPIO10 EPWM6A
- GPIO11 EPWM6B

### Watch Variables

- None.

## 6.69 ePWM DMA

This example configures ePWM1 and DMA as follows:

- ePWM1 is set up to generate PWM waveforms
- DMA5 is set up to update the CMPAHR, CMPA, CMPBHR and CMPB every period with the next value in the configuration array. This allows the user to create a DMA enabled fifo for all the CMPx and CMPxHR registers to generate unconventional PWM waveforms.
- DMA6 is set up to update the TBPHSHR, TBPHS, TBPRDHR and TBPRD every period with the next value in the configuration array.
- Other registers such as AQCTL can be controlled through the DMA as well by following the same procedure. (Not used in this example)

### External Connections



- GPIO0 EPWM1A
- GPIO1 EPWM1B

**Watch Variables**

- None.

## 6.70 Frequency Measurement Using eQEP

This example will calculate the frequency of an input signal using the eQEP module. ePWM1A is configured to generate this input signal with a frequency of 5 kHz. It will interrupt once every period and call the frequency calculation function. This example uses the IQMath library to simplify high-precision calculations.

In addition to the main example file, the following files must be included in this project:

- **eqep\_ex1\_calculation.c** - contains frequency calculation function
- **eqep\_ex1\_calculation.h** - includes initialization values for frequency structure

The configuration for this example is as follows

- Maximum frequency is configured to 10KHz (baseFreq)
- Minimum frequency is assumed at 50Hz for capture pre-scalar selection

**SPEED\_FR:** High Frequency Measurement is obtained by counting the external input pulses for 10ms (unit timer set to 100Hz).

$$SPEED\_FR = \frac{Count\ Delta}{10ms}$$

**SPEED\_PR:** Low Frequency Measurement is obtained by measuring time period of input edges. Time measurement is averaged over 64 edges for better results and the capture unit performs the time measurement using pre-scaled SYSCLK.

Note that the pre-scalar for capture unit clock is selected such that the capture timer does not overflow at the required minimum frequency. This example runs indefinitely until the user stops it.

For more information about the frequency calculation see the comments at the beginning of eqep\_ex1\_calculation.c and the XLS file provided with the project, eqep\_ex1\_calculation.xls.

**External Connections**

- Connect GPIO20/eQEP1A to GPIO0/ePWM1A

**Watch Variables**

- **freq.freqHzFR** - Frequency measurement using position counter/unit time out
- **freq.freqHzPR** - Frequency measurement using capture unit

## 6.71 Position and Speed Measurement Using eQEP

This example provides position and speed measurement using the capture unit and speed measurement using unit time out of the eQEP module. ePWM1 and a GPIO are configured to generate simulated eQEP signals. The ePWM module will interrupt once every period and call the position/speed calculation function. This example uses the IQMath library to simplify high-precision calculations.

In addition to the main example file, the following files must be included in this project:

- **eqep\_ex2\_calculation.c** - contains position/speed calculation function
- **eqep\_ex2\_calculation.h** - includes initialization values for position/speed structure

The configuration for this example is as follows

- Maximum speed is configured to 6000rpm (baseRPM)
- Minimum speed is assumed at 10rpm for capture pre-scalar selection
- Pole pair is configured to 2 (polePairs)
- Encoder resolution is configured to 4000 counts/revolution (mechScaler)
- Which means:  $4000 / 4 = 1000$  line/revolution quadrature encoder (simulated by ePWM1)
- ePWM1 (simulating QEP encoder signals) is configured for a 5kHz frequency or 300 rpm ( $= 4 * 5000 \text{ cnts/sec} * 60 \text{ sec/min} / 4000 \text{ cnts/rev}$ )

**SPEEDRPM\_FR:** High Speed Measurement is obtained by counting the QEP input pulses for 10ms (unit timer set to 100Hz).

**SPEEDRPM\_FR** = (Position Delta / 10ms) \* 60 rpm

**SPEEDRPM\_PR:** Low Speed Measurement is obtained by measuring time period of QEP edges. Time measurement is averaged over 64 edges for better results and the capture unit performs the time measurement using pre-scaled SYSCCLK.

Note that the pre-scaler for capture unit clock is selected such that the capture timer does not overflow at the required minimum frequency. This example runs indefinitely until the user stops it.

For more information about the position/speed calculation see the comments at the beginning of eqep\_ex2\_calculation.c and the XLS file provided with the project, eqep\_ex2\_calculation.xls.

### External Connections

- Connect GPIO20/eQEP1A to GPIO0/ePWM1A (simulates eQEP Phase A signal)
- Connect GPIO21/eQEP1B to GPIO1/ePWM1B (simulates eQEP Phase B signal)
- Connect GPIO23/eQEP1I to GPIO2 (simulates eQEP Index Signal)

### Watch Variables

- **posSpeed.speedRPMFR** - Speed meas. in rpm using QEP position counter
- **posSpeed.speedRPMPR** - Speed meas. in rpm using capture unit
- **posSpeed.thetaMech** - Motor mechanical angle (Q15)
- **posSpeed.thetaElec** - Motor electrical angle (Q15)

## 6.72 Device GPIO Setup

Configures the device GPIO into two different configurations. This code is verbose to illustrate how the GPIO could be setup. In a real application, lines of code can be combined for improved code size and efficiency.

This example only sets-up the GPIO. Nothing is actually done with the pins after setup.

**In general:**

- All pullup resistors are enabled. For ePWMs this may not be desired.
- Input qual for communication ports (CAN, SPI, SCI, I2C) is asynchronous
- Input qual for Trip pins (TZ) is asynchronous
- Input qual for eCAP and eQEP signals is synch to SYSCLKOUT
- Input qual for some I/O's and \_\_interrupts may have a sampling window

## 6.73 Device GPIO Toggle

Configures the device GPIO through the sysconfig file. The GPIO pin is toggled in the infinit loop.

## 6.74 Device GPIO Interrupt

Configures the device GPIOs through the sysconfig file. One GPIO output pin, and one GPIO input pin is configured. The example then configures the GPIO input pin to be the source of an external interrupt which toggles the GPIO output pin.

## 6.75 HRPWM Duty Control with SFO

This example modifies the MEP control registers to show edge displacement for high-resolution period with ePWM in Up count mode due to the HRPWM control extension of the respective ePWM module.

This example calls the following TI's MEP Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

- updates MEP\_ScaleFactor dynamically when HRPWM is in use
- updates HRMSTEP register (exists only in EPwm1Regs register space) with MEP\_ScaleFactor value
- returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)
- returns 1 when complete for the specified channel
- returns 0 if not complete for the specified channel

This example is intended to explain the HRPWM capabilities. The code can be optimized for code efficiency. Refer to TI's Digital power application examples and TI Digital Power Supply software libraries for details.

**External Connections**

- Monitor ePWM1/2/3/4 A/B pins on an oscilloscope.

## 6.76 HRPWM Slider

This example modifies the MEP control registers to show edge displacement due to HRPWM. Control blocks of the respective ePWM module channel A and B will have fine edge movement due to HRPWM logic.

Monitor ePWM1 A/B pins on an oscilloscope.

## 6.77 HRPWM Period Control

This example modifies the MEP control registers to show edge displacement for high-resolution period with ePWM in Up-Down count mode due to the HRPWM control extension of the respective ePWM module.

This example calls the following TI's MEP Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

- updates MEP\_ScaleFactor dynamically when HRPWM is in use
- updates HRMSTEP register (exists only in EPwm1Regs register space) with MEP\_ScaleFactor value
- returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)
- returns 1 when complete for the specified channel
- returns 0 if not complete for the specified channel

This example is intended to explain the HRPWM capabilities. The code can be optimized for code efficiency. Refer to TI's Digital power application examples and TI Digital Power Supply software libraries for details.

**External Connections**

- Monitor ePWM1/2/3/4 A/B pins on an oscilloscope.

## 6.78 HRPWM Duty Control with UPDOWN Mode

This example calls the following TI's MEP Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

- updates MEP\_ScaleFactor dynamically when HRPWM is in use
- updates HRMSTEP register (exists only in EPwm1Regs register space) with MEP\_ScaleFactor value
- returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)
- returns 1 when complete for the specified channel
- returns 0 if not complete for the specified channel

This example is intended to explain the HRPWM capabilities. The code can be optimized for code efficiency. Refer to TI's Digital power application examples and TI Digital Power Supply software libraries for details.

#### **External Connections**

- Monitor ePWM1/2/3/4 A/B pins on an oscilloscope.

## **6.79 HRPWM Duty Control with AHC Deadband**

This example implements High-Resolution EPWM duty control capability. The example begins with a basic Active-High Complementary (AHC) output on channels A and B of the EPWM module(s) by using the Dead Band submodule to apply rising and falling edge delays on channel A and B respectively. High-Resolution duty control is then applied on both A/B channels of the EPWM module(s). HR duty control is implemented by applying the CMPAHR (for channel A) and CMPBHR (for channel B) values to control both edges of both EPWM channel outputs with finer granularity. The duty cycle of the EPWM module(s) are updated with calculations performed in main(). This example also calls the following TI's MEP Scale Factor Optimizer (SFO) software library V8 functions:

**int SFO();**

- Updates MEP\_ScaleFactor dynamically when HRPWM is in use
- Updates HRMSTEP register (exists only in EPwm1Regs register space) with MEP\_ScaleFactor value
- Returns 2 if error: MEP\_ScaleFactor is greater than maximum value of 255 (Auto-conversion may not function properly under this condition)
- Returns 1 when complete for the specified channel
- Returns 0 if not complete for the specified channel

This example is intended to explain the HRPWM capabilities. The code can be optimized for code efficiency. Refer to TI's Digital power application examples and TI Digital Power Supply software libraries for details.

#### **External Connections**

- Monitor ePWM1/2/3/4 A/B pins on an oscilloscope.

## 6.80 I2C Digital Loopback with FIFO Interrupts

This program uses the internal loopback test mode of the I2C module. Both the TX and RX I2C FIFOs and their interrupts are used. The pinmux and I2C initialization is done through the sysconfig file.

A stream of data is sent and then compared to the received stream. The sent data looks like this:

```
0000 0001
0001 0002
0002 0003
....
00FE 00FF
00FF 0000
etc..
```

This pattern is repeated forever.

### External Connections

- None

### Watch Variables

- **sData** - Data to send
- **rData** - Received data
- **rDataPoint** - Used to keep track of the last position in the receive stream for error checking

## 6.81 I2C EEPROM

This program will write 1-14 words to EEPROM and read them back. The data written and the EEPROM address written to are contained in the message structure, i2cMsgOut. The data read back will be contained in the message structure i2cMsgIn.

### External Connections

- Connect external I2C EEPROM at address 0x50
- Connect GPIO32/SDAA to external EEPROM SDA (serial data) pin
- Connect GPIO33/SCLA to external EEPROM SCL (serial clock) pin

### Watch Variables

- **i2cMsgOut** - Message containing data to write to EEPROM
- **i2cMsgIn** - Message containing data read from EEPROM

## 6.82 I2C Digital External Loopback with FIFO Interrupts

This program uses the I2CA and I2CB modules for achieving external loopback. The I2CA TX FIFO and the I2CB RX FIFO are used along with their interrupts.

A stream of data is sent on I2CA and then compared to the received stream on I2CB. The sent data looks like this:

```
0000 0001
0001 0002
0002 0003
....
00FE 00FF
00FF 0000
etc..
```

This pattern is repeated forever.

### External Connections

- Connect SCLA(GPIO33) to SCLB (GPIO35) and SDAA(GPIO32) to SDAB (GPIO34)
- Connect GPIO31 to an LED used to depict data transfers.

### Watch Variables

- **sData** - Data to send
- **rData** - Received data
- **rDataPoint** - Used to keep track of the last position in the receive stream for error checking

## 6.83 I2C EEPROM

This program will shows how to perform different EEPROM write and read commands using I2C polling method EEPROM used for this example is AT24C256

### External Connections

- Connect external I2C EEPROM at address 0x50 ————— Signal | I2CA | EEPROM ————— SCL | GPIO105 | SCL SDA | GPIO104 | SDA Make sure to connect GND pins if EEPROM and C2000 device are in different board. —————

## 6.84 I2C master slave communication using FIFO interrupts

This program shows how to use I2CA and I2CB modules in both master and slave configuration This example uses I2C FIFO interrupts and doesn't using polling

Example1: I2CA as Master Transmitter and I2CB working Slave Receiver Example2: I2CA as Master Receiver and I2CB working Slave Transmitter Example3: I2CB as Master Transmitter and I2CA working Slave Receiver Example4: I2CB as Master Receiver and I2CA working Slave Transmitter

**External Connections** on launchpad should be made as shown below

\_\_\_\_\_ Signal | I2CA | I2CB \_\_\_\_\_ SCL | GPIO105 | GPIO41  
SDA | GPIO104 | GPIO40 \_\_\_\_\_

**Watch Variables** in memory window

- I2CA\_TXdata
- I2CA\_RXdata
- I2CB\_TXdata
- I2CB\_RXdata stream for error checking

#####

## 6.85 I2C EEPROM

This program will shows how to perform different EEPROM write and read commands using I2C interrupts EEPROM used for this example is AT24C256

**External Connections**

- Connect external I2C EEPROM at address 0x50 \_\_\_\_\_ Signal | I2CA | EEPROM \_\_\_\_\_ SCL | GPIO105 | SCL SDA | GPIO104 | SDA Make sure to connect GND pins if EEPROM and C2000 device are in different board. \_\_\_\_\_

## 6.86 External Interrupts (ExternalInterrupt)

This program sets up GPIO0 as XINT1 and GPIO1 as XINT2. Two other GPIO signals are used to trigger the interrupt (GPIO30 triggers XINT1 and GPIO31 triggers XINT2). The user is required to externally connect these signals for the program to work properly.

XINT1 input is synced to SYSCLKOUT.

XINT2 has a long qualification - 6 samples at 510\*SYSCLKOUT each.

GPIO34 will go high outside of the interrupts and low within the interrupts. This signal can be monitored on a scope.

Each interrupt is fired in sequence - XINT1 first and then XINT2

**External Connections**

- Connect GPIO30 to GPIO0. GPIO0 will be assigned to XINT1
- Connect GPIO31 to GPIO1. GPIO1 will be assigned to XINT2

Monitor GPIO34 with an oscilloscope. GPIO34 will be high outside of the ISRs and low within each ISR.



**Watch Variables**

- XINT1Count for the number of times through XINT1 interrupt
- XINT2Count for the number of times through XINT2 interrupt
- loopCount for the number of times through the idle loop

## 6.87 Multiple interrupt handling of I2C, SCI & SPI Digital Loopback

This program is used to demonstrate how to handle multiple interrupts when using multiple communication peripherals like I2C, SCI & SPI Digital Loopback all in a single example. The data transfers would be done with FIFO Interrupts.

It uses the internal loopback test mode of these modules. Both the TX and RX FIFOs and their interrupts are used. Other than boot mode pin configuration, no other hardware configuration is required.

A stream of data is sent and then compared to the received stream. The sent data looks like this for I2C and SCI:

```
0000 0001
0001 0002
0002 0003
....
00FE 00FF
00FF 0000
etc..
```

The sent data looks like this for SPI:

```
0000 0001
0001 0002
0002 0003
....
FFFE FFFF
FFFF 0000
etc..
```

This pattern is repeated forever.

**External Connections**

- None

**Watch Variables**

- sDataI2cA - Data to send through I2C

- **rDataI2cA** - Received I2C data
- **rDataPoint** - Used to keep track of the last position in the receive I2C stream for error checking
- **sDataSpiA** - Data to send through SPI
- **rDataSpiA** - Received SPI data
- **rDataPointSpiA** - Used to keep track of the last position in the receive SPI stream for error checking
- **sDataSciA** - SCI Data being sent
- **rDataSciA** - SCI Data received
- **rDataPointA** - Keep track of where we are in the SCI data stream. This is used to check the incoming data

## 6.88 CPU Timer Interrupt Software Prioritization

This examples demonstrates the software prioritization of interrupts through CPU Timer Interrupts. Software prioritization of interrupts is achieved by enabling interrupt nesting.

In this device, hardware priorities for CPU Timer 0, 1 and 2 are set as timer 0 being highest priority and timer 2 being lowest priority. This example configures CPU Timer0, 1, and 2 priority in software with timer 2 priority being highest and timer 0 being lowest in software and prints a trace for the order of execution.

For most applications, the hardware prioritizing of the interrupts is sufficient. For applications that need custom prioritizing, this example illustrates how this can be done through software. User specific priorities can be configured in `sw_prioritized_isr_level.h` header file.

To enable interrupt nesting, following sequence needs to followed in ISRs. **Step 1:** Set the global priority: Modify the IER register to allow CPU interrupts with a higher user priority to be serviced. Note: at this time IER has already been saved on the stack. **Step 2:** Set the group priority: (optional) Modify the appropriate PIEIERx register to allow group interrupts with a higher user set priority to be serviced. Do NOT clear PIEIERx register bits from another group other than that being serviced by this ISR. Doing so can cause erroneous interrupts to occur. **Step 3:** Enable interrupts: There are three steps to do this: a. Clear the PIEACK bits b. Wait at least one cycle c. Clear the INTM bit. **Step 4:** Run the main part of the ISR **Step 5:** Set INTM to disable interrupts. **Step 6:** Restore PIEIERx (optional depending on step 2) **Step 7:** Return from ISR

Refer to below link on more details on Interrupt nesting in C28x devices: [C2000Ware>.html](http://www.ti.com/lit/zip/C2000Ware)

### External Connections

- None

### Watch Variables

- `tracelSR` - shows the order in which ISRs are executed.

## 6.89 LED Blinky Example

This example demonstrates how to blink a LED.

**External Connections**

- None.

**Watch Variables**

- None.

## 6.90 Low Power Modes: Halt Mode and Wakeup

This example puts the device into HALT mode. If the lowest possible current consumption in HALT mode is desired, the JTAG connector must be removed from the device board while the device is in HALT mode.

The example then wakes up the device from HALT using GPIO0. GPIO0 wakes the device from HALT mode when a high-to-low signal is detected on the pin. This pin must be pulsed by an external agent for wakeup.

The wakeup process begins as soon as GPIO0 is held low for the time indicated in the device datasheet. After the device wakes up, GPIO1 can be observed to go low.

GPIO0 is configured as the LPM wakeup pin to trigger a WAKEINT interrupt upon detection of a low pulse. Initially, pull GPIO0 high externally.

To observe when device wakes from HALT mode, monitor GPIO1 with an oscilloscope (Cleared to 0 in WAKEINT ISR)

**External Connections**

- GPIO0, GPIO1

## 6.91 Low Power Modes: Device Idle Mode and Wakeup

This example puts the device into IDLE mode then wakes up the device from IDLE using watchdog timer or using XINT1 which triggers on a falling edge of GPIO0.

In the case of watchdog, the device wakes up from the IDLE mode when the watch dog timer overflows, triggering an interrupt. In the ISR, the LED is toggled to indicate the device is out of IDLE mode. A pre scalar is set for the watch dog timer to change the counter overflow time.

In the case of XINT1, this GPIO0 pin must be pulled from high to low by an external agent for wakeup. GPIO0 is configured as an XINT1 pin to trigger an XINT1 interrupt upon detection of a falling edge.

Initially, pull GPIO0 high externally. To wake device from IDLE mode by triggering an XINT1 interrupt, pull GPIO0 low (falling edge). The wakeup process begins as soon as GPIO0 is held low for the time indicated in the device datasheet. After the device wakes up, GPIO1 can be observed to go low.

**External Connections**

- In the case of XINT1, To observe the device wakeup from IDLE mode, monitor GPIO1 with an oscilloscope, which goes high in the XINT\_1\_ISR.

## 6.92 Low Power Modes: Device Standby Mode and Wakeup

This example puts the device into STANDBY mode. If the lowest possible current consumption in STANDBY mode is desired, the JTAG connector must be removed from the device board while the device is in STANDBY mode.

This example puts the device into STANDBY mode then wakes up the device from STANDBY using watchdog timer or an LPM wakeup pin.

In case of watchdog , the device wakes up from the STANDBY mode when the watch dog timer overflows triggering an interrupt. In the ISR, the LED is toggled to indicate the device is out of STANDBY mode. A pre scalar is set for the watch dog timer to change the counter overflow time.

In case of wakeup pin , GPIO0 is configured as the LPM wakeup pin to trigger a WAKEINT interrupt upon detection of a low pulse. Initially, pull GPIO0 high externally. To wake device from STANDBY mode, pull GPIO0 low for at least (2+QUALSTDBY) OSCCLKS, then pull it high again.

The example then wakes up the device from STANDBY using GPIO0. GPIO0 wakes the device from STANDBY mode when a low pulse (signal goes high->low->high)is detected on the pin. This pin must be pulsed by an external agent for wakeup.

As soon as GPIO0 goes high again after the pulse, the device should wake up, and GPIO1 can be observed to toggle low.

### External Connections

- To observe when device wakes from STANDBY mode, monitor GPIO1 with an oscilloscope (set to 0 in WAKEINT ISR)

## 6.93 McBSP loopback example

This example demonstrates the McBSP operation using internal loopback. This example does not use interrupts. Instead, a polling method is used to check the receive data. The incoming data is checked for accuracy.

Three different serial word sizes can be tested. Before compiling this project, select the serial word size of 8, 16 or 32 by using the #define statements at the beginning of the code.

This program will execute until terminated by the user.

### 8-bit word example:

The sent data looks like this:

00 01 02 03 04 05 06 07 .... FE FF

### 16-bit word example:

The sent data looks like this:

0000 0001 0002 0003 0004 0005 0006 0007 .... FFFE FFFF

### 32-bit word example:

The sent data looks like this:

FFFF0000 FFFE0001 FFFD0002 .... 0000FFFF

**External Connections**

- None

**Watch Variables:**

- **txData1** - Sent data word: 8 or 16-bit or low half of 32-bit
- **txData2** - Sent data word: upper half of 32-bit
- **rxData1** - Received data word: 8 or 16-bit or low half of 32-bit
- **rxData2** - Received data word: upper half of 32-bit
- **errCountGlobal** - Error counter

**Note:**

txData2 and rxData2 are not used for 8-bit or 16-bit word size.

## 6.94 McBSP loopback with DMA example.

This example demonstrates the McBSP operation using internal loopback and utilizes the DMA to transfer data from one buffer to the McBSP and then from McBSP to another buffer.

Initially, txData[] is filled with values from 0x0000- 0x007F. The DMA moves the values in txData[] one by one to the DXRx registers of the McBSP. These values are transmitted and subsequently received by the McBSP. Then, the the DMA moves each data value to rxData[] as it is received by the McBSP.

The sent data buffer looks like this:

0000 0001 0002 0003 0004 0005 .... 007F

Three different serial word sizes can be tested. Before compiling this project, select the serial word size of 8, 16 or 32 by using the #define statements at the beginning of the code.

This example uses DMA channel 1 and 2 interrupts. The incoming data is checked for accuracy.

**External Connections**

- None

**Watch Variables:**

- **txData** - Sent data buffer
- **rxData** - Received data buffer
- **errCountGlobal** - Error counter

## 6.95 McBSP loopback with interrupts example

This example demonstrates the McBSP operation using internal loopback. This example uses interrupts. Both Rx and Tx interrupts are enabled.

**External Connections**

- None

**Watch Variables:**

- **txData** - Sent data word
- **rxData** - Received data word
- **errCountGlobal** - Error counter

## 6.96 McBSP loopback example using SPI mode

This example demonstrates the McBSP operation in SPI mode using internal loopback. This example demonstrates SPI master mode transfer of 32-bit word size with digital loopback enabled.

**McBSP Signals - SPI equivalent**

- MCLKX - SPICLK (master)
- MFSX - SPISTE (master)
- MDX - SPISIMO
- MCLKR - SPICLK (slave - not used for this example)
- MFSR - SPISTE (slave - not used for this example)
- MDR - SPISOMI (not used for this example)

**External Connections**

- None

**Watch Variables:**

- **txData1** - Sent data word: 8 or 16-bit or low half of 32-bit
- **txData2** - Sent data word: upper half of 32-bit
- **rxData1** - Received data word: 8 or 16-bit or low half of 32-bit
- **rxData2** - Received data word: upper half of 32-bit
- **errCountGlobal** - Error counter

## 6.97 McBSP external loopback example

This example demonstrates the McBSP operation using external loopback. This example does not use interrupts. Instead, a polling method is used to check the receive data. The incoming data is checked for accuracy.

Three different serial word sizes can be tested. Before compiling this project, select the serial word size of 8, 16 or 32 by using the #define statements at the beginning of the code.

This program will execute until terminated by the user.

**8-bit word example:**

The sent data looks like this:

00 01 02 03 04 05 06 07 .... FE FF

**16-bit word example:**

The sent data looks like this:

0000 0001 0002 0003 0004 0005 0006 0007 .... FFFE FFFF

**32-bit word example:**

The sent data looks like this:

FFFF0000 FFFE0001 FFFD0002 .... 0000FFFF

**External Connections**

**McBSPA Signals - McBSPB signals**

- MCLKXA - MCLKRB
- MFSXA - MFSRB
- MDXA - MDRB
- MCLKRA - MCLKXB
- MFSRA - MFSXB
- MDRA - MDXB

**Watch Variables:**

- **txData1A** - Sent data word by McBSPA Transmitter:8 or 16-bit or low half of 32-bit
- **txData2A** - Sent data word by McBSPA Transmitter:upper half of 32-bit
- **rxData1A** - Received data word by McBSPA Receiver:8 or 16-bit or lower half of 32-bit
- **rxData2A** - Received data word by McBSPA Receiver:upper half of 32-bit
- **txData1B** - Sent data word by McBSPB Transmitter:8 or 16-bit or low half of 32-bit
- **txData2B** - Sent data word by McBSPB Transmitter:upper half of 32-bit
- **rxData1B** - Received data word by McBSPB Receiver:8 or 16-bit or lower half of 32-bit
- **rxData2B** - Received data word by McBSPB Receiver:upper half of 32-bit
- **errCountGlobal** - Error counter

**Note:**

txData2A, rxData2A, txData2B and rxData2B are not used for 8-bit or 16-bit word size.

## 6.98 McBSP external loopback example using SPI mode

This example demonstrates the McBSP operation in SPI mode using external loopback. This example configures McBSP instances available on the device as SPI master and slave and demonstrates transfer of 32-bit word size data with external loopback.

**External Connections**

**SPI Master(McBSPA) SPI Slave(McBSPB)**

- MCLKXA(SPICLK) (GPIO22) - MCLKXB(SPICLK) (GPIO26)
- MFSXA (SPISTE) (GPIO23) - MFSXB (SPISTE) (GPIO27)

- MDXA (SPISIMO)(GPIO20) - MDRB (SPISIMO)(GPIO25)
- MDRA (SPISOMI)(GPIO21) - MDXB (SPISOMI)(GPIO24)

**Watch Variables:**

- **txData1** - Sent data word: 8 or 16-bit or low half of 32-bit
- **txData2** - Sent data word: upper half of 32-bit
- **rxData1** - Received data word: 8 or 16-bit or low half of 32-bit
- **rxData2** - Received data word: upper half of 32-bit
- **errCountGlobal** - Error counter

## 6.99 Tune Baud Rate via UART Example

This example demonstrates the process of tuning the UART/SCI baud rate of a C2000 device based on the UART input from another device. As UART does not have a clock signal, reliable communication requires baud rates to be reasonably matched. This example addresses cases where a clock mismatch between devices is greater than is acceptable for communications, requiring baud compensation between boards. As reliable communication only requires matching the EFFECTIVE baud rate, it does not matter which of the two boards executes the tuning (the board with the less-accurate clock source does not need to be the one to tune; as long as one of the two devices tunes to the other, then proper communication can be established).

To tune the baud rate of this device, SCI data (of the desired baud rate) must be sent to this device. The input SCI baud rate must be within the +/- MARGINPERCENT of the TARGETBAUD chosen below. These two variables are defined below, and should be chosen based on the application requirements. Higher MARGINPERCENT will allow more data to be considered "correct" in noisy conditions, and may decrease accuracy. The TARGETBAUD is what was expected to be the baud rate, but due to clock differences, needs to be tuned for better communication robustness with the other device.

For LaunchPad and custom devices, there may be need to configure different GPIO for the SCI\_RX and SCI\_TX pins if GPIO9 and GPIO8 are not available for these devices. This can be configured using the included .syscfg file. Open the SCI peripheral, open the "PinMux" / "Peripheral and Pin Configuration" configuration section and choose GPIOs that are available on the given board. Update GPIO\_SCIRX\_NUMBER below to match the RX choice. Please refer to the LaunchPad user guide for list of available GPIO.

There may also be a need to add a global define to choose the LaunchPad. For example, in device.h, some devices require choosing a LaunchPad configuration, such as writing define \_LAUNCHXL\_F2####. Please ensure these are defined if used.

NOTE: Lower baud rates have more granularity in register options, and therefore tuning is more affective at these speeds.

**External Connections** for Control Card

- SCIA\_RX/eCAP1 is on GPIO9, connect to incoming SCI communications
- SCIA\_TX is on GPIO8, for observation externally

**Watch Variables**

- **avgBaud** - Baud rate that was detected and set after tuning



## 6.100 SCI FIFO Digital Loop Back

This program uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required. The pinmux and SCI modules are configured through the sysconfig file.

This test uses the loopback test mode of the SCI module to send characters starting with 0x00 through 0xFF. The test will send a character and then check the receive buffer for a correct match.

### Watch Variables

- **loopCount** - Number of characters sent
- **errorCount** - Number of errors detected
- **sendChar** - Character sent
- **receivedChar** - Character received

## 6.101 SCI Digital Loop Back with Interrupts

This test uses the internal loop back test mode of the peripheral. Other than boot mode pin configuration, no other hardware configuration is required. Both interrupts and the SCI FIFOs are used.

A stream of data is sent and then compared to the received stream. The SCI-A sent data looks like this:

00 01

01 02

02 03

....

FE FF

FF 00

etc..

The pattern is repeated forever.

### Watch Variables

- **sDataA** - Data being sent
- **rDataA** - Data received
- **rDataPointA** - Keep track of where we are in the data stream. This is used to check the incoming data

## 6.102 SCI Echoback

This test receives and echo-backs data through the SCI-A port.

A terminal such as 'putty' can be used to view the data from the SCI and to send information to the SCI. Characters received by the SCI port are sent back to the host.

**Running the Application** Open a COM port with the following settings using a terminal:

- Find correct COM port
- Bits per second = 9600
- Data Bits = 8
- Parity = None
- Stop Bits = 1
- Hardware Control = None

The program will print out a greeting and then ask you to enter a character which it will echo back to the terminal.

**Watch Variables**

- loopCounter - the number of characters sent

**External Connections**

Connect the SCI-A port to a PC via a USB cable. Refer to the hardware user guide for the UART/USB connector information.

## 6.103 SDFM Filter Sync CPU

In this example, SDFM filter data is read by CPU in SDFM ISR routine. The SDFM configuration is shown below:

- SDFM used in this example - SDFM1
- Input control mode selected - MODE0
- Comparator settings
  - Sinc3 filter selected
  - OSR = 32
  - HLT = 0x7FFF (Higher threshold setting)
  - LLT = 0x0000 (Lower threshold setting)
- Data filter settings
  - All the 4 filter modules enabled
  - Sinc3 filter selected
  - OSR = 128
  - All the 4 filters are synchronized by using MFE (Master Filter enable bit)
  - Filter output represented in 16 bit format
  - In order to convert 25 bit Data filter into 16 bit format user needs to right shift by 8 bits for Sinc3 filter with OSR = 128
- Interrupt module settings for SDFM filter
  - All the 4 higher threshold comparator interrupts disabled
  - All the 4 lower threshold comparator interrupts disabled
  - All the 4 modulator failure interrupts disabled
  - All the 4 filter will generate interrupt when a new filter data is available.

## 6.104 SDFM Filter Sync CPU

In this example, SDFM filter data is read by CPU in SDFM ISR routine. The SDFM configuration is shown below:

- SDFM used in this example - SDFM1
- Input control mode selected - MODE0
- Comparator settings
  - Sinc3 filter selected
  - OSR = 32
  - HLT = 0x7FFF (Higher threshold setting)
  - LLT = 0x0000 (Lower threshold setting)
- Data filter settings
  - All the 4 filter modules enabled
  - Sinc3 filter selected
  - OSR = 128
  - All the 4 filters are synchronized by using MFE (Master Filter enable bit)
  - Filter output represented in 16 bit format
  - In order to convert 25 bit Data filter into 16 bit format user needs to right shift by 8 bits for Sinc3 filter with OSR = 128
- Interrupt module settings for SDFM filter
  - All the 4 higher threshold comparator interrupts disabled
  - All the 4 lower threshold comparator interrupts disabled
  - All the 4 modulator failure interrupts disabled
  - All the 4 filter will generate interrupt when a new filter data is available.

## 6.105 SPI Digital Loopback

This program uses the internal loopback test mode of the SPI module. This is a very basic loopback that does not use the FIFOs or interrupts. A stream of data is sent and then compared to the received stream. The pinmux and SPI modules are configured through the sysconfig file.

The sent data looks like this:

0000 0001 0002 0003 0004 0005 0006 0007 .... FFFE FFFF 0000

This pattern is repeated forever.

### External Connections

- None

### Watch Variables

- **sData** - Data to send
- **rData** - Received data

## 6.106 SPI Digital Loopback with FIFO Interrupts

This program uses the internal loopback test mode of the SPI module. Both the SPI FIFOs and their interrupts are used.

A stream of data is sent and then compared to the received stream. The sent data looks like this:

0000 0001

0001 0002

0002 0003

....

FFFE FFFF

FFFF 0000

etc..

This pattern is repeated forever.

### External Connections

- None

### Watch Variables

- **sData** - Data to send
- **rData** - Received data
- **rDataPoint** - Used to keep track of the last position in the receive stream for error checking

## 6.107 SPI Digital External Loopback with FIFO Interrupts

This program uses the external loopback between two SPI modules. Both the SPI FIFOs and their interrupts are used. SPIA is configured as a slave and receives data from SPI B which is configured as a master.

A stream of data is sent and then compared to the received stream. The sent data looks like this:

0000 0001

0001 0002

0002 0003

....

FFFE FFFF

FFFF 0000

etc..

This pattern is repeated forever.

### External Connections

-GPIO25 and GPIO17 - SPISOMI -GPIO24 and GPIO16 - SPISIMO -GPIO27 and GPIO19 - SPISTE -GPIO26 and GPIO18 - SPICLK

**Watch Variables**

- **sData** - Data to send
- **rData** - Received data
- **rDataPoint** - Used to keep track of the last position in the receive stream for error checking

## 6.108 SPI Digital Loopback with DMA

This program uses the internal loopback test mode of the SPI module. Both DMA interrupts and the SPI FIFOs are used. When the SPI transmit FIFO has enough space (as indicated by its FIFO level interrupt signal), the DMA will transfer data from global variable sData into the FIFO. This will be transmitted to the receive FIFO via the internal loopback.

When enough data has been placed in the receive FIFO (as indicated by its FIFO level interrupt signal), the DMA will transfer the data from the FIFO into global variable rData.

When all data has been placed into rData, a check of the validity of the data will be performed in one of the DMA channels' ISRs.

**External Connections**

- None

**Watch Variables**

- **sData** - Data to send
- **rData** - Received data

## 6.109 Missing clock detection (MCD)

This example demonstrates the missing clock detection functionality and the way to handle it. Once the MCD is simulated by disconnecting the OSCCLK to the MCD module an NMI would be generated. This NMI determines that an MCD was generated due to a clock failure which is handled in the ISR.

Before an MCD the clock frequency would be as per device initialization (200Mhz). Post MCD the frequency would move to 10Mhz or INTOSC1.

The example also shows how we can lock the PLL after missing clock, detection, by first explicitly switching the clock source to INTOSC1, resetting the missing clock detect circuit and then re-locking the PLL. Post a re-lock the clock frequency would be 200Mhz but using the INTOSC1 as clock source.

**External Connections**

- None.

**Watch Variables**

- **fail** - Indicates that a missing clock was either not detected or was not handled correctly.
- **mcd\_clkfail\_isr** - Indicates that the missing clock failure caused an NMI to be triggered and called an the ISR to handle it.
- **mcd\_detect** - Indicates that a missing clock was detected.
- **result** - Status of a successful handling of missing clock detection

## 6.110 CPU Timers

This example configures CPU Timer0, 1, and 2 and increments a counter each time the timer asserts an interrupt.

### External Connections

- None

### Watch Variables

- cpuTimer0IntCount
- cpuTimer1IntCount
- cpuTimer2IntCount

## 6.111 USB HUB Host example

This example application demonstrates how to support a USB keyboard and USB Mouse with a USB Hub. The display will show the connected devices on the USB hub.

To run the example you should connect a USB Hub to the microUSB port on the top of the control-CARD and open up a serial terminal with the above settings to view the characters typed on the keyboard. Allow the example to run with the hub connected and then connect the USB Host Mouse or Keyboard.

When a USB Mouse is connected on the Hub the position of the mouse pointer and the state of the mouse buttons are output to the display. Similarly when a USB Keyboard is connected, any key press on the keyboard will cause them to be sent out the SCI at 115200 baud with no parity, 8 bits and 1 stop bit.

This example is for depicting the usage of Hub.

There are some limitations in this example : 1. The Example fails to recognize the USB Hub and the device if the Mouse/Keyboard is already connected to the USB Hub and the Hub is connected to the Micro USB of the Control Card. 2. The same port should not be used to connect a Keyboard and mouse.

## 6.112 USB CDC serial example

This example application turns the evaluation kit into a virtual serial port when connected to the USB host system. The application supports the USB Communication Device Class, Abstract Control Model to redirect SCIA traffic to and from the USB host system.

Connect USB cables from your PC to both the mini and microUSB connectors on the controlCARD. Figure out what COM ports your controlCARD is enumerating (typically done using Device Manager in Windows) and open a serial terminal to each of with the settings 115200 Baud 8-N-1. Characters typed in one terminal should be echoed in the other and vice versa.

A driver information (INF) file for use with Windows XP, Windows 7 and Windows 10 can be found in the windows\_drivers directory.

## 6.113 USB HID Mouse Device

This example application turns the evaluation board into a USB mouse supporting the Human Interface Device class. After loading and running the example simply connect the PC to the controlCARDs microUSB port using a USB cable, and the mouse pointer will move in a square pattern for the duration of the time it is plugged in.

SCIA, connected to the FTDI virtual COM port and running at 115200, 8-N-1, is used to display messages from this application.

## 6.114 USB Device Keyboard

This example application turns the evaluation board into a USB keyboard supporting the Human Interface Device class. The global variable ui32Button should be modified to wake up the USB. Care should be taken to ensure that the active window can safely receive the text; enter is not pressed at any point so no actions are attempted by the host if a terminal window is used.

The device implemented by this application also supports USB remote wake up allowing it to request the host to reactivate a suspended bus. If the bus is suspended (as indicated on the application display), updating ui32Button will request a remote wakeup assuming the host has not specifically disabled such requests.

To run the example compile the project, load to the target, and run the example. After the example is running, connect a USB cable from the PC to the microUSB port on the controlCARD. Modify ui32Button value in the expressions window and then focus should be on the window so that we can receive keyboard input (i.e. NotePad).

## 6.115 USB Generic Bulk Device

This example provides a generic USB device offering simple bulk data transfer to and from the host. The device uses a vendor-specific class ID and supports a single bulk IN endpoint and a single bulk OUT endpoint. Data received from the host is assumed to be ASCII text and it is echoed back with the case of all alphabetic characters swapped.

SCIA, connected to the FTDI virtual COM port and running at 115200, 8-N-1, is used to display messages from this application.

A Windows INF file for the device is provided under the windows drivers directory. This INF contains information required to install the WinUSB subsystem on WindowsXP, Windows 7 and Windows 10. WinUSB is a Windows subsystem allowing user mode applications to access the USB device without the need for a vendor-specific kernel mode driver.

A sample Windows command-line application, `usb_bulk_example`, illustrating how to connect to and communicate with the bulk device is also provided. Project files are included to allow the examples to be built using Microsoft VisualStudio. Source code for this application can be found in directory `~/C2000Ware/utilities/tools/{Device}/usb_bulk_example/Release`

## 6.116 USB HID Mouse Host

This application demonstrates the handling of a USB mouse attached to the evaluation kit. Once attached, the position of the mouse pointer and the state of the mouse buttons are output to the display.

SCIA, which is connected to the FTDI virtual serial port on the controlCARD board, is configured for 115200 bits per second, and 8-N-1 mode. When a HID compliant mouse is connected to the microUSB port on the top of the controlCARD, position and button information will be displayed to the console.

## 6.117 USB HID Keyboard Host

This example application demonstrates how to support a USB keyboard attached to the evaluation kit board. The display will show if a keyboard is currently connected and the current state of the Caps Lock key on the keyboard that is connected on the bottom status area of the screen. Pressing any keys on the keyboard will cause them to be sent out the SCI at 115200 baud with no parity, 8 bits and 1 stop bit. Any keyboard that supports the USB HID BIOS protocol should work with this demo application.

To run the example you should connect a HID compliant keyboard to the microUSB port on the top of the controlCARD and open up a serial terminal with the above settings to view the characters typed on the keyboard.

## 6.118 USB Mass Storage Class Host

This example application demonstrates reading a file system from a USB mass storage class device. It makes use of FatFs, a FAT file system driver. It provides a simple command console via the SCI for issuing commands to view and navigate the file system on the mass storage device.

The first SCI, which is connected to the FTDI virtual serial port on the controlCARD board, is configured for 115200 bits per second, and 8-N-1 mode. When the program is started a message will be printed to the terminal. Type "help" for command help.

After loading and running the example, open a serial terminal with the above settings to open the command prompt. Then connect a USB MSC device to the microUSB port on the top of the controlCARD.

For additional details about FatFs, see the following site: [http://elm-chan.org/fsw/ff/00index\\_e.html](http://elm-chan.org/fsw/ff/00index_e.html)



## 6.119 USB Dual Detect

This program uses a GPIO to do ID detection. If a host is connected to the device's USB port, the stack will switch to device mode and enumerate as mouse. If a mouse device is connected to the device's USB port, the stack will switch to host mode and display the mouses movement and button press information in a serial terminal.

## 6.120 USB Throughput Bulk Device Example (usb\_ex9\_throughput\_dev\_bulk)

This example provides a throughput numbers of bulk data transfer to and from the host. The device uses a vendor-specific class ID and supports a single bulk IN Endpoint and a single bulk OUT Endpoint.

SCIA, connected to the FTDI virtual COM port and running at 115200, 8-N-1, is used to display messages from this application.

A Windows INF file for the device is provided under the windows drivers directory. This INF contains information required to install the WinUSB subsystem on WindowsXP, Windows 7 and Windows 10. This is present in utilities/windows\_drivers.

A sample Windows command-line application, usb\_throughput\_bulk\_example, illustrating how to connect to and communicate with the bulk device is also provided. Project files are included to allow the examples to be built using Microsoft VisualStudio. Source code for this application can be found in directory ~/C2000Ware/utilities/tools/usb\_throughput\_bulk\_example/Release.

After running the example in CCS Connect the USB Micro to the PC. Then the example will wait to receive data from the application. Run the usb\_throughput\_bulk example, the throughput and Data Packets Transferred.

## 6.121 Watchdog

This example shows how to service the watchdog or generate a wakeup interrupt using the watchdog. By default the example will generate a Wake interrupt. To service the watchdog and not generate the interrupt, uncomment the SysCtl\_serviceWatchdog() line in the main for loop.

### External Connections

- None.

### Watch Variables

- wakeCount - The number of times entered into the watchdog ISR
- loopCount - The number of loops performed while not in ISR



## 7 Device APIs for examples

### 7.1 Introduction

This chapter provides information on the APIs included in device.c file

### 7.2 API Functions

#### Functions

- void `__error__` (const char \*filename, uint32\_t line)
- void `Device_configureTMXAnalogTrim` (void)
- void `Device_enableAllPeripherals` (void)
- void `Device_enableUnbondedGPIOPullups` (void)
- void `Device_enableUnbondedGPIOPullupsFor100Pin` (void)
- void `Device_enableUnbondedGPIOPullupsFor176Pin` (void)
- void `Device_initGPIO` (void)

#### 7.2.1 Function Documentation

##### 7.2.1.1 `__error__`

Error handling function to be called when an ASSERT is violated.

**Prototype:**

```
void  
__error__(const char *filename,  
          uint32_t line)
```

**Parameters:**

\***filename** File name in which the error has occurred

**line** Line number within the file

**Returns:**

None

##### 7.2.1.2 void `Device_configureTMXAnalogTrim` (void)

Function to implement Analog trim of TMX devices.

**Parameters:**

**None**

**Returns:**

None

### 7.2.1.3 void Device\_enableAllPeripherals (void)

Function to turn on all peripherals, enabling reads and writes to the peripherals' registers.

Note that to reduce power, unused peripherals should be disabled.

**Parameters:**

*None*

**Returns:**

None

### 7.2.1.4 void Device\_enableUnbondedGPIOPullups (void)

Function to enable pullups for the unbonded GPIOs on the 176PTP package.

**Parameters:**

*None*

**Returns:**

None

### 7.2.1.5 void Device\_enableUnbondedGPIOPullupsFor100Pin (void)

Function to enable pullups for the unbonded GPIOs on the 100PZ package: GPIOs Grp Bits 0-1 A 1:0 5-9 A 9:5 22-40 A 31:22 B 8:0 44-57 B 25:12 67-68 C 4:3 74-77 C 13:10 79-83 C 19:15 93-168 C 31:29 D 31:0 E 31:0 F 8:0.

**Parameters:**

*None*

**Returns:**

None

### 7.2.1.6 void Device\_enableUnbondedGPIOPullupsFor176Pin (void)

Function to enable pullups for the unbonded GPIOs on the 176PTP package: GPIOs Grp Bits 95-132 C 31 D 31:0 E 4:0 134-168 E 31:6 F 8:0.

**Parameters:**

*None*

**Returns:**

None

#### 7.2.1.7 void Device\_initGPIO (void)

Function to disable pin locks on GPIOs.

**Parameters:**

*None*

**Returns:**

None

---

# IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

## Products

|                             |                                                                    |
|-----------------------------|--------------------------------------------------------------------|
| Amplifiers                  | <a href="http://amplifier.ti.com">amplifier.ti.com</a>             |
| Data Converters             | <a href="http://dataconverter.ti.com">dataconverter.ti.com</a>     |
| DLP® Products               | <a href="http://www.dlp.com">www.dlp.com</a>                       |
| DSP                         | <a href="http://dsp.ti.com">dsp.ti.com</a>                         |
| Clocks and Timers           | <a href="http://www.ti.com/clocks">www.ti.com/clocks</a>           |
| Interface                   | <a href="http://interface.ti.com">interface.ti.com</a>             |
| Logic                       | <a href="http://logic.ti.com">logic.ti.com</a>                     |
| Power Mgmt                  | <a href="http://power.ti.com">power.ti.com</a>                     |
| Microcontrollers            | <a href="http://microcontroller.ti.com">microcontroller.ti.com</a> |
| RFID                        | <a href="http://www.ti-rfid.com">www.ti-rfid.com</a>               |
| RF/IF and ZigBee® Solutions | <a href="http://www.ti.com/lprf">www.ti.com/lprf</a>               |

## Applications

|                    |                                                                          |
|--------------------|--------------------------------------------------------------------------|
| Audio              | <a href="http://www.ti.com/audio">www.ti.com/audio</a>                   |
| Automotive         | <a href="http://www.ti.com/automotive">www.ti.com/automotive</a>         |
| Broadband          | <a href="http://www.ti.com/broadband">www.ti.com/broadband</a>           |
| Digital Control    | <a href="http://www.ti.com/digitalcontrol">www.ti.com/digitalcontrol</a> |
| Medical            | <a href="http://www.ti.com/medical">www.ti.com/medical</a>               |
| Military           | <a href="http://www.ti.com/military">www.ti.com/military</a>             |
| Optical Networking | <a href="http://www.ti.com/opticalnetwork">www.ti.com/opticalnetwork</a> |
| Security           | <a href="http://www.ti.com/security">www.ti.com/security</a>             |
| Telephony          | <a href="http://www.ti.com/telephony">www.ti.com/telephony</a>           |
| Video & Imaging    | <a href="http://www.ti.com/video">www.ti.com/video</a>                   |
| Wireless           | <a href="http://www.ti.com/wireless">www.ti.com/wireless</a>             |

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2026, Texas Instruments Incorporated