


Special tool

Test gauge

435 589 00 21 00

- Locking screw on flywheel coneunscrew the housing.
- Turn the crankshaft until the carrier is coated-disc becomes visible.
- Depress the clutch pedal.
- Turn drive shaft to gearbox until offsaving between front and rear frictionlay is visible.

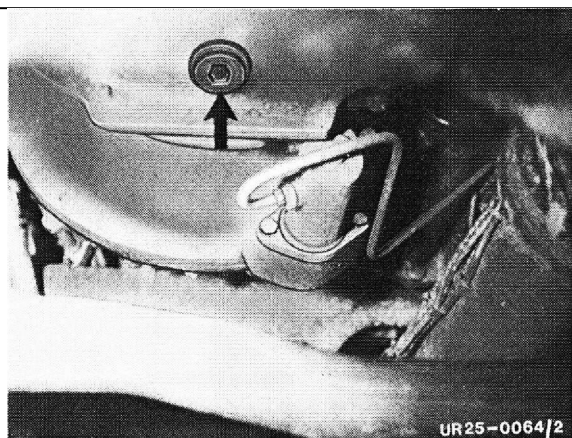

- Insert special tool and rear pad check.

Note:

Only the rear surface of the driver can be used-disc to be checked. Experience has shown that this is subject to greater wear.

Markings on the special tool are "white" and "red" attached.

"White" means that the drive plate is good.

"Red" means to replace the drive plate.

- Screw in the screw plug.

