


Check the fluid level in the brake system expansion tank

- Clean the expansion tank with the cap.
- Check fluid level. The liquid level is correct when the mark »MAX« is on.

Danger:


- If the fluid level is in the "MIN" range and there are no leaks on the brake system, the brake pads are worn out. Do not add brake fluid. Check brake pads for wear and if necessary have it replaced.

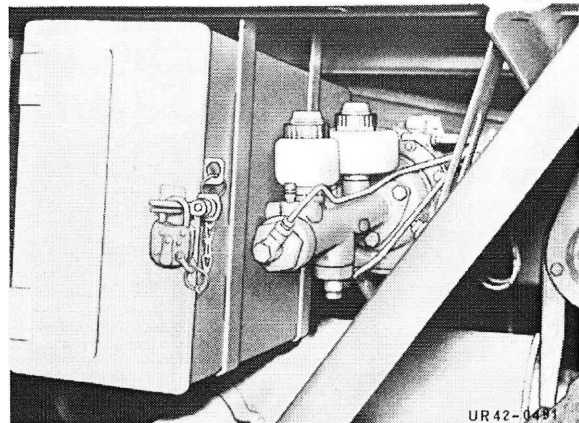

Check the liquid level in the frost protection

Danger: Release compressed air at the reservoir (drainage valve) before testing.


- Clean the area around the dipstick (1).
- Unscrew, pull and wipe the dipstick.
- Reinsert the dipstick and pull again.
- Read off the liquid level on the dipstick. The level must be at the top mark.
- Must antifreeze be refilled Only fill this in the summer position (2) through the filling opening.
- Screw in the dipstick.
- When starting up, adjustment handle on winter switch over (3). To do this, continue turning the adjustment handle until it is pushed up automatically.

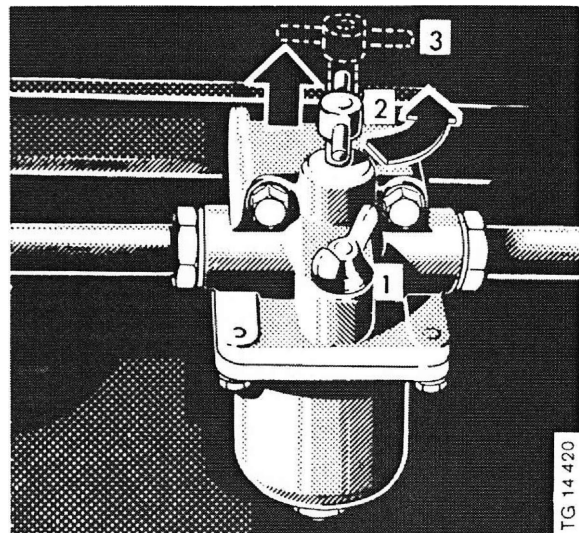


Drain the compressed air system

For dewatering in the compressed air tanks Supply pressure.

- On the rope leading to the individual drainage-valve leads, pull until only compressed air is discharged occurs. Then let go of the rope.

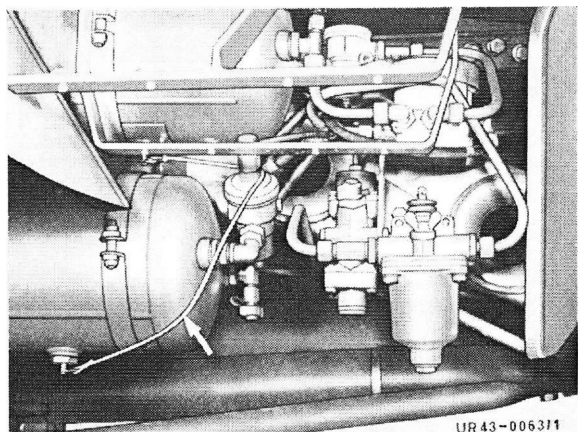

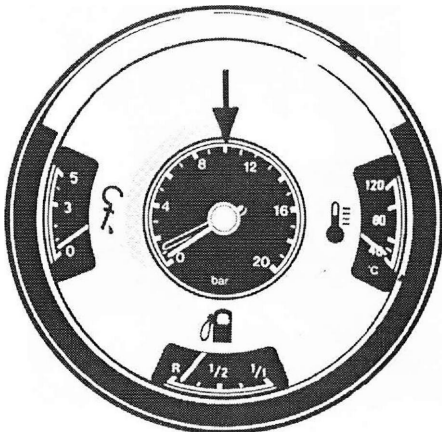

UZ54 00732

General tightness control of the compressed air investment

- Start the engine and let it run until there is supply pressure 18 bar (kp / cm^{2nd}) is.
- Switch off the engine and compressed air indicator in combination. Note the instrument.
- The compressed air system is tight when at 18.0 bar (kp / cm^{2nd}) the loss of compressed air within 10 min not more than 0.3 bar (kp / cm^{2nd}) is.

Setting data

mm

Minimum brake pad size


Special tool

Piston reset device extractor

000 589 52A3 00


001 589 43 33 00

- Remove wheel,
- Remove cover plate from fixed saddle.

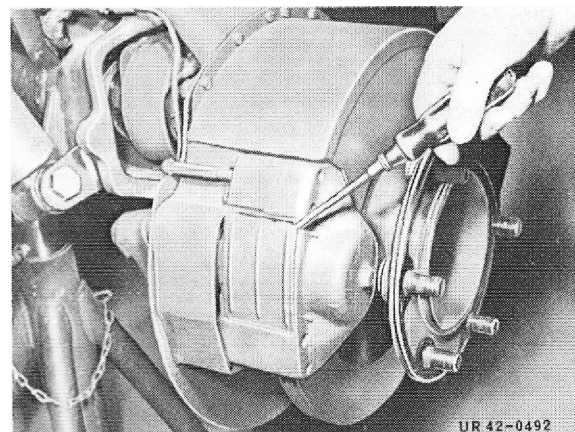



- Brake pads (1) for condition and pad thickness check. They must not touch the cross spring (2), replace if necessary.

- Installation takes place in the reverse order.

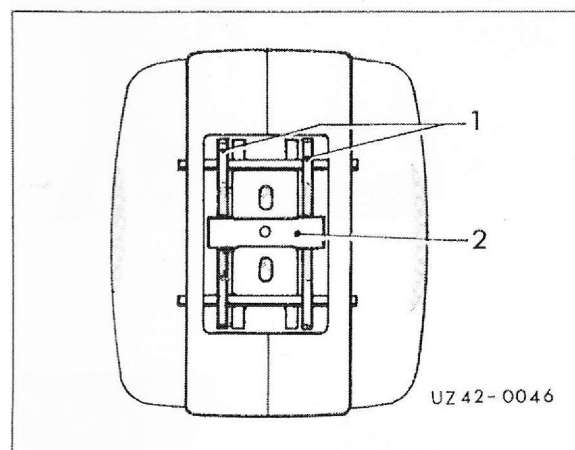

- The brake pads need to be replaced. Remove the top cover plate.

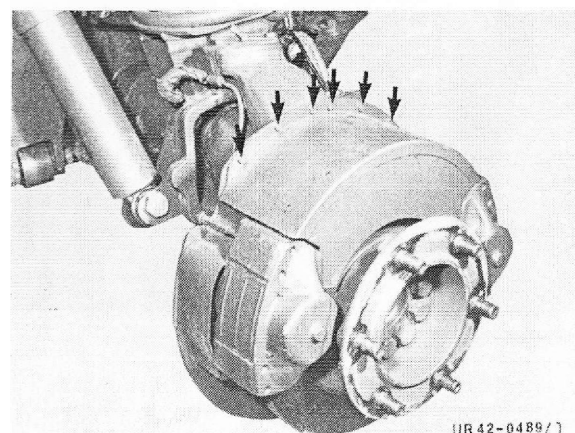


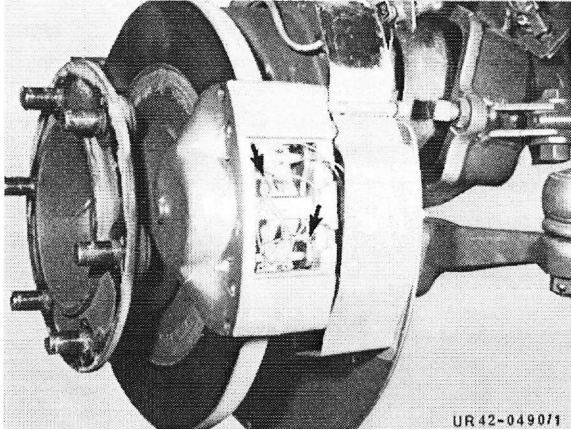


Disconnect cable for wear indicator on brake pads-hen.

NOTE:

Cable is only attached to the left rear fixed saddle-closed.

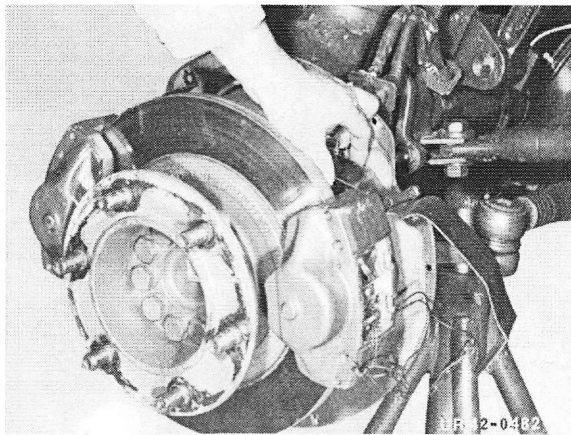


0 Remove the mudguard.

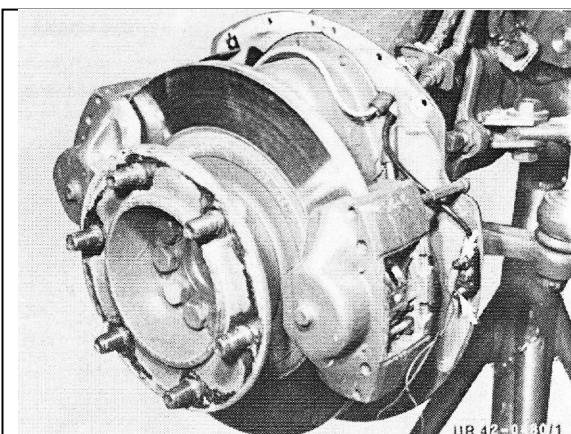


0 Cable for wear indicator on the carrier platepull.


- Knock out the holding pins.

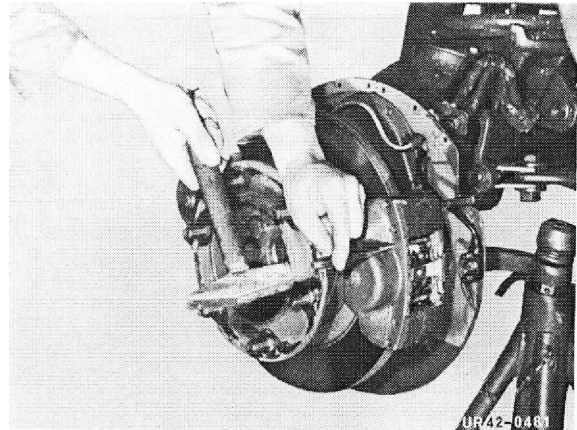


- Remove the cross spring.

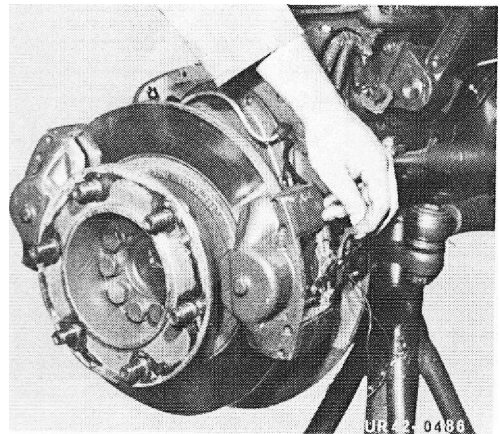


- Pull out brake pads with special tool.

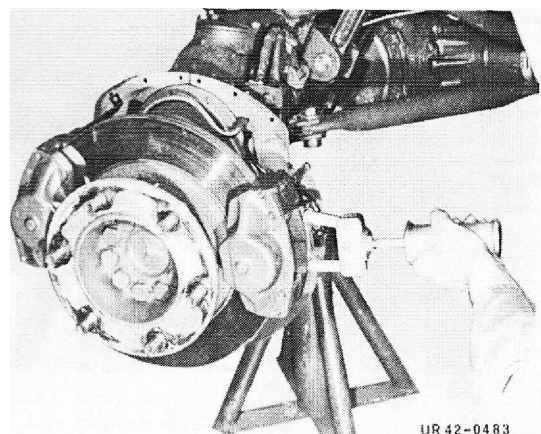


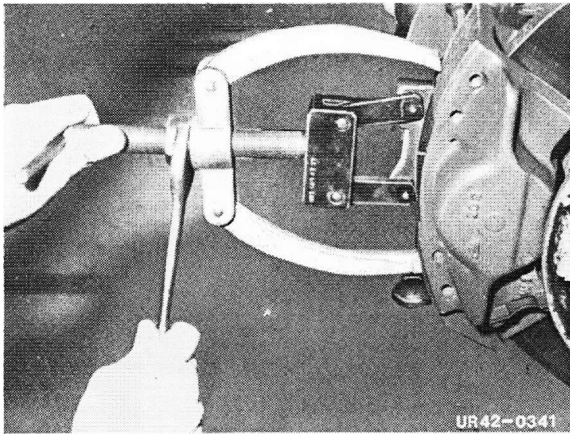

- If the brake pads cannot be removed, unscrew the impact weight from the special tool and Screw on existing counter support with spindle.
- Pull off the brake pads.

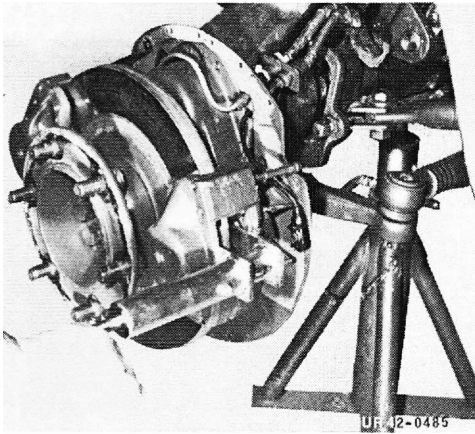


- Bring the piston in the fixed caliper into the starting position using a special tool.
- Fixed saddle shaft, brake disc and all outClean built parts and check for condition. Cable for wear indicator also on throughcheck gear.

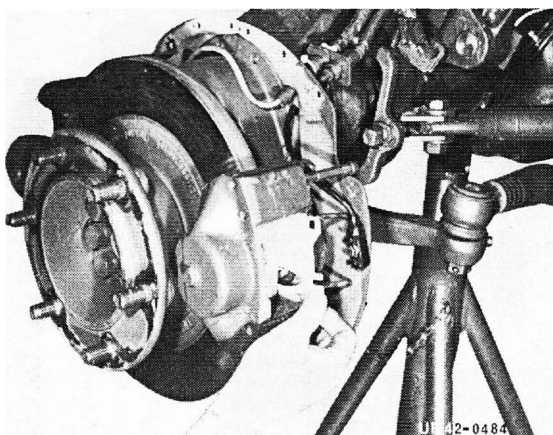

- Oily brake discs with special cleaner reini-Determine and eliminate the cause
- The shielding plates behind the brakesInstall blocks so that the opening to the panesenema shows.

- Further installation takes place in reverse order-order. To do this, always install brake pads in sets per axis.
- After installing the brake pads, press the brake foot lever vigorously several times and the wheel to move freelycheck speed.
- Check the fluid level in the expansion tanks, correct if necessary.

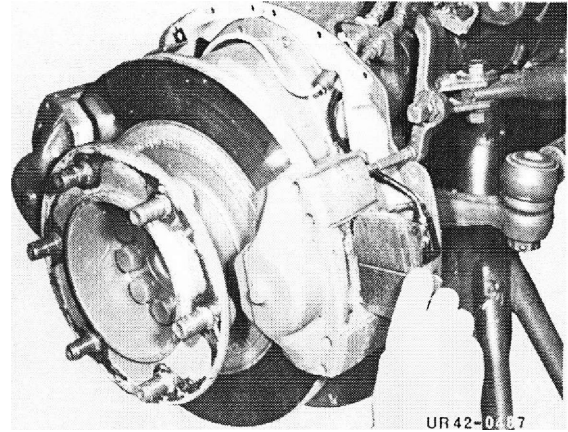


Setting data	mm
Brake pad setting dimension on fixed caliper, cover side	0.3
Flange side	0.3
Minimum brake pad size	2.0


Special tools


Piston reset device	000 589 52 43 00
Extractor	001 589 43 33 00

- Remove the wheel.
- Release fixed part brake.
- Remove cover plate from fixed saddle.

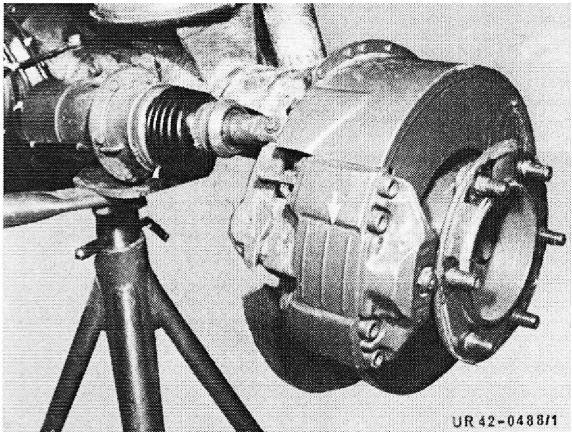

- Check the brake pads (1) for condition and thickness. They must not touch the cross spring (2).
- Installation takes place in reverse order,
- If the brake pads have to be replaced, remove the cover plate (picture above)

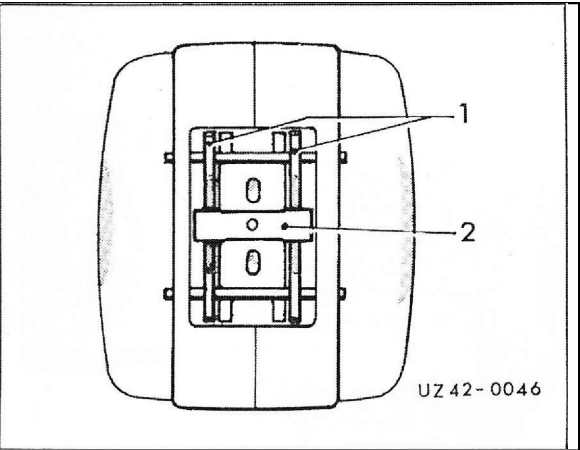


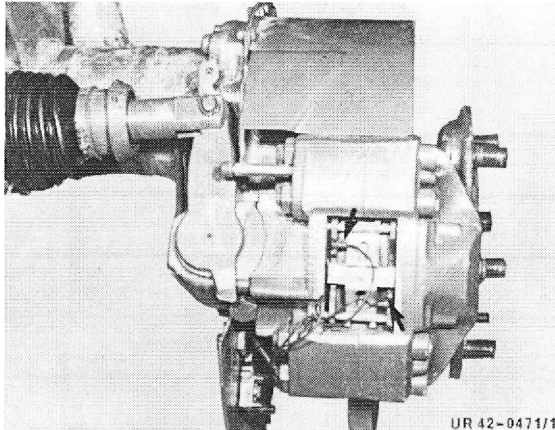


- Cable for wear indicator on brake padpull.

Note:

Cable is only connected to the left fixed saddle.

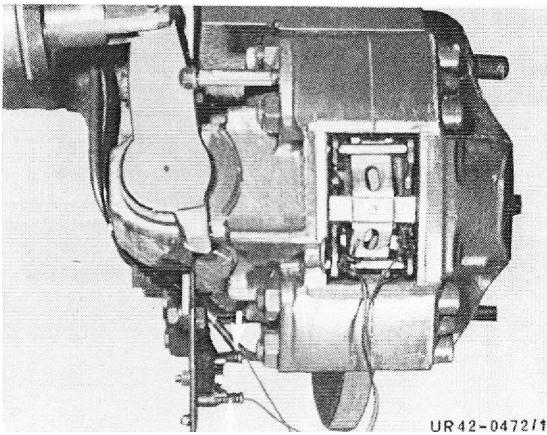


- Cable for wear indicator on the carrier platepull.

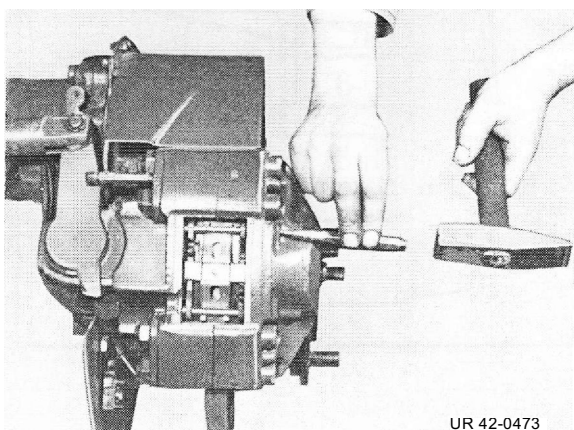


- Knock out the holding


- Remove the cross spring.

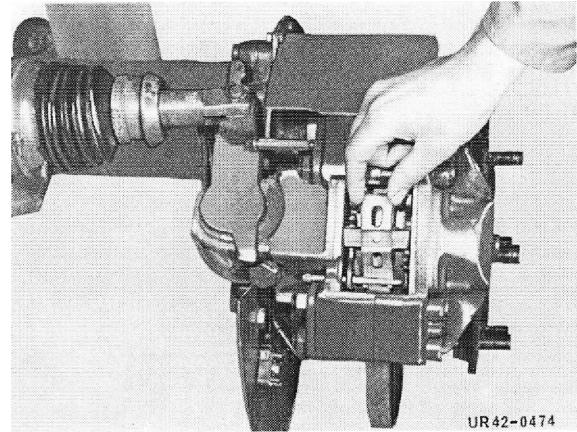


- Pull out brake pads with special tool.

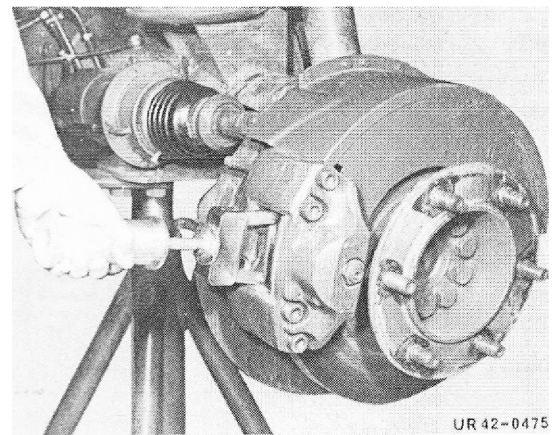


- Let the brake pads be as described above do not pull out, then remove impact weightscrew and screw on counter support with spindle. Pull off the brake pads.

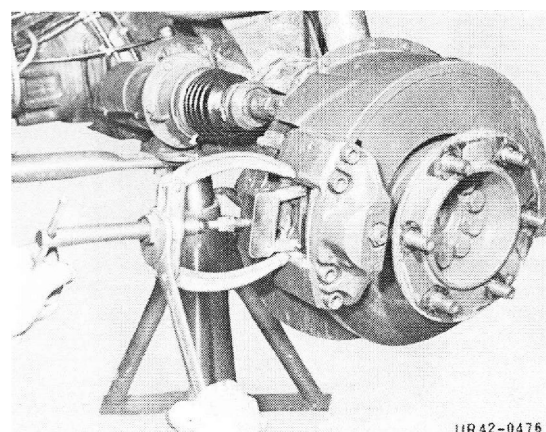

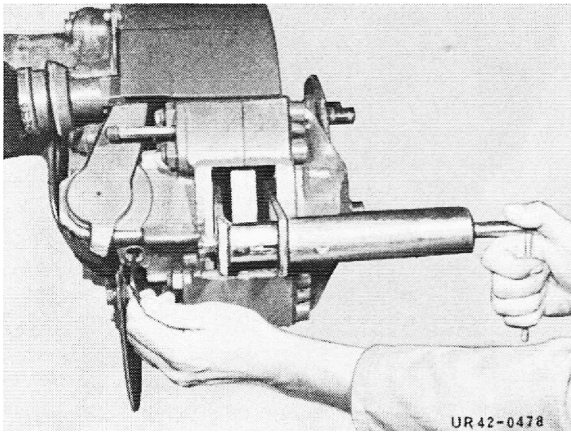


- Unscrew the screw plug on the flange sideben, adjusting screw **left around** turn and at the same time piston with special tool in offpush the gear back.

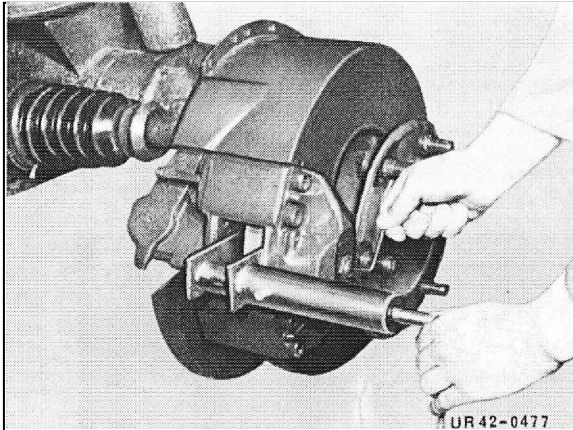

- Insert special tool in fixed saddle. Loosen lock nut on cover side, adjusting screw **right round** turn and at the same time return the piston to the starting position with a special tool to press.


- Fixed saddle shaft, brake disc and all outClean built parts and check for condition. Cable for wear indicator also on throughcheck gear.

- Oily brake discs with special cleaner reini-Determine and eliminate the cause.

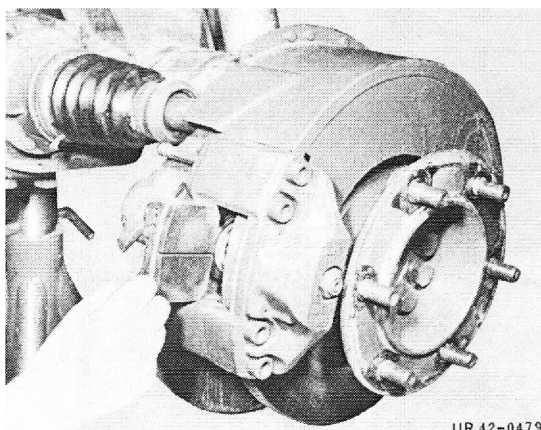

- Brake pads in fixed caliper in sets per axle introduce.
- Install cable for wear indicator.

- Carry out basic setting of the brake pads. In addition, feeler gauge between brake on flange side- Insert block and brake disc and adjust brake block with adjusting screw. Brake pad onNote the setting dimension.

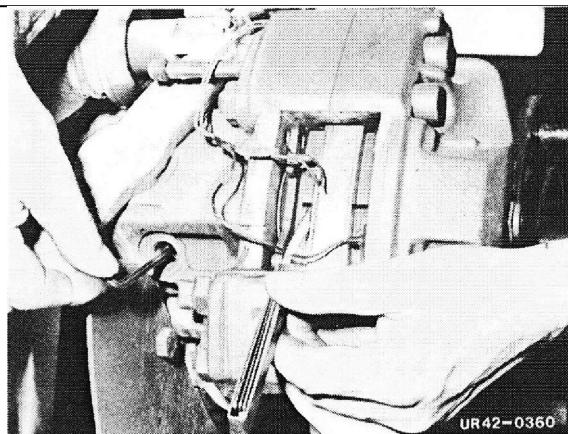


- Then on the cover side feeler gauge between- Insert the brake pad and brake disc and adjust the brake pad with the adjusting screw. BrakeNote the block setting dimension.

- Further installation takes place in reverse rows- episode.

- After installing the brake pads, apply the service and parking brakes several times and check the wheel for freedom of movement.

- Check the fluid level in the expansion tanks, correct if necessary.

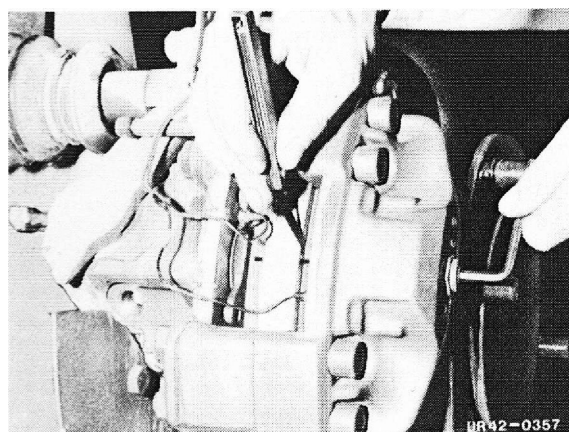


Functional test of the spring-loaded quick release device 42

- Secure the vehicle against rolling away.
- Apply the parking brake.

Note:

Spring accumulator is vented and piston rod drive in.

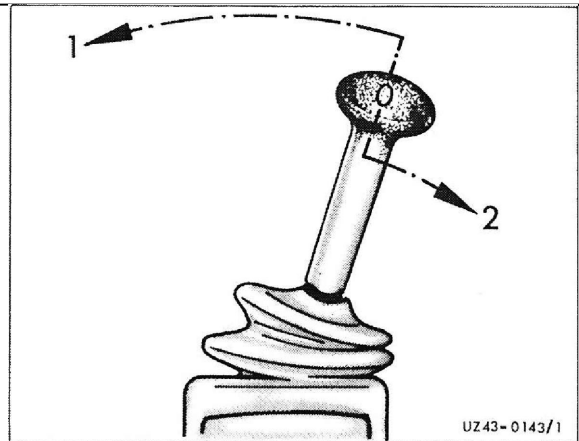


- Use a tire lever or plastic hammer to move the sliding piece suddenly to the wheel side. Fast the release device audibly snaps out.

- Open the parking brake.

Note:

Spring mechanism is vented and piston rod extends. Slider audibly engages.

- Apply the parking brake again. Sliding piece must retract with the piston rod. If this is not the case, check the basic setting of the spring mechanism. Doesn't that lead to success, spring storage replace.

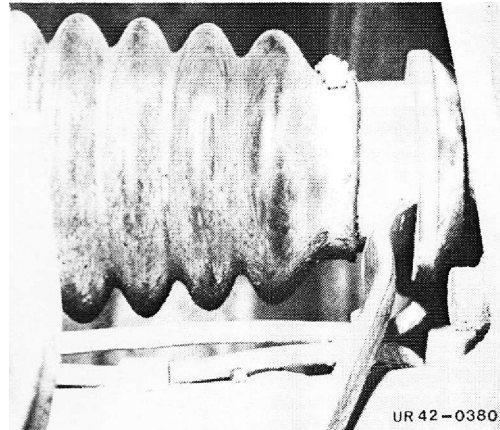

Filling	liter
brake fluid	about 1.6

Special tools

Twin hose for ventilation device elbow	000 589 02 25-00
connection (2 pieces required)	000 589 03 25-00

- Remove the cap from both expansion tanks and the angle connection with the twinConnect hoses to the ventilation device.

Note:

Operating instructions of the device manufacturer beachThe overpressure during venting must not be 1.0 bar exceed.

- Vent screws on the main one after the otherOpen the brake cylinder, ALB controller and on the fixed callipers 1 to 2 turns and only then close when the brake fluid emerges without bubbles.

- Check the function of the brake system.

- Remove the ventilation device.

