


- Vent lines to the central ventcracks, breaks and kinks in the cabcheck places.

Note:

Replace damaged pipes and hoses immediately-
Leave it alone, as consequential damage will occur
if water and dirt enter.

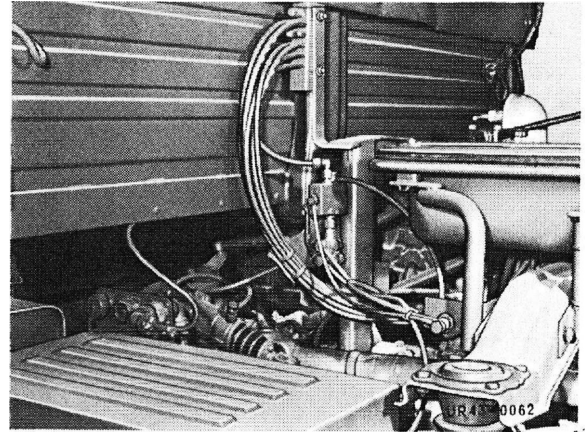

- Unscrew filter housing between cab rear wall and platform on bracket.
- Clean filter in diesel and blow out with compressed air.
- Screw the filter housing onto the holder.

