



- Raise the bonnet.
- Pull and wipe the dipstick.
- Reinsert the dipstick and pull it again.
- The oil level must be at the upper mark on the Be an oil dipstick.

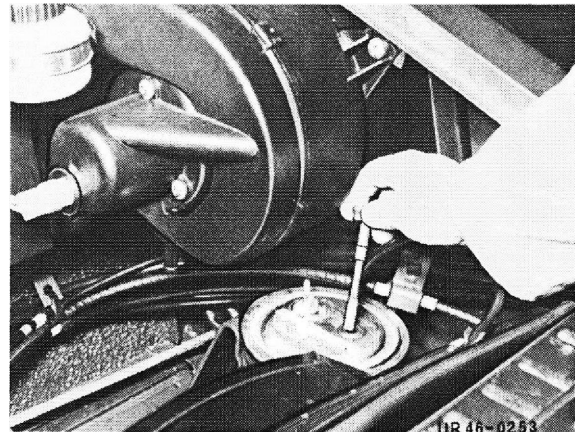

- If oil has to be added, unscrew the wing nut and remove the cover.
- Installation takes place in the reverse order.

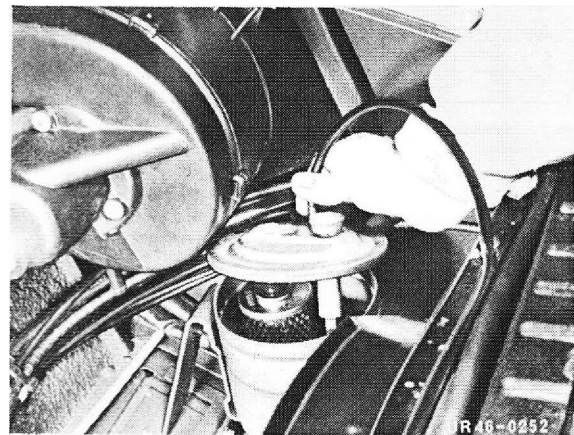

Filling quantity


liter

Hydraulic oil

about 2.5

Oil change

- Raise the bonnet.
- Raise the front axle until the wheels are free.
- Unscrew the oil drain plug on the steering gear and catch any oil that leaks out.
- Start engine (approx. **10th s**) and collect oil again.
- Turn the steering from stop to stop several times until no more oil runs out.
- Clean the oil drain plug and apply a new seal-screw in the ring.
- Carry out filter maintenance.
- Bleed the steering system.


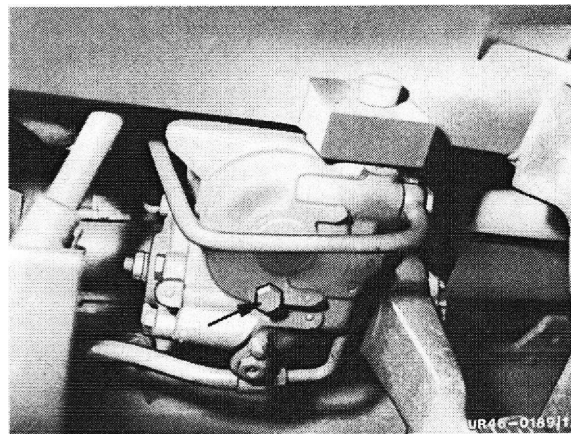
**Filter care:**


- Remove the cover.
- Replace filter insert.

Note:

Clean the inside of the oil reservoir as required.


- Pour in oil.
- Install the cover.
- Check oil level, correct if necessary.
- Close the bonnet.

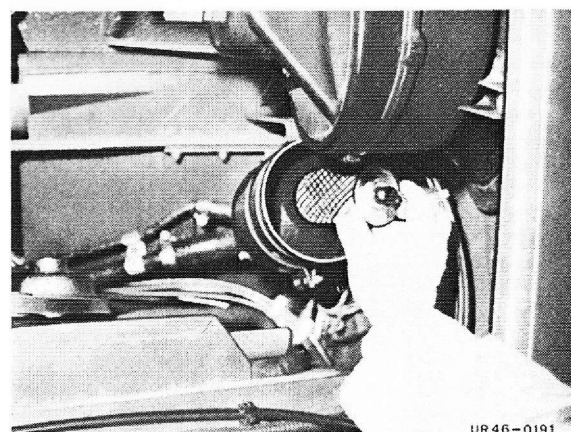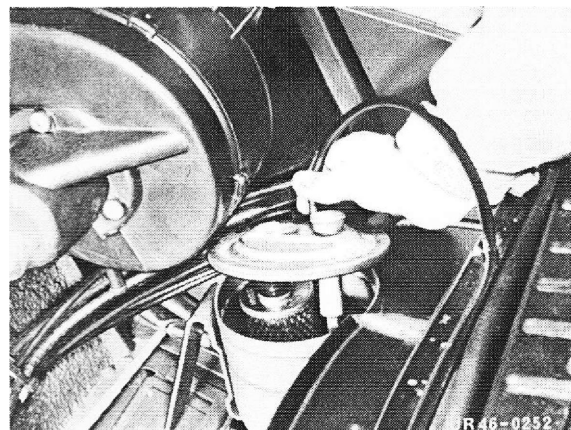

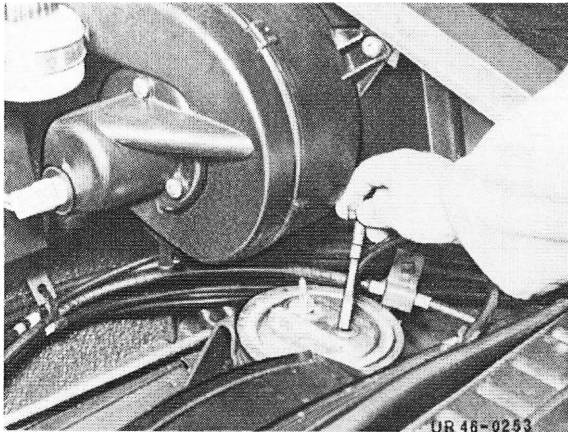**Bleed the steering system.**

- Remove the cover.
- Raise the front axle.
- Start the engine and let it idle.
- Turn the steering from stop to stop several times until there are no air bubbles in the oil tank are more visible.
- Install the cap and correct the oil level,

- Clean dust caps.
- Dust caps for damage, seat and Check brittleness.

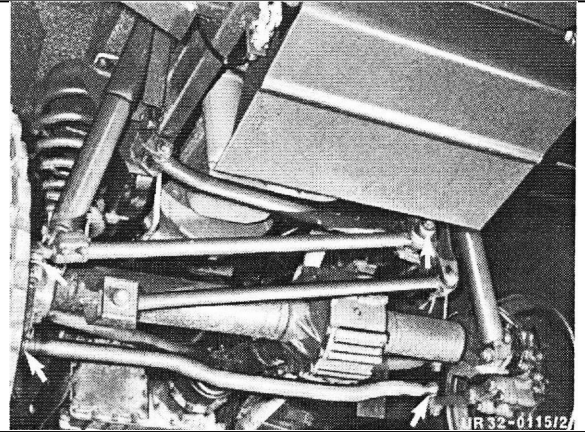


Tightening torque	Nm
Screws on tie rod clamp	90
Setting data	mm
track	+ 1 to - 3
Special tool	
Puller	406 589 05 33 00


- Vehicle on level ground on a straight line park the front wheels.

- Check tire pressure, correct if necessary.


- Measure the front wheel distance on the rim flange at the center of the wheel using a wheel gauge.

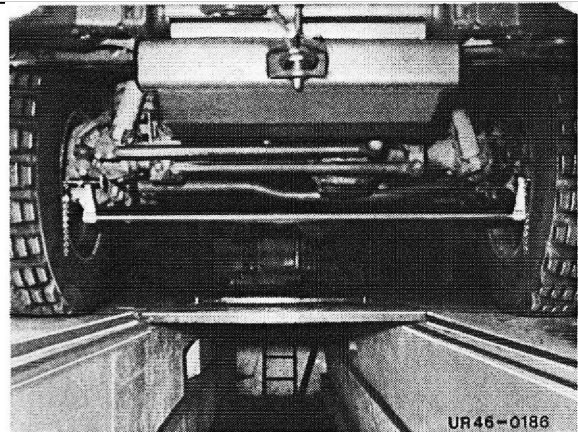


- Measure the rear wheel distance on the rim flange at the center of the wheel with a wheel gauge.

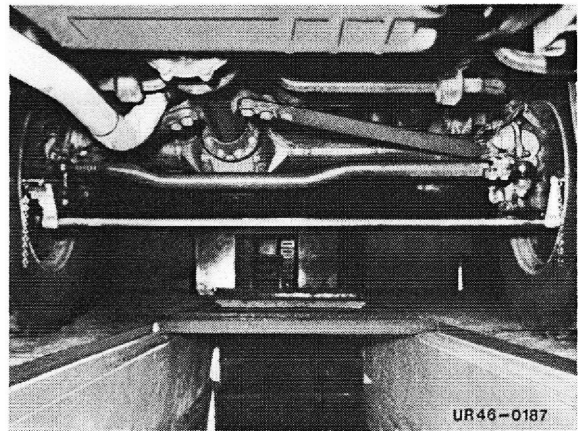


- Evaluate the measurement result. Note track gauge.

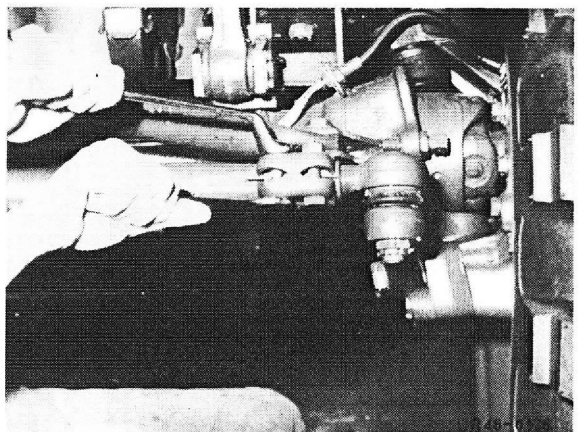

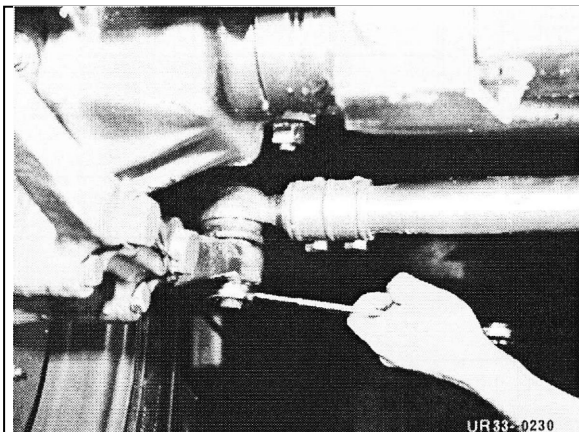


- Unlock the crown nut on the ball pin and screw off.

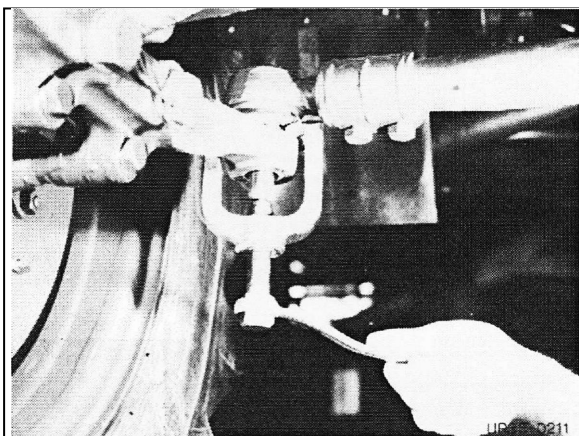

- Press off ball head with special tool.
- Track by turning the ball head in or outset fixed.
- Installation takes place in the reverse order. Note the tightening torque.

Tightening torque	Nm	(kpm)
Steering gear on frame	400	40
Special tool		
Allen key insert SW 14	001 589 68 09 00	

- Check steering gear for tightness, tighten if necessary.

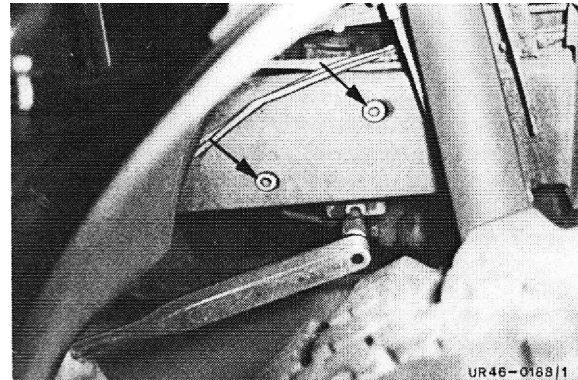

- Steering and tie rod ball heads on closed visually check the level and wear.

