

Special tools

Cons.No.	Tool	Number	Tool set
1	Centering drift	425 589 00 61 00	B


Tightening torques

Designation	Thread/ Strength	Nm
Clutch casing to flywheel housing	M 10/8.8	42
Clutch pressure plate to flywheel	M 8/10.9	29
Clutch slave cylinder to clutch casing	M 8/8.8	21
Bearing cover to clutch casing	M 8/8.8	21

Necessary materials

Cons.No.	Description	Part No.
1	Teroson Atmosit, non-curing	regular
2	Longlife lubricating grease	regular
3	Molybdenum disulfide grinding paste	regular
4	Silicone grease	regular
5	Multipurpose grease	regular
6	Loctite 573	001 989 46 20
7	Loctite 241	002 989 94 71

Exploded view

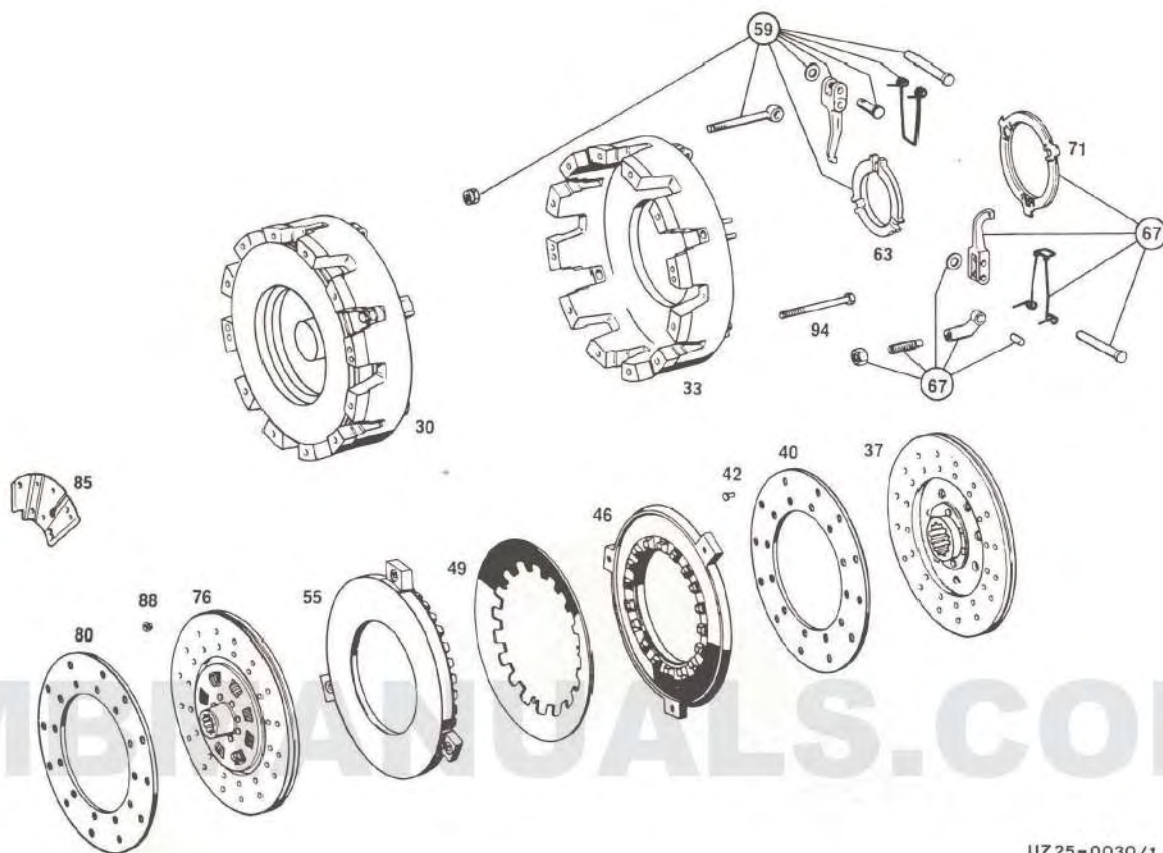

UZ 25-0030/1

Double clutch

- | | | | |
|----|---------------|----|-----------------|
| 30 | Clutch | 63 | Throwout flange |
| 33 | Casing | 67 | Repair set |
| 37 | Driven plate | 71 | Throwout flange |
| 40 | Clutch lining | 76 | Driven plate |
| 42 | Rivet | 80 | Clutch lining |
| 46 | Contact plate | 85 | Leaf spring |
| 49 | Disk spring | 88 | Rivet |
| 55 | Contact plate | 94 | Bolt |
| 59 | Repair set | | |

Removal

1 Remove PTO shaft transmission, referring to 26.20–2.1/1.

2 Unscrew clutch fastening bolts.



Note: Clutch pressure plate is mounted with 8 fastening bolts.

3 Remove clutch and exchange driven plate.

4 Clean and check clutch, exchanging if necessary.

Note: Distance between fastening bolt support surface and contact surface on flywheel must not drop below 80 mm.


5 Disassemble clutch, referring to 3.1/1.

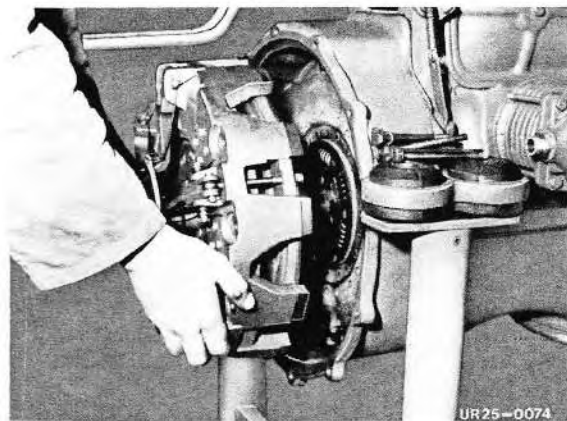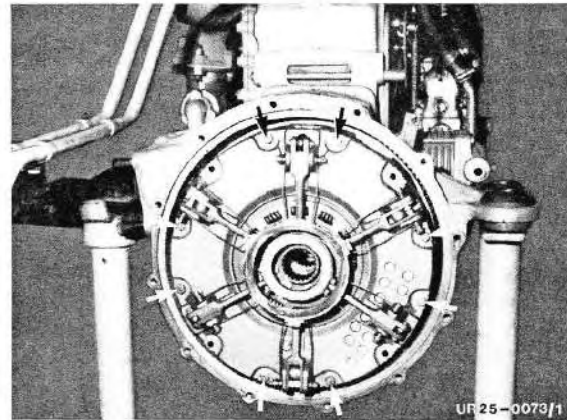

Installation

1 Assemble clutch, referring to 3.1/1.


Note: Collar as well as driven plate marking must point toward flywheel.

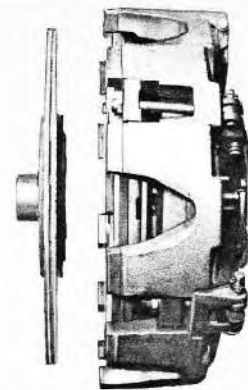

2 Coat driven plate splining with paste No. 3, installing clutch and driven plate with special tool No.1.

Insert fastening bolts (max. $95^{+0}_{-0.7}$ mm long) with lock washers and tighten crosswise. See 1.4/1 for tightening torque).

3 Install PTO shaft gearing. Refer to 26.20–2.1/1.

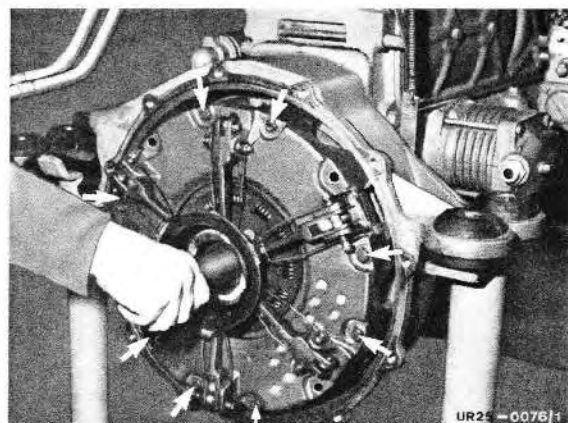


Disassembly

- 1 Remove clutch, referring to 2.1/1.
- 2 Remove throwout rings.



UR25-0097/1

- 3 Release pressure plate fastening.

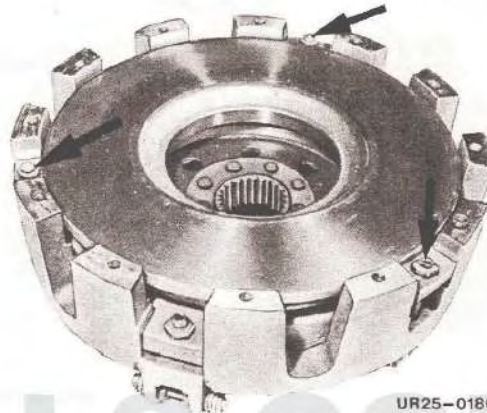

UR25-0180/2

- 4 Remove pressure plate with disk spring.


Note: Mark mounting location of pressure plate relative to casing.




UR25-0181/1

- 5 Remove pressure plate.


Note: Mark mounting location of pressure plate relative to casing.

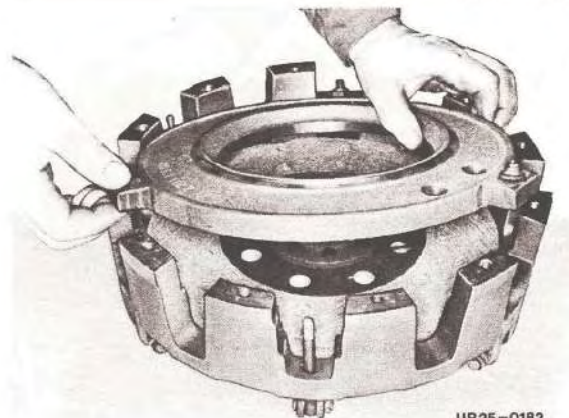

UR25-0182

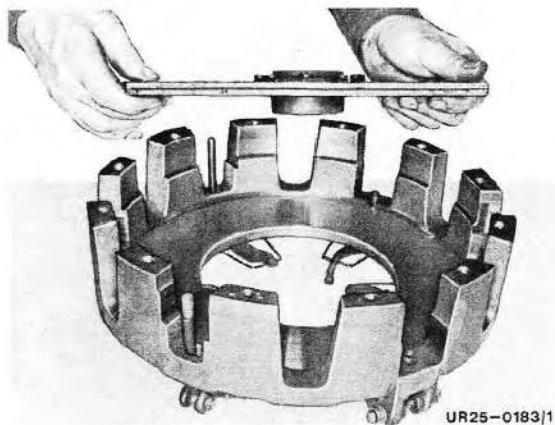

6 Lift driven plate out.

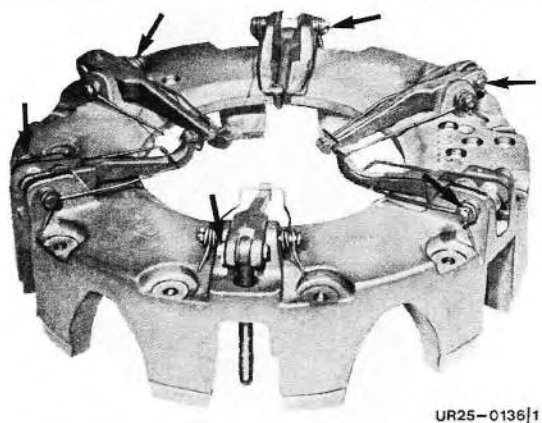


7 Turn casing over, release and remove throwout lever.

8 Clean and check all parts, exchanging if necessary.


Assembly

1 Install throwout lever with springs and then secure.

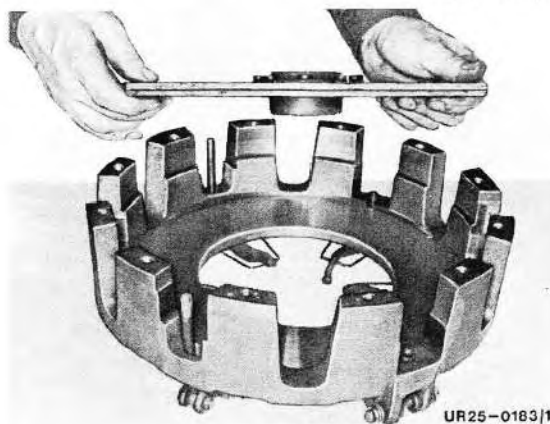

2 Install driven plate and align.

Note: During further assembly, ensure the driven plate is not moved out of its centre position.

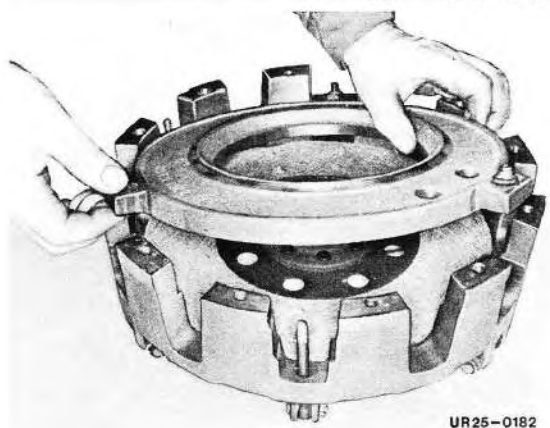


3 Install pressure plate.

Note: Pay attention to marking.


- 4 Install disk spring and pressure plate.

Note: Pay attention to marking.

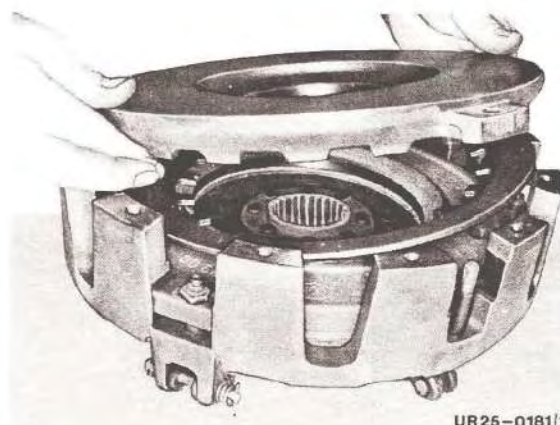

UR25-0181/1

- 5 Fasten pressure plate.

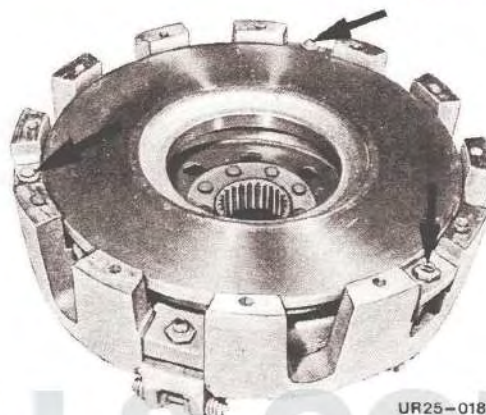

UR25-0180/2

- 6 Install throwout rings.




UR25-0097/1

- 7 Bolt clutch and driven plate to suitable flywheel.

- 8 Adjust clutch, refer to 3.2.1.

- 9 Unscrew clutch from flywheel.

- 10 Install clutch, refer to 2.1/1.

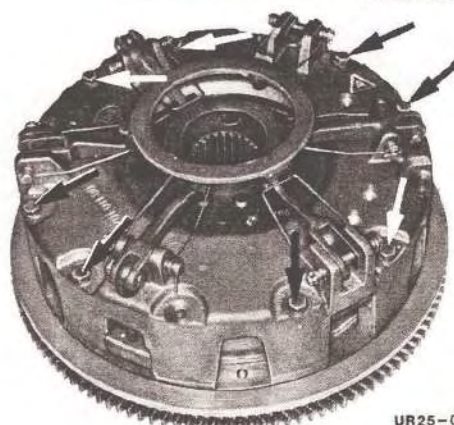

UR25-0184/1

Contents

Chapter	Page
1 General	
Installation survey	1.1/1
Key to transmission designation	1.1/2
Transmission ratios	1.1/3
General view	1.2/1
Sectional view	1.3/1
Power flow	1.4/1
Filling capacity	1.5/1
Adjustments	1.5/1
Special tools	1.6/1
Necessary materials	1.6/1
Tightening torques	1.7/1
Exploded view	1.8/1
2 Exchanging Main Transmission	
Removal and installation of main transmission	2.1/1
Removal and installation of main transmission, transfer box installed	2.2/1
3 Disassembly of Main Transmission	
Removal and disassembly of front axle takeoff	3.1/1
Removal and disassembly of rear axle takeoff	3.2/1
Removal and disassembly of transfer box	3.3/1
Removal and disassembly of planetary gear model 717.901	3.4/1
Removal and disassembly of planetary gear model 717.900	3.5/1
Disassembly of shift gearbox	3.6/1
4 Assembly of Main Transmission	
Assembly of shift gearbox	4.1/1
Assembly and installation of planetary gear model 717.901	4.2/1
Assembly and installation of planetary gear model 717.900	4.3/1
Assembly and installation of transfer box	4.4/1
Installation of rear axle takeoff	4.5/1
Assembly and installation of front axle takeoff	4.6/1
5 Disassembly and Assembly of Input Shaft	5.1/1
6 Disassembly and Assembly of Main Shaft	6.1/1
7 Disassembly and Assembly of Synchromesh Mechanism	7.1/1

26.13 Main Transmission

717.9
SA 35 977

Contents (continued)

Chapter	Page
8 Disassembly and Assembly of Shifting Shaft	8.1/1
9 Disassembly and Assembly of Gear Shift Cover	9.1/1
10 Removal and Installation of Idler Gear	10.1/1
11 Reconditioning oil pump	
Removal and installation of oil pump	11.1/1
Removal and installation of oil pump, main transmission installed	11.2/1
Disassembly and assembly of oil pump	11.3/1
Sealing of pump	11.4/1
12 Adjustment of Shift Levers	
Adjustment of main shift lever	12.1/1
Adjustment of forward and reverse shift lever	12.1.1

MBMANUALS.COM

Installation Survey

Chassis Model	Sales designation	Main transmission				Auxiliary transmission			
		Model	Sales designation	Installation series SA	Transmission No. (chassis end No.)	Sales designation	Version	SA	Transmission No. (chassis end No.)
435.110	U 1700	717.901 with SA 35 930 SA 35 985	UG 3/40-8/13,01 GPA	Series	from 008 288 (from 002 230)	NG 3/40-2/5,76 and NG 3/40-3/55,87	Working and crawler gears	35 736/05 35 736/06	-
.111	U 1700 L				from 000 204 (from 000 008)			35 736/01 35 736/02	
		717.900 with SA 35 985 SA 35 930	UG 3/40-8/9,35 GPA	SA Code G 04					
.113	U 1700 L/38	717.901 with SA 35 985	UG 3/40-8/13,01 GPA	Series	from 017 461 (from 084 642)	-	-	-	-
435.115	U 1300 L	717.901 with SA 35 930 SA 35 977 SA 35 985	UG 3/40-8/13,01 GPA	Series	from 002 760 ¹⁾ (from 000 019) ¹⁾	-	-	-	-
.117	U 1300 L/37				from 012 476 (from 071 796)				
435.160	Attachment TM 170	717.931	UG 3/40-8/13,01 GPA	Series	from PB ²⁾	-	-	-	-
435.170	Attachment Condor-	717.930	UG 3/40-8/13,01 GPA	Series	from PB ²⁾	-	-	-	-

1) For special vehicle from transmission No. 003 029 from chassis end No. 000 061



2) PB = Start of production

26.13 General

717.9

SA 35 977

Schlüssel Getriebe-Bezeichnung

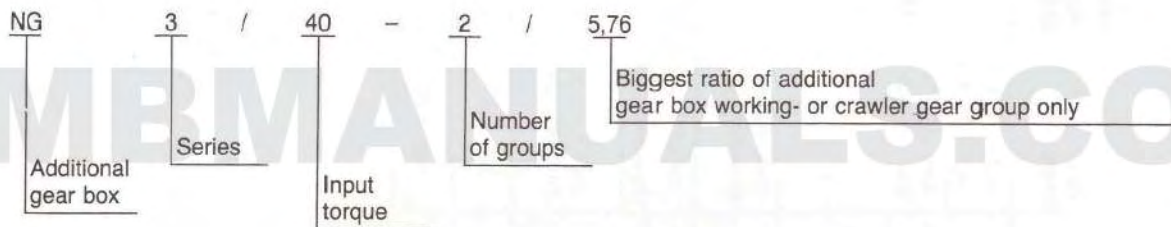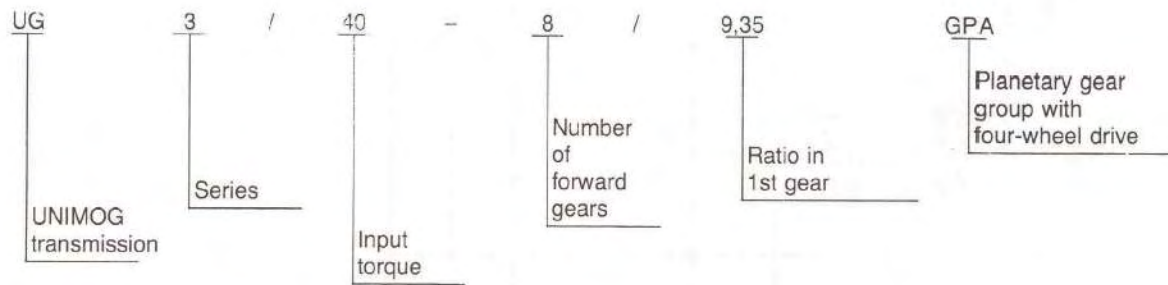

Ratios

Gears	Main transmission 717.901 UG 3/40 - 8/13,01 GPA	– With auxiliary transmission SA 35 736	
		Working gears NG 3/40 - 2/5,76	Crawler gears NG 3/40 - 3/55,87
1	13,01	74,94	726,87
2	9,02	51,96	503,95
3	5,96	34,33	332,99
4	4,38	25,33	241,36
5	2,97	17,11	165,93
6	2,06	11,87	115,09
7	1,36	7,83	75,98
8	1,00	5,76	55,87
R 1	12,60	72,58	703,96
R 2	8,74	50,34	488,30
R 3	5,78	33,29	322,93
R 4	4,24	24,42	236,89
R 5 ¹⁾	2,88	16,59	160,91
R 6 ¹⁾	2,00	11,52	111,74
R 7 ¹⁾	1,32	7,60	73,75
R 8 ¹⁾	0,97	5,59	54,19


1) Inhibited for SA 35 985

2) Valid only with development approval

Gears	Main transmission 717.900 UG 3/40 - 8/9,35 GPA	– with auxiliary transmission SA 35 736	
		Working gears NG 3/40 - 2/5,76	Crawler gears NG 3/40 - 3/55,87
1	9,35	53,86	522,38
2	6,73	38,76	376,01
3	4,93	28,40	275,44
4	3,62	20,85	202,25
5	2,58	14,86	144,14
6	1,86	10,71	103,92
7	1,36	7,83	75,98
8	1,00	5,76	55,87
R 1	9,06	52,19	506,18
R 2	6,52	37,56	364,27
R 3	4,78	27,53	267,06
R 4	3,51	20,22	196,10
R 5 ¹⁾	2,50	14,40	139,68
R 6 ¹⁾	1,80	10,37	100,57
R 7 ¹⁾	1,32	7,60	73,75
R 8 ¹⁾	0,97	5,59	54,19

1) Inhibited for SA 35 985

General view

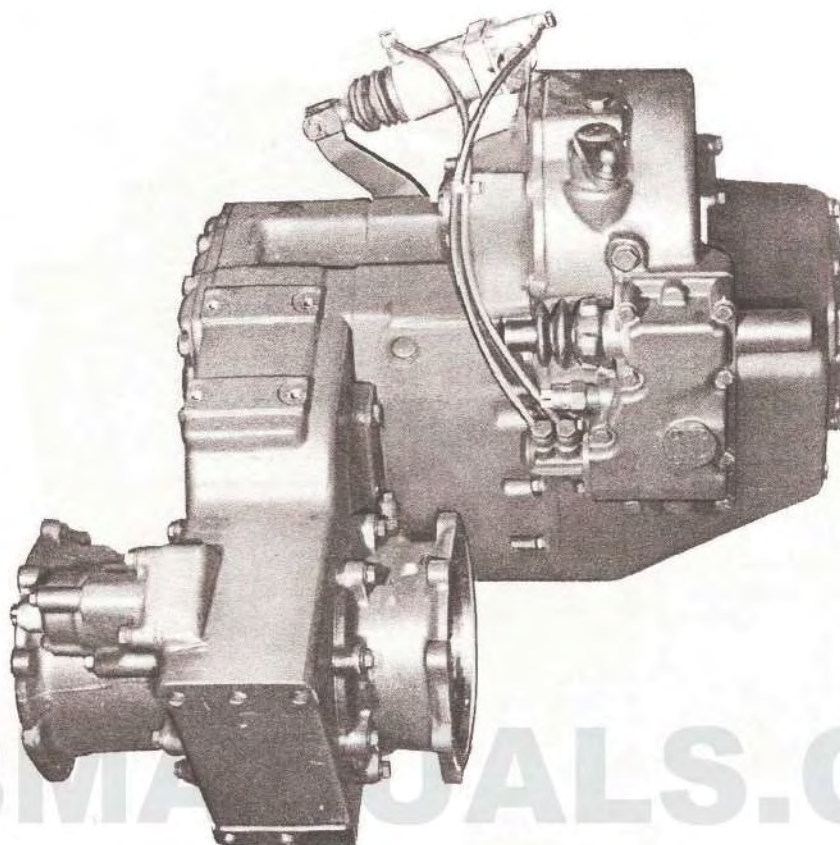


UR26-0802

Main transmission UG 3/40 - 8/13,01 GPA
or UG 3/40 - 8/9,35 GPA

717.9
SA 35 977

General view

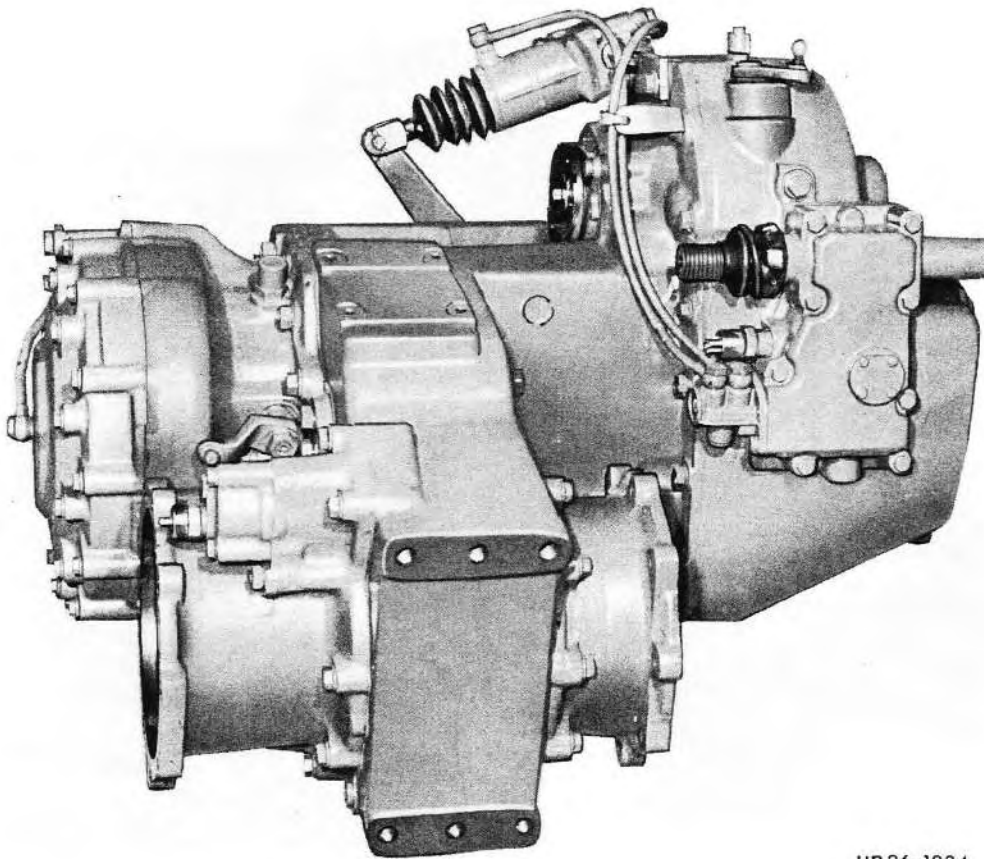


UR 26-1034

Main transmission UG 3/40 - 8/13,01 GPA
or UG 3/30 - 8/9,35 GPA

— with additional gear box working group NG 3/40 - 2/5,76

General view

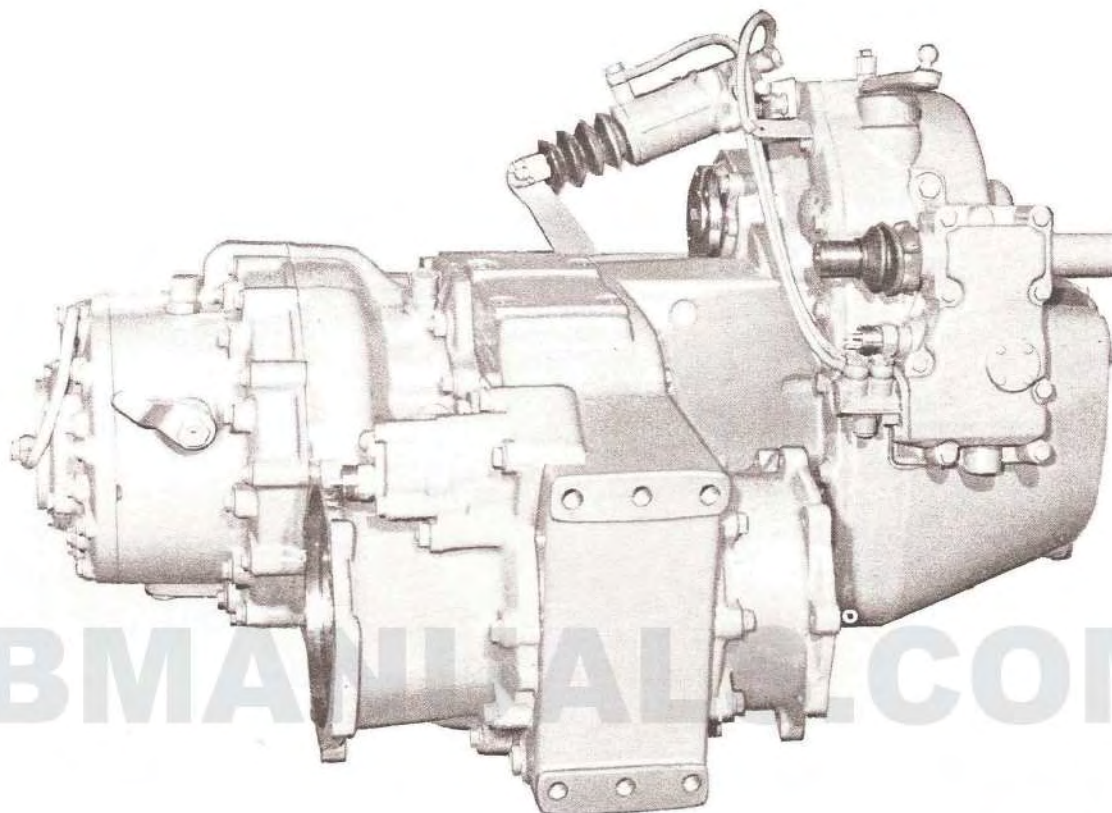

UR26-1035

Main transmission UG 3/40 - 8 13,01 GPA
or UG 3/40 - 8/9,35 GPA

— with additional gear box working group
— and crawler gear group UG 3/40 - 3/55,87