



Tightening torque	Nm	(kpm)
Cylinder head cover bolts	25th	2.5


- Unscrew the bonnet inside

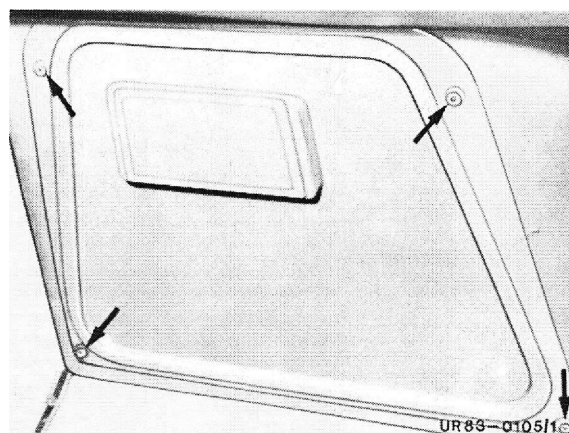


- Unscrew the injection line from the cold start nozzle

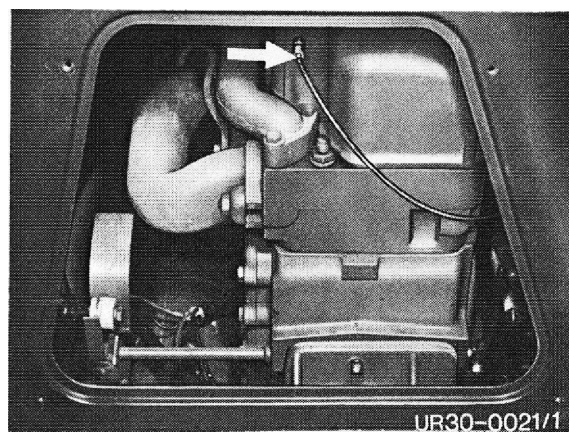


- Remove suction hose
- Unscrew and remove the cylinder head cover.

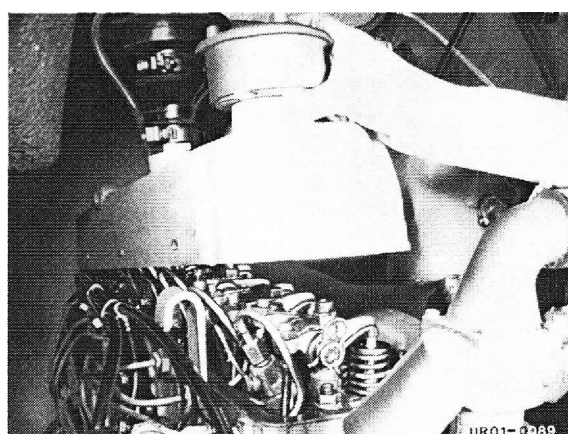

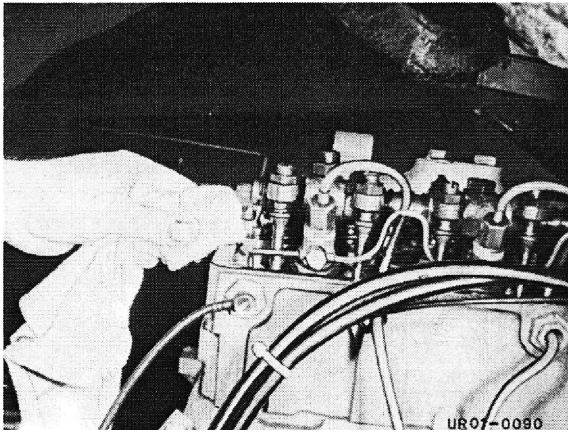

- Sealing surface on cylinder head and cylinder headclean the hood
- Installation takes place in the reverse order. Use a new seal for this.
- Note the tightening torque
- Start the engine and check for leaks
- Install the bonnet inside.

- Open the bonnet
- Unscrew and remove the hose

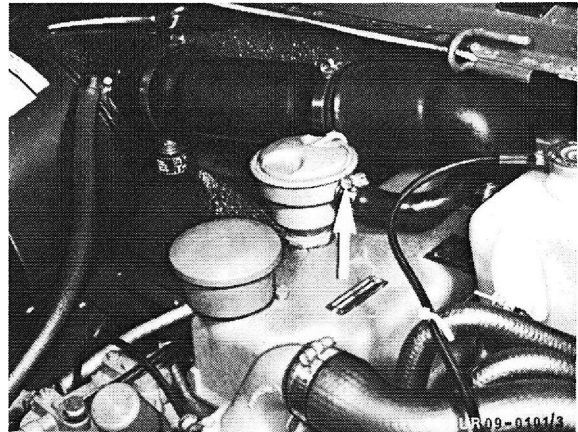

- Loosen lock nut, unscrew filter
- Insert a new filter with sealant (Loctite No. 241)-screw.

