


NOTE:

Clean the air filter only if the maintenance indicator is in the red field (1).


Clean the dust drain valve

- Press on the rubber valve and check for continuity. If necessary, remove any dust from the sealing lips (2).

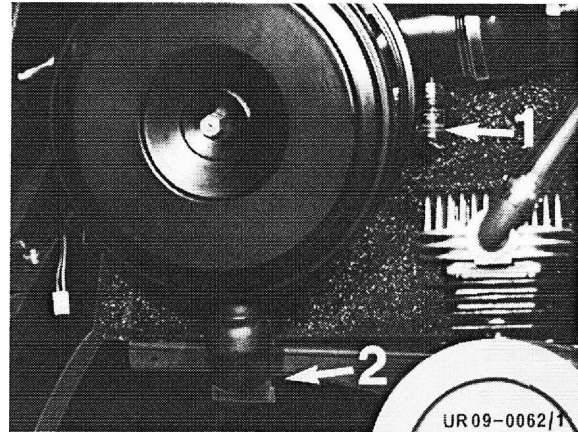



Clean the air filter

- Raise the bonnet and front panel lose weight.
- Unscrew the filter insert.

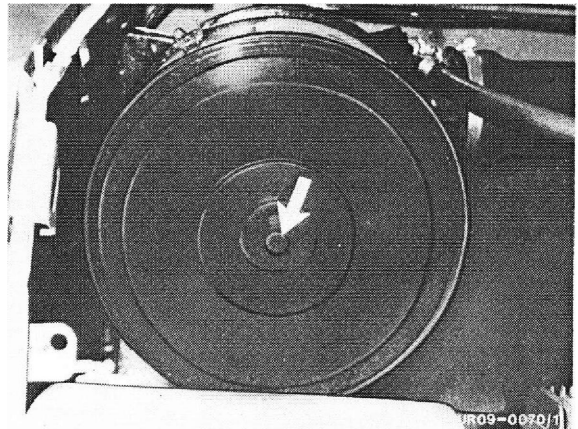


- Open the lock.

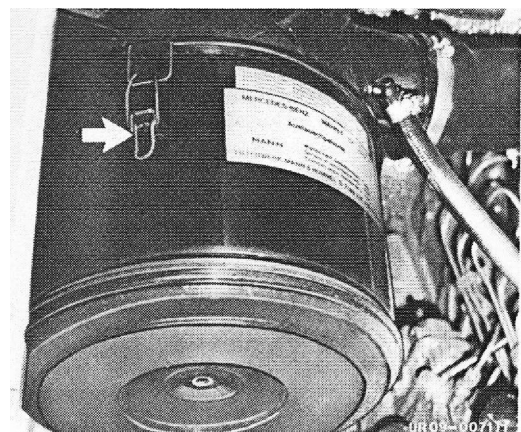

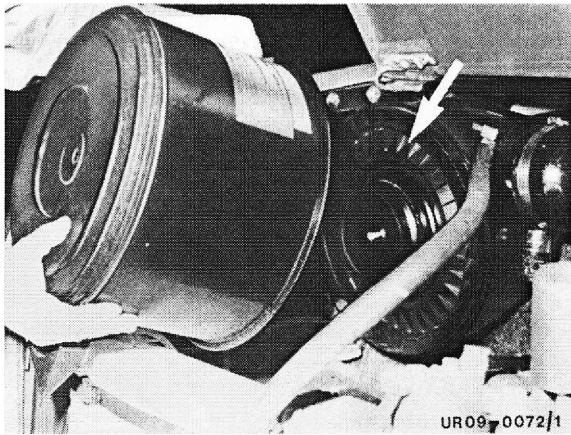

- Remove filter housing with filter insert.

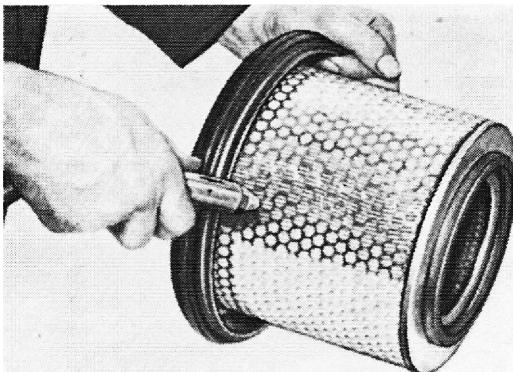

- Remove the filter insert from the filter housing.
- Clean the outside of the filter insert at an angle in the direction of the paper folds (compressed air).

UR-0062



- Clean inside of filter insert (compressed air).

NOTE:

Heavily oily, dirty or damaged filters replace inserts.

- Clean the filter housing.

- Clean the cyclone insert.
- Installation takes place in the reverse order.

