


Checking tightness of cylinder head screws on the air

Tightening torque	Nm
Cylinder head bolts	35

- Check cylinder head screws for tightness, if necessary tighten.
Note the tightening torque.


Caution

Before tightening, loosen the cylinder head screw a little. Under no circumstances loosen all cylinder head bolts at once.

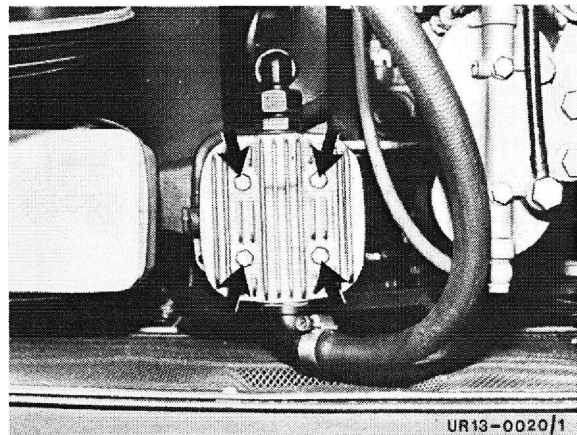


Tightening torque	Nm	(kpm)
Air compressor on holder	22	2.2
Bracket on engine mount	75	7.5


- Split the bonnet up and the front panel dismantle.
- Check the air compressor from the inside on the bracket for tightness, tighten if necessary.

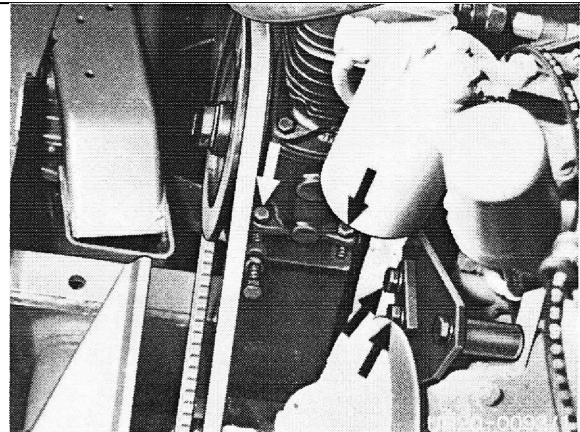

- Check the air compressor from the outside on the bracket for tightness, tighten if necessary.

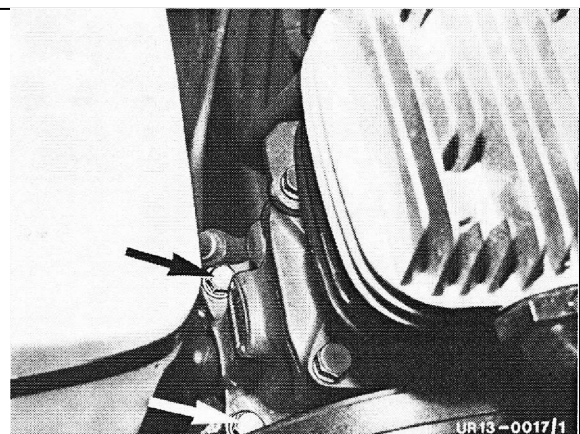


- Air compressor bracket on engine mount on tight fitcheck, tighten if necessary. Note tightening torques.

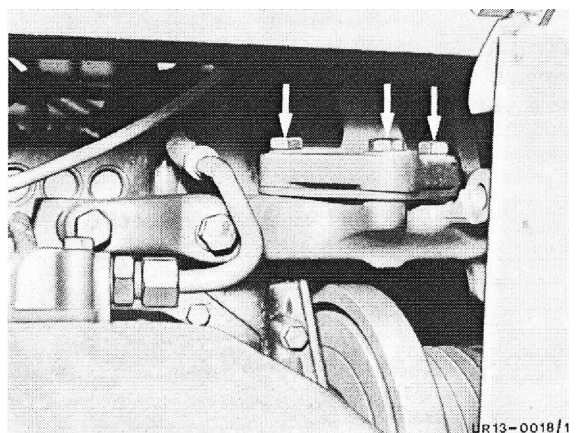

V-belts	use	Dimensions	Indentation depth in mm
A	Coolant pump generator	12.5> <1250 ± 5	5
B	hydraulic pump	12.5x950	5
C.	Power steering pump	12.5x925 la.	5-10
D	Air compressor	12.5x1350 ± 5	5-10
E	Intermediate drive fan	12.5x1625 ± 5	5-10
F	Fan drive	12.5x1125 ± 5	5-10

- 1 crankshaft
- 2 air compressors
- 3 coolant pump
- 4 generator
- 5 tension pulley
- 6 intermediate storage at the front
- 7 intermediate storage at the rear
- 8 tension pulley
- 9 fans
- 10 power steering pump
- 11 hydraulic pump

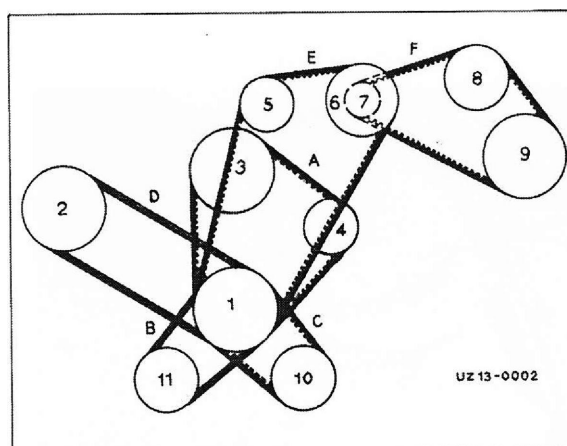

Tightening torque

Nm


Air compressor on holder

22

V-belt A, coolant pump - generator


- Raise the bonnet and front panel lose weight.
- Check the V-belt for condition and tension, retension or replace if necessary.



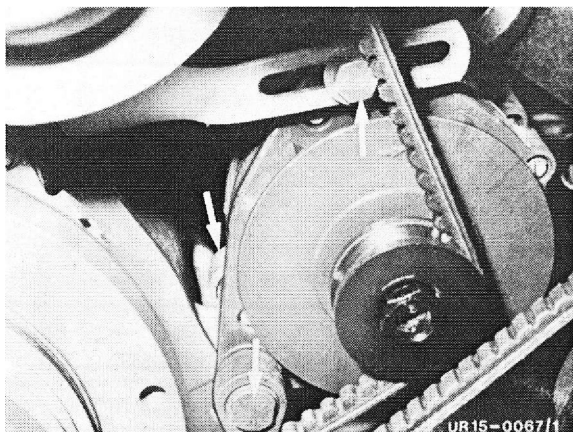

To change the V-belt A are the V-belts Remove belts B to E.


- Loosen clamp holder and swivel bearing.

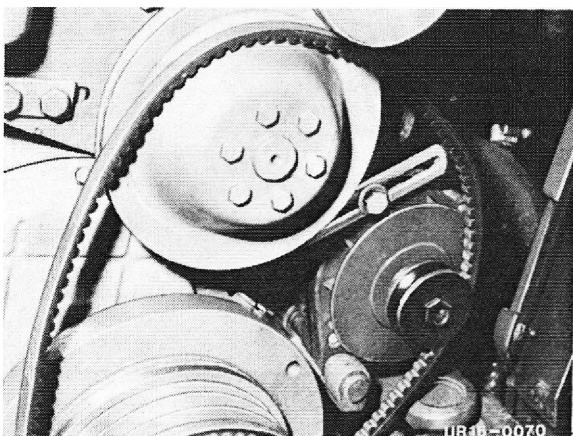

- Remove the V-belt.
- Installation takes place in the reverse order.

V-belt B, hydraulic pump

- Support the bonnet and remove the front panel.
- Check the V-belt for condition and tension, retension or replace if necessary.

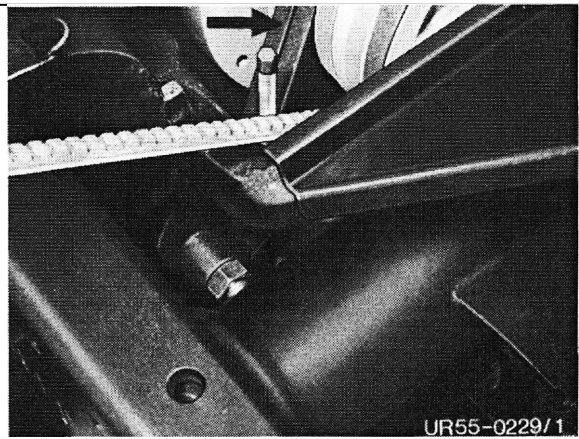



The V-belts are used to replace the V-belt B. Remove belts C to E.

- Fastening screw (2) on the pump holder to solve.
- Loosen the tensioning screw (1) and remove the V-belt to take.
- Installation takes place in the reverse order.

Note:

The V-belts may only be replaced in sets will.

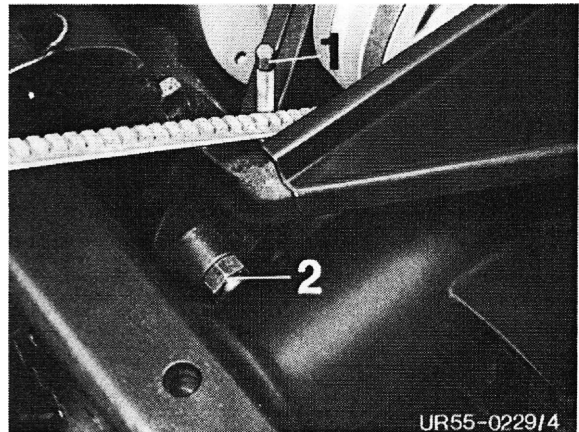

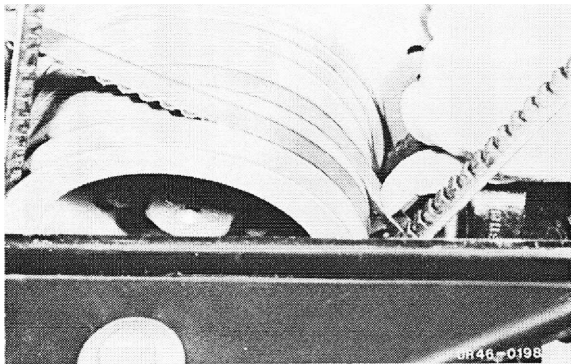
**V-belt C, power steering pump**

- Raise the bonnet and front panel lose weight.
- Check the V-belt for condition and tension, retension or replace if necessary.



The V-belts are used to replace the V-belt C. Remove belts 0 to E.


- Loosen pump mounting and tension screw turn back.

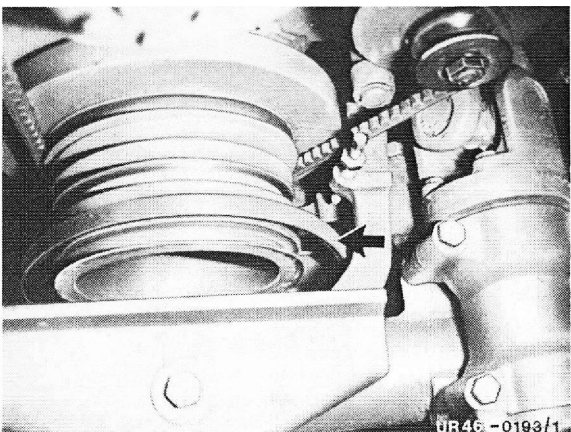

- Remove the V-belt.
- Installation takes place in the reverse order.


V-belt D, air compressor

- Raise the bonnet and front panel lose weight.
- Check the V-belt for condition and tension, retension or replace if necessary.

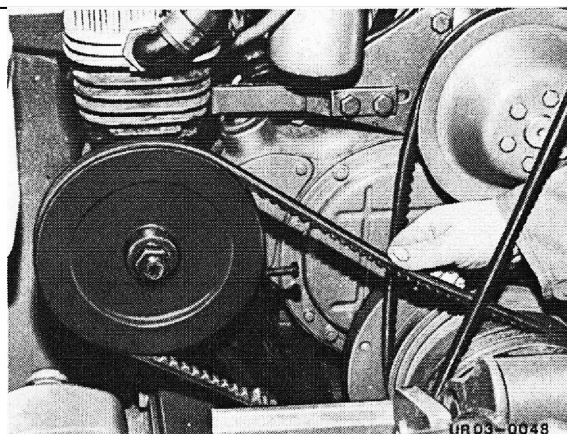



To replace the V-belt D is the V-beltmen E to expand.

- Air compressor attachment and tension screw to solve.

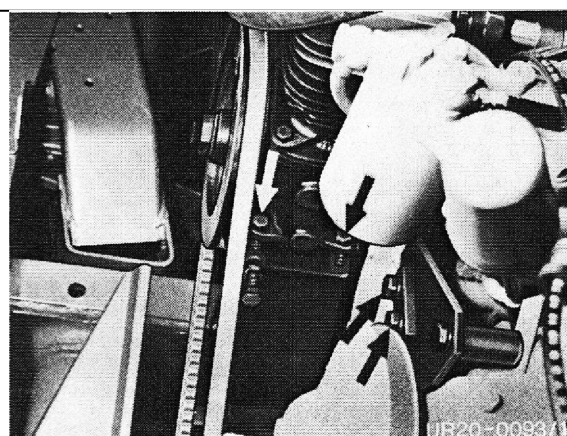


- Remove the V-belt.
- Installation takes place in the reverse order. Note the tightening torque.

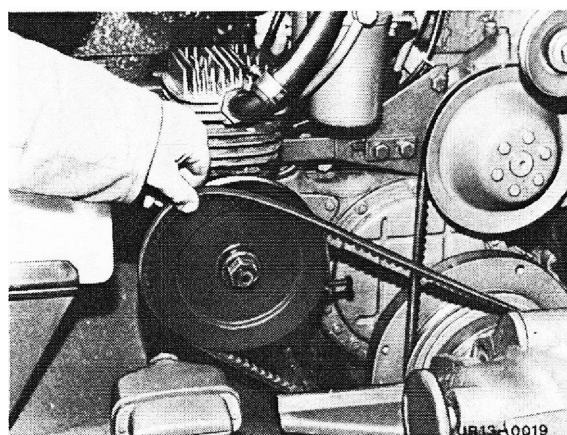

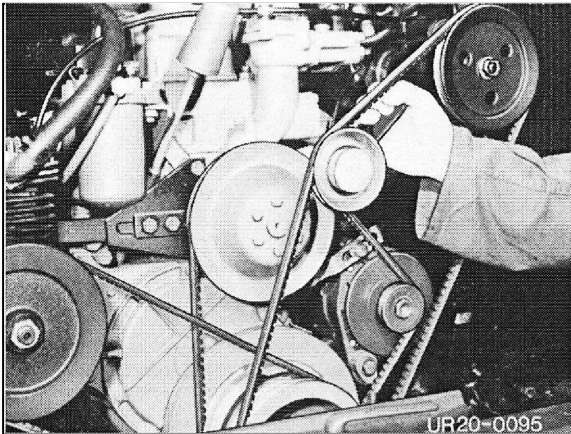


V-belt E, intermediate drive fan

- Raise the bonnet and front panel lose weight.
- Check the V-belt for condition and tension, replace if necessary.
- To replace the thrust bearing, press down and remove the V-belt.

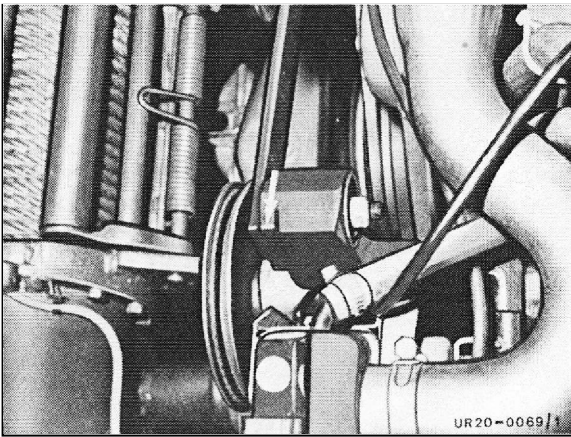

- Check the setting of the radial insert ball bearing - must match when the V-belt is removed.

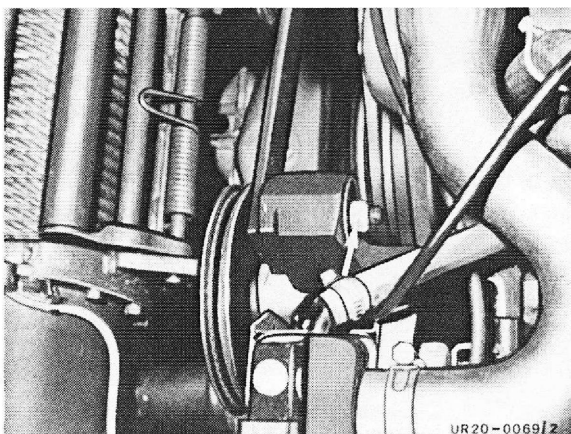

- If the marking does not match, fasten. Loosen nut on back and insert bearing in. Remove teeth accordingly. Then tighten the fastening nut.
- The V-belt is installed in the reverse order.

V-belt F, fan drive

- Remove the bonnet
- Check the V-belt for condition and tension, retension or replace if necessary.
- Remove radiator support for replacement.
- Loosen the tension pulley and remove the V-belt.
- Installation takes place in the reverse order.

