



- Start the engine and let it run briefly so that engine oil is in circulation.
- Stop engine.
- Raise the bonnet.
- Remove protective cap from dipstick.

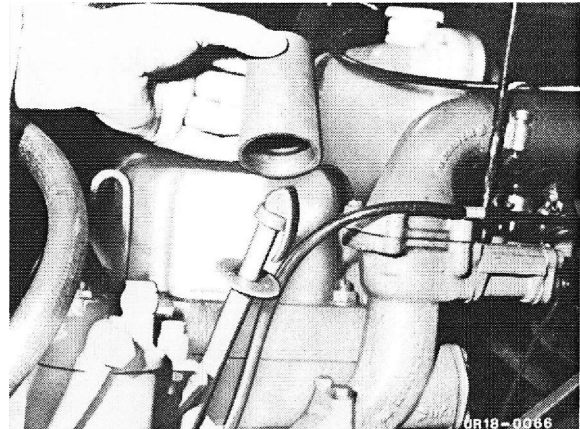

- Swing the locking lever on the oil dipstick up, pull the dipstick and wipe it.
- Insert the oil dipstick as far as it will go. Do not close the locking lever.
- Pull the dipstick again and the oil level at the oil gauge read the rod. The oil level must be between Markiemin. and max. stand.

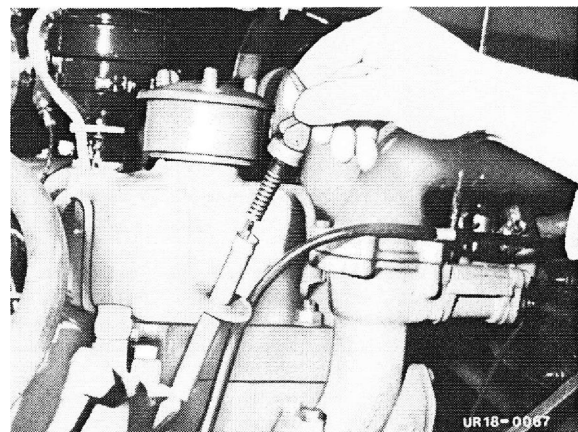


- Engine oil must be refilled, protective cap and cap on cylinder head cover offtake and fill through the filling opening.
- Installation takes place in the reverse order.



oil capacity	liter
Total filling quantity for oil and filter change	15
Filling quantity without changing the filter	13.5

- Raise the bonnet.
- Unscrew the drain plug and catch the oil.
- Clean the oil drain plug and screw in with a new seal.
- Carry out oil filter care.
- Pour in new oil at the cylinder head cover.
- Let the engine run briefly.
- Check oil level, correct.

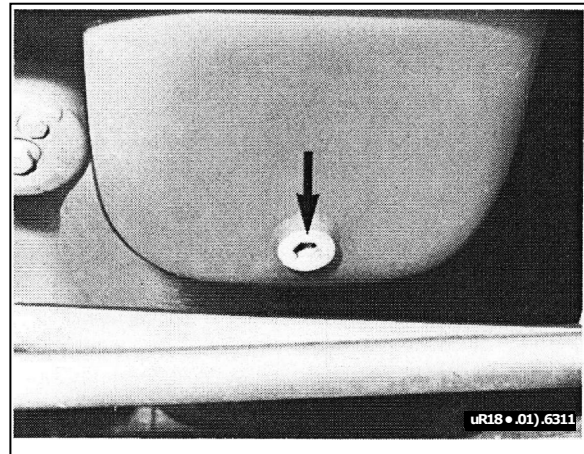


Tightening torque

Nm


Oil filter bowl on oil filter holder

40


- Unscrew the oil drain plug and oil catch.
- Unscrew the filter bowl.

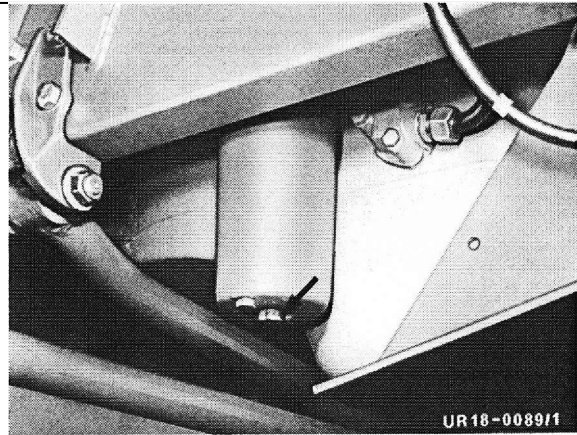


- Remove the sealing ring.

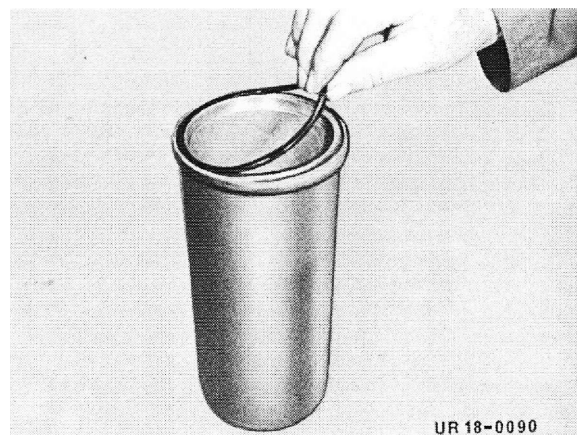

- Take out the filter insert and clean the filter bowl-gene.

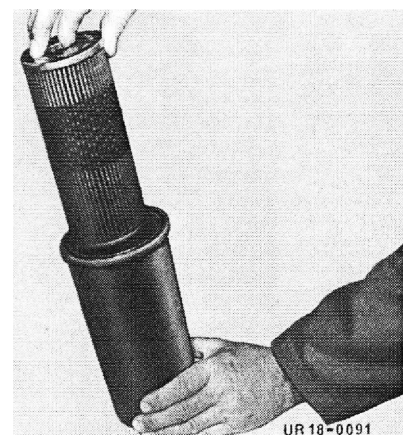

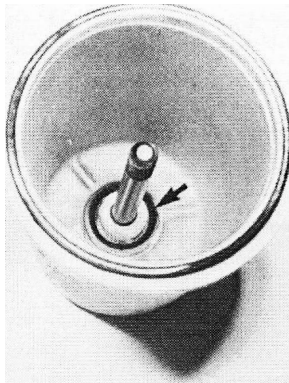

UR 18..0069 / I

- Sealing ring in the filter bowl and filter carrier on closed. Check the status, replace if necessary.

- Install a new filter insert.

- Installation takes place in the reverse order. Fill the pot with engine oil before installation.

Note the tightening torque.

Note: After the test run of the engine, on Check tightness.