


Carry out an oil level check with the engine switched off. The vehicle should stand for a few minutes to have.

- Oil level check screw plug clean and unscrew.
- The oil level must fill up to the lower edge-opening stand, »Top up oil if necessary.
- Screw in screw plug and tighten.

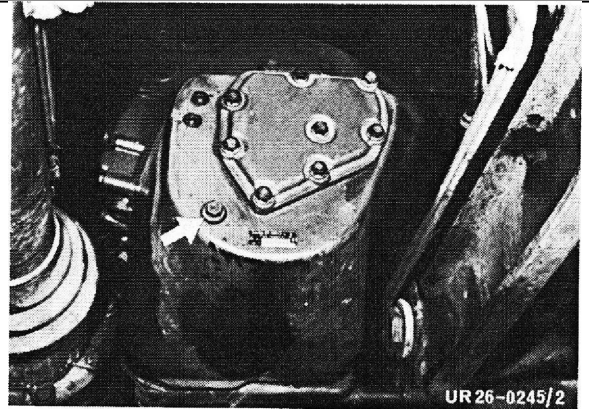

Carry out an oil level check with the engine switched off. The vehicle should stand for a few minutes to have.

- Oil level check screw plug clean and unscrew.
- The oil level must reach the lower edge of the filler opening. If not, add oil if necessary.
- Screw in the screw plug.




Filling quantity

liter


motor oil

about 9.5

- Unscrew the oil filler plugben.
- Oil drain plug on the planetary coneUnscrew the drives and catch the leaking oil.

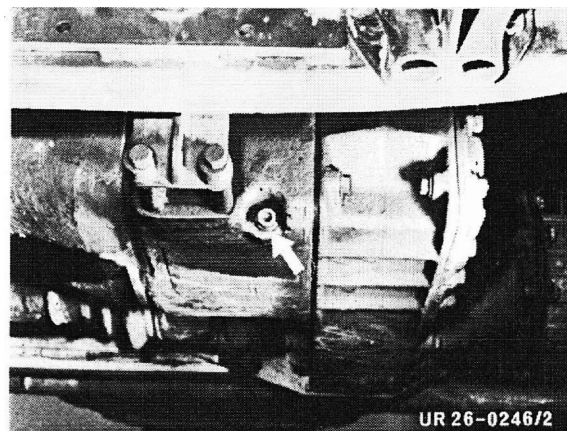


- Oil drain plug on the distributorUnscrew the drives and catch the leaking oil.
- Clean the oil drain plug and howthe screw in.
- New oil through oil level check hole on Fill in the housing.
- Check oil level, correct.

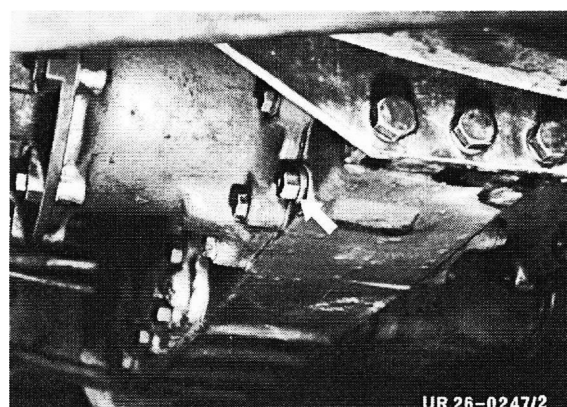

Filling quantity	liter
motor oil	5.75

- Oil filler control (1) and oil drain plugClean the screw (2), unscrew it and catch any oil that leaks out.
- Clean the oil drain plugs and screw them back in.
- New oil in the housing bore (1) to GeFill in the lower edge of the winch.
- Screw in the oil filler plugben.

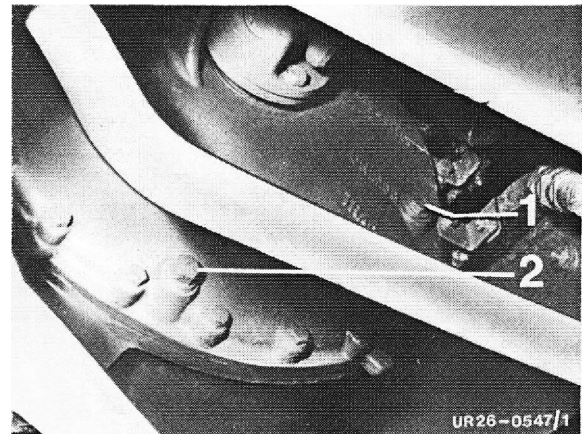


Tightening torque	Nm	(kpm)
Gearbox bearing on the left of the	380	38
Gearbox bearing on the right on the gearbox housing	150	15
Gearbox bearing left and right on frame	180	18

- Check right gearbox bearing on gearbox housing and frame for tightness, tighten if necessary.



- Check gearbox bearing on left on gearbox housing for tightness, tighten if necessary.

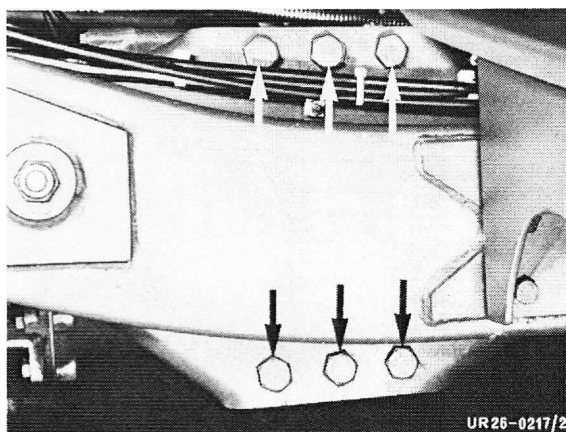

- Check gearbox bearing on the left of the frame for tightness, tighten if necessary.

