


- Open the bonnet.
- Expansion tank and screw plug auctean the outside.
- Check liquid level, this must be between "Min" and "Max" stand.


Danger: If the liquid level is at »Min«, the system must be checked for leaks.

Danger: With increasing wear on the clutchlung **increases** the liquid level.

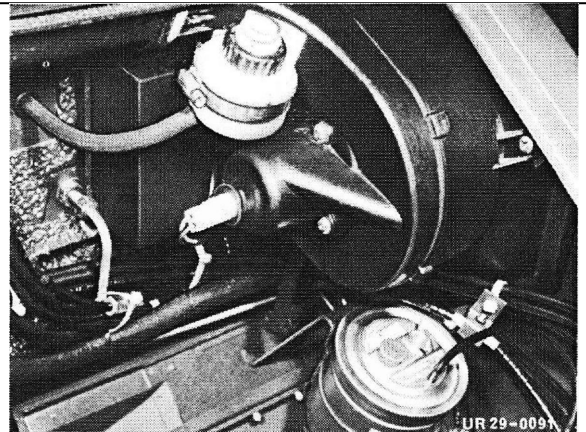


Filling	liter
brake fluid	about 0.6


- Remove the bonnet on the outside.
- Venting device according to the manufacturer's instructions ready for use.
- Cap on the expansion tankscrews and connect the ventilation device.

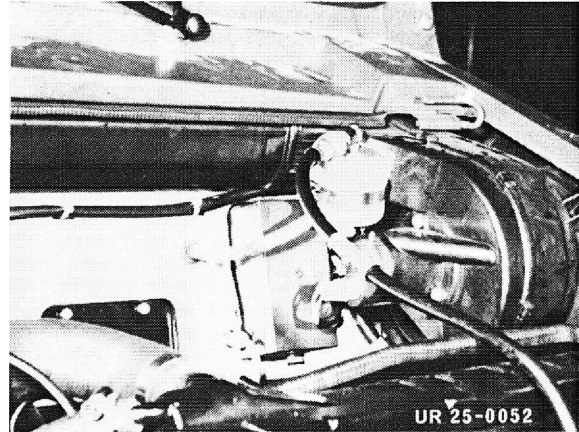


- Dust protection cap on the vent screw of the Remove the master cylinder and connect the ventilation bottle.
- Open bleed screw and brake fluidLet it flow out until no air blowsare more visible.
- Close the bleed screw. Close vent bottle and put dust cap on.

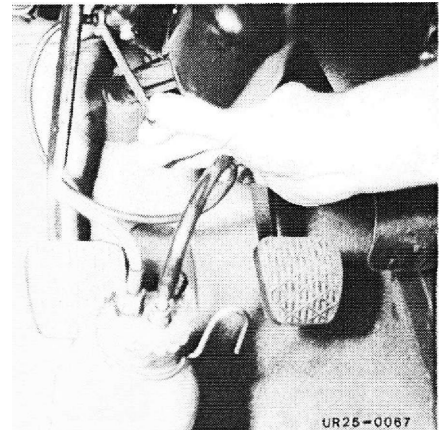

- Bleed the slave cylinder in the same order as described above.
- Remove bleeding device and fluid level to correct.
- Install the bonnet.

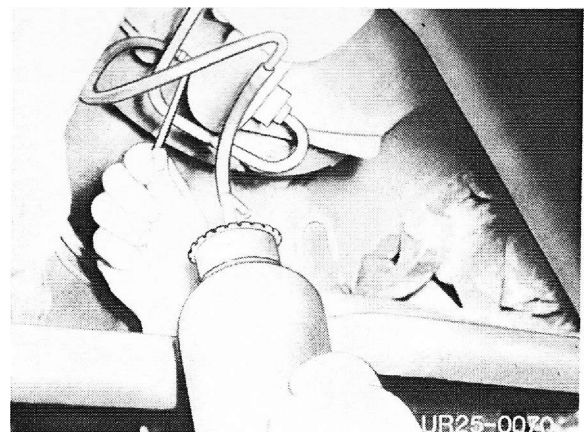

- Unscrew the engine cover in the cab.
- Open the bonnet.
- Lubricate the grease nipples on the engine.

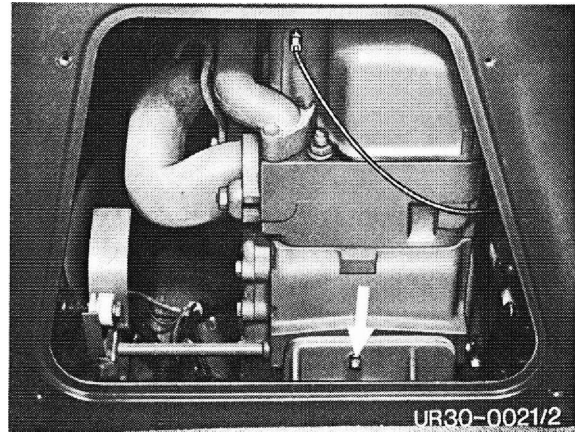

- Oil the ball joints.
- Close bonnet, screw on engine coverben.

