


Lubricate the trailer coupling

- Clean all lubrication points.
- Lubricate the lubrication point.
- Coat the pull hook with grease.



Lubricate the locking pin on the tow coupling.

- Pull and clean the socket pin.
- Coat gudgeon pin with grease.
- Insert the plug pin.

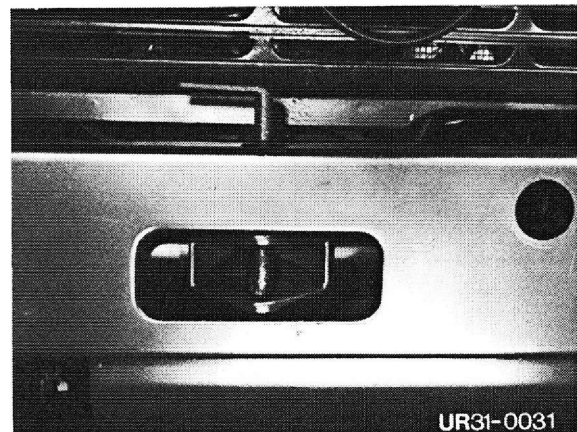


- Check fastening screws for tightness




Tightening torque	Nm	kpm
Trailer coupling on frame M 12 x 1.5	125	12.5
Crown nut hitch	300-400	30-40

- Check hitch on frame for tightnessfen, tighten if necessary.

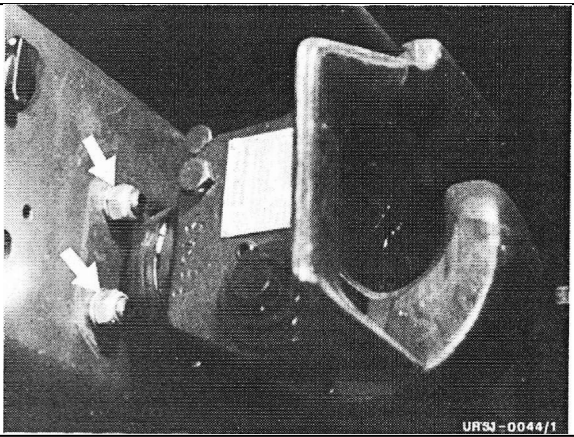

- Remove the dust protection cap on the back.

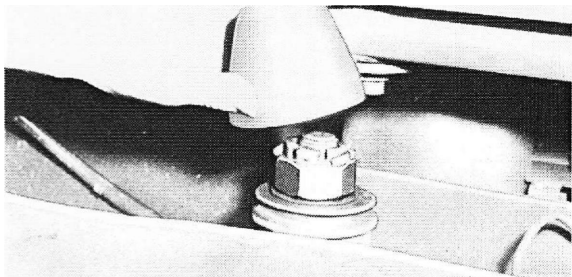

- Check the crown nut for tightness, if necessary remove the split pintake and tighten the crown nut.

