



Test data

Battery charge level	Acid density (kg / L)	Freezing point ° C
fully charged	1,285 (tropics 1,23)	- 68
half loaded	1.20 (Tropics 1.14)	- 27
unload	1.12 (Tropics 1.08)	- 11


- Open the battery box.

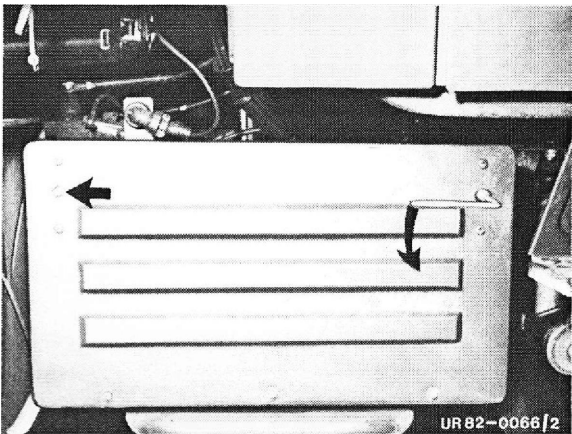


- Unlock the battery carriage.

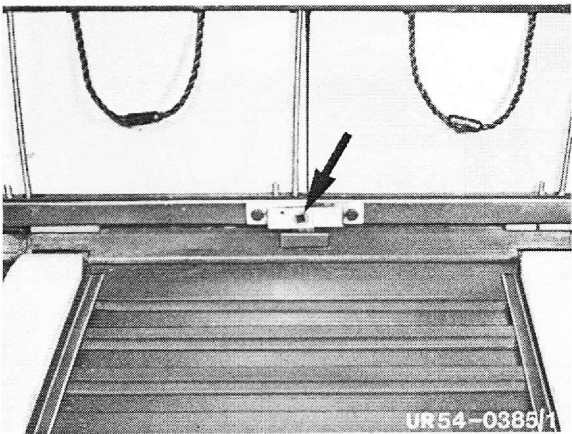

- Pull out the battery sled.
- Clean oxidized pole terminals and use techni-grease the petroleum jelly.
- Paint damage and rust spots on the battery box mending. To do this, lock the rear pole terminals and remove the batteries completely with a slide.

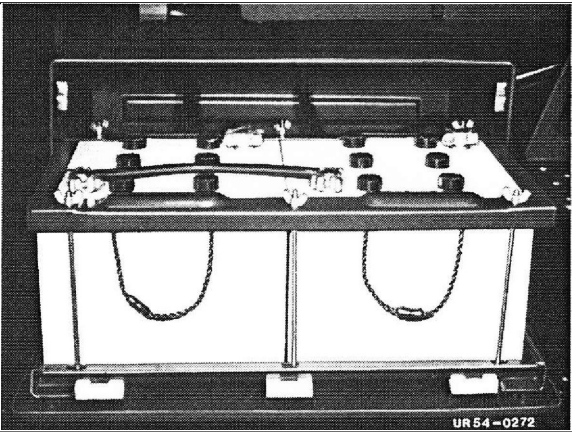

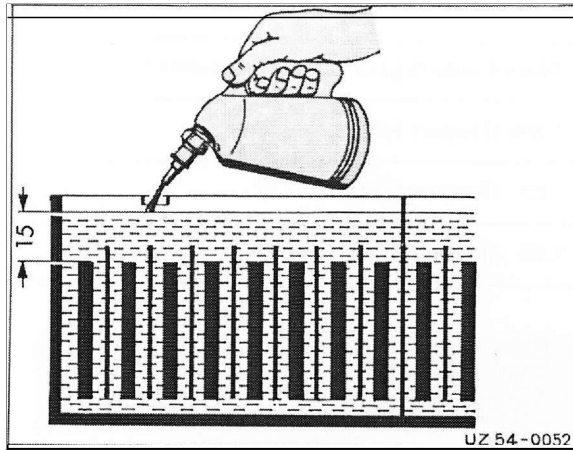

- Check the liquid level of the individual cells. To do this, clean and unscrew the plug. Liquid level must be at least in every cell stand over the top edge of the board.

To the. Refill do not use metal containers. Top up with distilled water only.



Check acid density in battery cells


- Unscrew the plug and take an acid sample from each cell and evaluate it. Note acid density.

Note:

If the acid level is below the top edge of the plate, no acid sample can be taken. In theFirst correct the fluid level and drive the vehicle for a few days (conversionprocess).

- If the acid density is good, check the liquid level, correct if necessary.
- If the acid density is not good, recharge the batteries to let.
- Installation takes place in the reverse order.

- Sockets for damage and dirt. Check tongue, clean if necessary.
- Check connection cables for tightness and chafing.
- Function of the 2-pin socket by checking the flashlight.

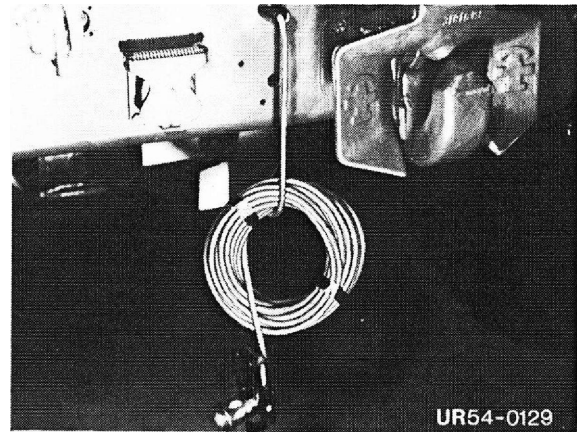

- Function of the trailer socket by checking the trailer.
- Different lighting conditions on the driver. Turn on the stuff and look at the trailer. Check control (co-driver).

