
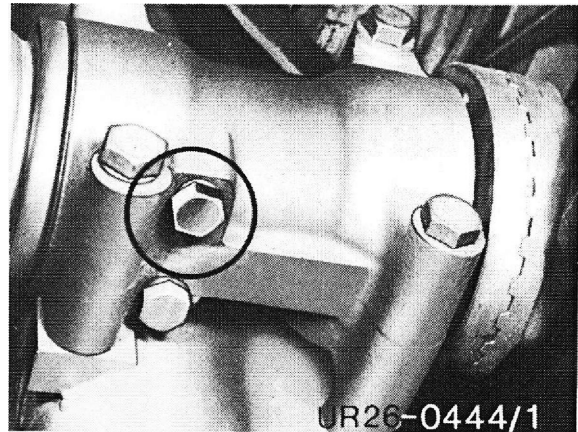


current in the PTO bearing


- Oil filler plug and unscrew. clean
- The oil level must reach the lower edge of the filler openingstand, add oil if necessary.
- Screw in the screw.

**Lubricate the PTO**

- Clean lubrication points.
- Lubricate front lubrication points until grease emerges from the bearing points.

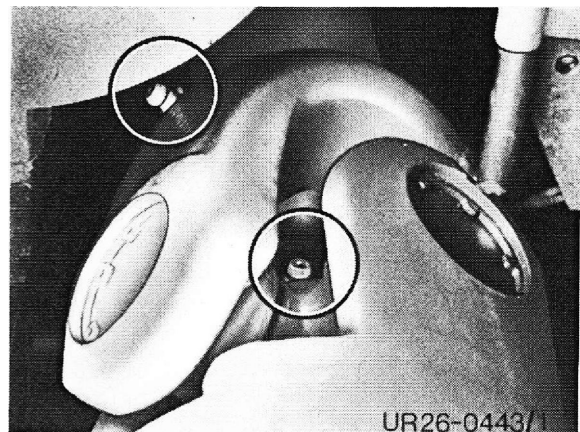


- Lubricate the rear lubrication point until grease emerges from the bearing points.

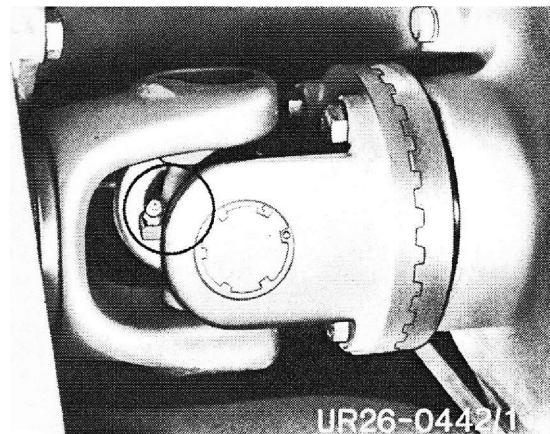

- Raise the bonnet.
- Fold down the front panel
- Check oil level and top up if necessary. a approx. 80 mm

Note:

Permitted oil withdrawal 26 liters when mounting the device. Check or refill oil only when it is turned off the engine and retracted piston rods of the working cylinders.

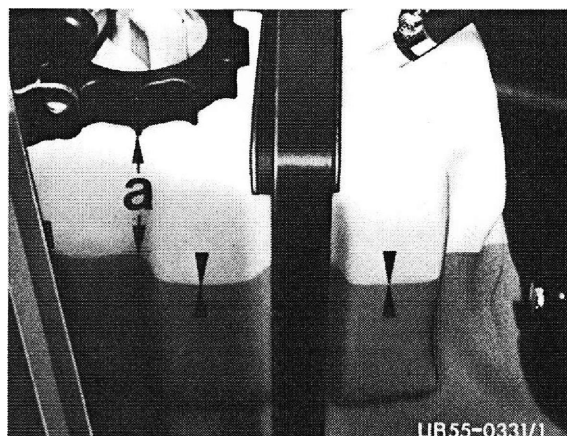


refill bi

- Unscrew the screw plug, oil up to MarRefill the label.

Note:

Before opening the screw plug filter top clean part. The oil tank must never be completely full will.




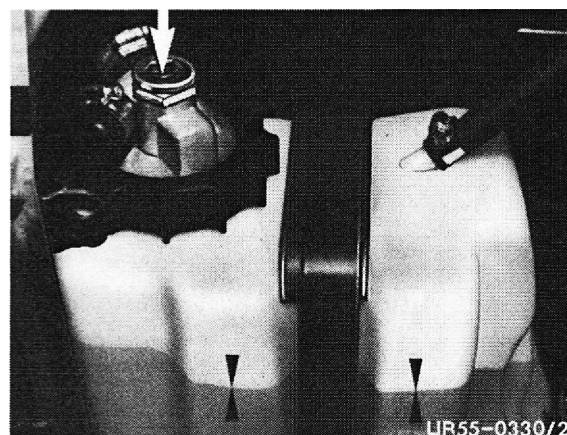



Filling	liter
Motor oil or quality hydraulic oil	31

Note:


Only drain and fill oil when the engine is switched off and the piston rods of the working cylinders are retracted.

- Remove bonnet and front cover.
- Loosen the hose tie.
- Pull off the hose and drain the oil.
- Clean the oil container.
- Loosen the hose tie (1) Pull off the ventilation hose.
- Open the quick release (2).
- Unscrew air filter screw (3) and air filter remove the insert.
- Loosen the hose tie, remove the return hose-pull.
- Unscrew the lock nut.
- Remove the upper part

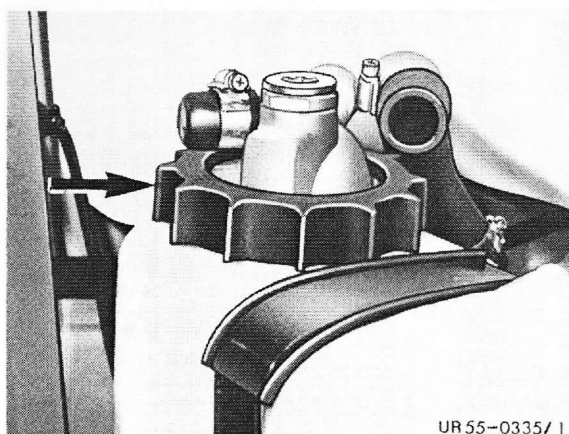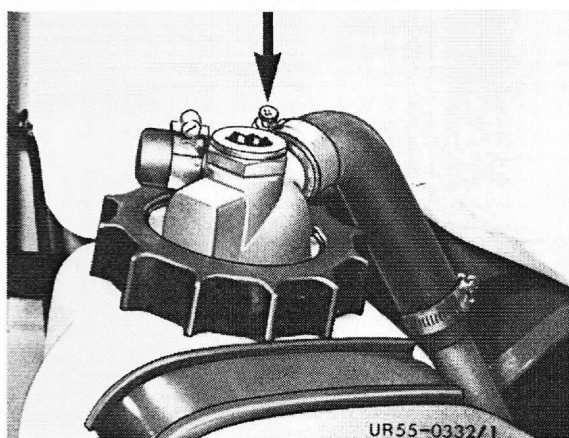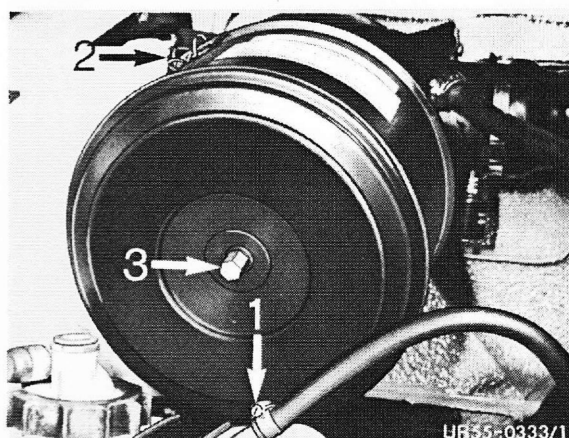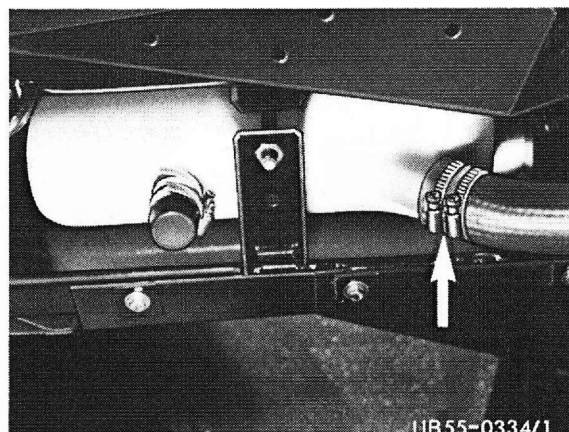

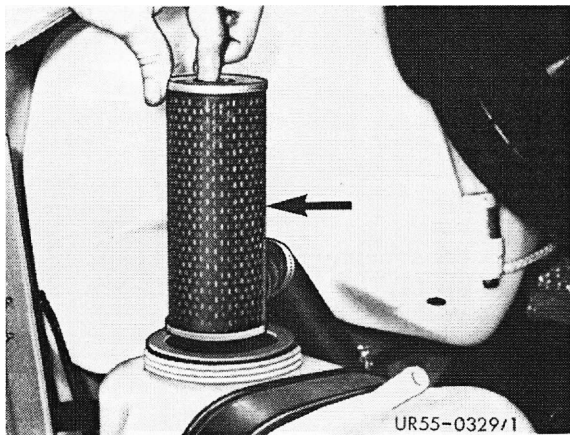


- Remove and replace the oil filter. Assemble in the reverse order.

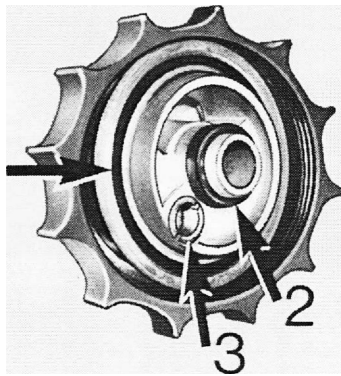

Note:

- Round cord ring (1) must have a preload of 0.5-1.0 mm.
- The rubber ring (2) must not be damaged.
- Check ball valve (3) for contamination (viewexam)

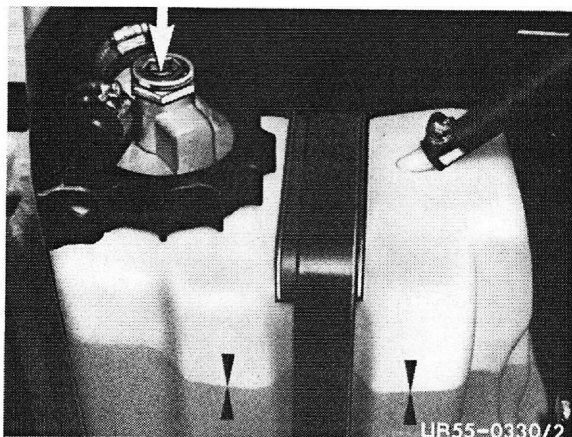


- Unscrew the screw plug, oil up to Marfill the label.

Note:

The engine may only be started after the oil container has been closed.


Oil level in winch

- Clean and unscrew the oil level screw plug (2).
- When the vehicle is horizontal, the oil level must reach the lower edge of the threaded hole stand.
- Oil must be refilled, oil filler capUnscrew screw (1) and through threaded holefill in.
- Oil level control and Oil filler cap
Clean and screw in the screw.

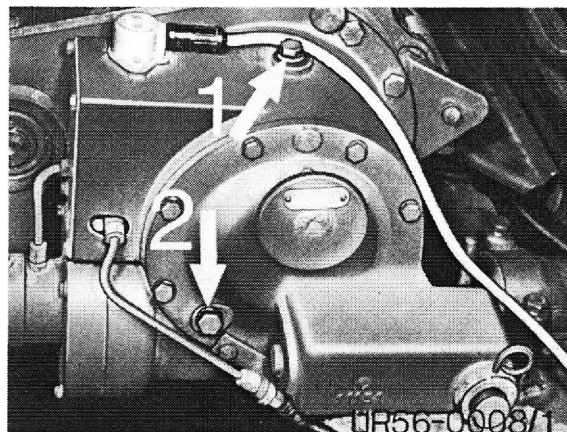

Oil change on winch

- Oil filler (1) and oil level control capClean and unscrew the screw (2).
- Clean the oil drain plug, unscrewand drain the oil.
- Clean the oil drain plug and again screw in.
- Pour in oil through the threaded hole until it comes on Threaded hole (2) emerges.
- Oil level control and Oil filler cap
Clean and screw in the screw.

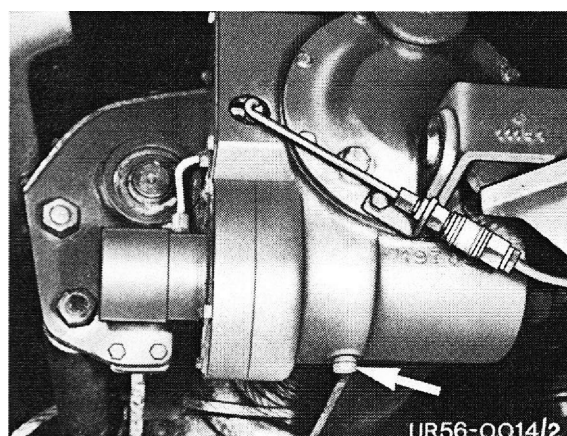


Lubricate the winch, winding device and guide roller


- Clean the winder, guide rail.
- Winding device, guide rail and onCoat drive chain with grease.
- Thread on the control handle of the grinding brake lubricate.
- Lubricate the selector shaft on the dog clutch.

Note:


Guide rail, winding device and drivechains must always be greased.

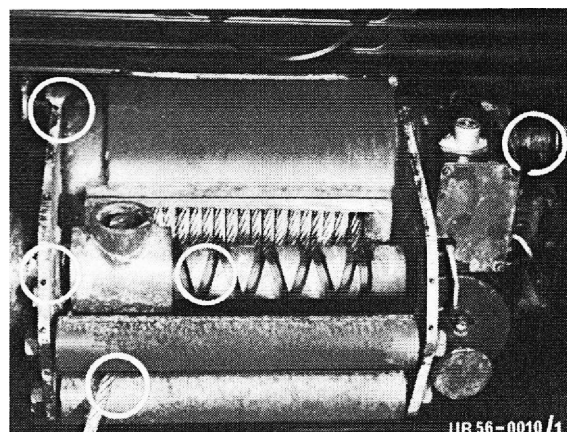


- Release the brake so far that the pull rope can be unwound with a little force.

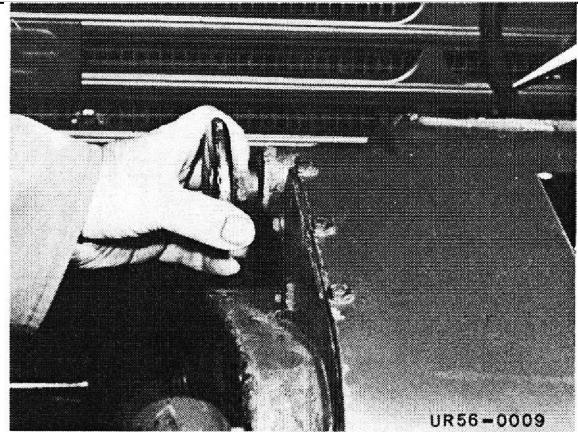


- Disengage the claw coupling.

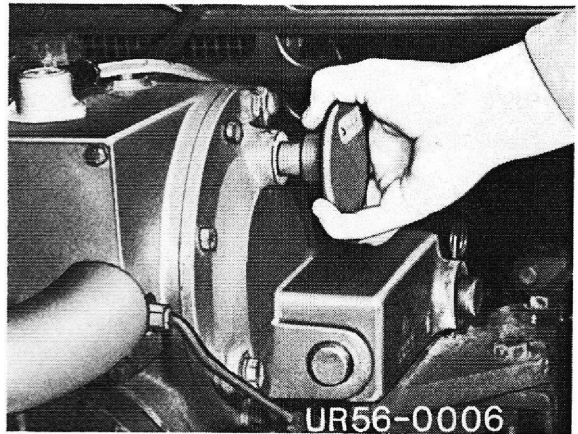


- Unscrew the protective bracket and cover

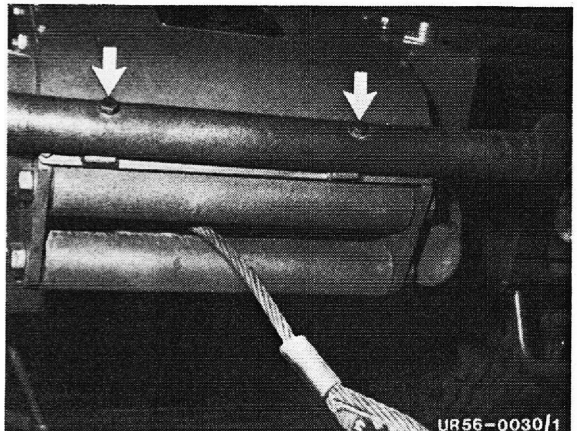

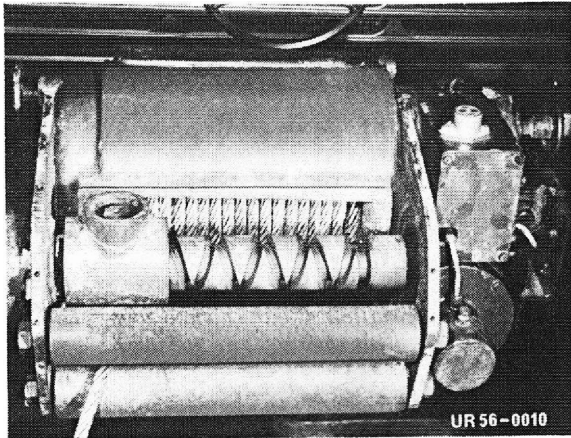


Pull out the rope and bring the rope guide to the turning point.

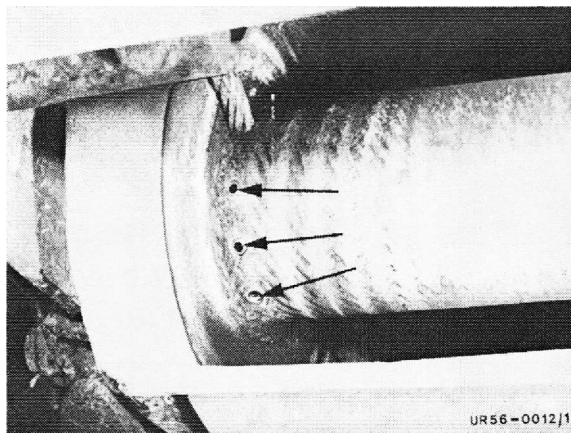


- Loosen the fastening screws on the rope drum and pull the pull rope out of the rope pocket.

- Clean the cable drum and the winding device and grease the winding device with multi-purpose grease.

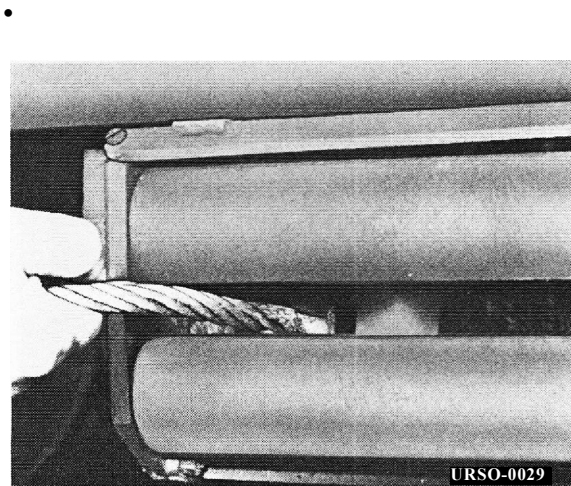

- Insert the pull rope through the winding device.

- Rope drum one turn in the unwinding direction rotate.
- Place the pull rope around the rope drum and in the rope bag introduce.
- Tighten the fastening screws.
- Engage the claw coupling and pull the rope updo the washing up.

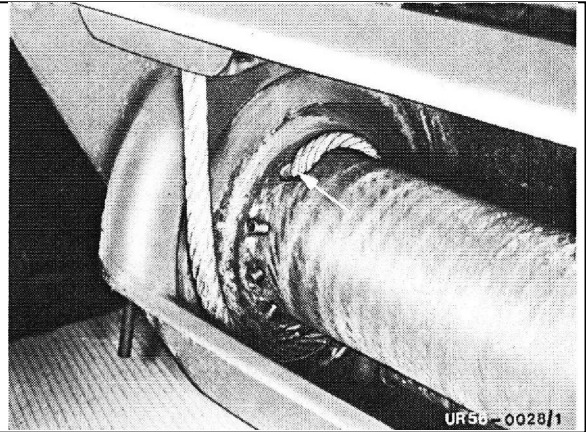

Bearing blocks on the frame and protective bracket on the ropeCheck winch for tightness, tighten if necessary.

