


Sectional view

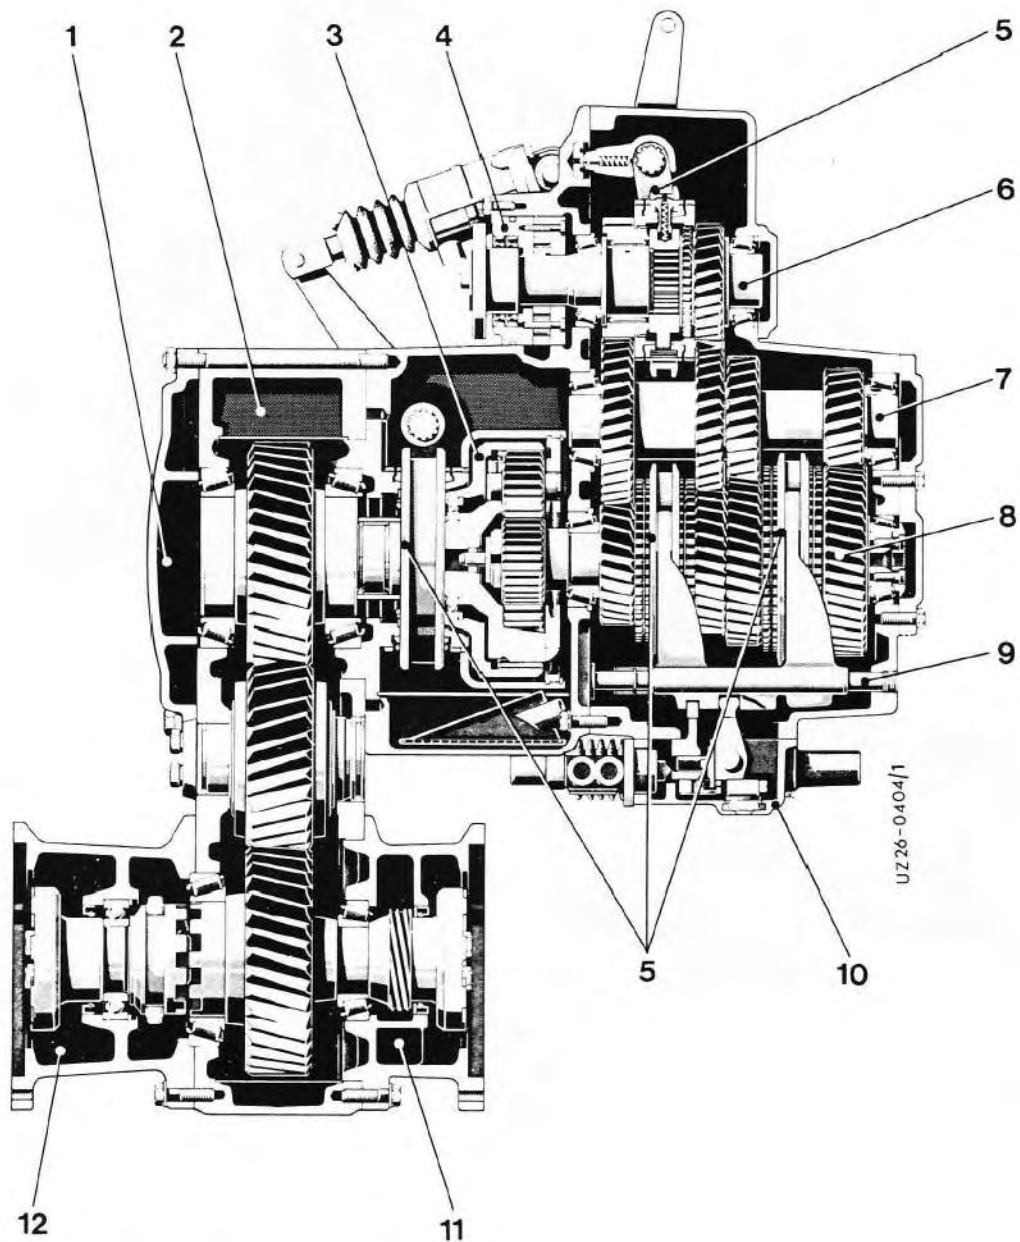


Main transmission UG 3/40 - 8/13,01 GPA

- 1 Transfer case
- 2 Planetary gear
- 3 Oil pump
- 4 Synchromesh member
- 5 Input shaft
- 6 Countershaft

- 7 Main shaft
- 8 Shifting shaft
- 9 Gear shift cover
- 10 Rear axle drive (intermediate housing)
- 11 Front axle drive (intermediate housing)

717.900


Sectional view

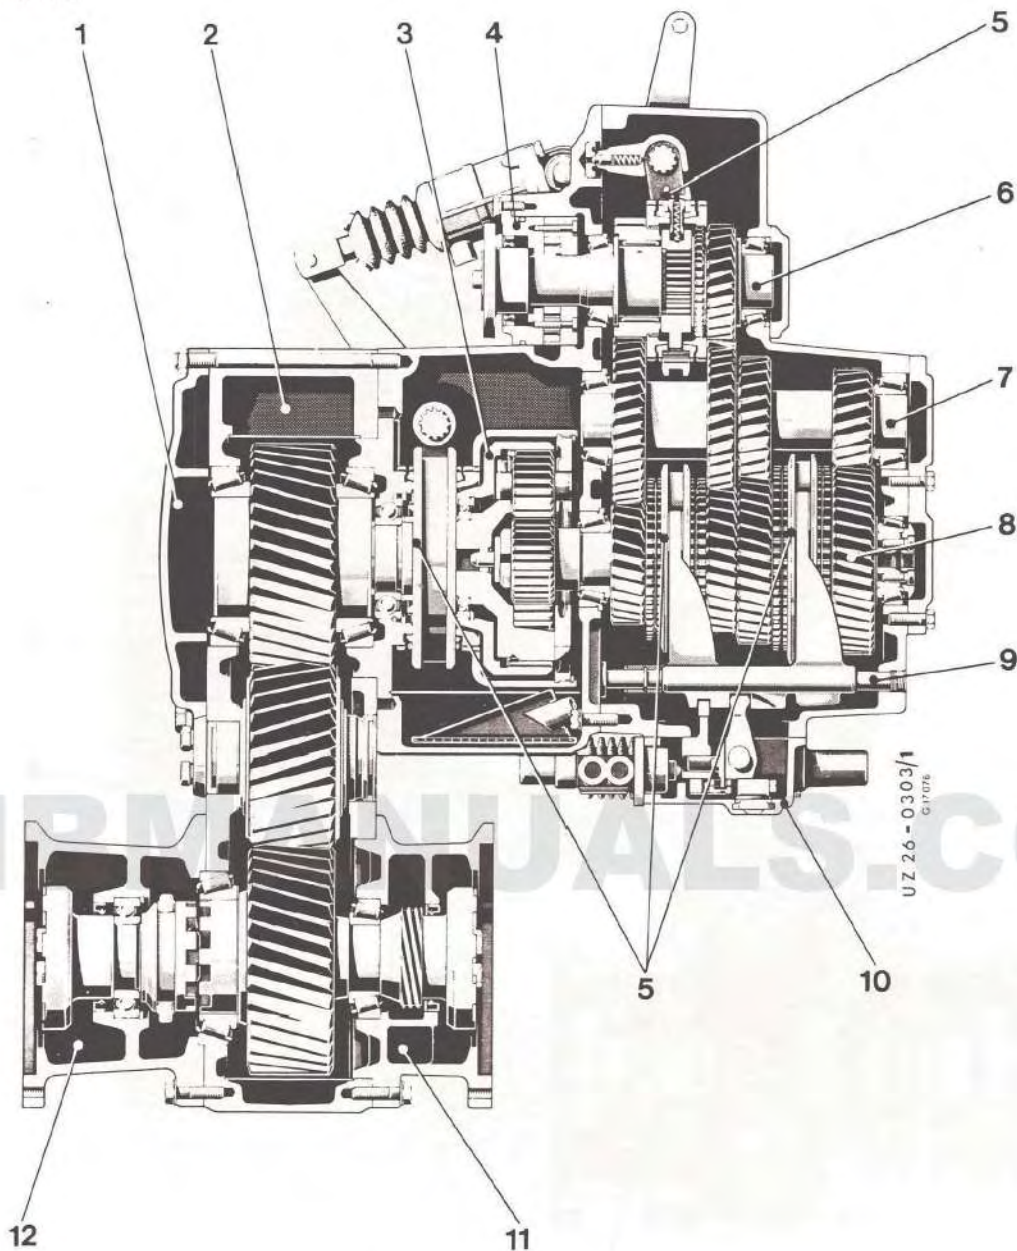

Main transmission UG 3/40 - 8/9,35 GPA

- | | | | |
|---|--------------------|----|---|
| 1 | Transfer case | 7 | Main shaft |
| 2 | Planetary gear | 8 | Shifting shaft |
| 3 | Oil pump | 9 | Gear shift cover |
| 4 | Synchromesh member | 10 | Rear axle drive (intermediate housing) |
| 5 | Input shaft | 11 | Front axle drive (intermediate housing) |
| 6 | Countershaft | | |

Sectional view

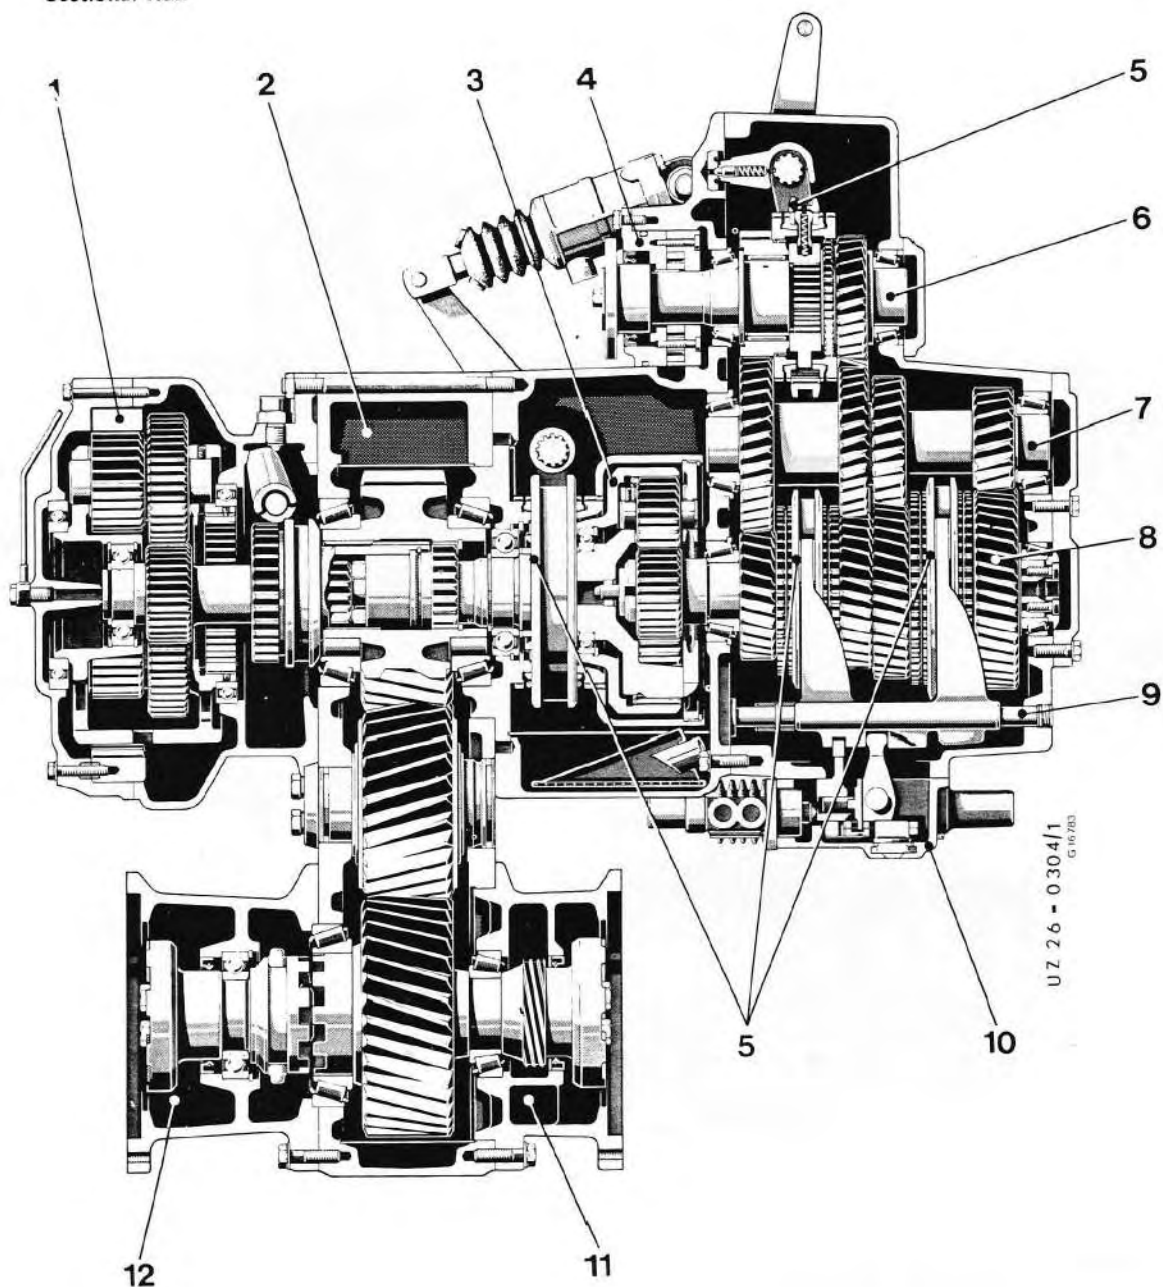


Main transmission UG 3/40 - 8/13,01 GPA
or UG 3/40 - 8/9,35 GPA

— with additional gear box working group NG 3/40 - 2/5,76

- | | | | |
|---|-------------------------------------|----|---|
| 1 | Additional gear box (working group) | 7 | Countershaft |
| 2 | Transfer case | 8 | Main shaft |
| 3 | Planetary gear | 9 | Shifting shaft |
| 4 | Oil pump | 10 | Gear shift cover |
| 5 | Synchromesh member | 11 | Rear axle drive (intermediate housing) |
| 6 | Input shaft | 12 | Front axle drive (intermediate housing) |

717.9
SA 35 977

Sectional view

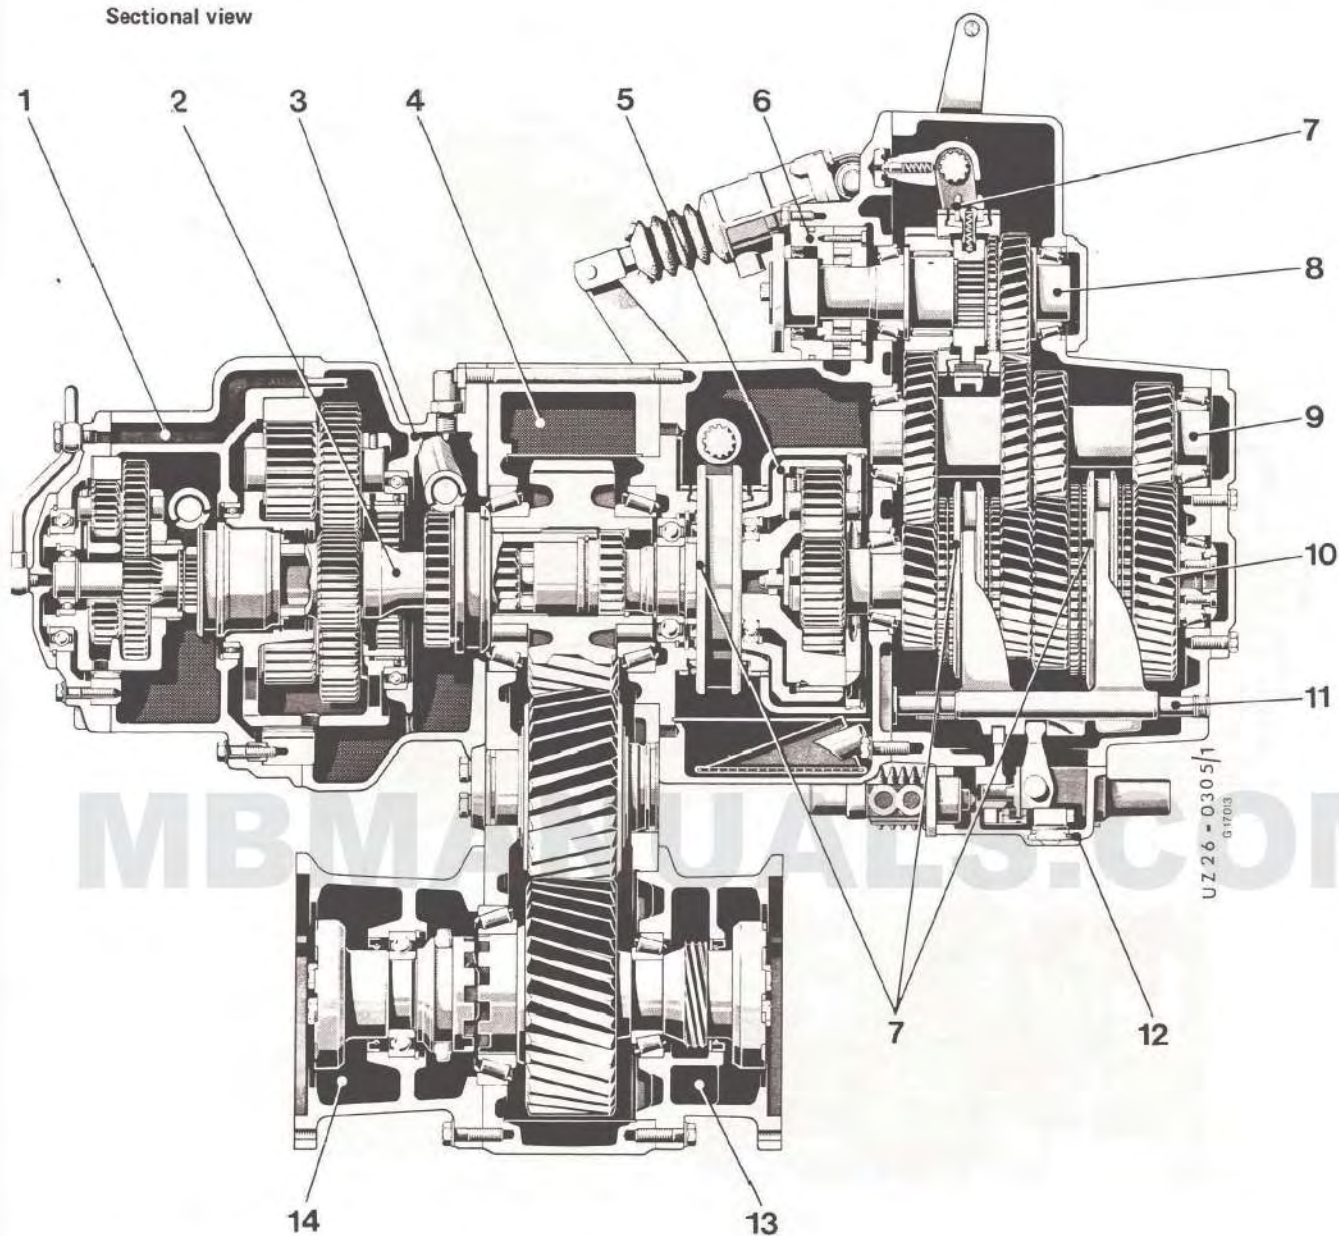


Main transmission UG 3/40 - 8/13,01 GPA
or UG 3/40 - 8/9,35 GPA

- with additional working group
- and crawler gear group NG 3/40 - 3/55,87


- | | | | |
|---|-------------------------------------|----|---|
| 1 | Additional gear box (working group) | 8 | Input shaft |
| 2 | Input shaft, additional gear box | 9 | Countershaft |
| 3 | Additional gear box (crawler group) | 10 | Main shaft |
| 4 | Transfer case | 11 | Shifting shaft |
| 5 | Planetary gear | 12 | Gear shift cover |
| 6 | Oil pump | 13 | Rear axle drive (intermediate housing) |
| 7 | Synchromesh member | 14 | Front axle drive (intermediate housing) |

Power flow (forward speeds)


1st speed

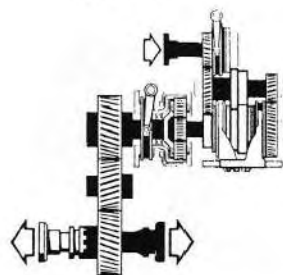


2nd speed

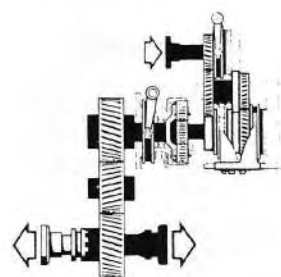

3rd speed

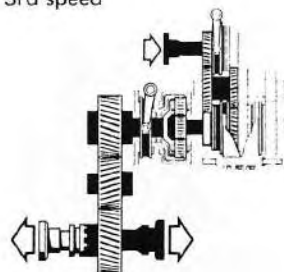


4th speed

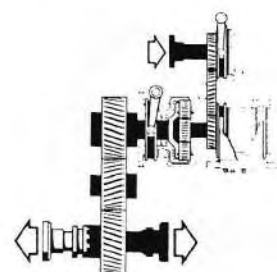


1st to 4th speeds with planetary gearing on


5th speed

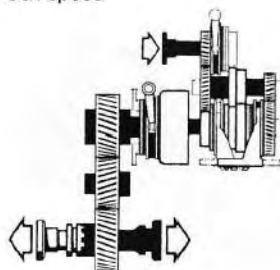


6th speed

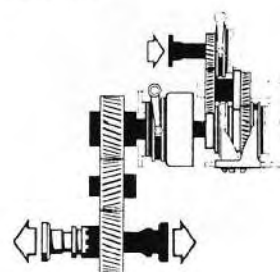

7th speed

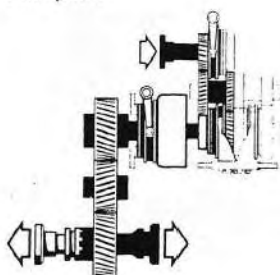

8th speed

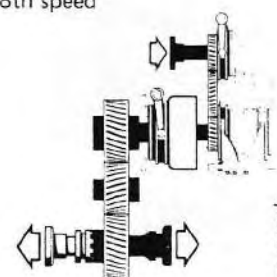


TG 17 085/1


1st to 8th speeds with planetary gearing off

Power flow (reverse speeds)


1st reverse speed

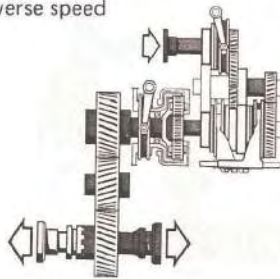


2nd reverse speed

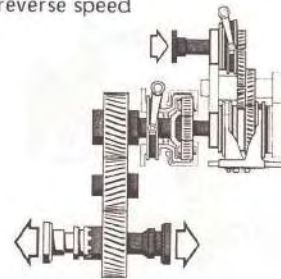

3rd reverse speed

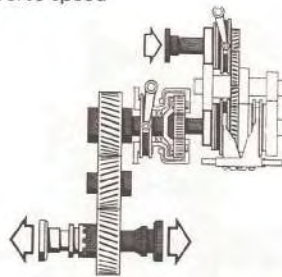


4th reverse speed

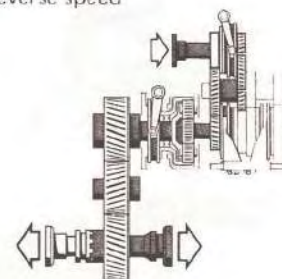


1th to 4th speeds with planetary gearing on


5th reverse speed ¹⁾

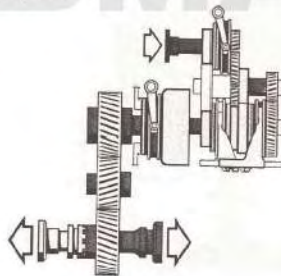


6th reverse speed ¹⁾

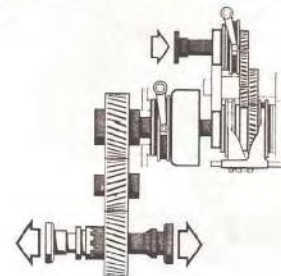

7th reverse speed ¹⁾

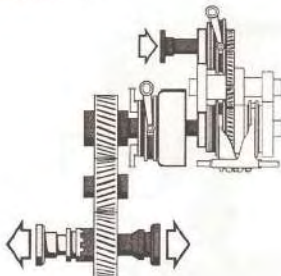

8th reverse speed ¹⁾

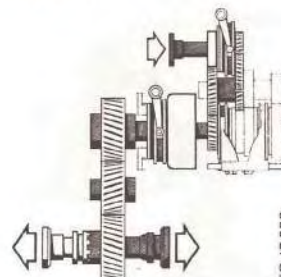


TG 17 086

5th to 8th speeds with planetary gearing off


¹⁾ Locked with SA 35 977

Power flow additional gear box

1st speed

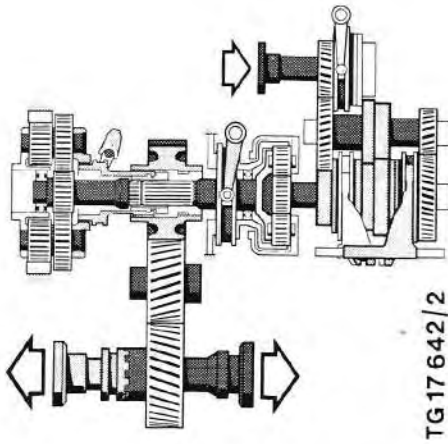

1st speed

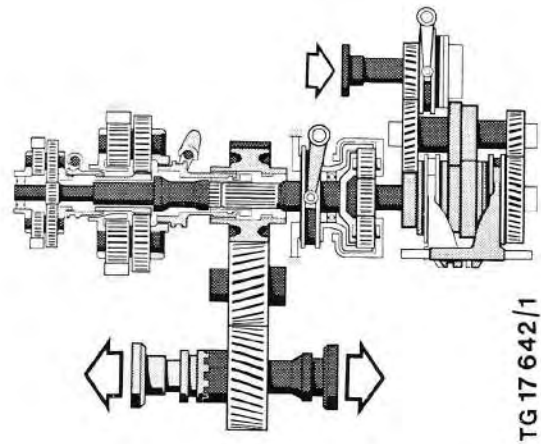

1st forward speed with working speeds.

1st forward speed with working and crawler speeds.

Power flow in the speeds 1 through 8 are the same as shown in figures 1.4/1 and 1.4/2.

Capacities

Designation	Service product Specifications (Sheet 235.1)	SAE class	Capacity (L) to chassis end No. 112 880	to chassis end No. 112 881	Transmission Model/ SA
Main transmission	Engine oil	10 W ³⁾	10,5	11,0	717.901
	Transmission oil	80 ¹⁾			717.900
– with working group		80 W ¹⁾	11,5	12,0	SA 35 736
– with crawler speed group		80 W/ 85 W ¹⁾			
		90 ²⁾	12,5	13,0	
	85 W/ 90 ²⁾				

1) Optional

2) In predominantly hot zones

3) Only applies to special purpose vehicles, UNIMOG 435.111/. 113 /. 115

Setting Values**Manual Transmission**

Permissible axial play, input shaft	mm	0,05 – 0,04
Permissible axial play, countershaft	mm	0,06 ± 0,02
Permissible axial play, main shaft	mm	0,03 ± 0,02
Permissible synchronizing play	min.	mm 0,7 ± 0,3
	max.	mm 2,0
Adjustment b Shifting shafts (parallel spaced out)	mm	100,6 ± 0,1
Forward and reverse shifting shaft		horizontally install

Planetary gear

Permissible radial play, deep-groove ball bearing in pinion carrier	mm	0,4
Permissible axial play, synchromesh	mm	0
Permissible synchronizing play	min.	mm 1,0 ± 0,2
	max.	mm 2,0
Adjustment a Pneumatic cylinder (piston rod extended)	mm	241 ¹⁾
		245 ²⁾
Shift lever, planetary train upwards	°	30

1) To chassis end No. 113 900

2) From chassis end No. 113 901

Transfer Case

Permissible axial play on pinion carrier	mm	0,2 – 0,1 ¹⁾
Permissible axial play, drive gear in transfer case	mm	0,06 ± 0,02
Permissible axial play, idler gear	mm	0,06 + 0,02 – 0,01 0,05 ± 0,03 ²⁾
Permissible axial play, output gear	mm	0,06 ± 0,02

1) Play is considered in synchronizing play

2) From transmission No. 012 816

Intermediate Housing

Permissible axial play, deep-groove ball bearing	mm	0
--	----	---

26.13 General

717.9

SA 35 977

Setting Values Shift Lever

Main shift lever	of driver's door	c mm	700
	of driver's cab rear panel	d mm	480
Forward/reverse gear shift lever		e mm	10

Shift lever rear-mounted auxiliary transmission

Adjustment a Shift lever working group	mm	approx. 55
Adjustment b Shift lever crawler speed group	mm	approx. 55

Special Tools

Cons. No.	Number	Tool	Tool set
1	Basic drift for special tools	406 589 04 15 00	B
2	Puller for oil pump	355 589 00 33 00	B
3	Baseplate for oil pump	435 589 00 43 00	B
4	Installer for shaft seal in axle take-off with tool No. 2	425 589 06 43 00	B
5	Installer for shaft seal in oil pump with tool No. 1 – with tools No. 1 and No. 4 when oil pump is removed	425 589 11 43 00	B
6	Suspension lug for main transmission	425 589 00 62 00	B
7	Locking fixture for planetary gear trains, enabling shift transmission to be detached while main transmission is installed	425 589 01 62 00	B
7a	Wrench for slotted nut 1/2 inch square on input shaft	425 589 01 07 00	C
8	Wrench for slotted nut 1/2 inch square for main shaft	425 589 00 07 00	C
8a	Assembly sleeve for main shaft for transmission model designation 717.900	425 589 03 14 00	C
9	Installer for shaft seal and bushing in shift shaft bores	385 589 00 15 00	C
10	Installer for shaft seal and bushing in shaft seal bores, – for spacer sleeve on main shaft	385 589 01 15 00	C
11	Measuring disk for idler gear	425 589 02 21 00	C
12	Centering tool for assembling oil pump	425 589 03 21 00	C
13	Dial gauge holder for dial gauge	343 589 00 40 00	C
14	Basic device for removing outer races of taper roller bearings	001 589 45 33 00	C
15	Clamp for taper roller bearing on main shaft and countershaft (Bearing series 33 109), with tool No. 14	000 589 41 34 00	C
16	Clamp for taper roller bearing on input shaft and main shaft (Bearing series 32 009), with tool No. 14	000 589 42 34 00	C
16a	Installer for shaft seal in shift shaft bores, with tool No. 9	425 589 07 43 00	C
17	Dial gauge holder for dial gauge	363 589 02 21 00	D
18	Dial gauge to measure taper roller bearings	001 589 53 21 00	D

Necessary Materials

Cons. No.	Designation	Part No.
1	Loctite No. 241 ¹⁾	002 989 70 71
2	Loctite No. 573 ²⁾	001 989 45 20
3	Longlife Grease	Commercially available
4	Ciba Adhesive „Araldite“ with bonding agent 123 B and hardener 953 B	Commercially available
5	Roller bearing grease	Commercially available
6	Duropon adhesive varnish	001 989 92 71
7	Optimol paste white	Commercially available

1) Screw locking compound

2) Surface sealing compound


Tightening Torques

Location	Thread	strength	Nm
Transmission mount left	M 16 x 1,5 x 65 ¹⁾	– 12.9	340
Transmission mount right	M 12 x 1,5 x 112 ²⁾	– 12.9	145
	M 12 x 1,5 x 105	– 12.9	150
Transmission mount on left and right of frame	M 36 x 1,5 x 24	–	180
Slotted nut on input shaft	M 45 x 1	–	150
Slotted nut on main shaft	M 35 x 1,5	–	150
Adjusting screws of selector rods	M 18 x 1,5	–	5
Idler gear shaft mount	M 12 x 1,5 x 30	– 8.8	75
Take-off flange mount on front and rear axle take-off	M 12 x 1,5 x 30	– 8.8	75
Transfer box	To planetary gear	M 12 x 35	– 8.8
		M 12 x 40	– 12.9
		M 12 x 55	– 8.8
		M 12	– 8
	Stud	M 12 x 170	– 8.8
Input flange mount	M 10 x 1 x 60	– 10.9	75
Input gear mount to planetary train	M 10 x 1 x 60	– 10.9	75
Transmission case spur gear part to planetary gear	M 10 x 30	– 12.9	75
Intermediate housing to transfer box	M 10 x 40	– 12.9	75
	M 10 x 85	– 8.8	25
	M 10	– 8	33
Universal joint to shift linkage	M 10 x 45	– 10.9	64
	M 8 x 45	– 10.9	32
Bearing covers to main shaft, countershaft and input shaft	M 10 x 30	– 8.8	50
Shift linkage to shift lever	M 10 x 70	– 8.8	46
Bearing covers in intermediate housing, front axle take-off	M 10 x 30	– 8.8	33
Oil pump to main transmission	M 8 x 20	– 8.8	25
Cover to main shaft	M 8 x 20	– 8.8	25
Shift cover to main transmission	M 8 x 55	– 8.8	25
4/2-way valve to shift cover	M 8 x 25	– 8.8	25
Shift cylinder, front axle take-off	M 8 x 50	– 8.8	25

1) Previous M 16 x 1,5 x 70, 380 Nm, conversion to countersunk double nip bolts from transmission No. 008 756

2) Previous M 12 x 1,5 x 95, 150 Nm, conversion to countersunk double nip bolts from transmission No. 015 264

Exploded view

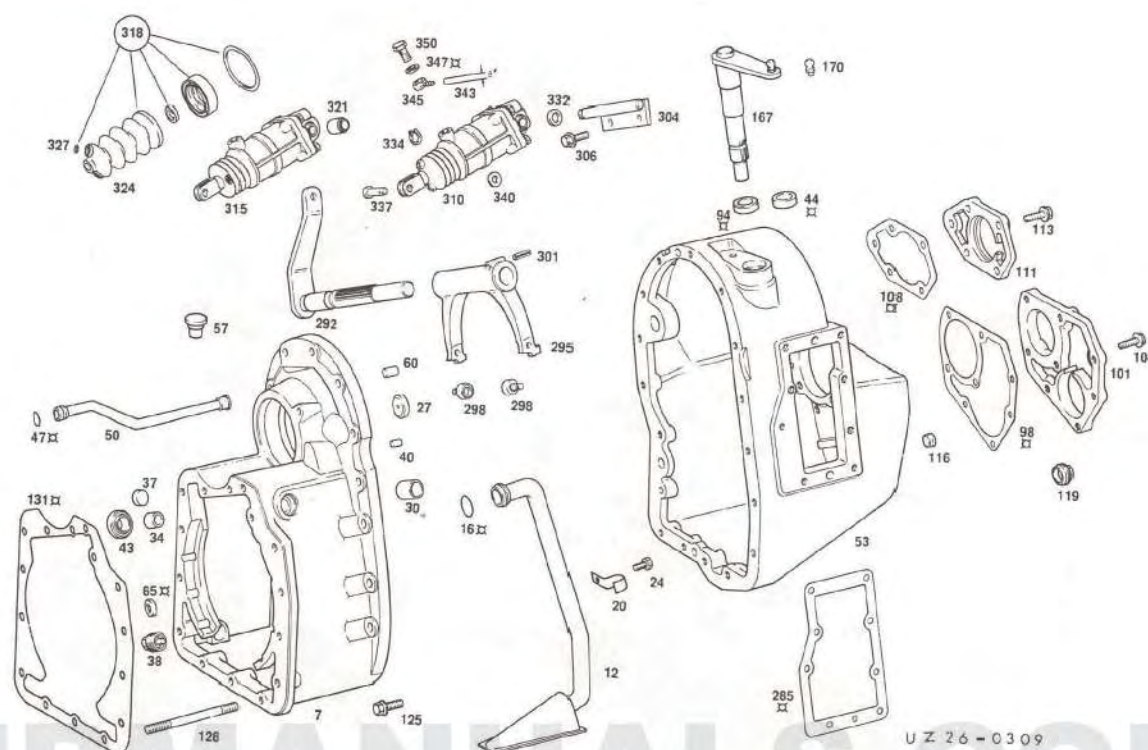


Transmission housing with shift parts

- | | |
|------------------------------|--|
| 7 Planetary gear box | 119 Screw plug |
| 12 Intake pipe | 125 Screw |
| 16 Sealing ring | 128 Stud bolt |
| 20 Clamp | 131 Gasket |
| 24 Screw | 167 Shifting shaft forward-reverse speed |
| 27 Shifting detent | 170 Ball pin |
| 30 Bushing | 292 Shifting shaft planetary gear set |
| 34 Bushing | 295 Shifting fork |
| 37 Cap | 298 Sliding block |
| 38 Screw plug | 301 Clamping sleeve |
| 40 Cylindrical pin | 304 Bracket |
| 43 Sealing ring | 306 Screw |
| 44 Sealing ring | 310 Shifting cylinder |
| 47 Sealing ring | 315 Shifting cylinder |
| 50 Pipe | 318 Repair set |
| 53 Housing shifting gear box | 321 Bushing |
| 57 Breather | 324 Grommet |
| 60 Cylindrical pin | 327 Sealing ring |
| 65 Sealing ring | 332 Spacer washer |
| 94 Sealing ring | 334 Locking ring |
| 98 Gasket | 337 Bolt |
| 101 Bearing cover | 340 Spacer washer |
| 104 Screw | 343 Hose |
| 108 Gasket | 345 Annular element |
| 111 Housing cover | 347 Sealing ring |
| 113 Screw | 350 Hollow screw |
| 116 Screw plug | |

717.9

SA 35 977


Exploded view

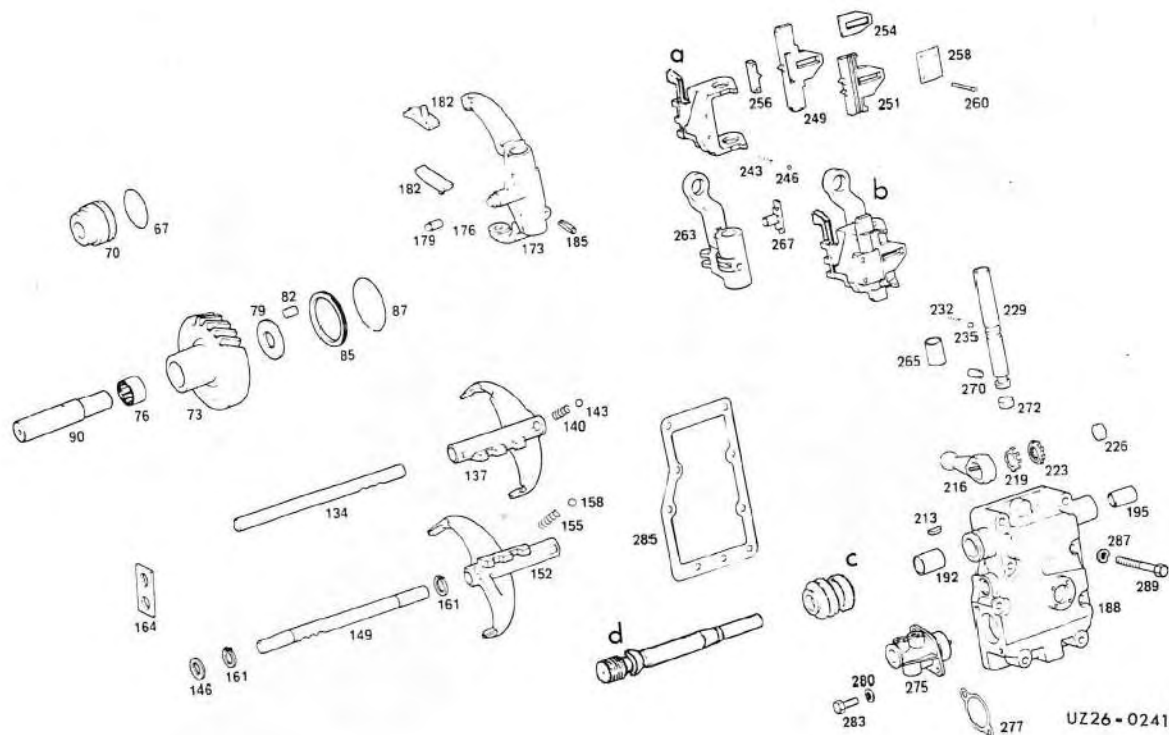

Gear shift cover with shifting parts

67 Sealing ring	173 Shifting fork	254 Baffle plate
70 Bush	176 Spring	256 Guide pin
73 Reverse idler gear	179 Bolt	258 Retaining spring
76 Needle bearing	182 Sliding block	260 Grooved pin
79 Spacer washer	185 Clamping sleeve	263 Shifting finger
82 Cylindrical roller	188 Gear shift cover	265 Bush
85 Spacer washer	192 Bushing	267 Interlock plug
87 Locking ring	195 Bushing	270 Cylindrical pin
90 Reverse idler axle	213 Woodruff key	272 End cap
134 Shifting rod	216 Selector lever	275 Valve
137 Shifting fork	219 Locking plate	277 Gasket
140 Spring	223 Nut	280 Spring washer
143 Ball	226 Cap	283 Screw
146 Spacer washer	229 Selector rod	285 Gasket
149 Shifting rod	232 Spring	287 Spring washer
152 Shifting fork	235 Ball	289 Screw
155 Spring	243 Spring	a Stop pawl
158 Ball	246 Ball	b Shifting finger
161 Locking ring	249 Detent plate	c Grommet
164 Guide	251 Detent plate	d Shifting rod

Exploded view

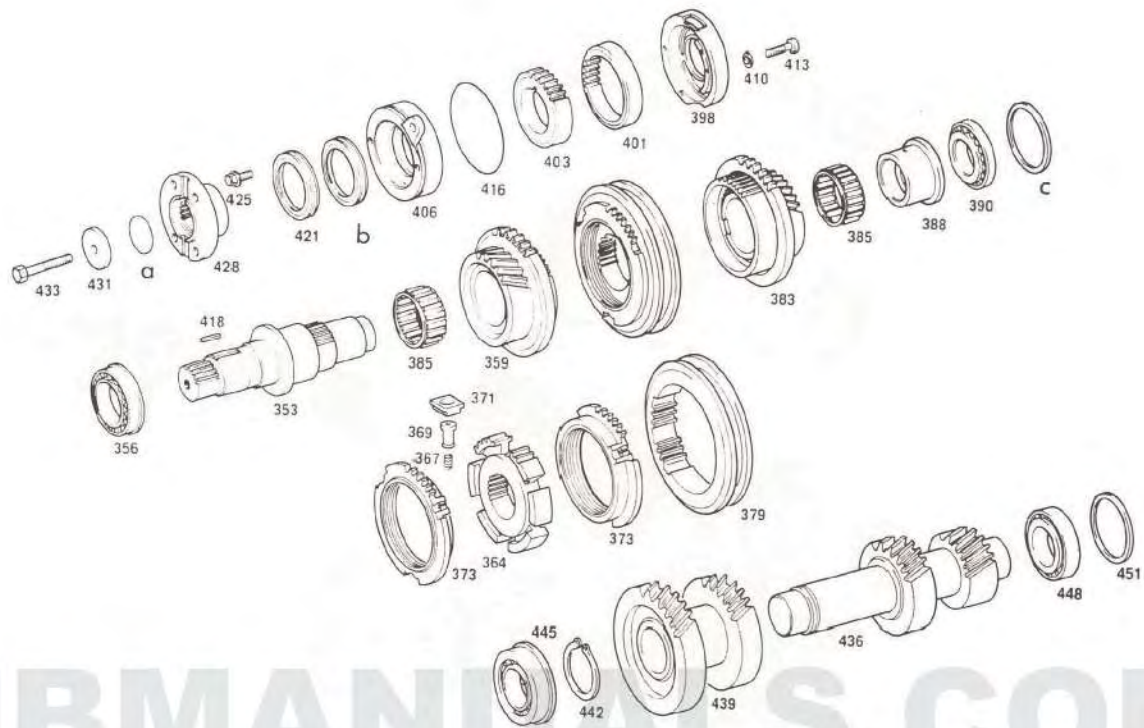

UZ 26-0246


Input shaft and countershaft

353	Input shaft	410	Serrated washer
356	Taper roller bearing	413	Bolt
359	Forward speed gear	416	Sealing ring
364	Synchromash member	418	Key
367	Spring	421	Shaft seal
369	Pin	425	Bolt
371	Dog	428	Flange
373	Synchronizing cone	431	Supporting disk
379	Sliding collar	433	Bolt
383	Reverse speed gear	436	Countershaft
385	Needle bearing	439	Gearset
390	Taper roller bearing	442	Snap ring
388	Bushing	445	Taper roller bearing
393	Supporting disk	448	Taper roller bearing
395	Bolt	451	Shim
398	Oil pump body	a	Sealing ring
401	Gear wheel	b	Shaft seal
403	Gear wheel	c	Shim
406	Pump body		

717.9

SA 35 977

Exploded view

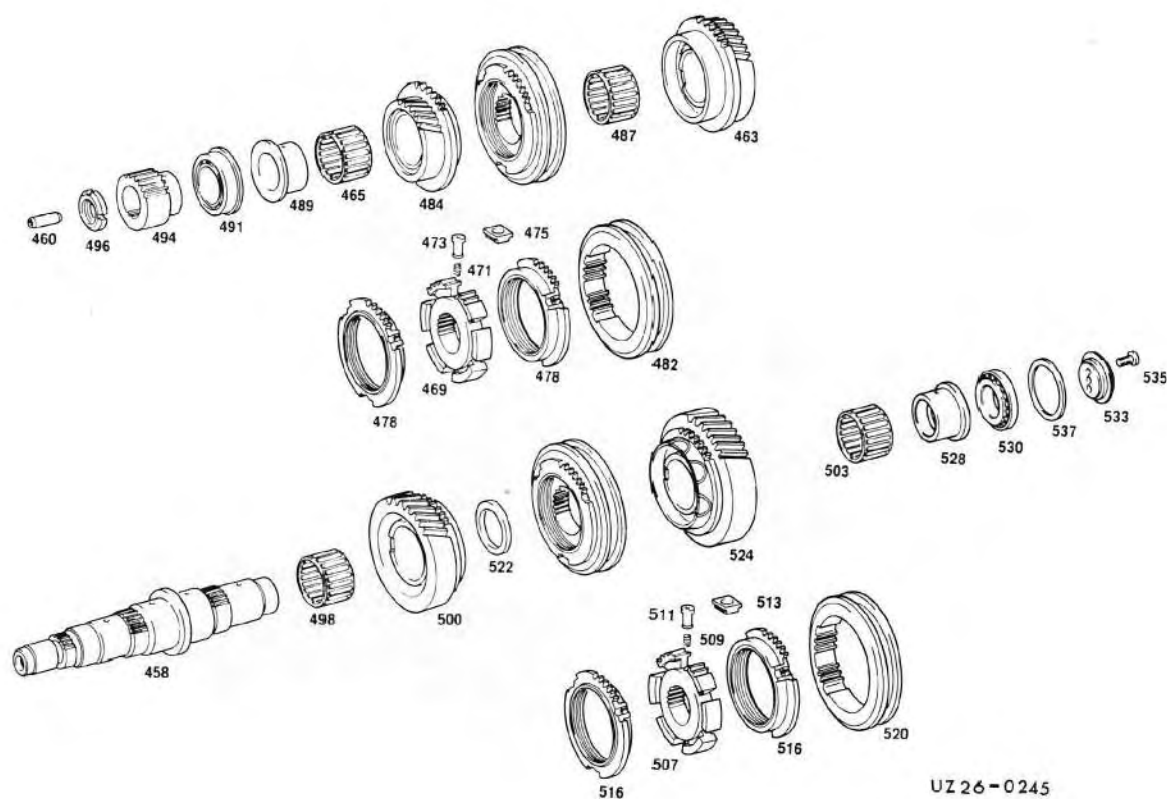


Main shaft

458	Main shaft	498	Needle bearing
460	Spacing tube	500	2nd/6th speed gear
463	3rd/7th speed gear	503	Needle bearing
465	Needle bearing	507	Synchromash member
469	Synchromash member	509	Spring
471	Spring	511	Pin
473	Pin	513	Dog
475	Dog	516	Synchronizing cone
478	Synchronizing cone	520	Sliding collar
482	Sliding collar	522	Spacing ring
484	4th/8th speed gear	524	1st/5th speed gear
487	Needle bearing	528	Bushing
489	Bushing	530	Taper roller bearing
491	Taper roller bearing	533	Supporting disk
494	Sun gear	535	Bolt
496	Slotted nut	537	Shim

717.901
SA 35 977

Exploded view

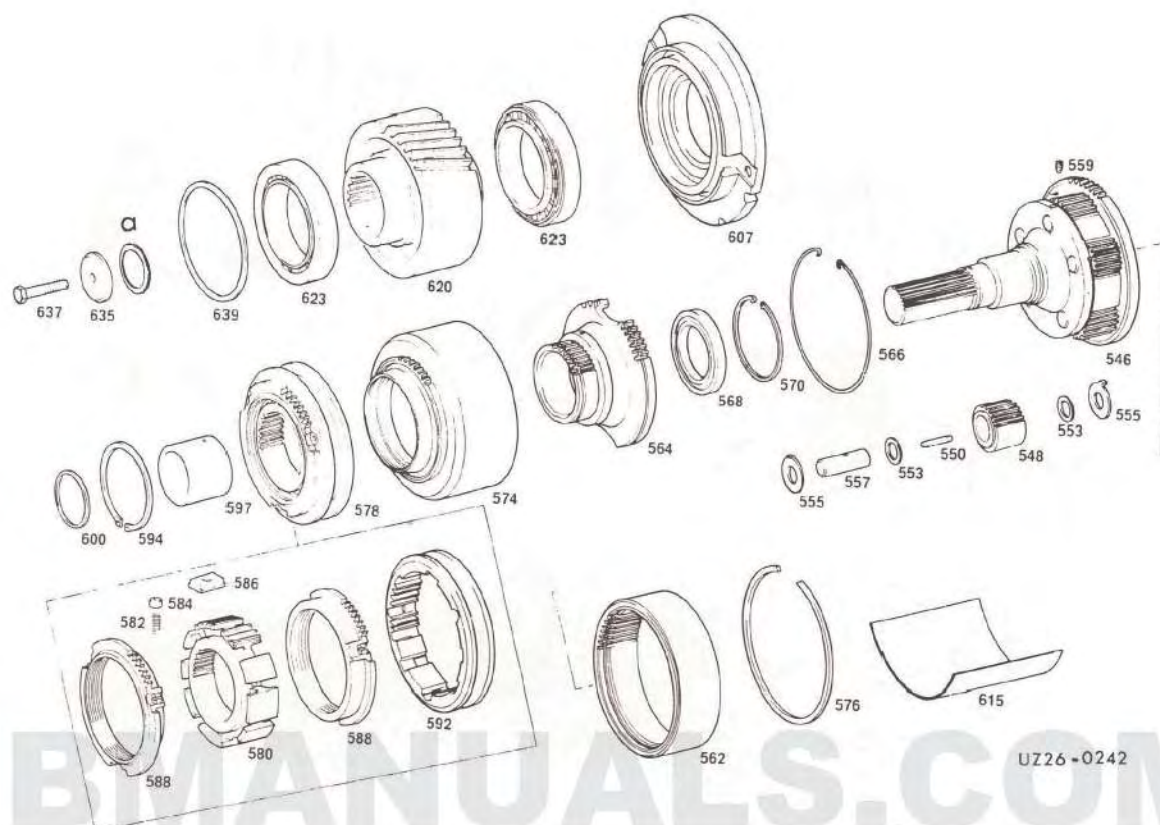


Planetary gearing without additional parts for auxiliary transmission

546 Planet-pinion carrier	582 Spring
548 Planet-pinion	584 Pin
550 Bearing needle	586 Dog
553 Shim	588 Synchronizing cone
555 Shim	590 Spring
557 Idler shaft	592 Sliding collar
559 Bolt	594 Retainer
562 Ring gear	597 Spacing tube
564 Hub	600 Spacing ring
566 Snap ring	607 Synchronesh member
568 Ball bearing	615 Oil baffle
570 Snap ring	620 Drive gear
574 Synchronesh member	623 Taper roller bearing
576 Snap ring	635 Supporting disk
578 Synchronesh member	637 Bolt
580 Synchronesh member	639 Shim
	a Sealing ring

717.900
SA 35 977

Exploded view

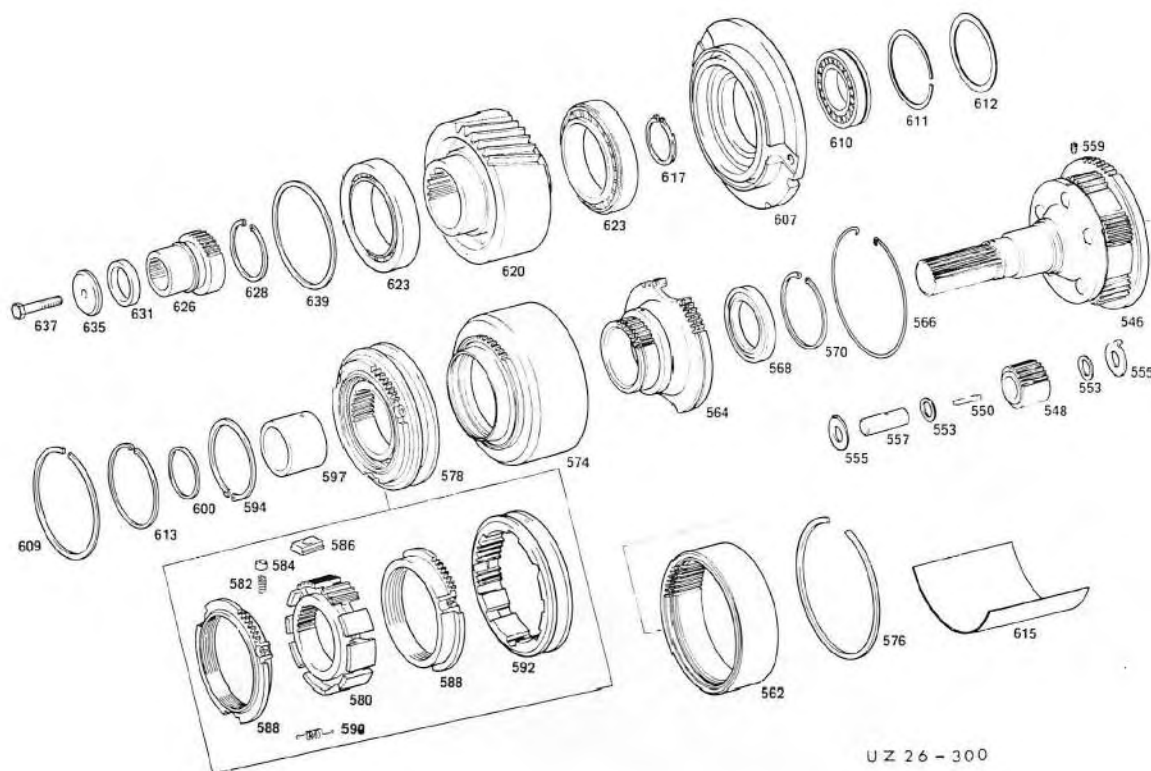


U Z 26 - 300

Planetary gearing with additional parts for auxiliary transmission

546 Planet carrier	592 Sliding collar
548 Planet gear	594 Locking ring
550 Bearing needle	597 Spacer tube
553 Spacer washer	600 Spacer ring
555 Spacer washer	607 Synchronizing body
557 Intermediate axle	609 Spring ring
559 Screw	610 Radial bearing
562 Ring gear	611 Locking ring
564 Hub	612 Compensating washer
566 Locking ring	613 Locking ring
568 Ball bearing	615 Oil baffle
570 Locking ring	617 Locking ring
574 Synchronizing body	620 Input gear
576 Locking ring	623 Tapered roller bearing
578 Synchronizing body	626 Follower sleeve
580 Synchronizing body	628 Locking ring
582 Spring	631 Spacer tube
584 Bolt	635 Retaining disc
586 Follower	637 Screw
588 Synchronizing cone	639 Spacer washer
590 Spring	

Exploded view

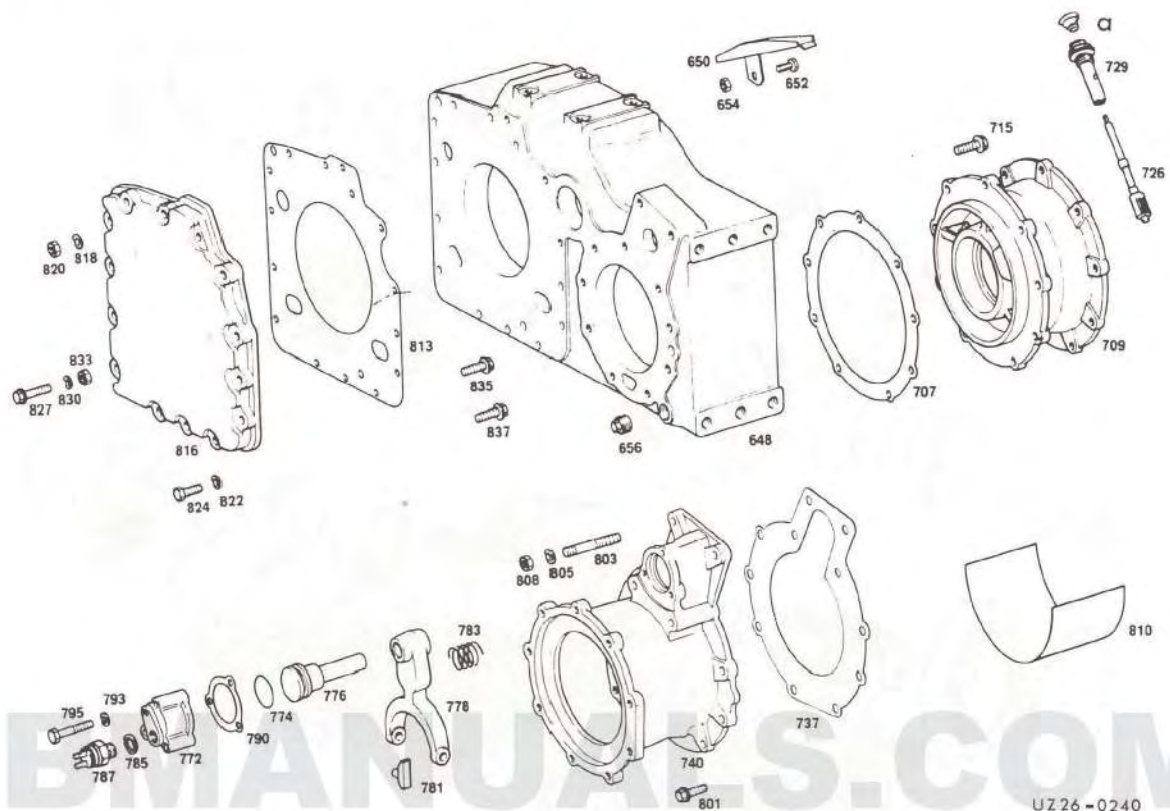


UZ 26-0240

Transfer box and intermediate housing

648	Transfer box	790	Gasket
650	Holder	793	Spring washer
652	Bolt	795	Bolt
654	Nut	801	Bolt
656	Screw plug	803	Stud
707	Gasket	805	Spring washer
709	Intermediate housing	808	Nut
715	Bolt	810	Oil baffle
726	Input shaft	813	Gasket
729	Bearing sleeve	816	Bearing cover
737	Gasket	818	Spring washer
740	Intermediate housing	820	Nut
772	Shift cylinder	822	Spring washer
774	Sealing ring	824	Bolt
776	Piston rod	827	Bolt
778	Selector fork	830	Spring washer
781	Slider	833	Nut
783	Spring	835	Bolt
785	Sealing ring	837	Bolt
787	Switch	a	Sealing ring

717.9
SA 35 977

Exploded view

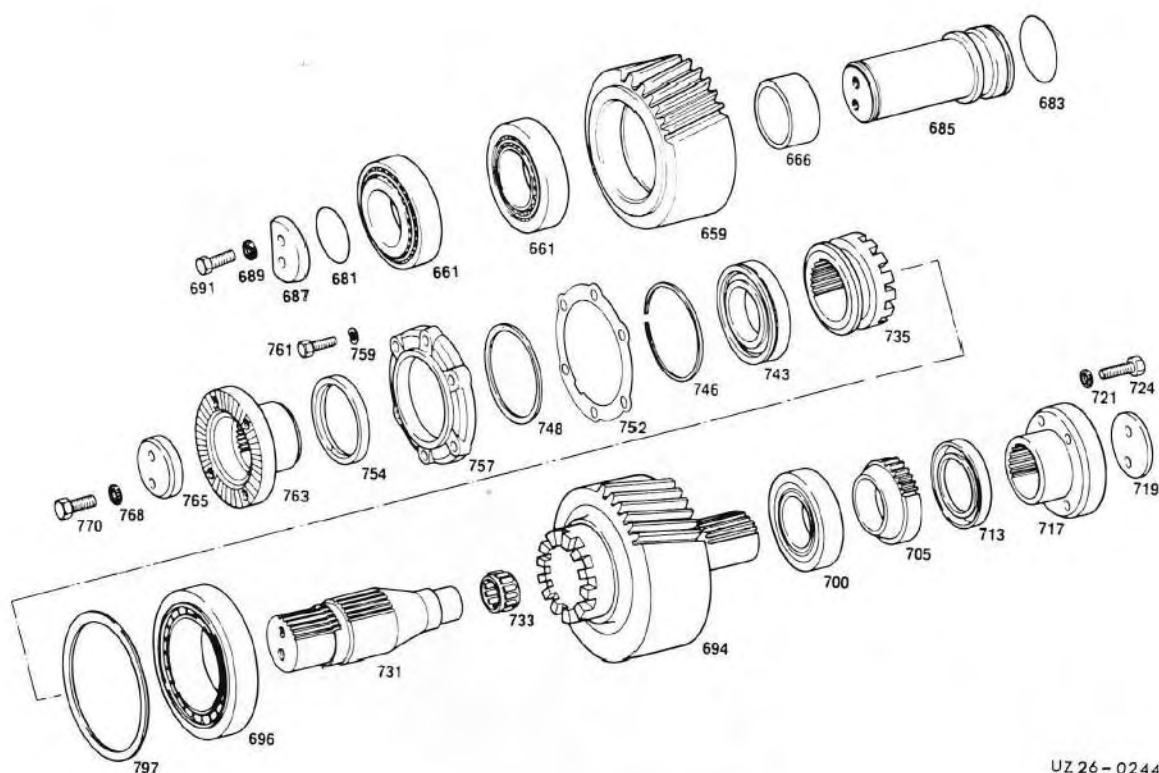


UZ 26-0244

Transfer box

659	Idler gear	731	Output shaft
661	Taper roller bearing	733	Needle bearing
681	Sealing ring	735	Shift dog
683	Sealing ring	743	Deep-groove ball bearing
685	Idler gear axle	746	Snap ring
687	Supporting disk	748	Shim
689	Lock washer	752	Gasket
691	Bolt	754	Shaft seal
694	Output gear	757	End cover
696	Taper roller bearing	759	Spring washer
700	Taper roller bearing	761	Bolt
705	Speedometer drive gear	763	Flange
713	Shaft seal	765	Supporting disk
717	Flange	768	Lock washer
719	Supporting disk	770	Bolt
721	Lock washer	797	Shim
724	Bolt		

Exploded view

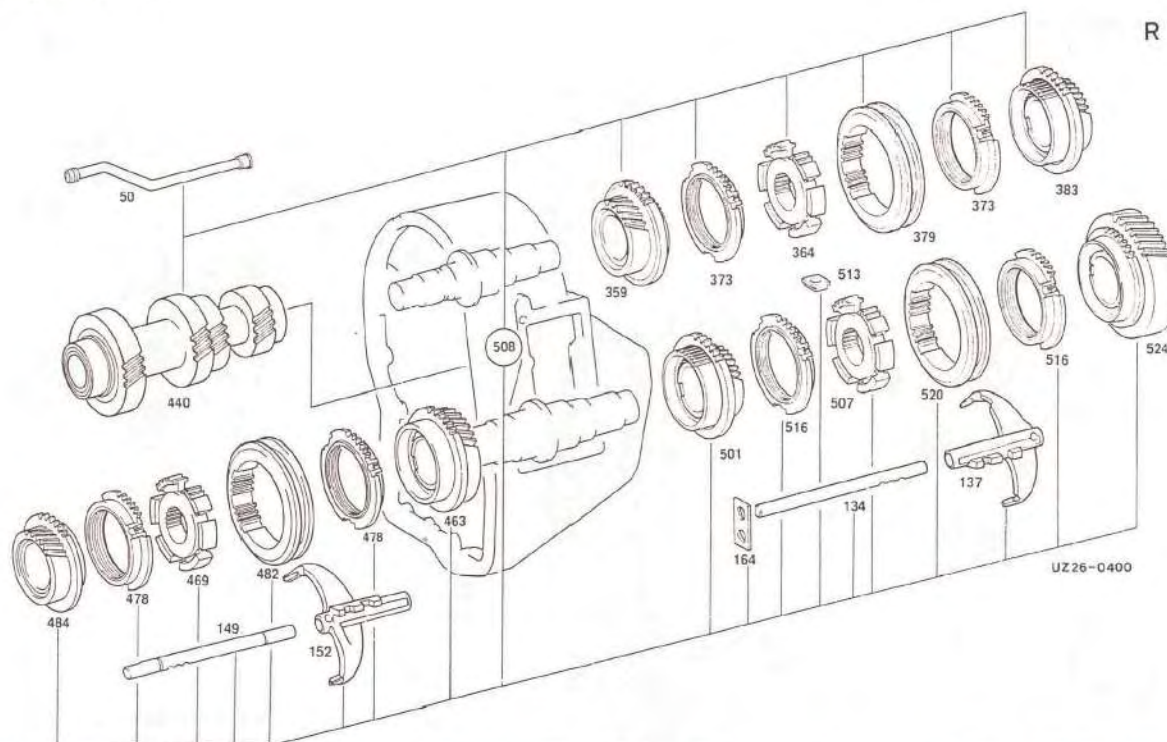


MBMANUALS.COM

Repair set transmission

- | | |
|-----------------------|-----------------------------|
| 50 Oil tube | 478 Synchronizer cone |
| 134 Shift rod | 482 Shift sliding sleeve |
| 137 Shift fork | 484 4th/8th gear |
| 149 Shift rod | 501 2nd/6th gear |
| 152 Shift fork | 507 Driver ring |
| 359 Forward gear | 508 Repair set transmission |
| 364 Driver ring | 516 Synchronizer cone |
| 373 Synchronizer cone | 520 Shift sliding sleeve |
| 383 Reverse gear | 524 1st/5th gear |
| 440 Layshaft | |
| 463 3rd/7th gear | |
| 469 Driver ring | |

717.9
SA 35 977


Exploded view

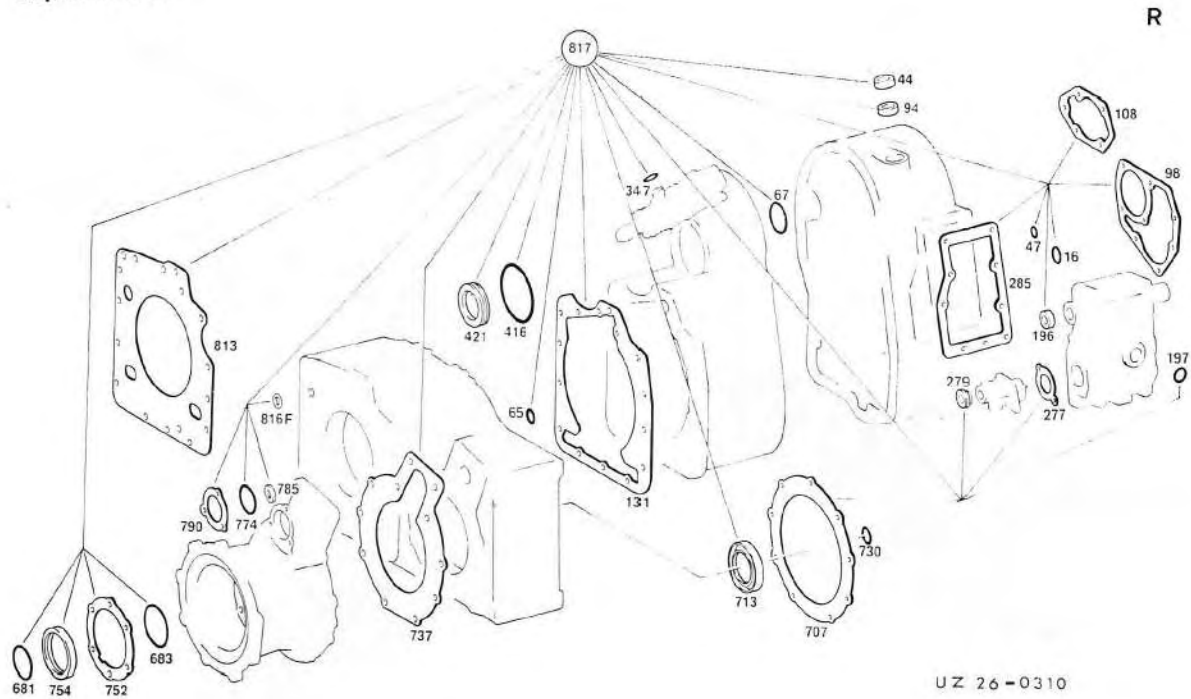

Gaskets and sealing rings

16	Sealing ring	421	Sealing ring
44	Sealing ring	681	Sealing ring
47	Sealing ring	683	Sealing ring
65	Sealing ring	707	Sealing ring
67	Sealing ring	713	Sealing ring
94	Sealing ring	730	Sealing ring
98	Gasket	737	Gasket
108	Gasket	752	Gasket
131	Gasket	754	Sealing ring
196	Sealing ring	774	Sealing ring
197	Sealing ring	785	Sealing ring
277	Gasket	790	Gasket
279	Sealing ring	813	Gasket
285	Gasket	816F	Sealing ring
347	Sealing ring	817	Repair set
416	Sealing ring		

Exploded view

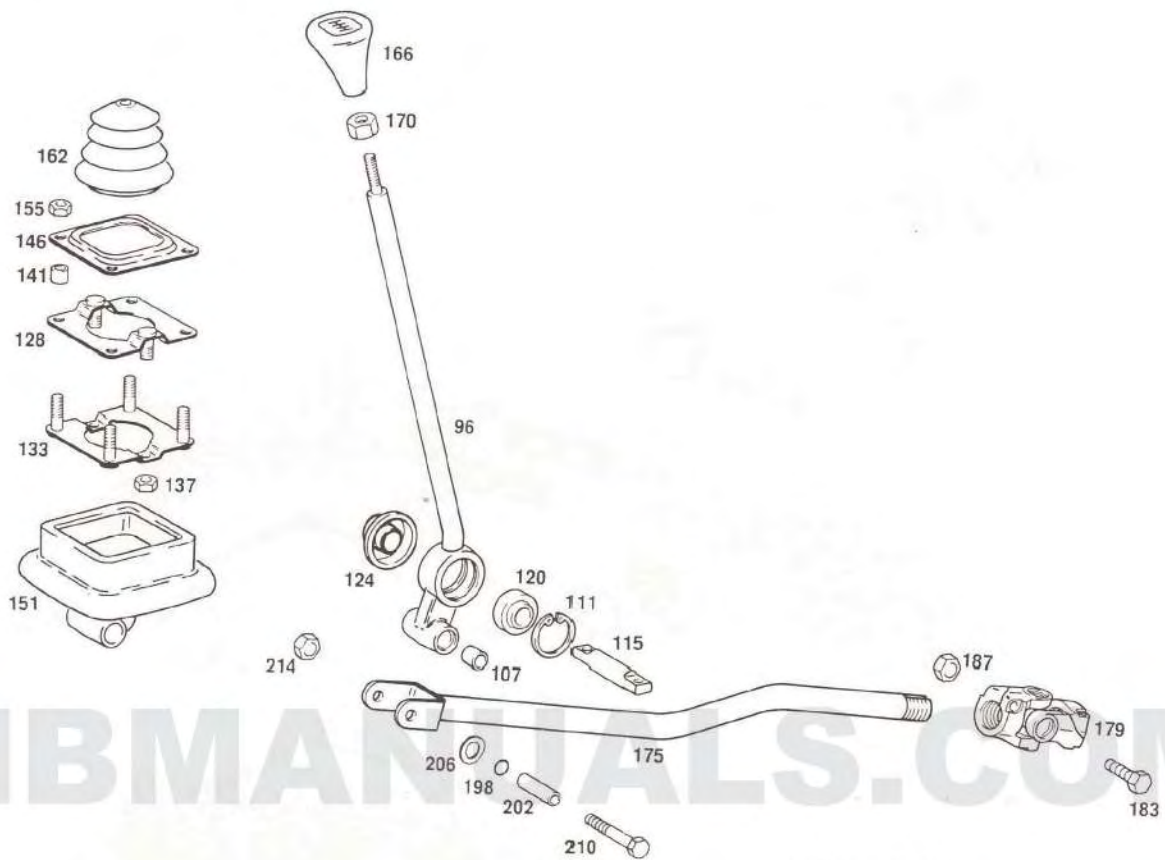

UZ26-0247


Shift linkage

96 Shift lever
 107 Bushing
 111 Snap ring
 115 Pin
 120 Joint
 124 Boot
 128 Holder
 133 Holder
 137 Nut
 141 Spacing tube
 146 Housing cover
 151 Boot
 155 Nut

162 Boot
 166 Knob
 170 Nut
 175 Shift rod
 179 Rod end
 183 Bolt
 187 Nut
 198 Sealing ring
 202 Spacing tube
 206 Spring washer
 210 Bolt
 214 Nut

717.9
SA 35 977

Exploded view

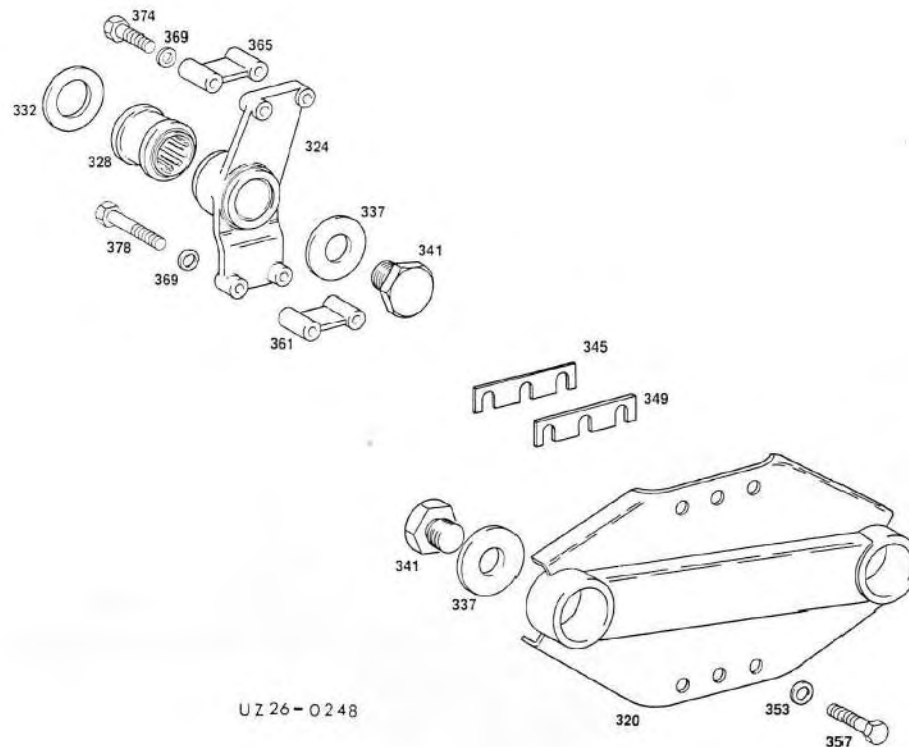


Transmission mounting

320 Transmission mount left
324 Transmission mount right
328 Rubber mount
332 Thrust washer
337 Thrust washer
341 Bolt
345 Packing
349 Spacer

353 Washer
357 Bolt
361 Connector
365 Connector
369 Washer
374 Bolt
378 Bolt

Exploded view

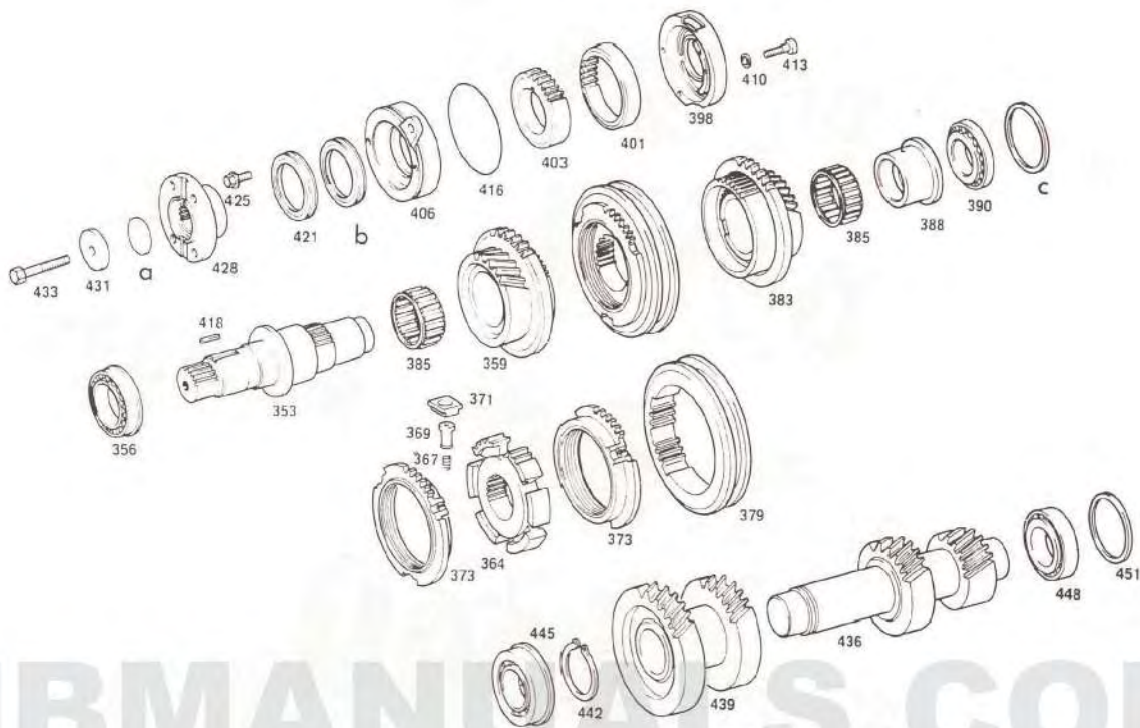

MBMANUALS.COM

UZ 26-0246


Input shaft and countershaft

353	Input shaft	410	Serrated washer
356	Taper roller bearing	413	Bolt
359	Forward speed gear	416	Sealing ring
364	Synchromash member	418	Key
367	Spring	421	Shaft seal
369	Pin	425	Bolt
371	Dog	428	Flange
373	Synchronizing cone	431	Supporting disk
379	Sliding collar	433	Bolt
383	Reverse speed gear	436	Countershaft
385	Needle bearing	439	Gearset
390	Taper roller bearing	442	Snap ring
388	Bushing	445	Taper roller bearing
393	Supporting disk	448	Taper roller bearing
395	Bolt	451	Shim
398	Oil pump body	a	Sealing ring
401	Gear wheel	b	Shaft seal
403	Gear wheel	c	Shim
406	Pump body		

717.9

SA 35 977

Exploded view

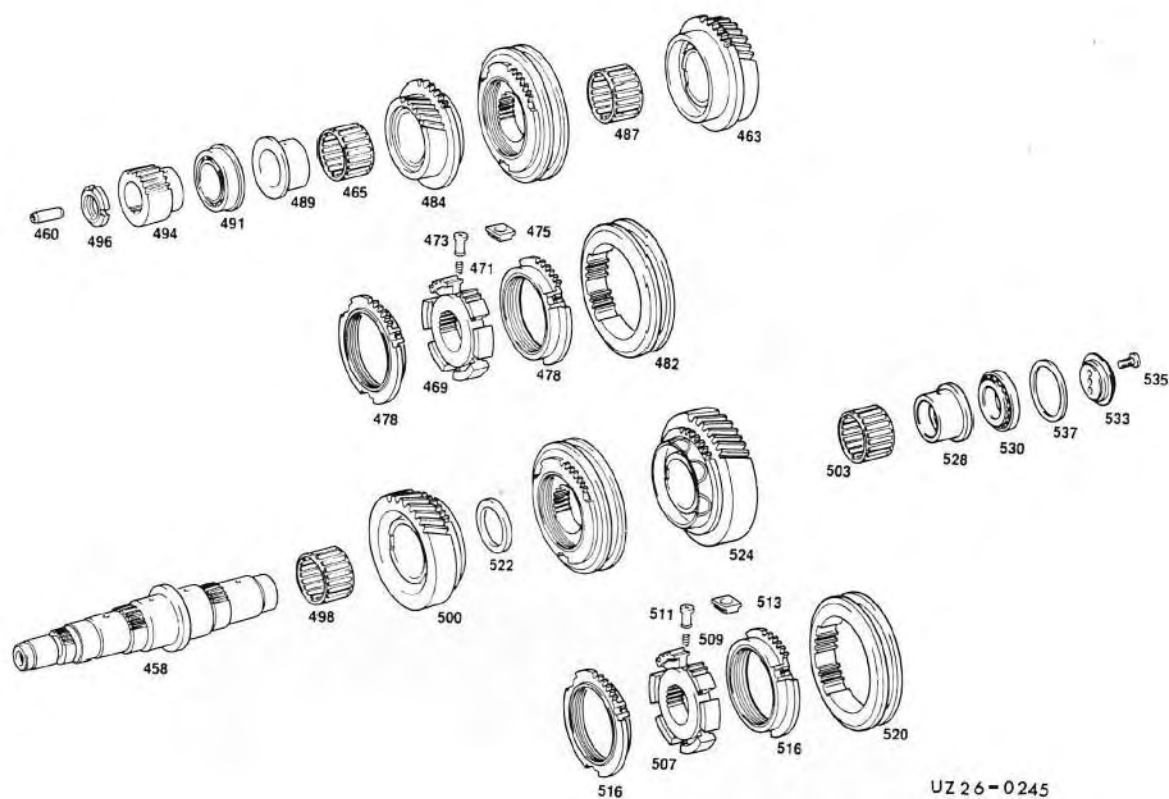


Main shaft

458	Main shaft	498	Needle bearing
460	Spacing tube	500	2nd/6th speed gear
463	3rd/7th speed gear	503	Needle bearing
465	Needle bearing	507	Synchromash member
469	Synchromash member	509	Spring
471	Spring	511	Pin
473	Pin	513	Dog
475	Dog	516	Synchronizing cone
478	Synchronizing cone	520	Sliding collar
482	Sliding collar	522	Spacing ring
484	4th/8th speed gear	524	1st/5th speed gear
487	Needle bearing	528	Bushing
489	Bushing	530	Taper roller bearing
491	Taper roller bearing	533	Supporting disk
494	Sun gear	535	Bolt
496	Slotted nut	537	Shim

717.901
SA 35 977

Exploded view

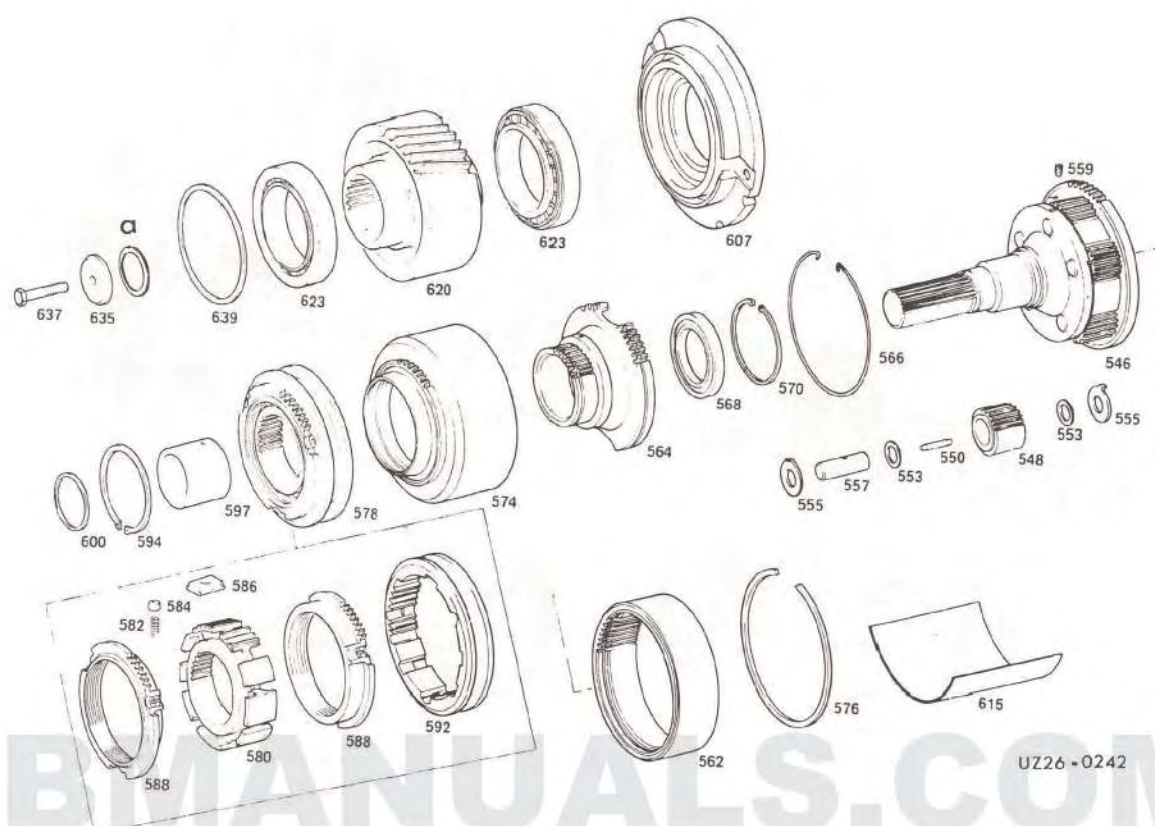


Planetary gearing without additional parts for auxiliary transmission

546 Planet-pinion carrier	582 Spring
548 Planet-pinion	584 Pin
550 Bearing needle	586 Dog
553 Shim	588 Synchronizing cone
555 Shim	590 Spring
557 Idler shaft	592 Sliding collar
559 Bolt	594 Retainer
562 Ring gear	597 Spacing tube
564 Hub	600 Spacing ring
566 Snap ring	607 Synchromesh member
568 Ball bearing	615 Oil baffle
570 Snap ring	620 Drive gear
574 Synchromesh member	623 Taper roller bearing
576 Snap ring	635 Supporting disk
578 Synchromesh member	637 Bolt
580 Synchromesh member	639 Shim
	a Sealing ring

717.900
SA 35 977

Exploded view

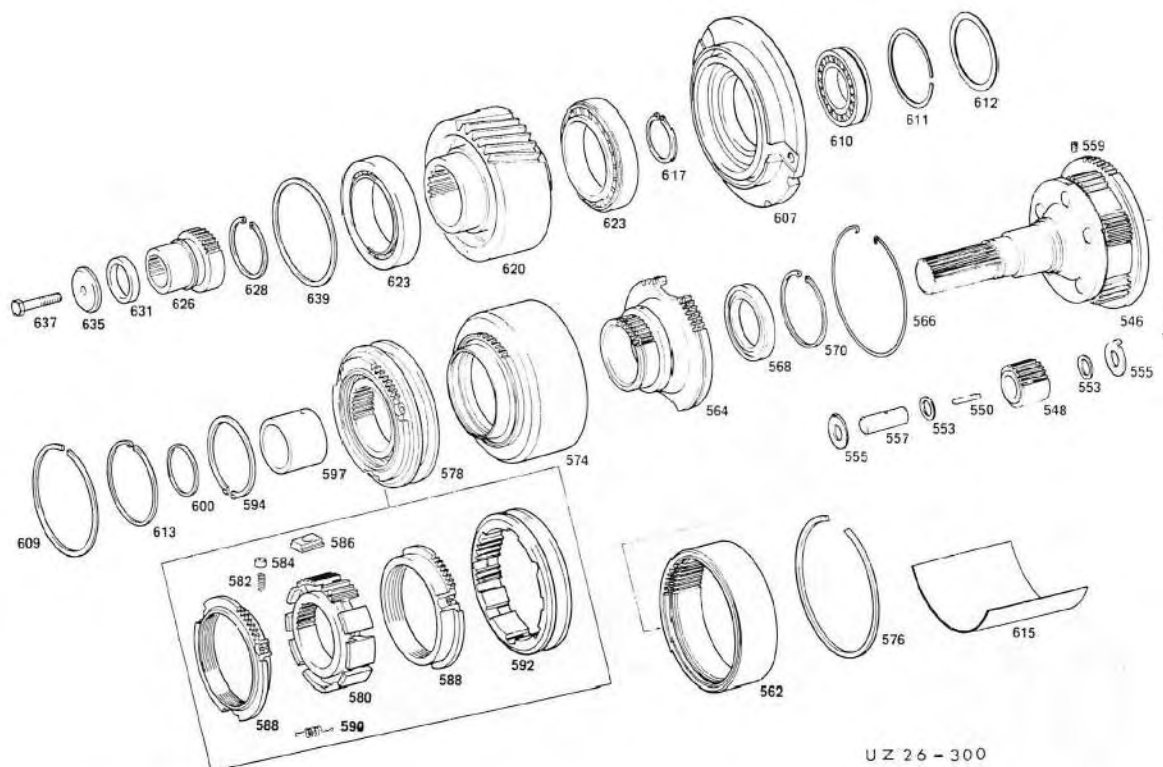


U Z 2 6 - 3 0 0

Planetary gearing with additional parts for auxiliary transmission

546 Planet carrier	592 Sliding collar
548 Planet gear	594 Locking ring
550 Bearing needle	597 Spacer tube
553 Spacer washer	600 Spacer ring
555 Spacer washer	607 Synchronizing body
557 Intermediate axle	609 Spring ring
559 Screw	610 Radial bearing
562 Ring gear	611 Locking ring
564 Hub	612 Compensating washer
566 Locking ring	613 Locking ring
568 Ball bearing	615 Oil baffle
570 Locking ring	617 Locking ring
574 Synchronizing body	620 Input gear
576 Locking ring	623 Tapered roller bearing
578 Synchronizing body	626 Follower sleeve
580 Synchronizing body	628 Locking ring
582 Spring	631 Spacer tube
584 Bolt	635 Retaining disc
586 Follower	637 Screw
588 Synchronizing cone	639 Spacer washer
590 Spring	

Exploded view

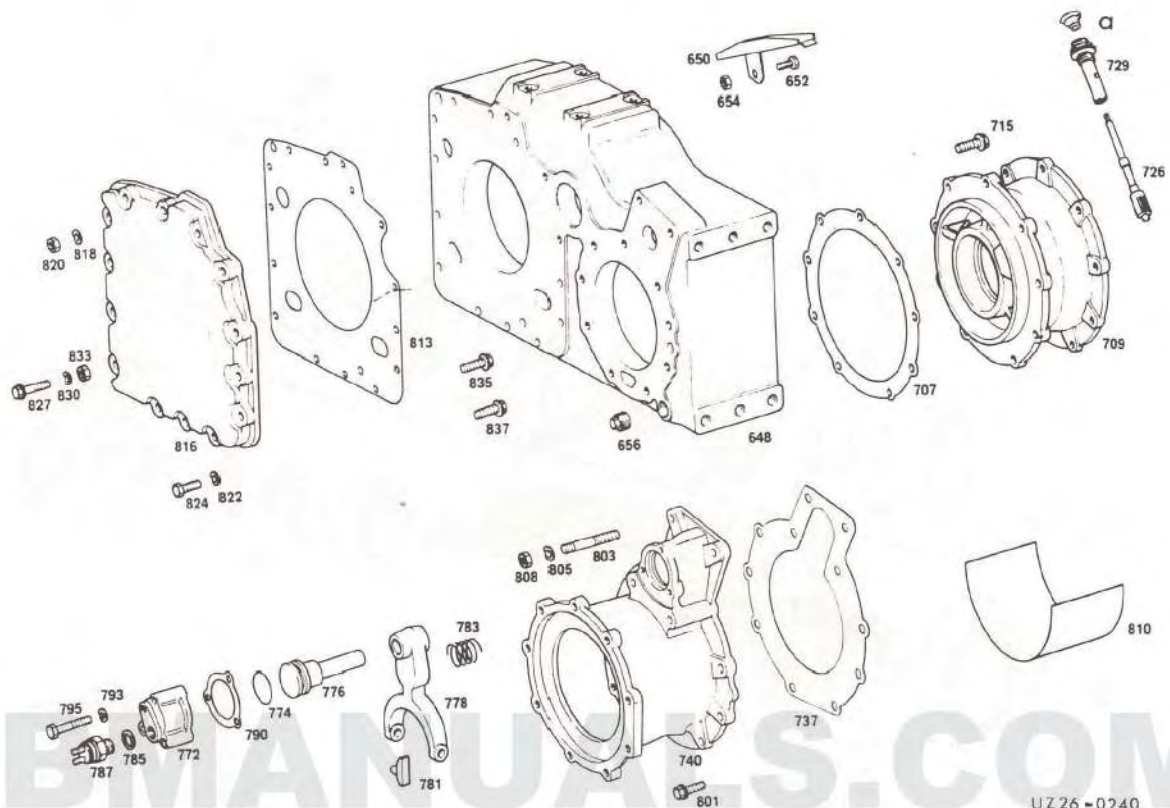


UZ 26 - 0240

Transfer box and intermediate housing

648	Transfer box	790	Gasket
650	Holder	793	Spring washer
652	Bolt	795	Bolt
654	Nut	801	Bolt
656	Screw plug	803	Stud
707	Gasket	805	Spring washer
709	Intermediate housing	808	Nut
715	Bolt	810	Oil baffle
726	Input shaft	813	Gasket
729	Bearing sleeve	816	Bearing cover
737	Gasket	818	Spring washer
740	Intermediate housing	820	Nut
772	Shift cylinder	822	Spring washer
774	Sealing ring	824	Bolt
776	Piston rod	827	Bolt
778	Selector fork	830	Spring washer
781	Slider	833	Nut
783	Spring	835	Bolt
785	Sealing ring	837	Bolt
787	Switch	a	Sealing ring

717.9
SA 35 977

Exploded view

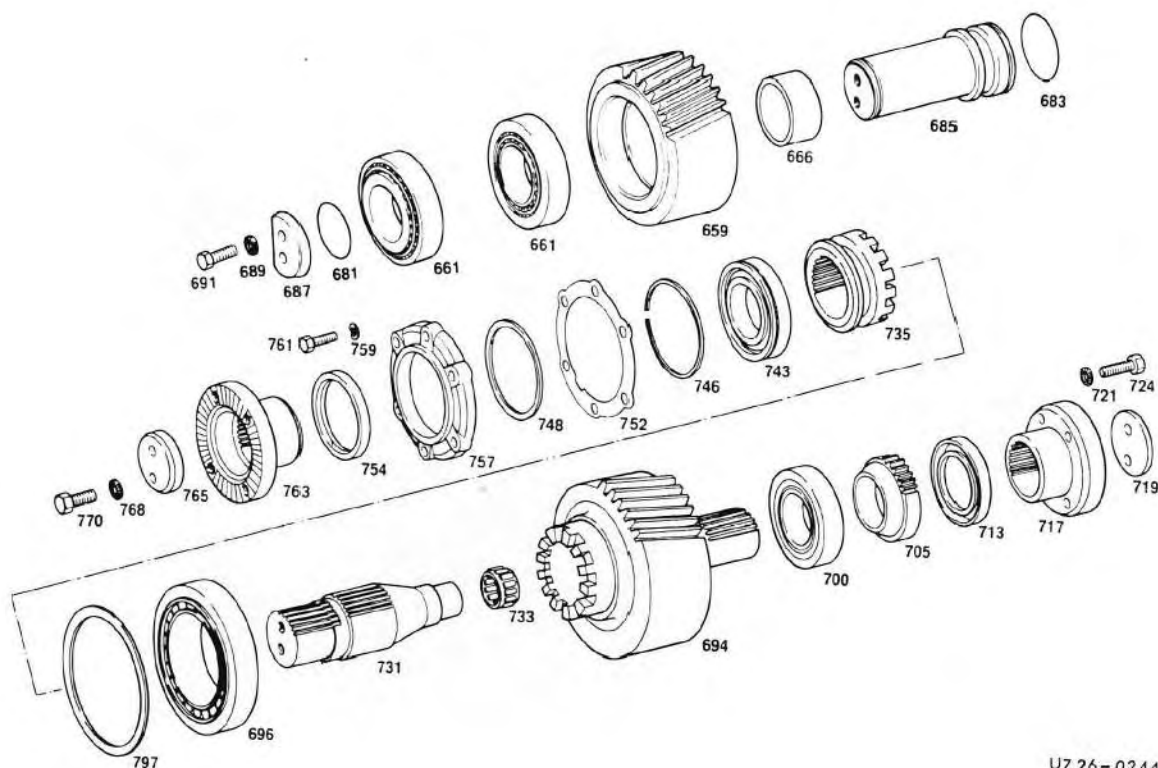


UZ 26-0244

Transfer box

659	Idler gear	731	Output shaft
661	Taper roller bearing	733	Needle bearing
681	Sealing ring	735	Shift dog
683	Sealing ring	743	Deep-groove ball bearing
685	Idler gear axle	746	Snap ring
687	Supporting disk	748	Shim
689	Lock washer	752	Gasket
691	Bolt	754	Shaft seal
694	Output gear	757	End cover
696	Taper roller bearing	759	Spring washer
700	Taper roller bearing	761	Bolt
705	Speedometer drive gear	763	Flange
713	Shaft seal	765	Supporting disk
717	Flange	768	Lock washer
719	Supporting disk	770	Bolt
721	Lock washer	797	Shim
724	Bolt		

Exploded view

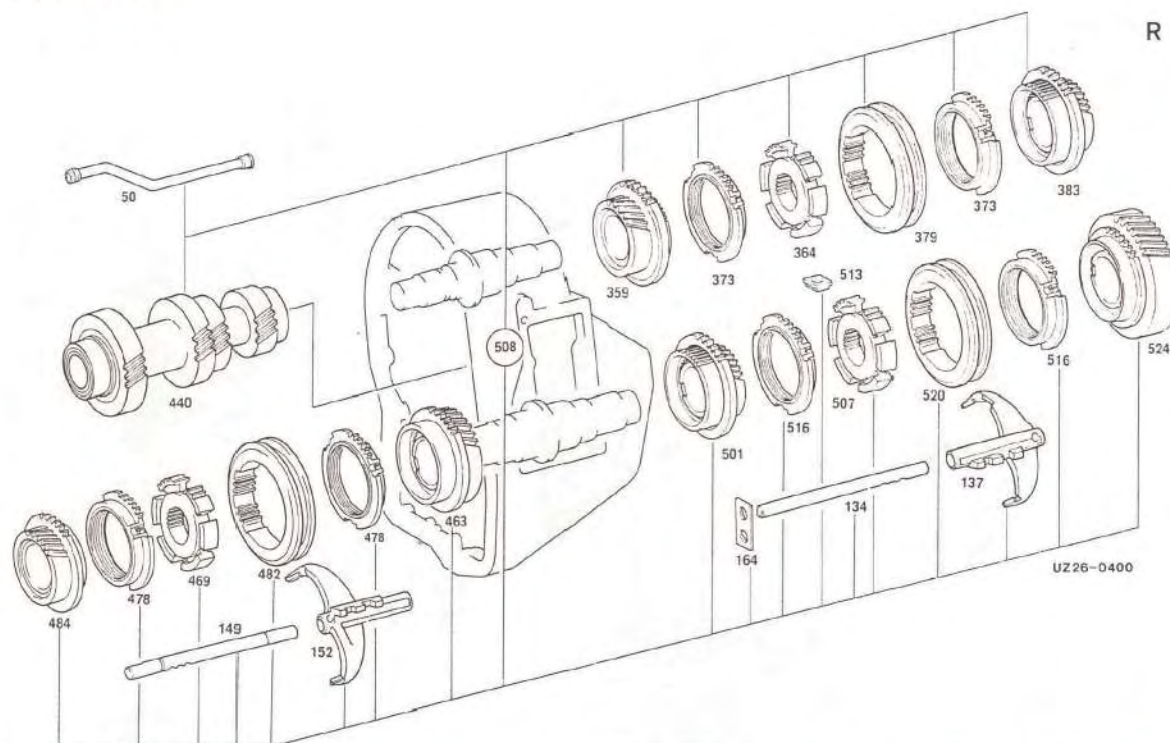


MBMANUALS.COM

Repair set transmission

- | | | | |
|-----|-------------------|-----|-------------------------|
| 50 | Oil tube | 478 | Synchronizer cone |
| 134 | Shift rod | 482 | Shift sliding sleeve |
| 137 | Shift fork | 484 | 4th/8th gear |
| 149 | Shift rod | 501 | 2nd/6th gear |
| 152 | Shift fork | 507 | Driver ring |
| 359 | Forward gear | 508 | Repair set transmission |
| 364 | Driver ring | 516 | Synchronizer cone |
| 373 | Synchronizer cone | 520 | Shift sliding sleeve |
| 383 | Reverse gear | 524 | 1st/5th gear |
| 440 | Layshaft | | |
| 463 | 3rd/7th gear | | |
| 469 | Driver ring | | |

717.9
SA 35 977

Exploded view

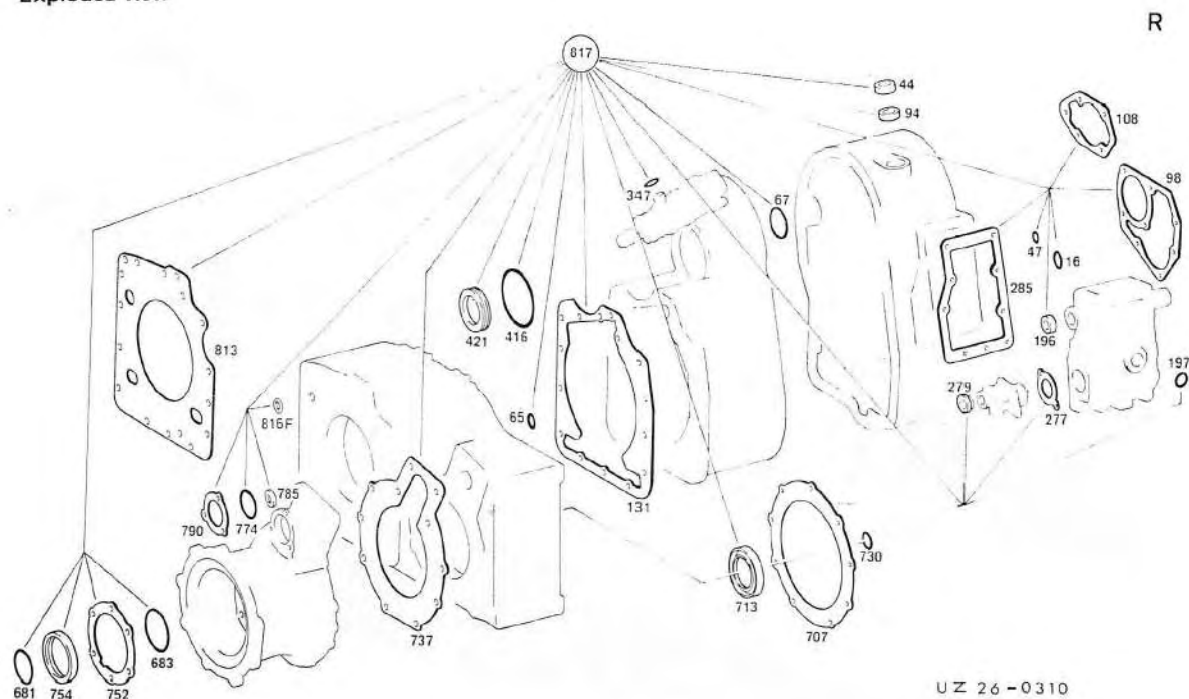


UZ 26-0310

Gaskets and sealing rings

16	Sealing ring	421	Sealing ring
44	Sealing ring	681	Sealing ring
47	Sealing ring	683	Sealing ring
65	Sealing ring	707	Sealing ring
67	Sealing ring	713	Sealing ring
94	Sealing ring	730	Sealing ring
98	Gasket	737	Gasket
108	Gasket	752	Gasket
131	Gasket	754	Sealing ring
196	Sealing ring	774	Sealing ring
197	Sealing ring	785	Sealing ring
277	Gasket	790	Gasket
279	Sealing ring	813	Gasket
285	Gasket	816F	Sealing ring
347	Sealing ring	817	Repair set
416	Sealing ring		

Exploded view

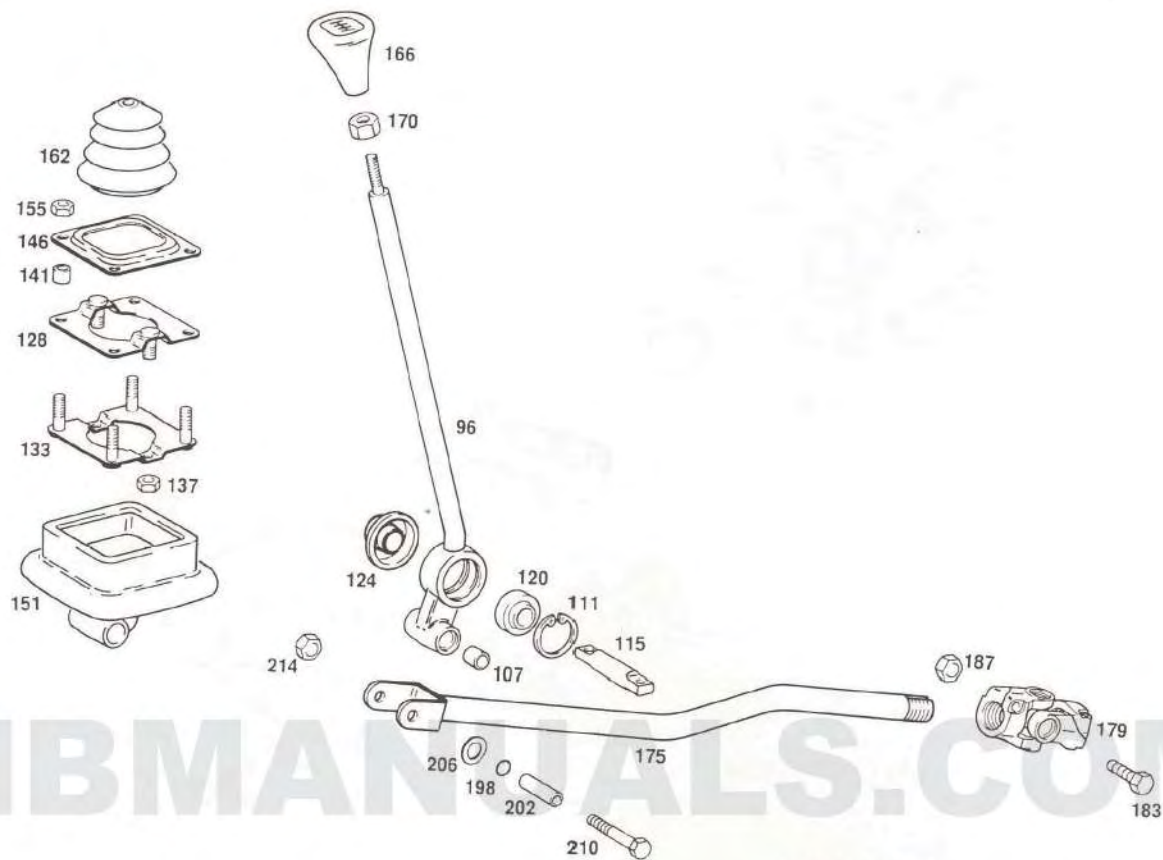


UZ26-0247

Shift linkage

96	Shift lever	162	Boot
107	Bushing	166	Knob
111	Snap ring	170	Nut
115	Pin	175	Shift rod
120	Joint	179	Rod end
124	Boot	183	Bolt
128	Holder	187	Nut
133	Holder	198	Sealing ring
137	Nut	202	Spacing tube
141	Spacing tube	206	Spring washer
146	Housing cover	210	Bolt
151	Boot	214	Nut
155	Nut		

Exploded view

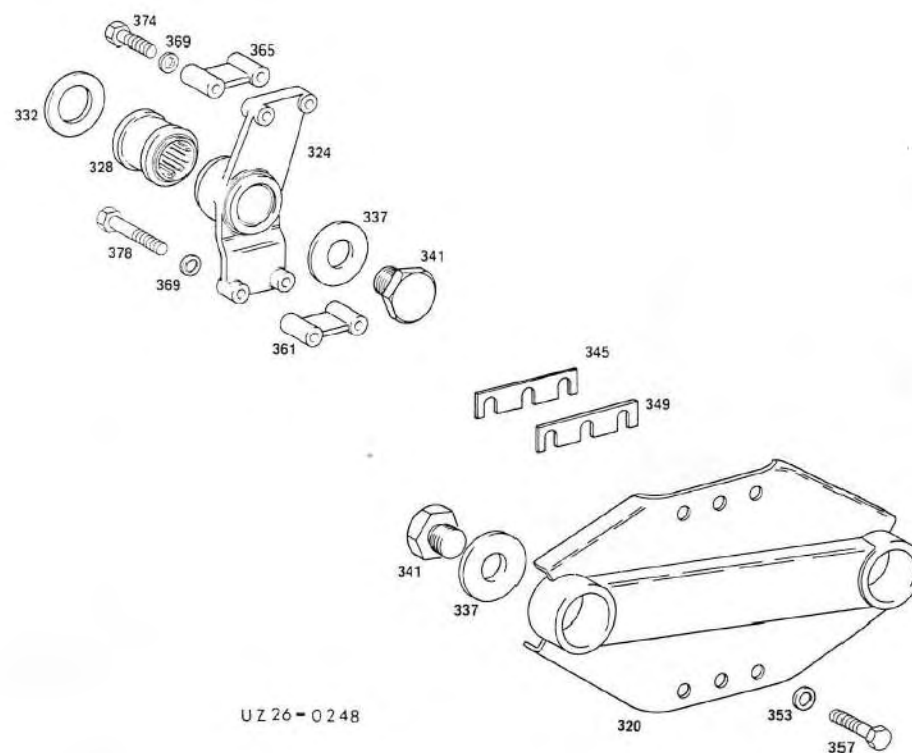


Transmission mounting

320 Transmission mount left
324 Transmission mount right
328 Rubber mount
332 Thrust washer
337 Thrust washer
341 Bolt
345 Packing
349 Spacer

353 Washer
357 Bolt
361 Connector
365 Connector
369 Washer
374 Bolt
378 Bolt

Exploded view

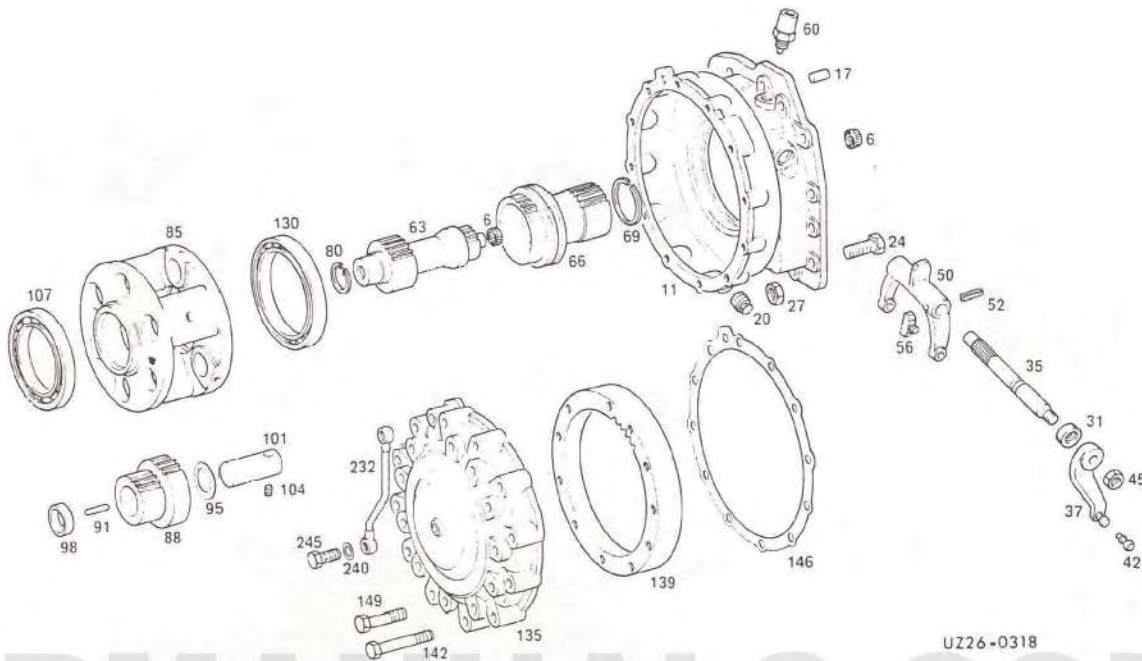


UZ26-0318

Additional gear box (Implement group)

- | | | | |
|----|-------------------------|-----|--------------------|
| 6 | Needle bearing | 80 | Locking ring |
| 11 | Planetary drive housing | 85 | Planet carrier |
| 17 | Cylindrical pin | 88 | Planet gear |
| 20 | Screw plug | 91 | Bearing needle |
| 24 | Screw | 95 | Washer |
| 27 | Nut | 98 | Spacer ring |
| 31 | Sealing ring | 101 | Intermediate shaft |
| 35 | Shifting shaft | 104 | Screw |
| 37 | Lever | 107 | Radial bearing |
| 42 | Ball pin | 130 | Ball bearing |
| 45 | Nut | 135 | Bearing cover |
| 50 | Shifting fork | 139 | Ring gear |
| 52 | Clamping sleeve | 142 | Screw |
| 56 | Sliding block | 146 | Gasket |
| 60 | Screw | 149 | Screw |
| 63 | Sun gear | 232 | Pipe |
| 66 | Sliding sleeve | 240 | Sealing ring |
| 69 | Spring ring | 245 | Hollow screw |

Exploded view

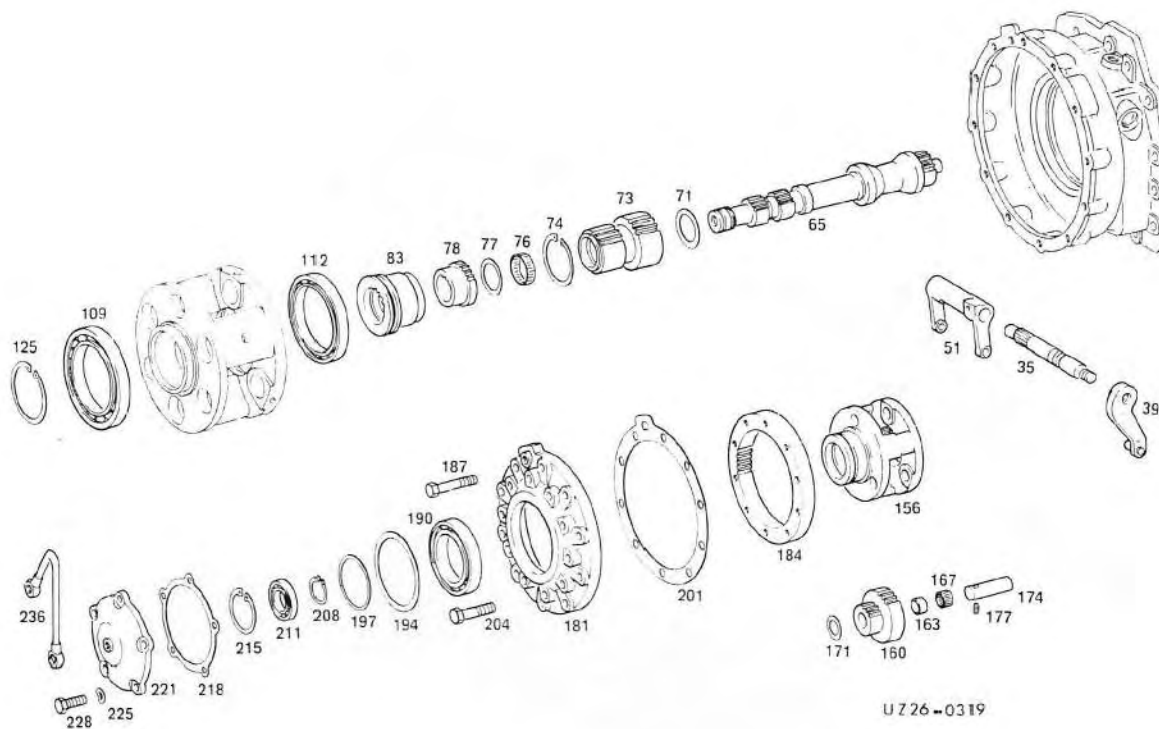


Additional gear box (Crawler group)


35	Shifting shaft	174	Intermediate shaft
39	Lever	177	Screw
51	Shifting fork	181	Bearing cover
65	Main shaft	184	Ring gear
71	Spacer washer	187	Screw
73	Sun gear	190	Radial bearing
74	Locking ring	194	Snap ring
76	Needle bearing	197	Locking ring
77	Spacer washer	201	Gasket
78	Follower ring	204	Screw
83	Sliding sleeve	208	Locking ring
100	Ball bearing	211	Radial bearing
112	Radial bearing	215	Locking ring
125	Locking ring	218	Gasket
156	Planet carrier	221	Housing cover
160	Planet gear	225	Spring washer
163	Spacer ring	228	Screw
167	Needle bearing	236	Pipe
171	Washer		

Removal


- 1 Raise cab, referring to 60.5—2.1/1, or 60.5—2.2/1.
- 2 Remove spare wheel.

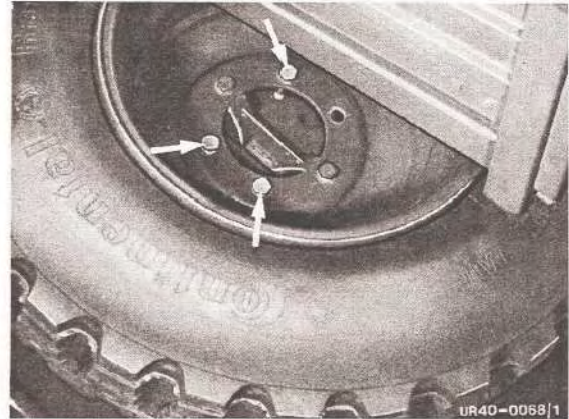

- 3 Remove metal cover and safety support.

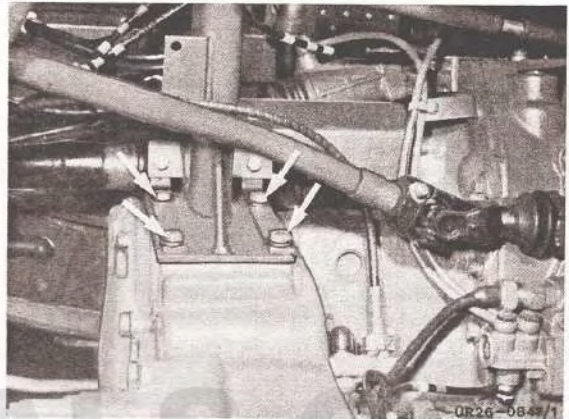


- 4 Remove input shaft.

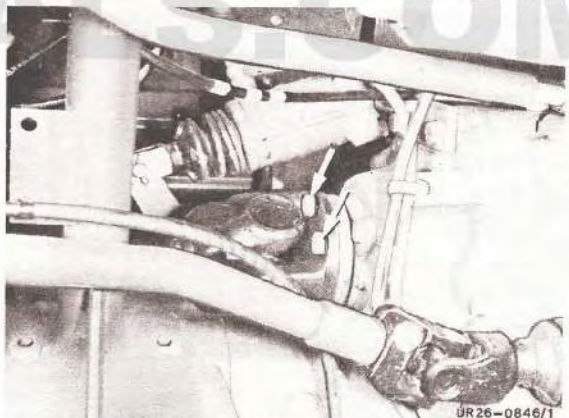


- 5 Remove shift linkage, speedometer shaft, shift indicator, backup lamp switch and shift valve line.




717.9
SA 35 977

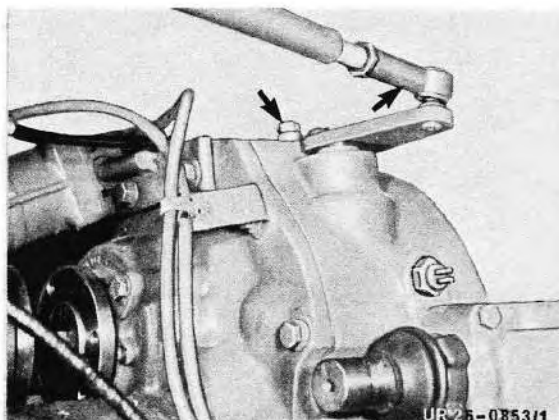


6 Remove forward/reverse shift lever and transmission breather.

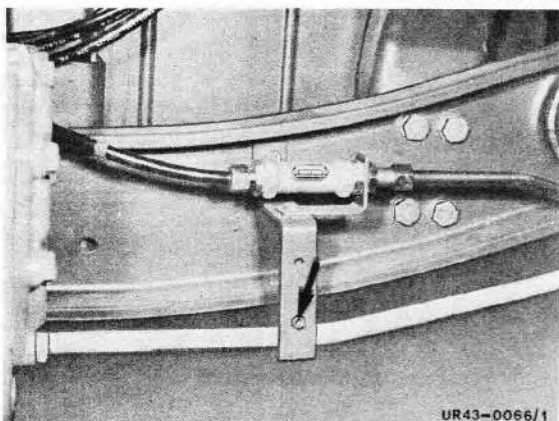

7 Unscrew air compressor line from bracket.

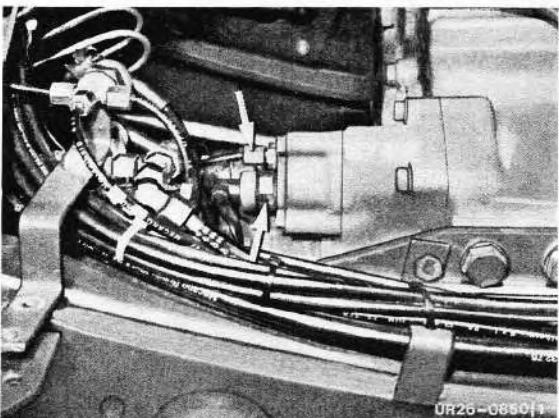

8 Unscrew four-wheel supply line and checking switch.

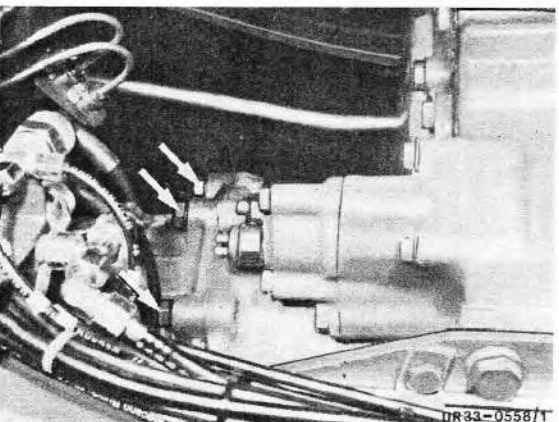

9 Unscrew torque ball casing, slide back and unscrew front axle drive shaft.


Caution ! Risk of accident !

Support thrust tube.


10 Detach ALB regulator linkage.

11 Unscrew torque ball housing, slide back and unscrew rear axle drive shaft.

Attention risk of accident!
Place support beneath torque tube.

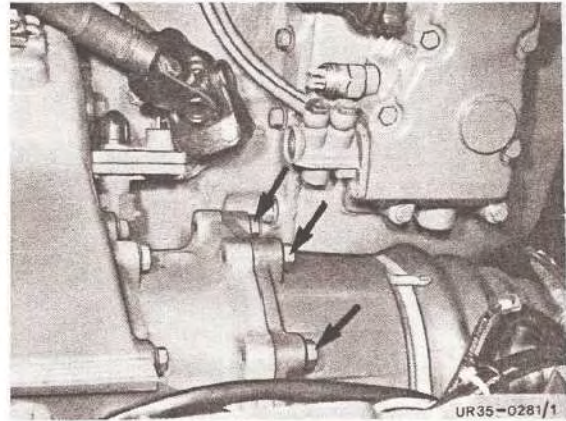


12 Attach special tool No. 6 and hook main transmission to crane.

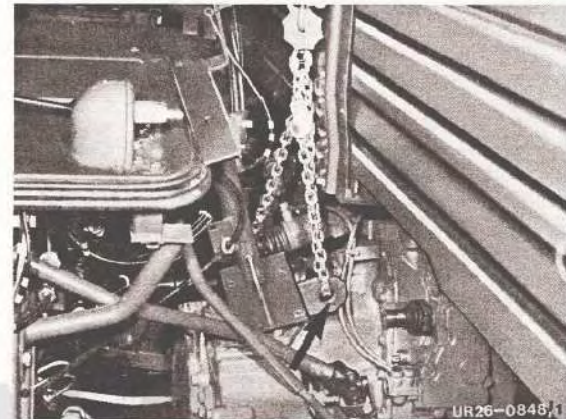

13 Drain oil from planetary gear.

Note: From chassis end No. 112 881 the planetary gearbox with enlarged oil sump is installed as standard. Observe changed filling capacity!


14 Drain oil from transfer case.

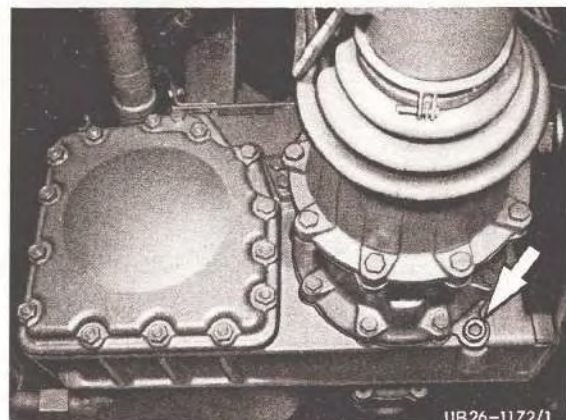


26.13 Removal and Installation of Main Transmission

717.9


SA 35 977

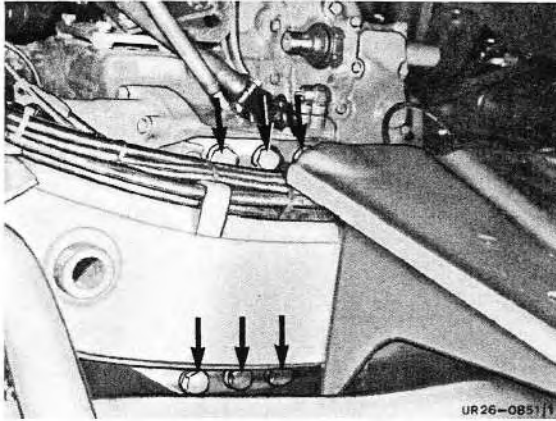

15 Unscrew transmission bolts on left.

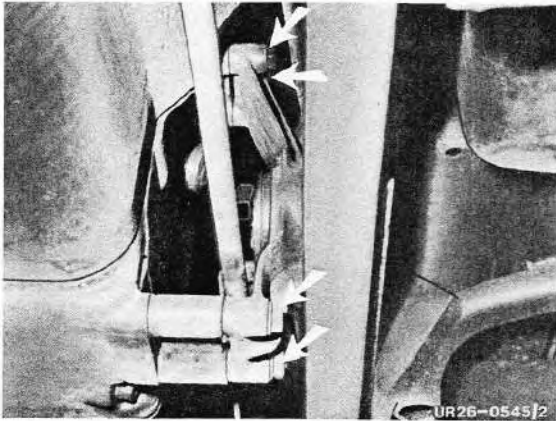


16 Unscrew transmission bolts on right

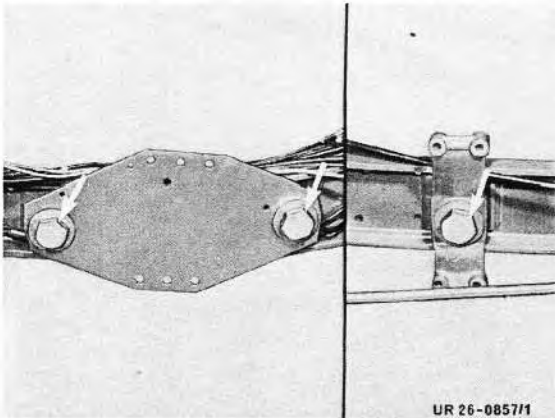

17 Lower main transmission and lift out.

18 Check that transmission mounts on left and right of the frame are firmly seated.
For permissible tightening torques, see 1.7/1.

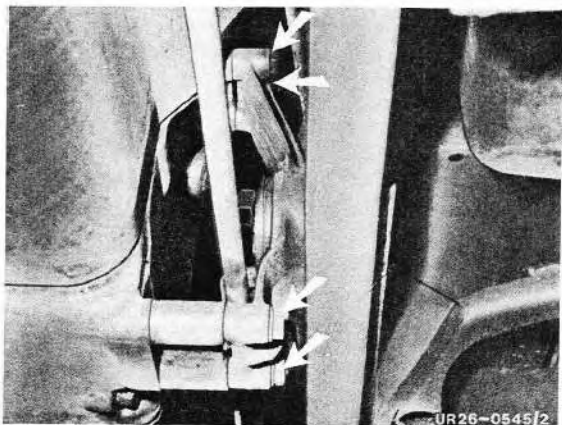

Installation


IMPORTANT!

Microencapsulated transmission securing bolts must not be used more than once—ribbed transmission fastening bolts may be used several times.


1 Introduce main transmission and lift.

2 Screw in right transmission bolts and fasten.
For permissible tightening torques, see 1.7/1.

3 Place shim rings in position and screw in left transmission bolts and tighten.
For permissible tightening torques, see 1.7/1.

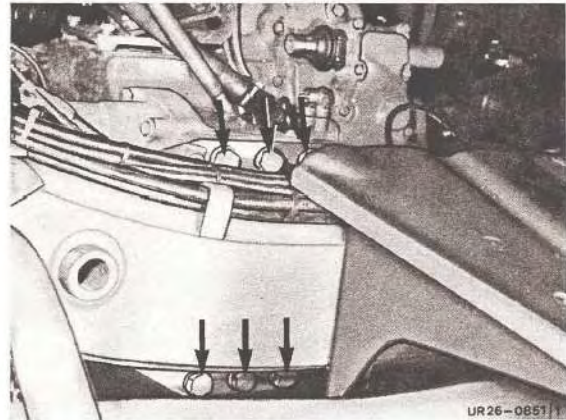


4 Release main transmission and unscrew special tool No. 6.

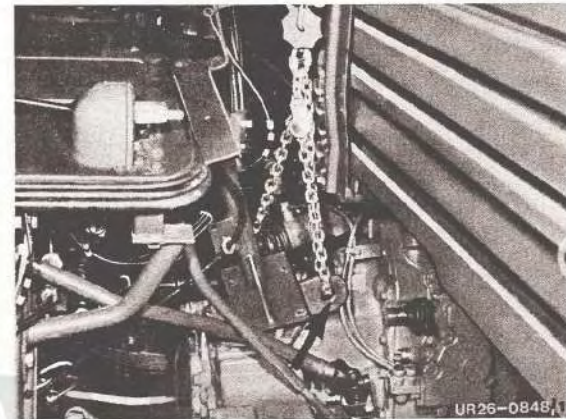


5 Attach rear axle drive shaft, coat torque ball housing with sealing compound No. 2 and bolt on.

6 Attach ALB - control linkage.

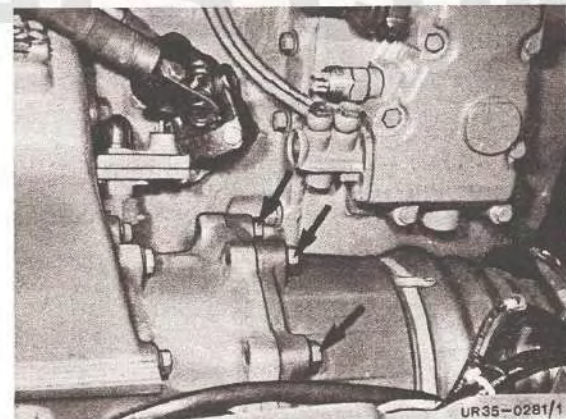


7 Attach front axle drive shaft, coat torque ball housing with sealing compound No. 2 and bolt on.

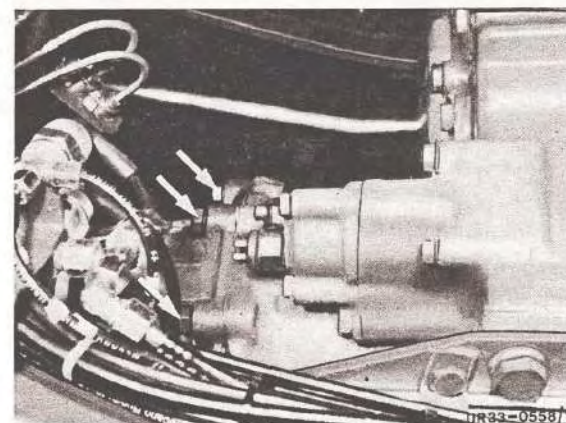


26.13 Removal and Installation of Main Transmission

717.9


SA 35 977

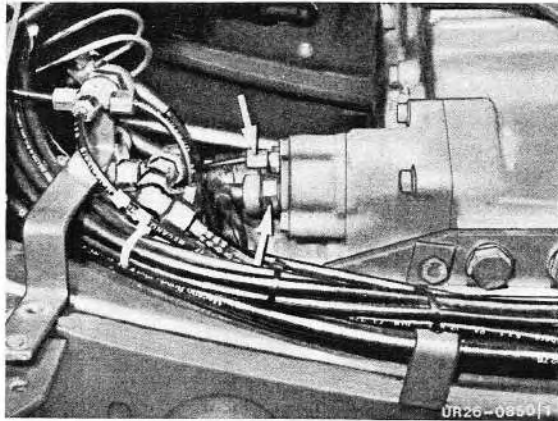


- 8 Screw on monitor switch and four-wheel drive supply line.

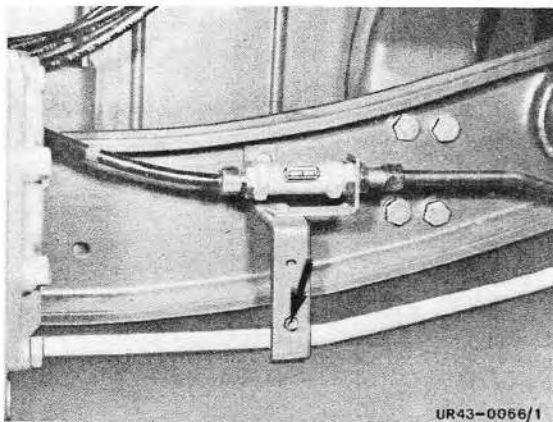

- 9 Attach air compressor line to bracket.

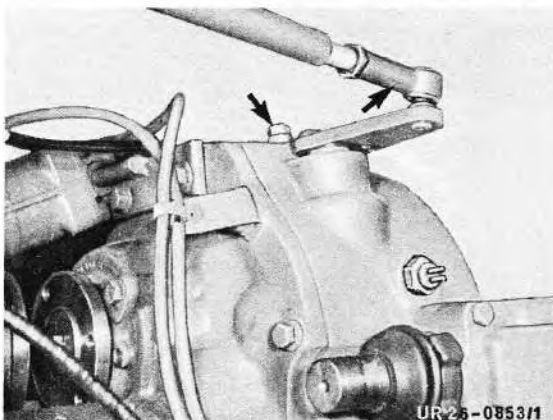

- 10 Fit transmission breather and attach forward/reverse gear shift lever.

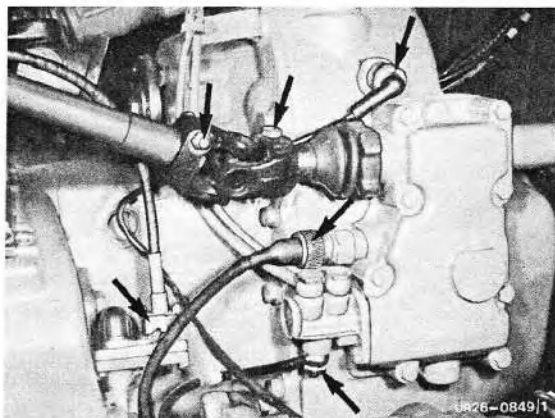


- 11 Attach gear shift linkage, speedometer shaft with sealing sleeve, shift gate indicator, switch for reversing lamp and switch-over line valve, secure speedometer shaft with lead seal.


Note: From chassis end No .108 852, the sealing sleeve 3039972240 is installed as standard.

- 12 Adjust gear shift linkage, see 12.1/1.


- 13 Remove drive shaft.

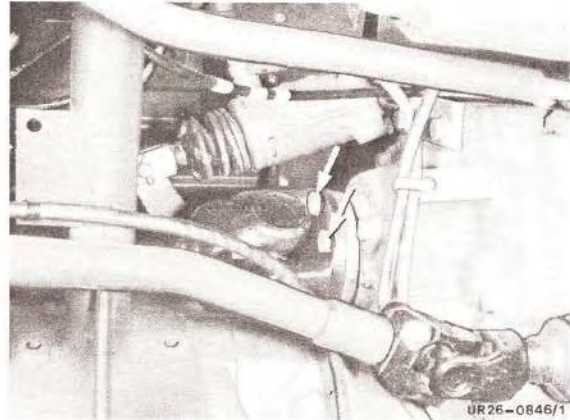

- 14 Fit safety support and cover plate. Coat bolt with locking compound No. 1 and screw in.

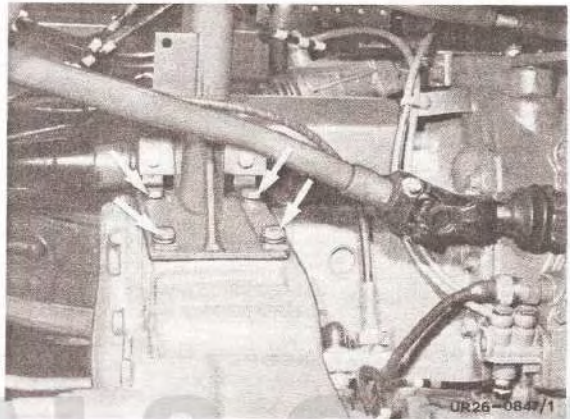


- 15 Fill oil into main transmission, refer to 1.5/1 for capacity.

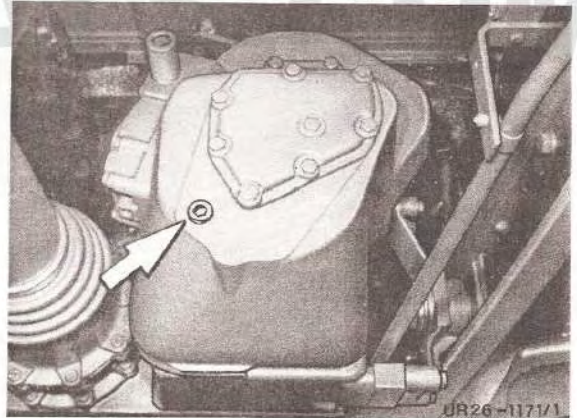


- 16 Install spare wheel.

- 17 Lower cab, refer to 60.5-2.1/1 or 60.5-2.2/1

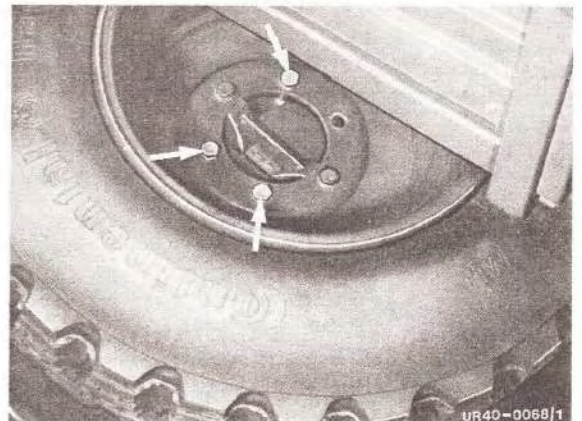


717.901
SA 35 977**Removal, transfer box installed**


- 1 Remove spare wheel.

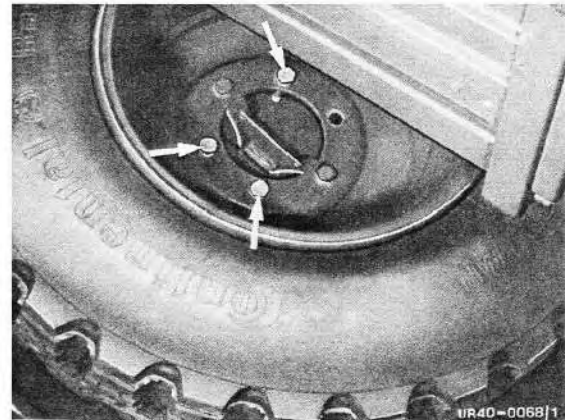


- 2 Remove metal cover.

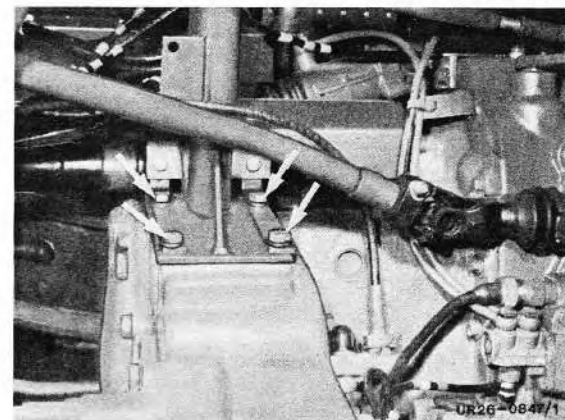

- 3 Remove input shaft.

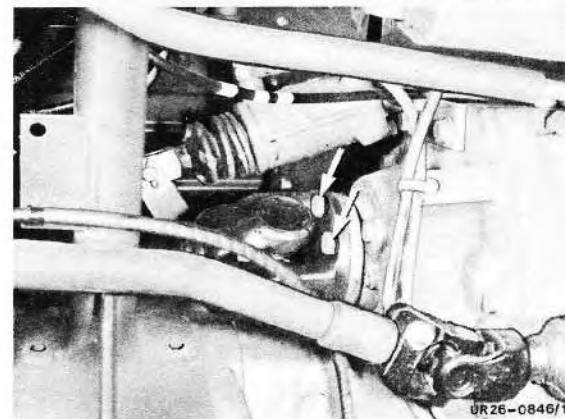


- 4 Remove shift linkage, speedometer shaft, shi indicator, backup lamp switch, shift valve line ar pneumatic cylinder.

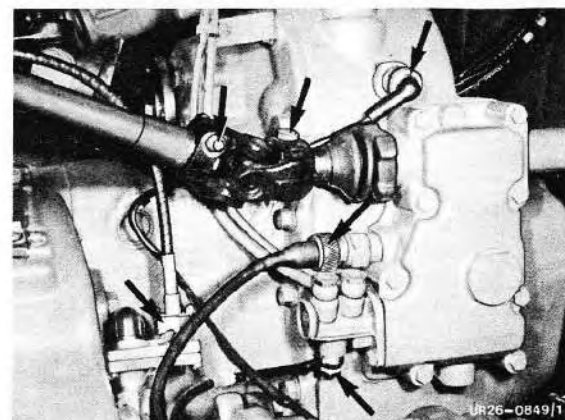


717.901


SA 35 977

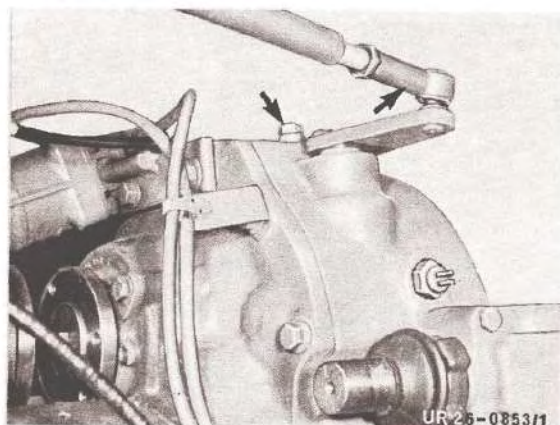

- 5 Detach forward/reverse shift lever and transmission breather.

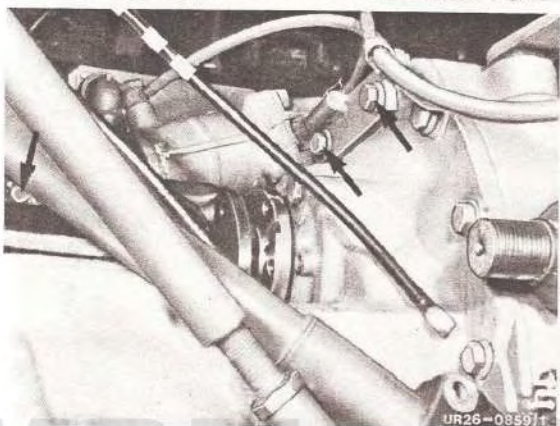


- 6 Release and remove pneumatic cylinder.

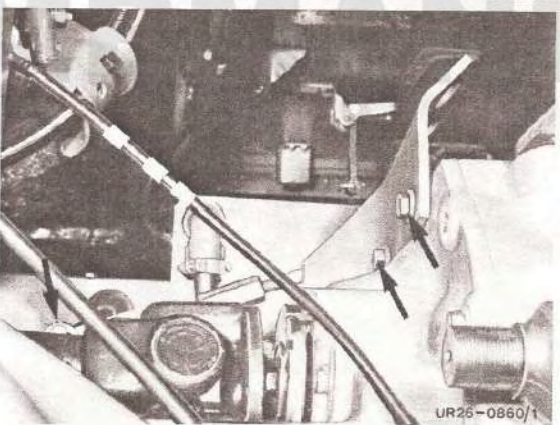

- 7 Attach special tool No. 7.

Note: Attach special tool No. 7 so that fast range is fully engaged.

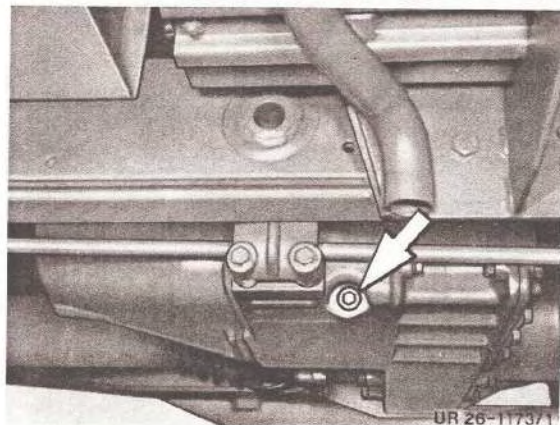

- 8 Drain oil.