

Contents

Chapter	Page
1 General	
Installation Survey Circuit Diagrams	1.1/1
Technical Data	1.2/1
Electrical Circuit Diagram, Chassis for Box-Type Body	1.3/1
Electrical Circuit Diagram, Box-Type Body	1.4/1
Electrical Circuit Diagram, Auxiliary Heater	1.4/2




MBMANUALS.COM

Installation Survey Circuit Diagrams


Chassis Model	Sales designation	Electrical equipment	Installation	
		Version	Chassis end No.	Series SA
435.115	U 1300 L	Electrical circuit diagram Chassis with box-type body, 24 volt system	from SP	SA 35 941/17
		Electrical circuit diagram, box-type body		Series with box-type body
		Electrical circuit diagram, auxiliary heater		(Model 435.500)

SP = Start of production

Circuit Diagram Chassis for box-type body

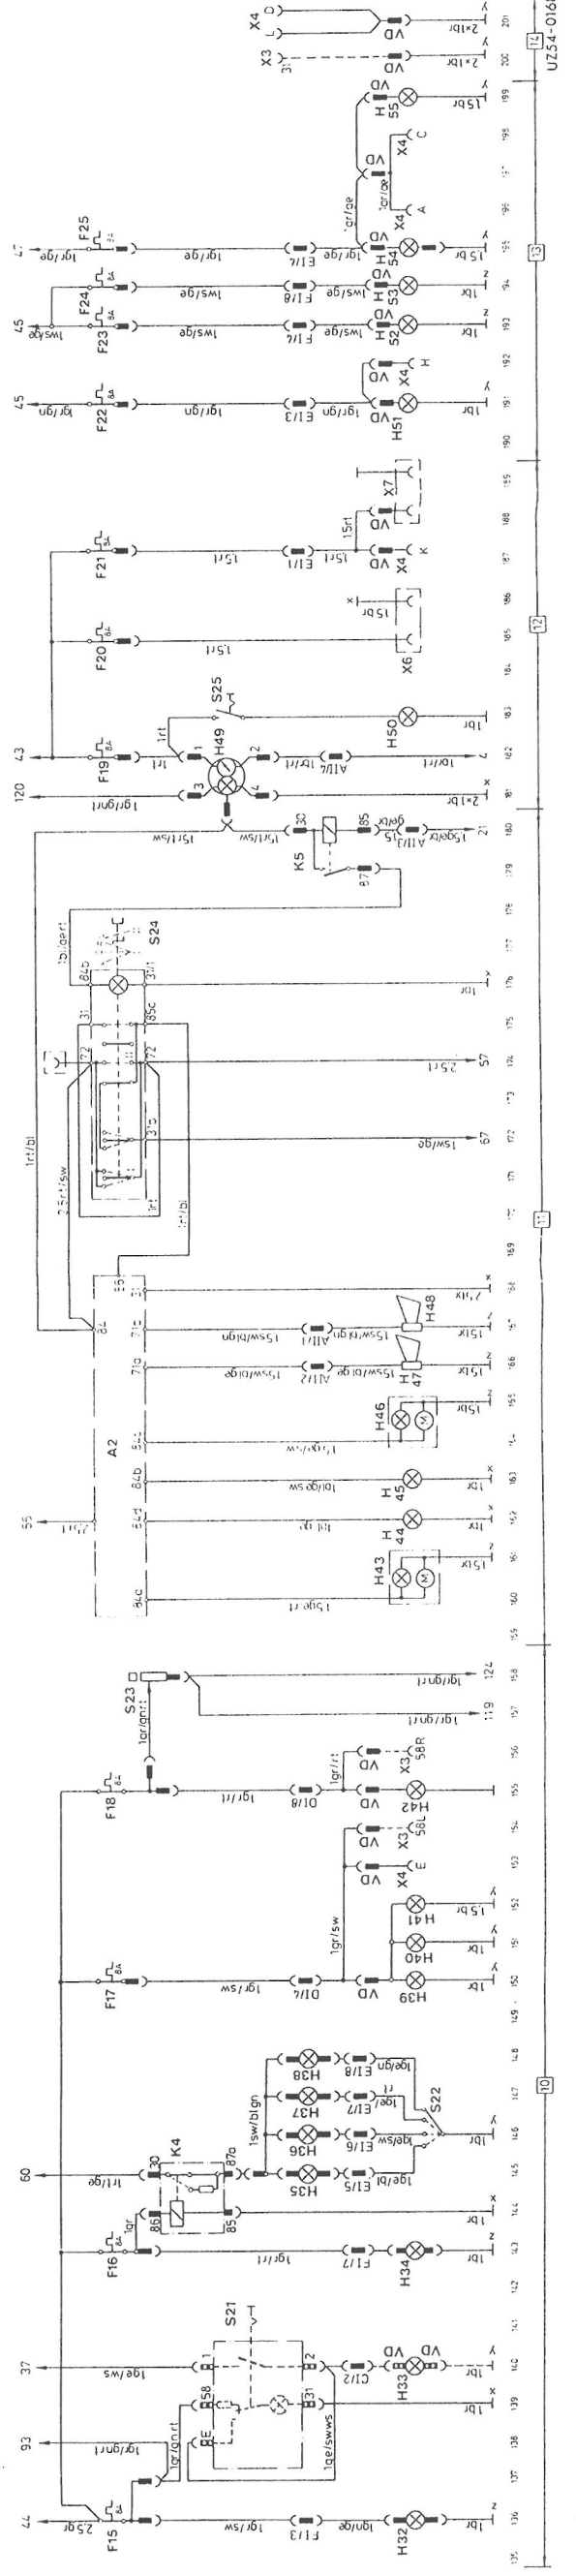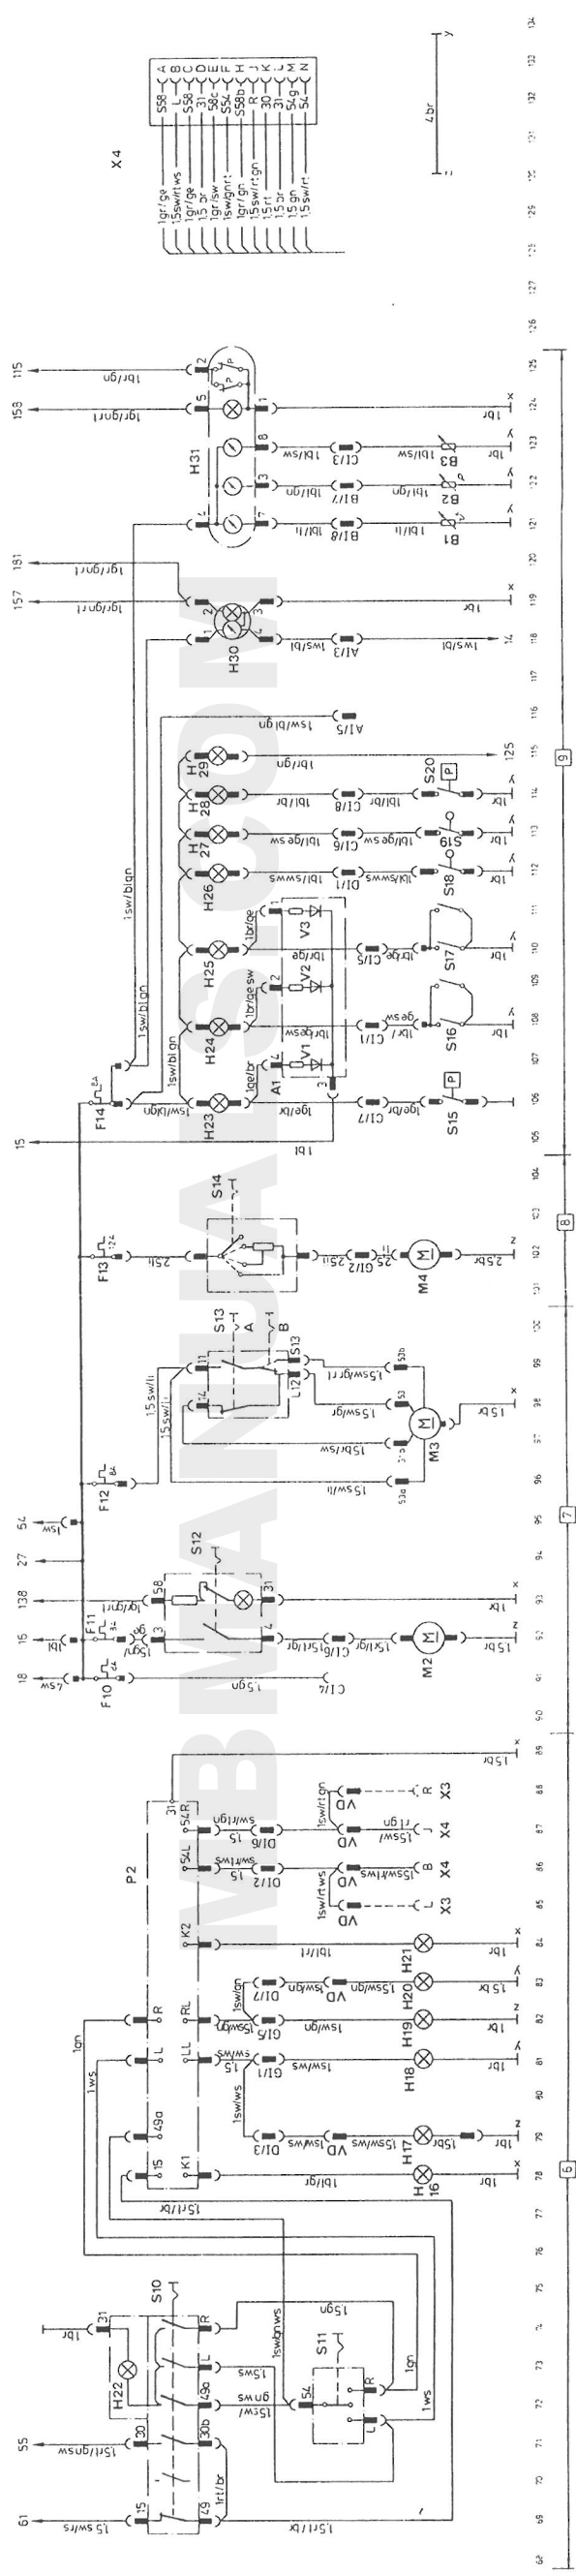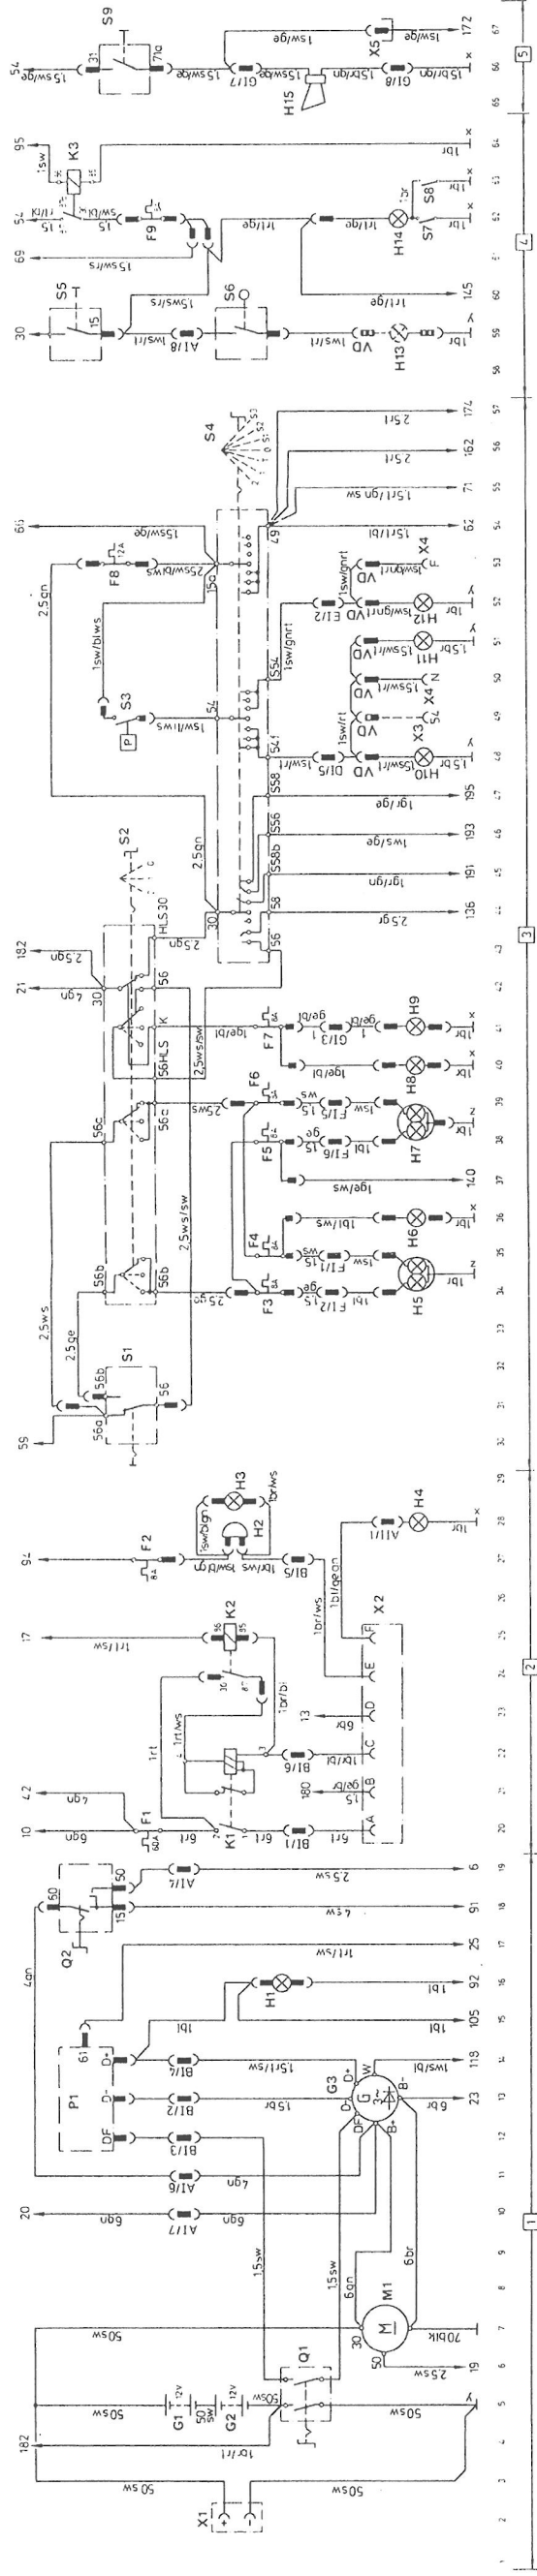

Circuit Diagram Box-Type Body (from SP)

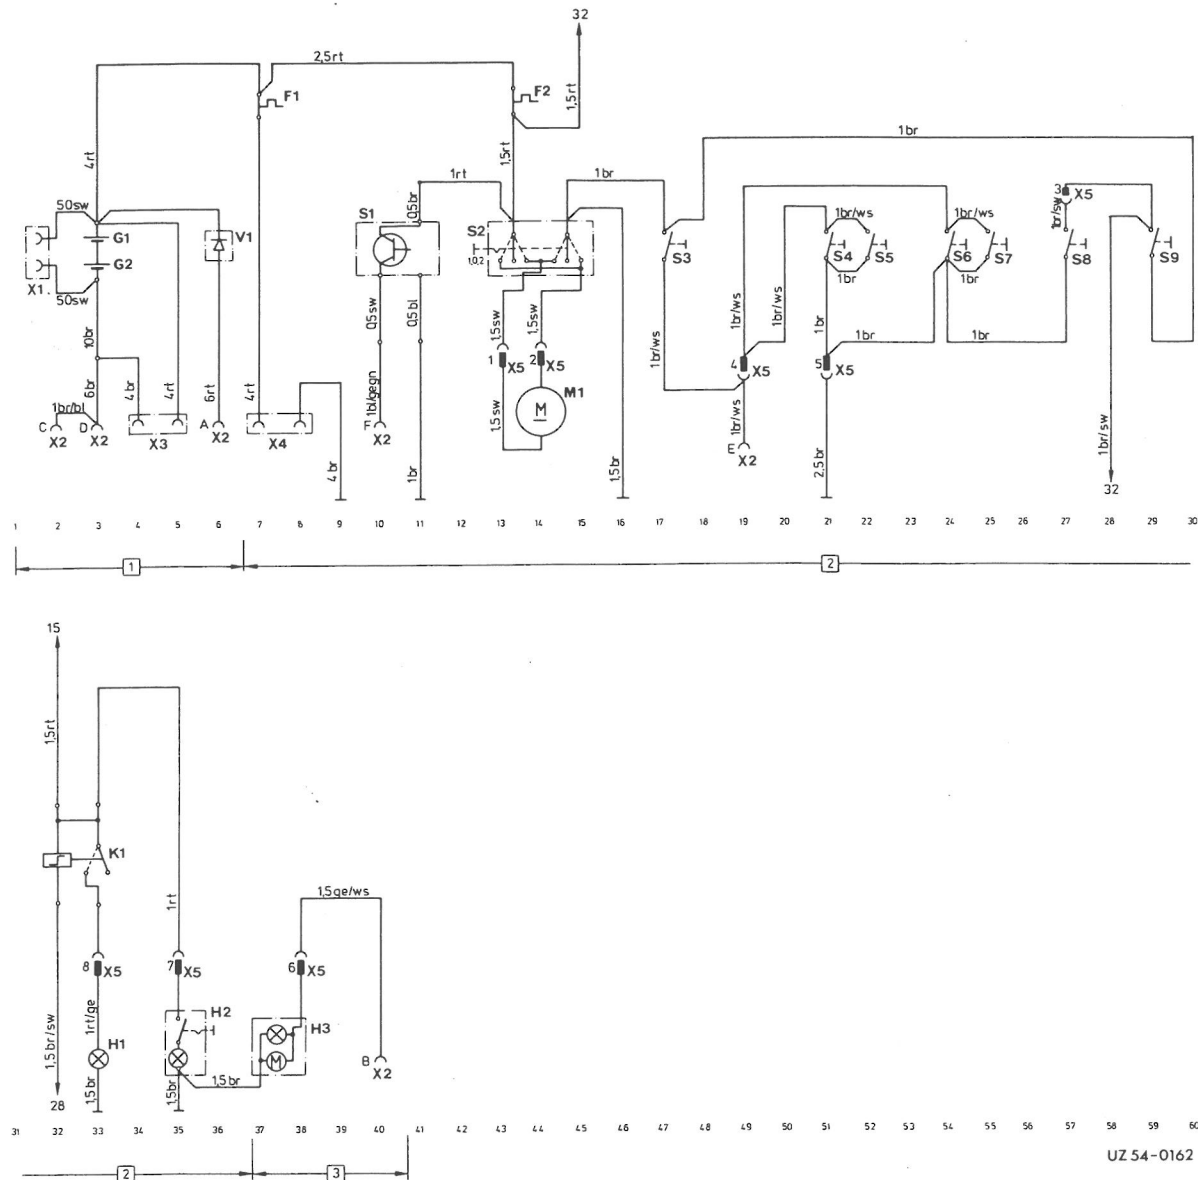**1 Power Supply**

G 1, G 2 Batteries (2 x 12 V, 125 Ah)

V 1 Protective diode

X 1 Assisted start - and charging socket

X 2 Plug connector power supply

X 3 Connection heater (divided fuse)

2 Lighting, Ventilation, Emergency, Folding Step

F 1 Overcurrent protection switch, socket

F 2 Overcurrent protection switch, lighting ventilation, induction switch, folding step

H 1 Dome light

(Bulb 24 V, 21 W, P 25 - 1, DIN 72 601)

H 2 Dome light with switch

(Bulb 24 V, 21 W)

K 1 Step relay for lighting

M 1 Roof ventilator 24 V, 26 W

S 1 Induction switch folding step

(Switching capacity max 400 mA)

S 2 Switch, roof ventilator (air intake - 0 - air outlet)

S 3 Button, emergency call point

S 4 Button, emergency call point right

S 5 Button, emergency call point right

S 6 Button, emergency call point left

S 7 Button, emergency call point left

S 8 Button, lighting

S 9 Button, lighting

X 2 Plug connector power supply

X 4 Socket 24 V, 250 W

X 5 Parting point battery box

3 Rotating Beacon

H 3 Rotating beacon blue


(Bulb 24 V, 70 W, YA, DIN 72 601)

X 2 Plug connector power supply

X 5 Parting point battery box

UZ 54-0162

Auxiliary Heater

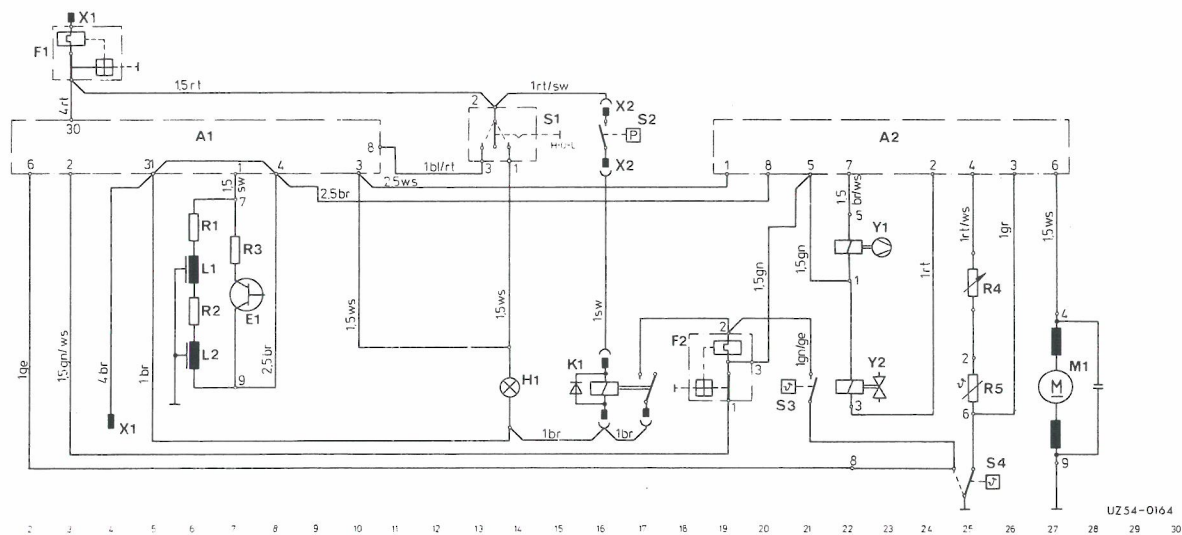

A1 Control unit
 A2 Pulse generator
 E1 Ignition spark generator
 F1 Overcurrent protection switch
 F2 Overheating safeguard
 H1 Indicator lamp
 K1 Relay
 L1, L2 Noise suppression filter
 M1 Engine heating
 R1 Series resistor glow plug
 R2 Glow plug
 R3 Series resistor ignition spark generator

R4 Potentiometer
 R5 Temperature sensor
 S1 Switch heat- 0- ventilator
 S2 Float switch
 S3 Overheating switch
 S4 Thermal switch
 X1 Connector
 X2 Plug-and-socket connection
 Y1 Fuel feed pump
 Y2 Combustion air - solenoid valve

Contents

Chapter

Version

PTO shafts

55.002

Hydraulics

55.102

Hydrostat

55.202
