

Contents

Chapter	Page
1 General	
Installation survey	1.1/1
Technical data	1.2/1
Assembling PTO shafts	1.3/1
Exploded view	1.4/1

MBMANUALS.COM

SA 35 738

SA 35 739

Installation survey front

Chassis Model	Sales designation	PTO shaft front Profile	Installation
435.115	U 1300 L	1 3/8" splined shaft	SA 35 738
.117	U 1300 L/37	1 3/8" involute gearing	
.110	U 1700	1 3/4" splined shaft	
.111	U 1700 L	1 3/4" involute gearing	
.113	U 1700 L/38		

Installation survey rear

Chassis Model	Sales designation	PTO shaft rear Profile	Installation
435.110	U 1700	1 3/8" splined shaft 1 3/8" involute gearing 1 3/4" splined shaft 1 3/4" involute gearing	SA 35 739

Technical data

Chassis		PTO shaft take-off to front		Speed 1/min	
Model	Sales designation	Version	Dir. of rotation	Engine	PTO shaft
435.115	U 1300 L	Engine or transmission PTO shaft		2203 ¹⁾ (2320) ¹⁾	540 ¹⁾ (1000) ¹⁾
.117	U 1300 L/37			2332 (2460)	540 (1000)
.110	U 1700				
.111	U 1700 L			2800 ¹⁾	686 ¹⁾ 1207 ¹⁾
.113	U 1700 L/38			2800	648 1138

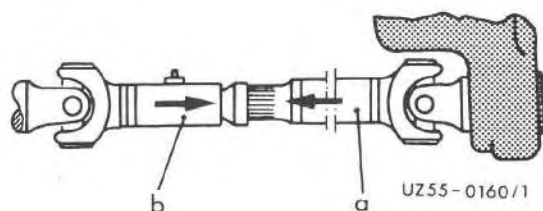
1) From chassis end No. 435.111 — 072 513

Chassis		PTO shaft take-off to front and/or rear		Speed 1/min	
Model	Sales designation	Version	Dir. of rotation	Engine	PTO shaft
435.110	U 1700	Engine or transmission PTO shaft		2203 (2320)	540 (1000)
				2800	686 1207

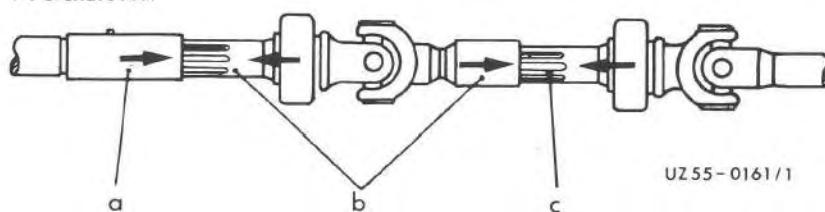
Assembly of PTO shafts

The propeller shaft is fitted together during assembly in such a way that the marking arrows on the hollow shaft and splined profile shaft are opposite each other.

If these marking arrows are not provided on the hollow shaft and the splined profile shaft of the propeller shaft, the joints must be fitted together in accordance with the data (refer to tables).

PTO shaft front

	b to a	
Joint linkage	0	Teeth

PTO shaft rear

	b to a	c to b	
Joint linkage	+1	0	Teeth

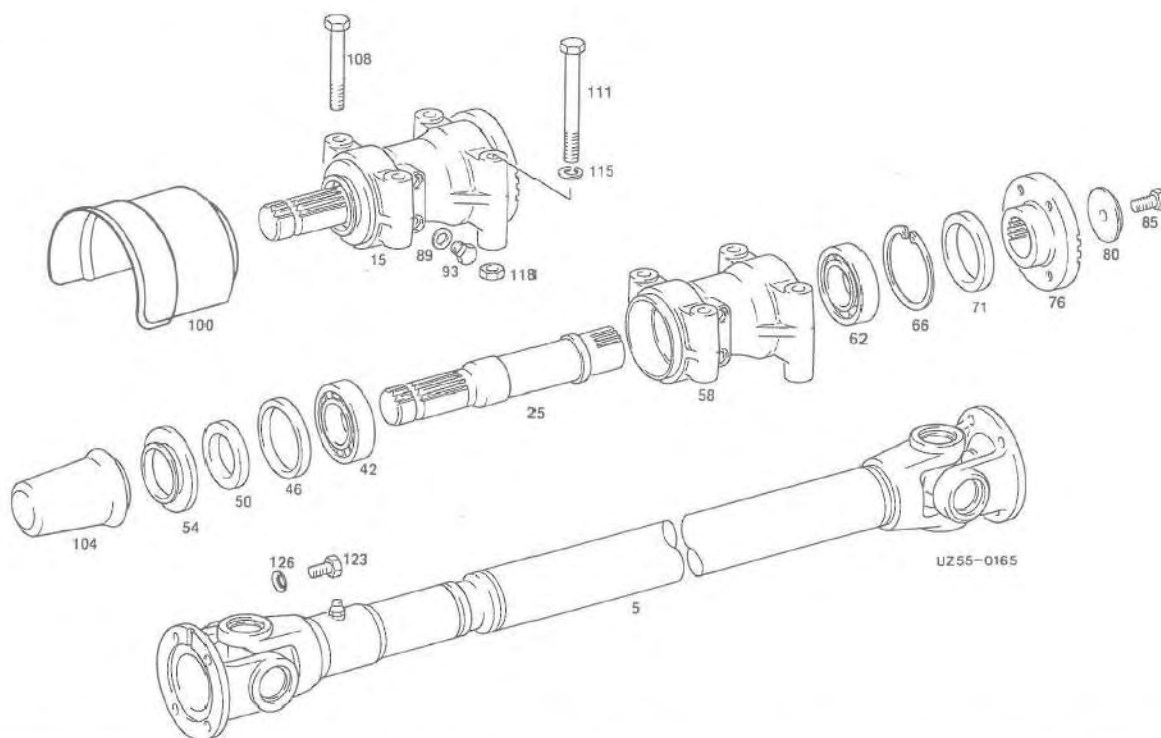
Joint linkage towards drive

+ positive sign: rotation of joints b to a, c to b clockwise

– negative sign: rotation of joints b to a, c to b counter-clockwise

The joints (a, b, c) are identified in the direction of power flow.

Exploded view



PTO shaft front

- | | | | |
|----|--------------------------|-----|----------------------|
| 5 | Intermediate shaft | 100 | PTO shaft protection |
| 15 | Bearing | 104 | Hood |
| 25 | Shaft | 108 | Bolt |
| 42 | Cylinder roller bearing | 111 | Bolt |
| 46 | Bush | 115 | Spring washer |
| 50 | Gasket | 118 | Nut |
| 54 | Guard plate | 123 | Bolt |
| 58 | Housing | 126 | Locking piece |
| 62 | Deep-groove ball bearing | | |
| 66 | Circlip | | |
| 71 | Sealing ring | | |
| 76 | Clutch flange | | |
| 80 | Washer | | |
| 85 | Bolt | | |
| 89 | Sealing ring | | |
| 93 | Screwplug | | |