

Contents

Chapter	Page
1 General	
Installation Survey	1.1/1
Tightening Torques	1.1/1
Capacities	1.1/1
2 Raising and Lowering Driver's Cab	2.1/1
Raising and Lowering with Tilting Device (workshop version)	2.1/1
Raising and Lowering with Tilting Device (SA 35 990 version)	2.2/1
Raising and Lowering without Tilting Device	2.3/1
3 Removal and Installation of Tilting Device, Driver's Cab Raised	3.1/1
4 Removal and Installation of Platform with Auxiliary Frame	4.1/1

MBMANUALS.COM

Installation Survey

Chassis		Driver's Cab		Installation
Model	Sales designation	Model	Version	
435.110	U 1700	425.800	Front with driver platform	Series
.111	U 1700 L	425.820	closed	
.113	U 1700 L/38	425.821 ¹⁾	half open	SA
.115	U 1300 L	425.825	closed extended	SA
.117	U 1300 L/37			

1) Applies only to special purpose vehicles, such as disaster control, fire service etc.

Tightening Torques

Designation	Thread stability	Nm
Mounting driver's cab	M 16 x 1,5– 8,8 (10,9)	210 (295)
Mounting cab mount	M 10 x 1,5– 8,8 (10,9)	50 (70)

Special Tool

Designation	Special tool	Tool set
Safety support	435 589 00 63 00	B
Hydraulic tilting device	435 589 01 63 00	B

Capacity

Designation	Installation	Service product	Capacity (L)
Tilting device	as special tool	Aero Shell Fluid ¹⁾	2,0
	as SA 35 990		


1) or oils H - L 9 in accordance with DIN 51 524

Raising


- 1 Put in sixth.
- 2 Detach engine hood and front panel.




- 3 Detach air intake hose,
at model 435.115/.117.

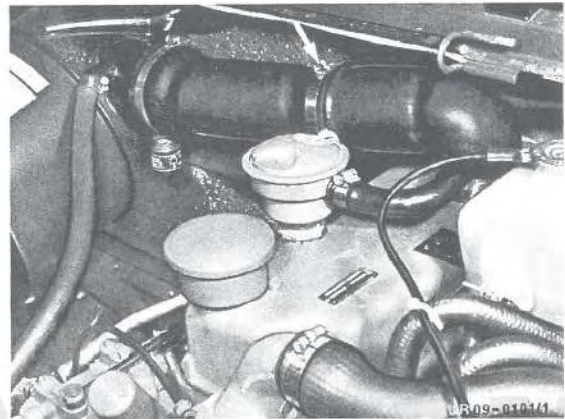


- 4 Detach air intake hose,
at model 435.110/111/113.

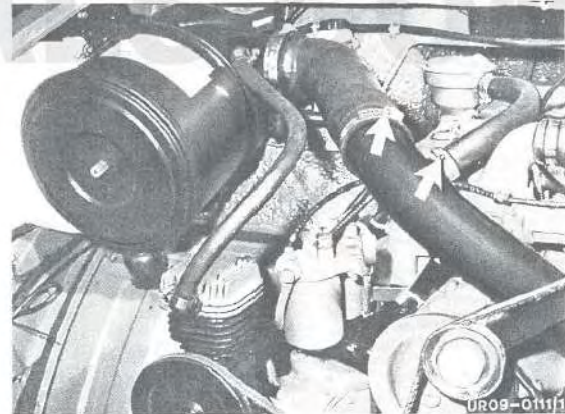


- 5 Withdraw heater hoses from holder.

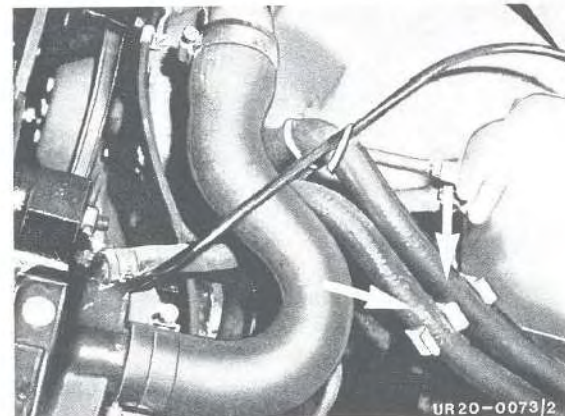


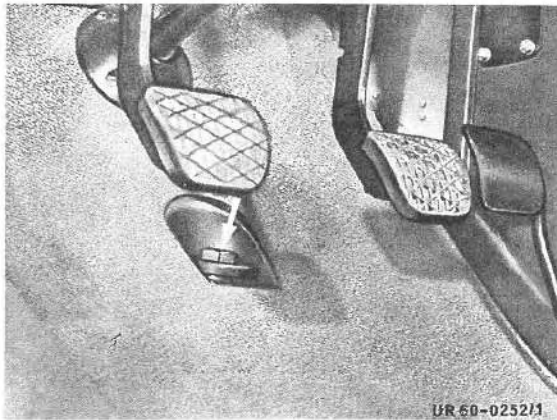


- 6 Unscrew bolts in footwell at left and right.

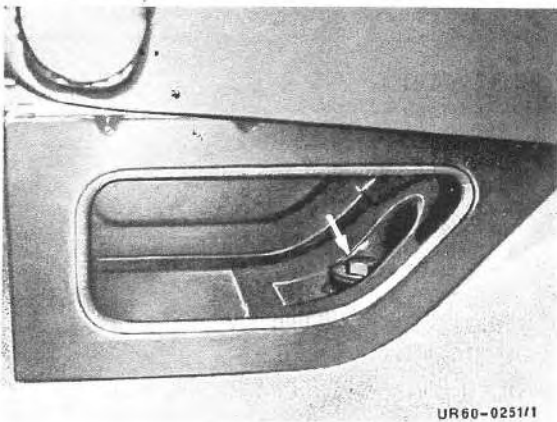

- 7 Unscrew bolts beneath seats at left and right.

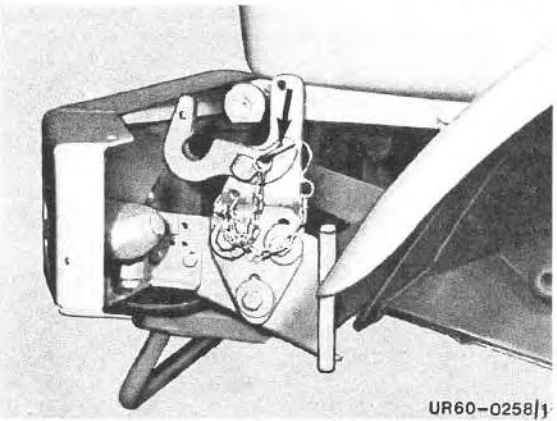


- 8 Release and remove pins from tilt mounts at left and right.

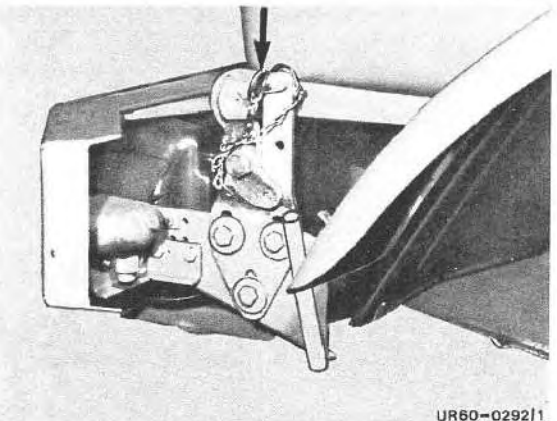

- 9 Close tilt mounts, inserting and securing pins.


10 Fit hydraulic cylinder behind the front left wheel and secure.

Note: The connection coupling for the hydraulic hose must point downwards.

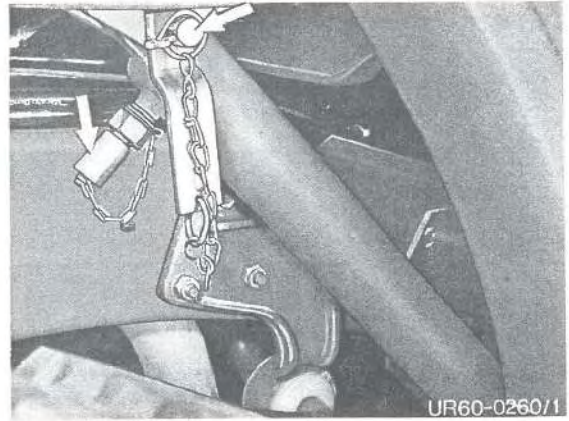


11 Attach piston rod on the left-hand entrance and secure.

Note: If the piston rod cannot be fitted, completely retract the rod.

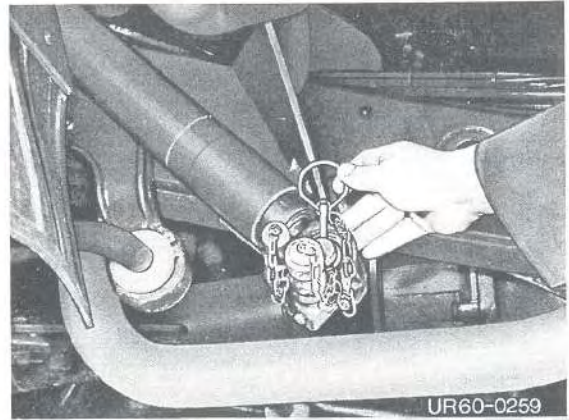


12 Fit hydraulic pump at left-hand entrance.

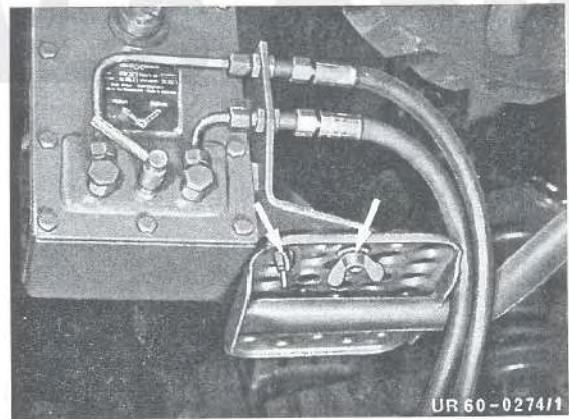


13 Secure arresting cable to the driver's cab with a shackle.


Arresting cable: 8 DIN 3055 - FE - bk 1770 S Z
Length 2200 mm

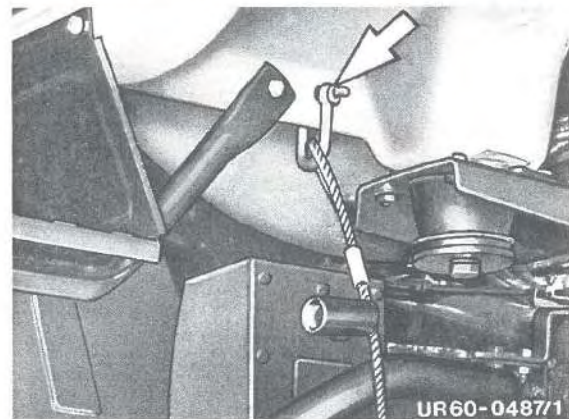


60.5 Raising and Lowering Driver's Cab

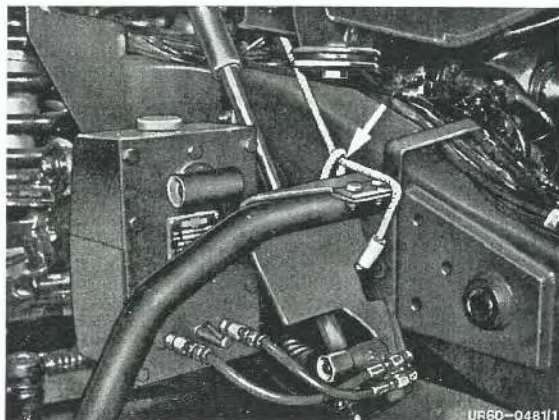

14 Secure arresting cable to step.

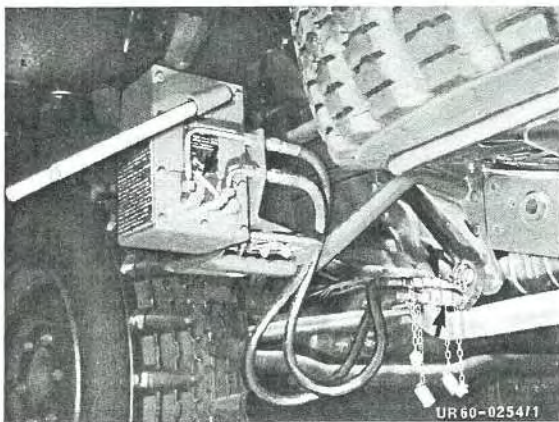

15 Connect hydraulic hoses and move control lever to position "lift".

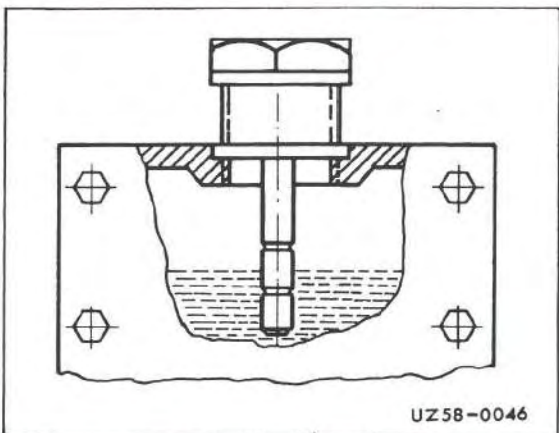

16 Check oil level of hydraulic pump and correct if necessary by unscrewing oil dipstick. The oil level must be between the upper and lower marking on the oil dipstick.
Capacity, refer to 1.1/1.

Note: Check oil level only when cylinder is retracted.




17 Actuate hydraulic pump and raise driver's cab.


Note: The hydraulic cylinder must always be pumped to the limit stop.

Caution - risk of accident!

16 While raising the driver's cab, there must be no persons in front or beneath the driver's cab.

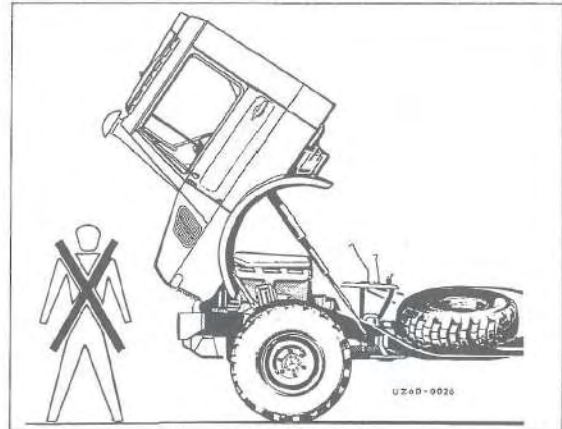

17 Attach safety support.

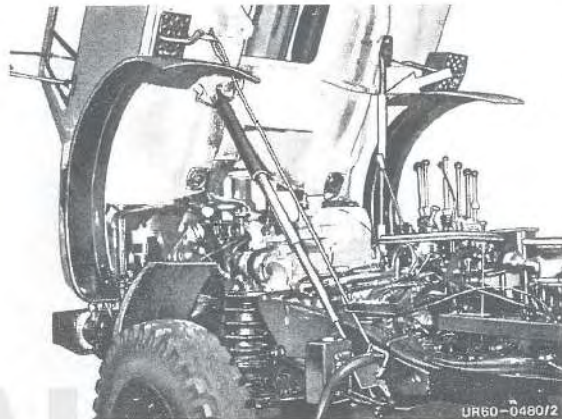


Lowering

- 1 Raise driver's cab and detach safety support.
- 2 Move control lever to position "lower" and lower driver's cab.

Caution - risk of accident!

When lowering the driver's cab, the shut-off valve on the cylinder **must not be open**.

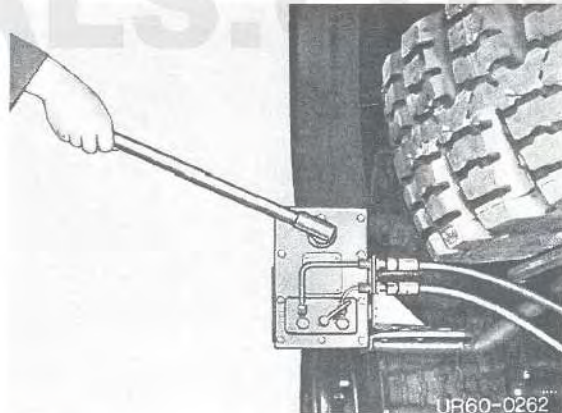


- 3 The cab is lowered further in reverse sequence of raising, at the same time the steering shaft must be inserted into the slip joint from the front.

Note: The marking on the slip joint must agree with the cut-out on the steering shaft profile.




60.5 Raising and Lowering Driver's Cab

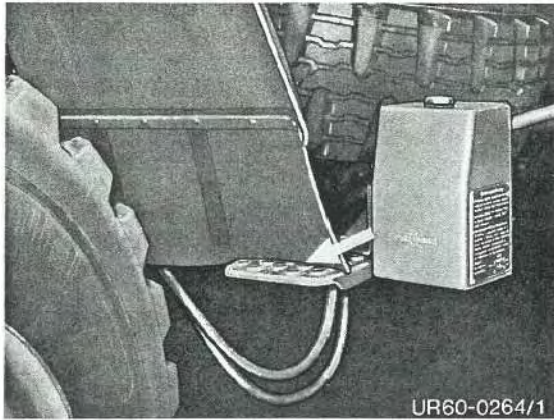


4 Press mud flap forward on the entrance.

Note: Check electrical lines, speedometer shaft and hoses to ensure they are free moving.

- 11 Insert bolts in footwell at left and right.
- 12 Introduce heater hoses into holder.

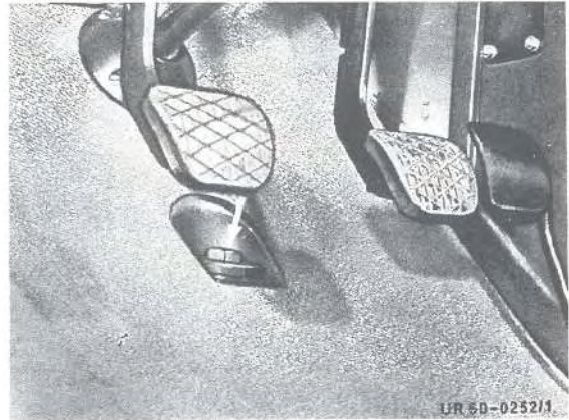


- 13 Attach air intake hose, at model 435.115/117.

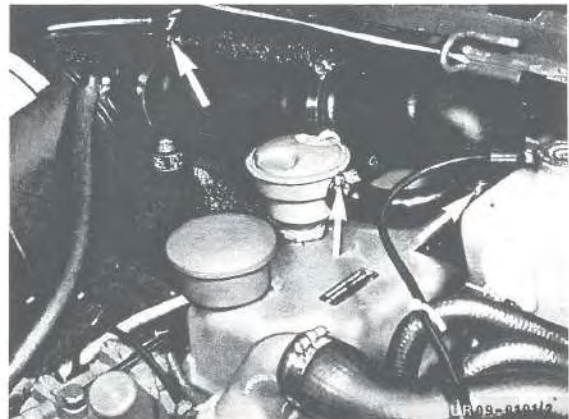

- 14 Attach air intake hose, at model 435.110/111/113.

- 15 Make sure that steering shaft gaiter is seated satisfactorily.

- 16 Attach front panel and engine hood.

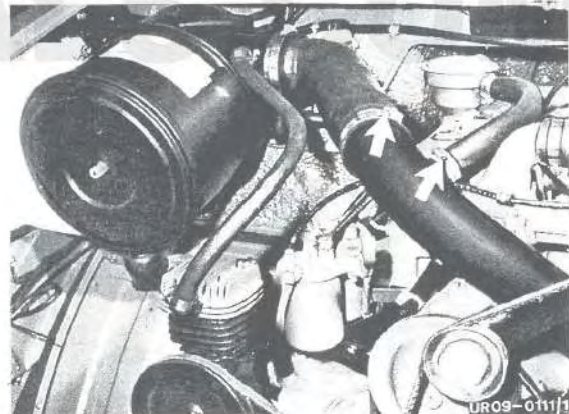


Raising

- 1 Put in sixth.
- 2 Detach engine hood and front panel.




UR88-0030/3

- 3 Detach air intake hose,
at model 435.115/117.

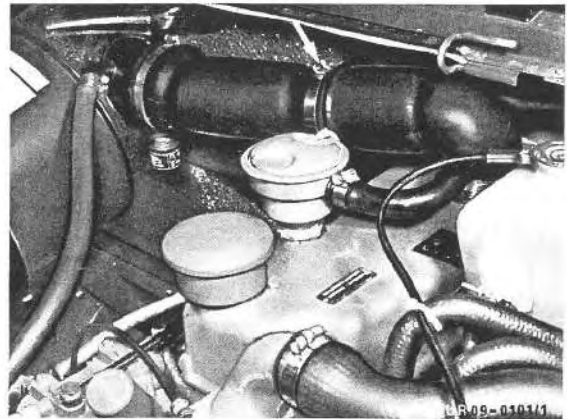


UR09-0101/1

- 4 Detach air intake hose,
at model 435.110/111/113.

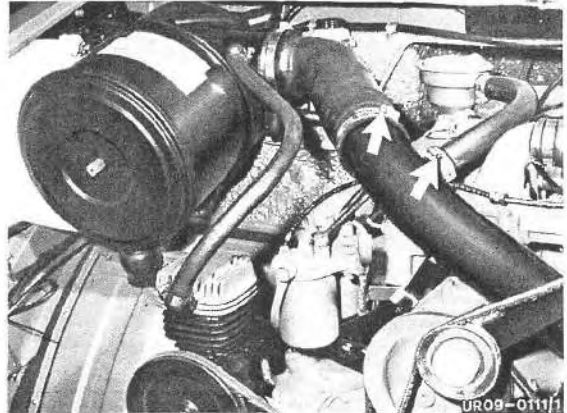


UR09-0111/1


- 5 Withdraw heater hoses from holder.

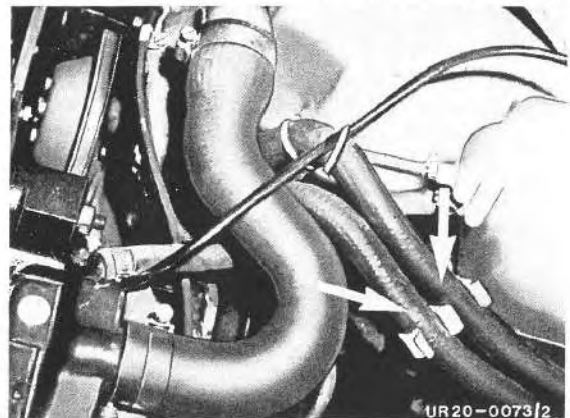


UR20-0073/2

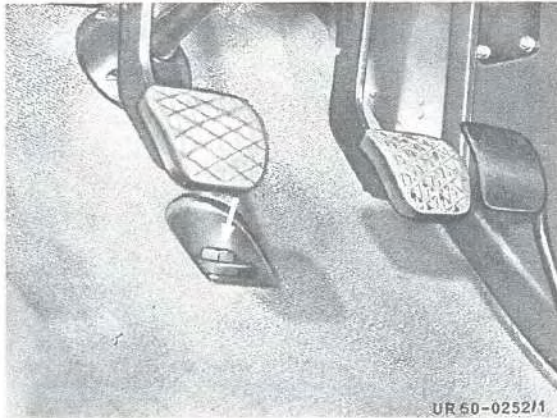


- 6 Unscrew bolts in footwell at left and right.

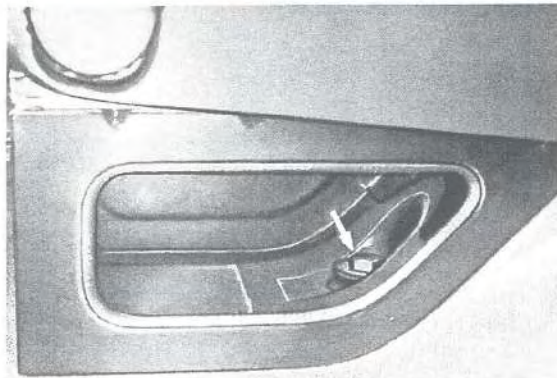

- 7 Unscrew bolts beneath seats at left and right.

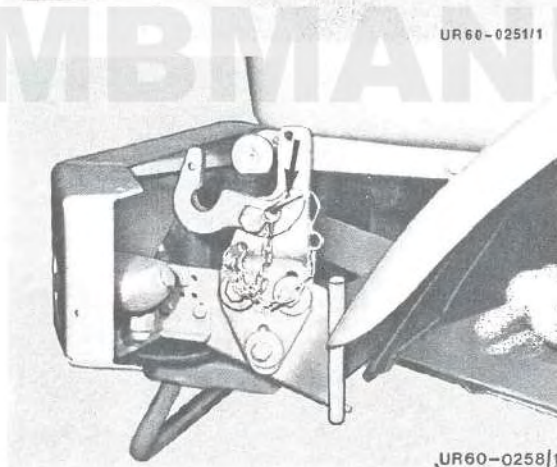


- 8 Release and remove pins from tilt mounts at left and right.

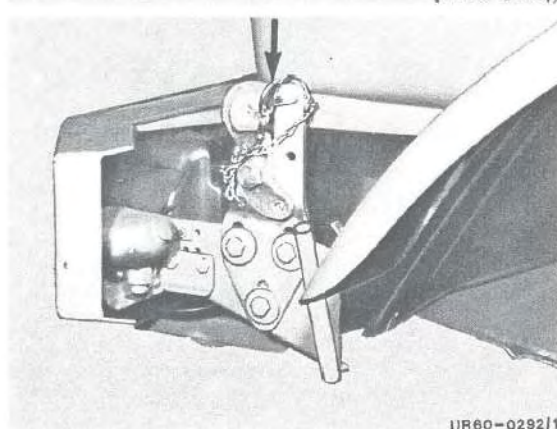


- 9 Close tilt mounts, inserting and securing pins.

10 Secure arresting cable to the driver's cab with a shackle.


Arresting cable: 8 DIN 3055 - FE - bk 1770 S Z
Length 2200 mm

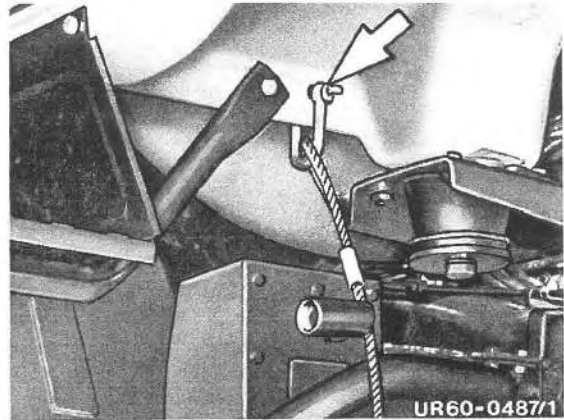

11 Secure arresting cable to step.

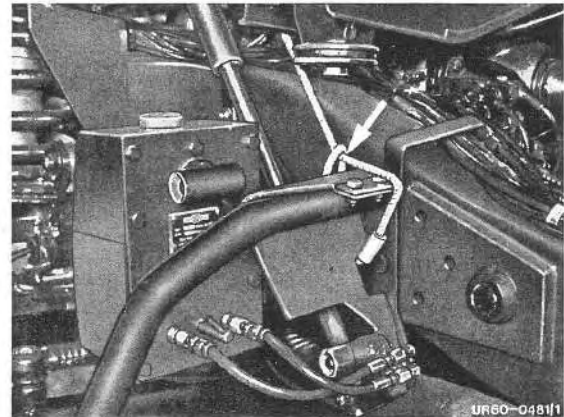


12 Close shut - off valve on the cylinder with pump lever by turning in a clockwise direction. Move control lever on the hydraulic pump in position "lift".

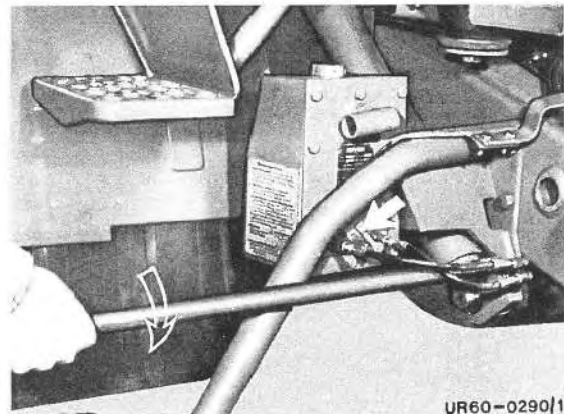


13 Check oil level of hydraulic pump and correct if necessary by unscrewing oil dipstick. The oil level must be between the upper and lower marking on the oil dipstick.
For capacity, refer to 1.1/1.

Note: Check oil level only when cylinder is retracted.

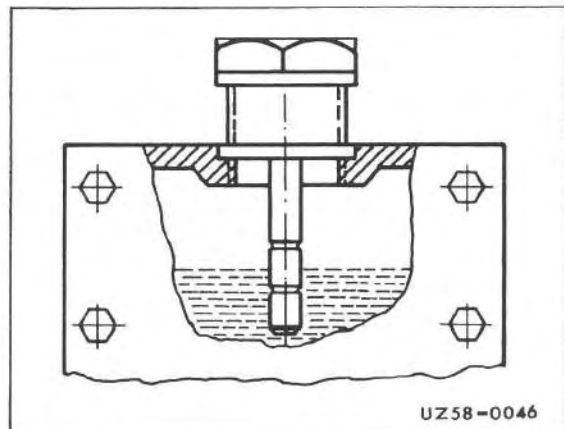


60.5 Raising and Lowering Driver's Cab

SA 35 990

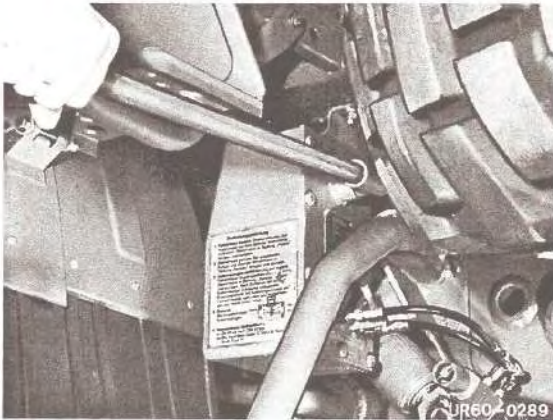

14 Operate hydraulic pump and raise driver's cab.

Note: The hydraulic cylinder must always be pumped up to the limit stop.

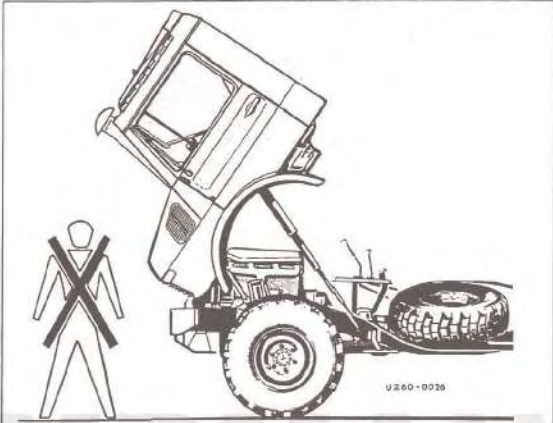


Caution - risk of accident!

15 While raising the driver's cab, there must be no persons in front or beneath the driver's cab.



16 Attach safety support.

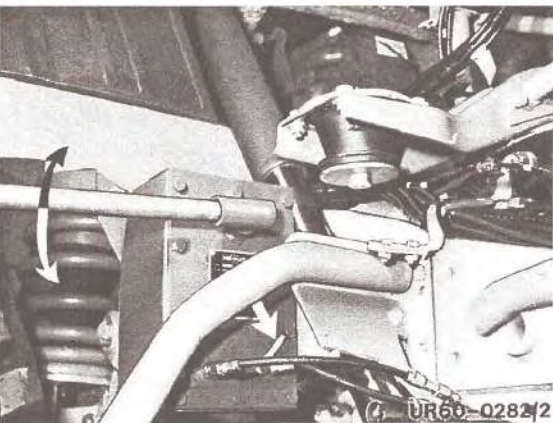

Lowering

1 Raise driver's cab and detach safety support.

2 Move control lever in position "lower" and lower the driver's cab.

Caution - risk of accident!

When lowering the driver's cab, the shut-off valve on the cylinder **must not be open**.


3 The driver's cab is lowered further in reverse sequence of raising, at the same time the steering shaft must be inserted into the slip joint from **the front**.

Note: The marking on the slip joint must agree with the cut - out on the steering shaft profile.



4 Press mud flap forwards at the entrance.



Note: Check electrical lines, speedometer shaft and hoses for ease of movement.

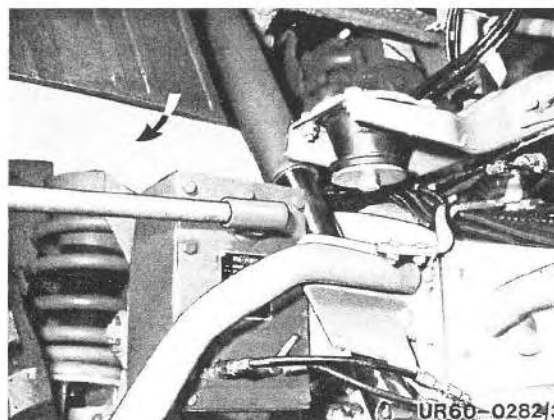


Raising and Lowering without Tilting Device

Note: The work to be carried out is identical to raising and lowering with tilting device, refer to 2.1/1 or to 2.2/1.

- 1 Secure arresting cable to driver's cab and frame.

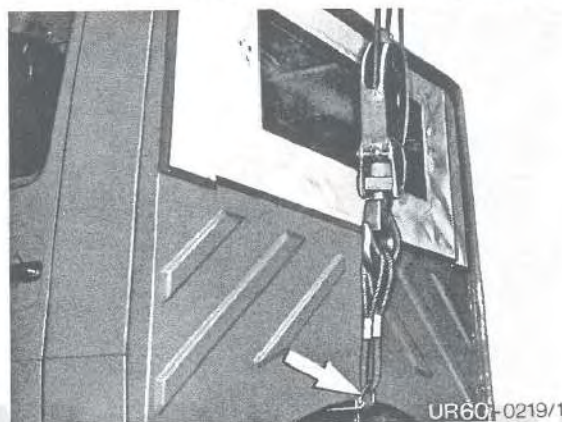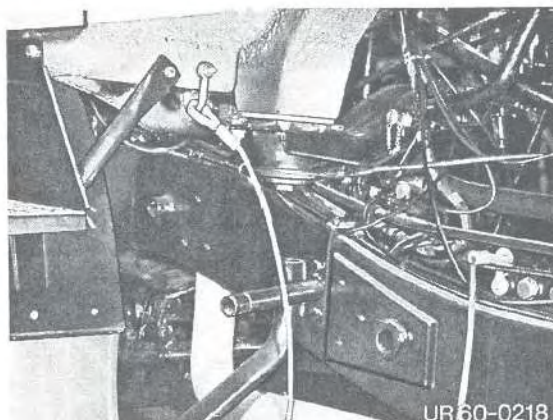





- 2 Check condition of eyebolt at rear panel of driver's cab.
- 3 Fit chain or cable and raise driver's cab.

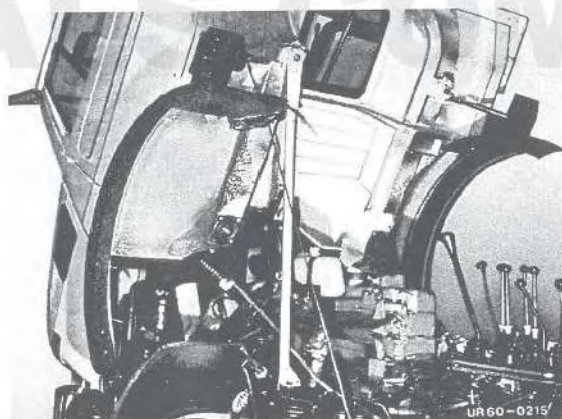


- 4 Attach safety support.
- 5 The cab is lowered in reverse sequence.


Removal of tilt fixture, cab raised

- 1 Move control lever to position "lower".
- 2 Operate hydraulic pump until bearing pin can be withdrawn.
- 3 Operate hydraulic pump until thin piston rod (third stage).
- 4 Detach both hydraulic hoses from hydraulic cylinder and attach dust cap.
- 5 Release piston rod and remove hydraulic cylinder.

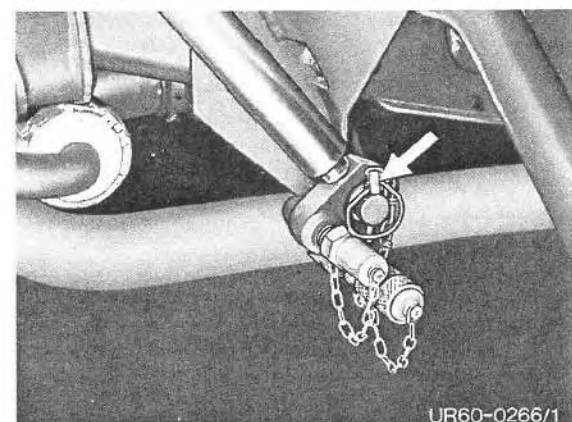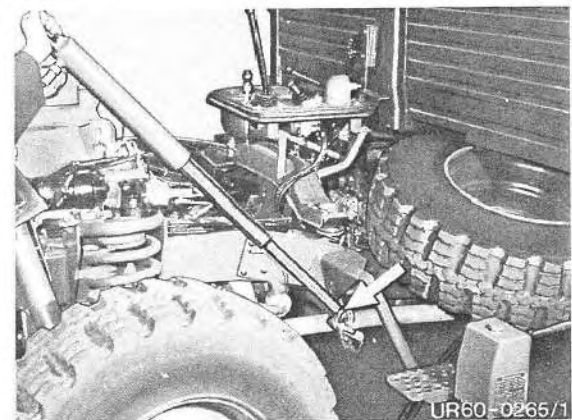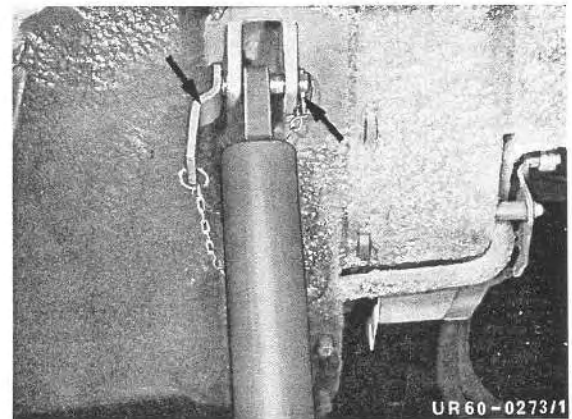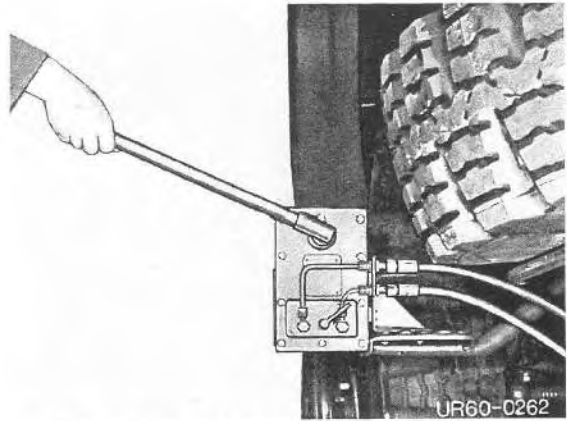

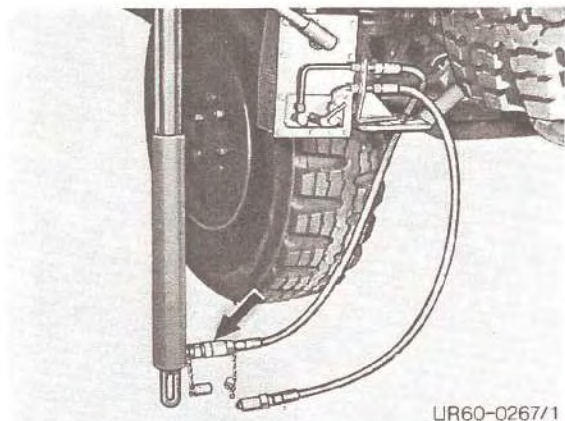


- 6 Position hydraulic cylinder on ground and connect hydraulic hose.

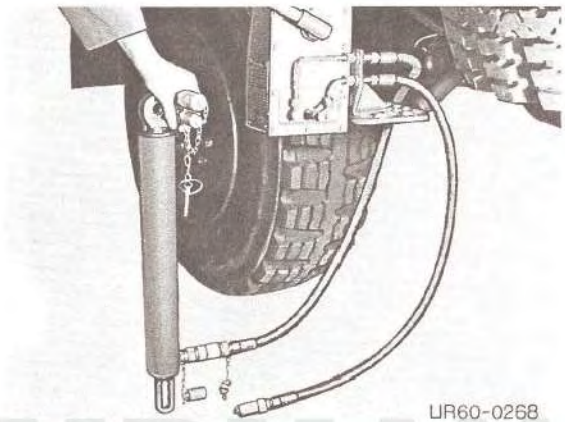

- 7 Press piston rod **fully home** by hand.

Note: Control lever on hydraulic pump must be at position "lower" for this operation.

- 8 Disconnect hydraulic hose.

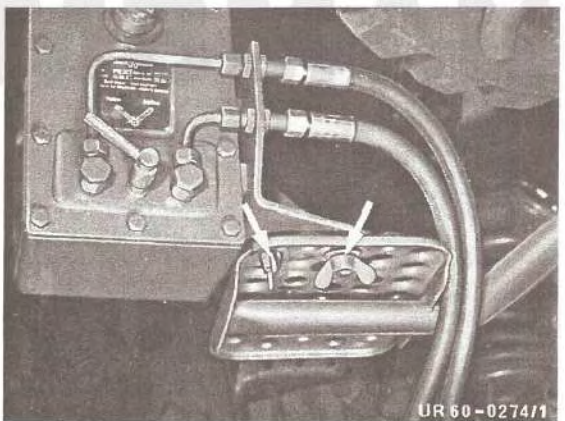

- 9 Attach hydraulic pump.



Installation of tilt fixture, cab raised

- 1 Fit hydraulic pump to the left mounting step.
- 2 Fit hydraulic cylinder.


Note: Port coupling for hydraulic hose must point downwards.

- 3 Connect hydraulic hoses and pump up hydraulic cylinder.

Danger! Watch out!





If the hydraulic cylinder is not pumped up, but pulled up, the cab will fall back to the 3rd stage of the hydraulic cylinder when pumped down.

- 4 Attach and secure hydraulic cylinder at cab mount.

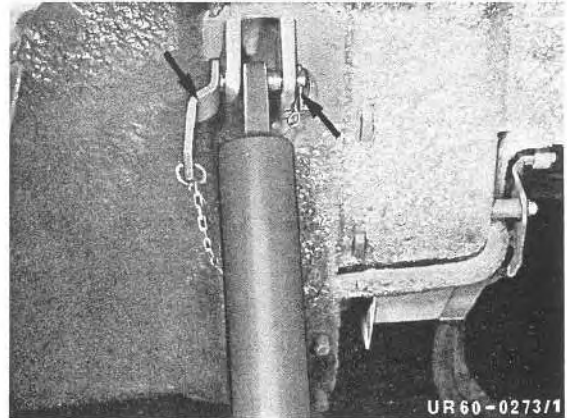

Removal

- 1 Raise platform body and fit safety stay.
- 2 Remove spare wheel.
- 3 Remove raising cylinder on the platform body and pull the platform back with lifting tackle.
- 4 Release left and right bolts at rear and remove.
- 5 Remove platform body with lifting tackle.
- 6 Close oil circuit for raising cylinder.

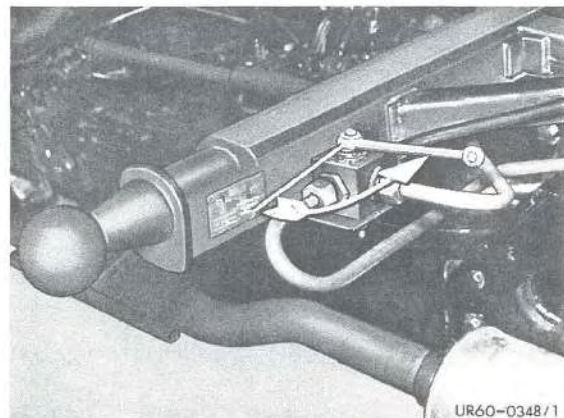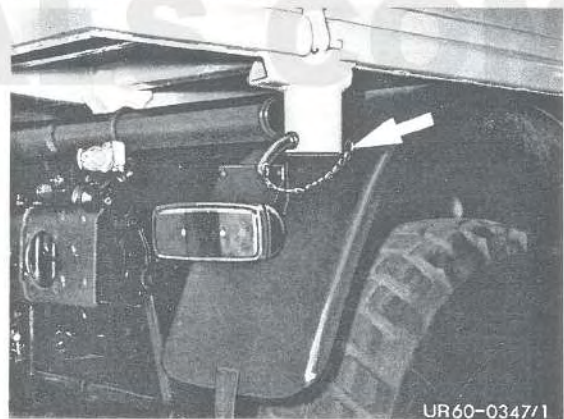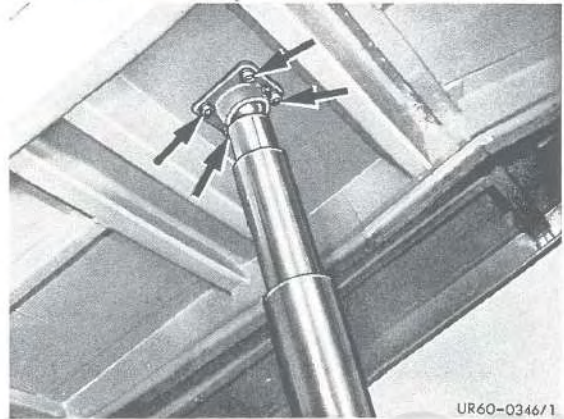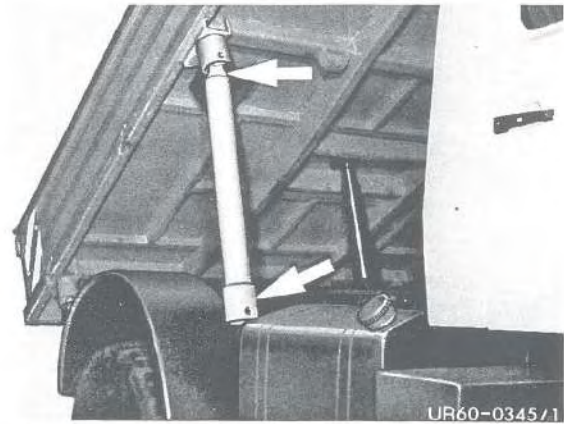





7 Cut supply line to hydraulic cylinder.

Note: Catch outpouring oil and block line on pump side.


8 Remove hydraulic line hose couplings at the support.

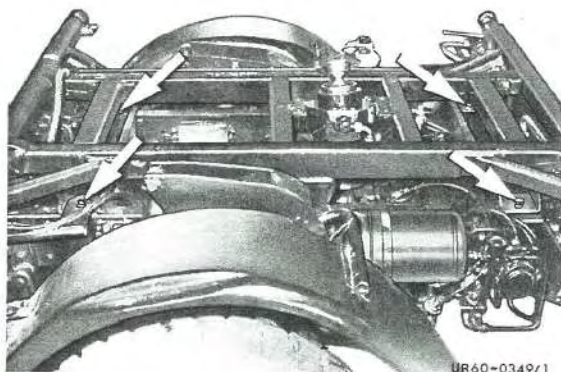

9 Remove sub-frame from frame.

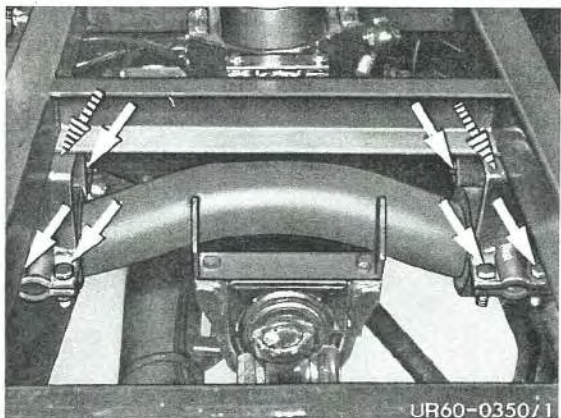

10 Remove platform body mountings on right and left.

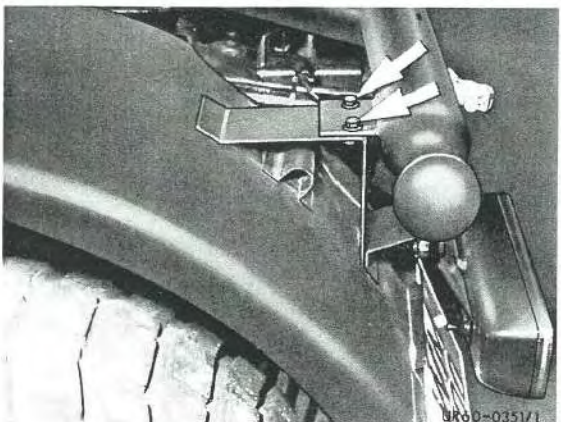

11 Remove rear mudguards on right and left and remove sub-frame with lifting tackle.

12 Clean all parts, check and replace if necessary.

13 Installation takes place in the reversed sequence.