

## Contents

| Chapter                          | Page  |
|----------------------------------|-------|
| 1 General                        | —     |
| 2 Checking, adjusting headlights | 2.1/1 |

**Contents**

| Chapter                                                                     | Page  |
|-----------------------------------------------------------------------------|-------|
| <b>1 General</b>                                                            |       |
| Installation Survey Box-Type Body                                           | 1.1/1 |
| Technical Data                                                              | 1.1/1 |
| Necessary Materials                                                         | 1.2/1 |
| <b>2 Removal and Installation of Auxiliary Batteries</b>                    | 2.1/1 |
| <b>3 Removal and Installation of Protective Diode</b>                       | 3.1/1 |
| <b>4 Removal and Installation of Switchover Relay for Interior Lighting</b> | 4.1/1 |
| <b>5 Removal and Installation of Roof Ventilator</b>                        | 5.1/1 |
| <b>6 Replacing Induction Sensor (Folding Step)</b>                          | 6.1/1 |
| <b>7 Adjusting Induction Sensor (Folding Step)</b>                          | 7.1/1 |
| <b>8 Replacing Alarm Switch</b>                                             | 8.1/1 |

**Installation Survey Box-Type Body**

| Chassis |                   | box - type body |                                    |              |
|---------|-------------------|-----------------|------------------------------------|--------------|
| Model   | Sales designation | Model           | Manufacturer                       | Installation |
| 435.115 | U 1300 L          | 435.500         | Waggonfabrik<br>Krefeld - Ürdingen | Series       |

**Expendable Materials**

| Cons.<br>No. | Designation        | Part number   |
|--------------|--------------------|---------------|
| 1            | Adhesive: National | 001 989 46 71 |

**Technical Data****Auxiliary Batteries (in Box-Type Body)**

|          |    |         |
|----------|----|---------|
| Voltage  | V  | 2 x 12  |
| Capacity | Ah | 2 x 125 |

**External Start Socket (Additional Charging Socket)**

|             |                 |
|-------------|-----------------|
| Connection  | 2 - pole        |
| Designation | A 35 VDA 72 593 |

**Socket on Switch Panel (in Box-Type Body)**

|             |   |             |
|-------------|---|-------------|
| Connection  |   | 1-pole      |
| Designation |   | C DIN 72591 |
| Voltage     | V | 24          |
| Current     | A | 10          |

**Automatic Cutout (in Switch Box Box-Type Body)**

|           |                              |        |
|-----------|------------------------------|--------|
| Current   | A                            | 2 x 12 |
| Circuit 1 | for lighting and ventilation |        |
| Circuit 2 | for connection socket 1-pole |        |

**Protective Diode**

|             |   |            |
|-------------|---|------------|
| Designation |   | MR 1205 FL |
| Voltage     | V | 300        |
| Current     | A | 50         |

**Installation Lamp Blue**

|              |   |    |
|--------------|---|----|
| Voltage      | V | 24 |
| Power output | W | 21 |

**Roof Ventilator**

|              |   |    |
|--------------|---|----|
| Voltage      | V | 24 |
| Power output | W | 26 |

## 82.15 General

435.500

### Lamp in Roof Ventilator

|              |   |    |
|--------------|---|----|
| Voltage      | V | 24 |
| Power output | W | 21 |

### Halogen rotating beacon, rear


|              |   |          |
|--------------|---|----------|
| Voltage      | V | 24       |
| Power output | W | 70       |
| Test symbol  |   | ~ K 8605 |

### Proximity switch for folding step

|                                                    |         |
|----------------------------------------------------|---------|
| Max. permissible load current                      | 400 m A |
| Clearance between switch and stop for folding step | 0,5 mm  |


**Removal and Installation**

1 Detach cover plate.

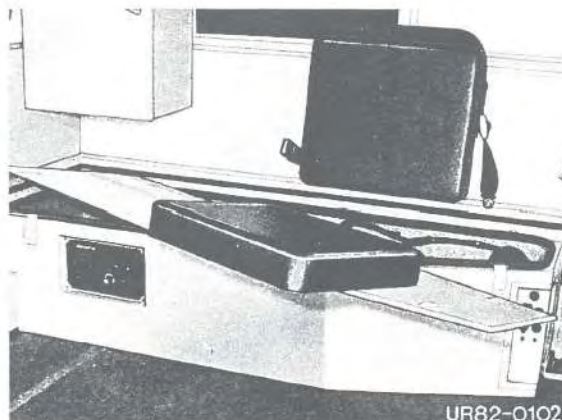

UR82-0102


2 Release battery connections and place to one side.

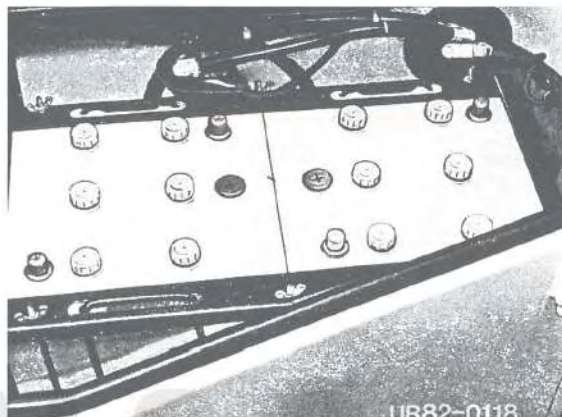

UR82-0118

3 Detach upper mount holding the set of batteries.

**Note:** When removing of the mount do not touch battery terminals. Danger of short circuit!

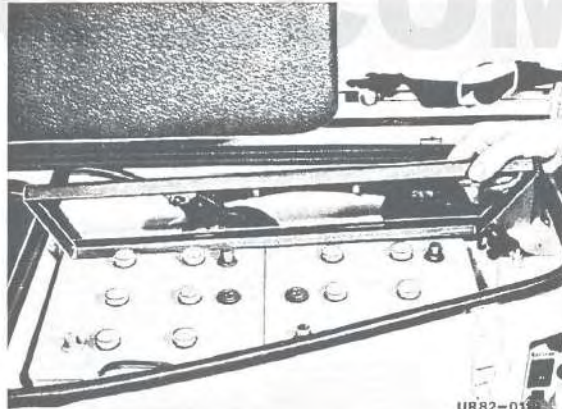

UR82-0119

4 Remove both batteries one after the other from the battery compartment.


5 Install in reverse order of removal.



UR82-0120


**Removal and Installation**

- 1 Remove cover plate.
- 2 Remove auxiliary battery, refer to 2.1/1.

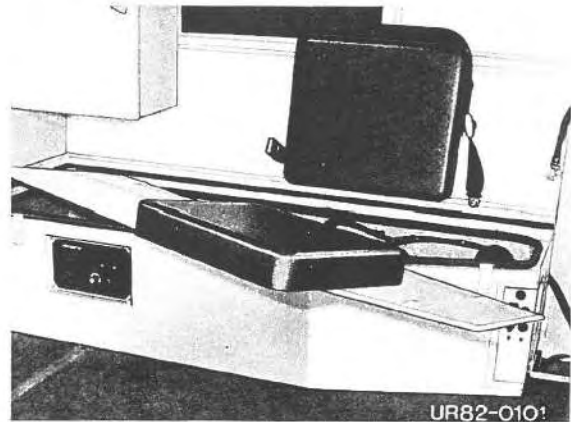


- 3 Pull protective box upwards.

**Note:** Pull forcefully without tilting.

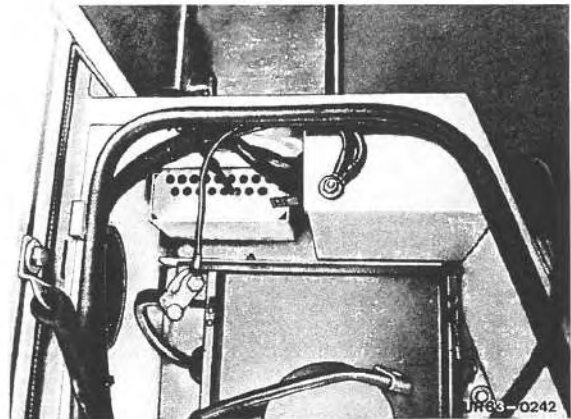


- 4 Remove heat sink with protective diode.
- 5 Remove protective diode from heat sink.

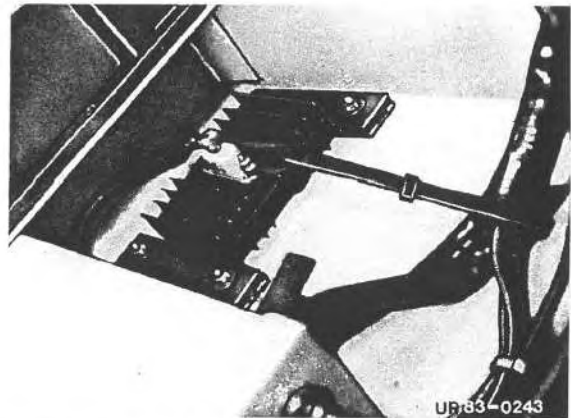

- 6 Install in reverse order of removal.





**Note:** Observe connection of protective diode:  
Connection center: red cable, 4 mm  
Ensure good ground contact.

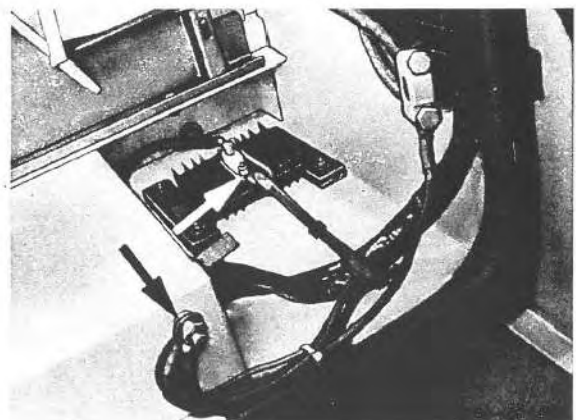



## Removal and Installation


- 1 Remove cover plate.
- 2 Disconnect ( - ) terminal and place battery cable to one side.
- 3 Release screws holding the switch panel and tilt switch panel forwards.
- 4 Unscrew switchover relay from switch panel.
- 5 Detach switchover relay.
- 6 Install in reverse order of removal.
- 7 Carry out functional check.

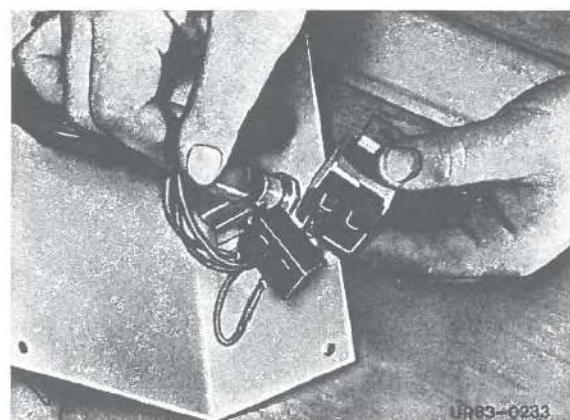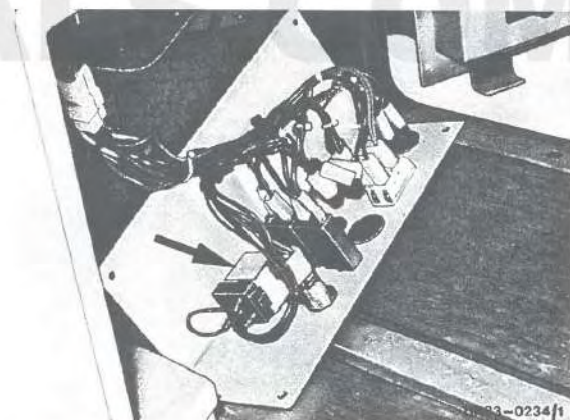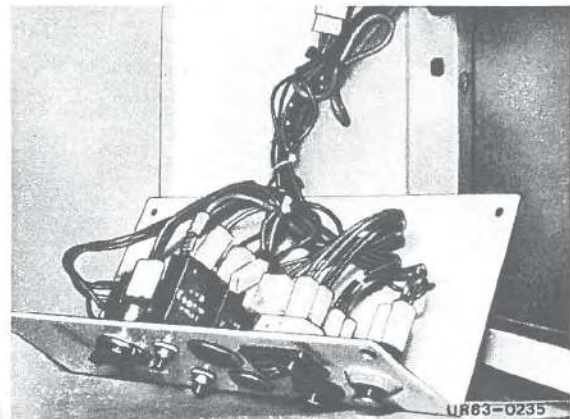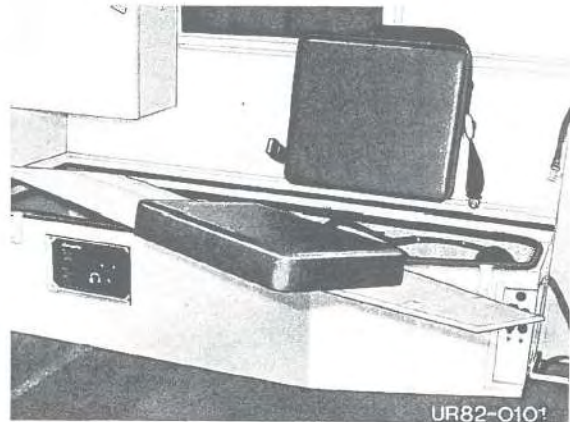




**Removal and Installation**

- 1 Unscrew interior lamp and pull light downward.

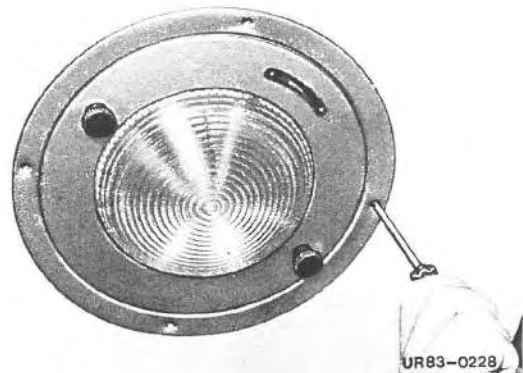


- 2 Disconnect electrical lines for light and remove light.

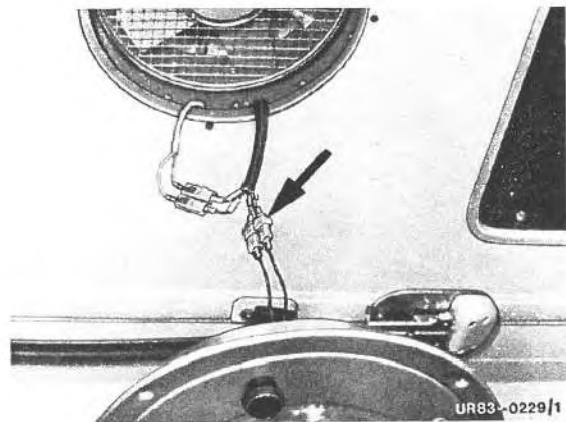

- 3 Remove hexagon nuts M8 on fan securing ring.

**Note:** Hold corresponding screws in place through opened roof hatch.

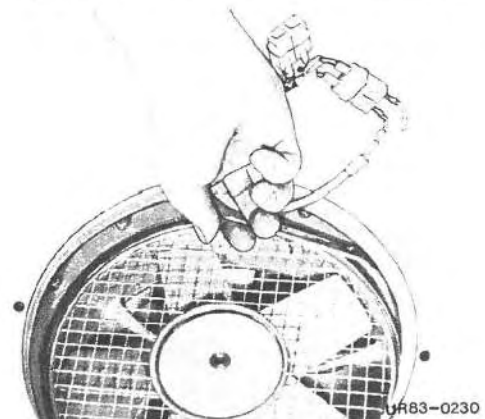

- 4 Lift roof ventilator from outside at the scoop.


**Note:** Pay attention to gasket!



## 82.15 Removal and Installation of Roof Ventilator

---

435.500

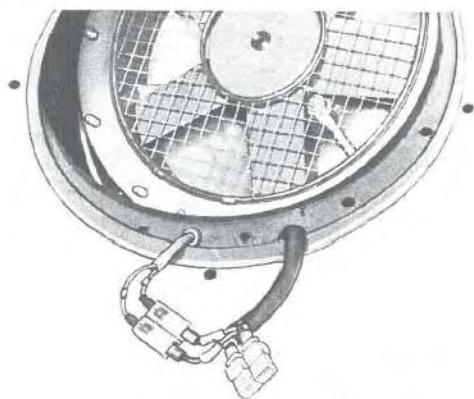

UR83-0231

5 Disconnect electrical line at connection and remove fan.

6 Install in reverse order of removal.


**Note:** Insert gasket of fan coated with adhesive No. 1.

7 Check function of fan and interior lamp.


MBMANUALS.COM

## Renewing


1 Unscrew and remove sensor.

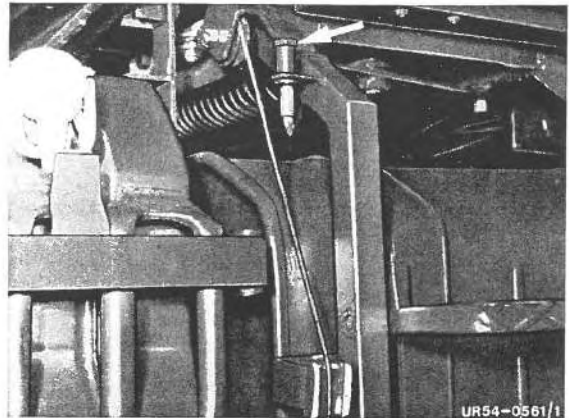


2 Cut off cable clips along the entry frame.

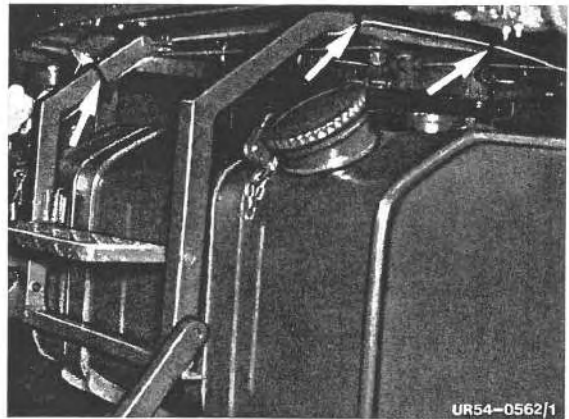

3 Remove cover plate.

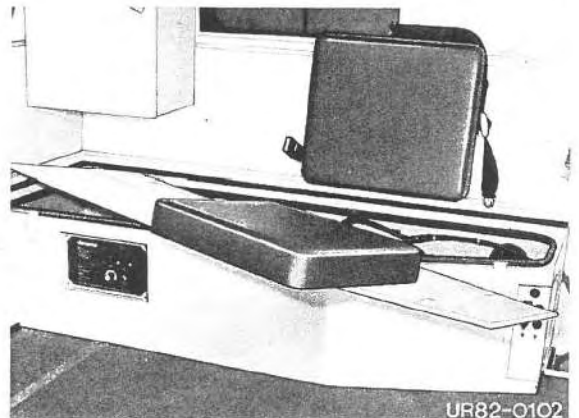


4 Unscrew switch panel.

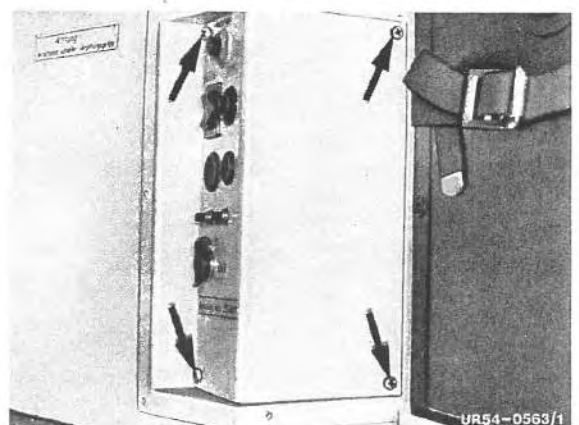


## 82.15 Renewing Induction Sensor (Folding Step)

435.500

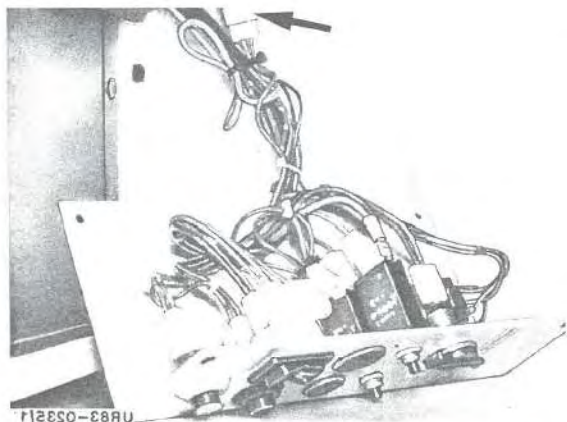

5 Unplug multiple connectors and remove cable from connector housing.

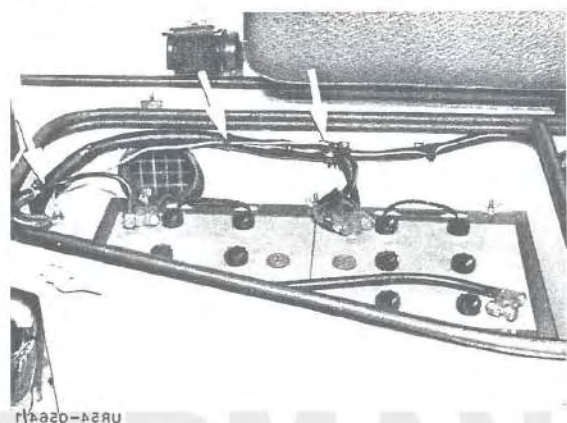

6 Cut off cable clips at the cable harness.

7 Withdraw cable from box body floor from below and remove from vehicle.

8 Install in reverse order of removal.

9 Sensors adjust, refer to 7.1/1.



MBMANUALS.COM

## Adjusting

- 1 When the entrance steps are retracted the indicator light must not light up.

**Note:** The plastic coating of the sensor must not make metal contact with the folding step.





- 2 As a check set a clearance of 0,5 mm between sensor and folding step with feeler gauge.

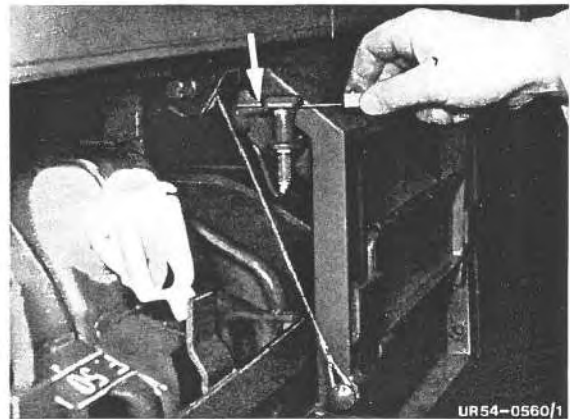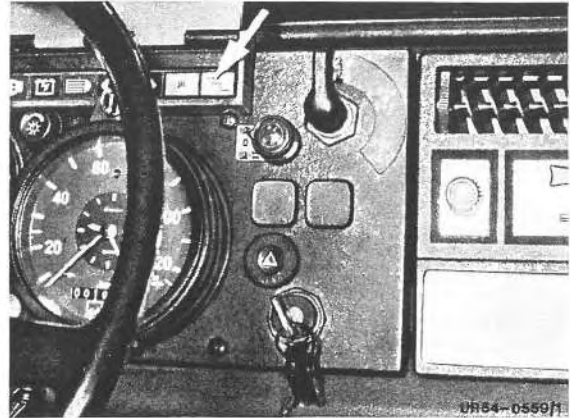



**Renewing**

- 1 Switch off main battery switch.
- 2 Unscrew instrument panel.
- 3 Unscrew light lens.
- 4 Remove operating knobs.
- 5 Unscrew switch and remove by pushing to rear.

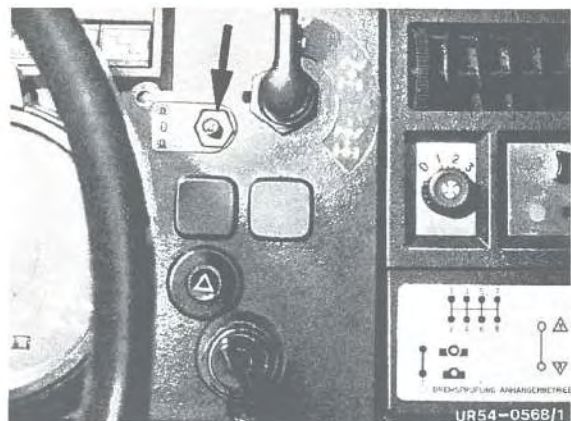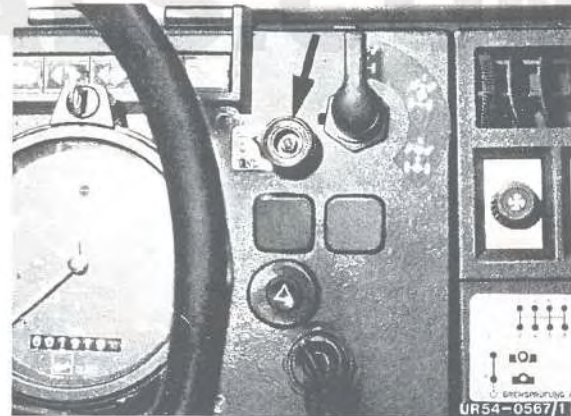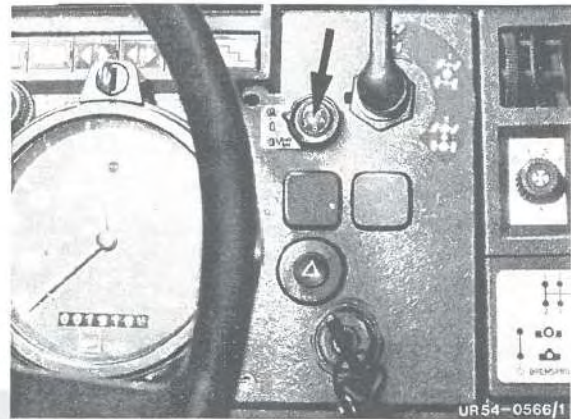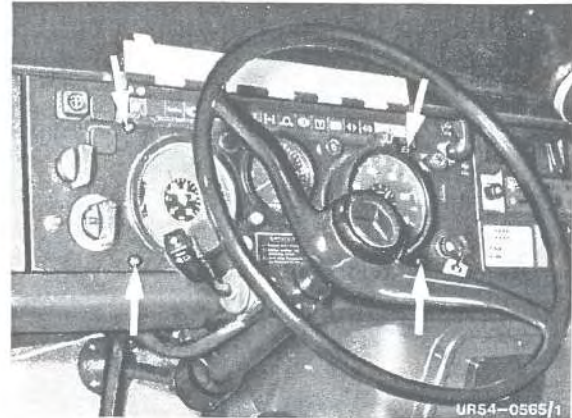




## 82.15 Renewing Alarm Switch

---

SA 35 941

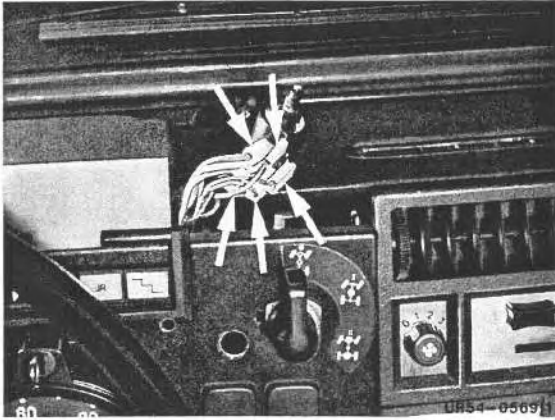

- 6 Mark and remove cable.
- 7 Install in reverse order of removal.
- 8 Check function of alarm switch.

**Survey**

Version

Heating System

**83.3**

Auxiliary heater (Eberspächer V 7 S)

**83.11****MBMANUALS.COM**