




- Loosen the handwheel (2) of the hand pump.
- Pump until slight counter pressure becomes noticeable.
- Unscrew both bleed screws on the main filter one after the other by 1 or 2 turns.
- Pump until the fuel bubbles to the ventilation screws emerge.
- Tighten the vent screws

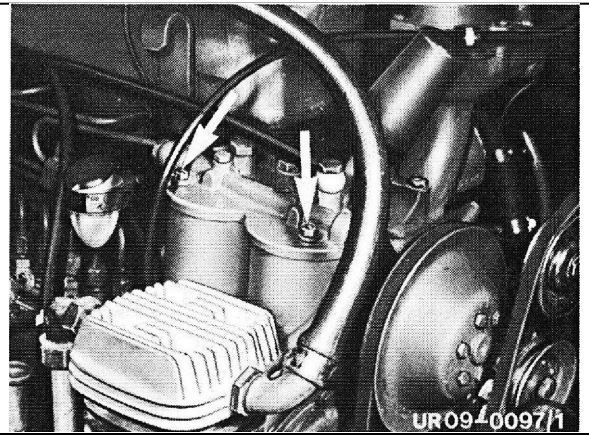


- Bleed screw (1) on injection pump 1 to unscrew 2 turns.
- Pump up until the fuel bubbles out.
- Tighten the bleed screw.
- Screw in handwheel (2) of the hand pump.

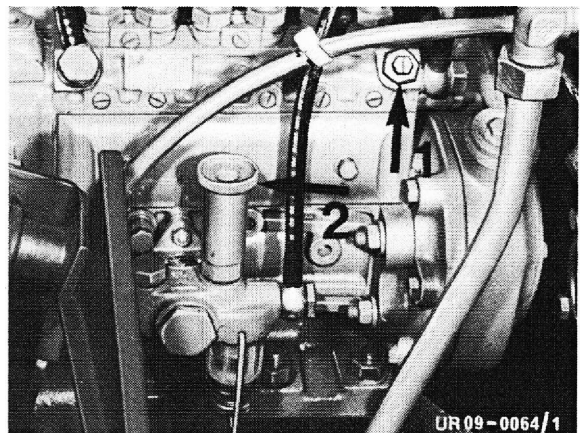


- Turn handwheel (1) counterclockwise.
- Handwheel must open and open under slight pressure let it move down.
- When operating the handwheel, the fuel level in the sight glass (2) must be under your hand-change the pump.

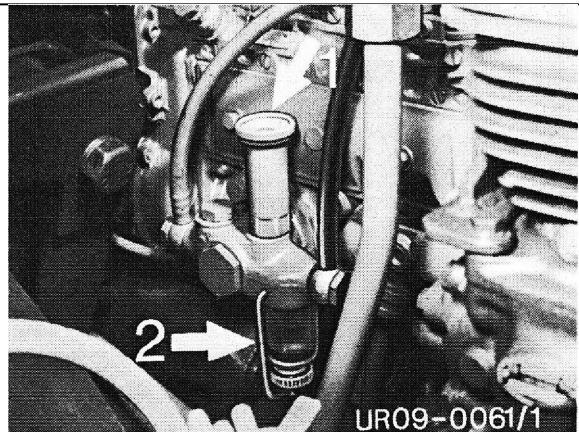


- Loosen the knurled

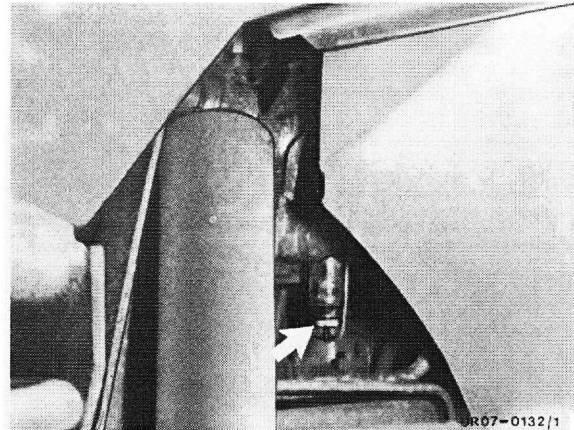


- Push the clamping bracket aside and remove the filter bowl to take.

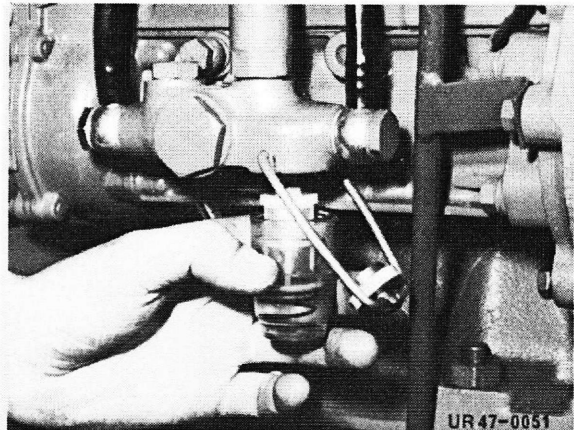


- Remove filter insert.
- Clean the filter bowl and filter

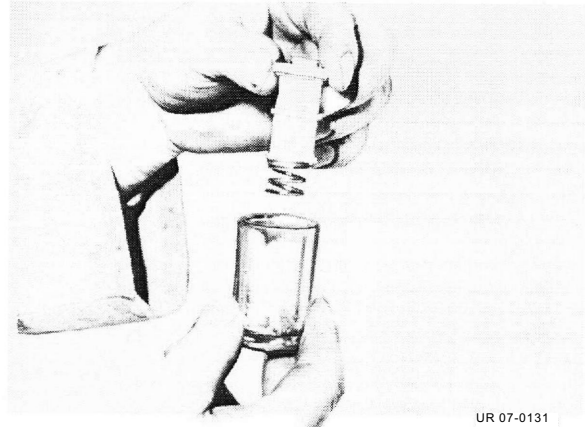

- Renew sealing ring.
- Installation takes place in the reverse order.
- Make sure that the filter bowl is seated correctly.

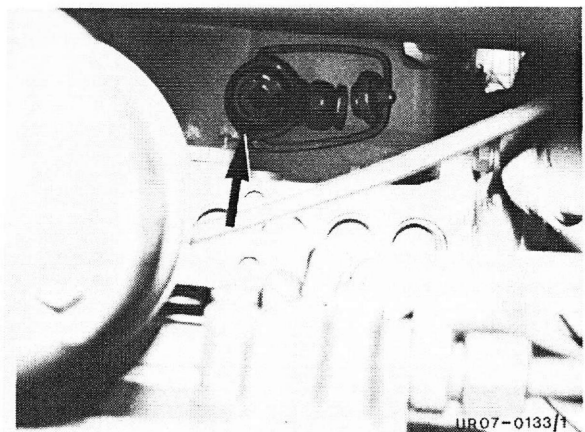

- Raise the bonnet and front panel Remove.
- Unscrew filter pots.

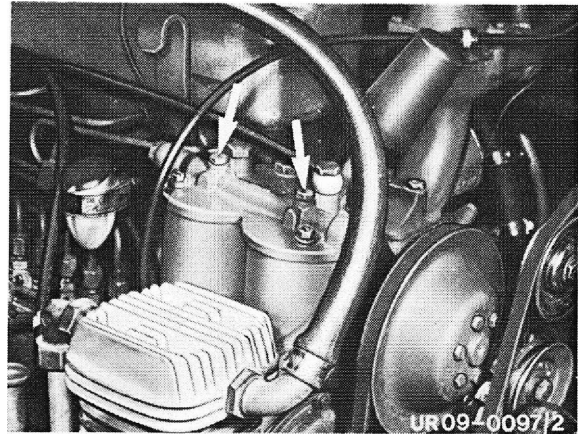


Remove filter pots (2) with filter insert (1).

- Remove filter inserts (1) from filter pots (2) Empty the men and filter pots.

NOTE:

A felt filter insert is installed as a prefilter and a paper filter insert as a fine filter.


- Clean filter pots.

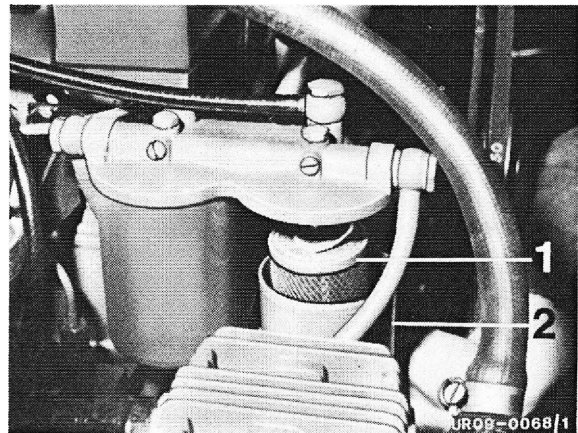


- Close the openings of the felt filter insert and immerse it in a container filled with diesel fuel and let it soak.
- Take out the felt filter insert and use compressed air blow out from the inside.

NOTE:

Repeat the cleaning process several times until the blown diesel fuel is clean. Felt filter insert can no longer be cleaned or is damaged, renew it.

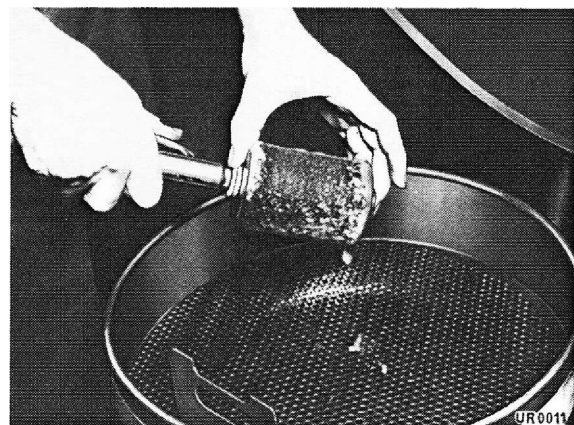


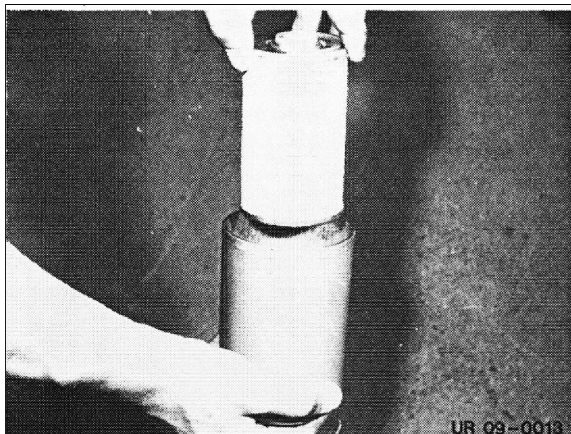

- Insert filter inserts in filter pots.

NOTE:

Always use paper filter and felt filtersRenew kit as needed.

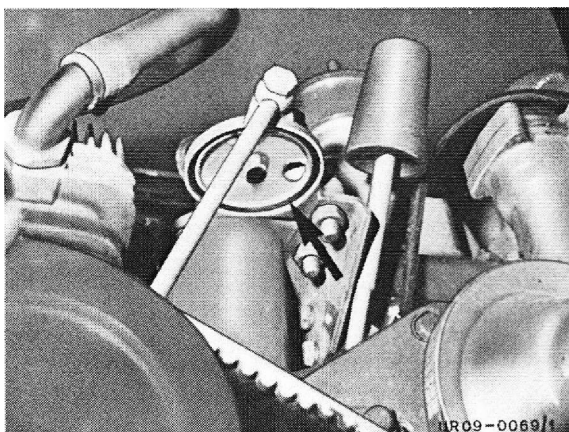

- Replace sealing rings on the filter carrier.
- Installation takes place in the reverse order.
- Bleed the fuel system.