




- Raise the vehicle up to the front wheels axis are free.
- Lubrication points at the top and bottom of both axles clean thighs.
- Lubricate lubrication points until Grease emerges between the kingpin and the kingpin bearing.
- Then lower the vehicle again.

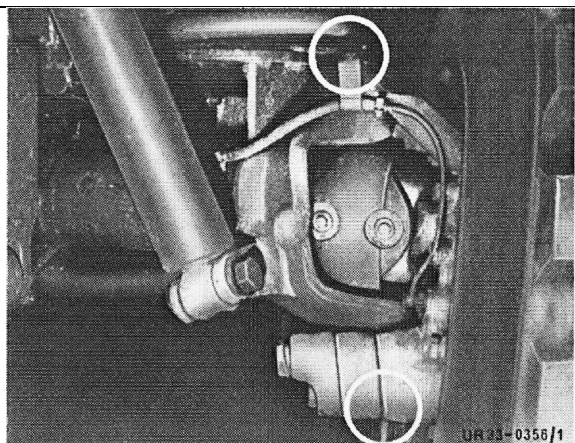

- Oil filler plug on the axle clean and unscrew the housing.

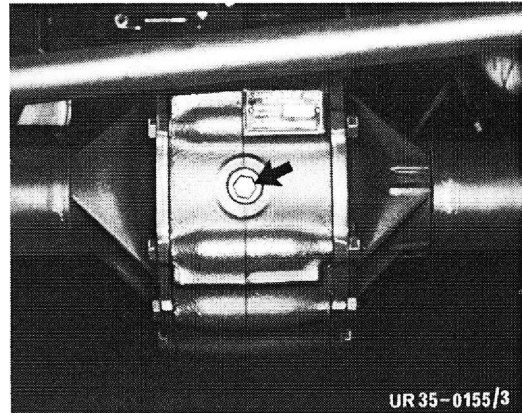

- The higher level oil filler cap Clean and remove the screw on the wheel gear rotate.
- The oil level must be at the bottom edge of the filler opening when the vehicle is horizontal, if necessary top up with oil.
- Clean and screw in the screw plug.

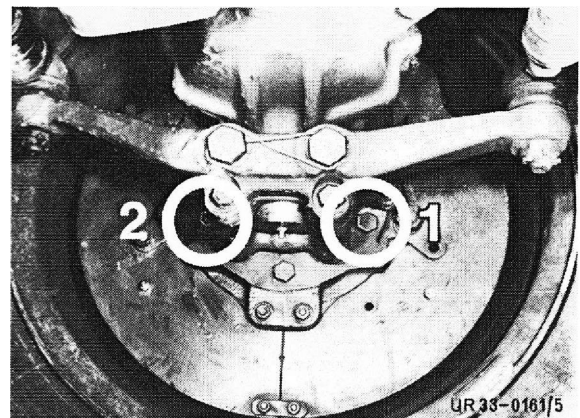

Filling quantity

liter


Drive housing

about 2.5


Gear train

approx. 2 x 0.3



- Oil level check screw on axle clean and unscrew the housing.
- The higher level oil filler cap Clean and unscrew the screw on the gear train ben.
- Clean the oil drain plug on the axle housing, unscrew it and catch any escaping oil gene.

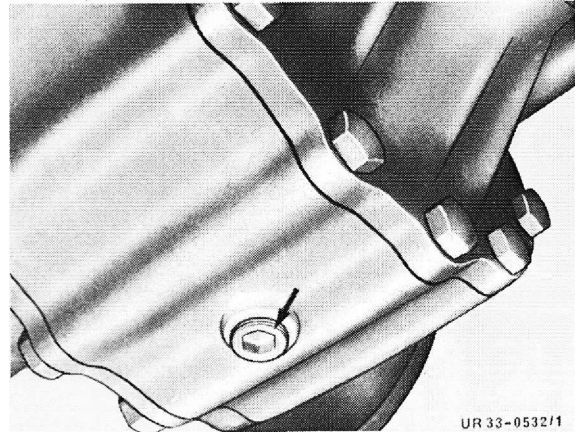

- Clean the oil drain plug on the gear train, unscrew it and catch any oil that leaks out gene.
- Clean the oil drain plugs and screw them back in.
- Pour in oil up to the lower edge of the fill opening.
- Oil level check screw plugs clean and screw in.

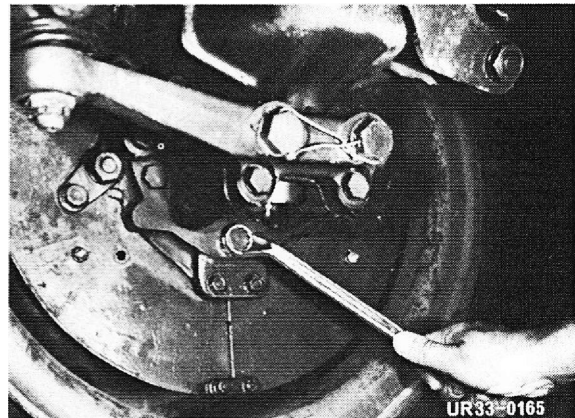


- Check the connection parts for tightness, tighten if necessary.
- Check the connecting pipes and hoses for cracks, breaks and kinks.
- Check the connection hose for correct seating in the fastening clamp.

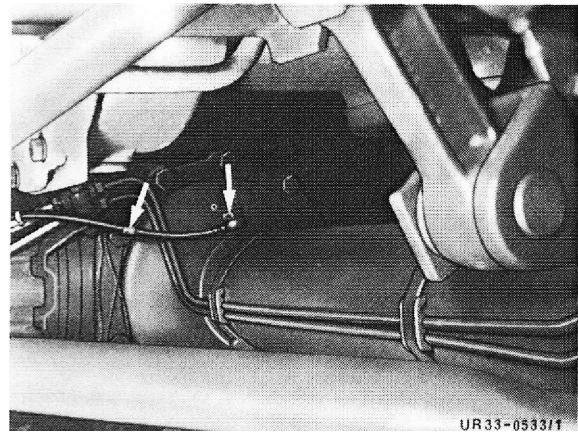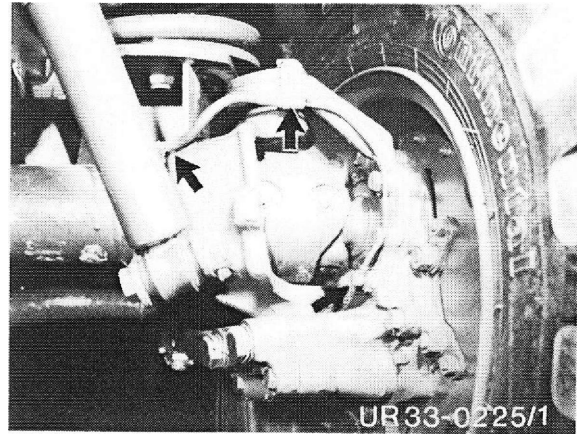


Filling quantity	litre
Corrosion protection oil	0.001


- Switch off the equalization lock.
- Lock screw on axle tube below screw and drain condensed water,
- Start the engine until the supply pressure exceeds 7.0 bar increases.
- Switch the equalization lock off and on several times so that condensed water can escape completely.
- Switch off the engine and screw in the

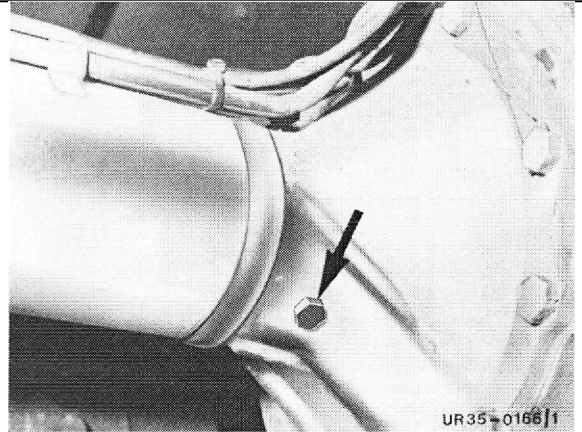

- Unscrew the compressed air line at the top of the axle tube.

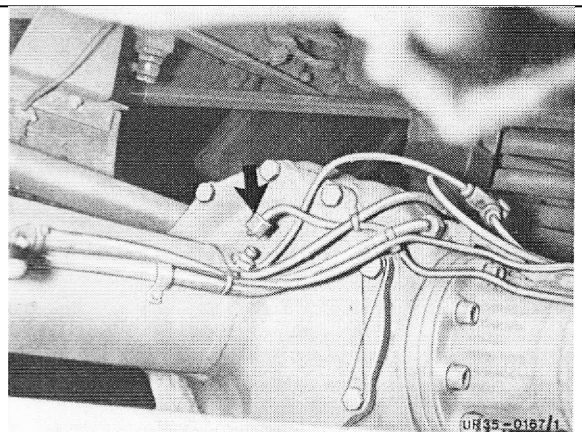


- Pour anti-corrosion oil through the connecting piece into the axle tube.
- Screw the compressed air line back onto the axle tube.
- Differential gear lock for tightness and radiocheck

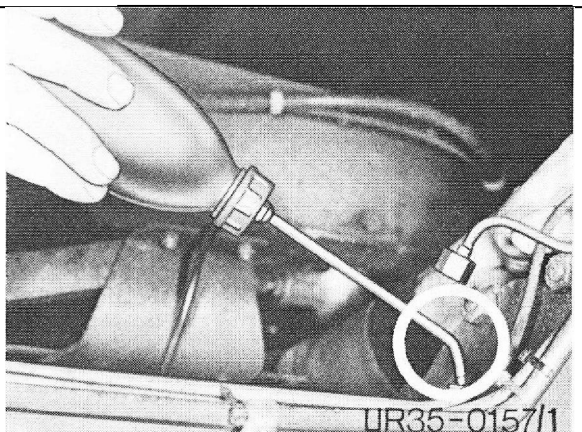


Tightening torque	Nm	kpm
Axle strut on axle tube	350	35
Axle strut on push tube	90	9
Wheel hub attachment	320 ± 20	32 +2nd

- Check the axle struts on the axle tube for tightness, tighten if necessary

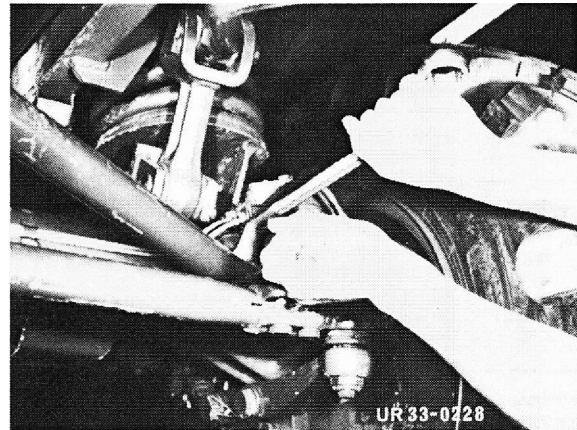

- Check the axle struts on the push tube for tightness, tighten if necessary.

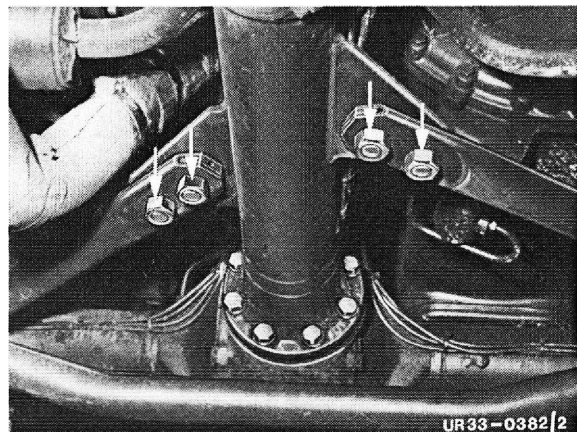

- Wheel hub fastening screws on the front and rear axle for tightness, tighten if necessary.
- Note the tightening torque.

