




- Check exhaust pipe on exhaust manifold for tightnessfen, tighten if necessary.

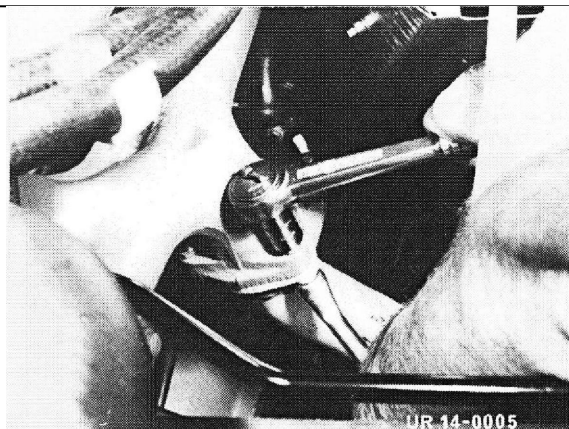

- Check the front exhaust cup suspension for tightness, tighten if necessary.

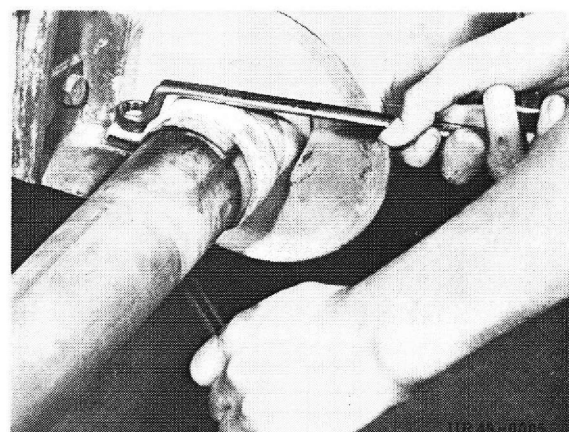

- Check the pipe clamp on the exhaust pipe for tightnessfen, tighten if necessary.

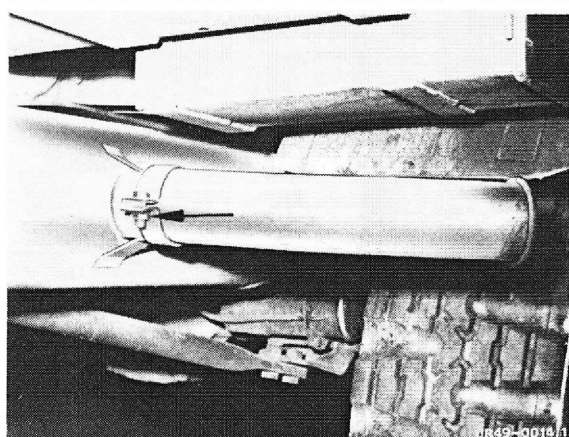

- Check exhaust gas hanger rear for tightnessfen, tighten if necessary.

