


Lubricate the door catcher


- Clean the door catcher and smear it with grease-chen.
- Operate the door several times.

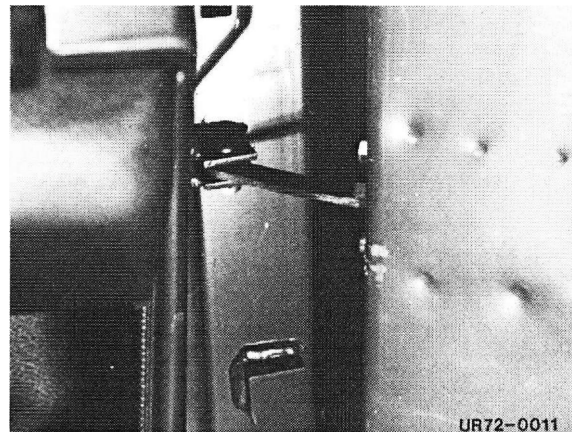

UR72-0011

Lubricate the door lock with the locking plate


- Clean the locking eye and locking plate and with Brush in grease.
- Operate the door several times.

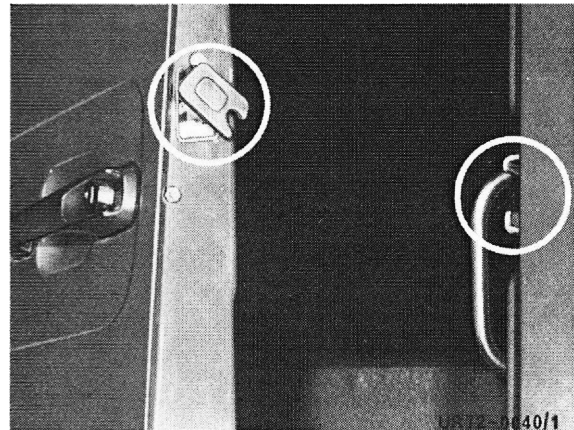

UR72-0040/1


Lubricate the driver seat guide rails

- Reset driver's seat.
- Clean the guide rails and use grease stroke.
- Move the driver's seat back and forth several times and check the smoothness of the seat adjustment.

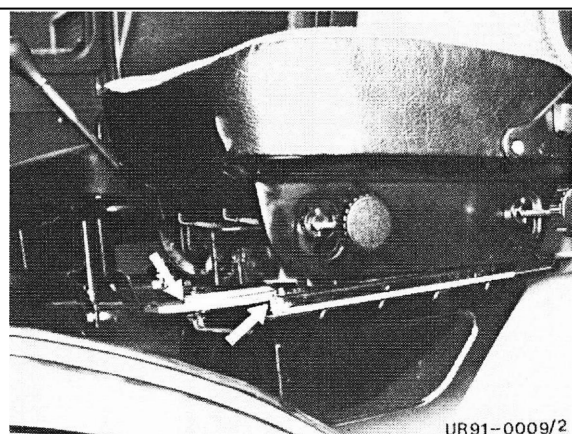


UR91-0009/2

- Remove bonnet.
- Remove front panel.
- Clean lubrication points.
- Lubricate bolt locks.
- Press bolt locks several times and go into gear-
Check availability.
- Bonnet and front panel back onto build.

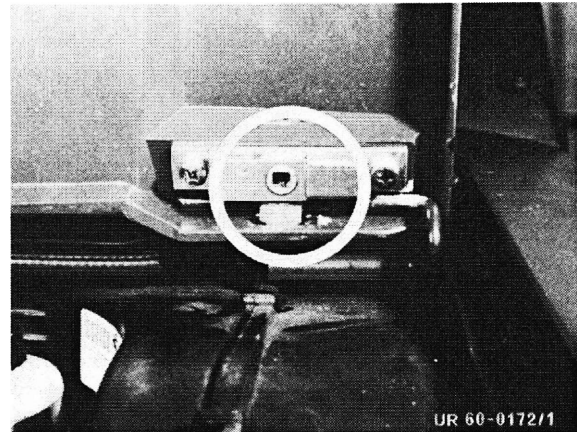


Tightening torque	Nm	kpm
Front cab suspension bearing	46	4.6

- Brackets on the left and right of the frame on tight fit check, tighten if necessary.
Note the tightening torque.

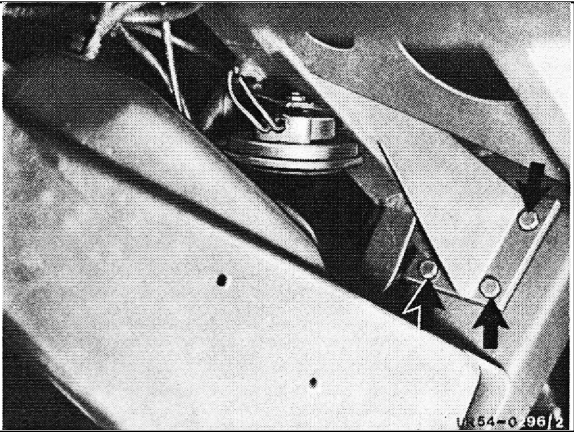


- Check the cab tilt bearing on the front left and right on the bracket for tightness, tighten if

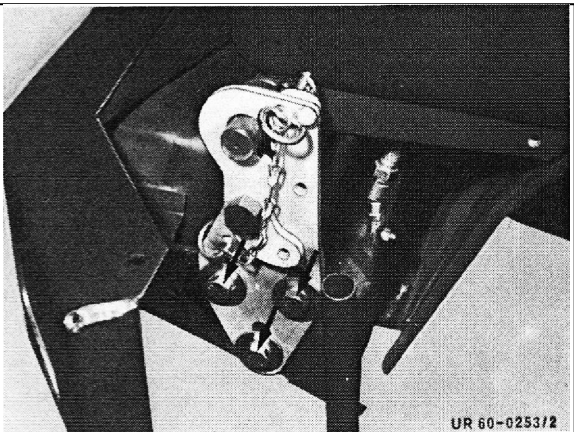


Tightening torque	Nm	(kpm)
Fastening screw on the cab mount	195	19.5

- Check the driver's cab in the footwell on the left and right for tightness, tighten if necessary.

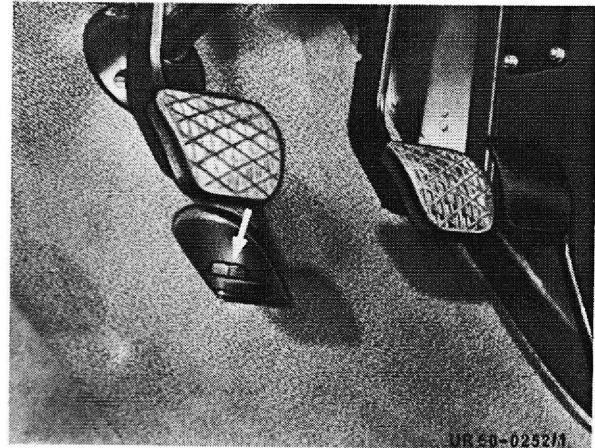


- Check the cab under the driver and front passenger seat for tightness, tighten if necessary.

Note the tightening torque.

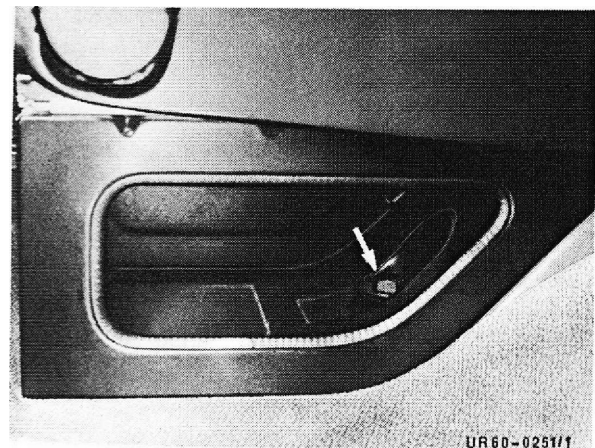


Tightening torques	Nm	kpm
Straps at the front and back of the frame	115	11.5
Carrier on platform base	160	16
Bearing shell on frame	110	11

- Check the crossmember of the platform bearing at the front left and right for tightness, tighten if necessary.

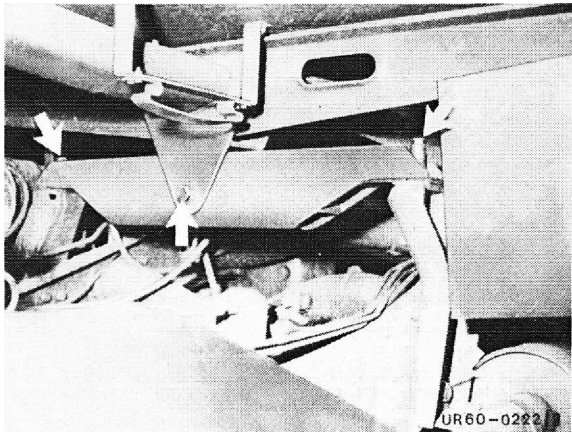


- Bearing cups from platform storage in the middle of a partycheck fit, tighten if necessary.

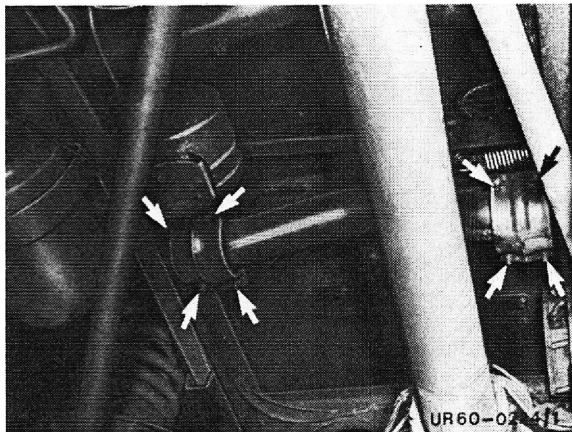

- Check the crossmember of the platform bearing at the rear left and right for tightness, tighten if necessary.

Note tightening torques

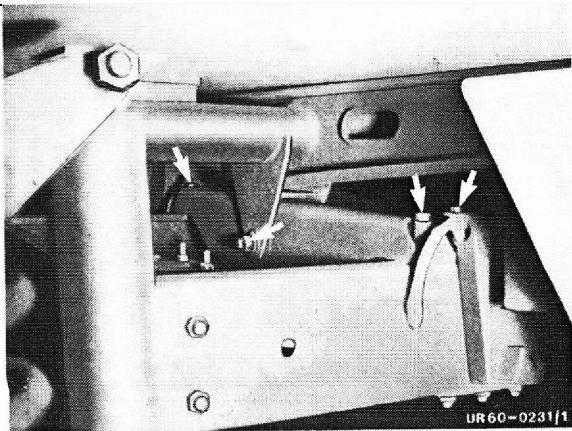




Tightening torque	Nm	kpm
Fastening screw on the cab mount	195	19.5


Special tools

Hydraulic lifting device	435589 01 6300
Safety support	435589 00 6300

Superscript


- Switch on 6th gear.,
- Remove bonnet and front trim,
- Remove suction hose.
- Pull the heating hoses out of the holder.
- Remove screws in the footwell on the left and rightscrew.

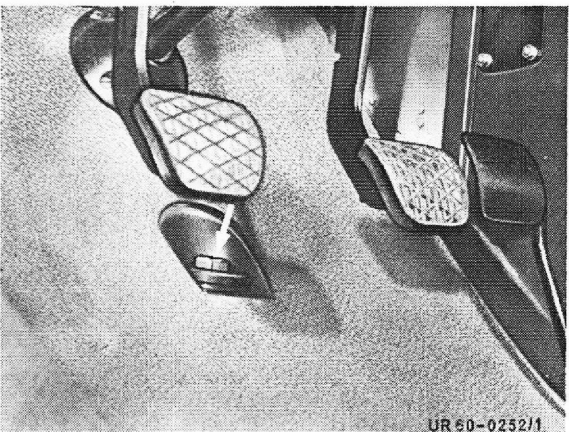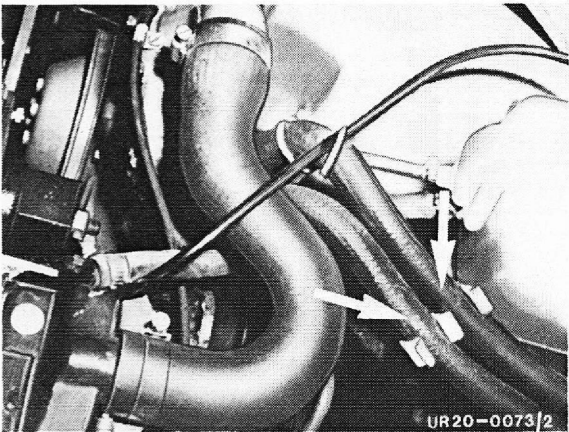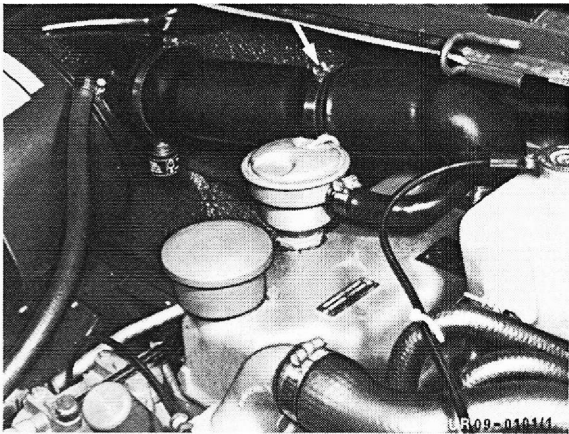

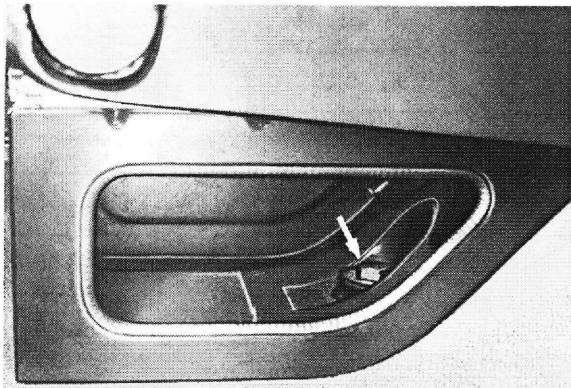


UR 60-0251/1

- Screws under the driver and front passenger seats unscrew.

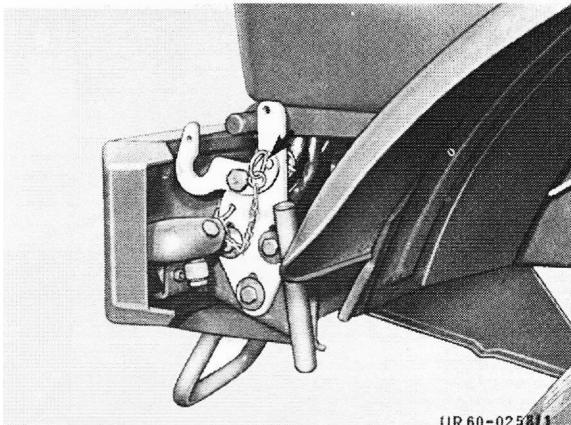


UR 60-025311

- Unlock pins on left and right rocker bearings and lose weight.

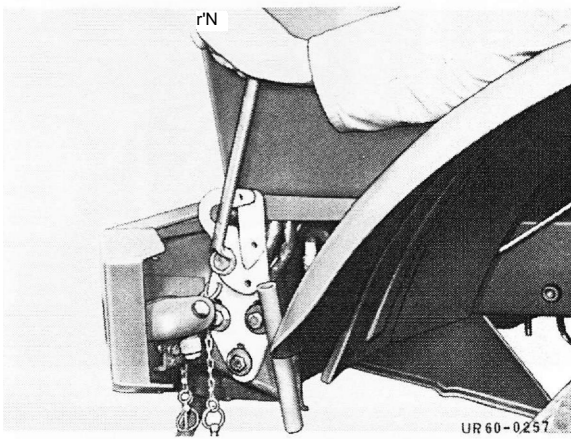

UR 60-0257

- Close the tilt

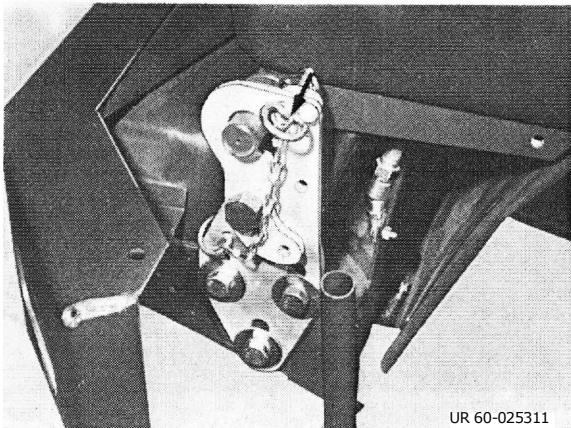

UR 60-025311

- Insert and secure the locking pin.

- Cylinder behind the left front wheel in upInsert the bearing on the cab floor and secure it with bearing bolts.

NOTE


The connection point for the hydraulic hose must point downwards.




- Piston rod in bearing pin on the left step insert and secure.


NOTE

If the piston rod cannot be used, it can be used entirely drive in.

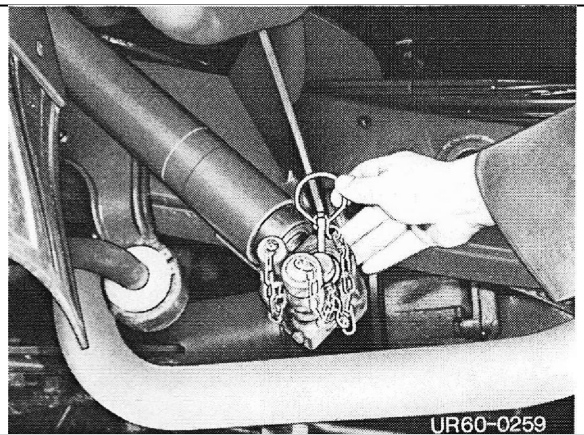

- Attach the hydraulic pump to the left ascent.

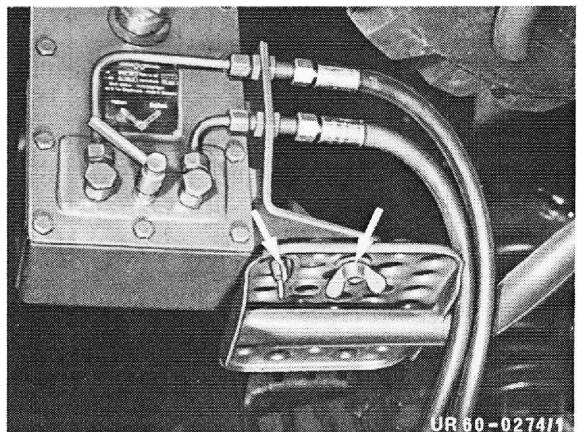

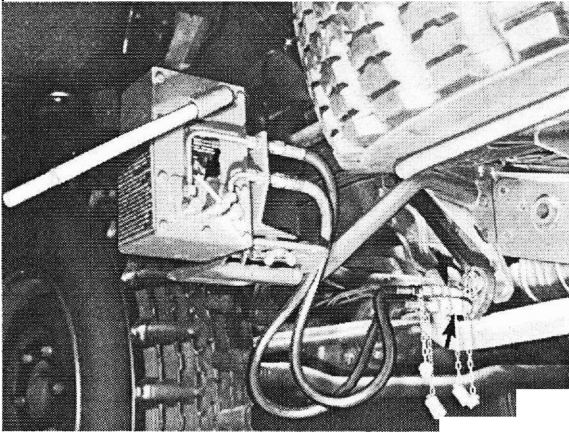


- Connect the hydraulic hoses to the cylinder and move the control lever to the "lift" position.



- Operate the hydraulic pump with the pipe until the driverhouse is upstairs.


CAUTION

While the cab is being raised, people must stay in front of the cab or prohibited under the vehicle.

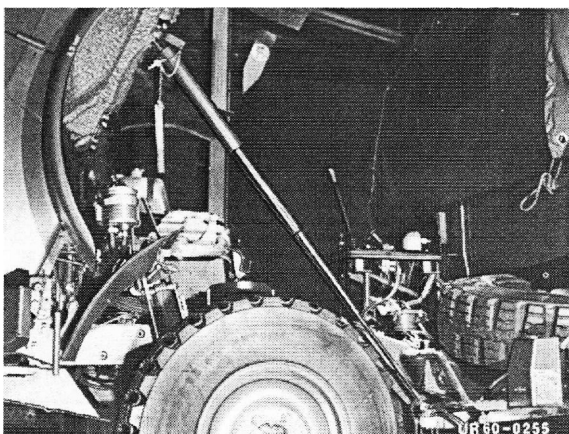


- Cab is raised.

- Screw the safety support to the cab mounting on the right, and the cab back a littleput.

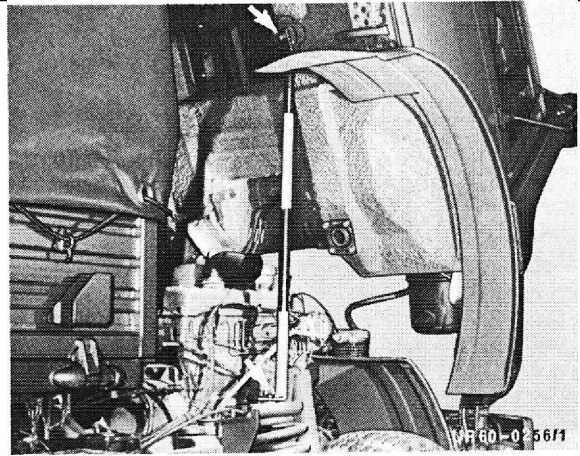



Defer

- Move the control lever to the "lower" position.
- Operate hydraulic pump with pipe until safes relieved and unscrewed can.

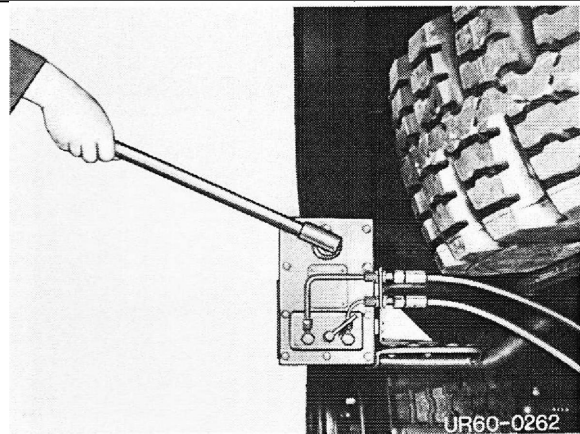

- Reset the cab until the 2nd and 3rd stages of the piston rod are retracted.

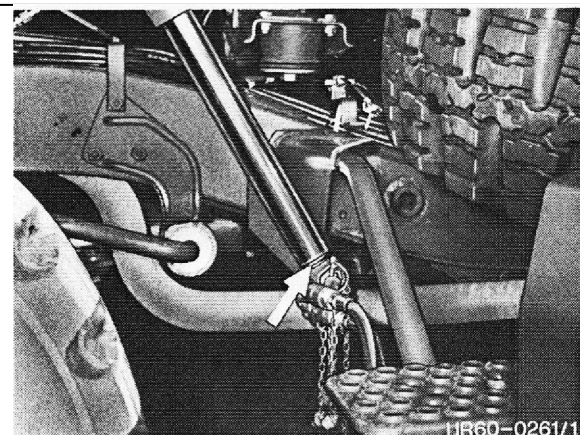


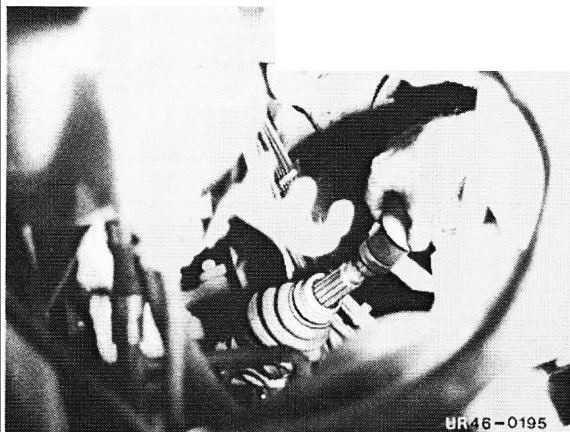


- From **front** lower steering shaft in sliding piece to lead.

NOTE

There is a center punch on the sliding piece, which must match the recess on the steering shaft profile.

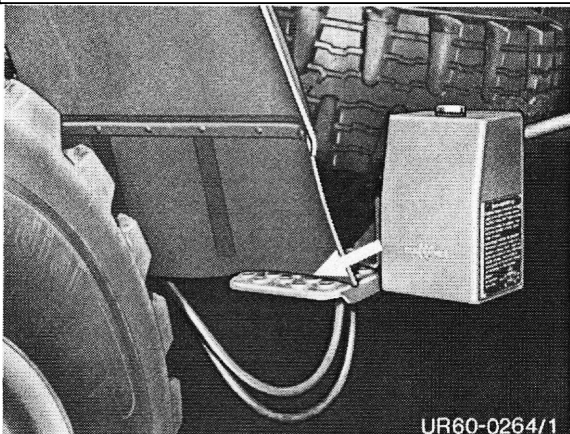

- Heater hoses on coolantExpansion tank and air intake hose on freecheck commonality.
- Lower the cab further until spray ridges slightly rise on the left and right ascents.
- Push the splash cloth forward and the driver-drain the house completely.

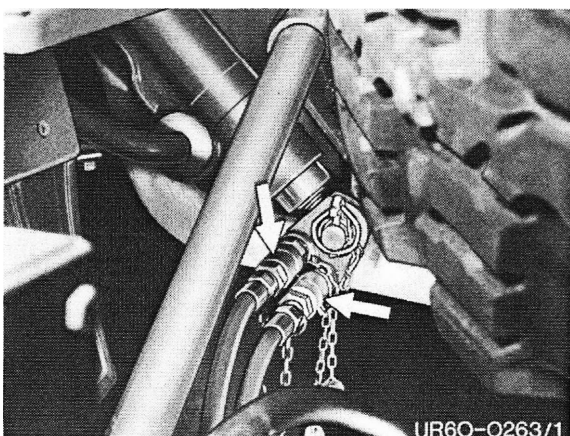


- Disconnect hydraulic hoses from cylinders.
- Remove hydraulic cylinder and pump.
- Fastening screws to the cab mountscrew.
- Unlock cab tilt bearing.
- Attach the air intake hose.
- On the correct seat of the lower steering spindle-pay attention.
- Install the front cover and bonnet.


If the cab lifting device has to be used for several vehicles, the lifting device can be removed after installing the safety supportbe built.


Expansion:

- Move the control lever to the »Lower-position.
- Operate hydraulic pump with pipe until bearing-bolt can be removed.
- Unlock and remove bearing pin.

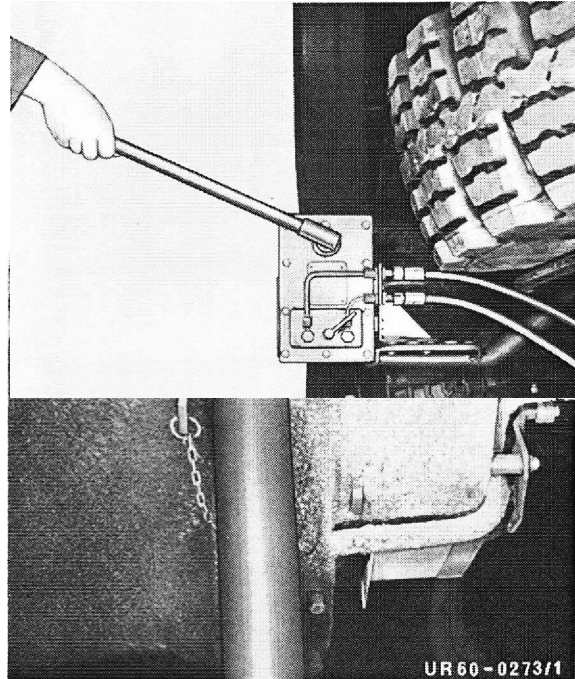


- Hold the cylinder at the top and load the hydraulic pump until the thin piston rod (3rd stage) is retracted.

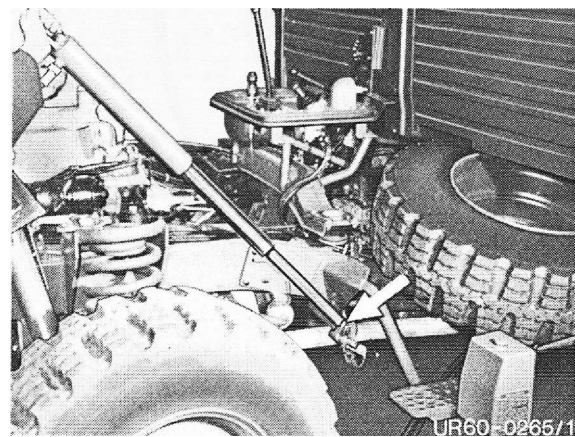


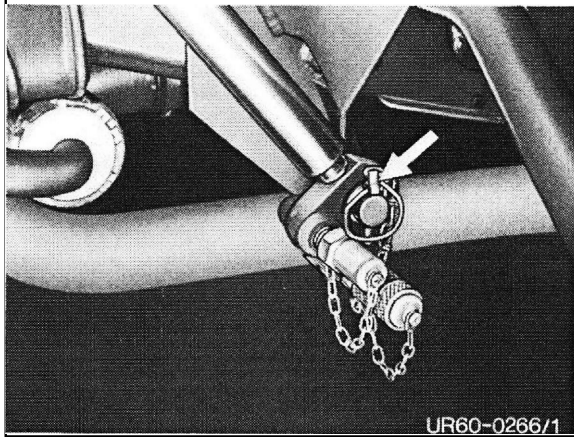

- Disconnect both hydraulic hoses on the cylinder- and dust caps.
- Then unlock the piston rod and Zytake it off the vehicle more easily.

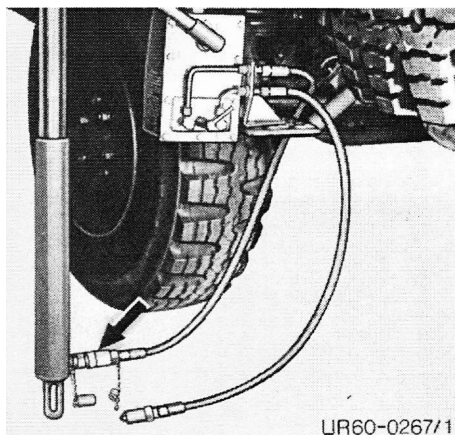


- Place the cylinder on the floor and connect the hydraulic hose.

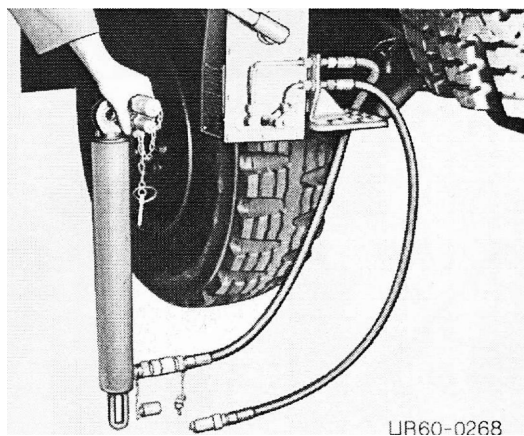

- Piston rod by hand **all** push in. The control lever on the pump must be in position "Lower" stand.
- Disconnect the hydraulic hose.

- Remove the hydraulic pump on the left ascent.

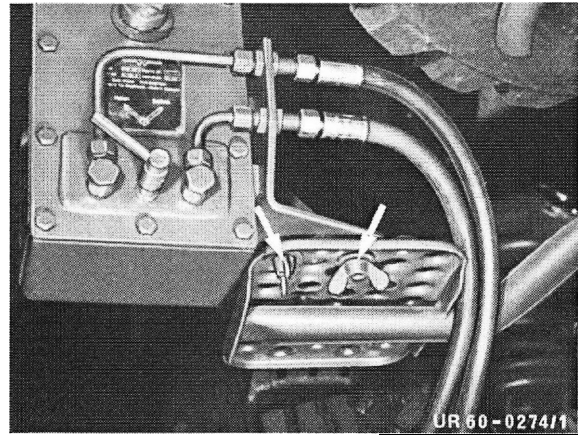

Installation


- Hydraulic pump on the left ascent and cylinder Attach to the ascending bearing.
- Connect hydraulic hoses.
- Pump up the cylinder

Danger: If the cylinder is pulled out and not pumped up, there is a risk of accident.




- Cylinder on the cab bearing with the connector for the hydraulic hose pointing downwardsto lead.


Insert and secure the bearing pin.

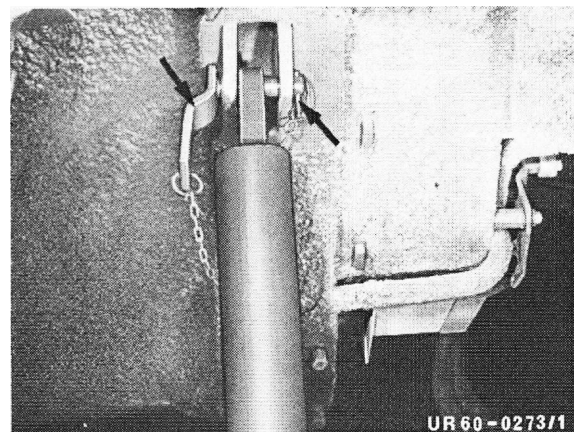



- Dry voids.
- Close and tape door panes.

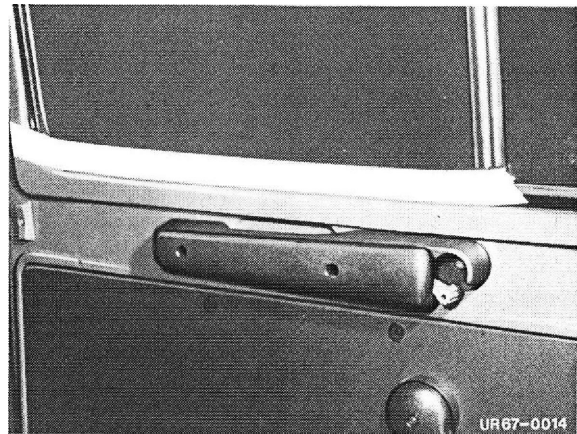



- Make sprayer ready and spray. Check the image of the spray nozzle, if necessary spray nozzle clean with white spirit.
- Matching metal pipe (bundy or copper pipe) via spray for better guidance of the spray nozzle. Push the hose. Nozzle must come out of the pipewatch.

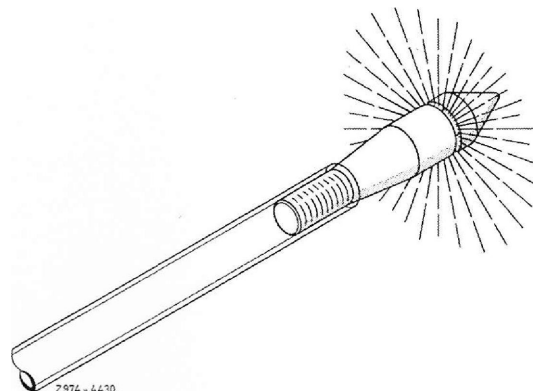


- Completely in accordance with preservation plan UKD 30 440 4301 spray hose into water drain holes on doors, wheel arch and driver's corner pillar to lead.
- Slowly pull the spray hose out of the cavities during the spraying process.
- After spraying, check if what drain holes are free.

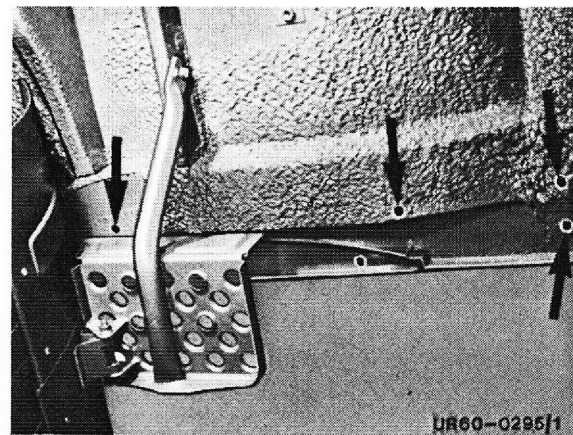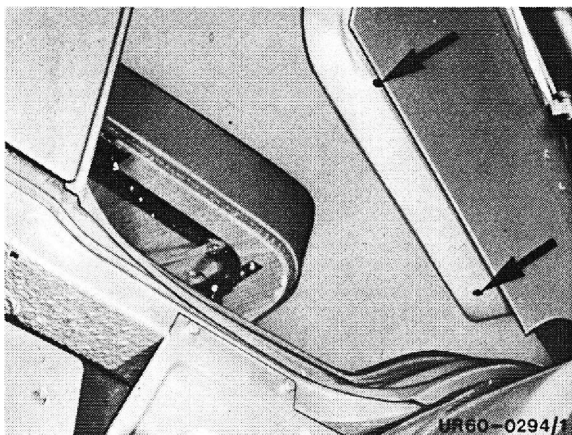

3

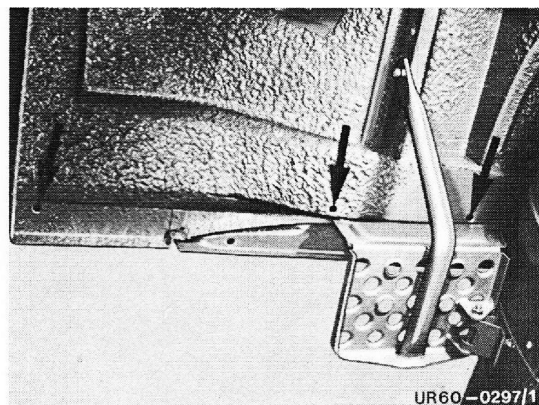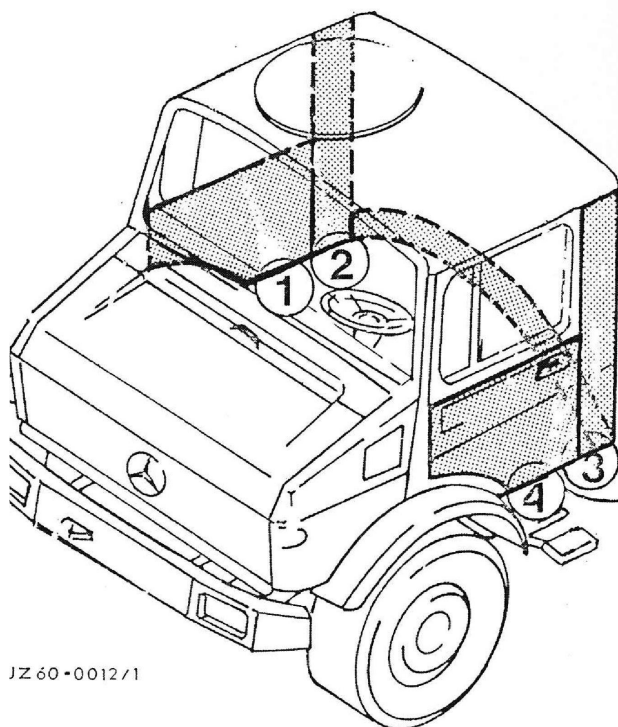

3

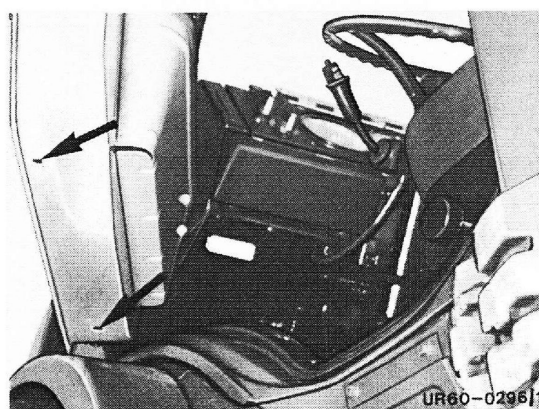

Daimler-Benz Aktiengesellschaft Stuttgart-Untertürkheim /
Gaggenau plant UKD 30 440 43 01