

Survey

Version

Main transmission 717.901/900

26.13

Special drive

Pto transmission 540/1000/min

26.20


Pto transmission 540/min:

26.23


Special drive $i = 1$ **26.25**

Special drive $i = 0.71$ **26.26**

Cooling cycle

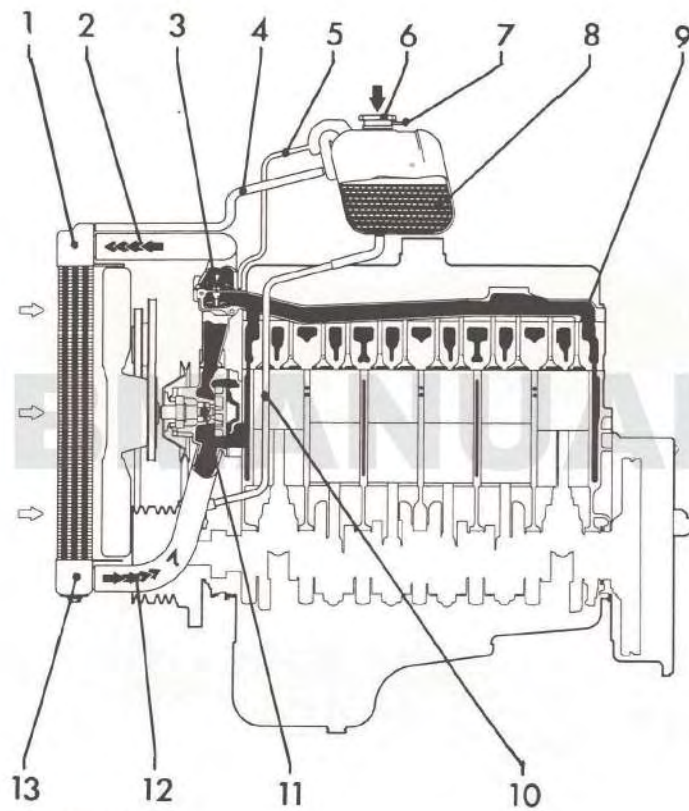

- 1 Radiator
- 2 Return line
- 3 Thermostat
- 4 Venting line, radiator
- 5 Venting line, engine
- 6 Cap
- 7 Overflow line
- 8 Expansion tank
- 9 Cooling jacket/engine
- 10 Filler line
- 11 Coolant pump
- 12 Forward line
- 13 Fan

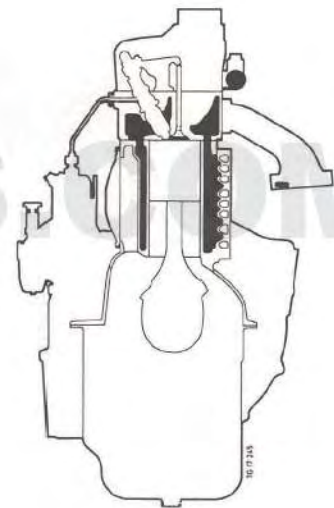

UZ 20-0005

Capacities

Assembly		Service product (Sheet No. of MB service product specifications)	Capacity (l)
Cooling system	with heat	Coolant ¹⁾ (325)	20
	Frost protection to - 25° C - 13° F (Standard filling)	Antifreeze (325)	8
	Frost protection to - 40° C - 40° F	Antifreeze (325)	10,2
	and corrosion protection	Treating agent	0,2

1) Comprising water, antifreeze and treating agent

Test Values**End Cover- Coolant Expansion Tank**

Comb. overpressure and vacuum valve	opens in overpressure	bar	0,7 ± 0,1
	opens at vacuum	bar	0,1
Leakage check of cooling system		bar	1,0
Operating temperature, engine		° C	95

Coolant regulator element

Installation		Series	SA 16 074 (Tropics)
Start of opening	° C	83 ± 2	71 ± 2
Main valve	Stroke	mm	8
	Fully open	° C	95 85
Bypass valve	Stroke	mm	6 to 7,5
	Closed	° C	92
Water leakage of main valve at 1 bar and 20° C		l/ min	0,67 up to 1,17
Max. flow volume with main valve fully opened and at a pressure of 1 bar		l/ min	333

Special tools

Cons. No.	Designation	Special tool	Tool set
1	Pressure test pump	001 589 48 21 00	B
2	Cap for checking of the cooling system with tool No. 1	605 589 00 25 00	B

Tightening Torques

Designation	Thread	Nm
Coolant pump to crankcase	M 10	50
Coolant pump, coolant line	M 8	30
Cover on coolant regulator housing	M 6	10 to 15

Removal

1 Detach engine hood outside and remove front panel.

2 Drain coolant at radiator.

Note: Drain some coolant at drain plug of radiator.

3 Detach V-belt from intermediate fan drive, referring to 13.14–2.1/1.

4 Detach V-belt from coolant pump/generator, referring to 13.14–2.6/1.




5 Unscrew thermostat body from coolant pump.


6 Detach pulley.

7 Detach connecting pipe and coolant hose from coolant pump. Remove seal and clean sealing surface.

8 Detach coolant pump, cleaning sealing surface of crankcase and coolant pump.


9 Clean and check all parts exchanging if necessary.

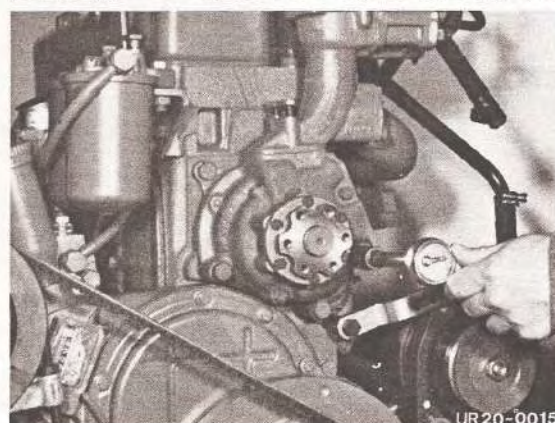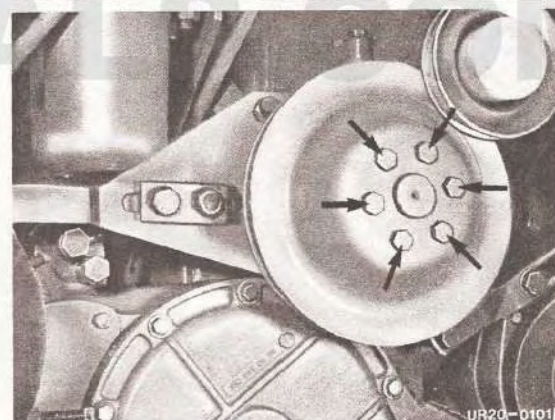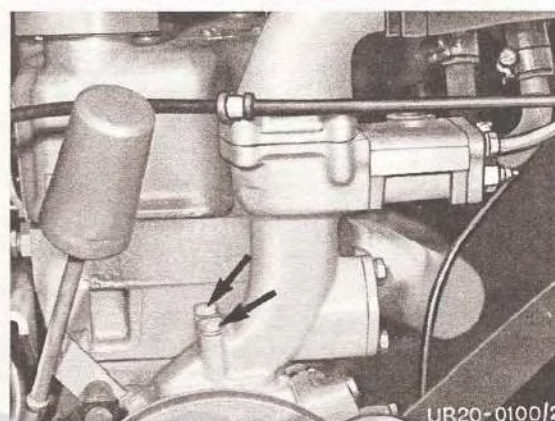

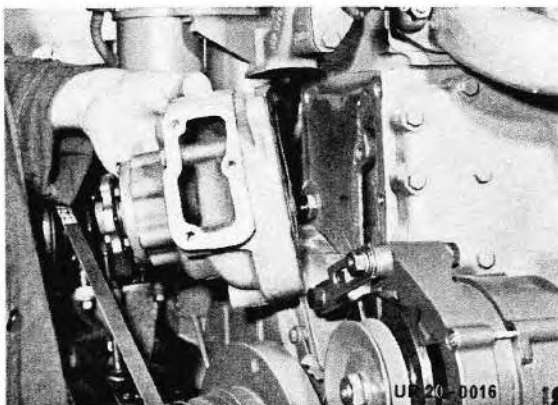


Installation


1 Attach coolant pump to crankcase with new gasket, tightening with reference to 1.2/1 for tightening torque.

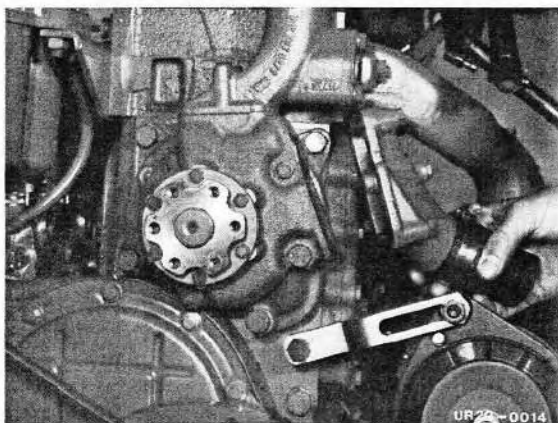

2 Attach connecting pipe to coolant pump with new gasket, tightening with reference to 1.2/1 for tightening torque.

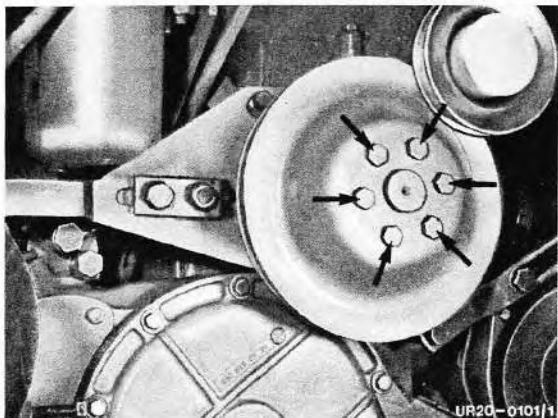

3 Attach pulley.

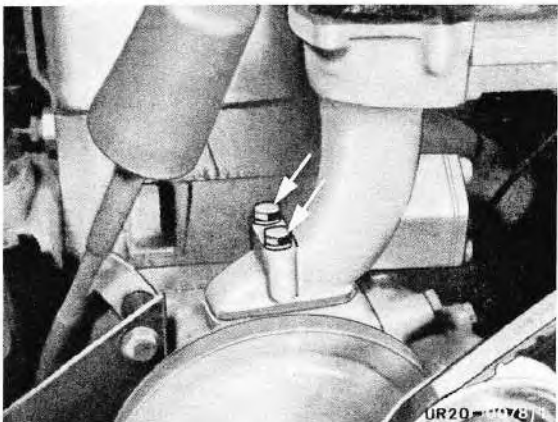

4 Attach thermostat body to coolant pump with new gasket.


5 Attach V-belt to coolant pump/generator, referring to 13.14–2.6/1.

6 Attach V-belt to intermediate fan drive, referring to 13.14–2.1/1.

7 Fill system with coolant, referring to 1.2/1 for quantity.

8 Attach front panel and engine hood outside.

Exploded view

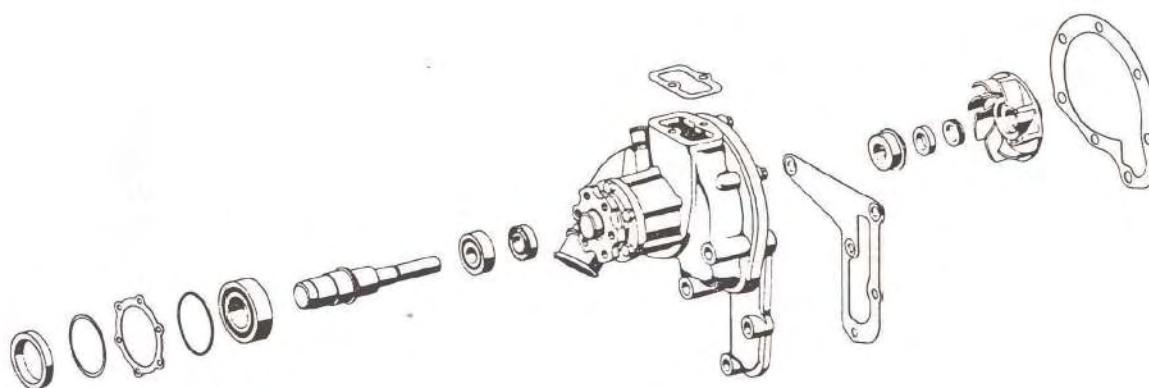


MBMANUALS.COM

UZ 20 - 0006

Coolant pump


Removal

- 1 Prop up engine hood outside and detach front panel.
- 2 Drain a certain amount of coolant off.
- 3 Unscrew cover and remove with cover seal.

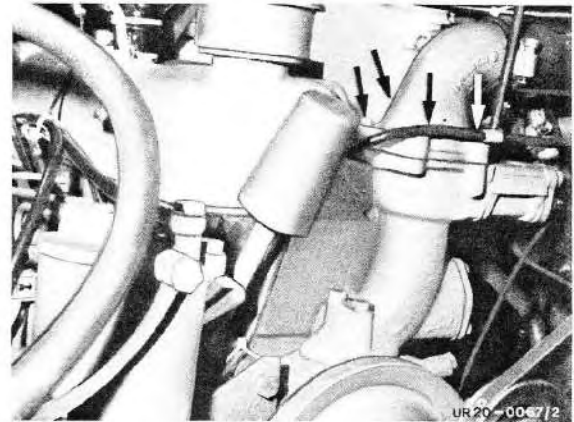


- 4 Take out thermostat element.
- 5 Check thermostat element for correct operation, referring to table on page 1.1/2.

Note: It is not possible to repair thermostat element. Exchange any thermostat element that is unserviceable.

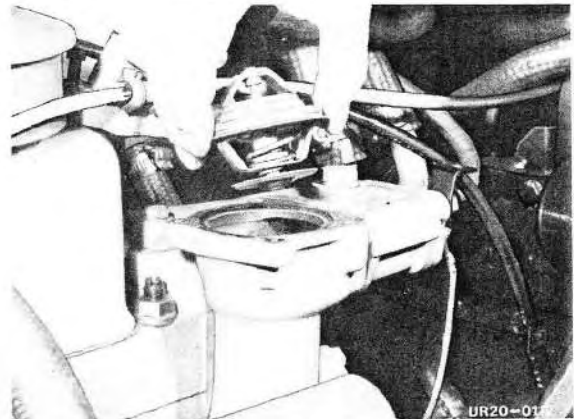





Installation

- 1 Clean sealing surface.
- 2 Fit thermostat element.
- 3 Attach cover with new seal.
- 4 Correct coolant level.
- 5 Attach front panel and close engine hood outside.




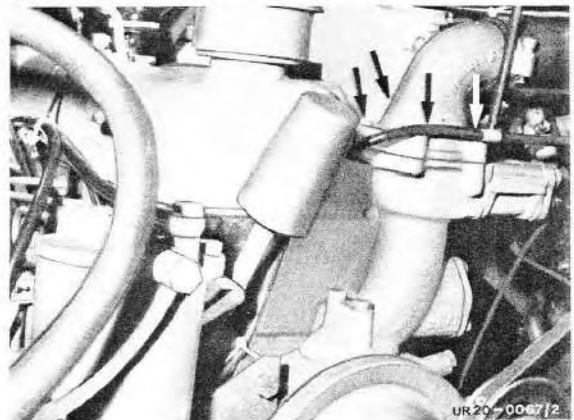


Removal

- 1 Detach front panel and engine hood outside.
- 2 Drain coolant at radiator.
- 3 Detach coolant hose at top of radiator
- 4 Detach coolant hose at bottom of radiator.
- 5 Unscrew radiator at radiator frame.
- 6 Draw radiator down and out.
- 7 Clean and check all parts, exchanging if necessary.

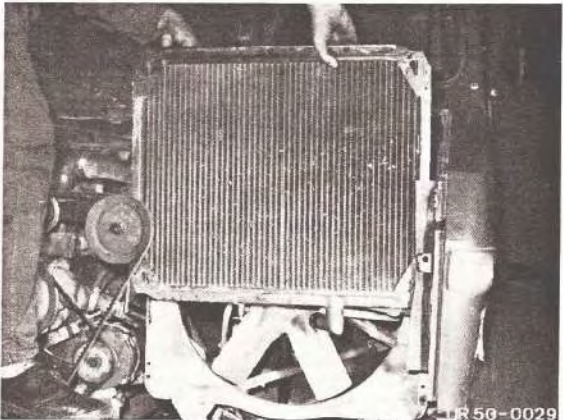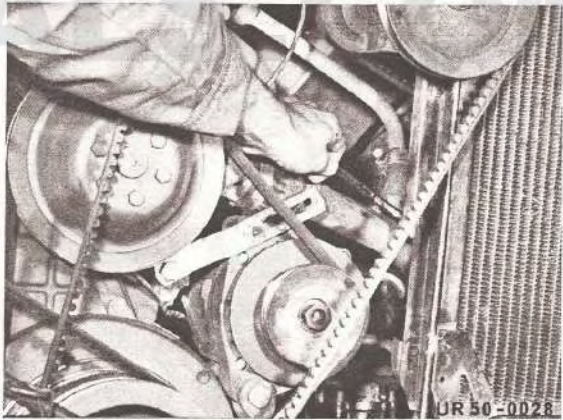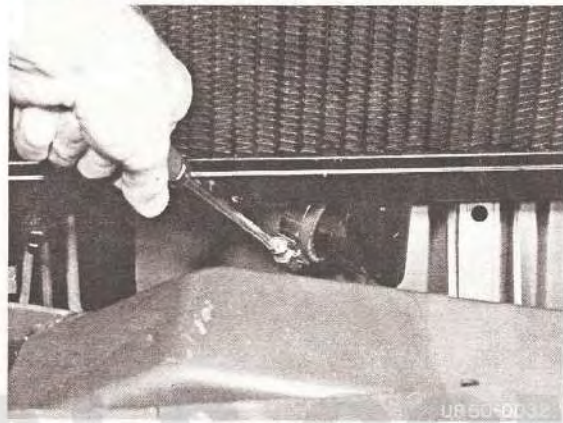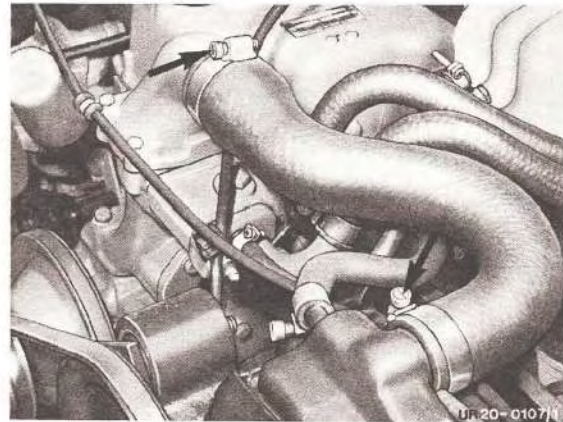

352/352 A

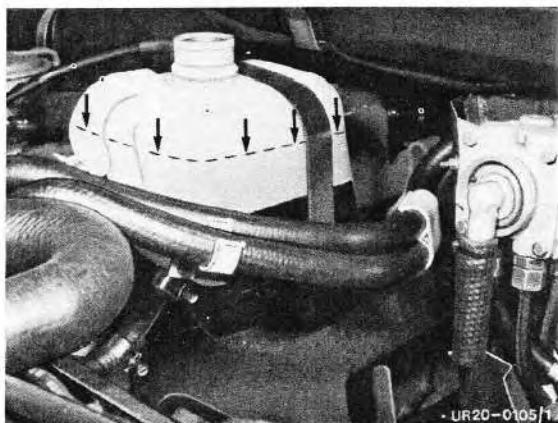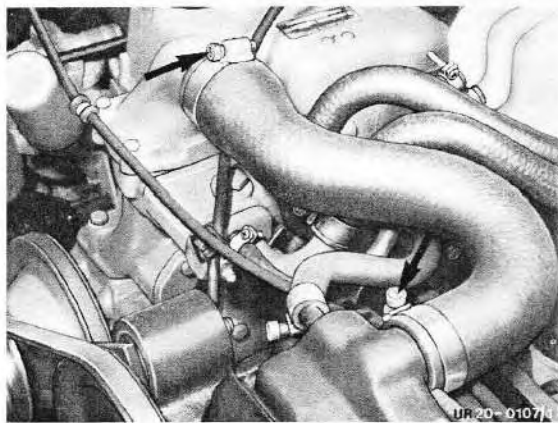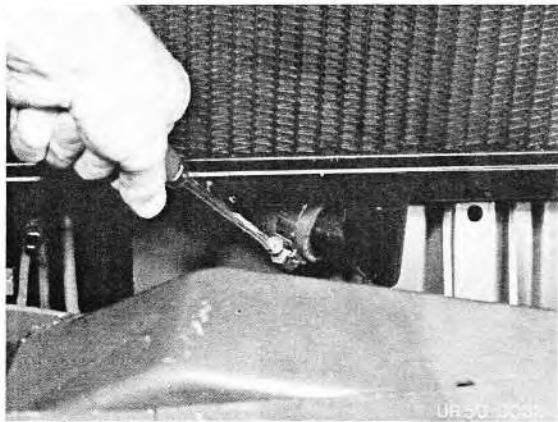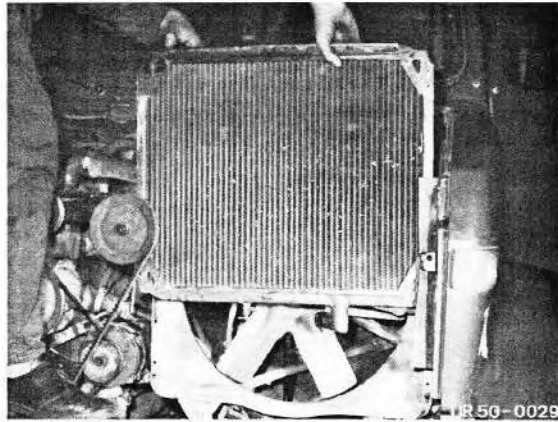

Installation

1 Introduce radiator from above and attach to radiator frame.

2 Attach coolant hose at bottom of radiator.

3 Attach coolant hose at top of radiator.

4 Fill system with coolant, referring to 1.2/1 for quantity.




Note: Expansion tank ought to be 2 thirds full.

5 Check cooling system for leakage, referring to 5.1/1.

6 Check cooling system for satisfactory operation, referring to 5.2/1.


Checking for leakage

- 1 Open shutoff valve at heater.
- 2 Prop up engine hood outside.
- 3 Correct coolant level.
- 4 Detach rubber buffer from special tool No. 1.
- 5 Insert rubber buffer into special tool No. 2.
- 6 Screw hose onto special tool No. 1.
- 7 Attach special tools No. 1 and No. 2 to expansion tank.
- 8 Operate hand pump on special tool No. 1 until pressure gage shows 1 bar.
- 9 Watch pressure gage for about 5 minutes. If pressure begins to drop, look for leakage and seal.
- 10 Detach special tools No. 1 and No. 2.

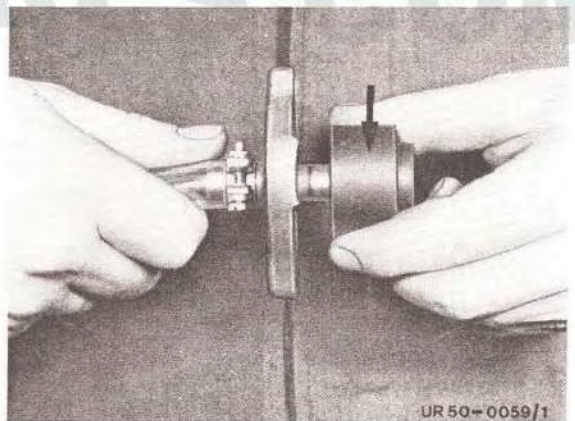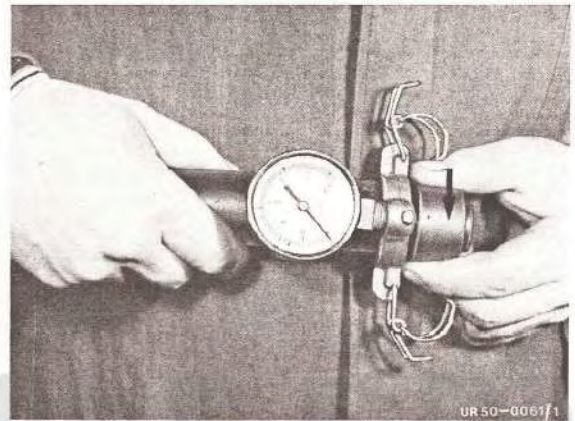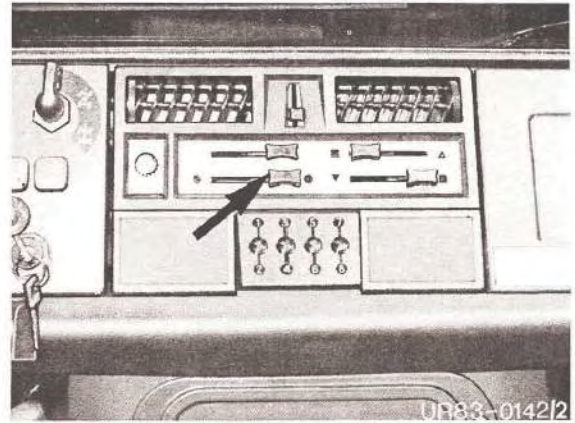


Checking operation

- 1 Prop up engine hood.
- 2 Unscrew cap from expansion tank.
- 3 Attach connector to special tool No. 1, using clips.
- 4 Attach cap. Operate hand pump on special tool No. 1 and watch performance of relief valve. See 1.1/2 for opening pressure.
- 5 Unscrew cap from connector, exchanging if necessary.
- 6 Fit cap.
- 7 Lower engine hood.

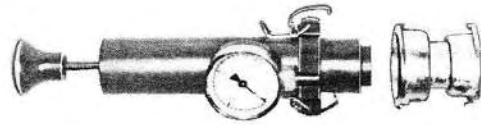

UR 58-0160

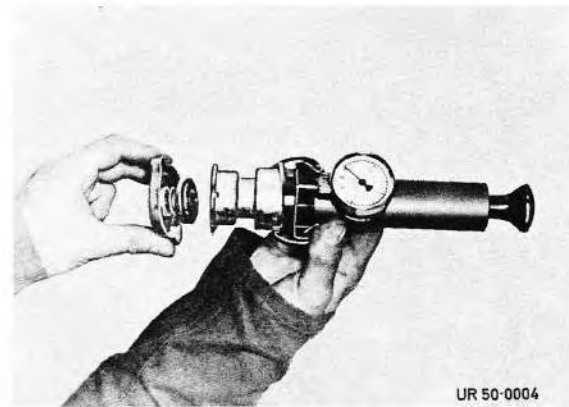

UR 50-0004

Contents

Chapter	Page
1 General	
Special tools	1.1/1
Necessary materials	1.1/1
Tightening torques	1.1/1
2 Removal and installation of front engine bearer	2.1/1

MBMANUALS.COM

Special tools

Cons.No.	Tool	Tool No.	Tool set
1	Installer for spacing sleeve of engine mounting	435 589 00 35 00	D

Necessary materials

Cons.No.	Description	Part No.
1	Anti-friction paste for rubber	000 989 01 60



Tightening torques

Location	Thread material	Nm
Engine mounting front to frame	M 14-10.9	140 ± 20
Engine mounting rear to frame	M 14-10.9	140 ± 20
Supporting arm left to flywheel housing	M 12-10.9	110 ± 20
Engine bearer front to crankcase	M 14-10.9	170 ± 20
Air compressor bracket to engine bearer		75


Removal

- 1 Detach engine hood and front panel.
- 2 Unscrew fastening bolt in front engine mount and remove metal cover.
- 3 Release and remove V-belts from generator, fan, hydraulic pump and air compressor, referring to 13.14–2.6/1.
- 4 Unscrew hydraulic pump and bracket at engine bearer.


Note: Do not unscrew lines.

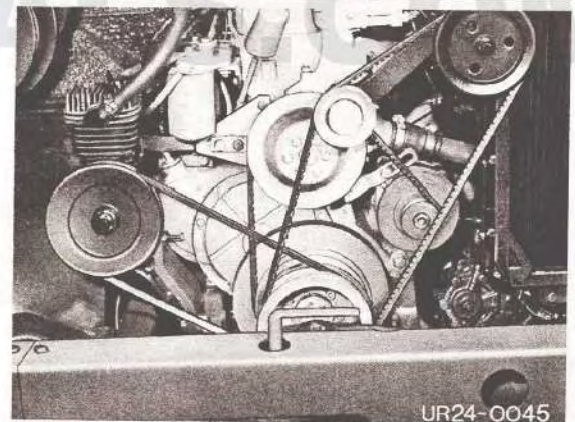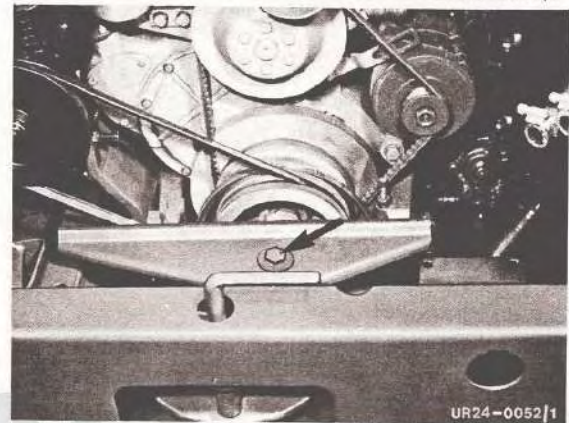


352/352 A

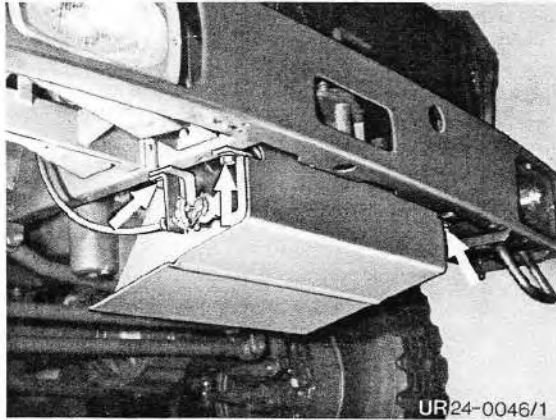

5 Detach underside guard.

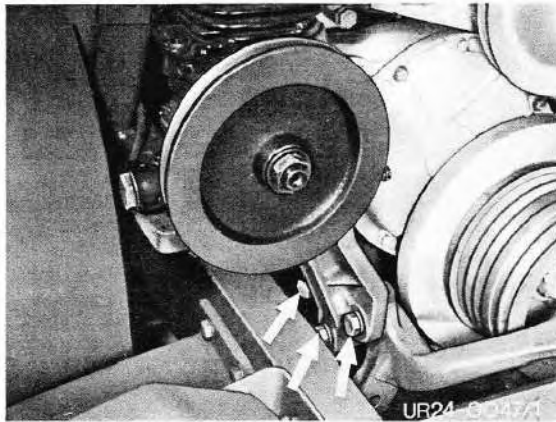


6 Unscrew air compressor and bracket at engine bearer.

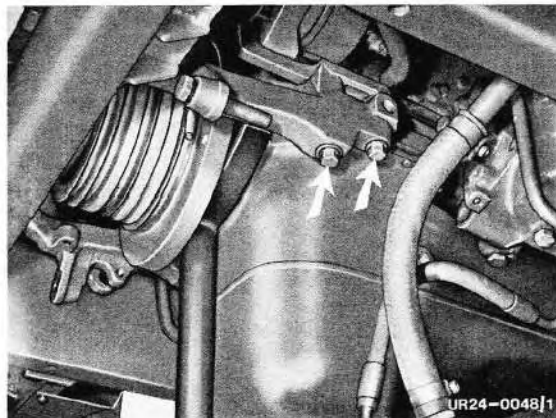

7 Support engine and raise slightly.

8 Unscrew and remove front engine bearer from crankcase.

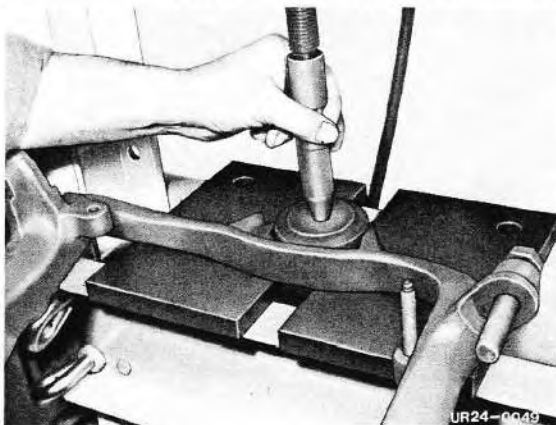

Installation

1 Coat rubber mount with paste No. 1 and force into new engine bearer.

2 Using special tool No. 1, force spacing sleeve into engine bearer.

3 Install and tighten engine bearer, referring to 1.1/1 for tightening torque.

4 Lower engine.

5 Attach air compressor and bracket to engine bearer, referring to 1.1/1 for tightening torque.




6 Attach and tighten hydraulic pump.

7 Fit and tighten V-belts for air compressor, hydraulic pump, fan and generator, referring to 13.14–2.6/1.

8 Attach underride guard.

9 Attach metal cover, inserting and tightening fastening bolts with reference to 1.1/1 for tightening torque.

10 Attach front panel and engine hood.

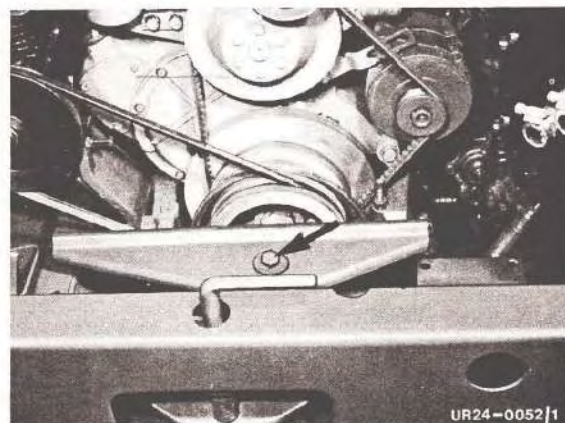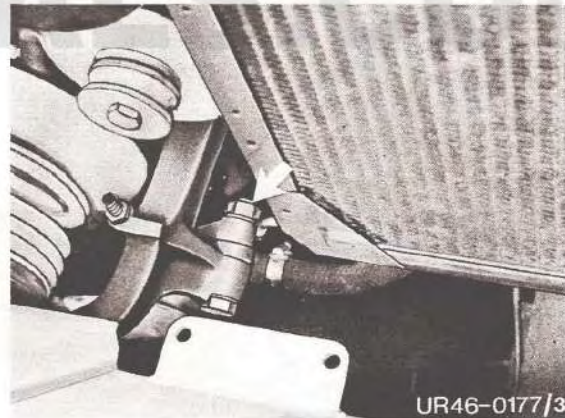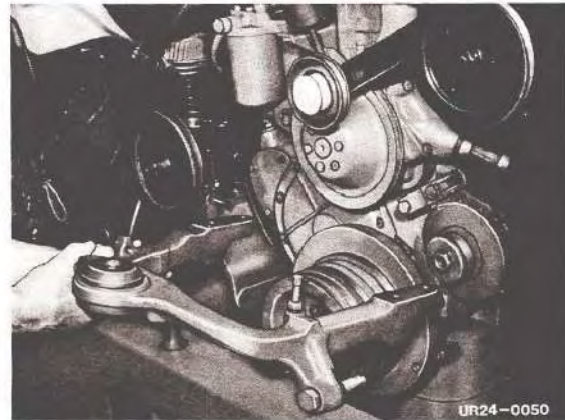

Survey

Version

Single clutch GFM 330 K/GMF 330

25.10


Torque converter WSK 310

25.14

Double clutch DT 330/310 G

25.21

Exploded view

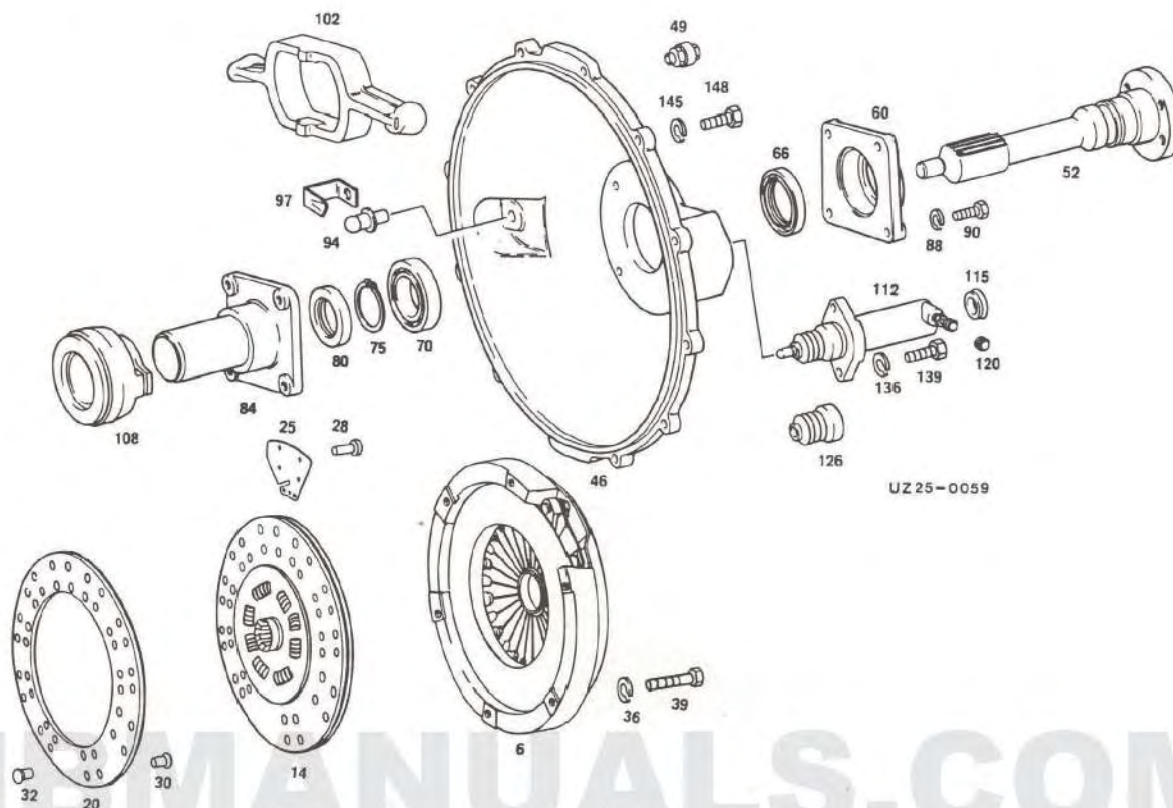

Single-plate clutch


- 6 Thrust plate
- 14 Driven plate
- 20 Clutch lining
- 25 Leaf spring
- 28 Rivet
- 30 Rivet
- 32 Rivet
- 36 Lock washer
- 39 Bolt
- 46 Clutch casing
- 49 Breather
- 52 Input shaft
- 60 End cover
- 66 Shaft seal
- 70 Deep-groove ball bearing
- 75 Snap ring
- 80 Sealing ring
- 84 Spacing tube

- 88 Lock washer
- 90 Bolt
- 94 Gudgeon
- 97 Bracket
- 102 Throwout lever
- 108 Throwout bearing
- 112 Slave cylinder
- 115 Shaft seal
- 120 Protective cap
- 126 Collar
- 136 Lock washer
- 139 Bolt
- 145 Spring washer
- 148 Bolt

Removal

- 1 Remove clutch slave cylinder.


Note: Do not detach line.

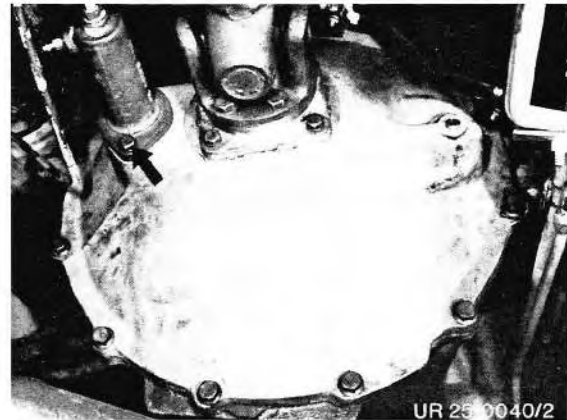

- 2 Unscrew propeller shaft from input flange.



- 3 Break air compressor line at connector and push to one side.

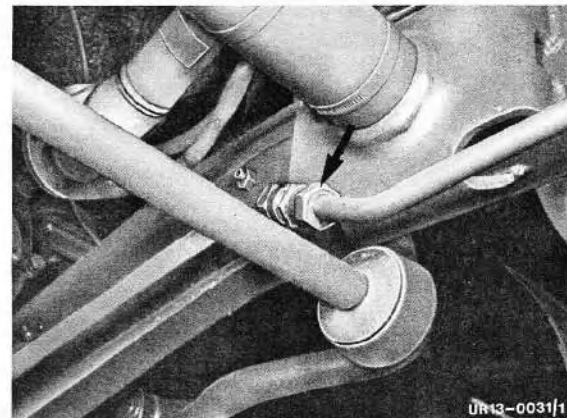


- 4 Remove fastening bolts and detach clutch casing.





5 Unscrew and detach clutch pressure plate from flywheel.

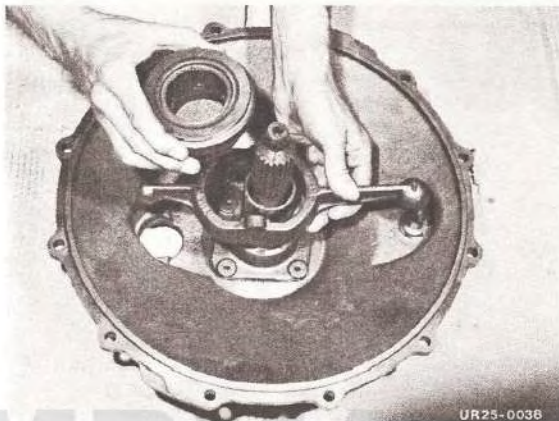

6 Remove throwout bearing and throwout fork from input shaft.

7 Clean and check all parts, exchanging if necessary.

Note: Throwout bearing features longlife lubrication and must not be rinsed out. Flywheel will have to be exchanged if cracks or scorch marks are found.




Installation

1 Using special tool No. 1, center new clutch pressure plate and driven plate, attach and tighten crosswise evenly.

See 1.4/1 for tightening torque.


Note: Hub boss must point toward flywheel.

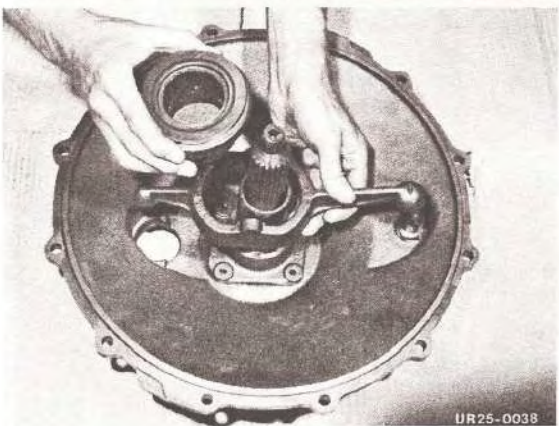


2 Coat spacing tube and input shaft splining with grinding paste No. 3.

3 Attach throwout fork and throwout bearing to input shaft.


4 Attach clutch casing with sealant No. 6, inserting and tightening bolts with locking fluid No. 7. See 1.4/1 for tightening torque.

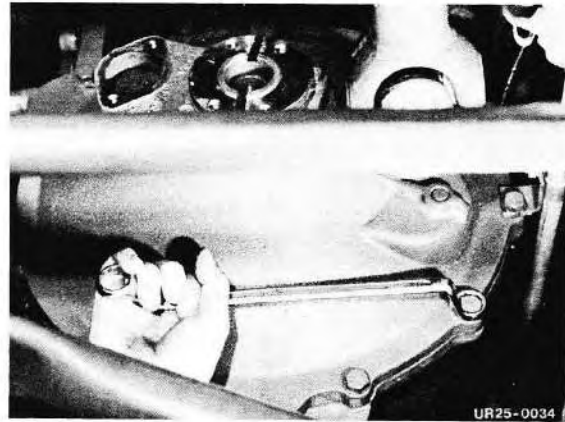

5 Assemble air compressor line.

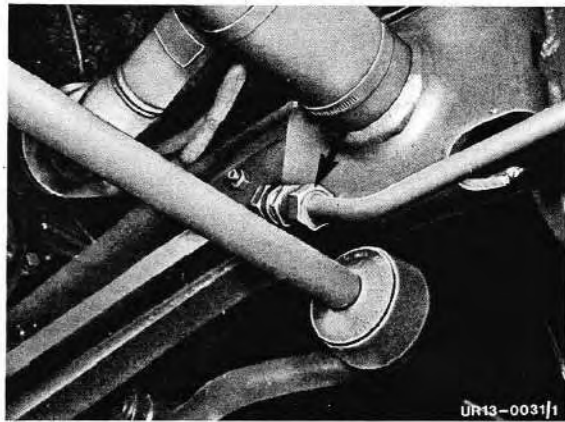

6 Bolt propeller shaft to input flange.


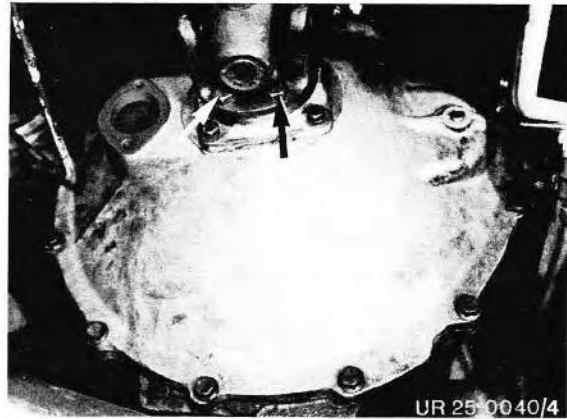


7 Attach clutch slave cylinder with sealing agent No. 6, inserting and tightening bolts with locking fluid No. 7. See 1.4/1 for tightening torque.




Removal

- 1 Remove clutch, referring to 2.1/1.
- 2 Remove fastening bolts from end cover of input shaft.
- 3 Release and remove spacer tube. Remove shaft sealing ring.
- 4 Remove input shaft together with end cover and deep-groove ball bearing from clutch casing.

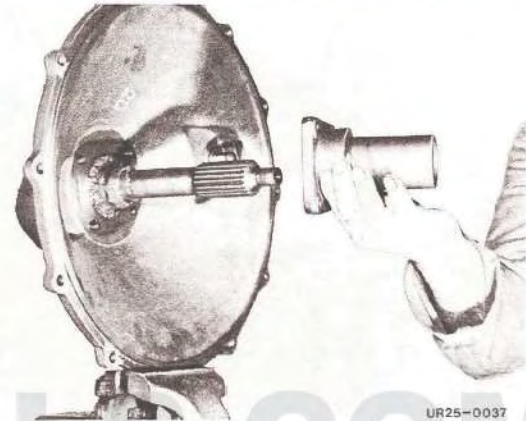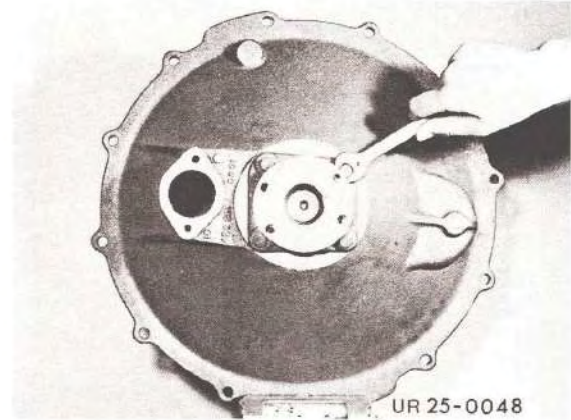


- 5 Remove retaining ring from input shaft.

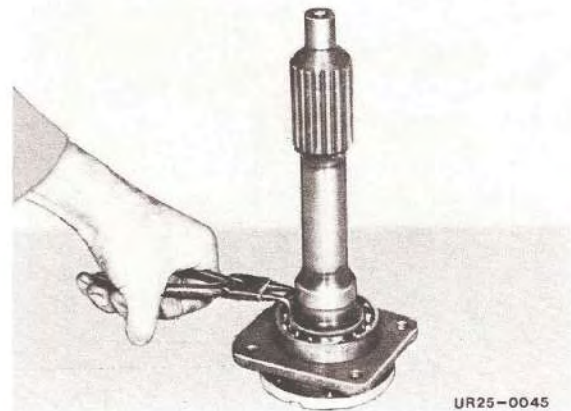


25.10 Removal and Installation of Input Shaft

GMF 330 K/GMF 330

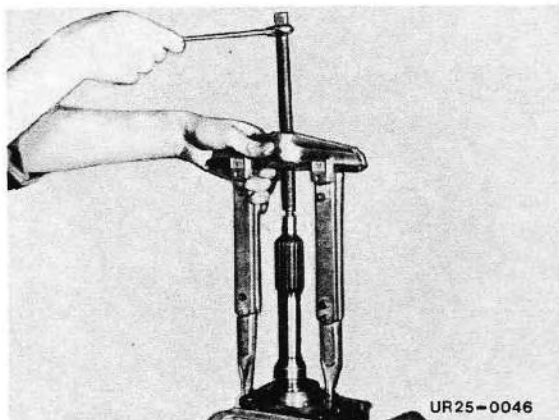

6 Using puller, draw off end cover and deep-groove ball bearing from input shaft.


7 Clean all parts, check and renew if necessary.

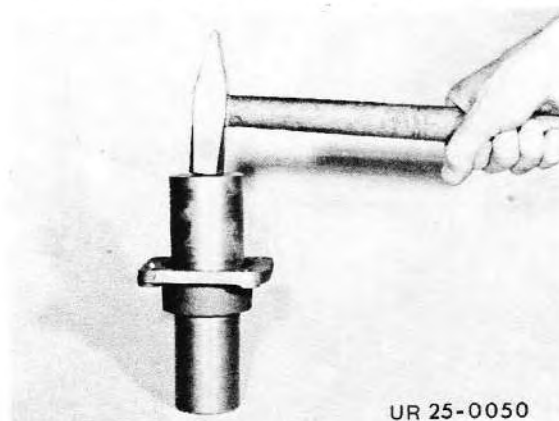


Installation

1 Using suitable drift press new shaft sealing ring into the end cover and spacing tube.

Note: Do not damage sealing lips.

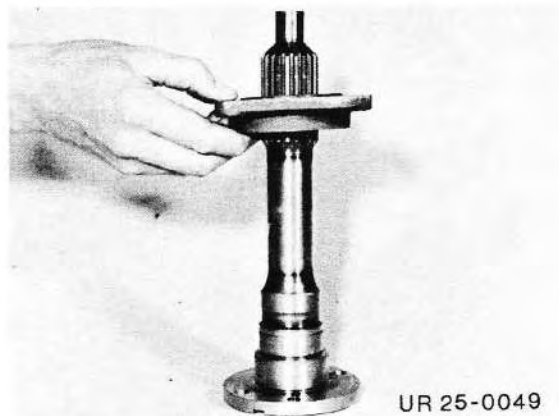


2 Slide end cover on to input shaft.

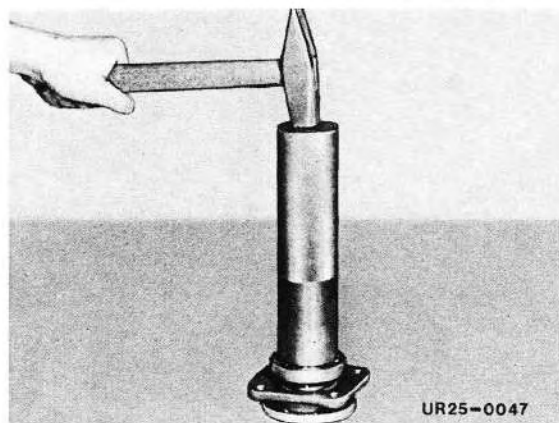


3 Pack deep-groove ball bearing with grease No. 5 and press bearing on to input shaft.

- 4 Fit retaining ring in groove of input shaft.
- 5 Coat sealing surfaces of end cover and spacing tube with sealing compound No. 6.

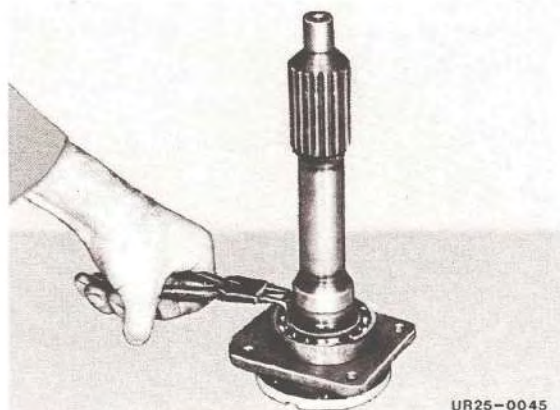


- 6 Press input shaft into clutch casing and slide spacing tube into position.

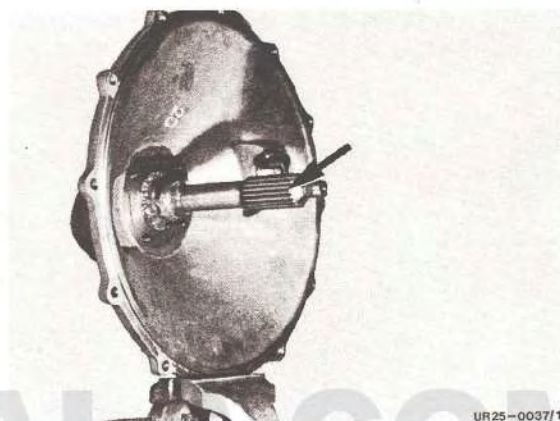

- 7 Coat fastening bolts with locking compound No. 7 screw into end cover and tighten. Tightening torques, see 1.4/1.

- 8 Install clutch, see 2.1/1.

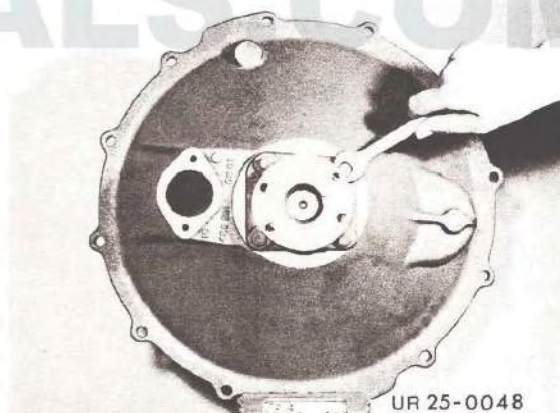

Checking

- 1 Remove screw plug from flywheel housing.
- 2 Rotate crankshaft until driven plate lining appears.
- 3 Press clutch pedal.
- 4 Rotate input shaft to transmission until one cutout appears between front and rear friction linings.
- 5 Insert special tool No. 2 and check rear lining.



Note: Only the rear lining of the driven plate can be checked.

"White" and "red" marks are provided on special tool No. 2.

"White" means: driven plate in good order

"Red" means: exchange driven plate

- 6 Put back screw plug.

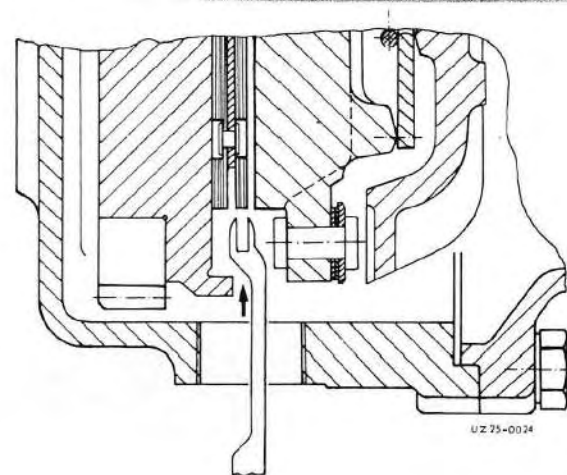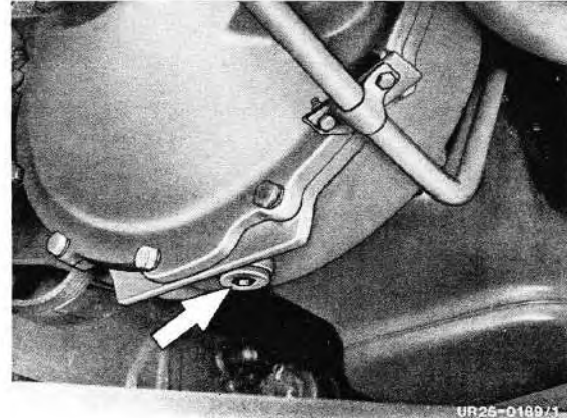

Contents

Chapter	Page
1 General	
Installation survey	1.1/1
Sectional view	1.1/1
Technical data	1.2/1
Operation scheme	1.3/1
Special tools	1.4/1
Tightening torques	1.4/1
Necessary materials	1.4/1
Exploded view	1.5/1


MBMANUALS.COM

Installation survey

Chassis Model	Sales designation	Engine Model	Clutch Version	Sales designation	Manufacturer	Torque converter clutch Installation
435.110	U 1700	353.959	Single clutch	GFM 350 K	Fichtel & Sachs	SA 35 948
.111	U 1700 L ¹⁾					
.115	U 1300 L ¹⁾	353.961				

1) L = Truck


Sectional view

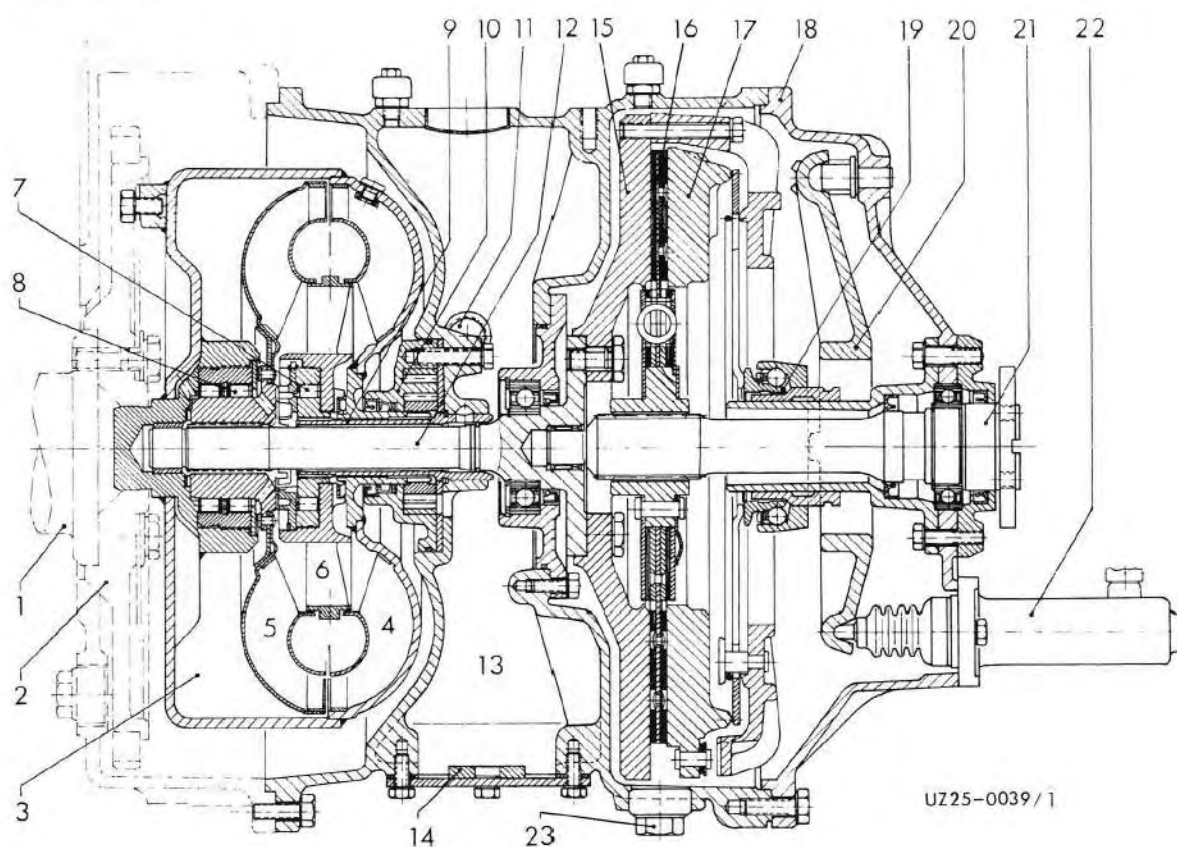

UZ25-0039/1

- | | |
|------------------------------|---|
| 1 Crankshaft | 13 Converter housing with oil reservoir |
| 2 Follower disc | 14 Solenoid |
| 3 Torque converter | 15 Clutch plate |
| 4 Pump wheel | 16 Clutch disc |
| 5 Turbine | 17 Clutch pressure plate |
| 6 Impeller | 18 Clutch housing |
| 7 Impeller freewheel | 19 Release bearing |
| 8 Sliding freewheel | 20 Release lever |
| 9 Impeller supporting tubing | 21 Drive shaft to transmission |
| 10 Converter fill pump | 22 Clutch slave cylinder |
| 11 Screw plug | 23 Screw plug |
| 12 Turbine shaft | |

Technical data

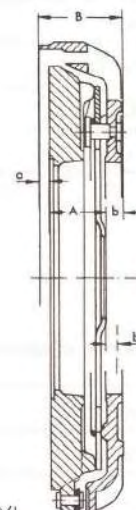

Friction clutch GFM 350 K

Version		Single dry plate
Clutch pressure plate		003 250 48 04
Manufacturer		F & S
Designation		GFM 350 K
Height of contact plate relative to spring support ¹⁾	A	mm 45 ± 1
Overall height when fitted	B	mm 75.5
Grinding limit for contact plate		mm 0.5
Permissible imbalance of clutch pressure plate		gmm 500
Contact force		N 12 800 to 14 500
Release force		N max. 3550
Adjustment between rear edge of release ring and contact surface of the clutch pressure plate on the flywheel ¹⁾		mm 55 ± 1
Adjustment between contact surface, pressure plate and flywheel ¹⁾		mm 10 ± 0.01
Permissible face run-out of release ring, relating to 78 mm dia.		mm 0.8
Free movement (play) between release ring and thrust ring		mm 0
Test value of upper edge of clutch on rear edge of release ring when new ¹⁾	b	mm 20.5
Release travel		mm 10 + 2
Wear	b1	mm 11 + 2
Contact plate lift relative to 10 mm release travel (declutched 3 times before measuring)		mm min. 1.8

1) Value only applicable when in contact

WSK 310

Clutch pressure springs

Type		Diaphragm spring
Number		1
OD	mm	330
Thickness	mm	3.7

Clutch pressure plate including clutch thrust springs

Weight	kg	24.6
Inertia	kg m ²	0.4825

Clutch plate

Version			with torsional damper 350 GSZ
Manufacturer			F & S
Designation			350 GSZ
OD		mm	350 ± 1
Thickness of clutch plate with ring		mm	10 ± 0.3
Lining thickness		mm	3.5
Type of lining			Raybestos 1488/05
Permissible lining wear per side		mm	1.5
Permissible imbalance when fitted to splines		gmm	250
Hub splines			A 40 x 36 DIN 5482
Torsio- nal damping	Frictional torque	Nm	40 to 70
	Damping torque at start	Nm	70

Clutch cover

Distance between clutch surface and the clutch cover fixing flange	new	mm	38 – 0.1
	after repair	mm	min. 37
Clutch cover OD		mm	395 – 0.1
Permissible imbalance at 1000 rpm		gcm	20

Torque Converter

Designation		Torque converter Ø 310
Manufacturer		Daimler - Benz
Design, torque converter		Foettinger converter in accordance with the Trilok principle
Diameter	mm	310
Torque ratio	i max.	1: 2,06
Arrangement		between engine and transmission
Temperature switch for shift point warning lamp	° C	120
Capacity ¹⁾ TC system	L	17,5
Max. imbalance of oil filling capacity	mmg	1000
Delivery converter filling pump	cm ³ /U	12,5
Pressure relief valve opens at	bar	approx. 5,0
Converter back pressure valve opens by	bar	approx. 1,0 to 2,0

1) Motor oil in accordance with Service Product Specifications Sheet No. 226– 227.1

Note:

The built-in thrust freewheel ensures complete braking action of the engine during deceleration.

Stall speeds


Chassis Model	Sales designation	Engine Model	Output kW (HP)	Stall speed at engine speed 1/min
435.110	U 1700	353.959	124 (168)	1820 ± 100 ²⁾
.111	U 1700 L ¹⁾			1860 ± 100 ³⁾
.115	U 1300 L ¹⁾	353.961	96 (130)	1600 ± 100

1) L= motor truck


2) To engine end No. 691,149

3) From engine end No. 691 150.

Functional diagram

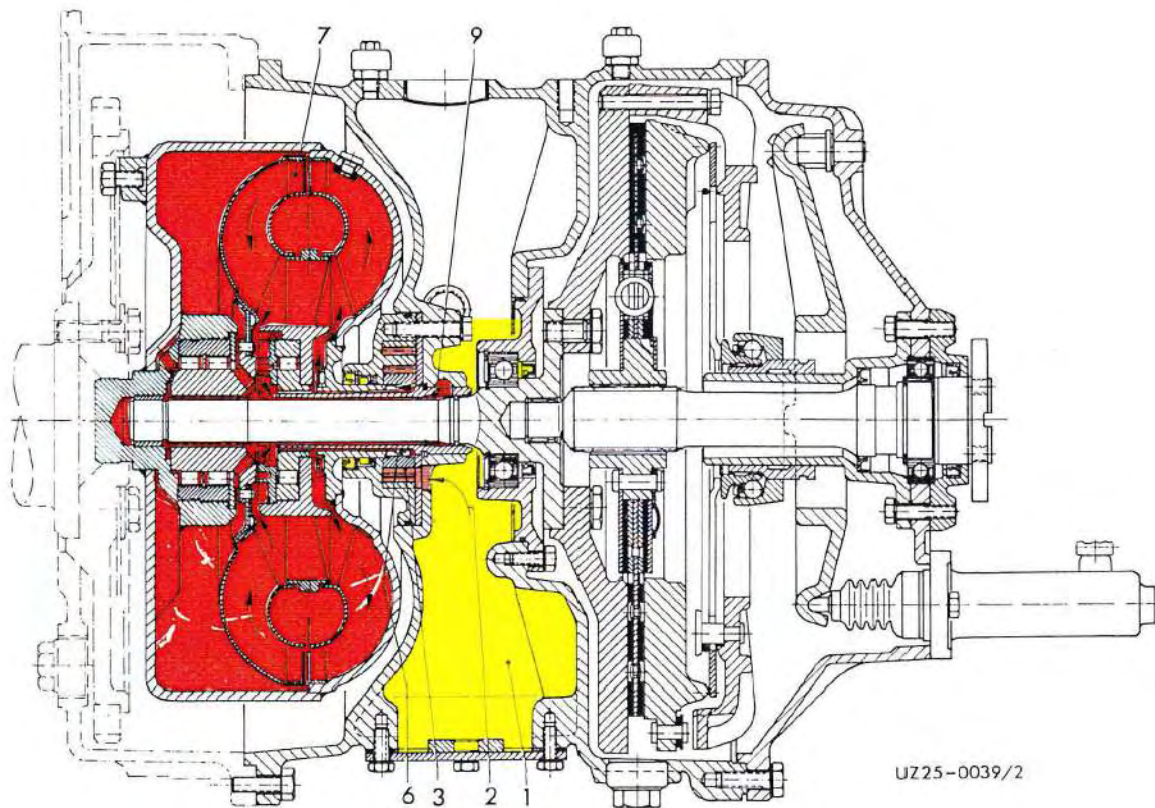

Oil cycle

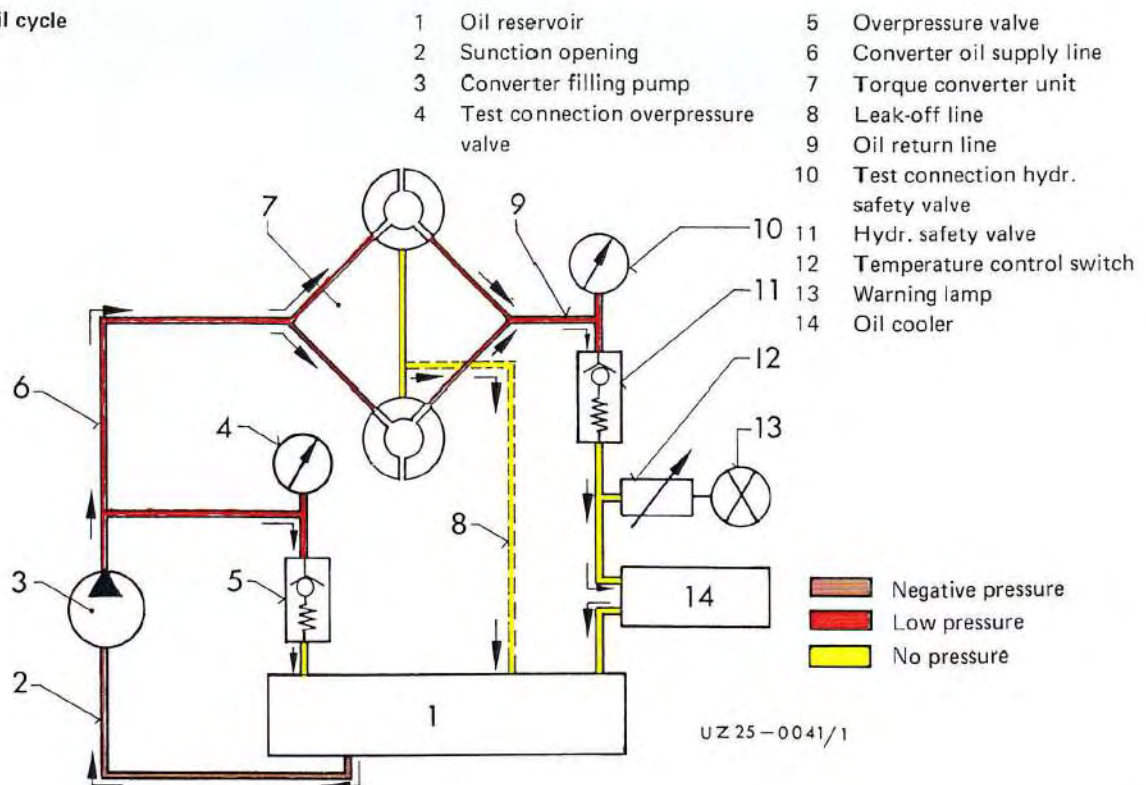

Special tools

Cons. No.	Tool	Part number	Tool set
1	Centering drift	425 589 00 61 00	B


Tightening torques

Location	Thread material	Nm	Angle of rotation
Converter to follower disc	M 10	60	
Housing cab of filling pump to converter housing	M 8	21	
Converter housing to engine flywheel housing	M 10	42	
Closing cover with solenoid to converter housing	M 8	21	
Clutch plate to turbine shaft	M 12	30 + 10	
		—	90° + 20°
Clutch pressure plate to clutch plate	M 8	29	
Clutch casing to converter housing	M 10	42	
Clutch slave cylinder to clutch casing	M 8	21	
Bearing cover to clutch casing	M 8	21	

Necessary materials

Cons. No.	Description	Part number
1	Longlife lubricating grease	regular
2	Molybdenum disulfide grinding paste	regular
3	Sealant	000 989 05 20

Exploded view

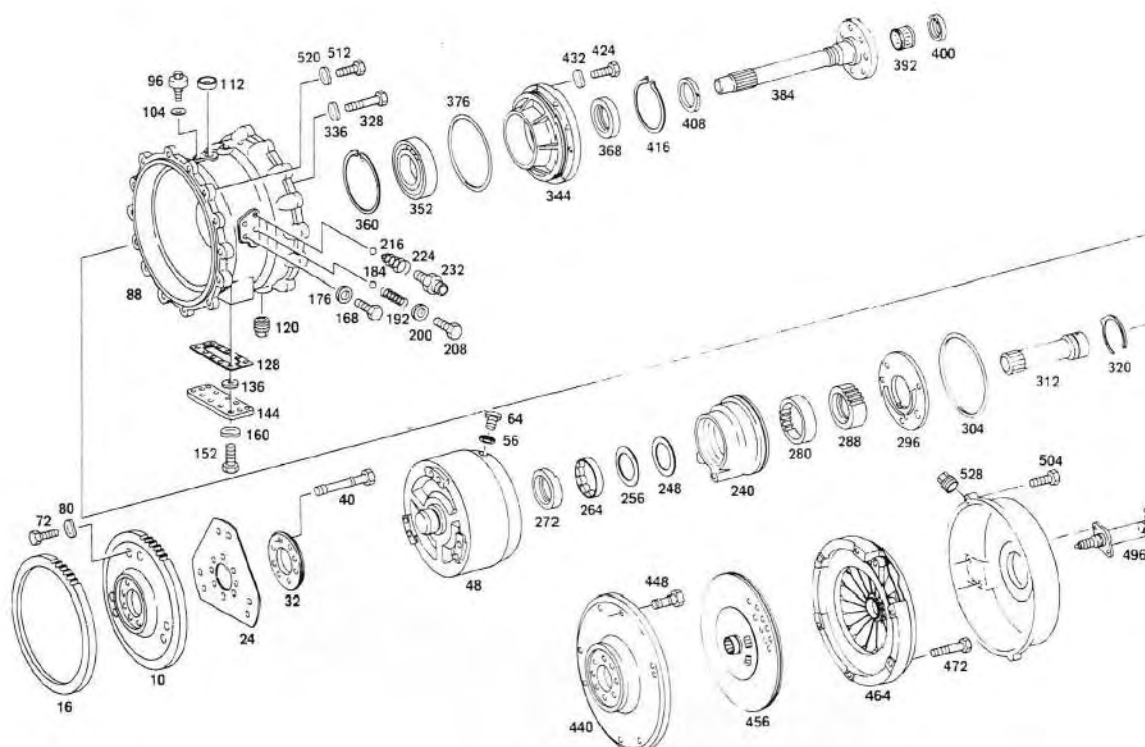

Torque converter

UZ 25-0040

10	Follower disc	176	Seal ring	344	Bearing cap
16	Ring gear	184	Ball	352	Grooved ball bearing
24	Follower	192	Spring	360	Lock ring
32	Washer	200	Seal ring	368	Seal ring
40	Screw	208	Screw plug	376	Seal ring
48	Torque converter unit	216	Ball	384	Drive shaft
56	Seal ring	224	Spring	392	Needle bearing
64	Screw plug	232	Fitting (hydraulic safety valve)	400	Seal ring
72	Screw	240	Housing	408	Seal ring
80	Spring washer	248	Washer	416	Lock ring
88	Converter housing	256	Washer	424	Screw
96	Breather	264	Needle bearing	432	Spring washer
104	Seal ring	272	Seal ring	440	Clutch plate
112	Expansion plug	280	Gear	448	Screw
120	Screw plug (clutch central opening)	288	Gear	456	Clutch disc
128	Gasket	296	Intermediate plate	464	Clutch pressure plate
136	Solenoid	304	Seal ring	472	Screw
144	Closing cover	312	Turbine shaft	496	Clutch slave cylinder
152	Screw	320	Snap ring	504	Screw
160	Spring washer	328	Screw	512	Screw
168	Screw plug	336	Spring washer	520	Spring washer
				528	Screw plug

Contents

Chapter	Page
1 General	
Installation survey	1.1/1
General view	1.1/1
Sectional view	1.2/1
Technical data	1.3/1
Special tools	1.4/1
Tightening torques	1.4/1
Necessary materials	1.4/1
Exploded view	1.5/1
2 Removal and installation of clutch	2.1/1
3 Reconditioning clutch	
Disassembly and assembly of clutch	3.1/1
Adjusting clutch	3.2/1


Installation Survey

Chassis Model	Sales designation	Series Chassis end No.	Clutch Version	Manufacturer	Installation
435.110	U 1700 L	from 002 230	Double clutch	LuK	SA 35 741
.111	U 1700 L ¹⁾	from 000 008			
.115	U 1300 L ¹⁾	from 000 019			
.117	U 1300 L/37	from 071 796			

1) L = Truck

2) PB = Start of production


General view

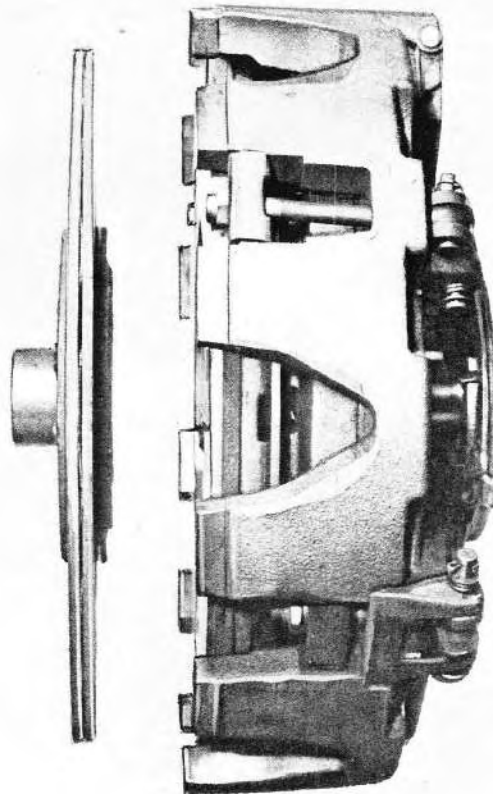

UR 25-0058

Double clutch


Sectional view

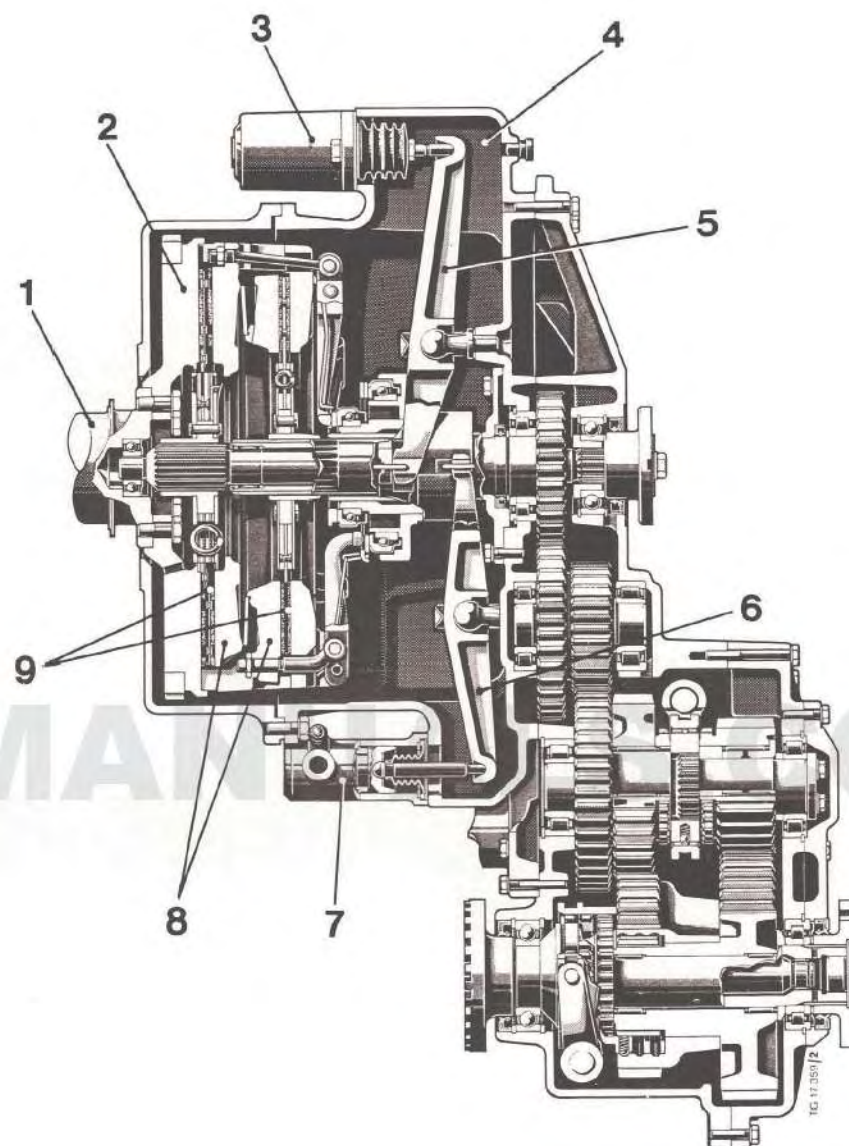

Double clutch (in combination with pto shaft)

- | | |
|-------------------------------------|---------------------------------|
| 1 Crankshaft | 6 Throwout lever (drive clutch) |
| 2 Flywheel | 7 Slave cylinder (drive clutch) |
| 3 Slave cylinder (pto shaft clutch) | 8 Pressure plate |
| 4 Clutch housing | 9 Clutch disk |
| 5 Throwout lever (pto shaft clutch) | |

Technical Data

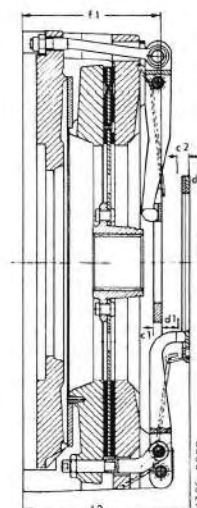

Shift Clutch DT 330/310 G

Version			Dual disk dry clutch
Clutch pressure plates			004 250 81 01
Manufacturer			LuK
Designation of complete double clutch			DT 330/310 G
Grinding allowance for contact and pressure plates		mm	0 to 0,5
Contact force		N	10 750±550
Throw out force	Main clutch	N	2 255
	PTO shaft clutch	N	1 690
Adjustment between rear edge of throw out ring and contact surface of contact surface of front pressure plate to flywheel, ¹⁾ main clutch f₁		mm	108±0,5
Adjustment between rear edge of throw out ring and contact surface of from pressure plate to flywheel, ¹⁾ PTO shaft clutch f₂		mm	132±0,5
Free movement (adjustment) between slave cylinder adjusting screw and clutch lever		mm	0
Number of throw out levers			2 × 3
Difference between heights of 3 throw out levers		mm	max. 0,7
Throw out movement	Main clutch c₁	mm	10 + 3
	PTO shaft clutch c₂	mm	8 + 3
Wear d₁ or d₂		mm	15

1) Dimension valid only with clutch engaged.

25.21 General

DT 330/310 G

Clutch Plates

Designation/manufacturer		Main clutch		330 GSZ/LuK
		PTO shaft clutch		310 G/LuK
Outside diameter	Main clutch	mm		327±1
	PTO shaft clutch	mm		310±0,5
Thickness of clutch plate with lining	Main clutch	mm		10±0,3
	PTO shaft clutch	mm		8,6±0,3
Type of lining	Main clutch	mm		4,3±0,1
	PTO shaft clutch	mm		3,3±0,1
Quality of lining	Main clutch			Raybestos 1488/05
	PTO shaft clutch			Ferodo 755 Kerasinter ¹⁾
Permissible wear of lining per side	Main clutch	mm		1,5
	PTO shaft clutch	mm		1,5
Permissible imbalance, mounted on spline	Main clutch	gmm		200
	PTO shaft clutch	gmm		200
Hub spline	Main clutch			A 40 × 36 DIN 5482
	PTO shaft clutch			A 45 × 41 DIN 5482
Torsion damping	Impact moment, torsion and thrust ends	Main clutch	Nm	750
		PTO shaft clutch	Nm	—
	Contact angle	Main clutch	°	5
		PTO shaft clutch	°	—
	Friction moment	Main clutch	Nm	30 – 70
		PTO shaft clutch	Nm	—
	Damping moment at start	Main clutch	Nm	70
		PTO shaft clutch	Nm	—

1) Only model 435.110/111

Clutch pressure springs

Type		Disk spring
Quantity		1
Outside diameter when flat	mm	+ 0,3 295 – 0,2
Thickness	mm	3,75±0,03

Double clutch assembly

Weight	kg	37,4
Moment of inertia	kgm ²	0,727